 




TD500 MAX

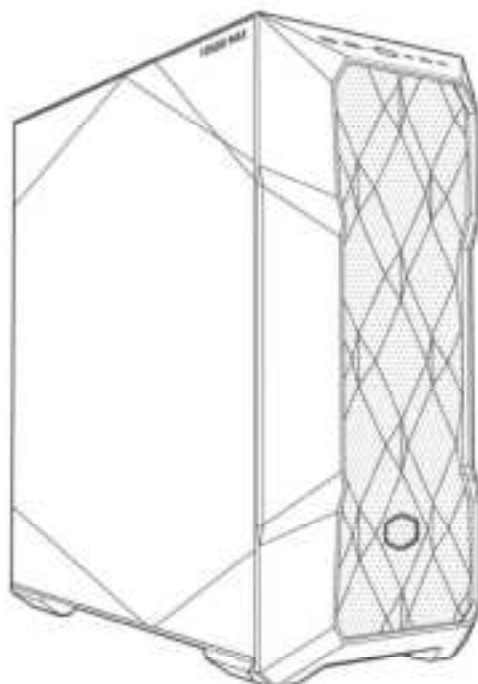

User manual / English

Инструкция за експлоатация / Български

安装说明 / 简体中文

安裝說明 / 繁體中文

Handuch / Deutsch

Manual de Usuario / Español

Manuel de l'utilisateur / Français

Manuale d'uso / Italiano

ユーザーズマニュアル / 日本語

Handleiding / Nederlands

Instrukcja Użytkownika / Polski

CONTENTS

Package Content	1
Compatibility	2
Front I/O & Buttons	2
Basic installation	3
1. Install motherboard	4
2. Install cooling head	4
3. Install GPU	7
4. Install 2.5" drives	7
5. Install 3.5" drives	9
6. Install case fans	9
7. Install radiators	10
8. Connect ARGB and Fan PWM	10
9. Install side panel	10
10. Plug in the power cord	10
Specifications	11
Warranty information	13

Package Content / 包装内含物品清单 / 包装内含物品明細 / Verpackungsinhalt / Contenido del paquete /
 Contenu de l'emballage / Contenuto della confezione / Szczegółowa zawartość paczki / Inbegrägen /
 Содержание упаковки / パッケージ内容

CASE

	Figure	Name	Qty	Used for
A		4x 3.2mm screw	13	Motherboard & other
B		SSD Mounting pin	12	Installing SSD locklessly
C		SSD Mounting Pad	12	Installing SSD locklessly
D		Stand-off socket tool	1	Motherboard stand-off installation
E		HDD Bracket	4	Installing HDD locklessly
F		Cable Tie	10	Cable management


PSU

	Figure	Name	Qty	Used for
G		AC Power Cord	1	Connect to outlet
H		3pin 2nd stage Cable	1	Motherboard 3pin CPU
I		4+4pin 2nd stage Cable	1	Motherboard 4+4pin CPU
J		6+2pin 2nd stage Cable	1	GPU 6+2pin PCI
K		24pin 2nd stage Cable	1	Motherboard 24pin port

COOLING

	Figure	Name	Qty	Used for
L		Intel 115x/120x/1700 Backplate	1	Intel 115x/120x/1700
M		Intel Bracket	2	Intel 115x/120x/1700
N		AMD Bracket	2	AMD AM4/AM5
O		Thermal Paste	1	CPU Heat dissipation
P		60° 8.3mm M3 nut	4	Lock Intel & AMD socket
Q		Bracket Screw	4	Lock Intel & AMD Bracket
R		AMD Screw	4	AMD AM4/AM5
S		Intel 1700 Screw	4	Intel 1700
T		Intel 1200/115x Screw	4	Intel 1200/115x
U		3 to 1 Fan Splitter	1	Connect multiple fans
V		Water pipe clamp	2	Fixed water pipe

 Compatibility / 兼容性 / 相容性 / Kompatibilität / Compatibilità / Compatibilite / Compatibilità /
Compatibilität / Zgodność / Совместимость / パーツ互換性

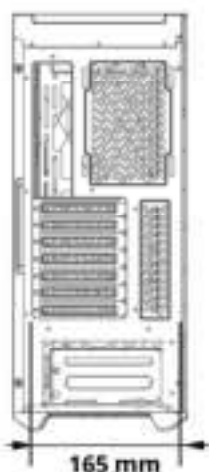


Maximum height for CPU cooler








Maximum length for graphics card
 (With pre-installed AIO on front)

 Front I/O & Buttons / 前面板接口及按钮说明 / 前面板接口及按钮说明 / Front I/O & Tasten / Frontal I/O & Buttons /
Boutons sur le panneau E/S de façade / Pulsanti e I/O frontal / Bedieningspaneel / Przedni panel I/O & Przyciski /
Фронтальные кнопки и панель ввода/вывода / フロントI/O / 버튼

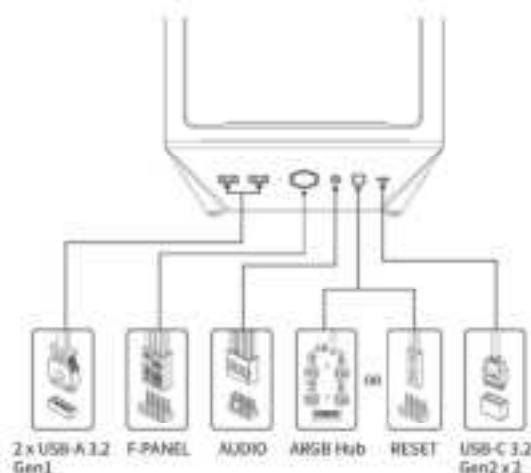




BASIC INSTALLATION

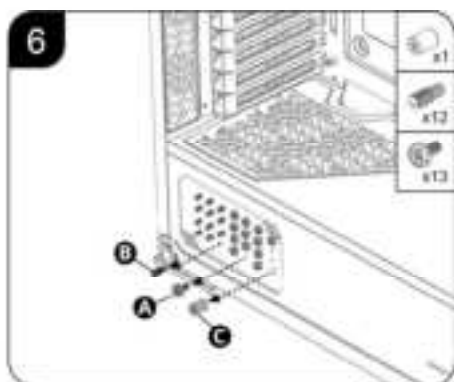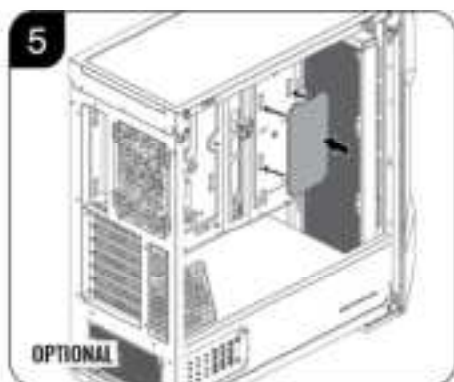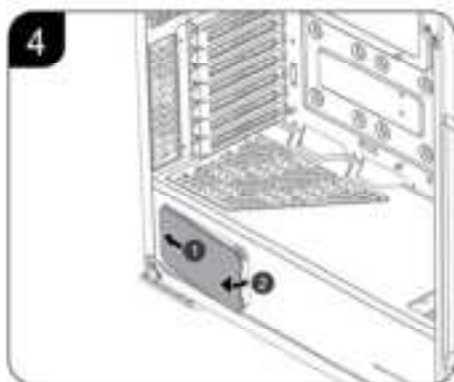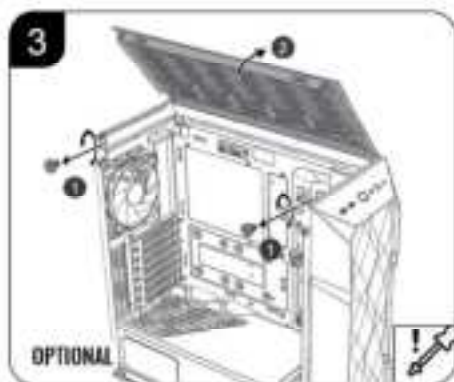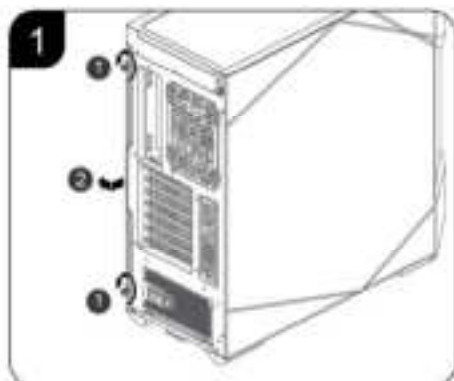     




 
1. MOTHERBOARD

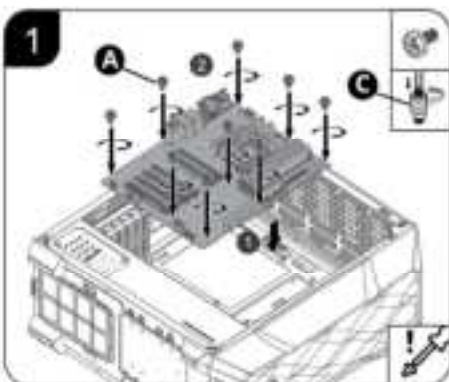


8pin 2nd stage Cable

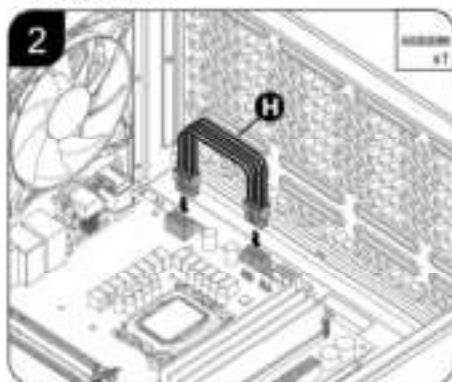 

4+4pin 2nd stage Cable

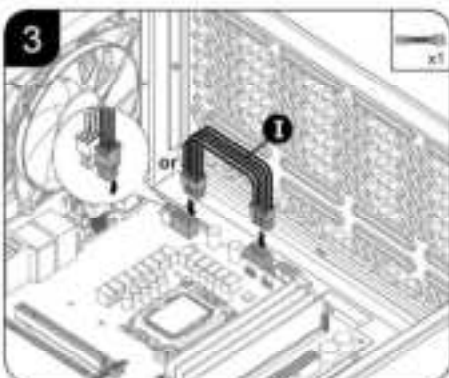 


24pin 2nd stage Cable

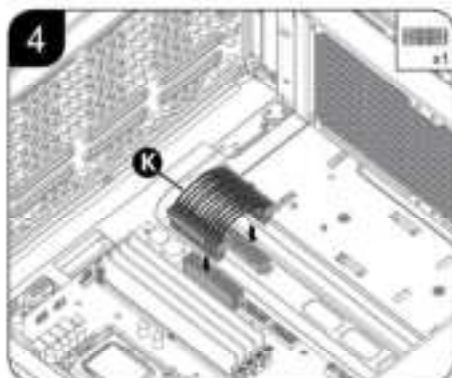 


2. COOLING HEAD

 INTEL - LGA 1200/115X/1700

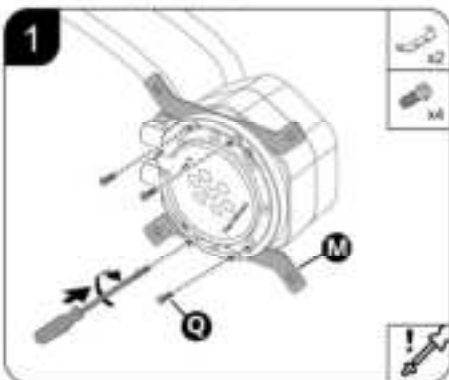


INTEL - LGA 1200/115X/1700

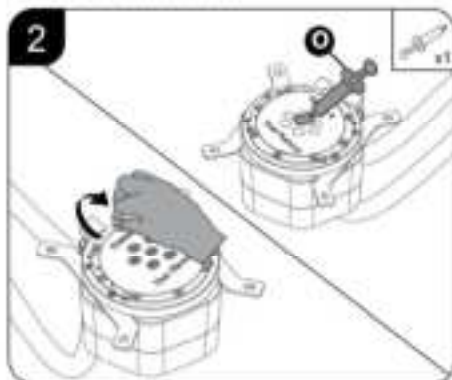 


INTEL - LGA 1200/115X



 
INTEL - LGA 1200/115X

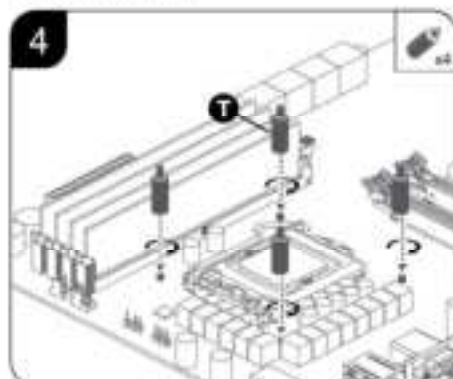


INTEL - LGA 1200/115X

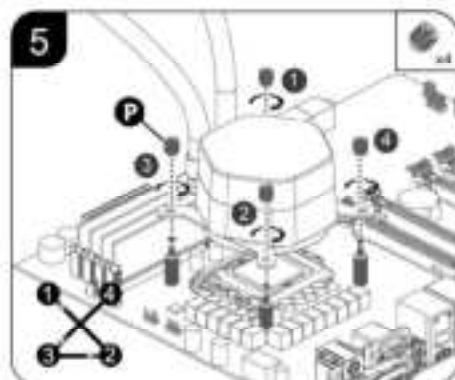 


INTEL - LGA 1700

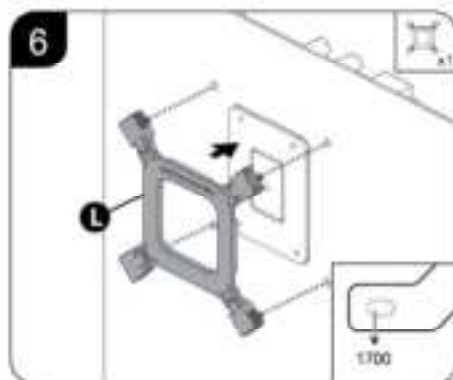 


INTEL - LGA 1700

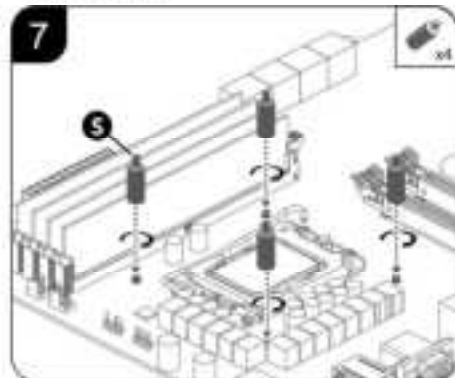 


INTEL - LGA 1700

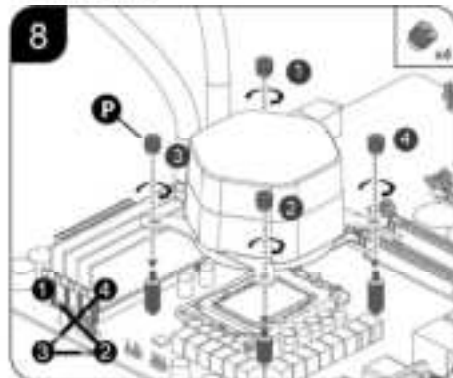 


AMD SOCKET AM4 / AM5

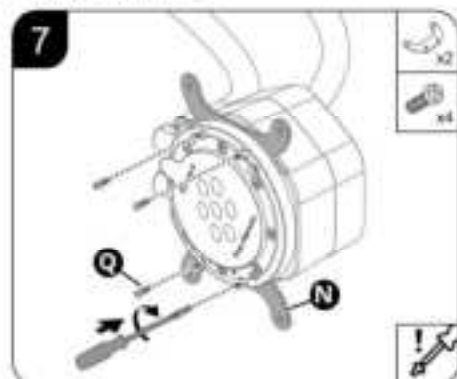 




AMD SOCKET AM4 / AM5

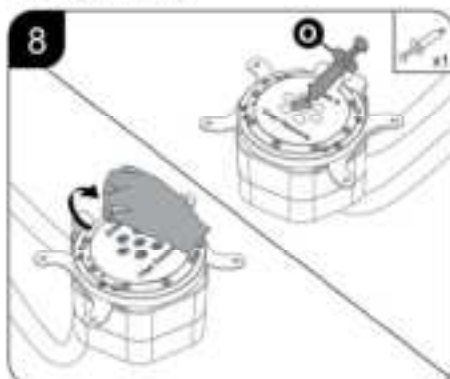 


AMD SOCKET AM4 / AM5


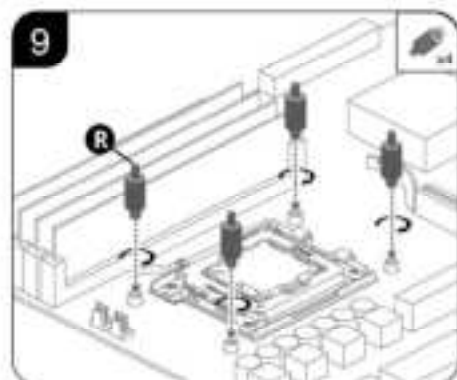 


AMD SOCKET AM4 / AM5

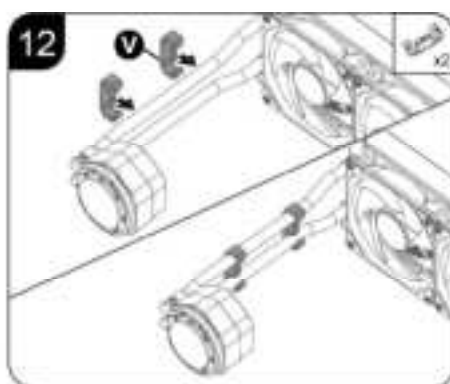 
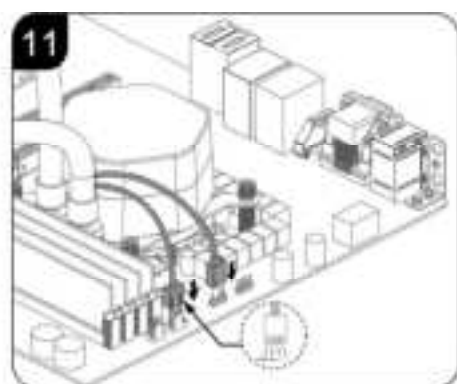 
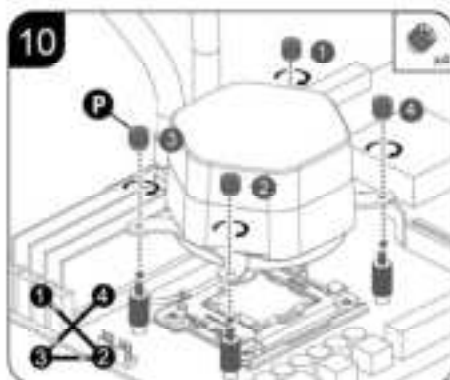 







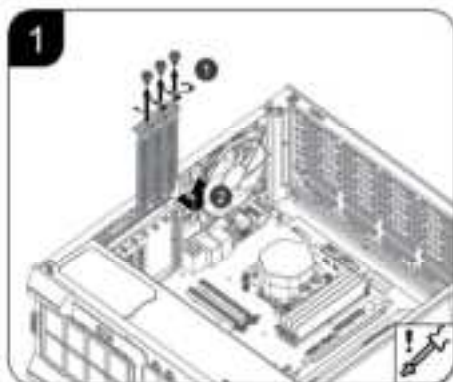 


12V4PWR Cable

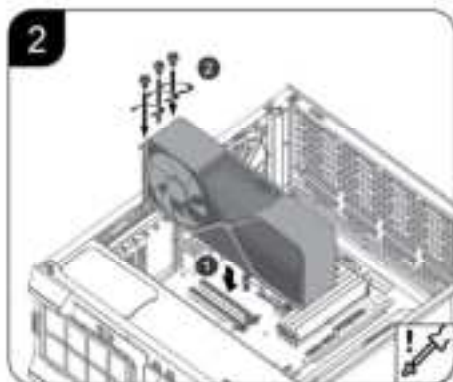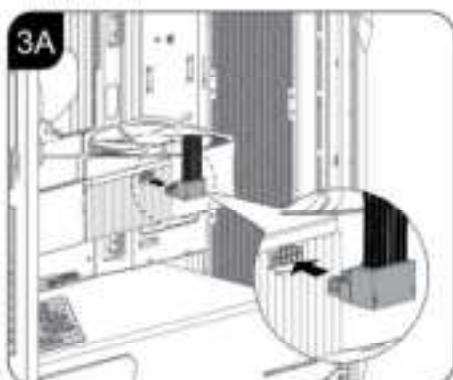  

6-2pin 2nd stage Cable

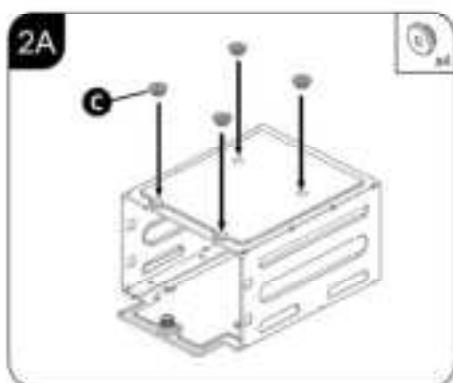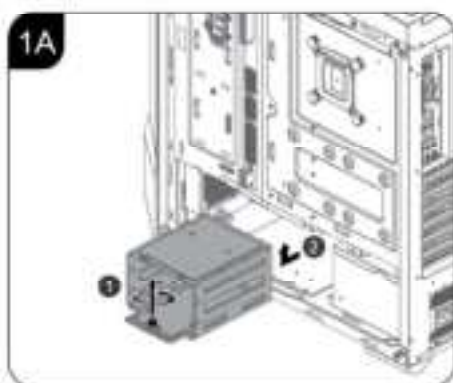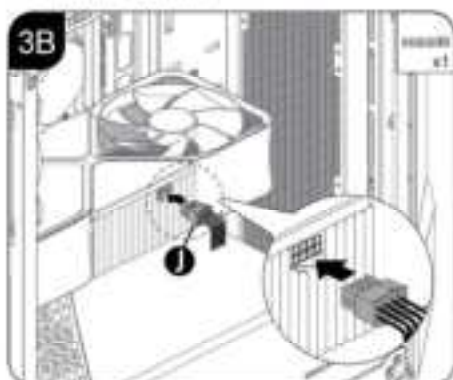   


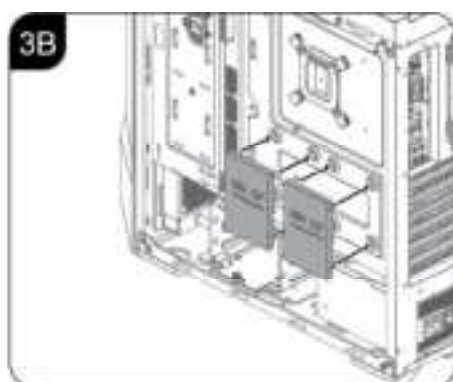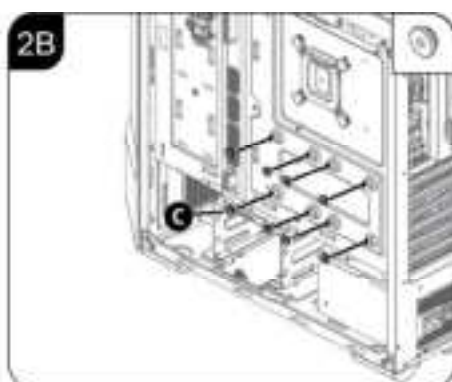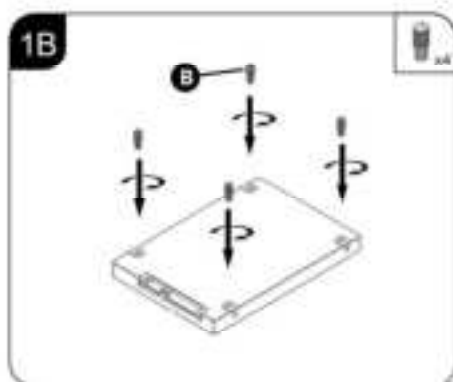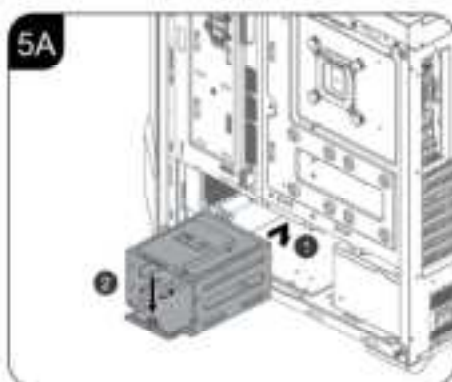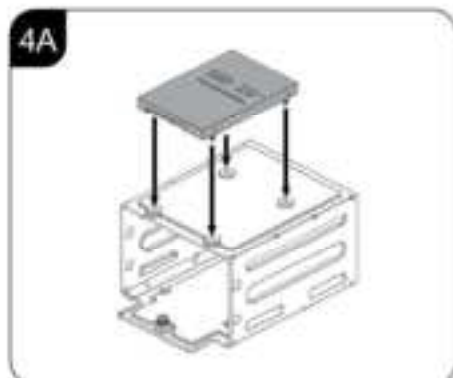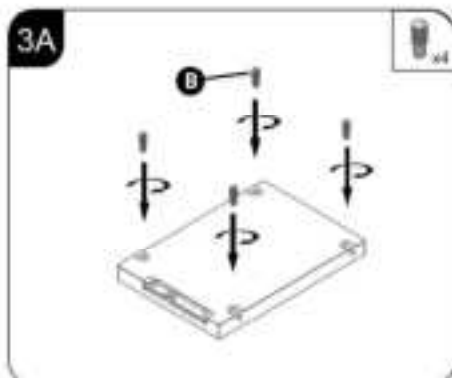      




S. 3.5" HDD

 1

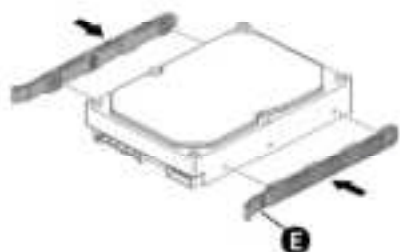

2

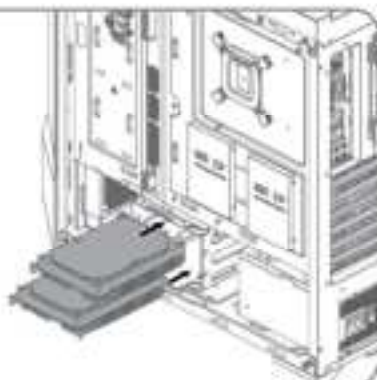 


S. FAN

1



 2A

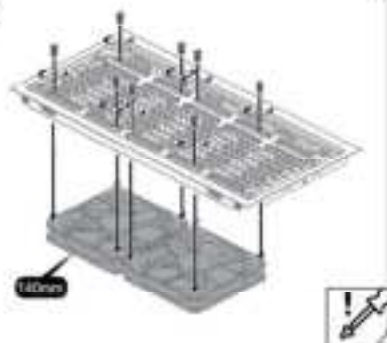

2B

 


3








7. RADIATOR

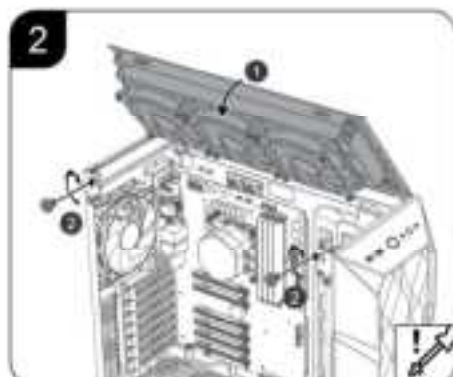

  
8. Connect ARGB and Fan PWM

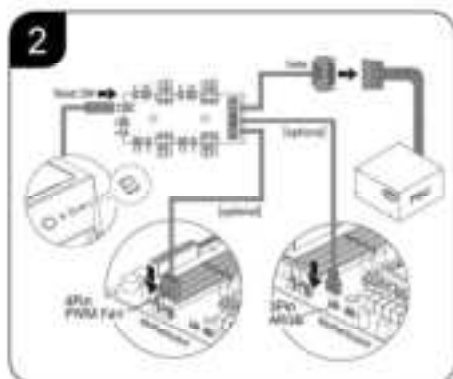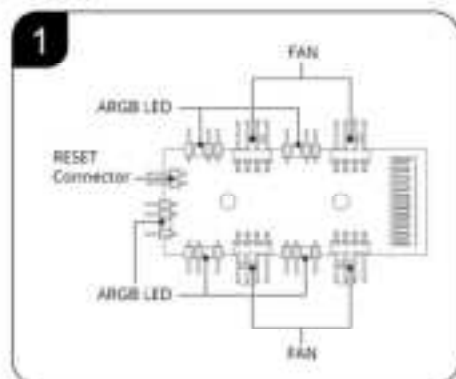

 9. INSTALL SIDE PANEL

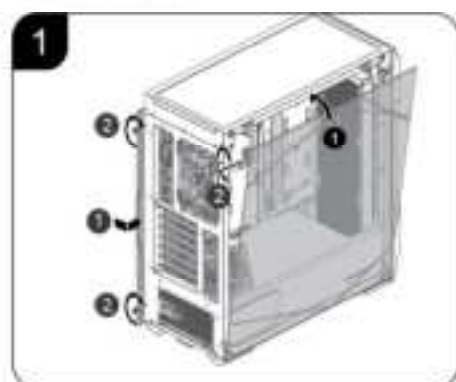

 10. PLUG IN THE POWER CORD

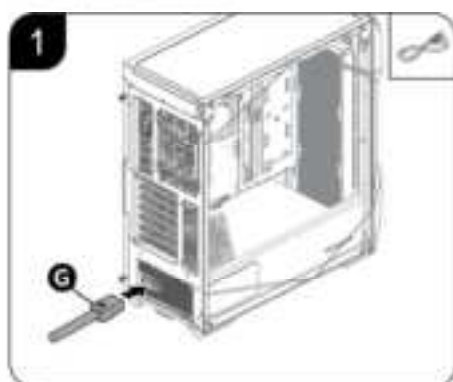

CASE

Dimensions (L x W x H)		499 x 210 x 500mm
Motherboard Support		Mini-ITX, Micro ATX, ATX
Expansion Slots		7
Drive Bays	3.5" HDD	2
	2.5" SSD	3
Fan Support	Top	3 x 120mm / 2 x 140mm
	Front	3 x 120mm / 2 x 140mm
	Back	1 x 120mm
Radiator Support	Top	360/280/240/140/120mm (recommended maximum thickness - 55mm)
	Front	360/280/240/140/120mm
	Back	120mm
Pre-installed Fan(s)	Back	1 x CF120 ARGB fan
Pre-installed Radiator	Front	MasterLiquid 360 Atmos MAX ver.
Pre-installed PSU	Bottom	GX III 850 Gold ATX3.0 MAX ver.
Compatibility (maximum)	CPU Cooler	165mm
	PSU Length	200mm (Pre-installed PSU Length 160mm)
	Graphics Card	380mm (with pre-installed AIO on front)

POWER SUPPLY

ATX Version		ATX 12V Ver.3.0	
Fan Type		120mm HDB Fan	
Efficiency		≥90% @ Typical Load	
Operating Temperature		0~40°C	
Protections		OPP, OVP, OTP, OCP, SCP, UVP, Surge and Inrush Protection	
Regulatory		cTUVus, TUV, CE, FCC, BSMI, CCC, EAC, RCM, UKCA	
Connectors First stage = (1) Second stage = (2)	ATX 24 Pin	x1 = 1x (550mm) (1)	x1 = 1x (140mm) (2)
	EPS 4+4 pin	x1 = 1x (500mm) (1)	x1 = 1x (130mm) (2)
	EPS 8 pin	x1 = 1x (500mm) (1)	x1 = 1x (130mm) (2)
	SATA (1)	x6 = 2x (500(s)+120(s)+120(s)+120(p)mm)	
	Peripheral 4pin (1)	x2 = 2x (500(s)+120(s)+120(s)+120(p)mm)	
	PCI-e 6+2 pin	x1 = 1x (300mm) (1)	x1 = 1x (250mm) (2)
	12VHPWR (1)	x1 = 1x (650mm)	

AC INPUT	100-240V~, 10-5A, 50-60Hz				
DC OUTPUT	+5V	+3.3V	+12V	-12V	+5VSB
	20A	20A	70.8A	0.3A	3A
TOTAL POWER	120W		849.6W	3.6W	15W
	850W				

WATERCOOLING

CPU Socket	Intel	LGA 1700 / 1200/ 1156 / 1155 / 1151 / 1150 socket
	AMD	AM5 / AM4 / AM3+ / AM3 / AM2+ / AM2 / FM2+ / FM2 / FM1 socket
Radiator	Material	Aluminum
	Dimensions (L x W x H)	394 x 119.6 x 38.2 mm
Pump	Dimensions (L x W x H)	84.9 x 81 x 53.15 mm
	MTTF (Hours)	>210,000 hours
	Noise Level (dBA)	25 dBA
	Connector	4-Pin PWM
	Rated Voltage (VDC)	12V
	Power Consumption (W)	3.84 W

FANS

Dimensions (L x W x H)	120 x 120 x 25mm
LED Type	Addressable Gen 2 RGB (3 PIN ARGB)
Speed (RPM)	0-2400RPM $\pm$ 10%
Air Flow (Max)	75.2 CFM
Noise Level (dBA)	30 dBA
Air Pressure (Max)	3.63 mm H ₂ O
MTTF (Hours)	>200,000 hours
Power Connector	4-Pin (PWM)
Power Consumption (W)	2.16W
Rated Voltage (VDC)	12V
Rated Current (A)	0.18A

English (EN)

Cooler Master guarantees that this device is free of defect in material and workmanship, and provides a two-year limited hardware warranty for the device commencing from the date of purchase. Please keep your receipt for proof of purchase. This product is designed for computer usage only. Using this device in any other capacity voids the warranty. If you are not familiar with computer hardware installation, please ask for professional assistance.

The warranty offered covers normal use. Defect or damage that result from improper operation, storage, misuse or abuse, accident or neglect, which are not the fault of Cooler Master, are exclude from warranty coverage.

Note: the warranty is voided by removal or alteration of product or parts identification labels.

*All OEM/bulk packaging product come with one year limited warranty

*In case of conflict between the warranty provided by the country of point of sale and this manual, the warranty of the actual country of point of sale shall be the prevailing document.

*In case of malfunction of electronic components or need of accessories purchase during the warranty period, please return to the original store of purchase.

Türkçe (TR)

Cooler Master bu cihazda malzeme ve işçilik hatası bulunmadığını garanti eder ve cihaz için satın alma tarihinden başlayan iki yıl süreli bir donanım garantisi verir. Alımı belgelemek için lütfen makbuzunuzu saklayın.

Bu ürün yalnızca bilgisayar kullanımı için tasarlanmıştır. Bu cihazın başka bir kapsamda kullanılması garantiyi geçersiz kılar. Bilgisayar donanımı montajı bilmiyorsanız, lütfen profesyonel yardım talep edin.

Verilen garanti normal kullanımı içindir. Cooler Master'in hatası olmayan uygunsuz kullanımı, depolama, yanlış kullanımı veya kötü kullanımı, kaza ya da ihmalden kaynaklanan arıza ya da hasarları garanti kapsamının dışındadır.

Bakınız: Ürün ya da parça tanıma etiketlerinin sökülmesi ya da değiştirilmesi garantiyi geçersiz kılar.

*1. Tüm OEM/ambalajlı ürünler bir yıl süreli garanti ile gelir

*2. Garanti verilen ülkedeki satış noktası ve bu kullanım kılavuzu arasında bir çelişki olursa, satış noktasının bulunduğu ülkedeki garanti hükümleri öncelik taşır.

*3. Elektronik bileşenlerin arızalanması ya da garanti süresinde aksesuarların satın alınması gerekirse, lütfen ürünü satın aldığınız mağazaya başvurunuz.

简体中文 (ZH)

Cooler Master 保证本设备之材质及功能无瑕疵，并提供本设备二年之硬件有限质保服务，自购买日起算。请把您的收据放在安全之处，以免 Cooler Master 要求您提供本证明。

本产品专为计算机设计。一旦将本设备用于其它用途，则质保无效。若您不熟悉硬件安装程序，请咨询专家之协助。质保服务仅适用于正常使用下之故障情形。若本公司发现设备损坏之原因为滥用、改造、误用、疏忽、电压供应错误、空气及水污染意外和自然灾害，则质保无效。

注意：篡改或移除设备外壳无法辨识质保期限者，则不在此限。

*所有 OEM 及工业包装的产品皆保固一年。

*如果销售国家所提供的保固与本协议互有冲突时，应以实际销售国家之保固为准。

*保固期内遇有电子零件故障或配件购买需求，请洽原购买商店。

规格名称	散热器规格一览表					
	型 (Type)	重 (g)	高 (mm)	风扇 (mm)	风扇转速 (RPM)	风扇二档转 (RPM)
散热器	+	○	○	○	○	○
风扇组	+	○	○	○	○	○
风扇组	+	○	○	○	○	○
风扇	+	○	○	○	○	○
零件包	+	○	○	○	○	○
风扇	+	○	○	○	○	○

※散热器规格 (T) 110mm 风扇规格 (F)
○ 表示该规格零件在指定时间内如使用环境中最高温度为 60°C 时，可长时间稳定运转。以下：
+ 表示该规格零件在指定时间内如使用环境中最高温度为 60°C 时，可长时间稳定运转。

Note: This form is only applied in Chinese.

繁體中文 (ZH)

Cooler Master 保證本設備之材質及做工無瑕疵，並提供本設備二年之硬體有限保固服務，自購買日起算。請把您的收據放在安全之處，以免 Cooler Master 要求您提供本證明。

本產品專為電腦設計。一旦將本設備用於其它用途，則保固無效。若您不熟悉硬體安裝程式，請尋求專家之協助。保固服務僅適用於正常使用下之故障情形。若本公司發現設備損壞之原因為濫用、改造、誤用、疏忽、電壓供應錯誤、空氣及水污染意外和自然災害，則保固無效。

注意：篡改或移除設備殼體而無法辨識保固期限者，則不在此限。

*所有 OEM 及工業包裝的產品皆保固一年。

*如果銷售國家所提供的保固與本說明互有衝突時，應以實際銷售國家之保固為準。

*保固期內遇有電子零件故障或配件購買需求，請洽原購買商店。

English (EN)

Cooler Master guarantees that this device is free of defect in material and workmanship, and provides a five-year limited hardware warranty for the device commencing from the date of purchase. Please keep your receipt for proof of purchase. This product is designed for computer usage only. Using this device in any other capacity voids the warranty. If you are not familiar with computer hardware installation, please ask for professional assistance.

The warranty offered covers normal use. Defect or damage that result from improper operation, storage, misuse or abuse, accident or neglect, which are not the fault of Cooler Master, are exclude from warranty coverage.

Note: the warranty is voided by removal or alternation of product or parts identification labels.

*All OEM/bulk packaging product come with one year limited warranty

*In case of conflict between the warranty provided by the country of point of sale and this manual, the warranty of the actual country of point of sale shall be the prevailing document.

*In case of malfunction of electronic components or need of accessories purchase during the warranty period, please return to the original store of purchase.

Türkçe (TR)

Cooler Master bu cihazın malzeme ve işçilik açısından kusursuz olduğunu garanti eder ve cihazı satın aldığınız tarihten itibaren beş yıllık bir donanım garantisi sağlar. Alımı belgelemek için lütfen makbuzunuzu saklayın.

Bu ürün yalnızca bilgisayar kullanımı için tasarlanmıştır. Bu cihazın başka bir amaçla kullanılması garantiyi geçersiz kılar.

Bilgisayar donanım montajını bilmiyorsanız, lütfen profesyonel yardım talep edin.

Verilen garanti normal kullanım içindir. Cooler Master'ın hatası olmayan uygunsuz kullanım, depolama, yanlış kullanım veya kötü kullanım, kaza ya da ihmalden kaynaklanan arıza ya da hasarlar garanti kapsamının dışındadır.

Dikkat: Ürün ya da parça tanıtma etiketlerinin sökülmesi ya da değiştirilmesi garantiyi geçersiz kılar.

*1. Tüm OEM/ambalajsız ürünler bir yıl süreli garanti ile gelir

*2. Garanti verilen ülkedeki satış noktası ve bu kullanım kılavuzu arasında bir çelişki olursa, satış noktasının bulunduğu ülkedeki garanti hükümleri önceliklidir.

*3. Elektronik bileşenlerin arızalanması ya da garanti süresinde aksesuarların satın alınması gerekirse, lütfen ürünü satın aldığınız mağazaya başvurunuz.

簡體中文 (ZHS)

Cooler Master 保证本设备之材质及功能无瑕疵，并提供本设备五年之硬件有限保固服务，自购买日起算。请您妥善保管在安全之处，以免 Cooler Master 要求您提供证明。

本产品专为计算机设计。一旦将本设备用于其它用途，则保固无效。若您不熟悉硬件安装程序，请寻求专家之协助。保固服务仅适用于正常使用下之故障情形。若本公司发现设备故障之原因为滥用、改造、误用、疏忽、电压供应错误、空气及水污染意外和自然灾害，则保固无效。

注意：重贴或撕毁标签将无法辨识保固期限者，则不在此限。

*所有 OEM 及工业包装的产品皆保固一年。

*如果销售国家所提供的保固与本说明互有冲突时，应以实际销售国家之保固为准。

*保固期间遇有电子零件故障或配件购买需求，请联系原购买商店。

附件名称	台湾有源雷達光學					
	型 (P10)	型 (P10)	型 (P10)	型 (P10)	型 (P10)	型 (P10)
雷射器	×	○	○	○	○	○
雷射器	×	○	○	○	○	○
雷射器	×	○	○	○	○	○

○：表示該附件有提供於該型號內附帶之包裝內
 ×：表示該附件無提供於該型號內附帶之包裝內
 ○：表示該附件有提供於該型號內附帶之包裝內
 ×：表示該附件無提供於該型號內附帶之包裝內

Note: This form is only applied to China law.

繁體中文 (ZHT)

Cooler Master 保证本设备之材质及做工无瑕疵，并提供本设备五年之硬件有限保固服务，自購買日算起。請將您的收據放在安全之處，以免 Cooler Master 要求您提供證明。

本產品專為電腦設計。一旦將本設備用於其它用途，則保固無效。若您不熟悉硬體安裝程式，請尋求專家之協助。保固服務僅適用於正常使用下之故障情形。若本公司發現設備故障之原因為濫用、改造、誤用、疏忽、電壓供應錯誤、空氣及水污染意外和自然災害，則保固無效。

注意：重貼或撕毀標籤則無法辨識保固期限者，則不在此限。

*所有 OEM 及工業包裝的產品皆保固一年。

*如果銷售國家所提供的保固與本說明互有衝突時，應以實際銷售國家之保固為準。

*保固期間遇有電子零件故障或配件購買需求，請洽原購買商店。

English (EN)

Safety Instructions

- Do not open the power supply unit as this can lead to serious injury or death.
- Do not insert objects into spinning fan. This will damage the power supply unit and can lead to injuries.
- Do not use excessive force when attaching the power connector to the power supply unit. When correct connectors are used, excessive force is not needed to install them.
- Keep power supply unit in dry environments away from humidity. If the power supply unit gets wet, immediately remove the AC power plug from the wall and this power supply unit. For your own safety, it is recommended that you do not use the power supply unit again after getting it wet.
- Avoid using low quality extension cables for the power supply side connectors as this can cause the cables to melt and even lead to fire.
- This power supply unit has been tested for PC usage only. We cannot guarantee operation or safety performance when used for other applications.

Installing the Power Supply Unit

1. Make sure the main power switch is turned off before installing the power supply unit.
2. Secure the power supply unit within the PC case enclosure with 3 or 4 screws for grounding and stability purposes.
3. Connect the power connectors according to the motherboard, graphics card, and other device user guides that will be used in the system.
4. Connect the AC power connector.
5. Switch on the power switch.

Trapezius (neck)

If your system does not turn on after installing the power supply, please follow the troubleshooting guide as listed below:

1. Make sure the AC power cord is correctly and firmly connected on both sides.
2. Make sure the power switch is turned on.
3. Make sure the main power connector and +5V power connectors are correctly connected to the motherboard.
4. If the power supply does not function properly, please contact our customer support immediately.

Warrarivis

Cooler Master guarantees this device to be free of defects in material and workmanship and provide a minimum 5-year hardware limited warranty for the power supply on the date of purchase. Please register on our official website to activate your limited warranty. This product was designed and intended for computer usage only. Using this device for other applications will void the warranty. If you are not familiar with computer hardware installation, please ask a professional for assistance.

This warranty only applies to the power supply unit and does not include accessories or connected components.

This warranty only applies to the power supply unit and does not include accessories or optional components. This warranty only applies to damage caused by normal use and is void if it is determined that the device was damaged because of abuse, alteration, misuse, negligence, incorrect voltage supply, air/water pollution, accidents, or natural disasters.

Please use the included power cables. Do NOT use cables from different series with differentiators. If the power supply or other equipment is damaged due to not using the original cable, the warranty will be void and we will not provide warranty services.

In the event of any defects within the warranty period, please return product to the dealer or retailer from whom you purchased for a replacement/repair.

Please contact our customer service team for any technical or product related questions.

Türkmen ETW

Güvenlik Talimatları

- Güç kaynağı işletmesini açmayıp, dışarıda yararlanmalar ve hatta ölüm meydana gelebilir;
- Dömen farın içine herhangi bir nesne sokmayıp, aksi halde güç kaynağı işletisi hasar görebilir veya yararlanmalar meydana gelebilir.
- Güç konnektörleri bağlanırken zorlanmayıp, Doğru konnektörler seçildiğinde zorlanmalar gerekmez.
- Güç kaynağına yeniden uzak, kuru ortamında tutulup, Güç kaynağı sistemine gerekçesizce dağıtılan fişlerden çekilip, Güç kaynağının tekrar kullanılması istenilerek kendi emriniz için;
- Güç konnektörleri için uzatma kabloları kullanılmaması kayıncı, aksi halde kablo emniyetli ve hatta yaralanma meydana gelebilir.
- Bu güç kaynağı işletisi FC kullanımı için test edilmelidir. Başka uygulamalar için kullanıldığında güvenli veya doğru çalışmaları garanti edemeyiz.

Güç kaynağının belirlenmesi

1. Güç kaynağı ünitesini temadan önce güç anahtarının kapatıldığından emin olun.
2. Güç kaynağına kısıya topraklama amacıyla 3 veya 4 velle kullanışınız sağlayın.
3. Güç kablolarını ana kart, ekran kartı veya diğer cihazların kabloları kullanılarak kablolarına göre bağlayın.
4. AC güç konektörünü bağlayın.
5. Güç anahtarını açın.

Sorum Giderme

Güç kaynağı: hakikî olarak sonra atılır ve çalınmaya başlıyorsa listelenen sorun giderme kılavuzunu takip edin.

1. Lütfen AC güç kablosunun doğru şekilde bağlandığından emin olun.
2. Lütfen güç anahtarını açıldığından emin olun.
3. Lütfen ana güç konektörünün +12V güç konektörlerinin ana karta doğru şekilde bağlandığından emin olun.
4. Güç kablının diğer ucuna doğru şekilde çalıştırma için gerekli diğer master deseniyle bağlantı yapın.

Current:

[illegible]

简体中文 (ZHS)

安全说明

- 请正确打开电源装置，以免造成人身伤害，甚至死亡。
- 请勿将任何物件插入正在旋转的风扇，以免损坏电源装置，造成人身伤害。
- 连接电源接口时请予以适当用力，选择正确端口后，不必使用蛮力即可轻松接合。
- 对电源放在干燥环境中，避免受潮。如果电源受潮，需要时直接取下电源插头。为了您的安全，不要再使用电源。
- 注意避免对电源接口使用过大的力，以免造成损坏或短路，甚至导致起火。
- 此电源装置仅适用于 PC 用途，如果用于其它用途，我们不能保证安全或正常使用。

安装电源

1. 安装电源装置到机箱电源开关已关闭。
2. 使用 3 或 4 个螺钉将电源固定在前壳内以实现接地。
3. 按照主板、图形卡或其它设备的用户指南连接电源接口。
4. 连接交流电源接口。
5. 开启电源开关。

故障排除

如果安装电源后系统没有打开，请参照下面的故障排除指南查找原因。

1. 请确定交流电源连接正确。
2. 请检查电源开关是否打开。
3. 请确认主电源接口 (+12V 电源接口) 正确连接到主板。
4. 如果电源工作不正常，请立即与我们的客户支持人员联系。

保修

Cooler Master 保证自购买之日起为此电源设备提供至少 5 年的硬件有限保修，确保其不存在材料或工艺方面的任何瑕疵。请在我们的网站上注册以获得有限保修。本产品仅用于计算机用途。在其它商用中使用此设备可能导致保修失效。如果您不熟悉计算机硬件安装，请让专业人士操作。本保修不适用于电源装置、不包括附件。本保修适用于正常使用情况下造成的损坏，如果我们的认定设备损坏归因于滥用、误用、疏忽、供电电压不正确、空气/水污染、事故或自然灾害、则保修失效。如果产品在保修期内出现任何故障，请带产品送到授权经销商或零售店要求进行更换/维修。请参见我们的官方网站以了解技术相关问题。

有毒有害物质标识

部件名称	有毒有害物质标识					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
PCB 板	○	○	○	○	○	○
散热器	×	○	○	○	○	○
接插件	○	○	○	○	○	○
紧固件	○	○	○	○	○	○
线材	○	○	○	○	○	○
其他材料	○	○	○	○	○	○

 
注：○ 表示有害物质含量符合 RoHS 指令中有害物质含量限值要求；× 表示有害物质含量不符合 RoHS 指令中有害物质含量限值要求。

上述标识符合中国法规

繁体中文 (ZHT)

安全说明

- 请正确安装电源装置，以免造成人身伤害，甚至死亡。
- 请勿将任何物件插入正在旋转的风扇，以免损坏电源装置，造成人身伤害。
- 连接电源接口时请予以适当用力，选择正确的接口后，不需要使用蛮力即可轻松接合。
- 将电源放在干燥环境中，避免受潮。如果电源受潮，需要时直接取下电源插头。为了您的安全，不要再使用电源。
- 注意避免对电源接口使用过大的力，以免造成损坏或短路，甚至导致起火。
- 此电源装置仅适用于 PC 用途，如果用于其它用途，我们不能保证安全或正常使用。
- 为了您的安全，请勿将电源放在易燃物附近，以免发生火灾。
- 本产品仅用于计算机用途。在其它商用中使用此设备可能导致保修失效。如果您不熟悉计算机硬件安装，请让专业人士操作。本保修不适用于电源装置、不包括附件。本保修适用于正常使用情况下造成的损坏，如果我们的认定设备损坏归因于滥用、误用、疏忽、供电电压不正确、空气/水污染、事故或自然灾害、则保修失效。如果产品在保修期内出现任何故障，请带产品送到授权经销商或零售店要求进行更换/维修。请参见我们的官方网站以了解技术相关问题。
- 本产品符合 RoHS 指令中有害物质含量限值要求。
- 本产品符合 RoHS 指令中有害物质含量限值要求。
- 本产品符合 RoHS 指令中有害物质含量限值要求。
- 本产品符合 RoHS 指令中有害物质含量限值要求。

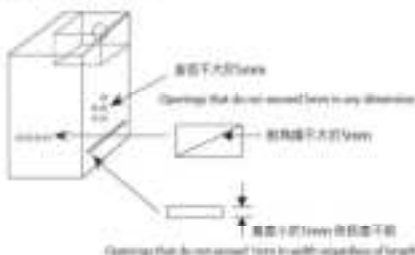

- 本电源符合 RoHS 指令中有害物质含量限值要求。
- 本电源符合 RoHS 指令中有害物质含量限值要求。
- 本电源符合 RoHS 指令中有害物质含量限值要求。
- 本电源符合 RoHS 指令中有害物质含量限值要求。

安装电源供应器

1. 请在全封闭机箱内安装电源供应器。
2. 为了接地，使用 3 或 4 个螺钉将电源供应器固定在前壳内。
3. 按照主板、图形卡、或其它设备的用户指南连接电源接口。
4. 连接 AC 电源接口。
5. 开启电源开关。

故障排除

如果您的系统未安装电源供应器或无法启动，请按照下面的故障排除指南进行。

1. 请确定正确连接到 AC 电源接口。
2. 请确定正确连接到主板。
3. 请确定交流电源接口 (+12V 电源接口) 正确连接到主板。
4. 如果电源供应器无法工作，请立即与我们的客户支持人员联系。

保修

Cooler Master 保证自购买之日起对此电源供应器提供至少 5 年的硬件有限保修，确保其不存在材料或工艺方面的任何瑕疵。请在我们的网站上注册以获得有限保修。本产品仅用于计算机用途。在其它商用中使用此设备可能导致保修失效。如果您不熟悉计算机硬件安装，请让专业人士操作。本保修不适用于电源装置、不包括附件。本保修适用于正常使用情况下造成的损坏，如果我们的认定设备损坏归因于滥用、误用、疏忽、供电电压不正确、空气/水污染、事故或自然灾害、则保修失效。如果产品在保修期内出现任何故障，请带产品送到授权经销商或零售店要求进行更换/维修。请参见我们的官方网站以了解技术相关问题。

部件名称	有毒有害物质标识					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
PCB 板	○	○	○	○	○	○
散热器	×	○	○	○	○	○
接插件	○	○	○	○	○	○
紧固件	○	○	○	○	○	○
线材	○	○	○	○	○	○
其他材料	○	○	○	○	○	○

注：○ 表示有害物质含量符合 RoHS 指令中有害物质含量限值要求；× 表示有害物质含量不符合 RoHS 指令中有害物质含量限值要求。

上述标识符合中国法规

Cooler Master Products: Limited Warranty

This document describes the warranty terms for all Cooler Master product sold in Australia

For Australia only:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Telephone: +86-2-2225-3517 (standard international call charges apply.)

Who the Warranty Protects: This Warranty is valid to the original purchaser only.

What the warranty protects:

This warranty is valid only for the Cooler Master Products distributed by authorized dealer(s) in Australia. Please contact Cooler Master for warranty information and services:

• Cooler Master Support: account.coolermaster.com

What Is and Is Not Covered

It is important to note that our warranty is not an unconditional guarantee for the duration of the Program. Any replaced parts become the property of Cooler Master. The Program does not apply to the software component of a product or a product which has been damaged due to accident, misuse, abuse, improper installation, usage not in accordance with product specifications and instructions, natural or personal disaster, or unauthorized alterations, repairs or modifications.

The Program does not cover any events such as below:

- Any damages unrelated to manufacturing defects.
- Any unsuitable environment or use of the product in Cooler Master Opinion.
- Any product which has been modified without official permission from Cooler Master, or on which the serial number or warranty sticker has been defaced, modified, or removed.
- Damage, deterioration or malfunction resulting from:
 - Accident, abuse, misuse, neglect, fire, water, lightning, or other acts of nature, commercial or industrial use, unauthorized product modification or failure to follow instructions included with the product.
 - Third-party products using Cooler Master Components will not be covered by warranty. See your vendor or the manufacturer for information about servicing.
 - Repair or attempted repair by anyone not authorized by Cooler Master, Inc.
 - Any shipment damages (claims must be made with the carrier).
 - Unauthorized repairs to a Cooler Master product will void the warranty offered by the Program. Cooler Master reserves the right to refuse to service any product which has been altered, modified or repaired by non-Cooler Master Service personnel.
- Cooler Master does not warrant that this product will meet your requirements. It is your responsibility to determine the suitability of this product for your purpose.
- Removal or installation charges.
- You are responsible for the cost of shipping the product to Cooler Master. Cooler Master pays the cost of returning a product to you.
- Cooler Master reserves the right to replace the product with a service product at their sole discretion at any time.
- Product malfunction or damage resulting from liquids or moisture.
- All accessories that malfunction due to physical damage such as: USB cables, extension cables, adapter cables, adapters, power cords, screws, retention brackets, ear cups, and all other similar accessories.

Limitation of implied warranties:

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION CONTAINED HEREIN INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Exclusion of damages

COOLER MASTER'S LIABILITY IS LIMITED TO THE COST OF REPAIR OR REPLACEMENT OF THE PRODUCT. COOLER MASTER SHALL NOT BE LIABLE FOR:

- DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECT IN THE PRODUCT, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS OR OTHER COMMERCIAL LOSS, EVEN IF ADVISED OF THEIR POSSIBILITY OF SUCH DAMAGES.
- ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE
- ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY

Warranty Information:

If the goods is found with reasonable defect within the period of (refer to Table A.) starting on the first day of purchase (with proof of invoice), this is what you must do, to claim the warranty from the above address.

Procedures:

1. Consumers should return to the shop where he/she has bought the goods. After confirming with the shop with a valid invoice, they may approach the distributor for RMA claim.
2. After confirmed by the distributor that the goods was damaged due to natural causes, replacement and repair will be done by distributor (including brand new or refurbished goods)
3. All faulty goods must return to the distributor, expenses for returning the faulty goods will be covered by the consumer, and distributor will cover the cost involved in the transporting of parts or repaired goods to the consumer.

Regarding all the expenses incurred in making the claim, and this is how you would claim:

1. Within the valid warranty date, starting from the first day of issuing invoice, Retail shops will assist in confirmation with distributor for the consumer for the following:

A. If the damage was caused by the consumer, then the consumer should cover all expenses in fixing the product, if the product still can't be fixed, we would suggest consumer in buying a brand new product.

B. Product defect caused under natural use, expenses will be covered by the distributor.

2. Faulty products with expired warranty dates, we would suggest consumer to purchase a brand new products, without undergoing for repairs.

Table A:

Cooler Master Products

Please check your user manual for the exact warranty period terms for products that are not shown below.

For more warranty information, please visit our official website: <http://www.coolermaster.com/service/warranty.html>

(FAN only and Electronic parts)

Product Name	Warranty Term
Computer Cases	2 year
Liquid Cooler	3 year
Power Supply	5 year

(EN)	Limited warranty period:	http://www.coolermaster.com/service/warranty.html
(AR)	المدة المحددة للضمان:	http://www.coolermaster.com/service/warranty.html
(BG)	Период на ограничена гаранция:	http://www.coolermaster.com/service/warranty.html
(CS)	Období omezené záruky:	http://www.coolermaster.com/service/warranty.html
(DA)	Begrænset garanti:	http://www.coolermaster.com/service/warranty.html
(DE)	Beschränkter Garantiezeitraum:	http://www.coolermaster.com/service/warranty.html
(EL)	Περιοδός περιορισμένης κυρώσεως:	http://www.coolermaster.com/service/warranty.html
(ES)	Periodo de garantía limitada:	http://www.coolermaster.com/service/warranty.html
(FA)	http://www.coolermaster.com/service/warranty.html	مدت زمان گارانتی:
(FI)	Rajattu takuujakso:	http://www.coolermaster.com/service/warranty.html
(FR)	Période de garantie limitée:	http://www.coolermaster.com/service/warranty.html
(HU)	Korlátozott jótállási időszak:	http://www.coolermaster.com/service/warranty.html
(HR)	Skraćeno ograničenog jamstva:	http://www.coolermaster.com/service/warranty.html
(ID)	Masa garansi terbatas:	http://www.coolermaster.com/service/warranty.html
(IT)	Periodo di garanzia limitata:	http://www.coolermaster.com/service/warranty.html
(JA)	限定保証期間:	http://www.coolermaster.com/service/warranty.html
(KO)	제한 보증 기간:	http://www.coolermaster.com/service/warranty.html
(KK)	Keninkik wepaivi:	http://www.coolermaster.com/service/warranty.html
(NL)	Beperkte garantiëperiode:	http://www.coolermaster.com/service/warranty.html
(NO)	Garantiperiode, begrenset garanti:	http://www.coolermaster.com/service/warranty.html
(PL)	Okres ograniczonej gwarancji:	http://www.coolermaster.com/service/warranty.html
(PT)	Periodo de garantia limitada:	http://www.coolermaster.com/service/warranty.html
(RU)	Ограниченный период гарантии:	http://www.coolermaster.com/service/warranty.html
(SR)	Period ograničene garancije:	http://www.coolermaster.com/service/warranty.html
(SV)	Begränsad garantiperiod:	http://www.coolermaster.com/service/warranty.html
(TR)	Sınırlı garanti süresi:	http://www.coolermaster.com/service/warranty.html
(UK)	Обмежений гарантійний термін:	http://www.coolermaster.com/service/warranty.html
(ZHT)	有限保固期間:	http://www.coolermaster.com/service/warranty.html



Make It Yours.

China - Cooler Master China

Room 112, Building 9, No. 327, Songjin Road, Jinshanwei Town,
Jinshan Dist., Shanghai City, China

Tel: +86-21-51872177

Europe - Cooler Master Europe B.V.

Lodewijkstraat 1b, 5652AC Eindhoven, The Netherlands

Tel: +31-(0)40-702-0900

North America - Cooler Master NA

1 N Indian Hill Blvd Suite D200 Claremont, CA 91711 USA

Tel: +1-888-624-5099

South America

E-mail: Soporte_Latam@coolermaster.com.tw



Product Page and Manual

Visit Product Page for information,
manual and other downloads



Technical Support

Just visit: account.coolermaster.com

512006640-GP Ver 1.0: 2024/01 

The color and specification are subject to be changed without further notification.
Please visit our website for updated information: www.coolermaster.com

©2024 Cooler Master Technology Inc. All Rights Reserved. All trademarks are registered to their respective owners.

