USER GUIDE ZY695A Mini

Bazyths



www.bazyths.com

ENJOY YOUR NEW BAZYTHS SMART TOILET

Please contact Bazyths Support if you have any questions.

Contact Information:

support@bazyths.com

Catalogue

Hov	w to Use the Foam Shield Function	1
	Introduction to the Foam Shield Function	1
	How to Get Your Free Foam Shield Liquid	1
	Replace the Foam Shield Bottle	1
Pan	el instruction	2
	Remote Control Panel	2
	Pairing the Remote Control	2
	The Host Panel	4
	Display Screen on the Main unit	5
Hov	v to Use	6
	When sitting on the seat	6
	Start Rear cleansing or Front cleansing Function	6
	When standing up from the seat	6
Fun	ction Setting and Adjustment	7
	How to Turn On/Off the Radar Sensor Function	7
	How to Adjust the Radar Sensor Distance	7
	Lid/Toilet Seat Open/Close	7
	Aperient	8
	Rear cleansing	8
	Front cleansing/Female cleansing	9
	Water Pressure Adjustment	9
	Nozzle Position Adjustment	9
	Cleansing Water Temperature Adjustment	9
	Hot/Cold Massage	9
	Drying Function	10
	Air Dryer Temperature Adjustment	.10
	Seat Ring Temperature Adjustment	. 10
	Night Light	10
	Nozzle Cleaning	11
	Power Button	. 11
	Flush by the Remote Control	. 11
	Flush by Foot Kick	. 11
	Flush by the Side Button	.11
Cle	aning and Maintenance	
	Clean and Maintain the Power Plug	. 12
	Clean and Maintain the Main Unit of the Smart Toilet	. 12
	Clean and Maintain the Ceramic Part of the Smart Toilet	
	Clean and Maintain the Nozzle	13
	Clean and Maintain the Water Inlet Filter in the T-Valve	. 13

How to Use the Foam Shield Function

 
■ Introduction to the Foam Shield Function

The Foam Shield creates a soft foam layer inside the toilet bowl that prevents splashing, blocks odors, and keeps the bowl cleaner. It is an innovative feature designed to enhance hygiene and provide a more comfortable and pleasant bathroom experience.

■ How to Get Your Free Foam Shield Liquid

For transportation safety, the foam liquid is not pre-filled in the foam shield bottle. After receiving your toilet, please contact us at support@bazyths.com to request the foam liquid. Your first bottle is completely free, and we will ship it to you separately.

■ Replace the Foam Shield Bottle




1. Use both hands to hold the sides of the decorative cover and lift it vertically to remove it.



2. Press the connector cap and detach the soft tube.



 
3. Remove the old bottle.



4. Take the connector head from the old bottle and attach it to the new bottle.



 5. Place the new bottle back into the machine and reconnect the soft tube.




6. Secure the decorative cover back in place.

Note: Regardless of whether you use the Foam Shield function, please ensure that a foam liquid bottle is placed here and that the soft tube is connected to the bottle. Without a bottle, water leakage may occur.


Panel Instruction

This product is designed primarily for remote control operation, with main unit panel operation as a supplement.

■ Remote Control Panel

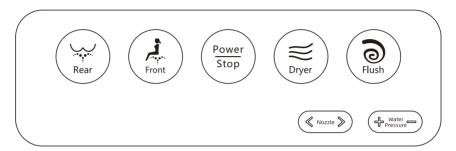

Front

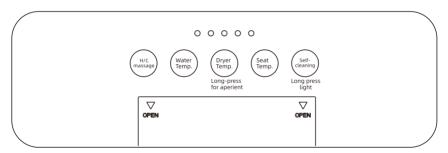

Back

Applicable model: Medium configuration type

Pairing the Remote Control


Turn off the toilet and reconnect the power. Within 30 seconds of powering on, press and hold the Feminine Wash button on the side of the toilet until the display flashes once.

Immediately press and hold the Rear Wash button until the display begins flashing continuously.


Then press the STOP button on the remote control.

If the display stops flashing and returns to normal, pairing is successful.

■ Remote Control Panel

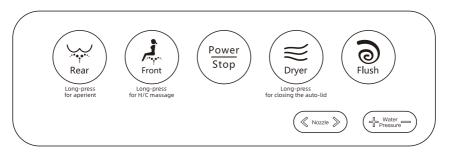

Front

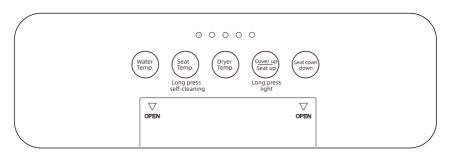


Back

Applicable model: High configuration type

Note: The appearance and functions of the remote control may vary slightly for different models. Please refer to the actual product for details.

 ◆ The Host Panel




• When away from the toilet seat:

Press the "rear cleansing" or "front cleansing" button to manually flush the toilet.

When seated on the toilet seat:

- After sitting down, press the front or rear cleansing button to activate the corresponding one-touch cleansing mode (90 seconds of cleansing + one flush + 3 minutes of drying). For example, pressing the "Rear Cleansing" button starts the 90-second rear cleansing mode, followed by one flush, and then automatically transitions to a 3-minute drying cycle.
- If you do not wish to complete the full 90-second cleansing cycle for example, if 30 seconds of cleansing feels sufficient you can press the corresponding button again to stop cleansing and proceed directly to flushing and drying. For instance, during rear cleansing, pressing the rear cleansing button on the side again will automatically skip to flushing and drying.

■ Display Screen on the Main unit

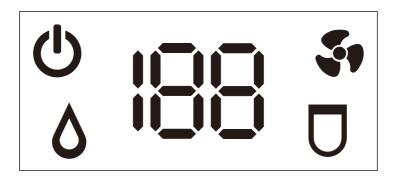


- Power indicator: Lights up when the main unit is turned on.
- **188** Temperature level: Displays the set temperature when the main unit is turned on.
- Air temperature icon: When the icon lights up, it shows the set temperature of the air dryer.
- Seat temperature icon: When the icon lights up, it shows the set temperature of the toilet seat.
- Cleansing water temperature icon: When the icon lights up, it shows the set temperature of the cleansing water.
- The screen cycles through the set temperatures for the water, seat, and air dryer every 30 seconds.
- When the user leaves the toilet sensor area, the screen will automatically turn off after approximately 30 seconds.

How to Use

■ When Sitting on the Seat

- Upon hearing the "beep" sound, the various functions of the smart toilet will start.
- The nozzle will clean itself automatically.

■ Start Rear Cleansing or Front Cleansing Function

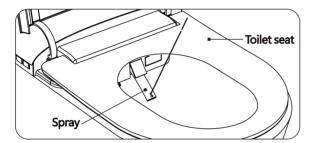

- Start the rear cleansing or front cleansing function by the remote control.
- \bullet Adjust the cleansing position and water pressure by the remote control.
- Start the drying function by the remote control.
- Press "stop" button to stop the bidet function (rear cleansing, front cleansing or drying).

■ When standing up from the seat

• The toilet will auto flush once.

Function Setting and Adjustment

■ How to Turn On/Off the Radar Sensor Function

To turn this function on or off, press and hold the Dryer button on the remote control for 5 seconds.

Note: When the radar sensor function is turned off, you can still use the foot kick to open the toilet lid and seat.

How to Adjust the Radar Sensor Distance

The radar sensor sensitivity on the ZY695A Mini can be adjusted to control the detection range. By default, the sensor is set to level 7. You can reduce the sensitivity by lowering the level, which will decrease the detection range.

Adjustment Steps:

- 1. Turn off the power, then restart the smart toilet.
- 2. Within 30 seconds, press and hold the Feminine Wash button for 5 seconds to enter radar adjustment mode.
- 3. Press the Rear or Front button to adjust the radar sensitivity level.
- 4. Press the Stop button to confirm your selection.

■ Lid/Toilet Seat Open/Close

• The product has a foot sensing function for opening the toilet lid/seat ring. When user lifts their foot around the sensor, they can perform the lid/seat ring flipping operation.

In the unseated state:

- When the seat cover and seat ring are closed, lift your foot once around the sensor on the side of the toilet to flip the seat cover;
- When the seat cover is open and the seat ring is closed, lift your foot once around the sensor to flip the seat ring.
- When both the seat cover and seat ring are open, lift your foot once to close the seat cover and seat ring, and flush once (if the last operation performed was a flush, then it will not flush again this time).
- Press the button "Cover up/Seat up" (Seat cover down" (Seat cover down" on the remote control to open/close the lid and seat ring.

In the unseated state:

- Press the button "Cover up/Seat up" (Cover up) to achieve the "seat cover up-seat ring up-seat ring down-seat ring up" function via the remote control.
- Press the button "Seat cover down" (Seat cover down"), and the seat ring and seat cover will close, and flush once (if the last operation performed was a flush, then it will not flush again this time).
- If both the seat ring and seat cover are in the closed state, pressing the "Seat cover down" button will not perform any operation.
- When the toilet is in rear cleansing, front cleansing, or drying mode, the lid/seat ring open/close function cannot be used.

■ Aperient

- The product has aperient function where cleansing water comes from the single-hole of the nozzle to assist with bowel movements. Enjoy this feature by long pressing the button on remote control.
- In the seated state, press the button on the remote control with a following "beep" sound to start the aperient function. You can end it by pressing the "Stop" button on the remote control or pressing the side knob down vertically.
- In this mode, the water pressure is fixed and unadjustable, but the nozzle position and water temperature can be adjusted.

■ Rear Cleansing

- This product has a rear cleansing bidet function by using a single-hole high-pressure cleaning nozzle.
- Press the button on the remote control to enter the rear cleansing mode.
- In rear cleansing mode, press the button again to activate the oscillating cleansing function (the nozzle moves back and forth). Press the button again to deactivate the oscillating cleansing function (the nozzle stops moving). You can switch between these functions circularly.
- Rear cleansing will automatically turn off after approximately 90 seconds.
 You can switch to other functions or simply press the before the 90 seconds are up.
- The nozzle will automatically clean itself before and after rear cleansing.

■ Front Cleansing/Female Cleansing

- This product has a female cleansing function, with a dedicated nozzle hole for gentle cleansing.
- Press the button on the remote control to activate the front cleansing mode.
- In front cleansing mode, press the button again to activate the oscillating cleansing function (the nozzle moves back and forth). Press the button again to deactivate the oscillating cleansing function (the nozzle stops moving). You can switch between these functions circularly.
- Front cleansing will automatically turn off after approximately 90 seconds. You can switch to other functions or simply press the before the 90 seconds are up.
- The nozzle will automatically clean itself before and after front cleansing.

■ Water Pressure Adjustment

- In rear cleansing or front cleansing mode, press the button to adjust the water pressure strength according to your preference.
- 4 levels of water pressure are available. Press the button (""" to enter the adjustment mode and adjust it to your desired intensity.

■ Nozzle Position Adjustment

- In rear cleansing or front cleansing mode, press the button (to move the nozzle back and forth and adjust the cleansing position to your liking.
- 5 levels of nozzle position are available. Press the button (nozzle) to enter the adjustment mode and adjust it to your desired position.

■ Cleansing Water Temperature Adjustment

- Press the remote control button (water temperature setting mode. Adjust the cleansing water temperature to the appropriate level.
- The water temperature can be adjusted to 4 different levels, including room temperature, high, medium, and low levels. Press the water temperature button once to switch to another level.

■ H/C Massage

• Pressing the remote control button will activate the nozzle to alternate between hot and cold water to massage, with the water temperature switching back and forth between normal/room temperature and the user's setting temperature level. If the user's setting temperature level is normal/room temperature, then the water temperature will alternate between the normal level and the low level.

■ Drying Function

- Press the remote control button to activate the air dryer. By activating this function, the device will blow warm air onto the wet areas to dry them.
- Drying function will automatically turn off after approximately 3 minutes. You can switch to other functions or simply press the (Power Stop) button to deactivate it before the 3 minutes are up.

■ Air Dryer Temperature Adjustment

- Press the remote control button (pryer temperature setting mode. Adjust the air dryer temperature to the appropriate level.
- The dryer temperature can be adjusted to 4 different levels, including room temperature, high, medium, and low levels. Press the button once to switch to another level.

■ Seat Ring Temperature Adjustment

- Press the remote control button (sent remp), and the main unit will respond with a "beep" sound prompt, entering the seat ring temperature setting mode. Adjust the seat ring temperature to your liking.
- The seat ring temperature can be adjusted to 4 different levels, including room temperature, high, medium, and low levels. Press the button (Seat Temp.) once to switch to another level.

■ Night Light

- This product is equipped with lighting function for convenient use at night.
- Long-pressing the remote control button (self-leaning) or (coverup) will turn on or turn off the night light function.

■ Nozzle Cleaning

- Press the remote control button (cleaning) or long press (Seat Temp.) to activate the nozzle cleaning function, and the water flow continuously from the inside of the nozzle to clean it.
- This function can only be activated when the user is not seated.
- ullet The nozzle cleaning process takes approximately 60 seconds and can be stopped by pressing the stop button $\left(\frac{P_{OWEY}}{Stop}\right)$.

■ Power Button

• The power button on the remote control can be used to turn the smart toilet system on or off.

■ Flush by the Remote Control

- To flush the toilet once, press the flush button continuously, there needs to be a 30-second interval between each flush.
- When the cleansing mode is activated, flushing the toilet will stop the cleansing function.

■ Flush by Foot Sensor

- Designed specifically for men's urination, no need to bend down to find the button or look for the remote control to flush, just place your foot in the sensing area to achieve flushing.
- To activate the flush, stretch your foot slightly against the sensor sign on the ceramic surface, and the water will start flowing once you remove your foot.


■ Flush by the Side Knob

- Press the knob down vertically to flush once.
- When the cleansing mode is activated, flushing the toilet will stop the cleansing function.

Cleaning and Maintenance

■ Clean and Maintain the Power Plug

Please clean the power plug regularly. When cleaning, remove the power plug from the outlet and wipe it with a dry cloth.

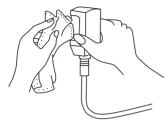

• Dust accumulation on the power plug may cause fire.

■ Clean and Maintain the Main Unit of the Smart Toilet

When cleaning the surface of the main unit, please wipe it with a soft, wet cloth.

- When cleaning and maintaining the smart toilet main unit, please pull the power plug out of the outlet to avoid any contact with water.
- If the surface has stubborn stains, you can use a soft, wet cloth with neutral kitchen detergent to clean it.

■ Clean and Maintain the Ceramic Part of the Smart Toilet


You can pour a neutral toilet cleaner onto a soft brush or sponge and use it to clean the ceramic part of the smart toilet. Rinse the area with tap water after cleaning.

- Do not use detergents or disinfectants that contain chlorine or are acidic.
- Do not use brushes that contain abrasive materials.



■ Clean and Maintain the Nozzle


When the smart toilet is turned on, press the remote control button (cleaning) or long press (seat temp) to activate the nozzle cleaning function. The nozzle will extend and clean itself with water, and you can use a toothbrush to clean it at the same time. Please do not forcefully stretch the nozzle. When the nozzle moves forward, the nozzle can be removed and cleaned separately.

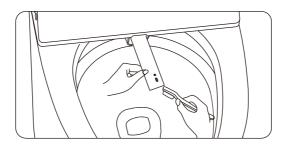

Detachable nozzle model cleaning method



  Press the button of self-cleaning on remote control to extend out the nozzle.



2. After the nozzle is extended, pull out the front nozzle with hand.



3.Use a toothbrush to clean the nozzle.

■ Clean and Maintain the Water Inlet Filter in the T-Valve

- Turn off the shut-off valve first to stop water supply.
- Remove the lock and the filter from the t-valve.
- Clean the filter with a brush or running water.
- Reinstall the filter. Make sure to screw it back in securely and not to leave behind the lock.