



10-IN-1 STEAM MOP

KAMOPSTM10J

Safety & Warnings	3
Components	6
Overview	7
Accessories	8
Assembly	9
Filling the Water Tank	11
Operation	12
Cleaning & Care	14
Specifications	16
Troubleshooting	17
Notes	18

SAFETY & WARNINGS

Warning: Read all safety warnings and all instructions. Failure to follow the warnings and instructions listed below may result in electric shock, fire and/or serious injury.

Warning: When using electrical appliances, basics safety precautions, including the following, should always be followed to reduce the risk of fire, electric shock, personal injury and material damage.

- Read this user guide carefully before using the appliance and retain it for future reference.
- The intended use is described in this guide. The use of any accessory or attachment or the performance of any operation with this appliance other than those recommended in this guide may present a risk of personal injury.

Using your appliance

- Do not direct steam at people, animals, electrical appliances or electrical outlets.
- Do not immerse the appliance in the water or other liquids.
- Do not leave the appliance unattended. Ensure children are supervised during operation.
- Do not leave the appliance connected to an electrical outlet when not in use.
- Never pull the power cord to disconnect the appliance from the outlet. Keep the power cord away from sources of heat, oil and sharp edges.
- Do not handle the steam mop with wet hands.
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or expose cord to heated surfaces.
- Do not use appliance in an enclosed space filled with vapor given off by oil-based paint thinner, some moth-proofing substances, flammable dust or other explosive or toxic vapours.
- Do not use on leather, wax polished furniture or floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.
- Do not use on any unsealed hard floor surfaces. Additionally, on surfaces that have been treated with wax, the sheen may be removed by the heat and steam action. It is always recommended to test an isolated area of the surface to be cleaned before proceeding. We also recommend that you check the use and care instructions from the floor manufacturer.
- Never put de-scaling, aromatic, alcoholic or detergent products into the steam mop, as this may damage it or make it unsafe for use.

- If the circuit breaker activates while using the steam function, cease use immediately and contact help.Kogan.com for support (beware of the risk of electrical shock).
- The appliance emits extremely hot steam to sanitize the area of use. This means that the steam head and cleaning pads get extremely hot during use.
- Always wear suitable shoes when using your steam mop and when changing the accessories. Do not wear slippers or open-toed footwear.
- The lid may become hot during use.
- Care should be taken when using this appliance. Do not touch any parts which may become hot during use.
- Do not use when micro-fibre cleaning pad does not install correct.

Safety of other:

- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- If the power cord is damaged, cease use immediately and contact help.Kogan.com for support (beware of the risk of electrical shock).

Warning: Danger of scalding

- The plug must be removed from the power outlet before cleaning or performing any maintaining on the appliance.
- The steam must not be directed towards equipment containing electrical components, such as the interior of ovens.
- The appliance has to be unplugged after use.
- The appliance should be used only after assembling. The appliance should not be used without handle.
- The appliance shall not be left unattended while it is connected to the supply mains.
- The appliance is not to be used if it has been dropped, or if there are visible signs of damage or if it is leaking.

 
Residual risks:

Additional residual risks may arise when using the appliance which may not be included in the enclosed safety warnings. These risks can arise from misuse, prolonged use, etc.

Even with the application of the relevant safety regulations and the implementation of safety devices, certain residual risks cannot be avoided. These include:

 
- Injuries caused by touching any moving parts.
- Injuries caused by touching any hot parts.
- Injuries caused when changing any parts or accessories.
- Injuries caused by prolonged use of the appliance. When using any appliance for prolonged periods ensure you should take regular breaks.

COMPONENTS

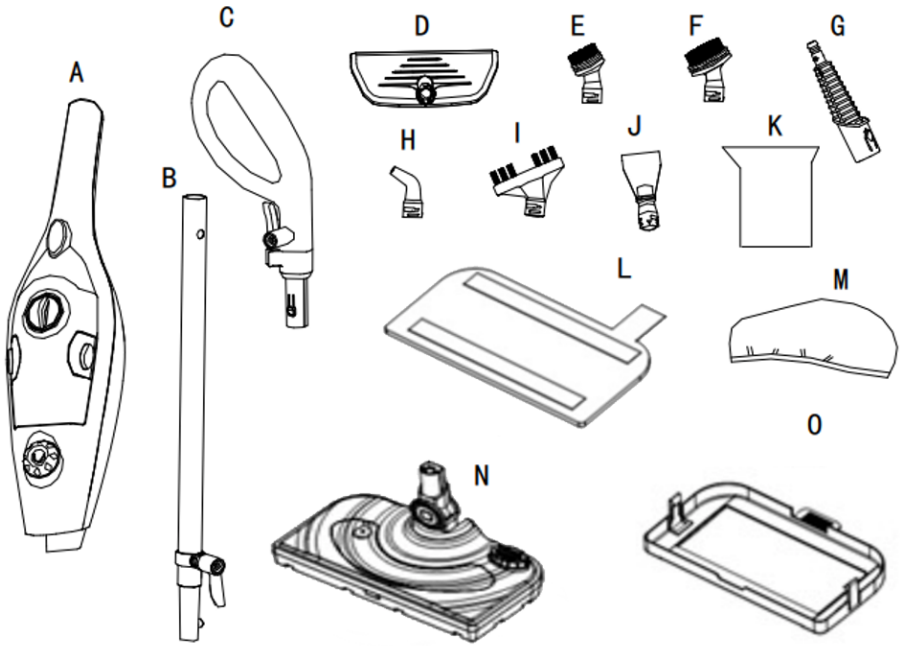





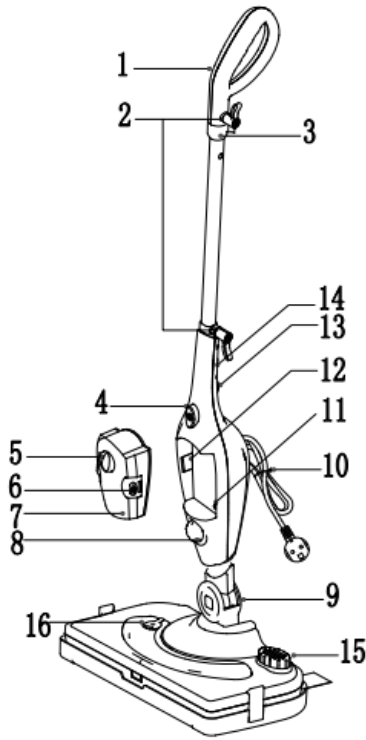


A	Steam Unit	I	Grout Tool
B	Handle tube	J	Scraping Tool
C	Handle	K	Measuring cup
D	Window tool	L	Microfibre pad
E	Small Brush	M	Garment steamer Cloth
F	Medium Brush	N	Mop head
G	Accessory Adaptor	O	Carpet Gilder
H	Angle nozzle		

  OVERVIEW



- | | | | |
|----------|--------------------|-----------|-----------------------|
| 1 | Handle | 9 | Mop head spindle |
| 2 | Cord holder | 10 | Power cord |
| 3 | Tube | 11 | Water inlet |
| 4 | Lock catch | 12 | Indicator |
| 5 | Water tank cap | 13 | Steam button |
| 6 | Water tank button | 14 | Handle tube button |
| 7 | Water tank | 15 | Detergent spray pedal |
| 8 | Steam control knob | 16 | Detergent inlet |

ACCESSORIES

Accessory		Suggested use
Window/Garment Steaming Tool		Shower glass doors, mirrors, glass, removing soap scum and grime. Garment tool for taking wrinkles out of garments, steaming draperies, tablecloths and more.
Brushes		Hard-wearing for use on hard sealed surfaces. Always test before use. Use the metal (wire bristle) brushes for hard to clean surfaces such as barbecue grills, oven racks, tyre wheels, etc. Do not use these brushes on anything that the wire bristles may scratch or damage.
Angle Nozzle		For small areas requiring delicate attention to detail, this fine/detail nozzle is ideal.
Grout Tool		Wide, straight brushes to tackle grout on tiled floors and surfaces. Lifts embedded dirt from between tiles and grouting.
Scraper Tool		Suitable for scraping dried residue or getting into narrow corners.
Garment Steamer Cloth		For use when steaming garments, draperies, tablecloths, etc.
Microfiber Pad		For general cleaning of hard floors and refreshing carpets.

 
 
ASSEMBLY

This steam mop has been tested to ensure performance and safety. When assembling your steam mop for the first time you may notice some residual water inside of the unit.

Before starting any assembly procedures, ensure the appliance is switched off, unplugged and it has cooled down with minimal to no water inside.


Attaching the handle

- Insert the handle into the tube until it clicks into place.
- Attach the lower tube to the steam unit until it clicks into place.
- Push the button to remove the handle tube for easy storage.



Attaching the steam head

 - Slide the bottom end of steam unit into the mop head spindle until it clicks into place.
- The mop head can be removed from the steam unit by pressing the salient point on the mop head spindle.

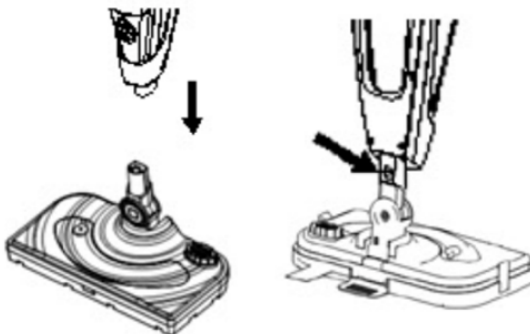


Attaching a cleaning pad

- Microfibre cleaning pad is to be placed at the bottom of mop head.
- To remove the pad, place the front of your shoe onto the cleaning pad removal tab and press down firmly.



Attaching carpet glider

 - Ensure microfibre cleaning pad is fitted before the carpet glider.
- Attach carpet glider by clipping into place on the steam head and applying vertical pressure, until it clicks into place (4a).
- To remove the carpet glider, place the front of your shoe onto the cleaning pad removal tab and press down firmly, the carpet glider will remove from steam head.

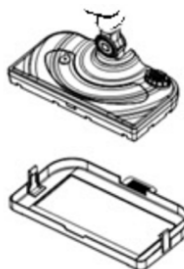


FILLING THE WATER TANK

Method one

Open the water tank cap, use the measuring cup to fill with 330mL of water, then close the water tank cap.

Method two

 Remove the water tank from main body, open the water tank cap, and fill the water tank from water faucet. When done, replace the water tank cap, then install the water tank into main body until it clicks into place.

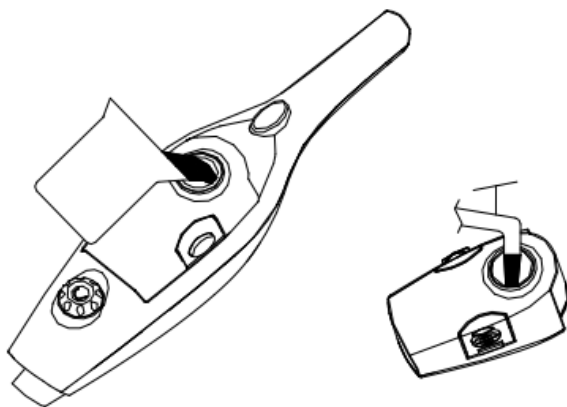

OPERATION

Starting the Steam Mop

- Make sure the device has been filled with water before turning on. Do not run dry.
- Plug the power cord into a power outlet and switch on.
- The indicator light will turn red on each side of the water tank and the steam mop will begin preheating. If the indicators do not illuminate, refer to the "troubleshooting" section for more details. It will take approximately 25 seconds for preheating. Once the steam mop is ready to use the water tank will glow blue.

Note: If power is interrupted during the preheating phase, when the steam mop is turned on again it will repeat the preheating phase.

- A full water tank will run for approximately 20 minutes. When the water level runs low, the indicator will glow red and begin flashing.
- Press and hold the steam button to release steam.
- Direct the outlet (with any connected nozzle or accessories) toward the surface you wish to steam while holding the steam button. To stop flow of steam, release the button.
- Increase the level of steam by turning steam control knob clockwise
- Turn the steam control knob counter-clockwise to reduce the amount of steam.

 


Note:

Before storing the steam mop, remove the water tank before turning off the power and then let the product run for a while, until there is no steam.

Hand-held Mode

- Press the lock catch to release the steam unit from the main body.
- Attach the accessory adaptor to the steam unit, until it locks into place.
- Attach the required accessory according to your need. Ensure the arrow indicators are aligned, then turn counter-clockwise, until it locks into place.

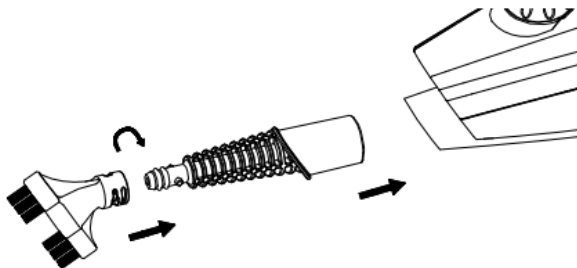

CLEANING & CARE

WARNING: Do not immerse the appliance in water.

Ensure that the product is powered off and unplugged before cleaning the appliance.

Empty the water tank after use every time and clean the water tank.

How to decalcify the water tank interior

To clean calcium deposits that builds up inside the water tank, add one or two tablespoons of white vinegar to water tank and then shake the contents. Let it sit for several hours, then pour away the solution and rinse with clean water.

Cleaning procedure to remove scale.

If your steam mop outputs steam more slowly than usual, or no steam, you may need to remove lime scale. Lime scale can develop over time on the metal parts and greatly affect steam mop performance.

It is necessary to remove lime scale on regular basis every 25-50 times you use a full tank of water, or at least once a month, especially in areas with hard water.

The frequency of lime scale removal depends upon the hardness of you tap water and how often you use the steam mop.

By using cleaning solution

1. Prepare a solution of 1/3 white vinegar and 2/3 tap water and add to the water tank.
2. Secure and position the unit to ensure steam released is aimed away from the floor or surrounding objects and surface. Plug the unit in, turn the unit ON by pressing the power switch and allow the unit to produce steam unit the vinegar/water solution in used up.
3. Repeat the above procedure as many times as necessary unit a normal steam flow rate is achieved.
4. Fill the water tank with fresh water and rinse ours.
5. Fill the water tank with fresh water, attach to the unit and releasee steam through the system unit the water tank is empty.

WARNING: Don't leave the appliance during the lime scale removal process and/or while in use

Notice:

Perform a test cleaning on a suitable isolated area after each lime scale removal to ensure that there is no debris left in the system.

This product contains no serviceable parts. Do not try to repair it by yourself. Any servicing that requires disassembly other than cleaning must be performed by a qualified appliance repair technician.

All servicing should be done by an authorised service representative.

Cleaning Microfiber Pad

- Machine washable on "warm" setting. Always use a mild detergent.
- For best care results, lay flat to dry.
- Important: Allow the steamer to fully cool down before performing any maintenance or troubleshooting checks.
- Important: Never use bleach or fabric softener when washing the microfiber cleaning pad.

Storage

- After the steamer is used, turn power off and then unplug the power cord.
- Take out the water tank and empty the residual water in the tank and clean the external surface with a dry cloth. Until the steam mop cools down, clean appliances.
- Remove the cleaning pad and wash it so that it will be ready for next use.
- Store product in a protected, dry area. Keep water funnel and measuring cup for future use.
- Keep out of reach of children.

Notes:

After cleaning, take out the water tank before cutting off the power and then let the product work for a while, until there is no steam. It can make pipe without water, good to store.

SPECIFCATIONS

Rated voltage	220-240V
Rated frequency	50Hz
Output power	1500W (+5%, -10%)
water tank capacity	350ML
Waterproof level	IPX4

TROUBLESHOOTING

Use troubleshooting guide as a first step to resolve any problems you may be experiencing. All servicing should be done by an authorised service representative.

WARNING: To reduce risk of personal injury-unplug steamer before servicing and allow to cool

Problem	Possible reason	Possible solution
Reduced steam or no steam	Water tank may be empty	Fill water into the water tank
	Steam nozzle may be blocked	Clean steam nozzle
	There is no power to the unit	Make sure unit is plugged in
	Did not press steam button	Press steam button
	Steam control Knob is in MIN.	Turn steam control knob clockwise
Unit will not turn on	Blown fuse or breaker	Replace fuse or reset breaker in home
	Power cord not plugged in	Plug cord into a working circuit
	Internal fuse is blown	Contact with customer service

Disposal

	This marking indicates that this appliance should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.
---	---

NOTES

[illegible]

[illegible]

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com