

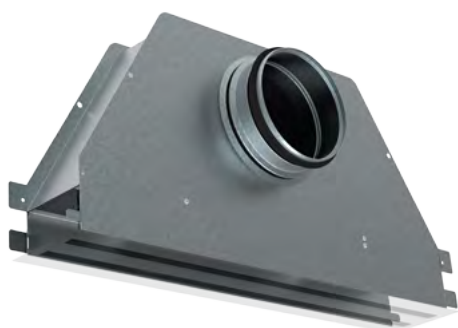
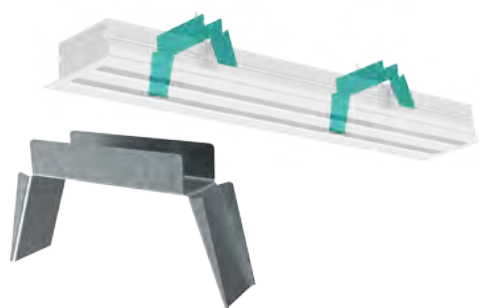
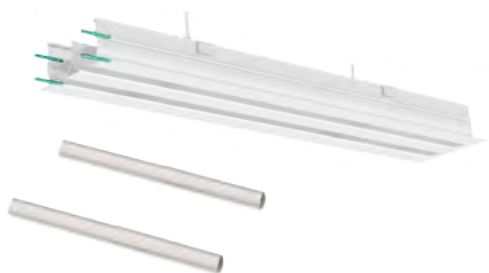


HELLA


User Manual

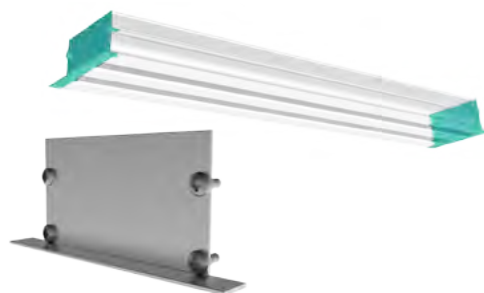

**HELLA****HELLA-CE****PB-HELLA****MB-HELLA****CP-HELLA****EC-HELLA**

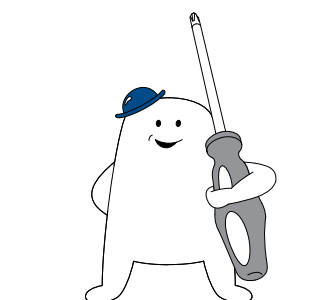


HELLA

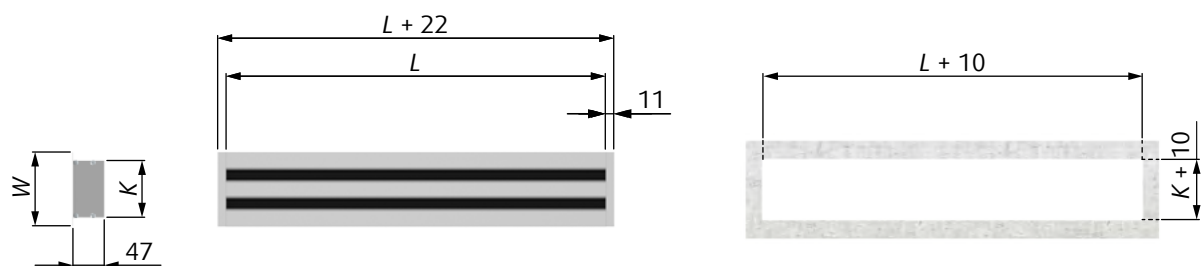

L	HELLA-1		HELLA-2		HELLA-3		HELLA-4	
	W	K	W	K	W	K	W	K
(mm)								
500	60	41	97	77	134	114	171	151
600								
700								
800								
900								
1000								
1100								
1200								
1300								
1400								
1500								


HELLA-CE

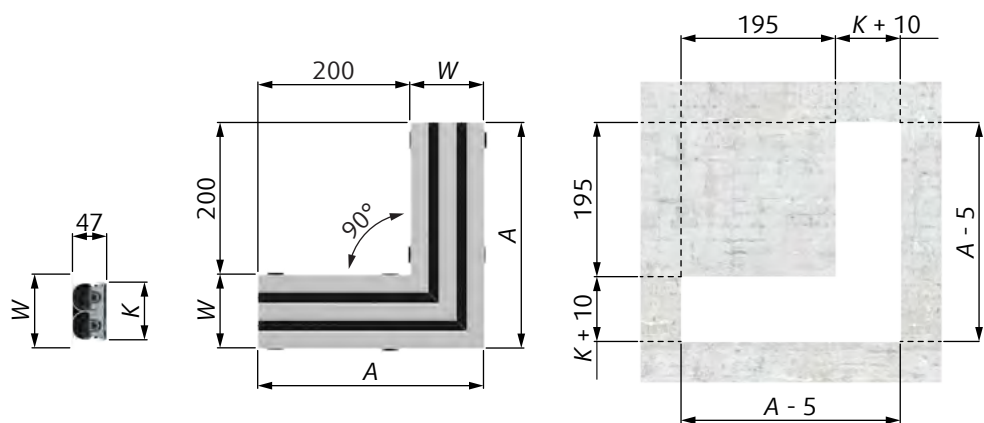

HELLA-CE-1			HELLA-CE-2			HELLA-CE-3			HELLA-CE-4		
A	W	K	A	W	K	A	W	K	A	W	K
(mm)											
260	60	41	297	97	77	334	134	114	371	171	151



PB-HELLA




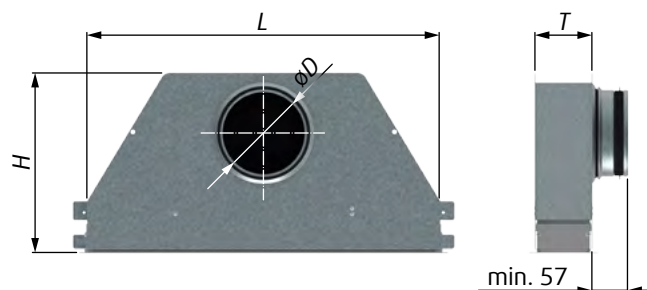


		PB-HELLA-1										
L	(mm)	500	600	700	800	900	1000	1100	1200	1300	1400	1500
H		214										
T		44										
$\varnothing D$		100					125					

		PB-HELLA-2										
L	(mm)	500	600	700	800	900	1000	1100	1200	1300	1400	1500
H		250										
T		81										
$\varnothing D$		125					160					

		PB-HELLA-3										
L	(mm)	500	600	700	800	900	1000	1100	1200	1300	1400	1500
H		282										
T		118										
$\varnothing D$		160					200					


		PB-HELLA-4										
L	(mm)	500	600	700	800	900	1000	1100	1200	1300	1400	1500
H		337										
T		155										
$\varnothing D$		200					250					

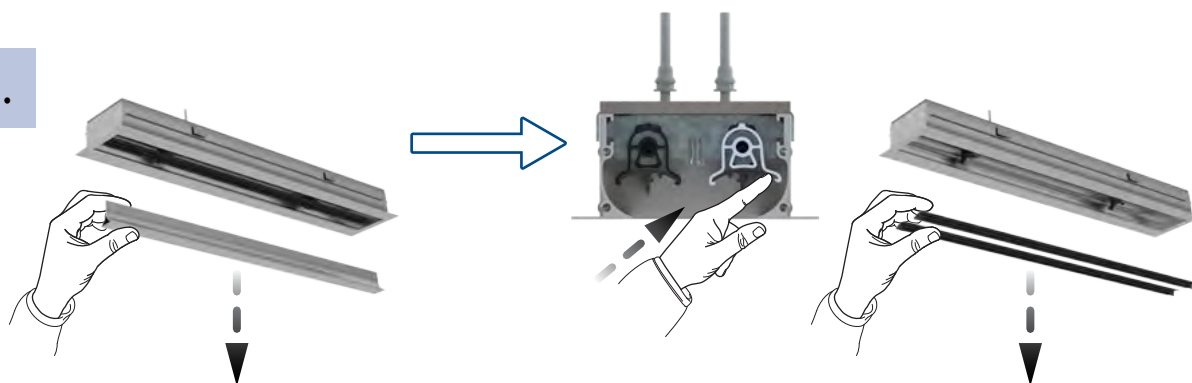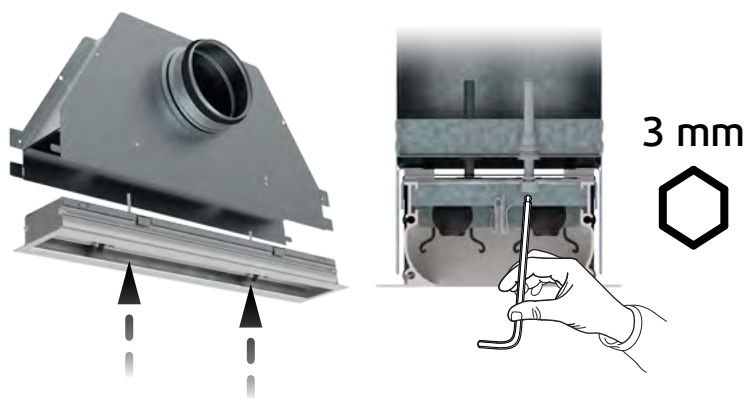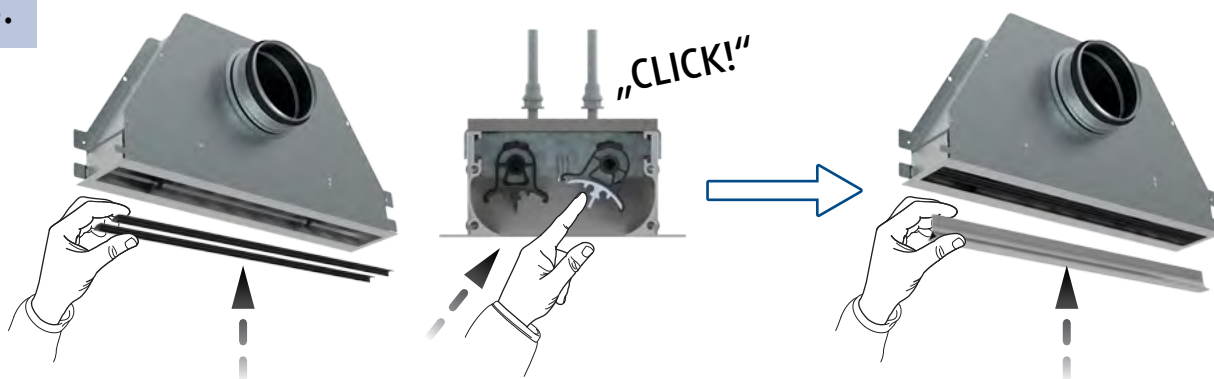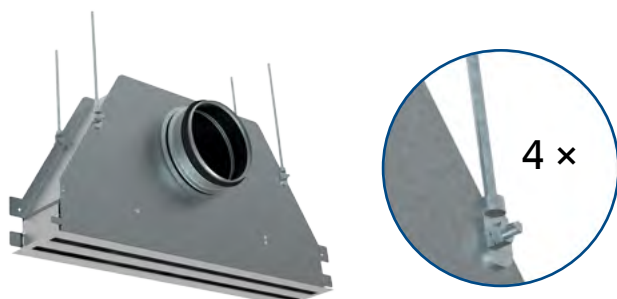**HELLA + PB-HELLA****1.****2.****3.****4.**




HELLA + MB-HELLA



1.








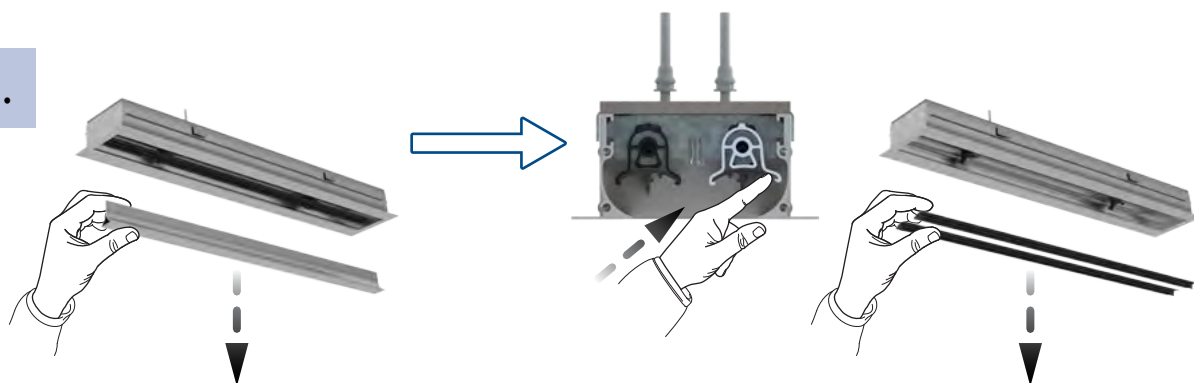


2.

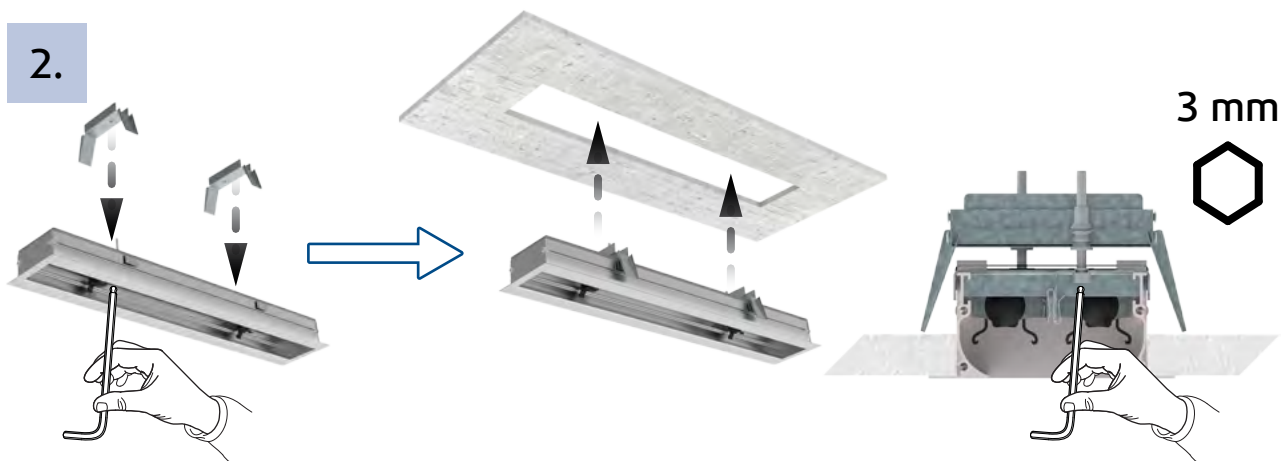


3.

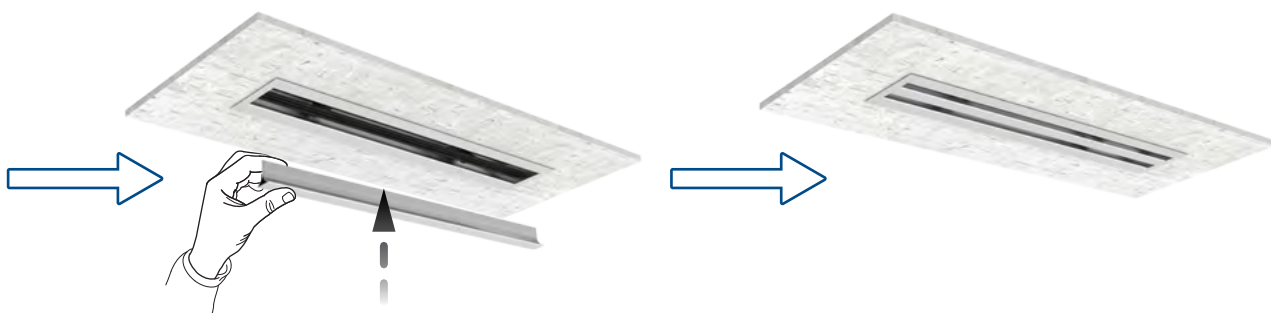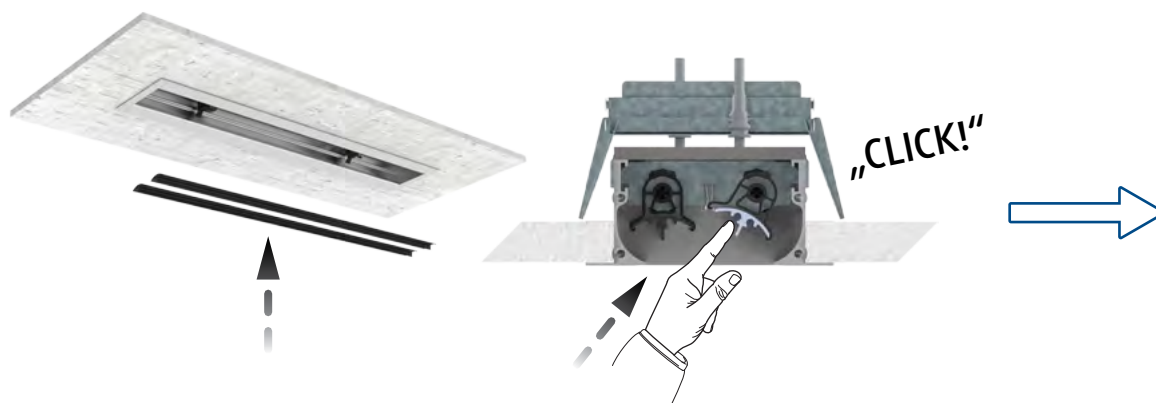

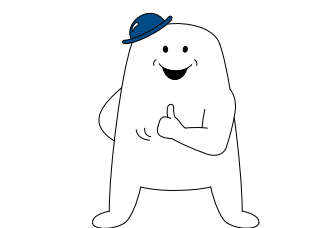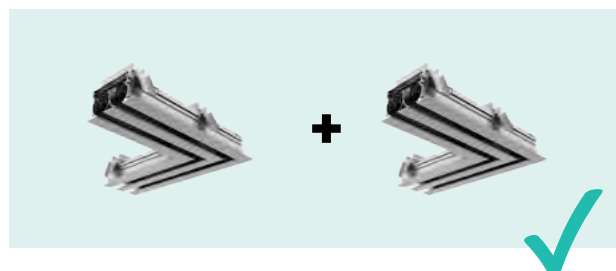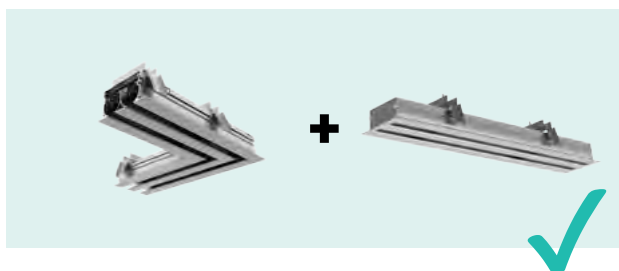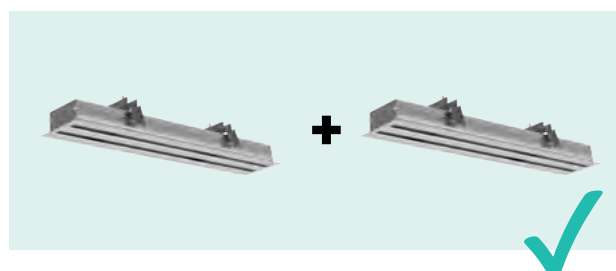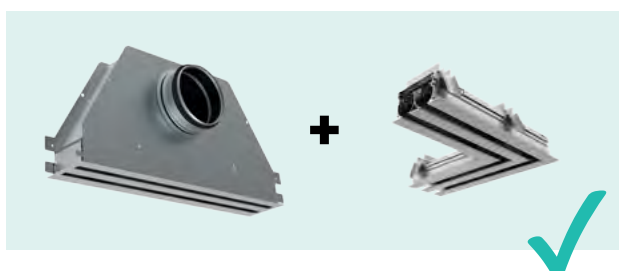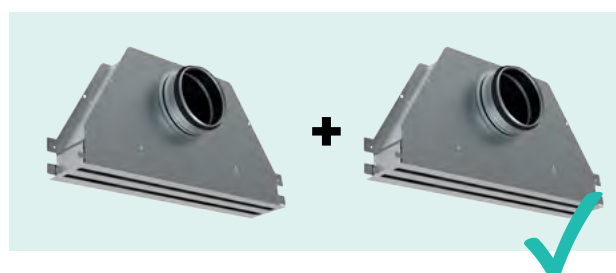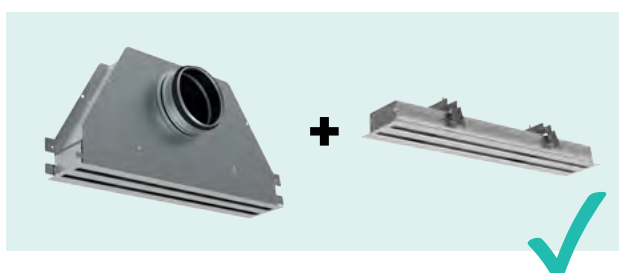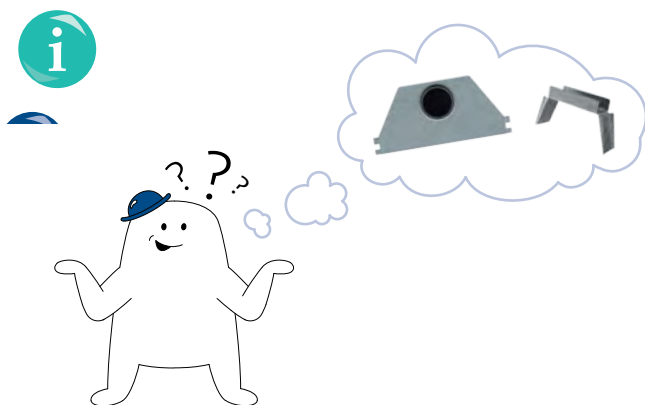


PB-HELLA (HELLA)

1.

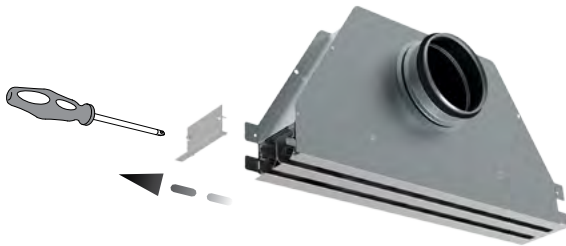


2.

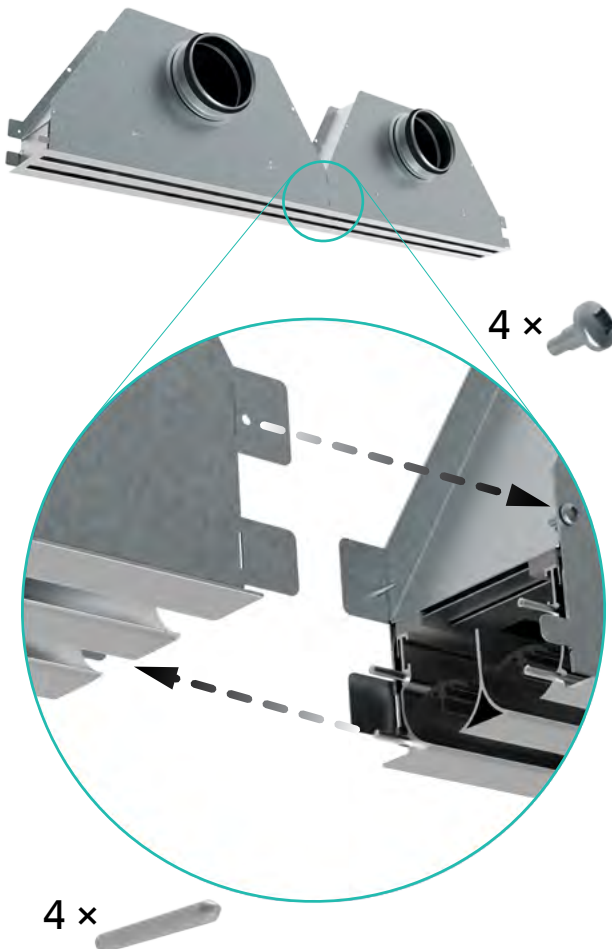


MB-HELLA (HELLA, HELLA-CE)

1.

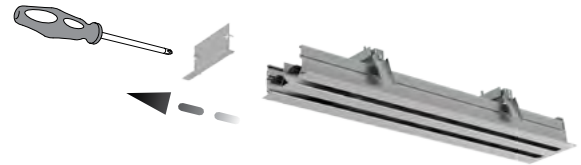


2.

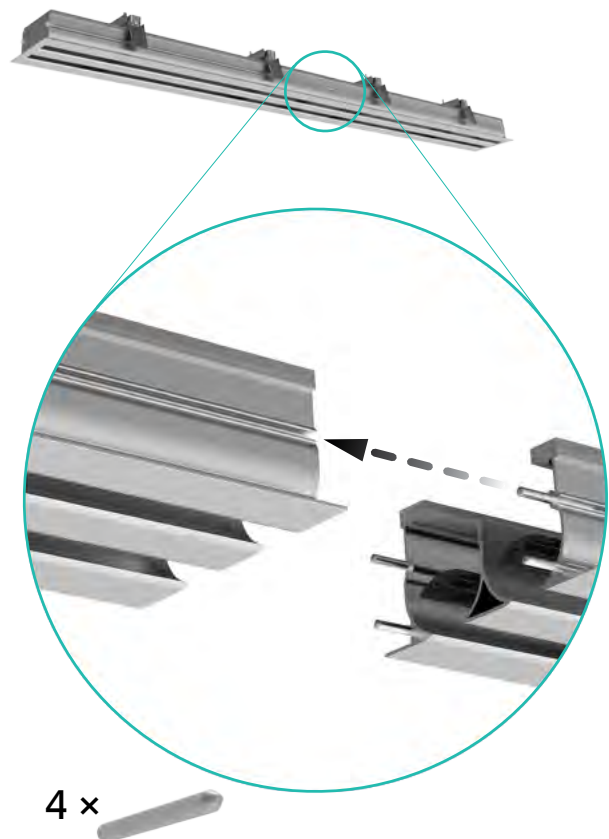




1.

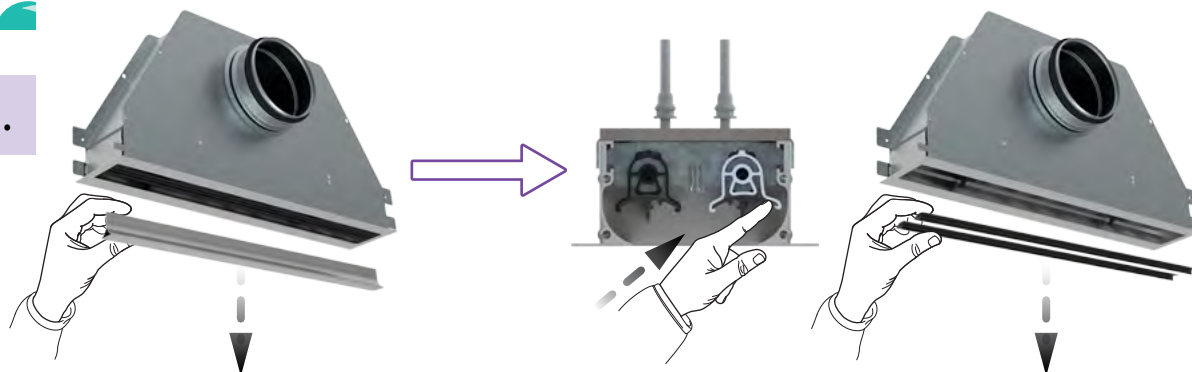

2.

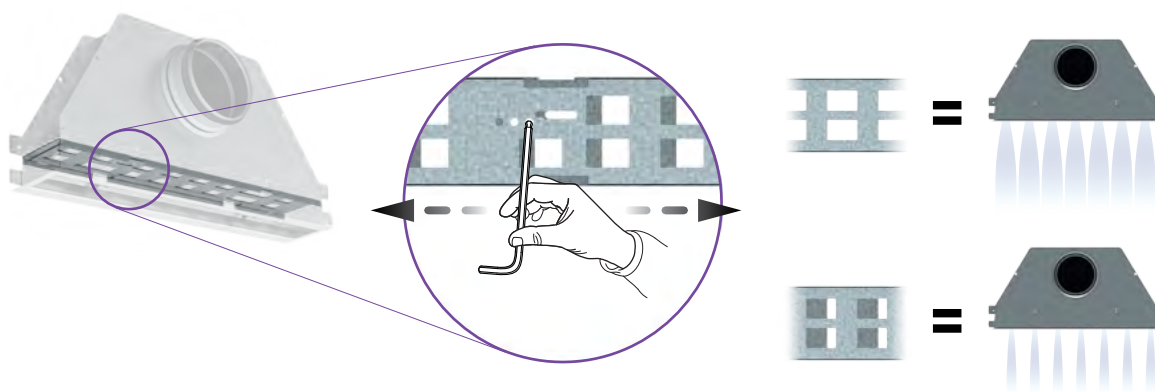

3.

