



| Original                                                                            | Recharge |
|-------------------------------------------------------------------------------------|----------|
|    | Mute     |
|    | Power    |
|    | PP       |
|    | I-II     |
|    | 1        |
|    | 2        |
|    | 3        |
|    | 4        |
|    | 5        |
|    | 6        |
|  | 7        |
|  | 8        |
|  | 9        |
|  | 0        |
|  | --       |
|  | P<P      |
|  | Menu     |

| Original                                                                              | Recharge       |
|---------------------------------------------------------------------------------------|----------------|
|    | Info           |
|    | Left           |
|    | Up             |
|    | P+             |
|    | Right          |
|    | Down           |
|    | P-             |
|    | Vol-           |
|    | Vol+           |
|    | Red/Sound      |
|  | Red/Sound      |
|  | Green/Picture  |
|  | Green/Picture  |
|  | Yellow/Feature |
|  | Blue/Install   |
|  | TV             |
|  | AV             |



