 



TOZO®
www.tozostore.com

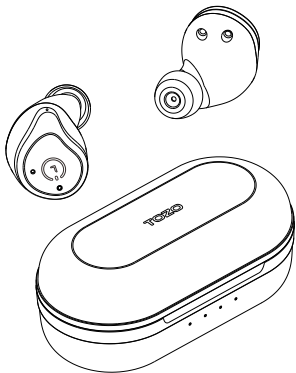

NC9

ACTIVE NOISE CANCELLATION
Quick Guide

 1 Bluetooth pairing and wearing



Bluetooth pairing

1. Take out 2 earbuds from the charging case, they will automatically turn on and connect with each other within 10 seconds.
2. The two earbuds flash red and blue light alternately. (Pairing Mode)
3. Search for pairing name [TOZO - NC9].



Select your fit

Wearing

1. Ensure the eartip facing downwards, then place the earbuds into your ears.
 2. Rotate the earbuds back to the auricleside to fit snugly.
- *Eartip facing upwards is the incorrect way to wear the earbuds.



 
Insert



Twist to lock



Wrong demo



EN | JP | DE | FR | IT | ES | NL | SE

X1: Press once **X2:** Press twice

X3: Press three times

Hold: Press and hold for 2 seconds

X2 



Previous song | 前の曲 |

Vorheriges lied | Chanson Irécédente |
Canzone precedente | Canción anterior |
Vorig nummer | Föregående låt

Hold 



Volume down | 音量を下げる |

Lautstärke runter | Baisser le volume |
Volume basso | Bajar volumen |
Volume verminderen | Sänk volymen

X1 



Active Noise Cancellation mode/Transparent mode/Active Noise Cancellation off mode

アクティブノイズキャンセルモード / 透明モード / アクティブノイズキャンセルオフモード |
Aktiver Rauschunterdrückungsmodus / transparenter Modus / aktive Rauschunterdrückungsmodus |
Mode d'annulation du bruit actif / mode transparent / mode annulation de bruit actif |
Modalità di cancellazione del rumore attivo / modalità trasparente / cancellazione del rumore attivo OFF Modalità |
Modo de cancelación de ruido activo / modo transparente / modo de cancelación de ruido activo de apagado |
Active ruis annuleringsmodus / transparante modus / active ruis annulering van de modus |
Aktivt brusavbokningsläge / transparent läge / aktivt brusavbokning utanför läget

X1 



Answer | 答え |

Antworten | Réponse |
Rispondere | Responder |
Antwoorden | Svar

Hold 



Reject | 拒絶 |

Ablehnen | Rejeter |
Rifiutare | Rechazar |
Afwijzen | Avvisa

2

Smart touch control

X1 



Play/Pause | 再生/一時停止 |
Spielen/Pause | Jouer/Pause |
Giocare a/Pausa | Tocar/Pausa |
Toneelstuk/Pauze | Spela/Paus

X2 



Next song | 次の曲 |

Nächstes lied | Chanson prochaine |
Canzone prossima | Canción siguiente |
Volgende nummer | Nästa låt

Hold 



Volume up | 音量を上げる |

Lauter | Monter le son |
Alza il volume | Sube el volumen |
Volume omhoog | Höj volymen

X3 



Voice assistant | 音声アシスタント |


Sprachassistenten | Assistant vocal |
Assistente vocale | Asistente de voz |
Sprakassistent | Röstassistent

Hold 



Hang up | 電話を切る |

Auflegen | Raccrocher |
Appendere | Colgar |
Ophangen | Lägg på

 

Power on

Power off

EN

Power on:

Pick up the earbuds from the charging case, it will power on automatically.

Power off:

Put back the charging case will power off and charge automatically.

DE

Ein:

Nehmen Sie die Ohrhörer aus dem Ladekoffer, sie schalten sich automatisch ein.

Ausschalten:

Wenn Sie das Ladeetui wieder einsetzen, wird es ausgeschaltet und automatisch aufgeladen.

IT

Accensione:

Raccogli gli auricolari dalla custodia di ricarica, si accenderanno automaticamente.

Spegni:

Riposizionare la custodia di ricarica si spegnerà e si caricherà automaticamente.

NL

Aanzetten:

Pak de oordopjes uit de oplaadcassette, deze wordt automatisch ingeschakeld.

Uitschakelen:

Plaats de oplaadcassette terug en wordt automatisch opgeladen.

4

Power on/off

JP

電源オン:

充電ケースからイヤフォンを取り出すと、自動的に電源が入ります。

電源を切る:

充電ケースを元に戻すと、電源がオフになり、自動的に充電されます。

FR

Allumer:

Prenez les écouteurs du boîtier de charge, ils s'allumeront automatiquement.

Éteindre:

Remettez le boîtier de charge s'éteindra et se rechargera automatiquement.

ES

Encendido:

Tome los auriculares del estuche de carga, se encenderá automáticamente.

Apagado:

Vuelva a colocar el estuche de carga, se apagará y se cargará automáticamente.

SE

 
Ström på:

Ta upp öronsnäckorna från laddningsfodralet, det slås på automatiskt.

Stäng av:

Sätt tillbaka laddningsfodralet stängs av och laddas automatiskt.

5 Reset

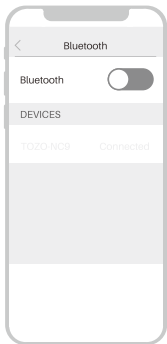

If you accidentally get only one earbud work, or fails to pair each other, please reset it:

1.Delete all [TOZO-NC9] Bluetooth records one the phone, and turn off Bluetooth. Take earbuds out from the charging case, press the touch panel for 5 seconds to turn the earbuds off.

2.Press both earbuds for 5 seconds till the blue light goes out, and then quickly double-tap the panel. The reset is complete once purple light is on.

Note: If your device displays [Connection failed]. Please delete all [TOZO-NC9] pairing history and pair again.



6

Charging



Place the case upright on the wireless charger.
(Wireless charging pad not included)

Or charge the case via USB-C connector.
(USB-C cable included)

* * * * < 25%

* * * * 50%

* * * * > 75%

* * * * 100%



Don't put wet earbuds into
the charging case,
fully dry off the earbuds
before charging.



Don't place the case face up
or face down.

Thank you for purchasing the TOZO authentic product.
For more latest products, parts and accessories,
please visit: www.tozostore.com

For any assistance please contact Email: info@tozostore.com

