


HOMPANY

Quick Start Guide


SmartVac 11

Cordless Vacuum
Cleaner


Hompany Support Team:
EN: support@hompany.top
EU: service@hompany.top

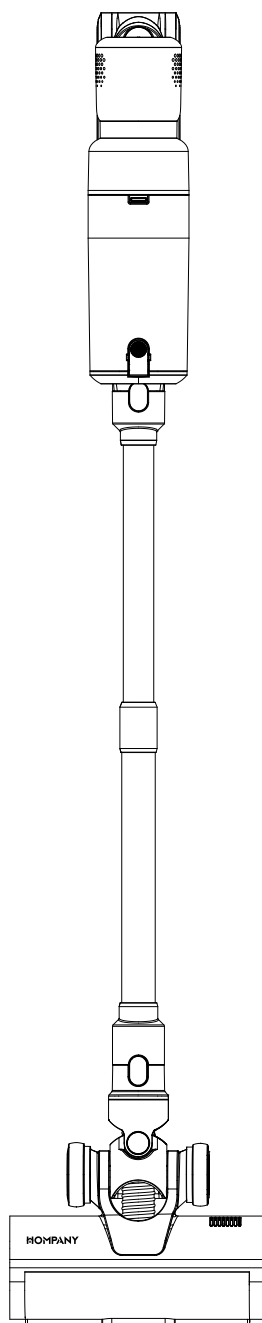


Installing Desired Cleaning Accessory

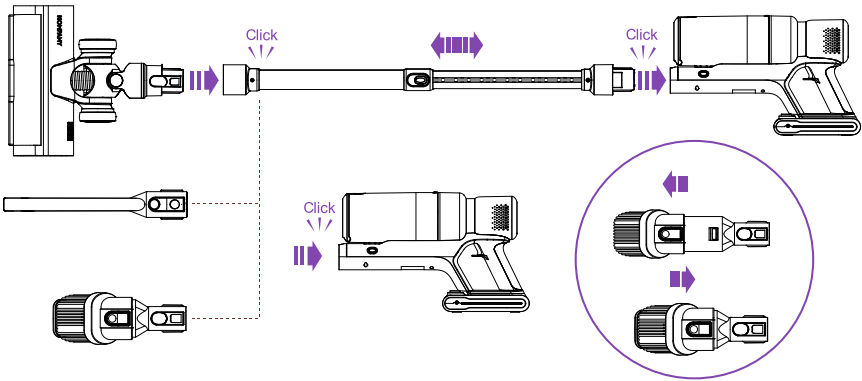


Power mode and speed switch

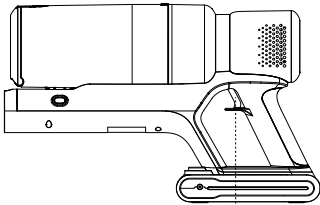

ON/OFF button

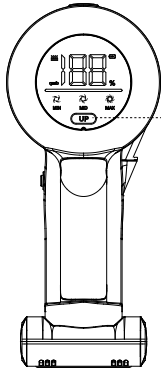

Switch Button

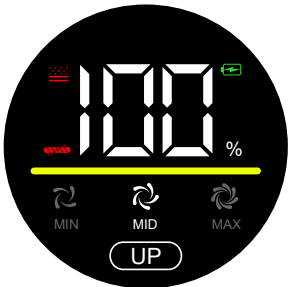


Boot into "MID" Mode


Touch the "UP" Key Set to "MAX" Mode

Touch the "UP" Key Again Switch to "MIN" Mode


Recharging on the storage wall-mount

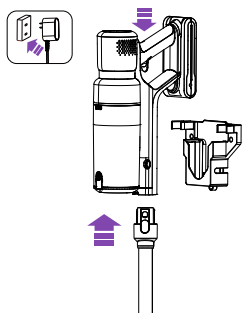

Charging separately

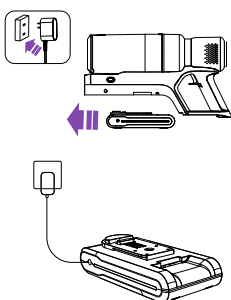


Power display

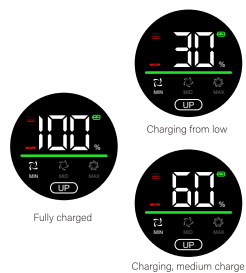


Empty the dust bin


1

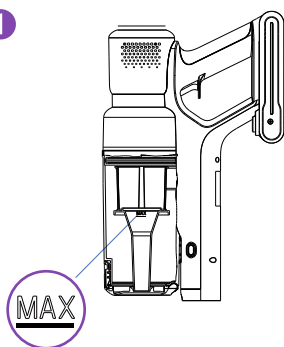


2

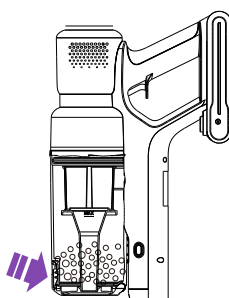






3

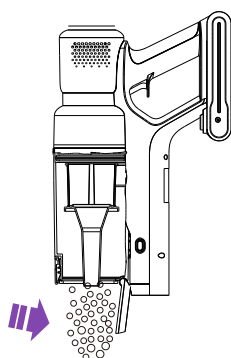

4

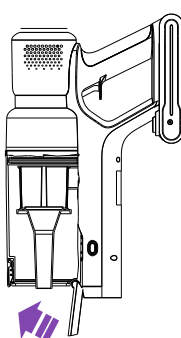

Clean the Electric Floor Brush

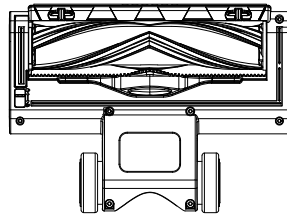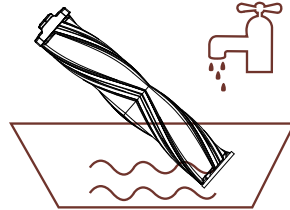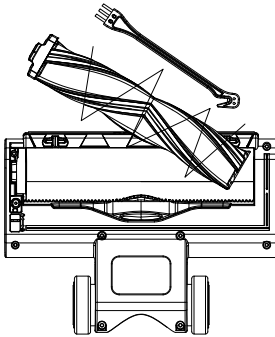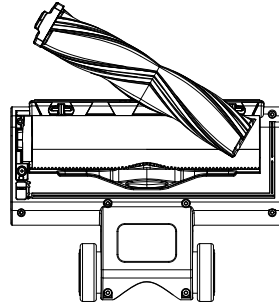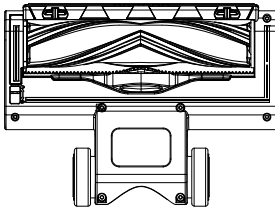





Dust Cup Cleaning





⚠ IMPORTANT!

Wash filters with cold water at least every month.


Ensure the filters are completely dry before refitting.

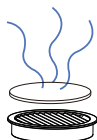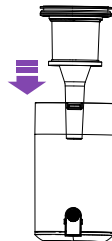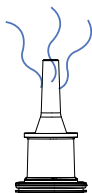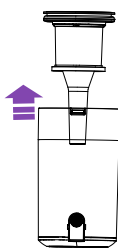


Remove the Dust Cup

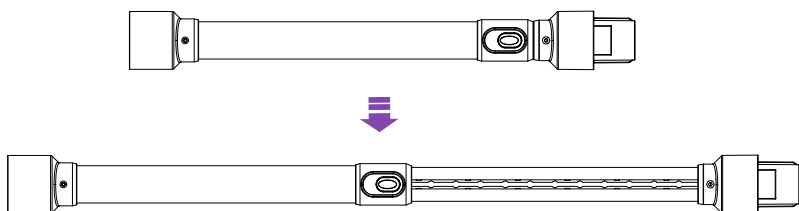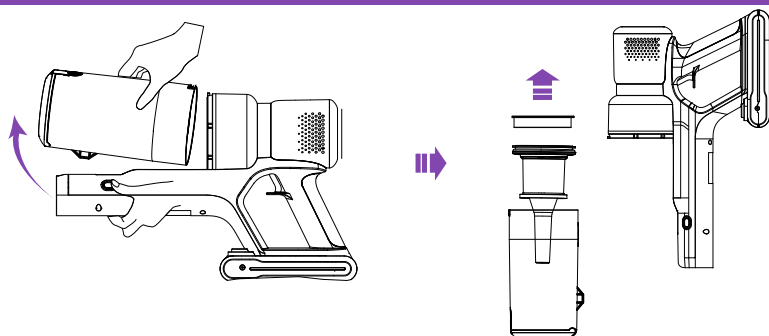


Prohibited operations

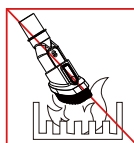


Do not use
SmartVac 11
near open flames.

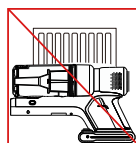


Do not store
SmartVac 11
near heat sources.

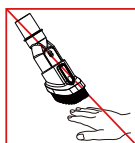

Do not put your hands
near the brush bar
when SmartVac 11
is running.

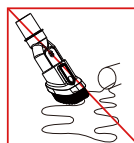

Not applicable for
picking up liquids.

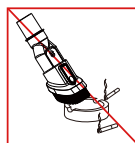

Not applicable for
picking up burning
objects.



Email to HOMPANY Official Customer Service:

EN: support@hompanty.top

EU: service@hompanty.top

We are always here to help you for any questions.



EN



EU