



1. To Prepare for Installation


- (1) Open the package. Check and confirm all parts listed/pictured below are included in the package. If not, please contact AISecure for replacements.  
Hole Drilling Template (1), Outdoor Pad (1), Steel Back-Plate (1), Screws (14), Indoor Pad (1), Strike (1), Keys (4)

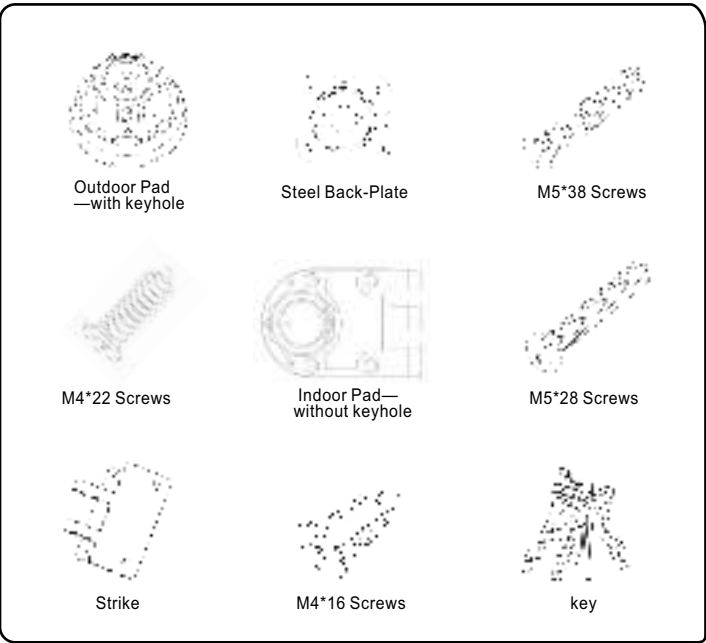

- (2) Notice: Only a Philips Head SCREWDRIVER is required for the installation if the door has a pre-drilled lock/door handle hole. The tools listed below may also be needed if it is an entirely new door without a pre-drilled hole:  
TEMPLATE—included in the package.  
TOOLS—not included in the package that may be required: marker, hammer, center punch, hammerer, electric drill, pliers or hacksaw, masking tape file.  
(3) AISecure lock fits door thickness: 38mm - 50.8mm (picture1).  
(4) Check and confirm the backset of the lock fits your present lock (picture2).

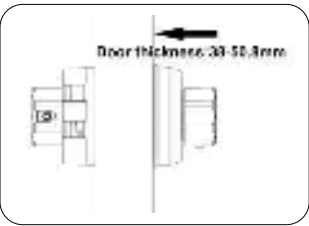


picture 1

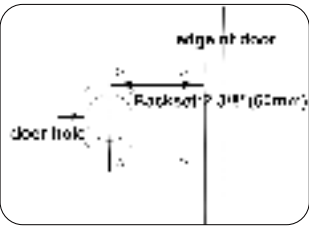


picture 2

2. Installation of Outdoor Pad—with keyhole

- (1) Find the Outdoor Pad—with the keyhole (picture3).  
(2) Insert the Outdoor Pad into the door from the exterior. Position the arrow mark and the keyhole, so perpendicular to the floor. Hold the cylinder in place (picture4).

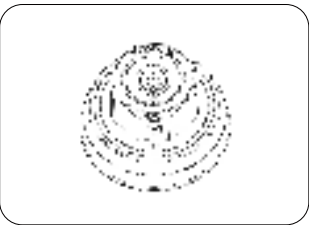


picture 3

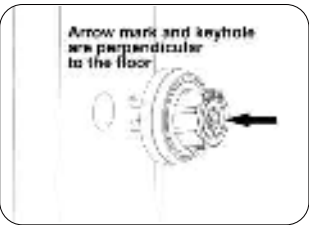

picture 4


3. Installation of the Indoor Pad—without keyhole

- (1) Steel back-plate installation: Position the steel back-plate on the inside of the door (picture5).

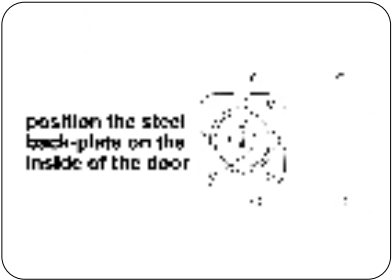


picture 5

- (2) Insert the connecting M5\*28 screws into the holes above and below the large center hole of the back-plate and tighten them. (picture6) Next, insert four screws into the corner of the back-plate and thread them into the holes in the back of the outdoor pad. Then using a Phillips screwdriver, tighten all four M4\*22 screws (picture7).

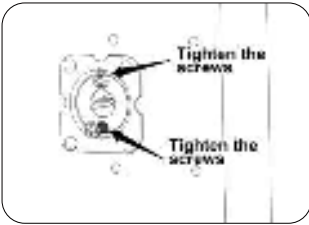


picture 6

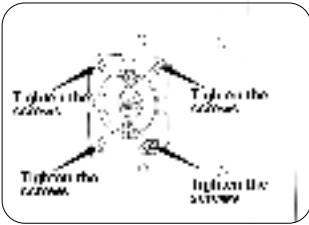


picture 7


- (3) Make sure the deadbolt is in the unlocked position (picture8). Next, place the indoor pad over the back-plate on the inside of the door. Make sure the tailpiece of the outdoor pad goes into the hole on the back of indoor pad (picture9). Then holding the lock in place, operate the lock from both the inside and outside to ensure smooth operation (picture10).

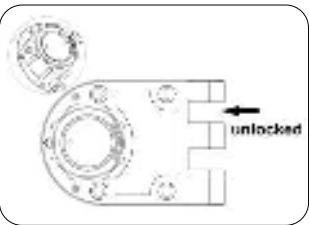

picture 8

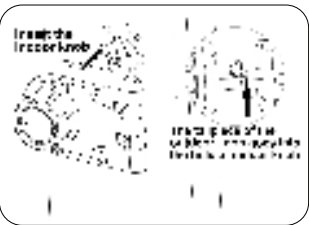


picture 9

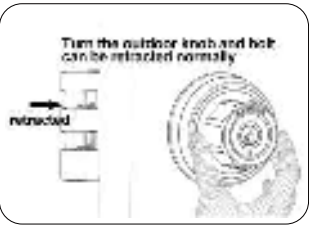


picture 10


Notice: If the bolt doesn't work normally, please follow the steps pictured below to correct it (picture11). Remove the indoor pad (picture12) and rotate the tailpiece of the outdoor pad horizontally 180 degrees (picture13). Then install the indoor pad again and test. If this does not help, please contact AISecure for replacements (picture14).

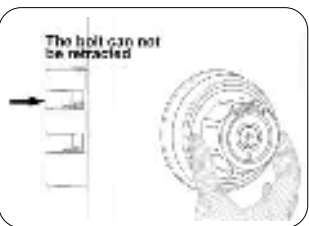


picture 11

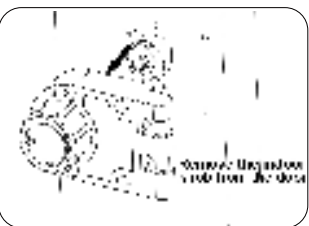

picture 12

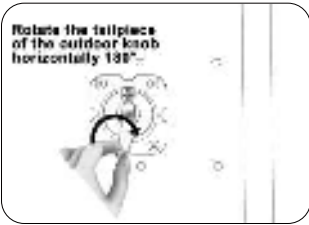


picture 13

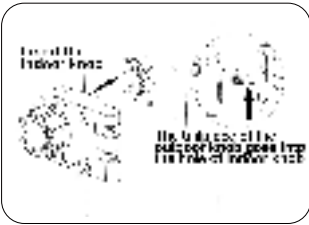

picture 14


- (4) Fix the indoor pad with M5\*38 mounting screws and tighten the screw with a Phillips head screwdriver (picture15).

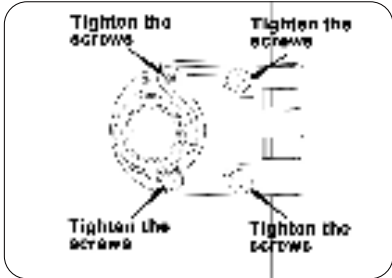

picture 15

4. Installation of the Strike


- (1) Ensure the deadbolt is in the unlocked position (picture16) and set the lock strike in place, then set the lock in the locked position (picture17-18).  
(2) Put the lock strike on the door to locate the position, and ensure there is no interference between the bolt and the strike when operating the lock. Open the lock and take away, then dig out the groove with marker that can fit the strike (picture19-20).  
(3) Place the strike over the holes on the groove. Operate the lock again to ensure the bolt and strike are aligned. Attach the strike to the frame using the supplied M4\*16 screws and a Phillips head screwdriver (picture21).

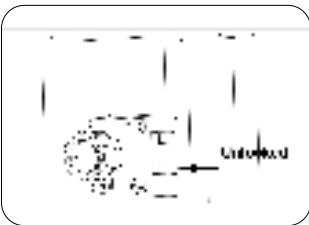


picture 16




picture 17

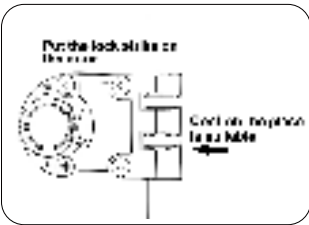


picture 18

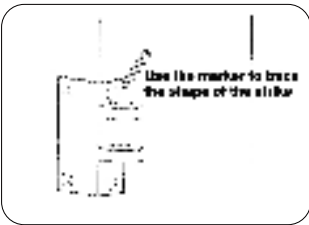

picture 19

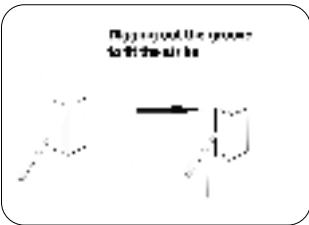

picture 20

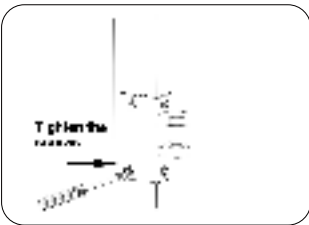

picture 21

About the 2 Unique Buttons:

**DEAD - BUTTON:** (Located on the inside pad) Works as both a child safety switch, safe-guarding against a small child accidentally locking their parents outside. Also, a one step deadbolt disable switch. Pushing the inside pad switch inward, toward the bolt mechanism disables both the inside and outside pad in either the locked or unlocked bolt position, and also disabling the key function.

**ANTI MISLOCK BUTTON:** (Located on the outside pad) Pushing the the outside pad switch inward, toward the the bolt mechanism, disables the outside pad, preventing you from locking yourself outside the door by an accidental twist.

Replacement Parts List & Troubleshooting For replacement parts & troubleshooting, write to: support@easilok.com or call customer service at TEL: 8:00a.m-8:00p.m, EST, Monday-Friday. After sales service, please scan:



facebook



website: www.aisure.com



website: www.easilok.com

Limited Lifetime Warranty

The Manufacturer extends a Limited Lifetime Mechanical and finish Warranty to the original "User" of this Product against defects in materials and workmanship as long as the User occupies the residential premises upon which the Product was originally installed. Upon return of a defective Product to the Manufacturer, the Manufacturer shall either replace repair or refund the purchase price in exchange for the Product. This warranty does not cover abused or misused Products or those Products used in commercial applications. No other warranties, express or implied are made with respect to the Product including but not limited to any implied warranty of merchantability or fitness for a particular purpose. The Manufacturer DOES NOT authorize any person to create for it any obligation or liability

in connection with the Product, The Manufacturer maximum liability hereunder limited to the purchase price of the Product, and in no event shall the company be liable for any consequential, indirect, incidental or special damages of any nature arising from the sale or use of this Product, whether in contract, tort, strict liability or otherwise. (For warranty service, please call 8: 00 a.m.-8:00 p.m EST, Monday through Friday).

Note: Should the Product be considered a consumer product it may be covered by the Magunsson Moss Federal Warranty Act, please be advised that:

- (1) Some states do not allow limitations or incidental consequential damages on how long an implied warranty (1) Some states do not allow limitations or incidental consequential damages on how long an implied warranty lasts so that the above limitations may not fully apply;  
(2) This warranty gives specific legal rights and User may have other rights which may vary from state to state.

Manufacturer DOES NOT authorize any person to create for it any obligation or liability in connection with the Product, The Manufacturer maximum liability hereunder limited.