

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully. This product is only designed to function properly on specific vehicle applications. Please verify that the vehicle requirements match the product specifications and application notes for this part.

Specifications:

FCC ID: KR55WK49308

Replaces P/N: 35118-TA0-A04, 35118TA0A04, 35118-SZA-A51, 35118SZAA51, 35118-SZA-A50, 35118SZAA50

Frequency: 313.8 MHz

Battery: CR1616

Reusable: Yes

On Board Programming: No

4 Buttons: Lock, Unlock, Trunk release, Panic alarm

Condition: 100% Brand New

Material: Plastic + Metal

Compatible with:

2008-2012 Honda Accord Sedan

(Sedan only, Will not work for Coupes)

2009-2015 Honda Pilot

(Trunk will not work for Touring models)

Step by Step How to Configure Instructions:

Entering the programming mode cancels all learned keyless remotes, so none of the previously programmed remotes will work.

You must reprogram all of the keyless remotes once you are in the programming mode. You must complete each step within 5 seconds of the previous step to keep the system from exiting the programming mode.

Note: a maximum of 3 remote transmitters can be programmed.

Make sure all the doors are UNLOCKED before starting this programming procedure.

1. Turn ignition switch to ON (II)
2. Press the LOCK or UNLOCK button on one of the remotes. (An unprogrammed remote can be used for this step.)
3. Turn ignition switch to ACCESSORY (I) or LOCK (O)
4. Turn ignition switch to ON (II)
5. Press the LOCK or UNLOCK button on one of the remotes.
6. Turn ignition switch to ACCESSORY (I) or LOCK (O)
7. Turn ignition switch to ON (II)
8. Press the LOCK or UNLOCK button on one of the remotes.
9. Turn ignition switch to ACCESSORY (I) or LOCK (O)
10. Turn ignition switch to ON (II)
11. Press the LOCK or UNLOCK button the same remote. Make sure the power door locks cycle to confirm you are in programming mode.
12. Press the LOCK or UNLOCK button on each remote you want to program. Make sure door locks cycle after you push each remote button to confirm system has accepted the remote.
13. Turn the ignition switch to LOCK (O) to exit programming mode.
14. Test remote(s)

Still need help?

Please Contact our Technical Support team for assistance.

Vurkcy-Service@outlook.com

Disclaimer:

Even though every attempt is made to ensure this information is complete and accurate, it is impossible to account for all possible circumstances or situations. Please consult with a qualified auto technician before attempting to perform any work you are not qualified to do. Automobiles can be hazardous to work on; be sure to take all necessary safety precautions. Failure to do so may result in property damage or personal injury. Certain motor vehicle standards and performance requirements may apply to your motor vehicle (such as Federal Motor Vehicle Safety Standards by the National Highway Traffic Safety Administration). Be sure that your work is performed in accordance with such standards and that you do not disable any motor vehicle safety feature.