



Original	Replacement
	Power
	Smart
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Info
	0
	Guide
	Netflix
	YouTube
	Google Play

Original	Replacement
	Shift + Blue / Prime
	Shift + Menu / Menu /
	Up
	Menu / Home
	Left
	OK
	Right
	Back / Return
	Down
	Exit / Cancel / Clear
	Vol+
	Mute / Dimmer
	CH+ / Page+
	Vol-
	AV / Input / RDS
	CH- / Page-
	Red / Netflix / Search





Original	Replacement	Original	Replacement
	Green Green / APP / Repeat		
	Yellow Yellow / YouTube / Repeat		
	Blue Blue / Prime Video / Random		
	<< << / Tune-		
	Play Play / Slow		
	>> >> / Tune+		
	Rec Rec / Rec Mode		
	Pause Pause / Step / Freeze		
	Stop Stop / Hold		
	Text Text / Goto		
	Subt Subtitle / EQ		
	Audio Audio / Lang I/II		

