

## Installation Instructions

### Model VNT-PS

Power Supply for VNT

#### INTRODUCTION

The Model VNT-PS is used to isolate the ground of the VNT (Virtual Network Tunnel) from the FireFinder-XLS system ground.


#### INSTALLATION



##### Mounting


**Remove all system power before installation, first battery then AC. (To power up, connect the AC first, then the battery.)**

The VNT-PS mounts with an attached bracket onto the VNT-MP using the hex nuts supplied with the VNT-MP.

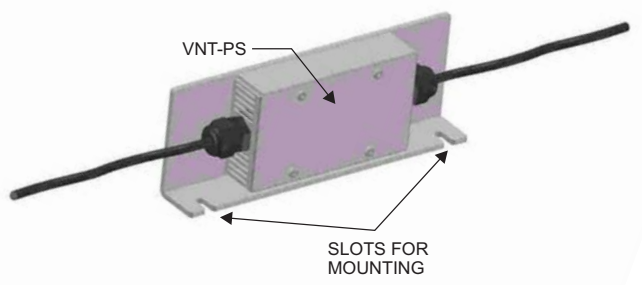

*Figure 1*  
*VNT-PS with Attached Bracket*

The VNT-PS installs on the left edge of the VNT-MP mounting plate. Loosen the two nuts on the left side of the VNT that are fastened to the VNT-MP, then slide the slots of the VNT-PS bracket onto the studs. Tighten the nuts to securely fasten the VNT-PS bracket in place. Refer to Figure 2.

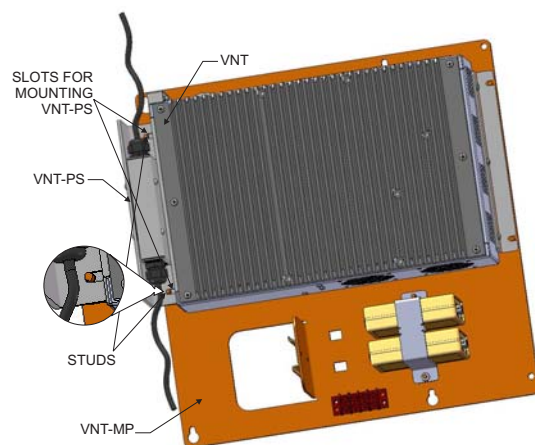

*Figure 2*  
*Mounting the VNT-PS to the VNT-MP*

## WIRING

Figure 3 is an example of typical wiring for the VNT-PS.

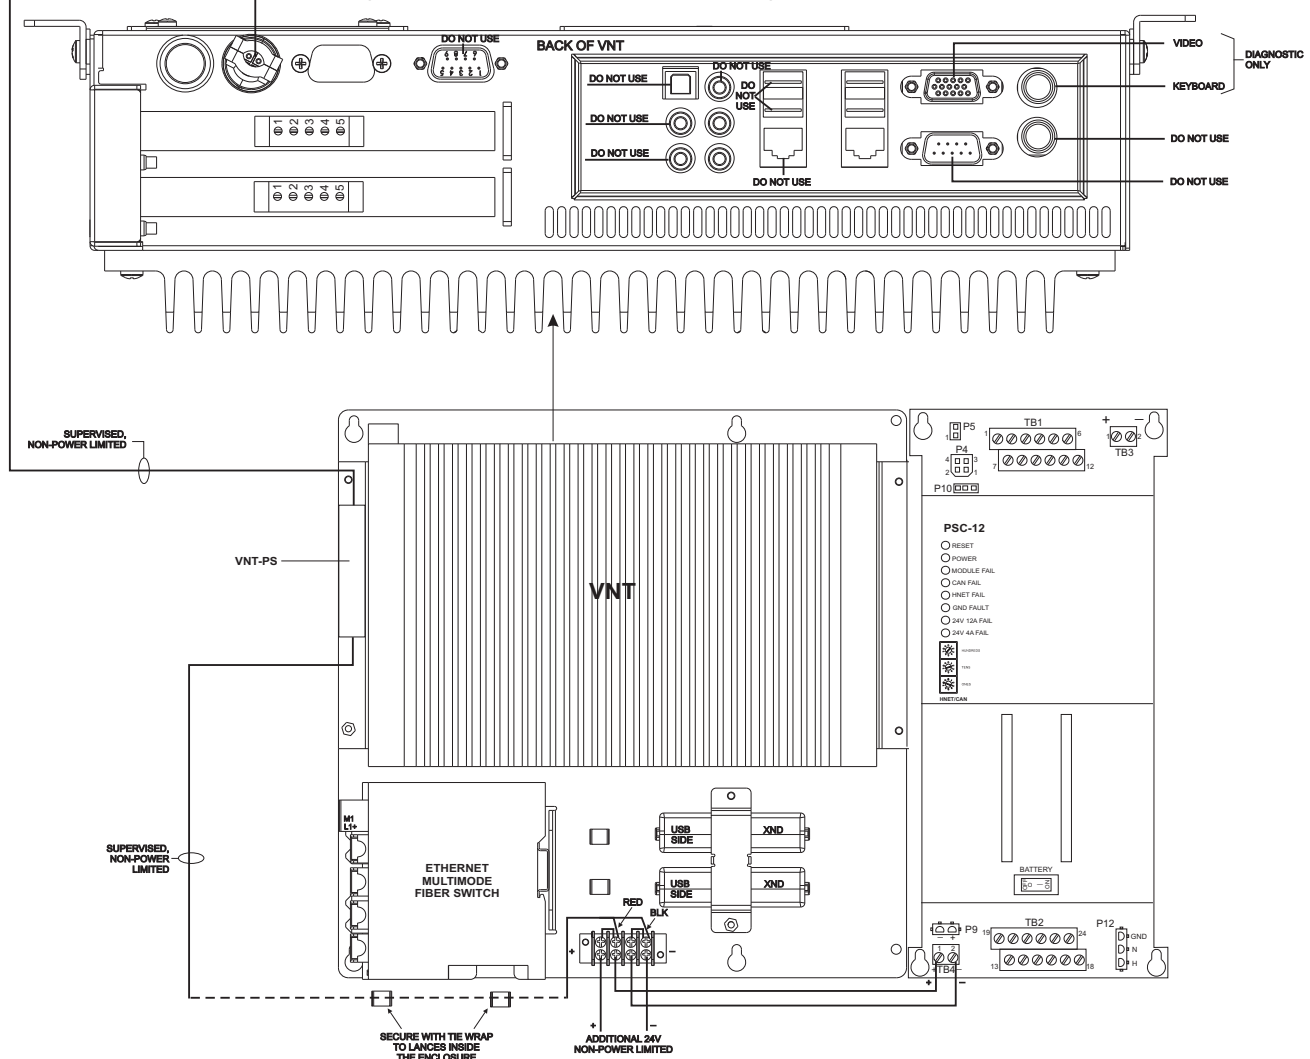


Figure 3  
Typical VNT-PS Wiring to VNT

## ELECTRICAL RATINGS

**NOTE**

Special Application: The VNT-PS may only be used to connect PSC-12 (P/N 500-033340) and VNT (P/N 500-650490).

Output Voltage: 24VDC

Output Current: 1.7A max

Input Voltage: Regulated 24VDC

No Load Current: 50mA

Input Current: 2.0A @ 24VDC max.