



BEST CHOICE
PRODUCTS



INSTRUCTION MANUAL

Kids Drum Set



**BEST CHOICE
PRODUCTS**

As shoppers, we're always trying to find the perfect balance between quality & value. At BCP, we believe we've achieved that. Our diverse catalog of everyday essentials is tailored especially to our customers & guaranteed to hit that sweet spot of high quality & low price.

— Always. —

! NOTICE

Please retain these instructions for future reference.

- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws, and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- This product requires adult assembly; supervision is recommended when in use.
- This product contains small parts. May result in choking hazard for children under 3 years.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

! WARNING

ADULT ASSEMBLY REQUIRED

! WARNING

CHOKING HAZARD - Small parts.
Not for children under 3 years old.



3X 1.5V AG10
BATTERIES
(15, PROVIDED)



3 YEARS
OLD AND UP



1 PERSON
ASSEMBLY




UP TO 45 MIN.
ASSEMBLY

PARTS

A BASS DRUM LEGS  4 PCS	B SUCTION CUP  1 PC	C BASS PEDAL  1 PC	D PEDAL SPRING  1 PC
E BEATER  1 PC	F TOMS MOUNT  1 PC	G MOUNT STAND  2 PCS	H CYMBAL STAND  1 SET
I CYMBAL CAP  3 PCS	J CYMBAL  3 PCS	K STOP LOCK  4 PCS	L SNARE DRUM MOUNT  2 PCS

PARTS

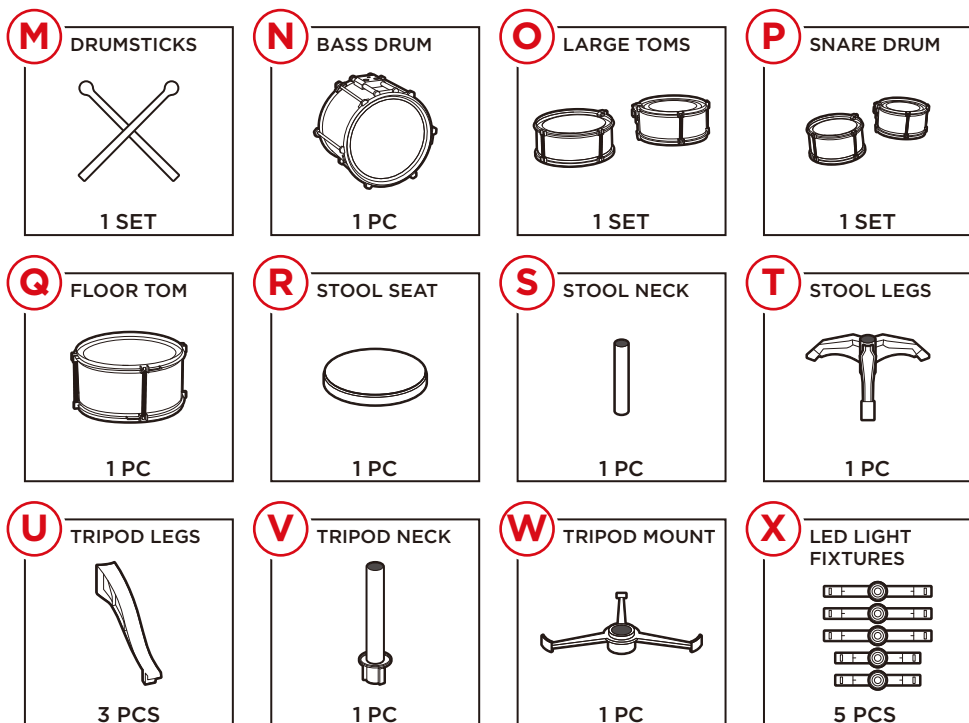

BEFORE ASSEMBLY


1

Remove the white pull tab from the five part X LED lights.

Attach the two small fixtures to the bottom of the part P snare drums.

Attach two medium fixtures to the two part O Large Toms and one to the part Q Floor Tom.


NOTE: To attach lights, place the fixture on the outer shell of the drum with the bulb facing inward. Press the middle section inward until the arms catch the inner walls of the drum.

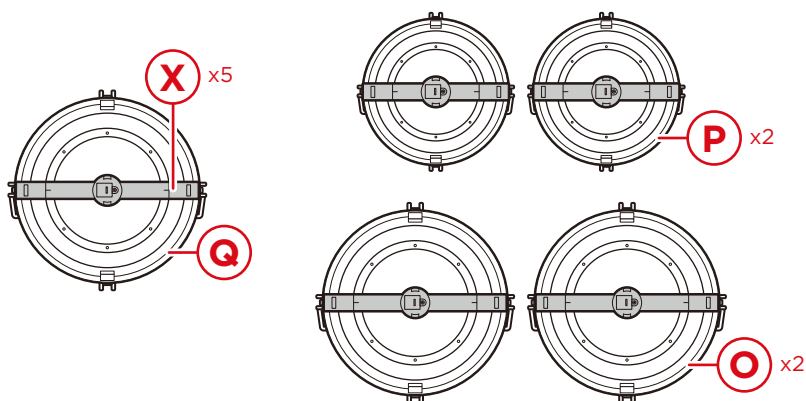

DRUM KIT ASSEMBLY (CLASSIC)


1

Insert four part A drum legs into the bottom of the part N bass drum, push to secure.

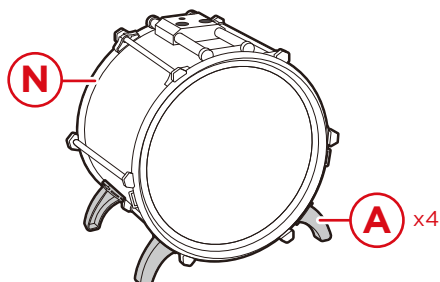


2

Insert the part B suction cup into designated slot on the back of the part N bass drum.

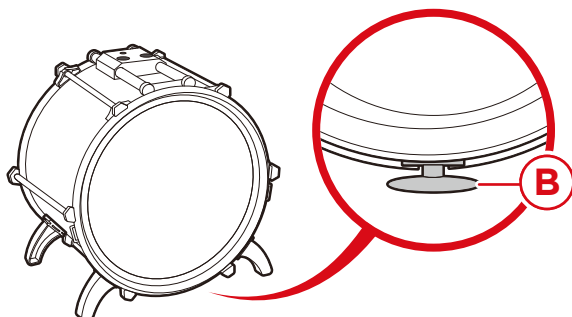

3


Affix the part D pedal spring into the upper and lower fasteners of the part C bass pedal. Attach the part E beater to the part C bass pedal.

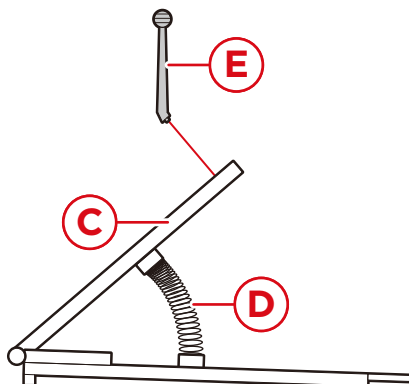

DRUM KIT ASSEMBLY (CLASSIC)


4

Insert the foot pedal assembly into the designated slot on the back of the part N bass drum.

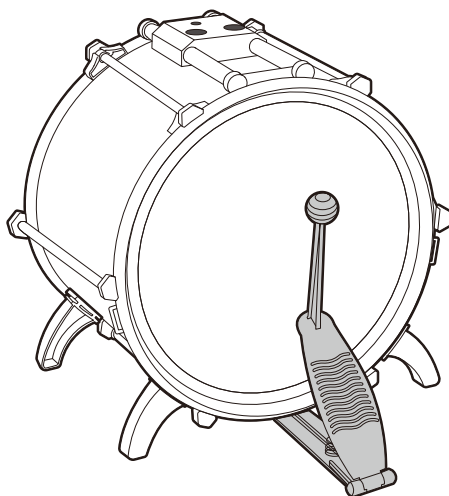

5

Locate the part F large toms mount and attach two part G mount stands. Insert the two mount stands into the holes on the top of the part N bass drum.

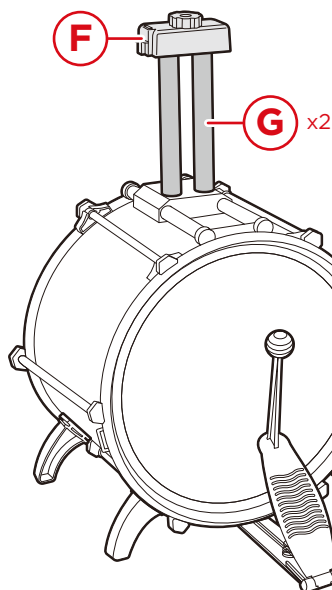


DRUM KIT ASSEMBLY (CLASSIC)

6

Thread the part H cymbal stand through the part J cymbal and secure with the part I cymbal cap. Slide the part K stop lock onto the cymbal stand, then secure the cymbal assembly to the part F toms mount.

Repeat to complete two more cymbal assemblies and set aside.

Insert the bottom of the tallest cymbal stand into the hole on the top of the bass drum.

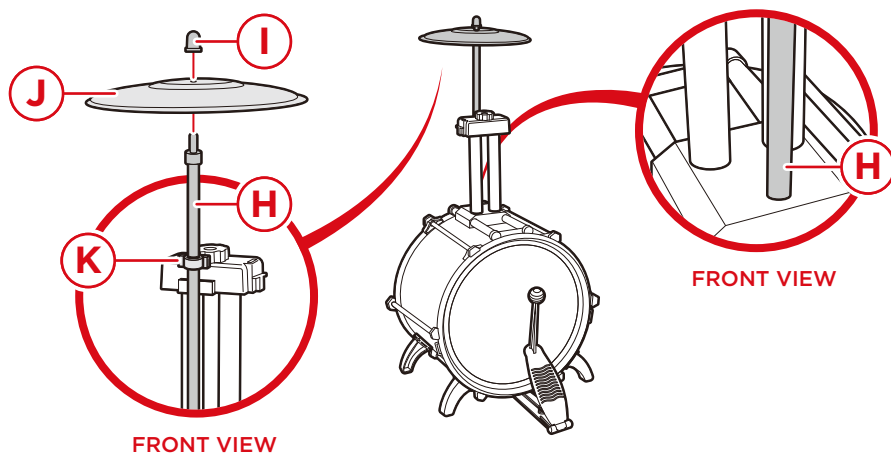


7

Attach the part L snare drum mount to the designated slots on the sides of the bass drum.

Attach the two part P snare drums to the part L mounts and fasten with the attached buckle.


Insert the bottom of the medium cymbal stand into the hole on the side of one of the part P snare drums, then secure the part K stop lock to the drum's bottom rim.

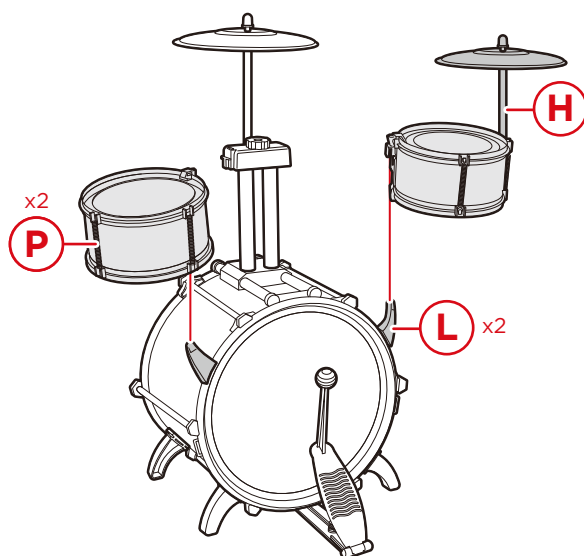

DRUM KIT ASSEMBLY (CLASSIC)

8


Place the two part O toms on the part F mount and fasten with the attached buckles.

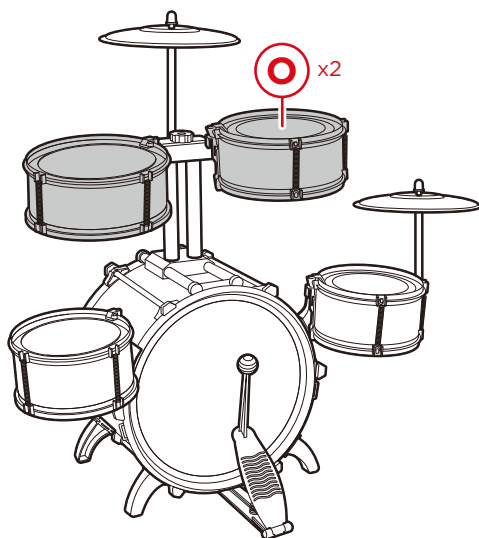

9

Insert three part U tripod legs into the part V tripod neck, then insert the top of the neck into the part W tripod mount.


Place the part Q floor toms onto the assembled tripod. Insert the bottom of the short cymbal stand into the hole on the side of one of the part Q floor toms, then secure the part K stop lock to the drum's bottom rim.

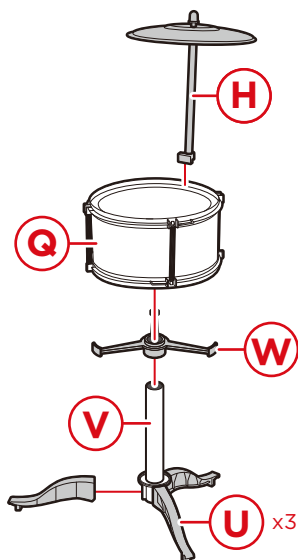

STOOL ASSEMBLY

1

Insert the part S stool neck into the part R stool seat, then insert the bottom of the stool neck into the part T stool legs.

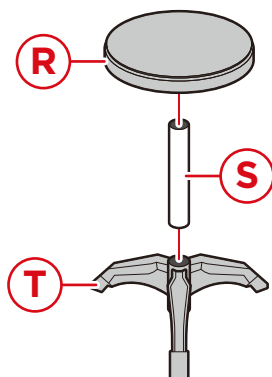


DRUM KIT ASSEMBLY (UPRIGHT)

1

Insert the part S stool neck into the part W tripod mount, then insert the stool neck into the part T stool legs.


Place the part N bass drum onto the tripod and secure.

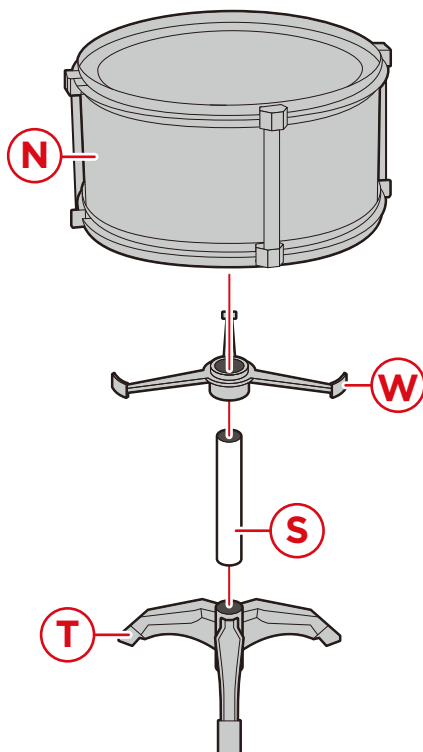

DRUM KIT ASSEMBLY (UPRIGHT)


2

Thread the part H cymbal stand through the part J cymbal and secure with the part I cymbal cap. Slide the part K stop lock onto the cymbal stand, then attach the cymbal assembly by affixing the stop lock to the edge of the bass drum.

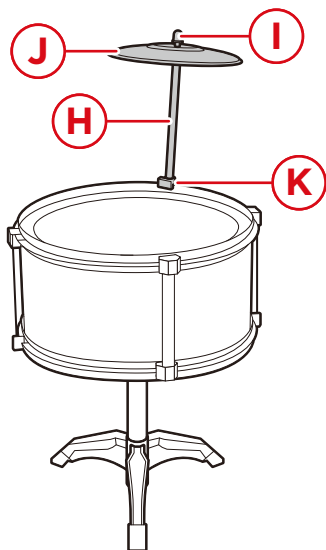

3

Attach the part P snare drums to the designated slots on the side of the bass drum, then attach the part O toms drums to the snares.

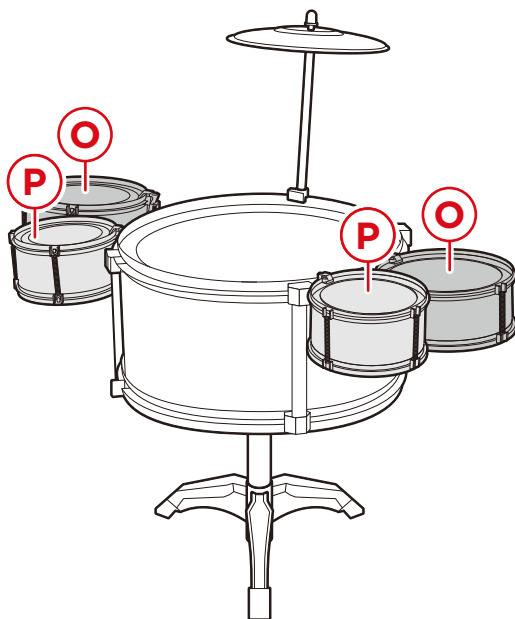

WARNINGS REGARDING BATTERIES

- Do not mix alkaline, standard (carbon zinc) and rechargeable (nickel hydride) batteries.
- Do not mix old and new batteries.
- Non-rechargeable batteries should not be charged.
- Rechargeable batteries should be charged under adult supervision only.
- Exhausted batteries should be removed.
- The supply terminals should not be short-circuited.
- Do not put batteries next to or in a heat source (fire, electronic heating device, etc.).
- Do not hit batteries against hard objects.
- Do not submerge batteries in water.
- Batteries should be inserted with the correct polarity.

CARE & MAINTENANCE

- Wipe down the playing surface with a clean, damp cloth.
- Wipe down the drumsticks with a clean, damp cloth.
- Buff the cymbals with a soft, non-abrasive cloth.
- Cover this drum kit when not in use.
- Do not leave unattended in direct sunlight.



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.



WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.