

## USER'S MANUAL

### LED Flat Par 54x3W Manual



#### 1-Maintenance

1. Please keep the light in dryness and avoiding use in wet place.
2. Using intermittently can be extended the life.
3. Attention to clean the fan and lens usually in order to get the ventilating effects and lighting effects better.
4. Please do not wipe the crust using organic menstruum for avoid to damaged the product.

#### 2-Statement

The product has well capability and intact packing when leave factory, All of the user should comply with above warning item and manual, any misuse cause of the damages are not included in our guarantee, and also can't be responsible for any malfunction & problem owing to ignore the manual.

Please forgive that we will not be notice for technical change

#### 3-Attention Item

1. For guarantee the life of product, please do not put it on the wet place and not use it the place over 40 degree.
2. Please don't lay the product on the un-fixable or shakable place.
3. Ask for the professional to maintain the product in order to avoid the danger of get an

electric shock.

4.Power supply should not be changed over  $\pm 10\%$  while the light is using,it will be decreased the life of lamp if the power is too high,but it will be influenced the luminosity if the power is too low.

5.After power off,if it is need used again,please cool down over 20 minuter.

6.Please look round the manual for ensure the product can be used normally.

#### 4-Display Control Instruction

Welcome to use our light.The light uses energy-saving LED,long Product life,shockproof,dustproof, DMX receiver and self-running feature, which can produce a variety of vivid lighting effects,easy to operate, suitable for all types of entertainment decoration,architectural lighting industry.

Access control panel functions using the four buttons located directly underneath the LED display on the included wired remote.

BUTTON	FUNCTION
<MENU>	Used to scroll through the current operating mode, as well as back out of the current menu option
<DOWN>	Used to select decreasing advancement in the value
<UP>	Used to select increasing advancement in the value
<ENTER>	Used to select a value and store it to memory



The Control Panel shows the current state of the unit. It is used to select the operating mode, as well as the sub-features. For a detailed layout of the control panel functions, please see the "menu map" section on the following page.

Instructions:Press the function key A cycled out the eight different function effects,digital tube first two digits on behalf of which the current function(see menu).The last two digits represent the functions in which the address code or speed parameters.Press the B or C key to modify the parameter values.Press the D key to confirm.

## 5-Product Introduction

- \* Power Supply:AC90--275V,50--60HZ
- \* Power consumption:162 W
- \* Fixing lamp:LED 54×3W RGBW
- \* DMX-Control-channels:4/8 DMX Channels
- \* Shuttle:Flash rate:0--10HZ
- \* Dimmer:0-100% mechanic dimmer
- \* Long Lifespan LEDs(more than 60,000 hours)

Display Control Instruction		
No	Display	Function
1.	<i>d001-d51</i> <i>2</i>	4-channel address code
2.	<i>A001-a51</i> <i>2</i>	8-channel address code
3.	<i>RF.ON</i>	Remote control ON/OFF
4.	<i>R001-r25</i> <i>5</i>	Red color selection.
5.	<i>G001-g25</i> <i>5</i>	Green color selection
6.	<i>B001-b25</i> <i>5</i>	Blue color selection
7.	<i>U001-u25</i> <i>5</i>	White color selection
8.	<i>Fk01-fh99</i>	Flash Strobe

9.	<i>C101-cl12</i>	Manual Color mixing
10.	<i>CC01-cc9</i> <i>9</i>	Program jump
11.	<i>dEO1-de9</i> <i>9</i>	Program pulse
12.	<i>CPO1-cp9</i> <i>9</i>	Program gradient
13.	<i>Sou1-sou9</i>	Sound control

<i>d001-d512</i> DMX Channel Summary-4 Channels Mode			
Channel	Function	Value	Function
CH1	Red	001-25 5	Red light color control
CH2	Green	001-25 5	Green color control
CH3	Blue	001-25 5	Blue light color control

CH4	White	001-25 5	White light color control
-----	-------	-------------	---------------------------

## DMX Channel Summary-8 Channels Mode

a001-a512 DMX Channel Summary-8 Channels Mode			
Channel	Function	Value	Function
CH1	Dimming	001-25 5	R,G,B,total dimming,linear
CH2	Red	001-25 5	Red light color control
CH3	Green	001-25 5	Green color control
CH4	Blue	001-25 5	Blue light color control
CH5	White	001-25 5	White light color control
CH6	Strobe	001-25 5	Strobe from fast to slow
CH7	Function selection	51-100 101-150 0 151-200 0 201-250 0 251-255 5	Color select control by CH8 Program jump Program gradient Program pulse sound control function
CH8	Speed	001-25 5	Function program speed control

