

Kwikset

ENGLISH

HALO

 
WI-FI TOUCHSCREEN SMART LOCK

Installation and User Guide

Required tools






Additional Tools (depending on application)



Kwikset
1-800-327-5625
www.kwikset.com

 Parts List

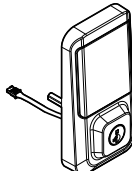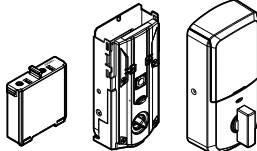Mounting Plate	Adapter Ring	Exterior Assembly	Interior Assembly
			
Batteries	Keys		
			
Latch A	For Latch / Strike	For Lock	
	Strike  03809 	SmartKey Tool  48654 	
Latch B			
	46780 	49191 	64109  68611 


"B" is not included.
If needed, please contact Kwikset to order a drive-in latch for your lock.

"B" is not included.
If needed, please contact Kwikset to order a drive-in latch for your lock.


1 Prepare the door and check dimensions

If drilling a new door, use the supplied template and the complete door drilling instructions available at kwikset.com/doorprep


A Make sure your door is compatible. If you have a standard deadbolt mounted separately from the handle below it, your door is compatible.

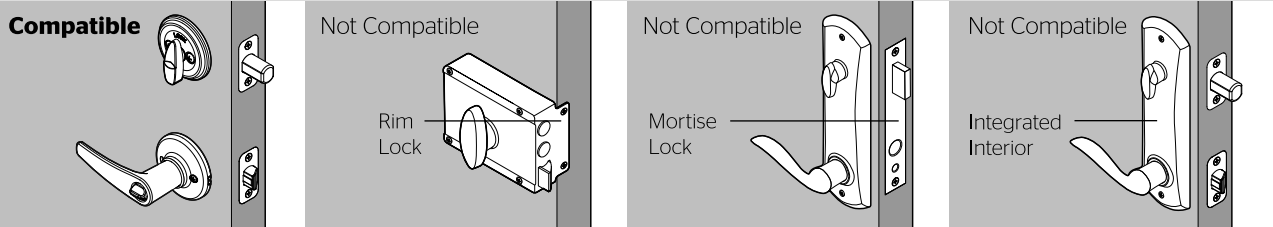


B Remove your existing deadbolt from your door.

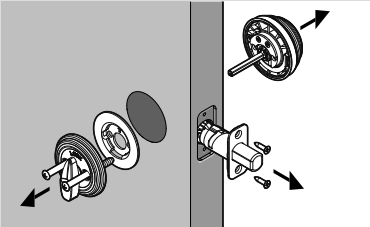


C Measure to confirm that the hole in the door is either 2-1/8" (54 mm) or 1-1/2" (38 mm).

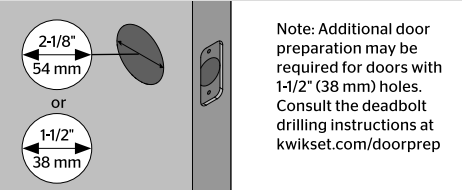


D Measure to confirm that the backset is either 2-3/8" or 2-3/4" (60 or 70 mm).

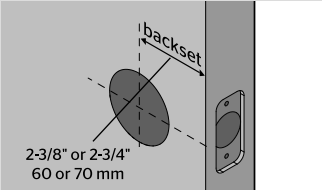

E Measure to confirm that the hole in the door edge is 1" (25 mm).

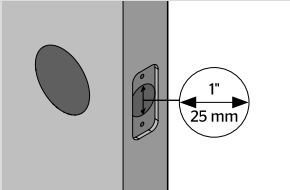


F Measure to confirm that the door is between 1-3/8" and 2" (35 mm and 51 mm) thick.

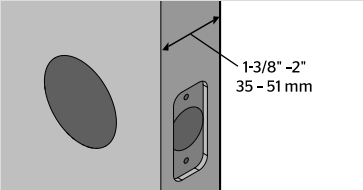


2 Install the latch and strike

 
For Latch / Strike Bag




A Is the door edge chiseled?

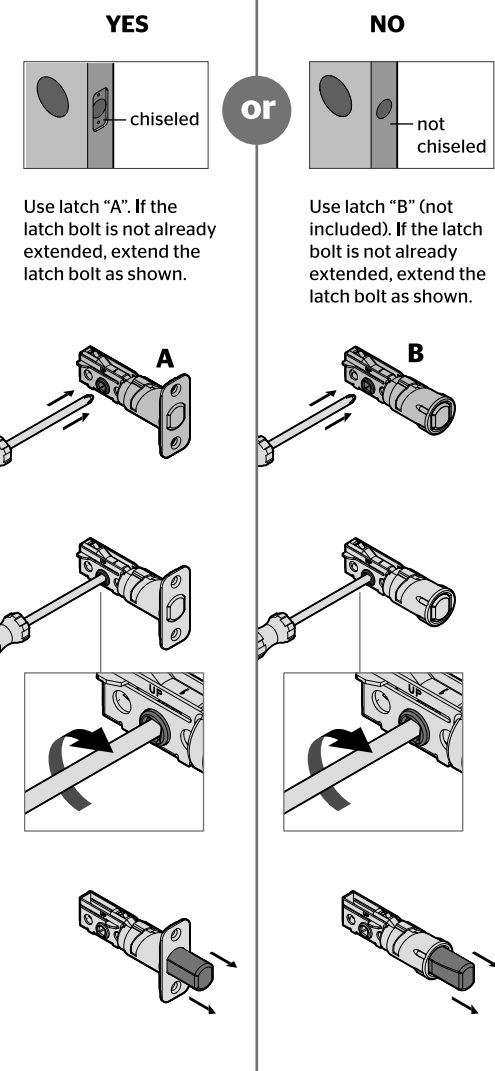


B Hold the latch in front of the door hole, with the latch face flush against the door edge.

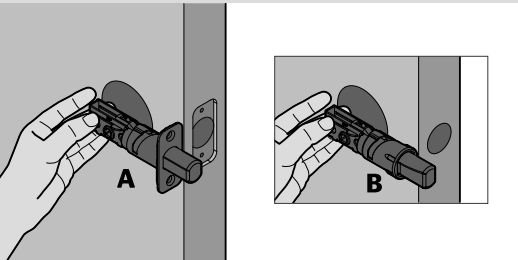


C Is the D-shaped hole centered in the door hole?

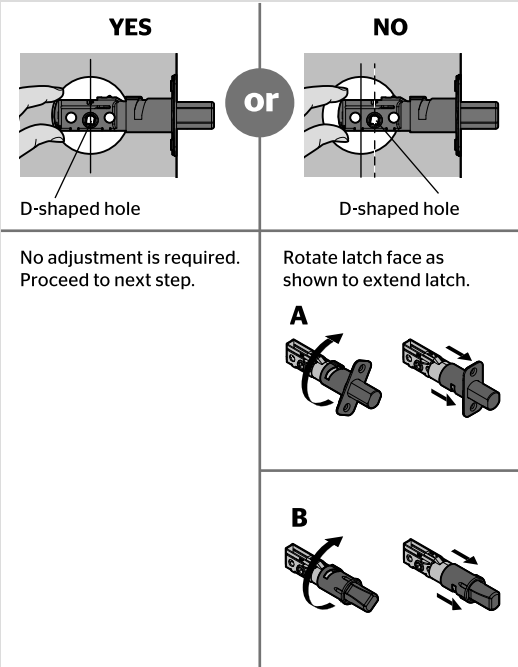

D Which latch are you installing?

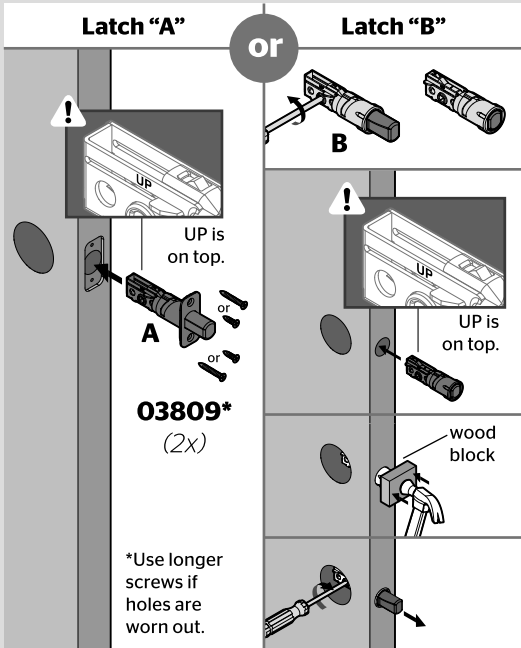


E Install the strike on the door frame.
! Make sure the hole in the door frame is drilled a minimum of 1" (25 mm) deep.

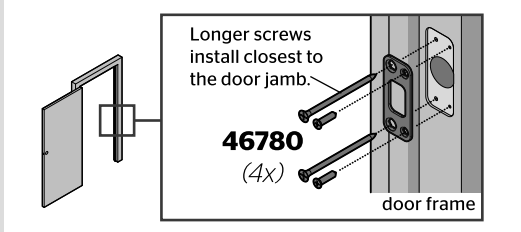


3 Install the exterior keypad

 
For
Lock
Bag




A What is the diameter of the hole in the door?

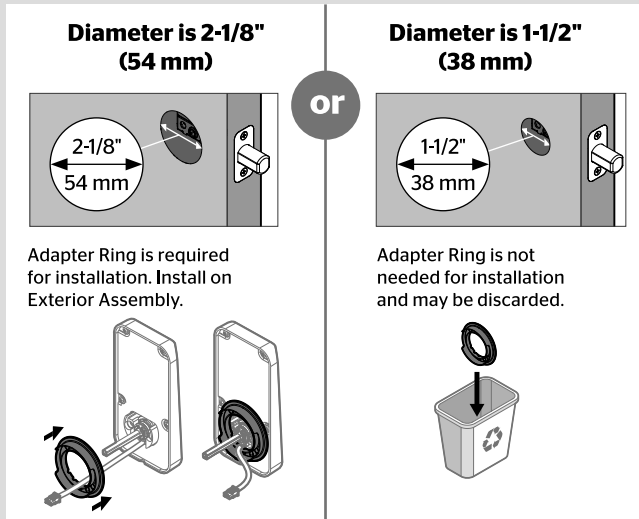

 
B Locate the screws for step 3D and keep them within reach.



C Remove the mounting plate from the interior assembly.

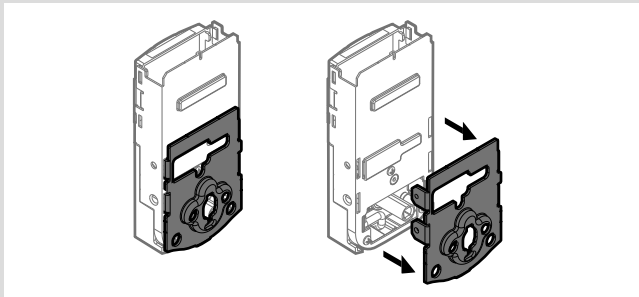

D Install the exterior keypad and mounting plate.

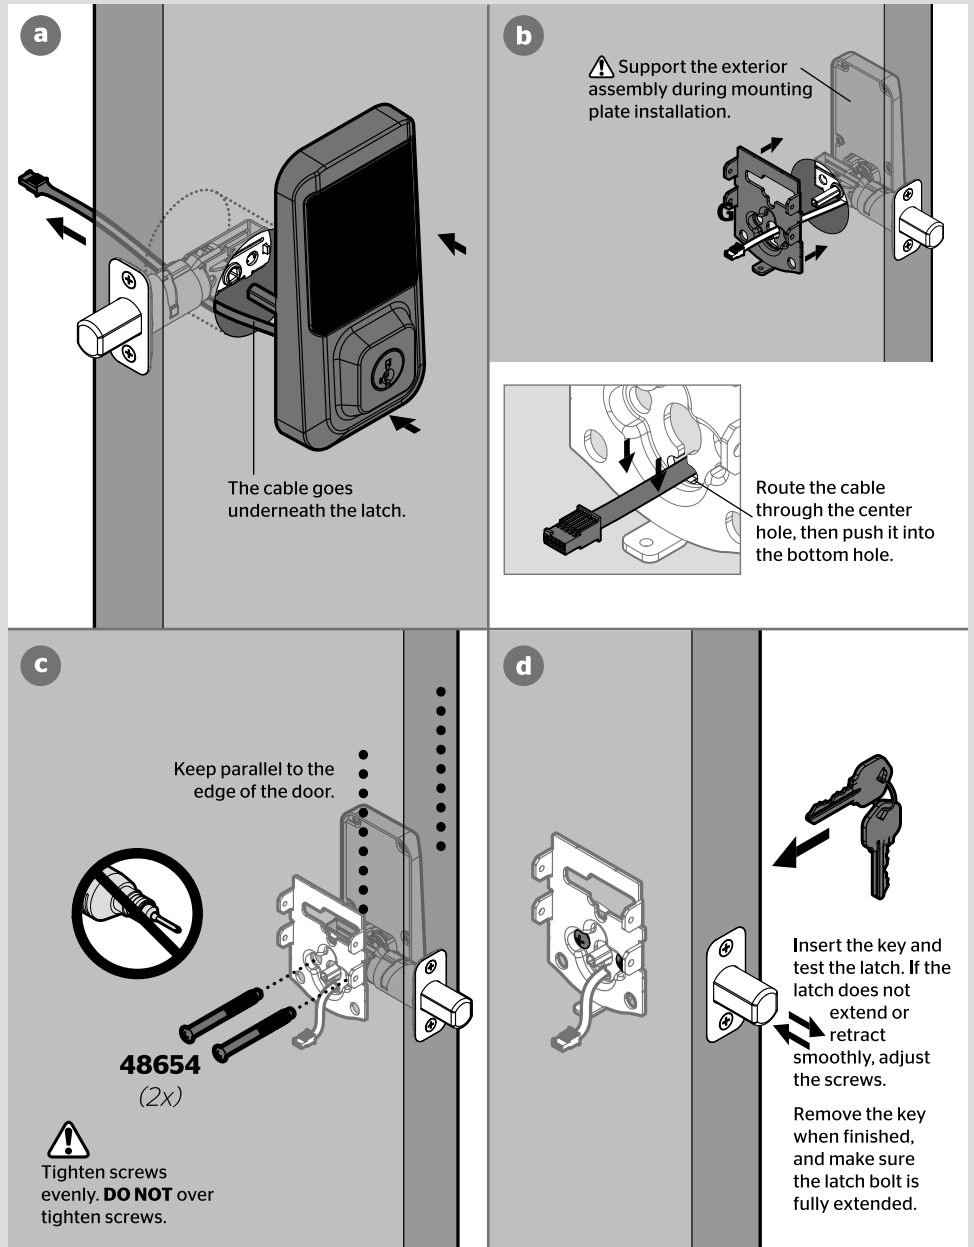


4 Install the interior assembly


For
Lock
Bag



A Ensure the turnpiece shaft is pointing up, and remove the interior cover and battery pack from the interior assembly.

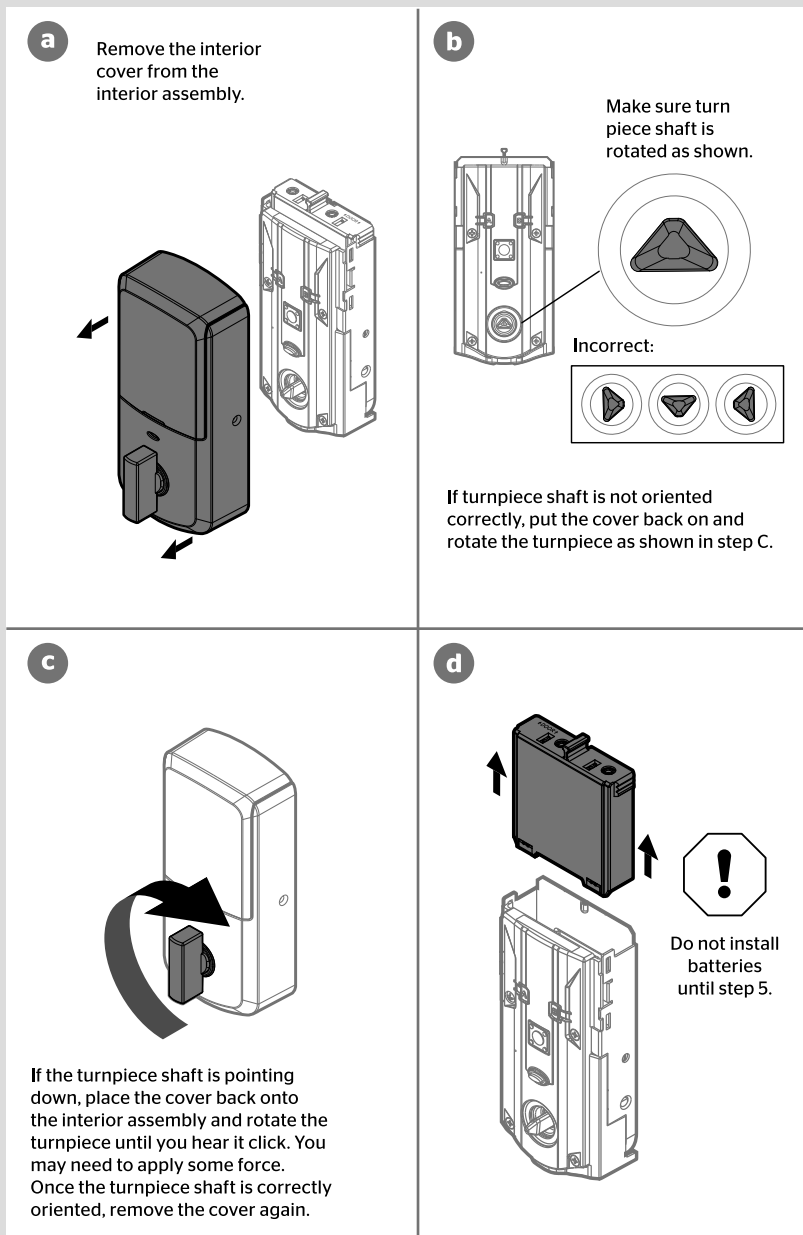


B Install the interior assembly onto the mounting plate.

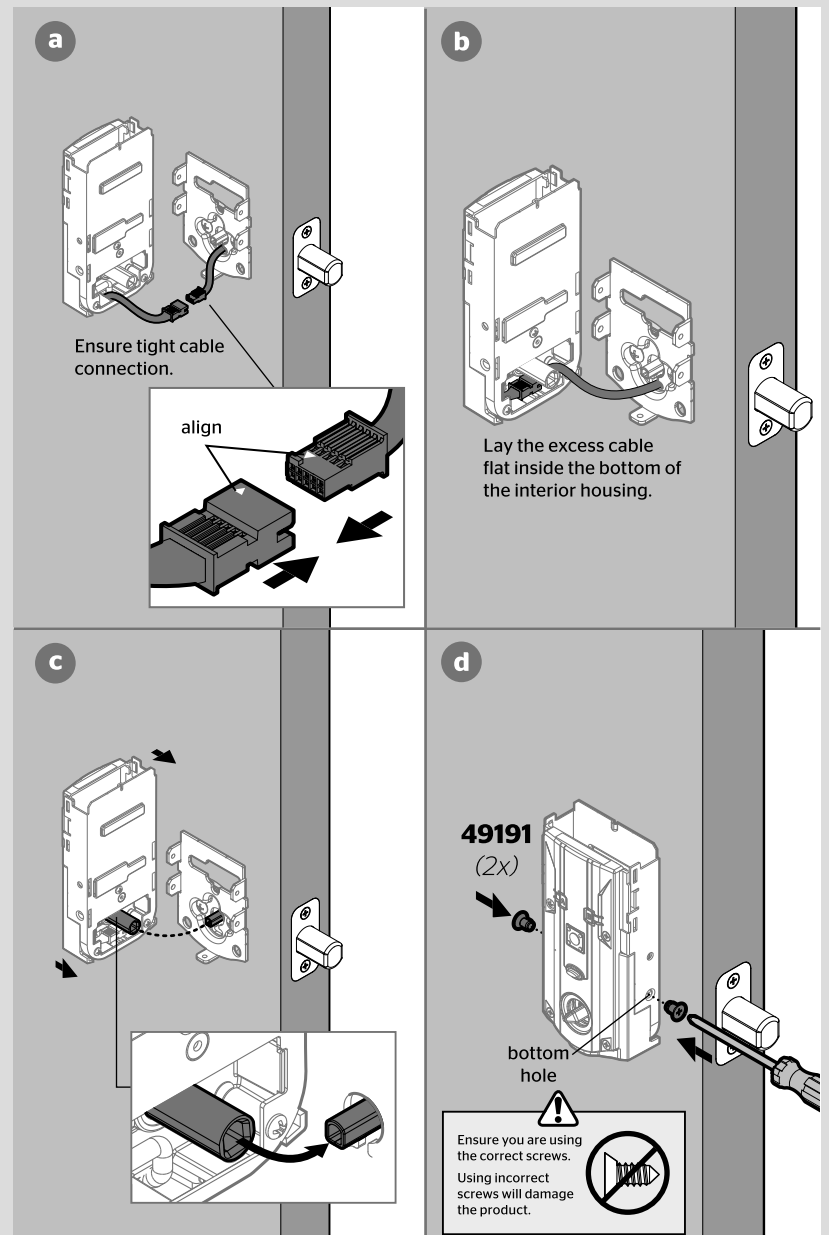


5 Install the batteries and perform the door handing process

This step will teach your lock the orientation of your door and is crucial to lock operation.


A Install 4 AA batteries in the battery pack.

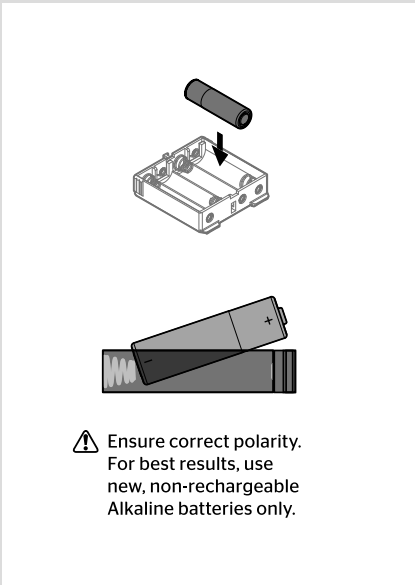

B With the door open, install the battery pack to initiate auto-handing.

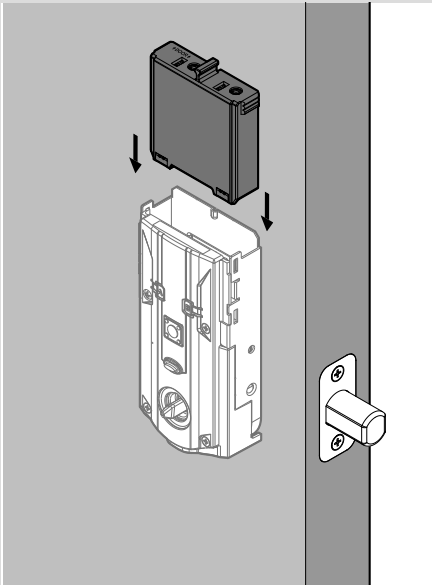


C After a few seconds, the latch bolt will retract and extend on its own to learn the orientation of the door. This is called the **door handing process**, and it is crucial to lock operation.

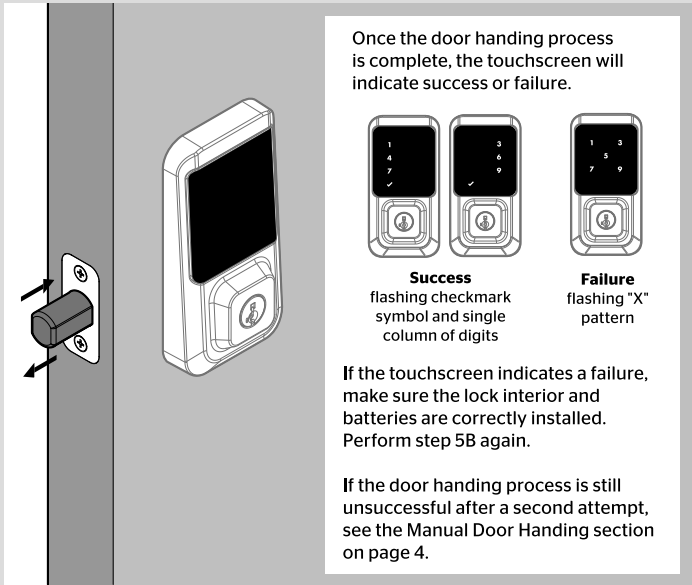


6 Test the lock and check door alignment


A With the door open, insert the key to extend the latch. Ensure that the latch extends smoothly.

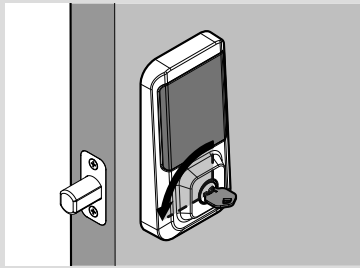


B Turn the key 180° to retract the latch. Ensure that the latch retracts smoothly.

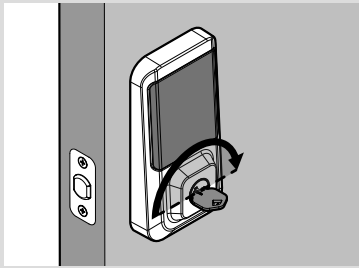

C Close the door. Insert and rotate the key to lock the door. Ensure that the door locks smoothly.

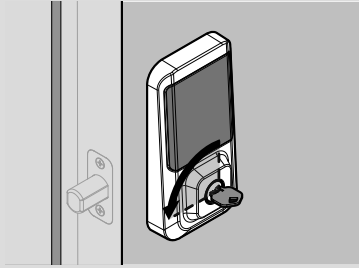

D Turn the key 180° to retract the latch. Ensure that the door unlocks smoothly.

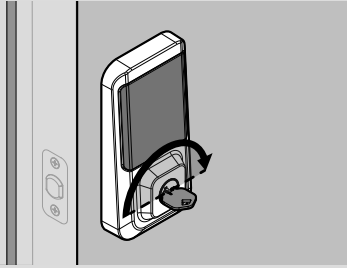


If your door does not lock and unlock smoothly, make sure you replaced your previous latch and strike with those supplied in the box. If you still experience locking errors, call Kwikset Support to order a Warped Door Service Kit. Kwikset Support: 1-800-327-5625



7 Install the interior cover

Important Information about the interior cover

The window on the interior cover is unlocked by default for easier access to the battery pack and buttons.

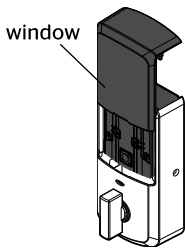


 For additional security, you may choose to lock the window by installing the security screw.

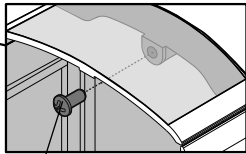


68611 (1x)
Ensure you are using the correct screws. Using incorrect screws will damage the product.

 When the window is locked, you will need to remove the entire interior cover and screws to access the battery pack and buttons.



For Lock Bag

 

(1x)

68611
actual size




(3x)

64109
actual size

Cover Installation


a Install cover.

Note: You may need to rotate the turn piece to align with the turn piece shaft.

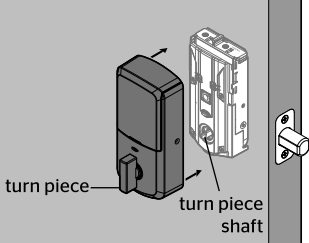


b Install screws.

64109 (3x)
Ensure you are using the correct screws. Using incorrect screws will damage the product.

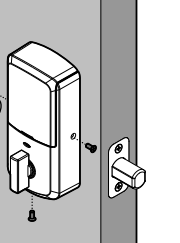


Battery Pack Access

 If the window is unlocked, slide up the window to access the battery pack.



If the window is locked, remove the interior cover and screws to access the battery pack.

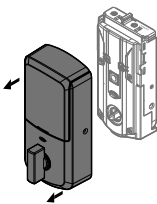

8 Download the app and create an account



The Kwikset app is needed to use this lock. If this lock was professionally installed (or installed by someone other than the homeowner), make sure this step is performed by the homeowner.

A

Download the Kwikset app by scanning the QR code or visiting www.kwikset.com/app on your smartphone.



B

Create your account and follow the setup instructions in the Kwikset app.

SmartCode at a Glance Exterior Touchscreen Checkmark symbol SmartKey tool hole 1 2 3 4 5 6 7 8 9 ✓ 0 Lock symbol Interior (cover removed) Battery pack Button "A" Status LED Turn piece shaft Button "B" Program Button
