

User's Guide


NCC

Nebula Control Center

Default Login Details

NCC URL	https://nebula.zyxel.com
User Name	Zyxel Account email Google Account email Apple ID email
Password	Zyxel Account password Google Account password Apple ID password

Version 19.10 Edition 1, 08/2025

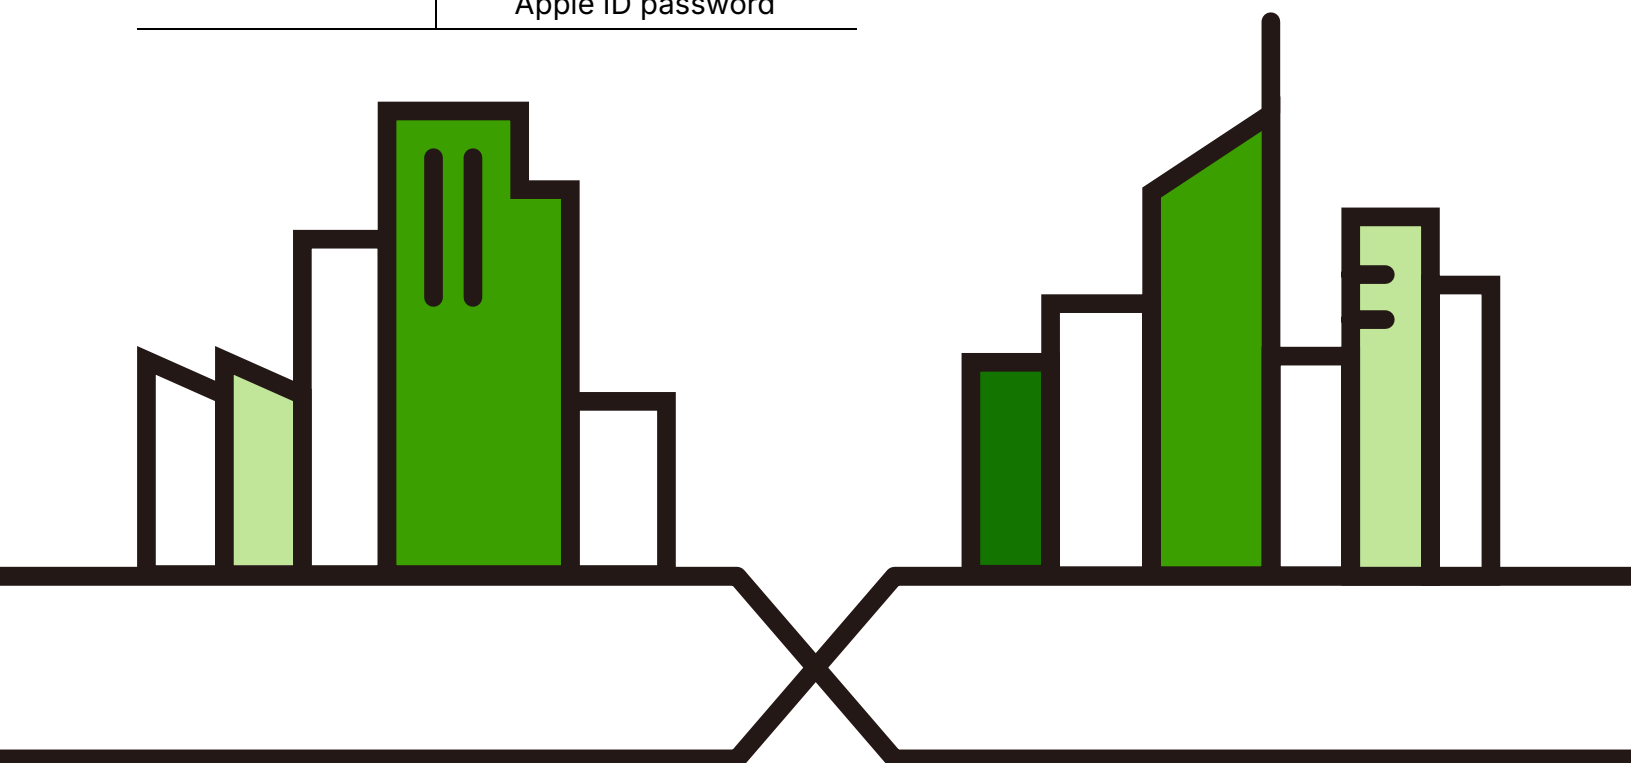

IMPORTANT!

READ CAREFULLY BEFORE USE.

KEEP THIS GUIDE FOR FUTURE REFERENCE.

This is a User's Guide for a system managing a series of products. Not all products support all features. Screenshots and graphics in this book may differ slightly from what you see due to differences in release versions or your computer operating system. Every effort has been made to ensure that the information in this manual is accurate.

Note: Nebula Device in each chapter refers to the Nebula AP, Switch, Security Appliance, Mobile Router, or Accessory respectively.

Related Documentation

- Nebula Control Center (NCC) User's Guide

Go to nebula.zyxel.com to get this User's Guide on how to configure the Nebula Device using NCC.

- Nebula Device Quick Start Guide

The Quick Start Guide shows how to connect the managed device, such as the Nebula AP, Switch, Security Appliance, or Mobile Router.

- Nebula Device User's Guide

Refer to the individual Nebula managed device's User's Guide for information about how to set the device to be managed by the NCC and/or configure the device using its built-in Web Configurator,

- More Information

Go to the [Nebula Control Center](#) to find other information on the NCC.



Table of Contents

Table of Contents.....	3
 Part I: Introduction & Getting Started Tutorials.....	13
Chapter 1	
Introduction.....	14
1.1 NCC Overview	14
1.1.1 Help Overview	15
1.1.2 MSP (Managed Services Provider) Portal	15
1.1.3 Sites, Organizations, and Groups	16
1.1.4 Nebula-Managed Devices	16
1.1.5 Licenses	17
1.2 Getting Started	26
1.2.1 Connect Nebula Managed Devices	26
1.2.2 Access the NCC Portal	26
1.2.3 Access the Nebula SD-WAN (Orchestrator) Portal	33
1.3 NCC Portal Overview	37
1.3.1 Title Bar	39
1.3.2 Intent	50
1.3.3 Chatbot AI	51
1.3.4 Navigation Panel	53
1.4 Create Organization	62
1.5 Choose Organization	63
1.6 Create Site	64
1.7 Cloud-Saving Mode	67
Chapter 2	
Setup Wizard	68
2.1 Setup Wizard	68
2.1.1 Step 1: Run the Wizard	68
2.1.2 Step 2: Create an Organization and Site	69
2.1.3 Step 3: Add Your Nebula Devices	70
2.1.4 Step 4: Activate the Trial License(s)	71
2.1.5 Step 5: Upgrade your Nebula Device Firmware	71
2.1.6 Step 6: Set up your WiFi Network	72
2.1.7 Step 7: Set up a Guest WiFi Network	73
2.1.8 Step 8: Set up the Deployment Method	74
2.1.9 Step 9: View the Summary	77

Chapter 3

Tutorials	79
3.1 Overview	79
3.2 Add a Nebula Device	80
3.3 Activate and Assign a License for a Nebula Device, Site, or Organization	81
3.3.1 Bundled License and Add-on License	82
3.3.2 License States	82
3.3.3 License Activation Process	82
3.4 Monitor a Site	84
3.5 Know What License Tier My Organization Belongs To	86
3.6 Know What Licenses are Set to Expire in My Site or Organization	86
3.7 Renew an Expired License	87
3.8 Transfer Licenses	88
3.8.1 Select Transferable Licenses	88
3.8.2 Undo Assigning a License	89
3.8.3 Transfer a License to a Different Organization	89
3.8.4 Assign a License to a Nebula Device in the New Organization	90
3.8.5 Transfer a License to a Nebula Device in a New Organization	92
3.9 Change an Organization and/or Site Name	93
3.10 Reset the Nebula Password	94
3.11 Maintain Firmware	98
3.12 Backup Current Configurations in Nebula	100
3.13 Assign an Administrator to Manage a Nebula Device	102
3.14 Transfer the Ownership of the Organization	103
3.15 Manage a Configuration Template	104
3.15.1 Create and Bind a Template Site/Setting	105
3.15.2 Duplicate and Import a Template Setting to a Site	108
3.15.3 Enable the Override Site-wide Configuration (Local Override) Feature	113
3.16 Activate an MSP License	118
3.17 Configure CNP/CNP Plus Security Services	118
3.17.1 Threat Protection	118
3.17.2 Application Visibility & Optimization	119
3.18 Delete an Organization	121
3.18.1 Remove All Nebula Devices	121
3.18.2 Transfer All Licenses	122
3.18.3 Delete All Sites	122
3.18.4 Delete All Administrators	123
3.18.5 Remove All Users	124
3.18.6 Delete the Organization	124
3.19 Remote Access VPN Setup	125
3.19.1 Create a VPN User	126
3.19.2 Enable the Remote Access VPN Rule for IPSec VPN Client	127
3.19.3 VPN Setup by the VPN Client	129

3.19.4 Import the VPN Configuration File	129
3.19.5 Open the VPN Tunnel	132
3.19.6 Set Up Two Factor Authentication to Bind the User Account	134
3.19.7 Check the Connection in Nebula by the Administrator	136
3.20 Route L2TP VPN Traffic	137
3.21 Configure Guest Isolation on your WiFi Network	139
3.22 Configure Content Filter to Block Access to Certain Websites	143
3.23 Configure Schedule to Allow WiFi Access Only at Certain Times	146
3.24 How to Position Multiple Nebula Devices (for Nebula Access Points only)	147
3.25 Change the Default SSID and Password	148
3.26 Change the WiFi Band Mode	149
3.27 Check What Clients are Connected to Nebula Devices in your Network	151
3.28 Find the SSID of the WiFi Client (for Nebula Access Points only)	152
3.29 Use Tags to Assign SSIDs for Nebula Devices (for Nebula Access Points only)	153
3.30 Resolve WiFi Connection Problems (for Nebula Access Points only)	155
3.31 Configure WiFi Security with WPA2 Personal (for Nebula Access Points only)	162
3.31.1 Configure WPA2 Personal	162
3.32 Configure WiFi Security with WPA2 Enterprise (for Nebula Access Points only)	164
3.32.1 Configure WPA2 Enterprise with Nebula Cloud Authentication / RADIUS Server Authentication	165
3.33 Using DPPSK to Access the Guest WiFi Network	167
3.34 Create a DPPSK Key Using the DPPSK API	171
3.35 Set Up WiFi Network Load Balancing	172
3.36 Configure a Captive Portal	174
3.37 Create a Custom Captive Portal Page	176
3.38 Limit Applications Usage or Block Applications	177
3.39 Find the LAN Port Used by Connected Wired Client Devices (for Nebula Switches only) ..	180
3.40 Configure Voice VLAN (for Nebula Switches only)	182
3.40.1 Configure the Nebula Device Ports	183
3.40.2 Configure the Voice VLAN	184
3.41 Manage IPTV (for Nebula Switches only)	185
3.41.1 Set up the VLAN for IPTV	185
3.41.2 Define the Role of a Switch	186
3.41.3 Configure the Channel Profile and Naming	188
3.42 Enable IP Source Guard (for Nebula Switches only)	191
3.43 Set Up MAC Authentication With NCAS (for Nebula Switches only)	196
3.44 Set Up Dynamic VLAN With RADIUS (for Nebula Switches only)	197
3.45 Monitor Dynamic VLAN Using Event Logs (for Nebula Switches only)	199
3.46 Register a Nebula Device (mobile router) in Nebula	200
3.47 Using Collaborative Detection and Response (CDR)	201
3.48 Deploy With Nebula Native Mode (for Security Firewalls in Nebula only)	203
3.49 Configure DHCP Domain Name (for Security Firewalls in Nebula only)	208
3.50 Monitor Client Bandwidth Usage (for Security Firewalls in Nebula only)	211

3.51 Configure a Primary and Backup WAN (for Security Firewalls in Nebula only)	212
3.52 Set Up Nebula Monitor Mode (for Security Firewalls in on-premise only)	214
3.53 Enable Smart Mesh on a Security Router	217

Part II: Manage by Site Deployment 221

Chapter 4

Site-wide.....	222
4.1 Dashboard	222
4.2 Topology	226
4.2.1 General	230
4.2.2 Ports	231
4.2.3 Insights	232
4.2.4 Settings	232
4.3 Devices	233
4.3.1 Access Points	233
4.3.2 Switches	246
4.3.3 Security Router	262
4.3.4 Firewall	265
4.3.5 Security Gateway	271
4.3.6 Mobile Router	275
4.3.7 Accessories	275
4.4 Map & Floor Plans	275
4.5 Clients	277
4.5.1 WiFi Client Details	280
4.5.2 Wired Client Details	282
4.5.3 WiFi Aid	284
4.6 Applications Usage	287
4.7 Summary Report	291
4.8 Monitor	293
4.8.1 Containment List	293
4.8.2 Vouchers	294
4.8.3 Site Features Logs	298
4.9 Configure	299
4.9.1 Alert Settings	299
4.9.2 Firmware Management	306
4.9.3 Cloud Authentication	313
4.9.4 Collaborative Detection & Response	321
4.9.5 Quarantine Interface Configuration	324
4.9.6 Site Settings	325

Chapter 5	
Access Point.....	330
5.1 Overview	330
5.1.1 Nebula Smart Mesh	330
5.1.2 Smart Mesh Network Topology	331
5.2 Monitor	332
5.2.1 Event Log	332
5.2.2 Wireless Health	333
5.2.3 Summary Report	337
5.3 Configure	340
5.3.1 SSID Settings	340
5.3.2 SSID Advanced Settings	343
5.3.3 Captive Portal Customization	353
5.3.4 Radio Settings	358
5.3.5 Traffic Shaping	363
5.3.6 Security Service	364
5.3.7 AP & Port Settings	367
Chapter 6	
Switch.....	372
6.1 Overview	372
6.2 Monitor	372
6.2.1 Event Log	372
6.2.2 Surveillance	373
6.2.3 Surveillance Port Details	374
6.2.4 IPTV Report	376
6.2.5 Port Advisor	382
6.2.6 Summary Report	385
6.3 Configure	387
6.3.1 Switch Ports	388
6.3.2 Port Profiles	398
6.3.3 Cloud Stacking Mode	401
6.3.4 Stacking Nebula Devices	402
6.3.5 ACL	418
6.3.6 IP & Routing	419
6.3.7 ONVIF Discovery	425
6.3.8 Advanced IGMP	427
6.3.9 Authentication	431
6.3.10 PoE Schedules	434
6.3.11 Switch Settings	435
Chapter 7	
Security Router	441

7.1 Overview	441
7.2 Monitor	441
7.2.1 Event Log	441
7.2.2 VPN Connections	441
7.2.3 Threat Report	443
7.2.4 Content Filter Report	445
7.3 Configure	446
7.3.1 Interface	446
7.3.2 Threat Management	459
7.3.3 Traffic Management	462
7.3.4 Firewall	465
7.3.5 Site-to-Site VPN	468
7.3.6 Remote Access VPN	473
7.3.7 SSID Settings	475
7.3.8 SSID Advanced Settings	478
7.3.9 Radio Settings	485
7.3.10 Router Settings	491
 Chapter 8	
Firewall	494
8.1 Overview	494
8.2 Monitor	494
8.2.1 Clients	494
8.2.2 Event Log	494
8.2.3 VPN Connections	495
8.2.4 SecuReporter	497
8.2.5 Summary Report	498
8.3 Configure	503
8.3.1 Port	503
8.3.2 Interface	504
8.3.3 Port and Interface	513
8.3.4 Routing	531
8.3.5 NAT	538
8.3.6 Site-to-Site VPN	542
8.3.7 Remote Access VPN	553
8.3.8 Security Policy	559
8.3.9 Security Service	568
8.3.10 Object	597
8.3.11 Captive Portal	607
8.3.12 Authentication Method	611
8.3.13 Wireless	612
8.3.14 Firewall Settings	614

Chapter 9	
Security Gateway	628
9.1 Overview	628
9.2 Monitor	628
9.2.1 Event Log	628
9.2.2 VPN Connections	629
9.2.3 NSS Analysis Report	631
9.2.4 Summary Report	633
9.3 Configure	636
9.3.1 Interface Addressing	636
9.3.2 Link Aggregation Groups	643
9.3.3 Policy Route	651
9.3.4 Firewall	652
9.3.5 Security Service	659
9.3.6 Site-to-Site VPN	662
9.3.7 Remote Access VPN	669
9.3.8 Captive Portal	671
9.3.9 Network Access Method	675
9.3.10 Traffic Shaping	676
9.3.11 Gateway Settings	679
Chapter 10	
Mobile Router	684
10.1 Overview	684
10.2 Configuration	684
10.2.1 Configuration: Edit	685
10.2.2 Home Networking	686
10.2.3 Cellular IP Passthrough	688
10.2.4 Firmware Status	689
10.3 Map/Photo	690
10.4 Live Tools	692
10.4.1 WAN Status	693
10.4.2 Cellular Info	694
10.4.3 LAN Stations	700
10.4.4 WLAN Stations	701
10.5 Client Device Heartbeat	702
10.6 Backup & Restore	703
10.7 Network Usage and Connectivity	703
Chapter 11	
Accessory	705
11.1 Overview	705
11.2 Configuration	705

11.2.1 Accessories Details	707

Part III: Manage by Organization Deployment 710

Chapter 12

Organization-wide.....	711

12.1 Overview	711
12.2 License & inventory	711
12.2.1 License & Inventory Overview Screen	711
12.2.2 Add Devices Screen	714
12.2.3 Firmware Upgrade Screen	715
12.2.4 Add Licenses Screen	716
12.2.5 Install Wizard	716
12.2.6 License & Inventory Devices Screen	719
12.2.7 License & Inventory Licenses Screen	722
12.2.8 License & Inventory Trial Screen	725
12.2.9 License & Inventory Change Log Screen	727
12.2.10 License & Inventory Purchase History Screen	728
12.3 Administrators	728
12.3.1 Create/Update Administrator	731
12.4 Organization-wide Manage	732
12.4.1 Organization Portal	733
12.4.2 Configuration Management	737
12.4.3 Configuration Templates	741
12.4.4 VPN Orchestrator	744
12.4.5 Security Profile Sync	748
12.4.6 Firmware Management	756
12.4.7 Cloud Authentication	763
12.4.8 Change Log	774
12.4.9 Organization Settings	776

Part IV: Manage by Group Deployment 781

Chapter 13

Group-wide	782

13.1 Introduction	782
13.1.1 Creating a Group	782
13.1.2 Group-Wide Menu	783
13.2 Group Portal	783
13.3 Org-to-Org VPN	784

13.3.1 Configure Org-to-Org VPN	784
13.3.2 Org-to-Org VPN Example	785
13.3.3 Org-to-Org VPN Screen	785
13.3.4 Add Hub	786
13.3.5 Service	787
13.4 Inventory	788
13.5 Administrators	789
13.5.1 Create/Update Administrator	791
13.6 Change Log	792
13.7 Group Settings	793
 Part V: MSP	 795
Chapter 14	
MSP	796
14.1 Overview	796
14.2 MSP Portal	796
14.3 Admins & Teams	800
14.3.1 Administrator Privilege Priority	800
14.3.2 MSP admins & teams Screen	800
14.3.3 Create/Update MSP Administrator	803
14.3.4 Create/Update Team	804
14.3.5 Customer orgs & groups Screen	805
14.3.6 Create Group	807
14.3.7 Update Organization	807
14.3.8 Create Organization	808
14.3.9 Org. administrators Screen	811
14.3.10 Create Organization-wide Administrator	812
14.4 Cross-org synchronization	815
14.4.1 Cross-Org setting sync	815
14.4.2 Cross-Org site clone	815
14.4.3 Cross-org synchronization Screen	816
14.5 Backup and Restore	818
14.5.1 Backup and Restore Overview Screen	819
14.5.2 Backup and Restore Backups Screen	819
14.6 MSP Alert Templates	820
14.6.1 Alert Settings	821
14.7 Firmware Upgrades	826
14.7.1 Schedule Upgrades Screen	826
14.7.2 Firmware Upgrade Priority	827
14.7.3 Bulk Firmware Upgrade Wizard	828

14.7.4 Scheduled Tasks Screen	830
14.8 Change Log	831
14.9 MSP Branding	832
14.10 MSP Settings	834
 Part VI: Troubleshooting and Appendices	 836
Chapter 15	
Help	837
15.1 Online documents	837
15.2 Troubleshooting Tips	839
15.2.1 Firewall Information	839
15.2.2 Data Policy	839
15.3 Device Function Table	840
15.4 Support Forum	840
15.5 Support Request	840
Chapter 16	
Troubleshooting	843
16.1 Getting More Troubleshooting Help	851
16.2 NCC Live Chat	851
Appendix A Customer Support	853
Appendix B Legal Information	858
Index.....	860

PART I

Introduction & Getting Started Tutorials

CHAPTER 1

Introduction

1.1 NCC Overview

The Zyxel Nebula Control Center (NCC) is a cloud-based network management system that allows you to remotely manage and monitor Zyxel Nebula Mobile Routers, Access Points, Ethernet Switches, Security Appliances, and Accessories. A Nebula Mobile Router is an LTE or NR cellular 5G indoor or outdoor router that can be managed by Nebula. You need to set up a Zyxel Account in order to log into the NCC and manage your Nebula Devices, as discussed in [Section 1.2.2 on page 26](#).

NCC feature support includes:

- System accounts with different privilege levels
 - Site Administrator: manage one site, which is a network that contains Nebula Devices
 - Organization Administrator: manage one or more organizations, which are sets of sites
- Multi-tenant management
- Inventory and license management
- Alerts to view events, such as when a device goes down
- Graphically monitor individual devices
- Securely manage Nebula Devices by using the Network Configuration Protocol (NETCONF) over TLS

Note: NCC supports IPv4 address only.

The following table describes the supported Nebula Devices at the time of writing.

Table 1 Supported Nebula Devices

CATEGORY	INCLUDED ZYXEL DEVICES
Hybrid Mobile Routers	LTE/NR Indoor/Outdoor Models
Security Router	SCR 50AXE, USG LITE 60AX
Security Gateways	NSG Series
Hybrid Security Firewalls	ZyWALL ATP / USG FLEX / USG FLEX H / USG20(W)-VPN Series Note: The following Nebula Devices do NOT have a P1 port: • USG FLEX 50 • USG FLEX 100 rev 2.0 • ATP100 rev 2.0
Hybrid Switches	NSW / GS / XGS / XS Series
Hybrid APs (Access Point)	NAP / NWA / WAC / WAX Series
Accessories	PoE12-3PD

Note: To view the list of Nebula Devices that can be managed through NCC, go to Help > Device function table.

A hybrid device can operate in either standalone or Nebula cloud management mode. When the hybrid device is in standalone mode, it can be configured and managed by the Web Configurator. When the hybrid device is in Nebula cloud management mode, it can be managed and provisioned by the Zyxel Nebula Control Center (NCC).

1.1.1 Help Overview

To view helpful information about NCC and to help you find answers and/or solve problems in NCC, see the following table.

Table 2 Help Overview


WHAT TO FIND	WHERE
All menu and field detailed descriptions	NCC portal for Online Help or Download Library for PDF User's Guide.
Common tasks and solutions to common problems	Tutorials and Troubleshooting in NCC Online Help or PDF User's Guide.
Guide on where to configure an NCC feature	Intent AI search in the NCC portal.
Chat about a problem you cannot find above	NCC AI Chat or Human Chat (9 AM to 6 PM Taiwan time).

1.1.2 MSP (Managed Services Provider) Portal

If you have an MSP license (as discussed in [Section 14.1 on page 796](#)), use the MSP menus for cross-organization management and branding.

A Managed Service Provider (MSP) network is a group of organizations that belong to the same organization administrator. With MSP, you can:

- View the organization summary and transfer licenses
- Copy the settings from a source organization to a destination organization
- Create administrators or groups of administrators (teams) and view their login details
- Assign administrators to multiple organizations
- Upload/replace/remove the dashboard logo on NCC
- Set the support contact details
- Configure MSP alerts to monitor Nebula Devices for unexpected events (for example, online/offline events)

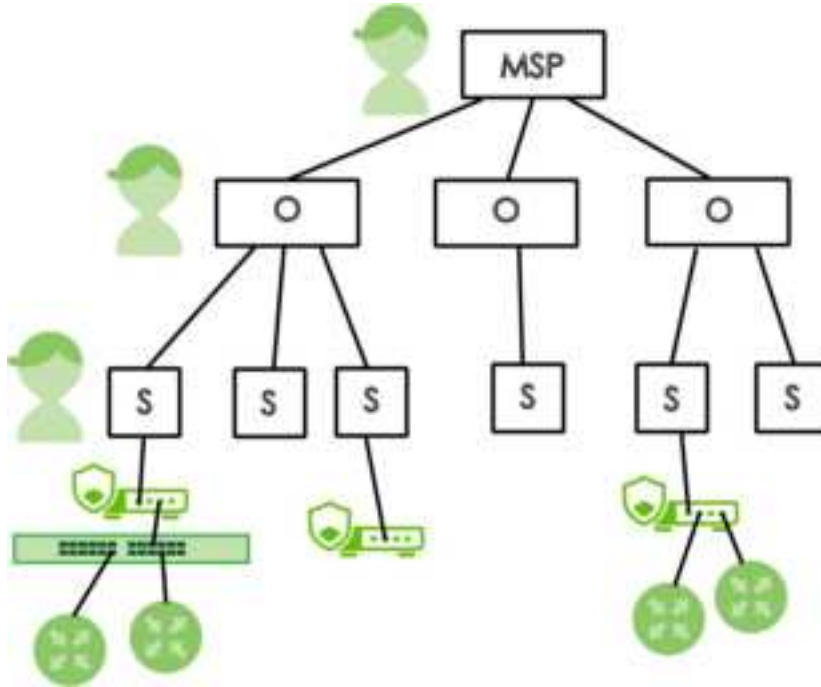

1.1.3 Sites, Organizations, and Groups

To manage by how Nebula Devices are deployed, use the [Site-wide](#), [Organization-wide](#) and [Group-wide](#) menus.

In the NCC, a site is a group of Nebula-managed devices in the same network. An organization is a group of sites. A group is a collection of two or more organizations. To use the NCC to manage your Nebula Devices, each Nebula Device should be assigned to a site and the site must belong to an organization.


- A site can have multiple Nebula Devices, but can only belong to one organization.
- A site can be managed by more than one site or organization administrator.
- An organization can contain multiple sites and can be managed by more than one organization administrator.
- A Zyxel Account can be an organization administrator and/or site administrator in the NCC (see [Section 12.3 on page 728](#)).
- A site administrator can manage more than one site.

1.1.4 Nebula-Managed Devices

To manage by Nebula Device type, use the [Security Router](#), [Mobile Router](#), [Firewall](#), [Security Gateway](#), [Switch](#) or [Access Point](#) menus.

In the following example, with an NCC organization administrator account, you can use NCC to remotely manage and monitor the Zyxel Nebula Security Appliances (SA), Ethernet Switches (S), and Access Points (AP).

Figure 1 NCC Example Network Topology

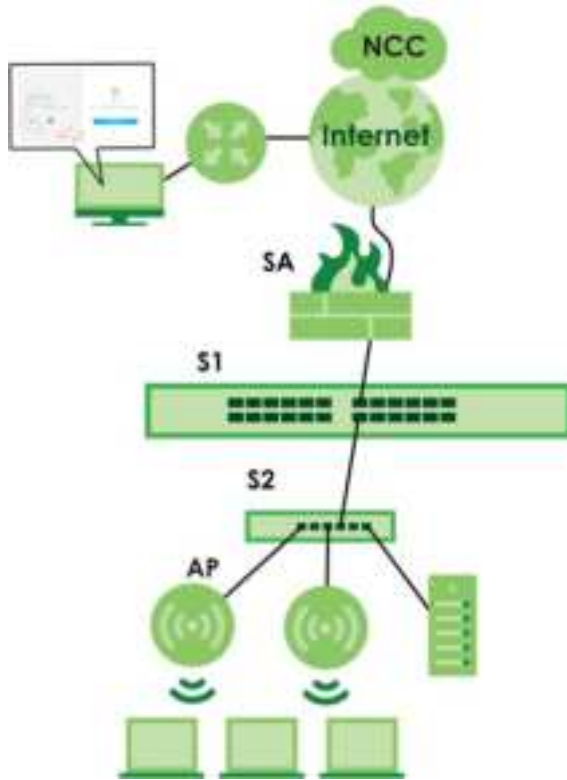

1.1.5 Licenses

The following section describes the license in NCC. Licenses unlock additional features in NCC. This means you purchase a license, assign the license to a Nebula Device, and you can then use the service in the site or organization that the Nebula Device is in.

1.1.5.1 Summary of NCC Licenses

There are three categories of licenses in NCC:

- Organization: These licenses unlock advanced features for sites and organizations.
- Security Service: These licenses unlock advanced security features on a Security Appliance/Firewall device.
- MSP: This license unlocks the MSP menu for an NCC user account.

The following table gives a summary of all licenses in NCC at the time of writing.

Table 3 Licenses Summary

LICENSE	CATEGORY	ASSIGN TO	DESCRIPTION
Nebula Professional Pack	Organization	Any NCC-managed devices	Unlocks all advanced features within the Nebula Device's organization. For details on Pro features, see Section 1.1.5.2 on page 19 .
Nebula Plus Pack	Organization	Any NCC-managed devices	Unlocks certain advanced features within the Nebula Device's organization. Note: Upgrade to Nebula Professional Pack to get all the advanced features. For details on Plus features, see Section 1.1.5.2 on page 19 .
MSP	MSP	NCC user account	Unlocks the MSP menu and MSP features for an NCC user account.
MSP Trial	MSP	NCC user account	Unlocks the MSP menu and MSP features but is available only once per NCC account for 30 days. Go to More > My devices & services > Services: Activate trial for MSP. Note: An MSP Trial license may not be transferred to a different account. A deactivated trial license ends the service and cannot be re-claimed.
Organization Trial	Organization	Organization	Available when creating a new organization. Unlocks all Nebula Professional Pack and Nebula Security Pack (NSS) features in the organization for 30 days. There are no restrictions on the allowed number of Nebula Devices or sites. Note: Each Nebula user account can create 10 new organizations with trial licenses every 90 days.
Nebula Security Pack (Nebula Security Service)	Security Service	Nebula Security Gateway (NSG) devices	Unlocks security services, such as anti-virus and anti-malware. You can use these security services within the NSG's site.
UTM Security Pack	Security Service	USG FLEX devices	Unlocks security services, such as anti-malware, content filter, URL threat filter, IP reputation, sandboxing, IPS (Intrusion Prevention System), application patrol, SecuReporter, CDR (Collaborative Detection & Response), and security profile sync (see Section 12.4.5 on page 748 for more information), on a Security Firewall. You can then use these security services within the Security Firewall's site.

Table 3 Licenses Summary (continued)

LICENSE	CATEGORY	ASSIGN TO	DESCRIPTION
Gold Security Pack	Organization and Security Service	ATP devices	Unlocks security services, such as content filter, application patrol, DNS/URL threat filter, IPS (Intrusion Prevention System), Reputation filter, anti-malware with hybrid mode, sandboxing, CDR (Collaborative Detection & Response), security profile sync, Secure WiFi, SecuReporter, and all advanced features of a Nebula Professional Pack license. For details on Pro features, see Section 1.1.5.2 on page 19 .
Gold Security Pack	Organization and Security Service	USG FLEX, USG FLEX H devices except USG20-VPN / USG20W-VPN / USG FLEX 50	Unlocks security services, such as web filter, application patrol, IPS (Intrusion Prevention System), Reputation filter, anti-malware, sandboxing, security profile sync, Secure WiFi, SecuReporter, Device Insight, and all advanced features of a Nebula Professional Pack license.
Secure WiFi	Security Service	USG FLEX, USG FLEX H devices except USG FLEX 50	Unlocks the Remote AP feature.
Content Filter Pack	Security Service	USG VPN devices	Unlocks security services, such as content filter, SecuReporter, and security profile sync on USG FLEX 50 / USG20-VPN / USG20W-VPN devices.
Connect & Protect (CNP)	Security Service	NWA1123-ACv3, WAC500, WAC500H	Unlocks security services, such as threat protection using DNS and IP reputation filters.
Connect & Protect Plus (CNP+)	Security Service	NWA110AX, NWA210AX, WAX510D, WAX610D, WAX630S, WAX650S	Unlocks security services, such as application visibility and threat protection using DNS and IP reputation filters.
Elite Pack	Organization and Security Service	SCR 50AXE, USG LITE 60AX	Unlocks security services, such as web filtering, Ransomware Prevention Premium, and all advanced features of a Nebula Professional Pack license. For details on Pro features, see Section 1.1.5.2 on page 19 .
Entry Defense Pack	Security Service	USG FLEX H devices	Unlocks security services, such as DNS/URL threat filter, Reputation filter, SecuReporter, and Priority support requests.

1.1.5.2 Organization License Tiers

NCC features the following license tiers for organizations: Base, Plus, Professional.

- The Base tier is free and included with every organization.
- The Plus and Professional tier licenses unlock additional features within the organization. From a Plus tier license, upgrade to a Professional tier license to unlock all the additional features. These features are marked in the user interface with a diamond icon (💎). Hover the mouse over the licensed features to view the license type.

Note: For an Organization to be in the Plus or Professional tier, each Nebula Device in the Organization must have been assigned a valid Plus or Professional tier license.

The feature differences between the license tiers are listed below:

Table 4 NCC License Tier Differences

FEATURE	BASE	PLUS	PROFES SIONAL	LOCATION	NOTES
Group-wide menu (Monitor – Overview, Inventory, Change log, and Configure – Settings, Org-to-Org VPN, and Administrators)	No	No	Yes	Group-wide	To create a group, you must be an NCC admin and the owner of two or more Professional organizations.
Organization change logs	No	No	Yes	Organization-wide > Organization-wide manage > Change log	
Login IPv4 address ranges for an organization	No	No	Yes	Organization-wide > Organization-wide manage > Organization settings	
Number of admin accounts	5	8	Unlimited	Organization-wide > Administrators	
Number of cloud authentication accounts	50	100	Unlimited	Organization-wide > Organization-wide manage > Cloud authentication	
Cloud authentication users with VLAN attribute	No	No	Yes	Organization-wide > Organization-wide manage > Cloud authentication (Account type: User)	
Cloud Authentication DPPSK account type	No	No	Yes	Organization-wide > Organization-wide manage > Cloud authentication (Account type: DPPSK)	
Site-wide settings sync	No	No	Yes	Organization-wide > Organization-wide manage > Configuration management	
Switch settings clone	No	No	Yes	Organization-wide > Organization-wide manage > Configuration management	
Site/Switch configuration backup and restore	No	No	Yes	Organization-wide > Organization-wide manage > Configuration management	
Configuration templates	No	No	Yes	Organization-wide > Organization-wide manage > Configuration templates	At the time of writing, gateway and mobile router configuration templates are not available

Table 4 NCC License Tier Differences (continued)

FEATURE	BASE	PLUS	PROFES SIONAL	LOCATION	NOTES
Add client to block list/allow list	No	No	Yes	Site-wide > Clients	
WiFi aid	No	No	Yes	Site-wide > Clients	
Connection log	No	No	Yes	Site-wide > Clients	
Site-wide topology	No	Yes	Yes	Site-wide > Topology	
Summary report email & schedule	No	Yes	Yes	Site-wide > Summary report Site-wide > Monitor > Access point / Switch / Security gateway / Firewall > Summary report	
Time period for summary reports	24 hours	7 days	365 days	Site-wide > Summary report Site-wide > Monitor > Access point / Switch / Security gateway / Firewall > Summary report	
Time period for device monitoring statistics	24 hours	7 days	365 days	Site-wide > Devices > Access point / Switches / Security router / Security gateway / Firewall > [Select Access Points / Switches]	
Time period for client monitoring statistics	24 hours	7 days	365 days	Site-wide > Clients > [Select client]	
Time period for device event log access	24 hours	7 days	365 days	Site-wide > Monitor > Site features logs	
Export data to CSV/XML file	No	No	Yes	All monitoring pages with tables	
Open API	No	No	Yes	All monitoring information	
API access (for example, DPPSK third-party integration)	No	No	Yes	Site-wide > Configure > Site settings	
Smart email alerts	Yes	Yes	Yes	Site-wide > Configure > Alert settings	
Per-device firmware upgrade schedules	No	Yes	Yes	Site-wide > Configure > Firmware management	
Org-wide firmware upgrade	No	Yes	Yes	Organization-wide manage > Firmware management	
Priority support requests from NCC portal or Nebula app	Yes	No	Yes	Help center > Support request	

Table 4 NCC License Tier Differences (continued)

FEATURE	BASE	PLUS	PROFES SIONAL	LOCATION	NOTES
Web chat with tech support directly from NCC portal	No	No	Yes	Website footer	
Maximum uploaded photos from phone through NCC app	1	1	5	Site-wide > Devices > [select Nebula Device for example, Access points] > Photo	
Remote CLI access	No	No	Yes	Site-wide > Devices > Access Points / Security gateway / Firewall [Select AP] Live tools	
Wireless health monitor and report	No	No	Yes	Site-wide > Monitor > Access points > Wireless health	
Programmable SSID/PSK	No	No	Yes	Site-wide > Configure > SSID settings	
Dynamic Personal Pre-Shared Key (DPPSK)	No	No	Yes	Site-wide > Configure > Access points > SSID advanced settings	
Vouchers as WiFi authentication credentials	No	Yes	Yes	Site-wide > Monitor > Access points > Vouchers Site-wide > Configure > Site settings Site-wide > Configure > Access points > SSID advanced settings Site-wide > Configure > Access points > Captive portal customization > [portal theme]	
RADIUS accounting for captive portal	No	No	Yes	Site-wide > Configure > Access points > SSID advanced settings	
Customize RADIUS NAS ID	No	No	Yes	Site-wide > Configure > Access points > SSID advanced settings	
Customize portal redirect URL parameter	No	No	Yes	Site-wide > Configure > Access points > Captive portal customization	

Table 4 NCC License Tier Differences (continued)

FEATURE	BASE	PLUS	PROFES SIONAL	LOCATION	NOTES
Smart steering per AP	No	No	Yes	Site-wide > Configure > Access points > Radio settings > [Edit the selected Access Point]	
Bandwidth Management by VLAN interface	No	No	Yes	Site-wide > Configure > Access points > Traffic shaping	Currently supported on NWA1123ACv3, WAC500, WAC500H, NWA110AX, NWA210AX, WAX510D, WAX610D, WAX630S, WAX650S
AP traffic log	No	No	Yes	Site-wide > Configure > Site settings	
IPTV report	No	No	Yes	Site-wide > Monitor > Switches > IPTV report	
Advanced IGMP	No	No	Yes	Site-wide > Configure > Switches > Advanced IGMP	
Switch Surveillance Monitoring with ONVIF	No	No	Yes	Site-wide > Monitor > Switches > Surveillance	Currently only supported on GS1350 series switches
Extended PoE range	Yes	Yes	Yes	Site-wide > Configure > Switches > Switch ports > [select port]	Currently only supported on GS1350 series switches
Automatic PoE device recovery	No	Yes	Yes	Site-wide > Configure > Switches > Switch ports > [select port]	
Port bandwidth control	Yes	Yes	Yes	Site-wide > Configure > Switches > Switch ports > [edit the selected port]	
Vendor ID-based VLAN	No	Yes	Yes	Site-wide > Configure > Switches > Switch settings	
IP interface and static route	No	No	Yes	Site-wide > Configure > Switches > IP & routing	
Remote SSH in Live tools	No	No	Yes	Site-wide > Devices > Switches: Switch Details > Live tools > Remote SSH	

Table 4 NCC License Tier Differences (continued)

FEATURE	BASE	PLUS	PROFES SIONAL	LOCATION	NOTES
IP Source Guard	No	No	Yes	Site-wide > Configure > Switches > Switch settings	
Nebula cloud authentication	Yes	Yes	Yes	Site-wide > Configure > Switches > Authentication	
Cloud Stacking	No	No	Yes	Site-wide > Configure > Switches > Stacking management	
Time period for security service (AV/App Patrol/CF/IDP/ NSS) analysis report	24 hours	7 days	365 days	Site-wide > Monitor > Security gateway > NSS analysis report	Requires Nebula Security Gateway (NSG) Nebula Security Service (NSS) – Security Pack (SP) license
Traffic log archiving	No	No	Yes	Site-wide > Monitor > Firewall > SecuReporter	
VPN topology with traffic usage	No	No	Yes	Organization-wide > Organization-wide manage > VPN Orchestrator	
Smart VPN	No	No	Yes	Organization-wide > Organization-wide manage > VPN Orchestrator	
VPN provision script email	No	No	Yes	Site-wide > Configure > Security gateway / Firewall > Remote access VPN (L2TP/IPSec)	
Collaborative Detection & Response (CDR) with automatic respond action	No	No	Yes	Site-wide > Configure > Collaborative detection & response	Requires Security Firewall UTM Security Pack license
Smart mesh with manual select of mesh controller (root) and automatic fall back to auto mode	Yes	Yes	Yes	Site-wide > Devices > Access points	Currently supported on NWA110AX, NWA210AX, WAX510D, WAX610D, WAX630S, WAX650S, NWA1123ACv3, WAC500, and WAC500H APs
Traffic logs to SecuReporter	No	No	Yes	Site-wide > Configure > Site settings	Also available for Gold Security Pack, UTM Security Pack, and Content Filter Pack

Table 4 NCC License Tier Differences (continued)

FEATURE	BASE	PLUS	PROFES SIONAL	LOCATION	NOTES
Home networking	Yes	Yes	Yes	Site-wide > Devices > Mobile Router > Configuration	Currently only supported on NR5101, FWA510 and LTE3301-PLUS
Cellular IP Passthrough	No	No	Yes	Site-wide > Devices > Mobile Router > Configuration	Currently only supported on NR7101 and LTE7461
Remote configurator in Live tools	No	No	Yes	Site-wide > Devices > Mobile Router > Live tools > Remote configurator	Requires LTE or NR cellular 5G indoor or outdoor router running the latest firmware
Client device heartbeat	No	No	Yes	Site-wide > Devices > Mobile Router > Client device heartbeat	Currently only supported on FWA510 and LTE3301-PLUS

Organization License Grace Period

If a Professional or Plus license expires while assigned to a Nebula Device or you add an unlicensed Nebula Device to the organization, you have a 15-day grace period during which the organization's license remains active. During the grace period, you must perform one of the following actions:

- Assign a valid Plus or Professional license to the unlicensed Nebula Device.
- Remove the unlicensed Nebula Device from the organization.

If the expired Nebula Device is still in the organization after the grace period elapses, the organization automatically downgrades to the Base tier.

The grace period status can be any of the following:

- Near Expiring: Any Nebula Devices with licenses expiring within 15 days before the grace period has started.
- License Expired: Any Nebula Devices with expired licenses after the grace period.
- Insufficient Licenses: Any Nebula Devices that are unlicensed, or lower tier licensed Nebula Devices added during the grace period.

Note: 'Your organization is ready to upgrade to Plus/Pro. Click [upgrade now](#) to proceed.' banner message appears when NCC detects that you have valid Plus or Professional tier licenses that are unused.

Likewise, the notification 'Upgrade now. Your organization is eligible for an upgrade! You can now directly activate the Plus or Pro Pack to unlock advanced features. [Upgrade now](#).' appears.

Click the hyperlink on the banner or notification bell to go to the Organization-wide > License & inventory > Overview screen and click Upgrade now.

Note: When NCC detects that the current organization is ineligible after you click Upgrade now, the message 'Warning. Some devices do not have the proper licenses, so the upgrade cannot be performed. Please complete the "Purchase License" process before proceeding.' appears. You will be redirected to the license purchase screen.

1.1.5.3 General License Information

License Validity

Each license has a validity period, for example: 1 month, 6 months, 1 year, 2 years. After being activated, a license also has an expiry date, which is calculated as Activation Date + Validity Period. For example, if a 1-year license is activated on January 1st 2022, then its expiry date is January 1st 2023.

Note: A license cannot be deactivated. An activated license continues counting towards its expiry date, even if its licensed service is deactivated.

Bundled and Renewal Licenses

A bundled license is a license that is included when you purchase a Nebula Device. The bundled license is automatically assigned to the purchased Nebula Device when you add the Nebula Device to NCC.

A renewal license is a license purchased separately from a Nebula Device as a license key, from Zyxel or a third-party reseller. To assign a renewal license to a Nebula Device, go to Organization-wide > License & inventory > License and then click +Add. See [Section 12.2.7 on page 722](#) for more information.

1.2 Getting Started

You can perform network management with the NCC using a web browser. Use a browser that supports HTML5, such as Microsoft Edge, Mozilla Firefox, or Google Chrome. The recommended browser is Google Chrome.

View the browser in full screen mode to display the NCC portal properly.

1.2.1 Connect Nebula Managed Devices

Connect your Nebula managed devices (such as the NAP102 or the NSW100-28P) to your local network. Your local network must have Internet access. See the corresponding Quick Start Guides for hardware connections.

1.2.2 Access the NCC Portal

Go to the NCC portal website.

- 1 Enter <http://nebula.zyxel.com> in a supported web browser. Click Get Started.



- 2 To log in using your Google Account, click Continue with Google and then click Sign In.
Or, to log in using your Apple Account, click Continue with Apple and then click Sign In.
Or, to log in using Microsoft's cloud-based identity and access management service, click Continue with Microsoft Entra ID.
Or, enter the Zyxel Account Email and Password, and then click Sign In.


Note: To log into the NCC with your Zyxel Account., click Create an account with your existing email address if you do not have a Zyxel Account.

Note: The Zyxel Account does not allow account creation using disposable email addresses.

Note: When you log in using a social account (Google or Apple) but the email address was registered with a Zyxel Account, the system will prompt you to perform a login account transfer. You must agree to this before proceeding with the social account login. After the login account transfer, you can only log in using the social account method, not the Zyxel Account method.


Note: Two-factor authentication, changing password, and forget password for social account logins are managed on your social account settings.

Note: Organization-wide two-factor authentication is not allowed when you log in using a social account (Google or Apple).

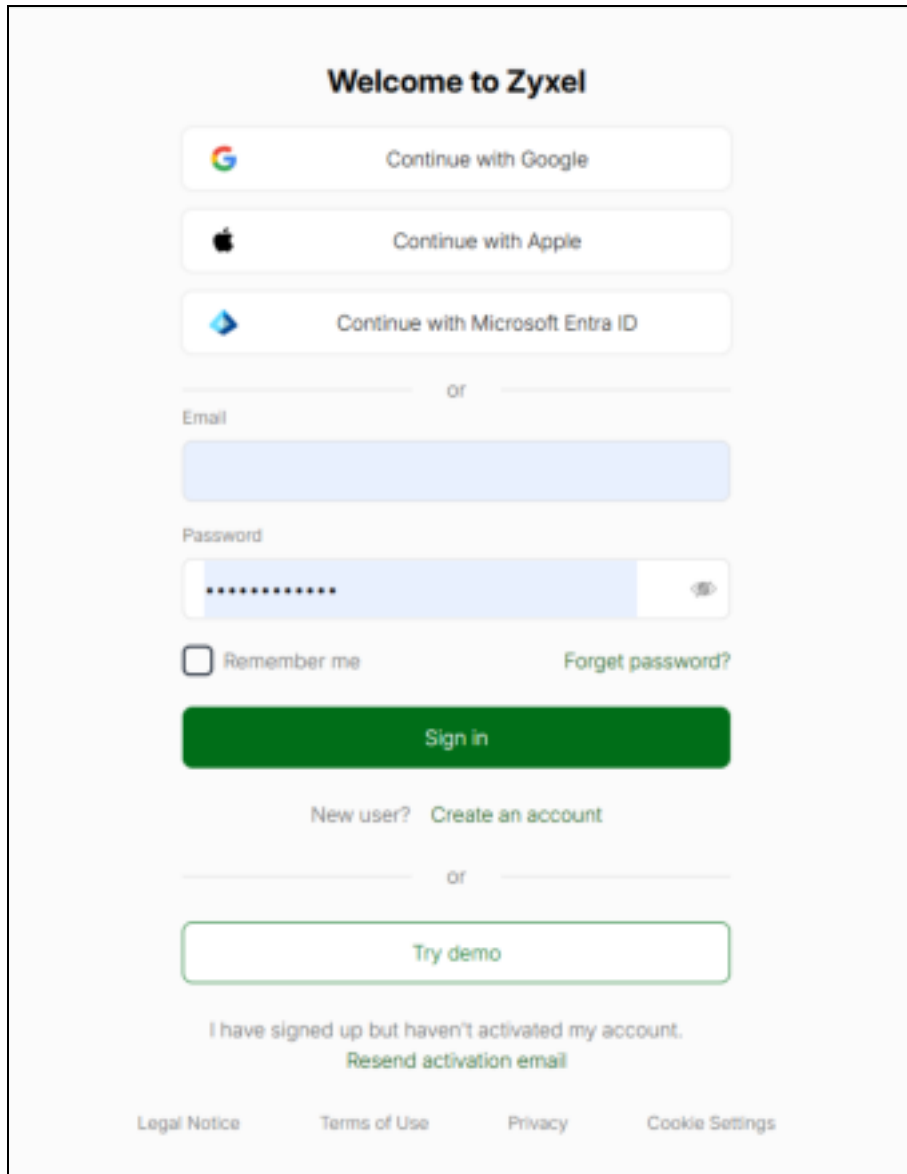
The image shows a login page titled "Welcome to Zykel". It features three social login buttons: "Continue with Google" (with the Google logo), "Continue with Apple" (with the Apple logo), and "Continue with Microsoft Entra ID" (with the Microsoft logo). Below these is a horizontal line with the word "or" in the center. Underneath is an "Email" label followed by a light blue input field. Below the email field is a "Password" label followed by a light blue input field with a masked password "*****" and a toggle icon on the right. Below the password field is a checkbox labeled "Remember me" and a link "Forget password?". A large green "Sign in" button is positioned below the password field. Below the button is the text "New user? Create an account". Another horizontal line with "or" in the center follows. Below this is a green-outlined button labeled "Try demo". At the bottom of the main content area, there is a link "I have signed up but haven't activated my account. Resend activation email". At the very bottom, there are four links: "Legal Notice", "Terms of Use", "Privacy", and "Cookie Settings".

Note: Click Try demo to enter the Demo Site. The Demo Site allows you to explore the NCC Portal.


- 3 Click Create organization to create a new organization. If this is the first time you have logged into NCC, proceed to step 9.
If you have more than one organization, click a row to select the organization you want to manage.

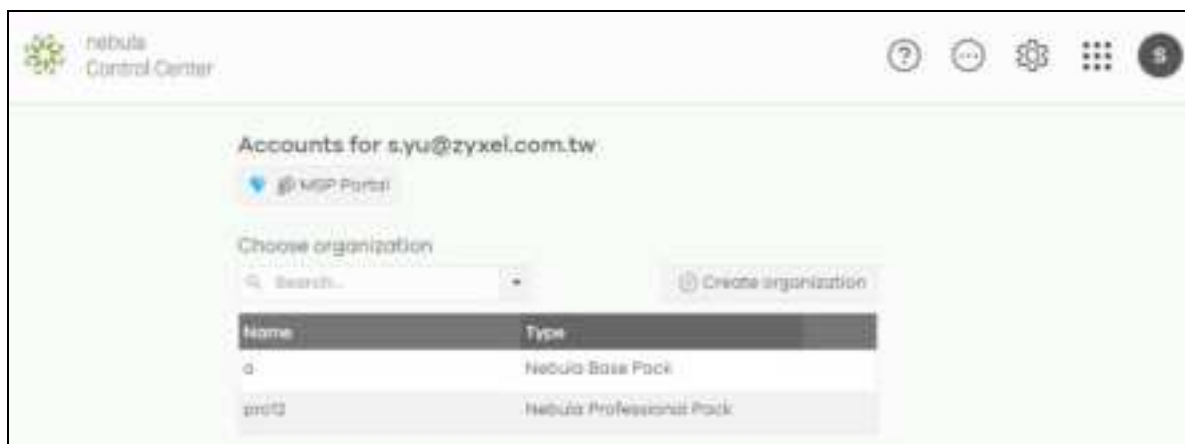

- 4 The NCC supports two-factor authentication (2FA) to add a second layer of security to your account. Click Manage account to enable Two-factor authentication on the following page. Otherwise, you can skip 2FA and go to step 9 directly.

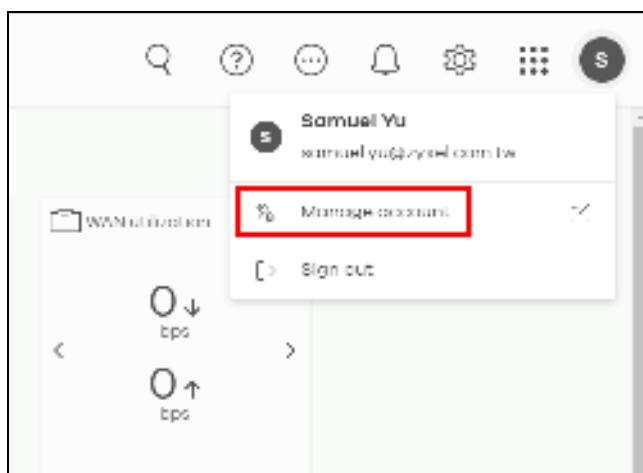

- 5 Click Two-factor authentication and then click the switch to enable Two-factor authentication.

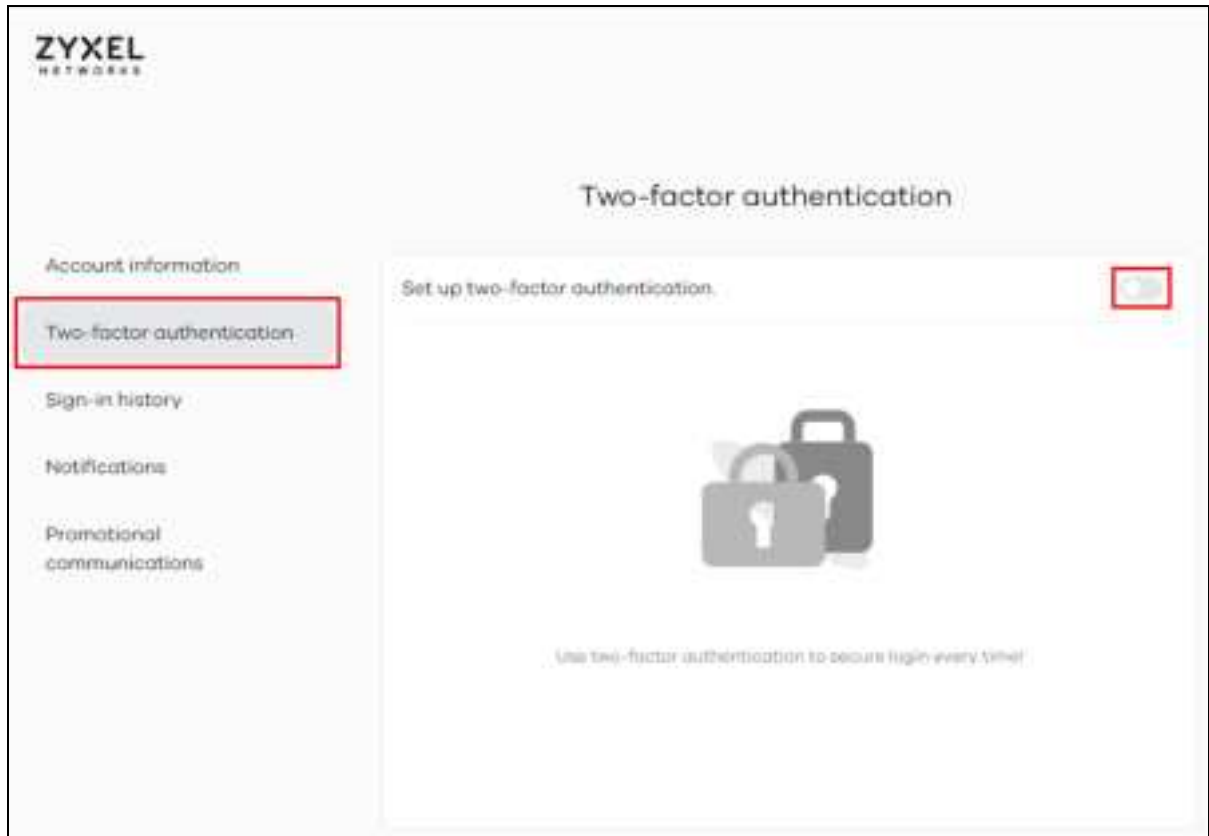


- 6 The following screen appear. Activate the two-step verification service using the Google Authenticator app or your email address. If you select Google Authenticator, install the app on your smartphone and scan the QR code on the NCC web screen to get a 6-digit one-time code. Then enter the code and click Verify to authenticate your identity.




Alternatively, click Email authentication to use your email to authenticate.


If you select Email authentication, an email is sent to your Zyxel Account's email address. Click the Enable 2FA link in the email.

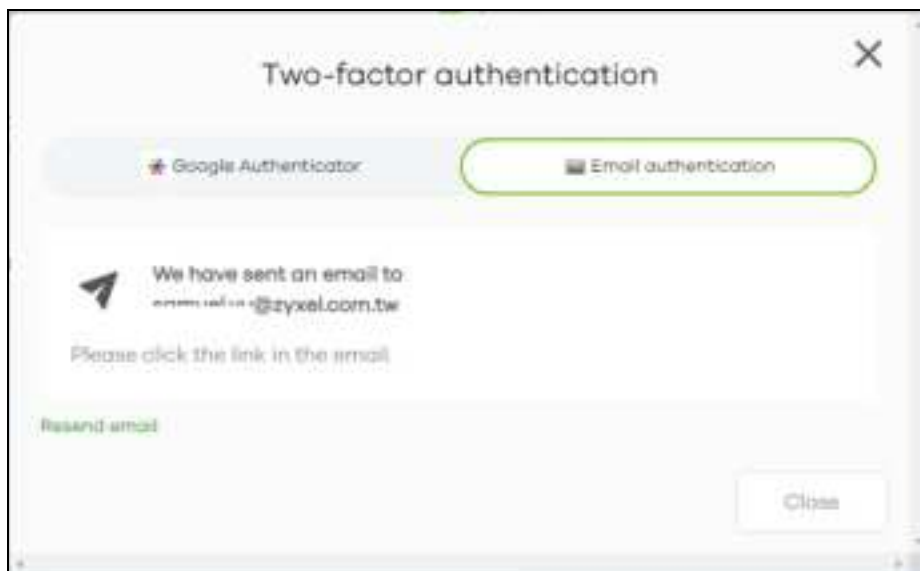

- 7 Click OK to confirm email authentication the next time you need to log in again.

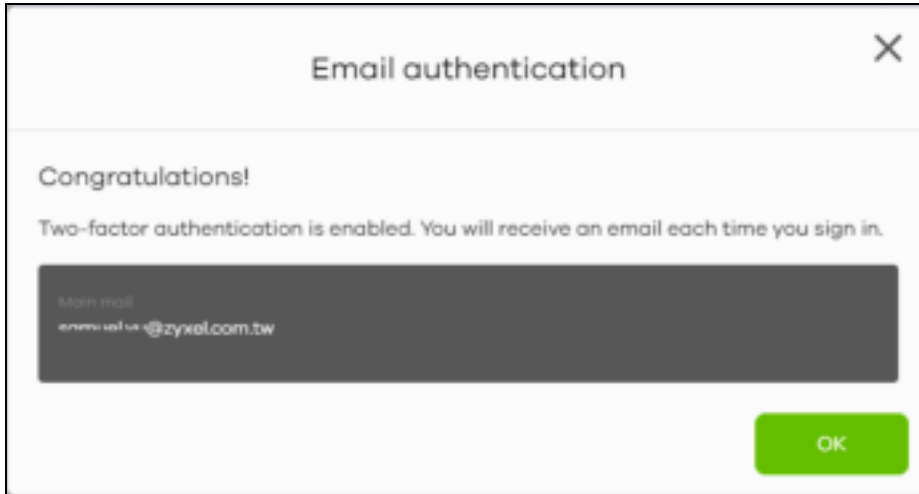

- 8 To re-log in Nebula after the Two-factor authentication is enabled. Go to Applications > Nebula and then click the Sign In link on the Zyxel Account Login Verification email to log in your Nebula account.

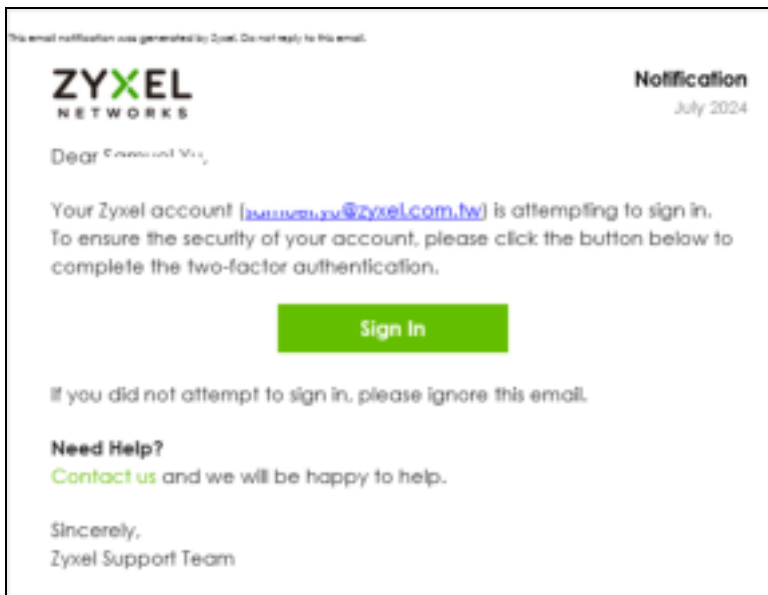


- 9 If this is the first time you have logged into NCC, the setup wizard welcome screen displays. You need to create your organization and sites, register Nebula Devices and associate them with a site. See [Chapter 2 on page 68](#) for how to use the wizard.



1.2.3 Access the Nebula SD-WAN (Orchestrator) Portal

Go to the Nebula SD-WAN (Orchestrator) web portal to configure ZyWALL VPN devices. This is only available if you have purchased the SD-WAN license for Orchestrator Management.

- 1 Enter <https://go.sd-wan.nebula.zyxel.com> in a supported web browser. Click Sign in.

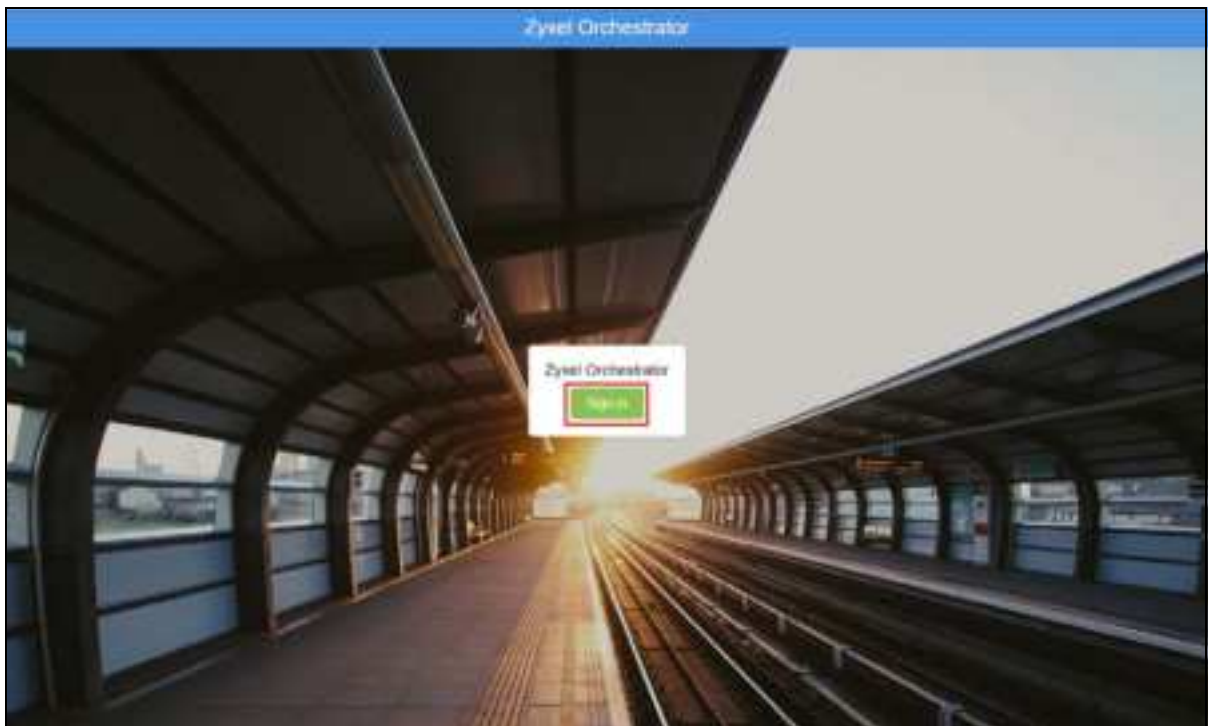


- 2 To log in using your Google Account, click Continue with Google and then click Sign In.
Or, to log in using your Apple Account, click Continue with Apple and then click Sign In.
Or, to log in using Microsoft's cloud-based identity and access management service, click Continue with Microsoft Entra ID and then click Sign In.
Or, enter the Zyxel Account Email and Password, and then click Sign in.

Note: To log into the NCC with your Zyxel Account., click Create an account with your existing email address if you do not have a Zyxel Account.

Note: The Zyxel Account does not allow account creation using disposable email addresses.

Note: When you log in using a social account (Google or Apple) but the email address was registered with a Zyxel Account, the system will prompt you to perform a login account transfer. You must agree to this before proceeding with the social account login. After the login account transfer, you can only log in using the social account method, not the Zyxel Account method.

Note: Two-factor authentication, changing password, and forget password for social account logins are managed on your social account settings.

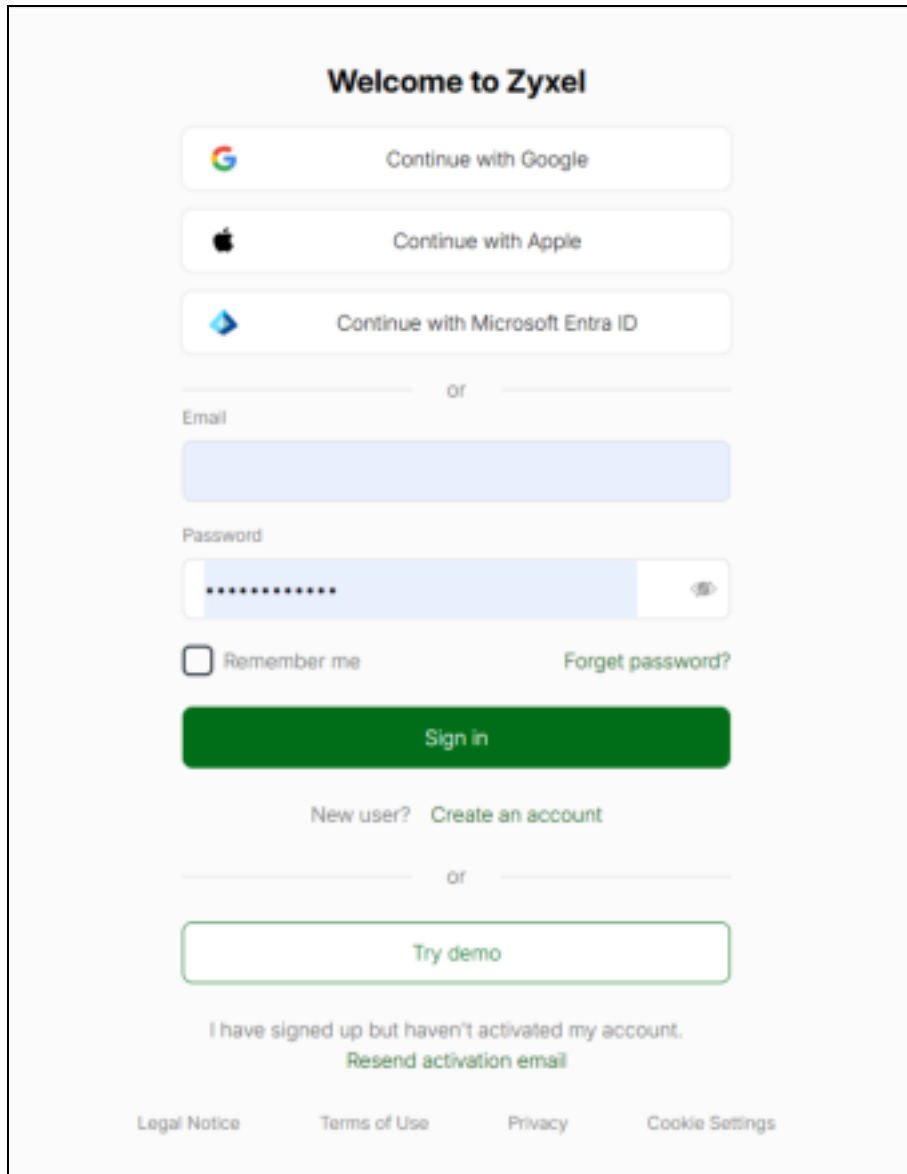

The image shows a web interface for Zykel. At the top, it says "Welcome to Zykel". Below this are three buttons for social login: "Continue with Google", "Continue with Apple", and "Continue with Microsoft Entra ID". These are separated by a horizontal line with the word "or" in the center. Below the line are two input fields: "Email" and "Password". The "Password" field has a toggle icon on the right. Below the "Password" field is a checkbox labeled "Remember me" and a link "Forget password?". Below these is a large green "Sign in" button. Below the "Sign in" button is a link "New user? Create an account". This is followed by another horizontal line with the word "or" in the center. Below the line is a button labeled "Try demo". Below the "Try demo" button is a link "I have signed up but haven't activated my account. Resend activation email". At the bottom, there are four links: "Legal Notice", "Terms of Use", "Privacy", and "Cookie Settings".

Note: Click Try demo to enter the Demo Site. The Demo Site allows you to explore the Nebula SD-WAN (Orchestrator) portal.

- 3 Read the GDPR Statement and click Agree to enter the Nebula SD-WAN (Orchestrator) portal.



Figure 2 Nebula SD-WAN (Orchestrator)



You can click Control Center to go to the NCC platform.

1.3 NCC Portal Overview

The following summarizes how to navigate the Nebula web site from the Dashboard screen. The NCC portal screen is divided into these parts:

- D – Navigation Panel
- E – Main Screen
- F – Chatbot AI

1.3.1 Title Bar

The title bar provides common links and is always at the top of NCC.

Figure 4 NCC Title Bar



The icons provide the following functions.

Table 5 NCC Title Bar


LABEL	DESCRIPTION
	Click this to expand or collapse the navigation panel. This allows you to show or hide the icon's label.
nebula Control Center	Click this to show the Dashboard screen.
Group	This shows the name of the groups you are managing, if your NCC account has an MSP license. Click to choose another group if you have multiple groups. Note: To create a group, you must be the owner of two or more Pro pack organizations that are not currently assigned to a group, as discussed in Section 13.1.1 on page 782.
Organization	This shows the name of the organization you are managing. Click to choose another organization, access the MSP portal or create a new organization. Note: If you did not enable Two-factor authentication in the Account > Manage account, the organization name with two-factor authentication enabled will be grayed out.
Site	This shows the name of the site you are managing. Click to choose another site if you have multiple sites in the selected organization.
Search	Use this to search for managed Nebula Devices by model, description or MAC address.
Help	Click this to view the documentation for NCC and NCC-compatible devices. For example, to view the Security Firewall Series configuration and hardware information, locate the documents under Security Appliance.
More	Click this to view your account information, login history and active sessions. You can also view your Nebula Devices and manage NCC licenses linked to your account.
Notification	Click this to view announcements such as: • New features announcements • NCC scheduled maintenance and service disruption announcements • Nebula Device offline/online status updates • Firmware upgrades availability • Eligibility to upgrade to Professional or Plus tier license • WiFi Aid alerts, click this to go to Site-wide > Clients > WiFi Aid screen. A red dot on the icon signifies an unread announcement(s).
Settings	Click this to select a display language for the screens, or change the theme between dark and light mode.

Table 5 NCC Title Bar (continued)

LABEL	DESCRIPTION
Applications	Click this to open a list of links to different Zyxel sites, such as myZyxel, Nebula, SecuReporter, Astra, Circle, Marketplace, Store, Education, and the Community.
Account	Click this to manage your NCC account settings, or to sign out of NCC.

Note: If the browser window is too narrow, the layout of the title bar changes and some settings are hidden under the More menu.

Figure 5 Layout of the Title Bar

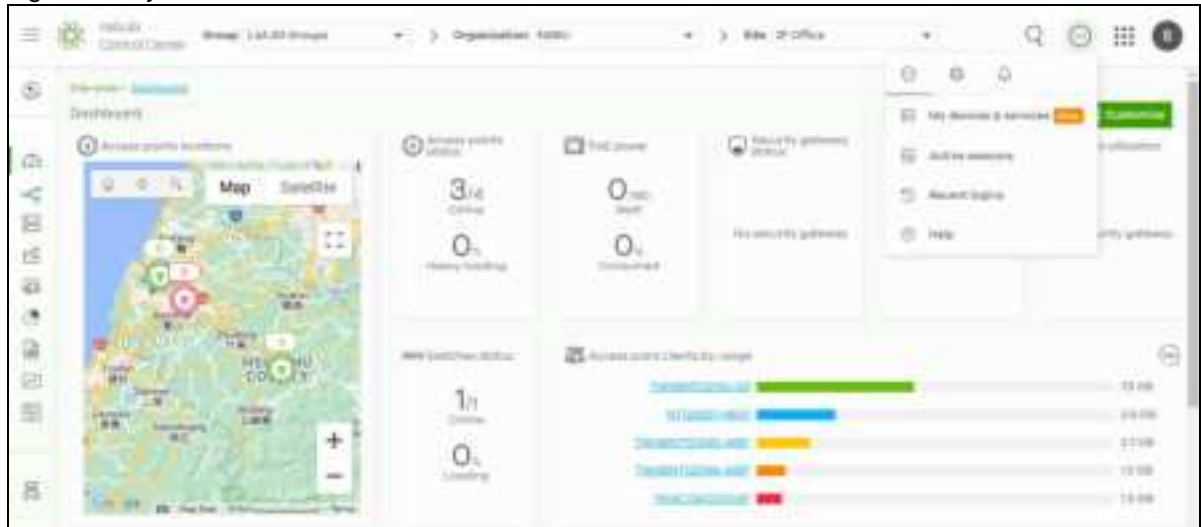

1.3.1.1 Site/Organization/Group

Select the site, organization and group that you want to manage.

- If you select a group, you can only select organization in that group. Select List all Groups from the Group drop-down list to view all organizations and group.
- If you have multiple organizations, select MSP Portal from the Organization drop-down list box to view your organization summary (see [Section 14.2 on page 796](#)).

Note: You need to have an MSP license to view the MSP Portal.

- If you need to have more organizations, select Create organization from the Organization drop-down list box to create a new one (see [Section 1.4 on page 62](#)).
- If you need to have more sites, select Create site from the Site drop-down list box to create a new one (see [Section 1.6 on page 64](#)).

Figure 6 NCC Title Bar: Group/Organization/Site



1.3.1.2 Search

Click this to search for NCC-managed devices by model, description or MAC address. You can enter partial search criteria.


Figure 7 Search



1.3.1.3 More

Click the More icon at the top right-hand corner of the Dashboard screen to view and configure account settings.

Figure 8 More

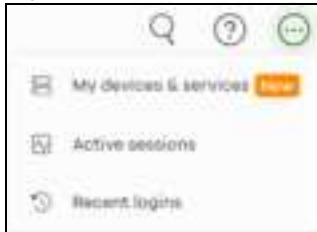

The following table describes this menu.

Table 6 Login Account Menu

LABEL	DESCRIPTION
Profile	This shows account information, such as name, address, and phone number.
My devices & services	This shows a list of all Nebula Devices in NCC that have your login account as the owner. You can filter the list of Nebula Devices by name, serial number, model, or organization. You can also register licenses to your account, such as an MSP license.
Active sessions	Shows all active web browser sessions for this login account. Click End Session to close a session and force the user to log into NCC again in that browser.
Recent logins	Shows the login history for this user account, including IPv4 address, location, and time.

Click My devices & services and the following screen appears. Click Devices to view all Nebula Devices of the user account which can be managed by NCC, MSP ID and organization notes, and/or all Nebula Devices not registered to this user account but with a Full (Delegated) administrator privilege. See the table on MSP cross-org manage > MSP cross-org manage > Admins & teams > Admins in [Section 14.3.2 on page 800](#) for details on the organization privileges. See the table on MSP cross-org manage > MSP cross-org manage > MSP portal in [Section 14.2 on page 796](#) for details on the MSP ID and organization notes.

Figure 9 Devices

Home > My devices & services

My devices & services

The list of all Hubeis devices and services that have been owned by your account

Devices Services Purchase history NCC OpenAPI Key

0 Search 34 devices Export

Model	MAC address	Serial number	Name	Registration	File	Device owner	Device type
HCN 5040E	View details	202006100000		View details	View details	99	u@yvelcom.cn Security router
HCN50-40P	View details	202006100000	HCN50-40P	View details	View details	99	u@yvelcom.cn Switch
HWAZ200A-4E	View details	202006100000	HWAZ200A-4E	View details	View details	99	u@yvelcom.cn Access point
USS FLEX 100H	View details	202006100000	USS FLEX 100H	View details	View details	99	u@yvelcom.cn Firewall
USS FLEX 100	View details	202006100000	USS FLEX 100	View details	View details	99	u@yvelcom.cn Firewall
USS LITE 600A	View details	202006100000	USS LITE 600A	View details	View details	99	u@yvelcom.cn Security router
USS FLEX 500A	View details	202006100000	USS FLEX 500A	View details	View details	99	u@yvelcom.cn Firewall
USS FLEX 100	View details	202006100000	USS FLEX 100	View details	View details	99	u@yvelcom.cn Firewall
HWAZ200A-4E	View details	202006100000	HWAZ200A-4E	View details	View details	99	u@yvelcom.cn Access point
HWAZ200A-4E	View details	202006100000	HWAZ200A-4E	View details	View details	99	u@yvelcom.cn Access point

Page 1 of 2 Results per page: 10

Click Services to view and configure the start dates, end dates, registered dates, activated dates and statuses of an MSP license, purchase or register a license key, and export the list of MSP licenses in CSV/XML format.

Figure 10 Services

Home > My devices & services

My devices & services

The list of all Hubeis devices and services that have been owned by your account

Devices Services Purchase history NCC OpenAPI Key

Actions 0 Search 5 licenses Purchase with license Register Export

License key	Service description	Effective from	Expiration date	Status	Action	Registered date	Activation date
☐ LC-MSP-FW-202007020000	Hubeis MSP Firewall License, FW	2020-07-01	2020-07-01	Expired		2020-07-01	2020-07-01
☒ LC-MSP-FW-202007020000	Hubeis MSP Firewall License, FW	2020-07-02	2020-07-02	Activated	View details	2020-07-02	2020-07-02

Click Purchase history to view the order ID, purchase date, number of licenses, statuses of purchased MSP license(s), and export the information in CSV / XML format.

Figure 11 Purchase History




Click NCC OpenAPI Key tab to manage your API key. An API key is required by third-party for access to information and logs from NCC. Click Generate to create a key. Click Delete to invalidate the key. Then, click Generate again to create a new key.

Figure 12 NCC OpenAPI Key (Generate Key)




Figure 13 NCC OpenAPI Key (Delete Key)

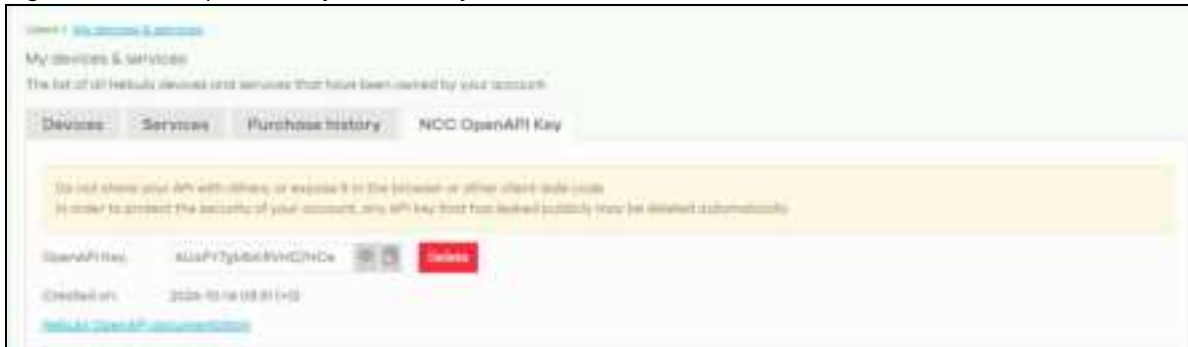

Click Nebula OpenAPI documentation to search for available Nebula OpenAPI commands. For example, Get Groups, Get Organizations From A Group, Get Organizations, and so on.


Figure 14 Nebula OpenAPI Documentation

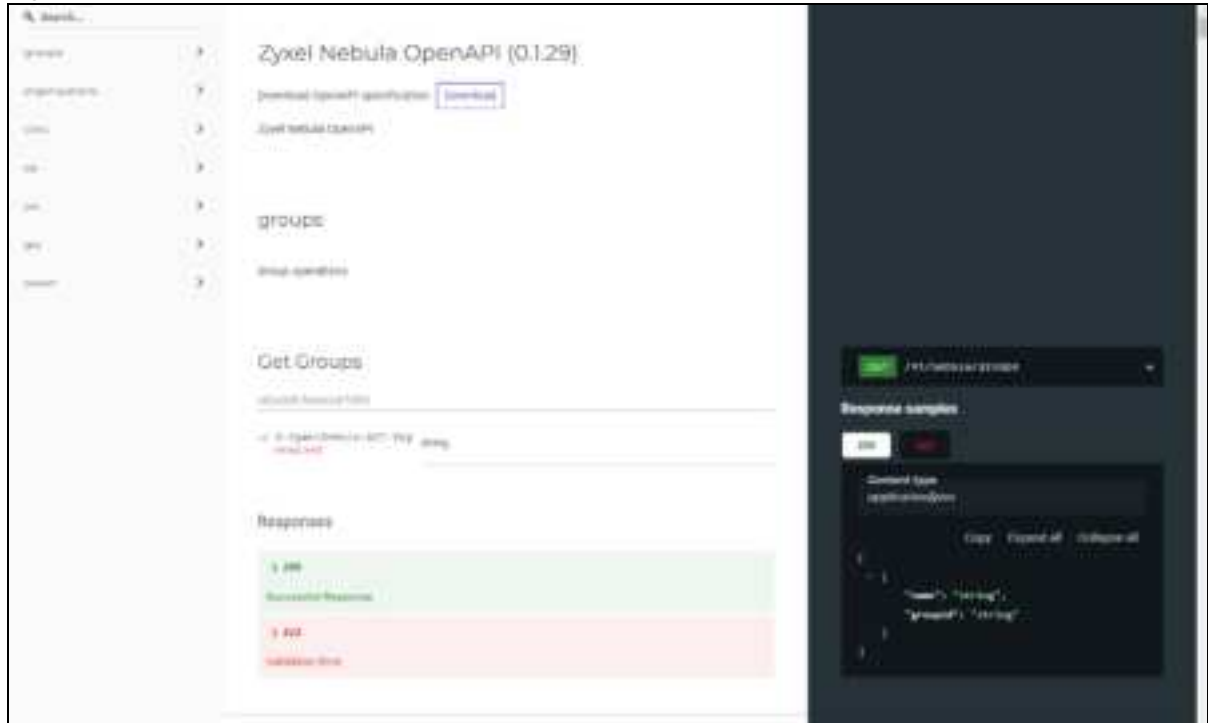

1.3.1.4 Notifications

Click this alert icon to view log messages for the selected site.


Figure 15 NCC Notification

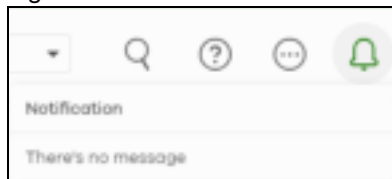

1.3.1.5 Settings

Click the Settings icon at the top right-hand corner of the screen to view and configure NCC settings.

Figure 16 Settings

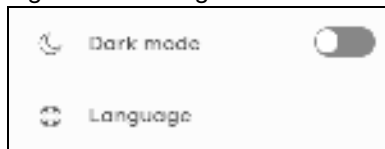


The following table describes this menu.

Table 7 Settings Menu

LABEL	DESCRIPTION
Dark mode	Click this to apply a black background and white text to the white background and black text on the NCC screen.
Language	Select the NCC display language. At the time of writing, the following languages are available: English, Chinese, Japanese, German, Russian, French.


Figure 17 Dark Mode

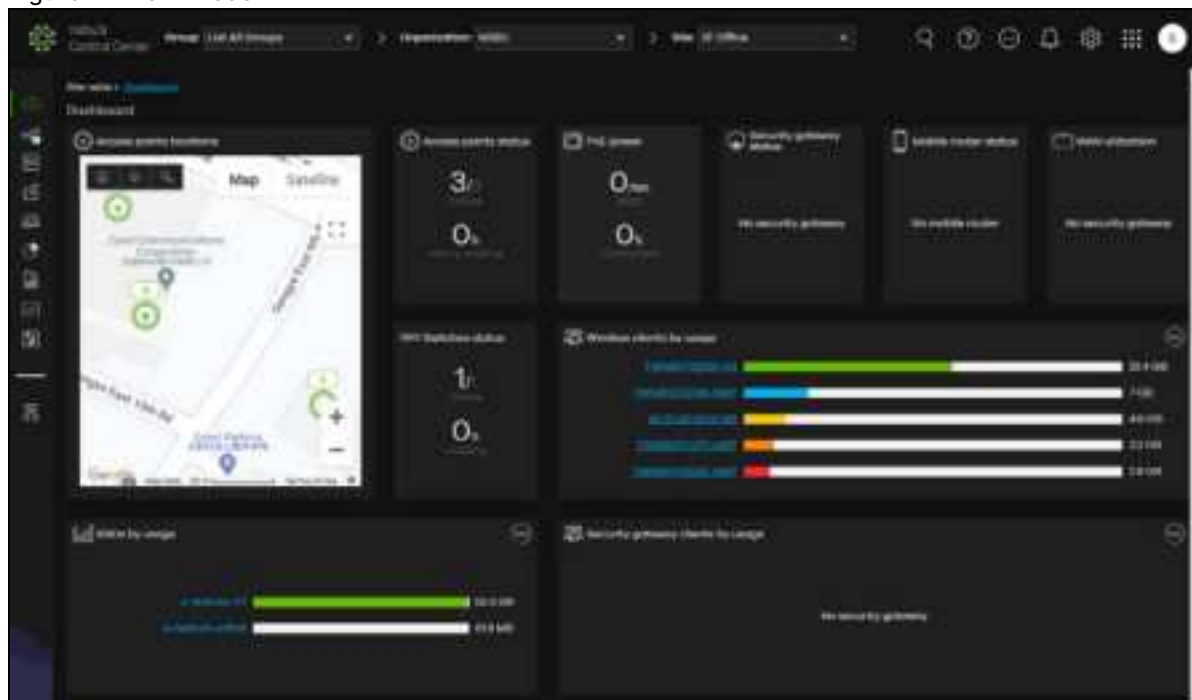

1.3.1.6 Applications

Click this to display a list of related Zyxel Account links.

Figure 18 Related Zyxel Account Links

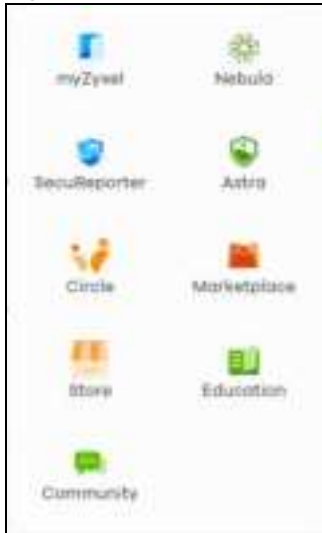

1.3.1.7 Account

Click the Account icon at the top right-hand corner of the screen to view and configure Zyxel Account settings.

Figure 19 Account



The following table describes this menu.

Table 8 Account Menu

LABEL	DESCRIPTION
Manage account	Click this to edit your account settings at Zyxel.
Sign out	Sign out of the Zyxel Account.

Account Information

Click Account information to add/change your account information and the login password.

Figure 20 Account Information

The screenshot displays the 'Account information' menu. On the left is a sidebar with links: 'Account information' (highlighted), 'Two-factor authentication', 'Sign-in history', 'Notifications', and 'Promotional communications'. The main content area is divided into two sections: 'Profile' and 'Password', each with 'Cancel' and 'Save' buttons.

Profile Section:

- First name ***: Input field containing 'S'.
- Last name ***: Input field containing 'Y'.
- Email ***: Input field containing 's@zyxel.com.tw'.
- Country/Region ***: Dropdown menu showing 'Taiwan' with a flag icon.
- Contact person**: Input field containing 'name@example.com'. Below it is a note: 'An additional contact to receive system notification.'

Password Section:

- Current password ***: Input field with masked characters (dots) and a toggle icon.
- New password ***: Input field with a toggle icon. Below it is a note: 'Password must be at least 8 characters long and include at least one uppercase letter (A-Z), one lowercase letter (a-z), one number (0-9), and one special character (!@#%&'*~<.>+<\/> combinations.'
- Confirm new password ***: Input field with a toggle icon.

The following table describes this menu.

Table 9 Account Information Menu

LABEL	DESCRIPTION
Account information	Click Edit profile to add/change the following account information:
First name Last name	Enter your first and last names. Both names must consist of 1 – 64 alphanumeric characters.
Email	Enter the email address you use to log in to the Zyxel Account. Note: The Zyxel Account does not allow disposable email addresses (for example, example@zevars.com). A disposable email is an email address that is temporary. It expires after a set amount of time or a set number of uses.
Country/Region	Select where you are located.
Contact person	Enter another person's email address to receive notifications about your Nebula Device.
Password	Click Change password to change your current password.
Current Password	Enter the current password you use to log in to the Zyxel Account.


Table 9 Account Information Menu

LABEL	DESCRIPTION
New Password	Enter the New Password. Use a minimum of 8 characters, including 0–9 a–z A–Z `~!@#\$%&*(_+ -={} [];'"/.<> ?).
Confirm new password	Enter the New Password to confirm.
Cancel	Click Cancel to exit this screen without saving.
Save	Click Save to save your changes back to the Zyxel Account.

Two-factor Authentication

Click the Set up two-factor authentication switch to the right to add a second layer of security to your Zyxel Account.


Figure 21 Two-factor Authentication

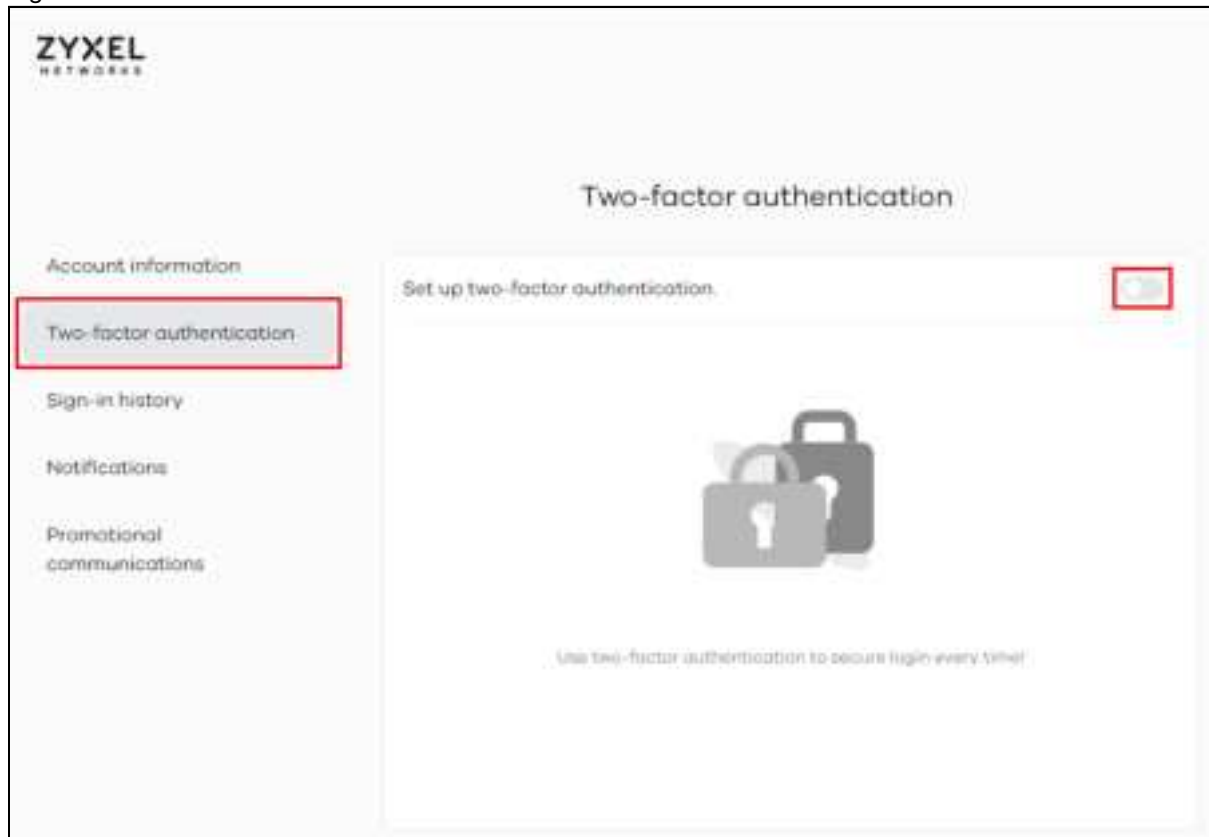

Sign-in History

Use the Sign-in history screen to view a log of the last 10 sign-ins to your Zyxel Account. Click See more history to view a log of sign-ins to your Zyxel Account for up to the last 60 days. Click the Sign out icon to log out of your Zyxel Account session.

Figure 22 Sign-in History

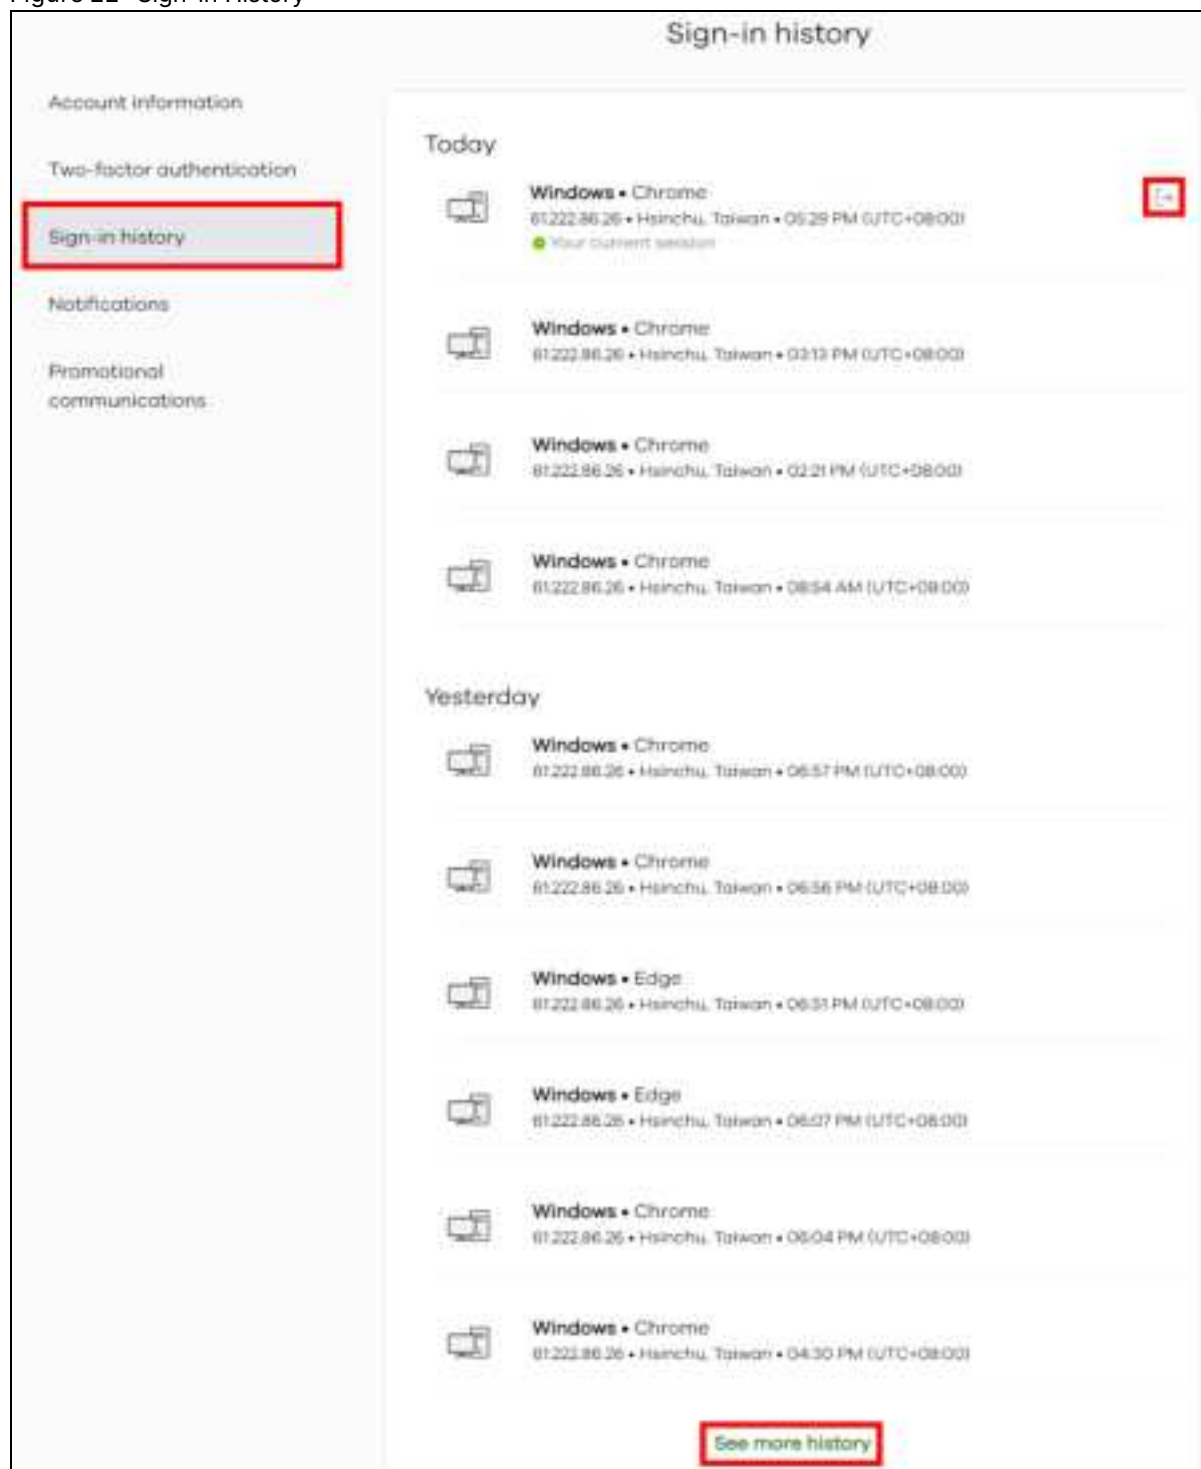

Notifications

Use the Notifications screen to enable email notifications for each successful or unsuccessful login to your Zyxel Account.

Figure 23 Notifications



The following table describes this menu.


Table 10 Notifications Menu

LABEL	DESCRIPTION
Email notifications	Click the switch to the right to receive an email alert when the following events occur.
Login successful notification	A notification is sent by email for each successful login to your Zyxel Account.
Login failure notification	A notification is sent by email for each unsuccessful login attempt to your Zyxel Account.
Unusual GeoIP login notification	A notification is sent by email for each login attempt to your Zyxel Account from a location you have not logged in from in the past 60 days.

Promotional Communications

Click the General info and offers from Zyxel switch to the right to receive emails containing general information and promotional offers from Zyxel.

Figure 24 Promotional Communications

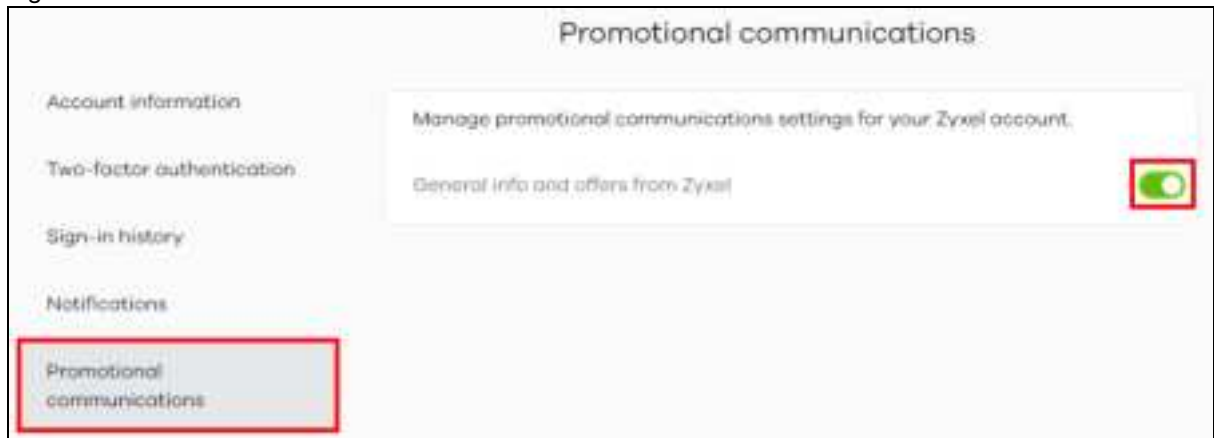

1.3.2 Intent

Click the Intent icon at the top left-hand corner of the screen to search for pages about where to configure an NCC feature.

Figure 25 Intent



The following table describes this menu.

Table 11 Intent Menu

LABEL	DESCRIPTION
A	Click this to display/hide the Intent window.
B	Click this to hide the Intent window.
C	Enter your query here. You can enter a complete sentence to search for information instead of a keyword. Press Enter on your keyboard or click the Send button (E) to send your query to Nebula AI. Note: You can use up to 4096 alphanumeric characters.
D	Click this to remove the text and start another query.
E	Click this to send your query to Nebula AI.
F	By default, this displays the popular topics. After entering your query and clicking send, the AI-generated page links appear. Click on an AI-generated link to go to the page in NCC.
G	Click the thumbs up icon if the AI-generated link is helpful. This increases Nebula AI's association of your query to the page in NCC. Alternatively, click the thumbs down icon if the AI-generated link is unhelpful. This decreases Nebula AI's association of your query to the page in NCC.


1.3.3 Chatbot AI

Click the Chatbot AI icon at the lower right of the screen to answer your NCC queries.

Note: The Chatbot AI is a Nebula Base tier feature. You need a Nebula Professional Pack license to have the following features:

- direct your query to a live Zyxel Support team member from 09:00 to 17:00 (UTC+8)
- submit a support ticket (see [Section 15.5 on page 840](#) for more information).


Figure 26 Chatbot AI – Enter Your Query

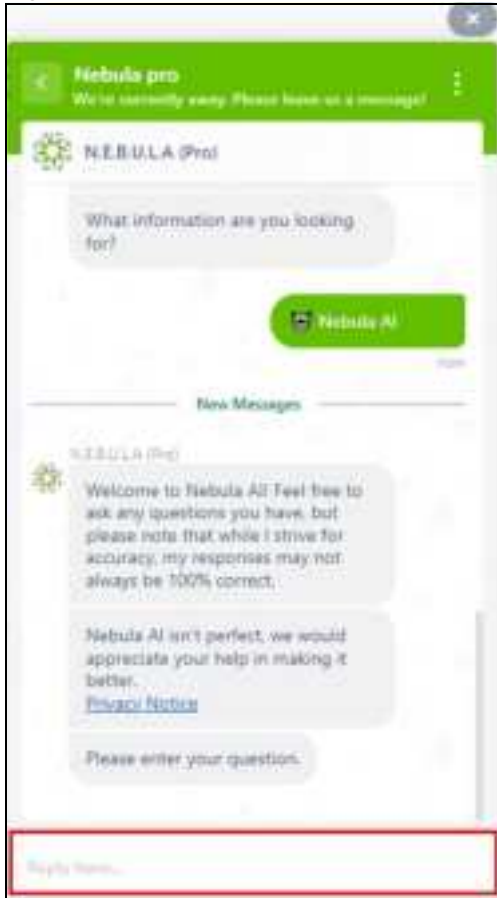

Enter your query on Reply here... and press Enter on your keyboard to send your query to Chatbot AI. The AI-generated answer appears.

Note: You can enter up to 4,096 keyboard characters.

Figure 27 Chatbot AI

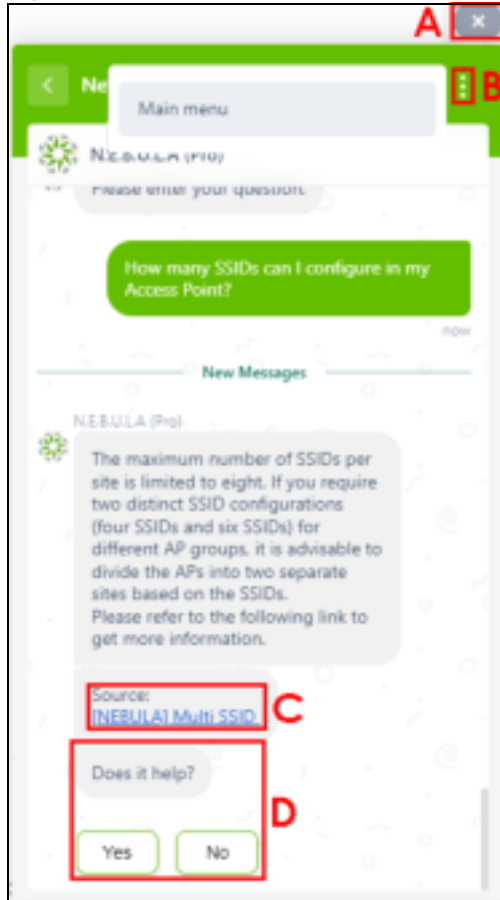

The following table describes this menu.

Table 12 Chatbot AI Menu

LABEL	DESCRIPTION
A	Click this to close the Chatbot AI window.
B	Click this to show the main menu.
C	For more information, click the link to the source of the AI-generated answer on the Zyxel Community site.
D	Click Yes if the AI-generated answer is helpful. This increases Chatbot AI's association of your query to the topic in the Chatbot source. Alternatively, click No if the AI-generated answer is unhelpful.

1.3.4 Navigation Panel

Use the NCC menu items to configure network management for each site, organization and/or Nebula Device.

Table 13 Navigation Menus Overview

LABEL	DESCRIPTION
Use these menus to set up customer networks.	
Site-wide	Manage Nebula Devices in a site.

Table 13 Navigation Menus Overview (continued)

LABEL	DESCRIPTION
Organization-wide	Manage multiple network sites within an organization.
Group-wide	Manage settings for multiple organizations and create VPN links between groups in the organization. Two or more Pro tier organizations can be a group.
MSP	Create multiple organizations and change the branding and assign administrators to multiple organizations.
Use these menus to set up customer Nebula Devices.	
Access points	Manage the Zyxel APs (Access Points).
Switches	Manage the Zyxel Switches.
Security router	Manage the SCR 50AXE and USG LITE 60AX.
Firewall	Manage the ZyWALL ATP, USG FLEX, USG FLEX H and USG20(W)-VPN devices (firewalls).
Security gateway	Manage the ZyWALL NSG devices.
Mobile router	Manage the Zyxel LTE/NR devices.
Help center	Access the Zyxel community forum, submit a support ticket, view User Guides for Nebula managed devices, view ports used by Nebula, view Nebula privacy policies, and view devices/features that can be managed by Nebula.

This is a summary of the menu details.

Table 14 NCC Menu Summary

LEVEL 1	LEVEL 2 / LEVEL 3	FUNCTION
Site-wide	Intent	Use this menu to search for pages in the NCC portal where to configure a particular feature.
	Dashboard	Use this menu to view Nebula Device connection status and traffic summary.
	Topology	Use this menu to view Nebula managed-device connections in your network.
	Devices	
	Add devices	Click + to register a Nebula Device and add it to the site.
	Access points / Switches / Security router / Firewall / Security gateway / Mobile router / Accessories	Use this menu to view Nebula Device connection status and traffic summary.
	Map & floor plans	Use this menu to locate Nebula Devices on a world map or on a floor plan.
	Clients	
	Client list	Use this menu to view the connection status and detailed information of all wired and WiFi clients connected to Nebula Devices (Access Points, Switches, Security Appliances) in the site.
	WiFi Aid	Use this menu to display an overview of the AP's WiFi clients connection issues, as an aid to troubleshooting.
	Connection log	Use this menu to view all related event logs between Access Points and WiFi clients, and DHCP logs of Nebula Security Appliances (NSG, ZyWALL USG FLEX, ATP, and USG20(W)-VPN). Association, Authentication, Disconnection, and DHCP event logs that occur are summarized in chronological order to aid in troubleshooting.
	Applications usage	Use this menu to view usage of applications such as Social Network, Telephony (VoIP), Advertising, News, Web Services in the network.
	Summary report	Use this menu to view network statistics for a site, such as bandwidth usage, power usage, top Nebula Devices, top clients and/or top SSIDs.
	Monitor	
	Access points	
	Event log	Use this menu to view all events on the Access Point. An event is something that has happened to a Nebula managed device.
	Wireless health	Use this menu to view health of the WiFi networks for the supported Access Points and connected clients.
	WiFi Aid	Use this menu to display an overview of the AP's WiFi clients connection issues, as an aid to troubleshooting.
	Summary report	Use this menu to view network statistics specific to Access Points in the site.

Table 14 NCC Menu Summary (continued)

LEVEL 1	LEVEL 2 / LEVEL 3	FUNCTION
	Switches	
	Event log	Use this menu to view all events on the Switch. An event is something that has happened to a Nebula managed device.
	Surveillance	Use this screen to view information about Powered Devices (PDs) connected to ports on the Switch.
	IPTV report	Use this menu to view available IPTV channels and client information.
	Port advisor	Use this menu to monitor network loops and BPDU (Bridge Protocol Data Units) watch, PoE alerts, cable health, network traffic surge and storm protection, and port bandwidth.
	Summary report	Use this menu to view network statistics specific to Switches in the site.
	Security router	
	Event log	Use this menu to view all events on the Security router. An event is something that has happened to a Nebula managed device.
	VPN connections	Use this menu to view status of the site-to-site VPN connections.
	Threat report	Use this menu to view statistics for threat management categories.
	Content Filter report	Use this screen to view statistics for content filter categories.
	Firewall	
	VPN connections	Use this menu to view status of the site-to-site VPN connections.
	SecuReporter	Use this menu to view the statistics report for NSS (Nebula Security Service), such as content filter, Intrusion Detection and Prevention (IDP), application patrol, and anti-virus.
	Event log	Use this menu to view all events on the Security Firewall. An event is something that has happened to a Nebula managed device.
	Summary report	Use this menu to view network statistics specific to the Security Firewall in the site.
	Security gateway	
	Event log	Use this menu to view all events on the security gateway. An event is something that has happened to a Nebula managed device.
	VPN connections	Use this menu to view status of the site-to-site VPN connections.
	NSS analysis report	Use this menu to view the statistics report for NSS (Nebula Security Service), such as content filter, Intrusion Detection and Prevention (IDP), application patrol, and anti-virus.
	Summary report	Use this menu to view network statistics specific to the security gateway in the site.
	Vouchers	Use this menu to create and manage vouchers that allow WiFi network access.
	Containment list	Use this menu to view and manage Nebula Devices contained by CDR (Collaborative Detection & Response).
	Site feature logs	Use this menu to view log messages about configuration changes made by the NCC for the site.

Table 14 NCC Menu Summary (continued)

LEVEL 1	LEVEL 2 / LEVEL 3	FUNCTION
	Configure	
	Access points	
	SSID settings	Use this menu to view and configure SSID settings and authentication methods.
	SSID advanced settings	Use this menu to configure network access, traffic options, advanced settings for SSID profiles, SSID visibility settings, and set whether the SSID is enabled or disabled on each day of the week.
	Captive portal customization	Use this menu to configure captive portal settings for SSID profiles.
	Radio settings	Use this menu to configure global radio settings, such as maximum output power or channel width, and enable smart client steering for all Access Points in the site.
	Traffic shaping	Use this menu to configure the maximum bandwidth and load balancing.
	Security service	Use this menu to enable application visibility and optimization, and IP reputation filter on the managed Access Point.
	AP & port settings	Use this menu to configure load balancing settings and enable or disable a port on the managed Access Point and configure the port's VLAN settings.
	Switches	
	Switch ports	Use this menu to view the Switch port statistics and configure Switch settings for the ports.
	Port profiles	Use this menu to create profiles that can be applied to each port on the Nebula Device. A port profile can enable the following features such as RSTP, STP guard, port isolation, loop guard, storm control, and PoE.
	Stacking management	Use this menu to create a stacking system, configure the stacking settings, and view the stacking status.
	ACL	Use this menu to configure the access control list in order to control access to the Switches.
	IP & Routing	Use this menu to configure layer 3 features such as creating IP interfaces and static routes on the Switch.
	ONVIF discovery	Use this menu to enable ONVIF and configure ONVIF VLAN ID for the selected Switch.
	Advanced IGMP	Use this menu to enable and configure IGMP snooping and create IGMP filtering profiles.
	Authentication	Use this menu to configure authentication servers and policies.
	PoE schedules	Use this menu to set the schedule for Switches in distributing power to powered devices.
	Switch settings	Use this menu to configure global Switch settings, such as (R)STP, QoS, port mirroring, voice VLAN and DHCP white list.

Table 14 NCC Menu Summary (continued)

LEVEL 1	LEVEL 2 / LEVEL 3	FUNCTION
	Security router	
	Interface	Use this menu to configure interface address, subnet mask and VLAN ID settings on the Security Router.
	Threat management	Use this menu to enable threat management categories, configure exception list using client's name/IP address, and allowed/blocked domain name list.
	Traffic management	Use this menu to manage the use of various applications on the network and control access to specific web sites or web content.
	Firewall	Use this menu to configure firewall rules for outbound traffic, create new NAT rules and edit/delete existing NAT rules.
	Site-to-Site VPN	Use this menu to configure VPN rules between Security Routers.
	Remote access VPN	Use this menu to enable and configure IPsec VPN rule from off-site clients to an on-site Security Router. Note: The SCR 50AXE does not support Remote access VPN.
	SSID settings	Use this menu to view and configure SSID settings and authentication methods.
	SSID advanced settings	Use this menu to configure WiFi security, band selection, assisted roaming and U-APSD (Unscheduled automatic power save delivery) settings for the SSID profiles.
	Radio settings	Use this menu to configure global radio settings, such as maximum output power or channel width, and enable smart client steering for all Security Routers in the site.
	Router settings	Use this menu to configure DNS settings.

Table 14 NCC Menu Summary (continued)

LEVEL 1	LEVEL 2 / LEVEL 3	FUNCTION
	Firewall	
	Port	Use this menu to configure network mode and port grouping, interface address, subnet mask and VLAN ID settings on the Security Firewall (USG FLEX / ATP Series).
	Interface	Use this menu to configure interface address, subnet mask and VLAN ID settings on the Security Firewall (USG FLEX / ATP Series).
	Port and Interface	Use this menu to configure port groups and network interfaces on the Security Firewall (USG FLEX H Series).
	Routing	Use this menu to view and configure policy routes, static routes and WAN load balancing.
	NAT	Use this menu to view and configure virtual servers and NAT settings.
	Site-to-Site VPN	Use this menu to configure VPN rules between Security Firewalls.
	Remote access VPN	Use this menu to enable and configure IPsec VPN or L2TP VPN rules from off-site clients to an on-site Security Firewall.
	Security policy	Use this menu to configure firewall rules for outbound traffic, application patrol, schedule profiles and port forwarding rules for inbound traffic.
	Security service	Use this menu to enable content filter and block access to specific web sites. You can also enable Anti-virus and Intrusion Detection and Prevention (IDP) on the Security Firewall.
	Object	Use this menu to set up zones to configure network security and network policies in the Nebula Device. Create, maintain, and remove addresses and address groups in the Nebula Device. Define TCP applications, UDP applications, and ICMP messages; as well as create service groups to refer to multiple service objects. Set up one-time and recurring schedules for policy routes, security policies, application patrol, and content filtering.
	Captive portal	Use this menu to configure captive portal settings for each Security Firewall interface.
	Authentication method	Use this menu to configure network access settings through a captive portal or Nebula Cloud Authentication.
	Wireless	Use this menu to configure different SSID profiles for your ZyWALL USG FLEX 100W and USG20W-VPN. Note: This menu only appears for the ZyWALL USG FLEX 100W and USG20W-VPN.
	Firewall settings	Use this menu to configure the DNS server and address records and also set the external AD (Active Directory) server or RADIUS server that the Security Firewall can use in authenticating users. You can also specify walled garden web site links for all interfaces on the Security Firewall.

Table 14 NCC Menu Summary (continued)

LEVEL 1	LEVEL 2 / LEVEL 3	FUNCTION
	Security gateway	
	Interface addressing	Use this menu to configure network mode, port grouping, interface address, static route and DDNS settings on the security gateway.
	Policy route	Use this menu to view and configure policy routes.
	Firewall	Use this menu to configure firewall rules for outbound traffic, application patrol, schedule profiles and port forwarding rules for inbound traffic.
	Security service	Use this menu to enable content filter and block access to specific web sites. You can also enable Anti-virus and Intrusion Detection and Prevention (IDP) on the security gateway.
	Site-to-Site VPN	Use this menu to configure VPN rules.
	Remote access VPN	Use this menu to enable and configure IPsec VPN or L2TP VPN settings.
	Captive portal	Use this menu to configure captive portal settings for each security gateway interface.
	Network access method	Use this menu to enable or disable web authentication on an interface.
	Traffic shaping	Use this menu to configure the maximum bandwidth and load balancing.
	Gateway settings	Use this menu to configure the DNS server and address records and also set the external AD (Active Directory) server or RADIUS server that the security gateway can use in authenticating users. You can also specify walled garden web site links for all interfaces on the security gateway.
	Alert settings	Use this menu to set which alerts are created and emailed or sent by the Zyxel Nebula Mobile app. You can also set the email addresses to which an alert is sent.
	Firmware management	Use this menu to upgrade firmware or schedule firmware upgrades for Nebula Devices in the site.
	Cloud authentication	Use this menu to add user accounts and grant user access to the selected site through different authentication methods, such as the MAC-based authentication, captive portal or the IEEE 802.1x authentication method.
	Collaborative detection & response	Use this menu to view and configure the policies and notification settings for malware, IDP and web threats and corresponding containment actions to quarantine, alert or block. This is only available for ZyWALL USG Flex Series and ZyWALL ATP Series at the time of writing.
	Site settings	Use this menu to change the general settings for the site, such as the site name, Nebula Device login password, captive portal reauthentication, SNMP, AP traffic logs to a Syslog server, traffic logs to SecuReporter, WiFi network authentication voucher settings, and API access for DPPSK third-party integration.

Table 14 NCC Menu Summary (continued)

LEVEL 1	LEVEL 2 / LEVEL 3	FUNCTION
Organization-wide	License & inventory	Use this menu to manage your licenses and view the summary of Nebula Devices which have been registered and assigned to the sites in the selected organization.
	Administrators	Use this menu to view, remove, or create a new administrator account for this organization.
	Organization-wide manage	
	Organization portal	Use this menu to view a list of sites belonging to the selected organization and detailed information about the Nebula Devices connected to the sites.
	Configuration management	Use this menu to synchronize the configuration between sites or switch ports and back up or restore a configuration file.
	Configuration templates	Use this menu to create or delete a configuration template or bind a site to the template.
	VPN orchestrator	Use this menu to view and manage VPNs created for the selected organization.
	Security profile sync	Use this menu to synchronize the settings of URL threat filter, anti-malware and content filter on the selected gateways.
	Firmware management	Use this menu to upgrade firmware or schedule firmware upgrades for Nebula Devices in the organization.
	Cloud authentication	Use this menu to create or remove user accounts and grant user access to all sites in the selected organization through different authentication methods, such as MAC-based authentication, captive portal, or the IEEE 802.1x authentication method.
	Change log	Use this menu to view log messages about configuration changes in this organization.
	Organization settings	Use this menu to configure security settings or delete the organization.
Group-wide	Group-wide manage	
	Group portal	Use this menu to view organization and license details of a selected group.
	Org-to-Org VPN	Use this menu to view and manage VPNs between members in the group.
	Inventory	Use this menu to view Nebula Devices belonging to organizations. You may also export the list of Nebula Devices found to your computer.
	Administrators	Use this menu to view, remove, or create a new administrator account for the selected group.
	Change log	Use this menu to view log messages about configuration changes in the group.
	Group settings	Use this menu to configure group information and group members.

Table 14 NCC Menu Summary (continued)

LEVEL 1	LEVEL 2 / LEVEL 3	FUNCTION
MSP	MSP cross-org manage	
	MSP portal	Use this menu to create multiple organizations and change the branding and assign administrators to multiple organizations.
	Admins & teams	Use this menu to create administrators or groups of administrators (teams) and view their login details.
	Cross-org synchronization	Use this menu to sync or clone organization-wide settings from a source organization to a destination organization.
	Backup & restore	Use this menu to back up your current Security Firewall's configurations to NCC, or restore a previously saved configuration to the site.
	Alert templates	Use this menu to configure MSP alert templates to monitor Nebula Devices for unexpected events (for example, online or offline events).
	Firmware upgrades	Use this menu to check the Nebula Devices' firmware status across organizations and schedule firmware upgrades.
	Change log	Use this menu to view log messages about configuration changes in the Admins & teams and Cross-org synchronization screens.
	MSP branding	Use this menu to upload/replace/remove the dashboard logo. You can also set the support contact details.
	MSP settings	Use this menu to

1.4 Create Organization


Use this screen to first create an organization, then create a site (network) in the organization, and finally add Nebula Devices to the site.

Note: You have to contact Zyxel customer support if you need to change the device owner or remove an Organization from the NCC. But an administrator can remove sites without customer support. Configure your Nebula Device owners and organizations carefully. See also [Section 12.2 on page 711](#).

Note: There is no limit as to how many organizations you can create, but you can only activate a trial license up to 10 new organizations every 90 days. The expiration date of the organization created using a trial license is shown.

- 1 Click Create Organization from the Organization drop-down list box in the title bar. The Wizard starts. See [Chapter 2 on page 68](#) for detailed information about how to use the wizard to create an organization and site. Otherwise, click Exit Wizard to close the wizard and display the Create organization screen.
- 2 Enter a name for your organization.
- 3 If you already have one or more than one organization under your account and you want to copy the organization settings of an existing one, select the organization name from the Copy setting from field and also Add this Org to MSP Teams by selecting existing teams before clicking the Create organization button.
- 4 Click the Create organization button to add a new organization.

Figure 28 Create Organization

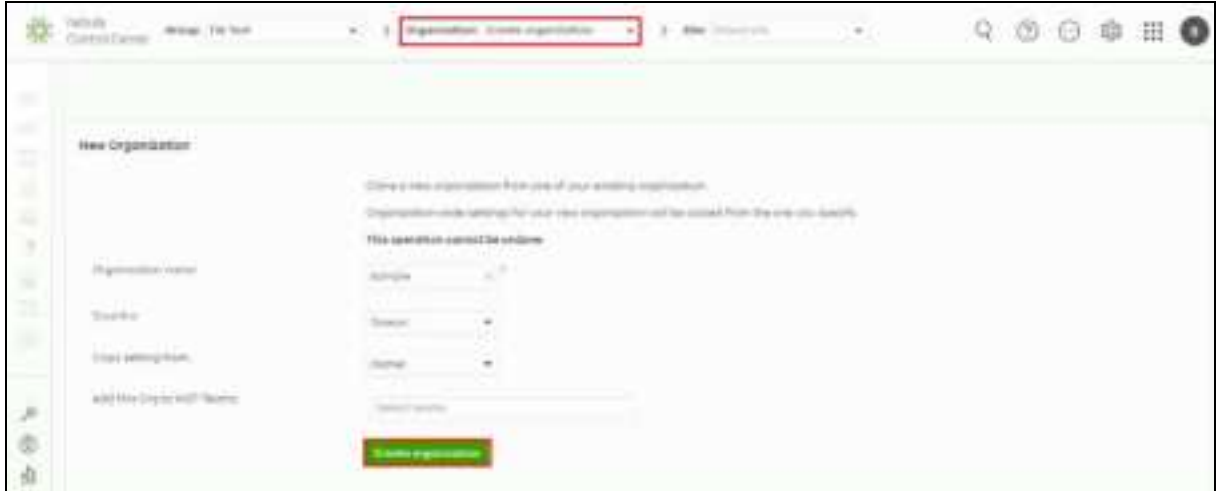

- 5 Choose whether to activate a one-month trial of Nebula Pro Pack and Nebula Security Services for the organization. For example, USG FLEX 700, Secure WiFi License, 1MO; USG FLEX 700, UTM Security Pack License, 1MO; Nebula Professional Pack License, 1MO.

1.5 Choose Organization

When you have more than one organization on your account, the following screen displays right after you log in. Select the organization you want to manage now, access the MSP Portal or click Create organization to add a new one.

Note: You need to purchase an MSP license to see the MSP Portal menu.

Figure 29 Choose Organization



1.6 Create Site

To add more sites to an organization, select Create site from the Site drop-down list box to create a new one.

Figure 30 NCC Title Bar: Group/Organization/Site: Create site



Create One Site

If you need to create a site in your organization, do the following:

- 1 To create a single site, select the One site tab.
- 2 Enter a descriptive name, 1 – 64 characters including 0–9 a–z A–Z `~!@#%&*(_+ -= {}|[];'"./<> ?) in the Site name.
- 3 Set the site's configuration:
 - Select Replicate from if you want to allow the site settings to be copied to the destination organization and any future changes applied to the source organization.
 - Select Bind to template if you want to bind the site to a configuration template created in Organization-wide > Organization-wide manage > Configuration templates. A configuration template is a virtual site. The settings you configured in a template will apply to the real sites which are bound to the template.
 - Otherwise, select Default configuration.
- 4 Select the Local time zone of the site's location.
- 5 Click the register link in You can register more devices to this site. or click + Register to add Devices to your site. See [Section 12.2.2 on page 714](#) for more details.
- 6 Click the Create site button to add a new site.

Create site

One site Multiple sites

Site name:

Configuration:
☒ Default configuration
☐ Replicate from:
☐ Bind to template:

Local time zone:

Devices:
Add devices from your organization's inventory or add them using serial number and MAC address.

Device name	Serial Number	MAC address	Model
☐ 202007090100	000000000000	20-2117090100	HAAS00
☐ 202008040000	000000000000	20-2117040000	HAAS01
☐ 202008080000	000000000000	20-2117080000	000000-0000

Create Multiple Sites

If you need to create multiple sites and even add Nebula Device(s) to the site at the same time, do the following:

- 1 To create more than one site, select the Multiple sites tab.
- 2 Set the sites' configuration:
 - Select Replicate from if you want to allow the site settings to be copied to the destination organization and any future changes applied to the source organization.
 - Select Bind to template if you want to bind the sites to a template created in Organization-wide > Organization-wide manage > Configuration templates. A configuration template is a virtual site. The settings you configured in a template will apply to the real sites which are bound to the template.
 - Otherwise, select Default configuration.
- 3 Select the Local time zone of the site administrator's location.
- 4 Click the Download sample import file link to download a blank Excel file template, edit it accordingly, and save it. The Excel file template can contain the following, maximum of 100 rows:
 - Site name. Enter a descriptive name, up to 64 characters including 0-9 a-z A-Z `~!@#\$%&*(_+-=}{|[];'"/.<>?). You can enter multiple rows with the same site name when adding Nebula Devices to the same site.

Note: NCC does not allow duplicate same site.

- MAC address (optional). Enter the unique MAC address of the Nebula Device(s) to add to the new site. Make sure to use the correct format AA:BB:CC:00:11:22 or AABBC001122.
- Serial number (optional). Enter the unique serial number of the Nebula Device(s) to add to the new site.

- Device name (optional). Assign a unique name to the Nebula Device, up to 64 characters including 0–9 a–z A–Z `~!@#\$%&*(_+ -= {}|[];'"/<> ?).

1	NOTE: Allowed maximum records: 100			
2	NOTE: Format of MAC Address, AA:BB:CC:00:11:22 or AABBC0001122. The site name and device name must not exceed 64 characters.			
3	NOTE: Please note that a site name is mandatory. If you wish to add a device to a specific site, please ensure that the MAC/SN is correctly filled in.			
4	Site name	MAC Address	Serial Number	Device Name
5	New Site-1	20:20:20:20:20:20	SN1234567890	AP-1
6	New Site-2	21:20:20:20:20:20	SN1234567890	AP-2
7				

- 5 Click Choose File to locate the Excel file you wish to upload to NCC.
- 6 Click the Execute button to add new sites and optional Nebula Devices.

Create site

One site **Multiple sites**

Configuration

Default configuration

Replicate from: Cloud File

Send to template: (Add Template)

Upload Time zone

System Asia / Total UTC +8:00

Import

Choose File sample_bulk_site_create.xlsx

The format of the imported file has been checked. Please click "Execute" to import the data.

Execute

Instructions:

Upload a template file with the MAC address and serial number of the devices you want to register, mapped to the names of the sites you intend to create. Avoid mapping two security devices to a single site. The site name, MAC address, serial number, and site name fields are required. It is crucial to note that sites will only be successfully imported into Nebula if all fields in the template file are valid.

Download template file

Note: NCC will check and display an error message when:

- The Nebula Device has already been added to NCC or registered to an organization
- Entry format error in the Excel file template
- Duplicate site name.

1.7 Cloud-Saving Mode

If you do not log into a base (free) license tier organization for over 30 days, the organization automatically enters Cloud-saving mode to save your network bandwidth and cloud resources.

When Cloud-saving is enabled, NCC does not record any data traffic statistics, except the following:

- Event logs
- Security Appliance WAN interface logs between the Nebula Device and NCC, and
- NSS (Nebula Security Service) analysis report (requires Nebula Security Pack (Nebula Security Service) license).

To disable Cloud-saving mode, click the Cloud-saving mode switch or click the link in the NCC banner when notified.

Figure 31 Cloud-saving mode




CHAPTER 2

Setup Wizard


2.1 Setup Wizard

- The setup wizard helps you create an organization and site, add Nebula Devices, upgrade your Nebula Device firmware, and set up WiFi networks quickly.
- The wizard appears automatically after you log in the first time or if there is no organization created under your account.
- The wizard also starts when you click Create Organization from the Organization drop-down list box in the title bar.

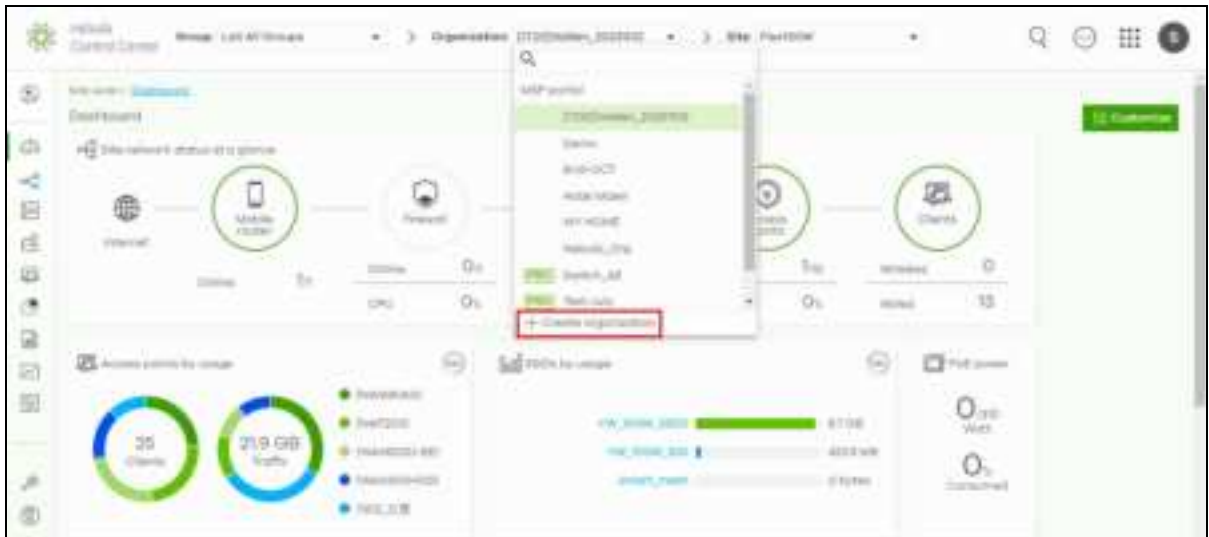


2.1.1 Step 1: Run the Wizard

- 1 After logging in to <https://nebula.zyxel.com>, the following screen appears. Click GO to start the NCC wizard.

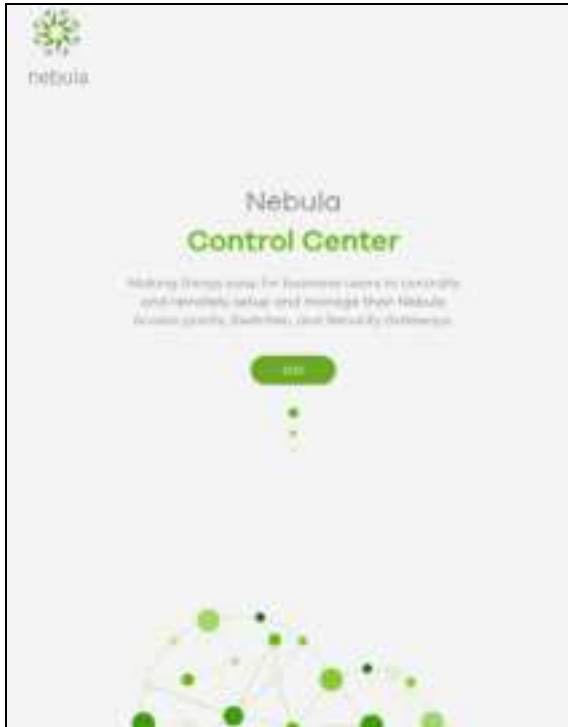

- 2 The welcome screen displays when you are creating the first organization under your account. Click Let's Start to begin.

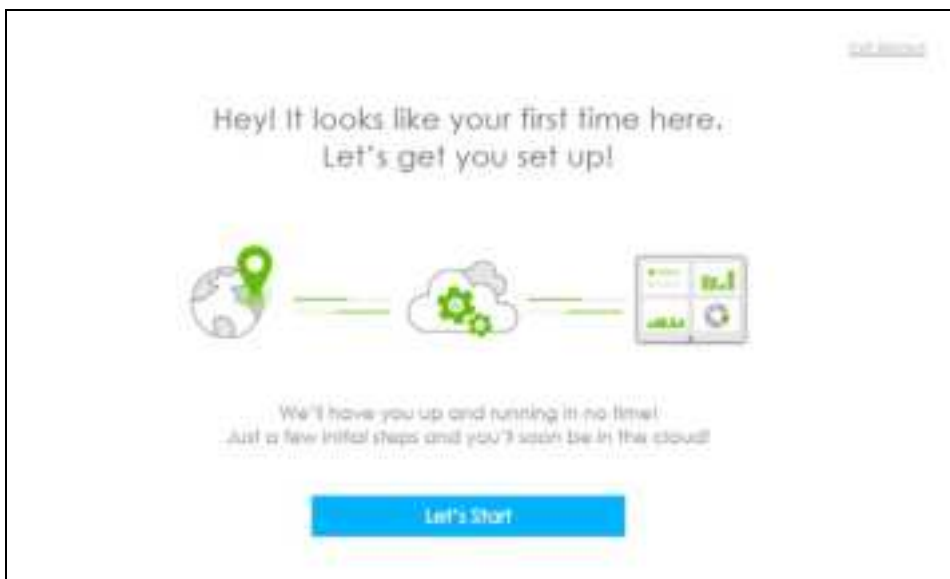

Note: This screen will appear only if you have not created a new organization.

2.1.2 Step 2: Create an Organization and Site

- 1 Enter a descriptive name for your organization and site. Both names must consist of 1 – 64 characters.

- 2 Select the time zone of your location. This will set the time difference between your time zone and Coordinated Universal Time (UTC).
- 3 Click Next to continue.

The screenshot shows the 'First step is to create your Organization and Site' screen. On the left, there is a descriptive text about Nebula's capabilities. On the right, there are four input fields: 'Organization' (with 'New Org (PSID)' as a placeholder), 'Site' (with 'New Site (ID)' as a placeholder), 'Domain' (with 'Example' as a placeholder), and 'Time zone' (with 'Asia - Tokyo (UTC +9:00)' as a placeholder). A green 'Next' button is located at the bottom right of the form.

2.1.3 Step 3: Add Your Nebula Devices

- 1 Enter your device's MAC address and serial number.

You can also leave the fields blank and click Next to move on to the next step without adding a Nebula Device.

- 2 Click the + Add button to register and add the Nebula Device to the site. You can register multiple Nebula Devices at a time.
- 3 Click Next to proceed.


The screenshot shows the 'Let's now add your device(s) to Nebula' screen. On the left, there is a descriptive text about adding devices. On the right, there is a table with four columns: 'MAC address', 'Serial number', 'Name', and 'Status'. Below the table, there is a green '+ Add' button. At the bottom right, there are 'Back' and 'Next' buttons.

2.1.4 Step 4: Activate the Trial License(s)

You can decide if you want to activate a one-month trial period of Nebula Pro Pack and Nebula Security Services for the organization. Before deciding on the trial license to activate, see [Section 12.2.8 on page 725](#) for more information.

Note: Before activating a trial license, make sure the services in the license can be used by a Nebula Device in the organization.

If you choose to activate a trial license, click to select the trial license(s) and then click Next. NCC will send you an email reminding you to purchase the full license when the trial is close to expiring.

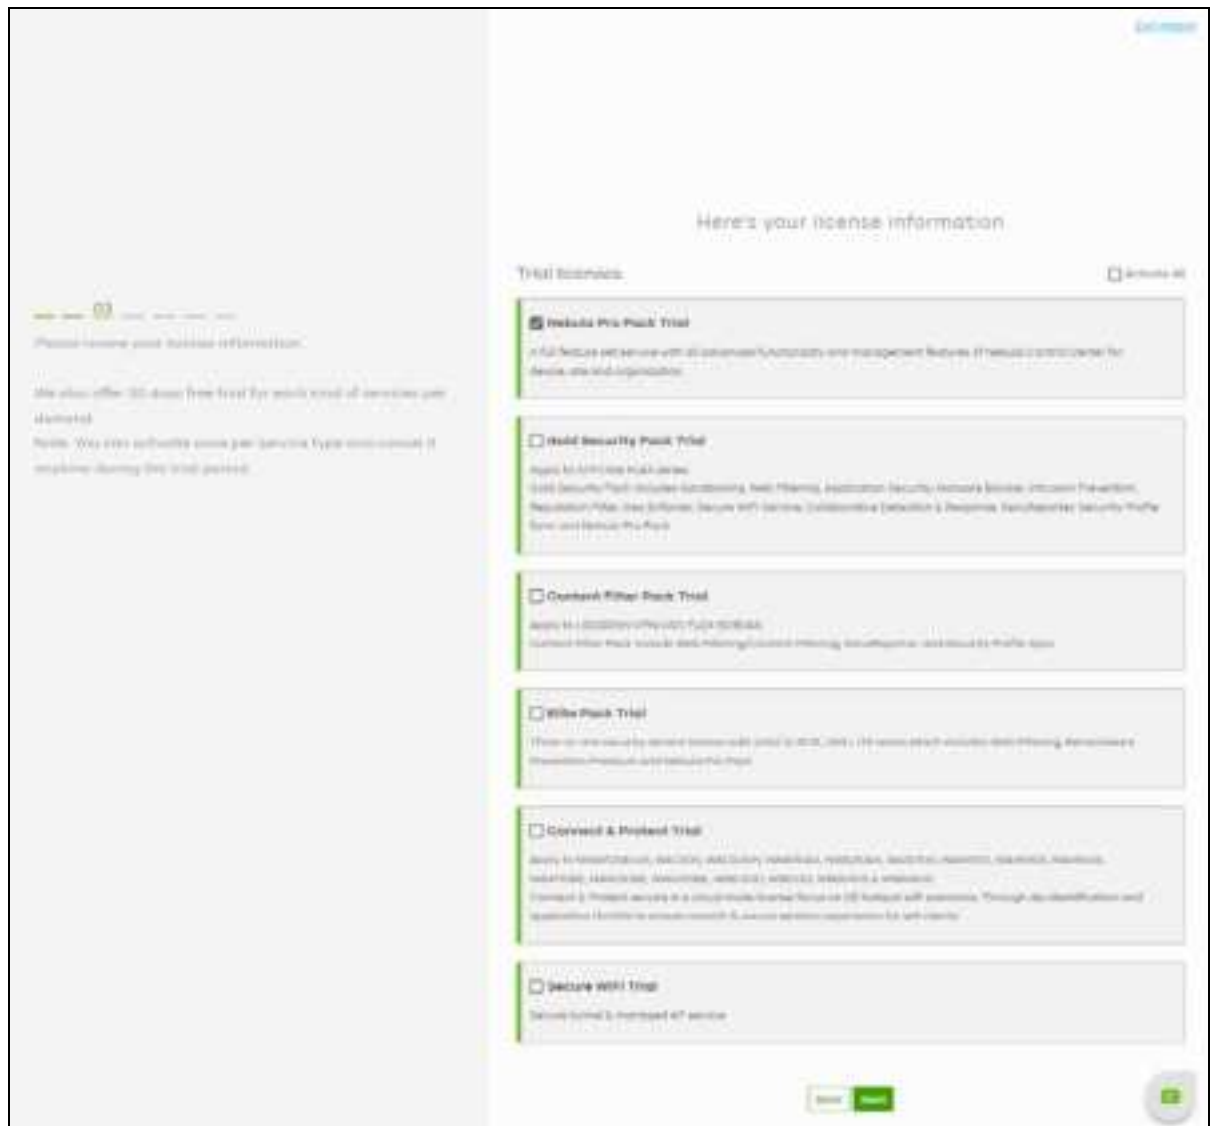

2.1.5 Step 5: Upgrade your Nebula Device Firmware

You should always use the most recent firmware to get the latest features, improvements, and bug fixes by clicking Yes (default setting).

Even if you choose not to upgrade the firmware, NCC will still perform a mandatory upgrade to Stable firmware version if the Nebula Device's firmware have security vulnerabilities, and/or lack key performance improvements. See [Table 213 on page 760](#) for the description of a Stable firmware.

The following table shows when a mandatory firmware upgrade occurs for the different Nebula Device types.

Table 15 Mandatory Firmware Upgrade Behavior

NEBULA DEVICE TYPE	MANDATORY FIRMWARE UPGRADE TIME
Access Points	The mandatory firmware upgrade occurs when the Nebula Device is online with NCC.
Switches / Security Appliances	The mandatory firmware upgrade occurs after registering the Nebula Device on NCC.

Click Next to proceed.



2.1.6 Step 6: Set up your WiFi Network

- 1 Configure the WiFi settings for the managed APs. Enter the WiFi network name (SSID) and the WiFi password.


You can also leave the fields blank and click Next to move on to the next step without setting up the main WiFi network.

- 2 Configure the ID number of the VLAN to which the SSID belongs.

The VLAN ID 1 is generated automatically by the NCC and reserved for a gateway's LAN 1 and LAN 2 by default. The IPv4 subnets 192.168.1.0/24 and 192.168.2.0/24 are also reserved for these two LAN interfaces.

If you enter a different VLAN ID other than the default one ("1") in the VLAN field, click the Set up VLAN interface link to create a gateway interface with the specified VLAN ID. You need to configure an IPv4 address and subnet mask and enable the DHCP server function for this interface.

- 3 Click Next to proceed.

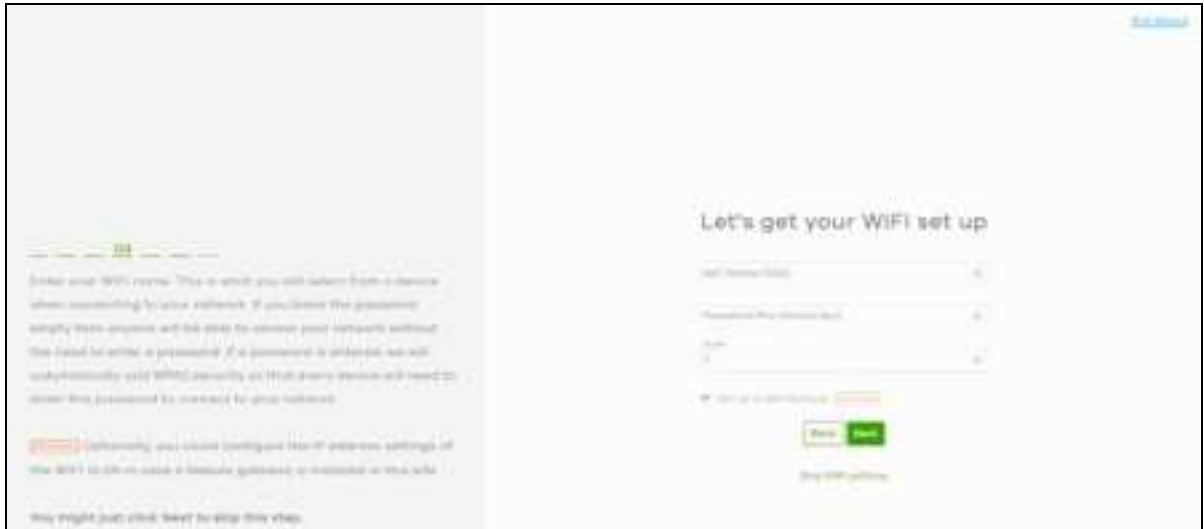

2.1.7 Step 7: Set up a Guest WiFi Network

- 1 Configure WiFi and VLAN settings for guest users who can wirelessly access the Internet or networks through Nebula Devices.

You can also leave the fields blank and click Next to move on to the next step without setting up the guest WiFi network.

- 2 If you want to enable web authentication, select Clicking "Agree" to access the network to block network traffic until a client agrees to the policy of user agreement. Otherwise, select Using their Facebook account to join the network to block network traffic until the client logs in using his/her existing Facebook account.


Note: If you do not enable any WiFi security, your network is accessible to any WiFi networking device that is within range.

Note: The guest network function and Layer 2 isolation between clients are enabled on this WiFi network by default.

If you enter a different VLAN ID other than the default one ("1") in the VLAN field, click the Set up VLAN interface link to create a gateway interface with the specified VLAN ID. You can set the gateway interface as a guest interface, configure the IPv4 address and subnet mask and enable the DHCP server function for this interface.


Note: If you set the guest WiFi network to use the same VLAN ID as the WiFi network and have already configured the gateway interface, the gateway interface configuration fields will be grayed out in this screen.

- 3 Click Next to proceed.

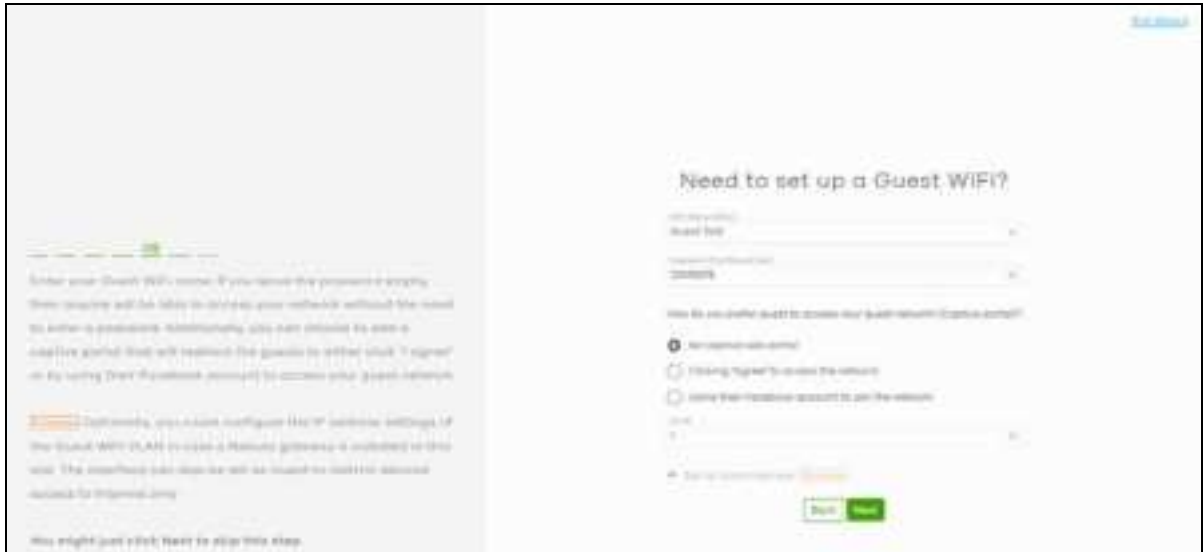

2.1.8 Step 8: Set up the Deployment Method

If you added a ZyWALL USG FLEX / ATP / USG20(W)-VPN Series device in step 3, you need to select a deployment method for management by Nebula. Select Nebula native mode if available. If not, select Zero Touch Provision mode and configure an email address to send an activation link to the administrator who is in charge of managing the Nebula Device.

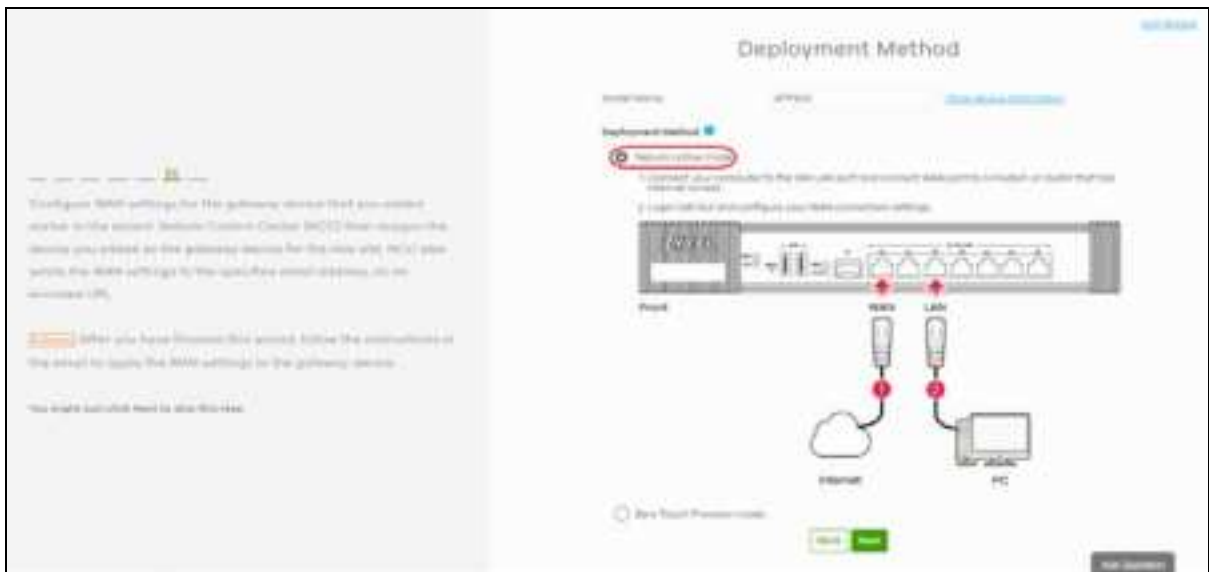

2.1.8.1 Nebula Native Mode

To use the Nebula native mode deployment method, perform the steps described in [On the Nebula Device](#).

2.1.8.2 Zero Touch Provision Mode

To configure the Zero Touch Provisioning (ZTP) settings, do the following in NCC:

- 1** Enable VLAN Tag and configure the VLAN ID (1 – 4094) for the WAN port.
- 2** Select Static/DHCP/PPPoE/PPPoE with static IP for the WAN type of the Nebula Device.
- 3** If you select DHCP, enter the MTU (Maximum Transmission Unit) to set the maximum size (1280 – 1500) of each data packet, in bytes, that can move through this interface.


If you select Static, enter the IP Address, Subnet Mask, Default Gateway, First/Second DNS Server, and MTU (1280 – 1500).

If you select PPPoE, select the Authentication Type, enter the Username, Password, and MTU (1280 – 1492).

If you select PPPoE with static IP, select the Authentication Type, enter the Username, Password, IP Address, Default Gateway, First DNS Server and MTU (1280 – 1492).

Note: Configure the VLAN ID and WAN interface for the Nebula Device exactly as your ISP gave it to you.

- 4** Click Next.
- 5** Select I will install Firewall by myself to receive an activation email and activation link/file. Alternatively, if you want another administrator to activate the Nebula Device, enter the recipient's Email Address.
- 6** Click Next.
- 7** Select where the Nebula Device will get and install the activation file, from a computer or through a USB drive.

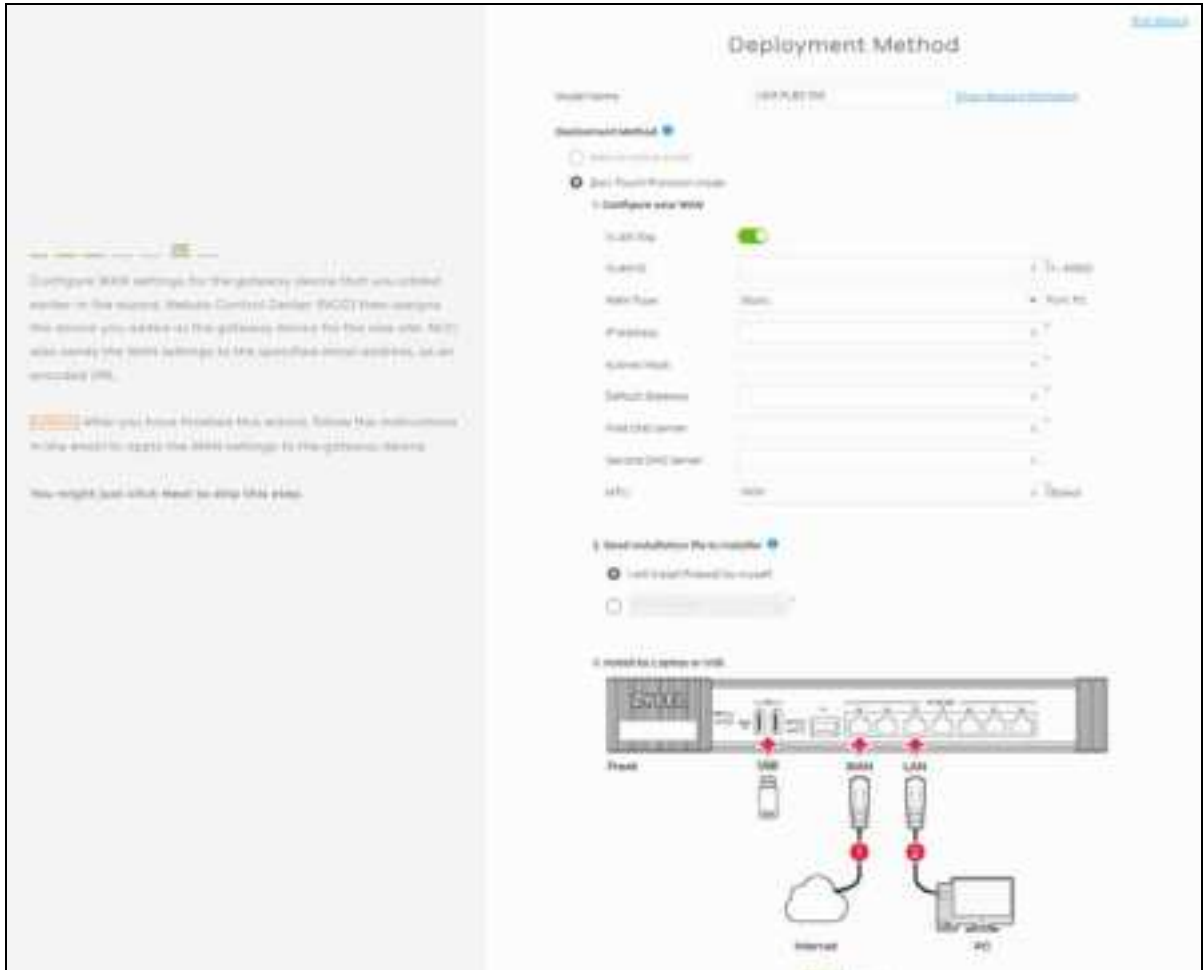

On the Nebula Device

- 1 Back up the current configuration (in case you want to return to On Premises mode later).
- 2 Reset the Nebula Device if it was previously configured.
- 3 Connect the Nebula Device's WAN port to a modem/router that has Internet access.
- 4 Connect your computer to the Nebula Device's LAN port.
- 5 If you select Nebula native mode, go directly to step 7.
Click the activation link in the email.
Alternatively, save the activation file in the root directory of a USB drive. Then insert the USB drive into your Nebula Device.
Wait until Nebula Zero Touch Provisioning is successful.



- 6 Click Go to Nebula Control Center to configure the Nebula Device using NCC.
- 7 When you log into the Web Configurator for the first time or when you reset the Nebula Device to its default configuration, the Initial Setup Wizard screen displays. Choose Nebula Mode to manage your Nebula Device remotely using Nebula Control Center (NCC).
- 8 Follow the wizard to configure the Nebula Device network settings to connect to NCC. The screens vary depending on the encapsulation type. Refer to information provided by your ISP to know what to enter in each field. Leave a field blank if you do not have that information.

Note: Refer to the Nebula Device User's Guide for more information.

2.1.9 Step 9: View the Summary

- 1 A summary of the wizard configuration will display after you complete the deployment method.
- 2 You can click a section's edit icon () to modify its setting.
- 3 You must click Go to Nebula Dashboard to save your changes in the wizard; otherwise click Exit Wizard to close the wizard screen without saving the settings.



Note: To set the administrator privileges, see [Section 14.3.1 on page 800](#) for more information.

CHAPTER 3

Tutorials

3.1 Overview

This chapter shows you how to use the NCC's various features.

- [Add a Nebula Device](#)
- [Activate and Assign a License for a Nebula Device, Site, or Organization](#)
- [Monitor a Site](#)
- [Know What License Tier My Organization Belongs To](#)
- [Know What Licenses are Set to Expire in My Site or Organization](#)
- [Renew an Expired License](#)
- [Transfer Licenses](#)
- [Change an Organization and/or Site Name](#)
- [Reset the Nebula Password](#)
- [Maintain Firmware](#)
- [Backup Current Configurations in Nebula](#)
- [Assign an Administrator to Manage a Nebula Device](#)
- [Transfer the Ownership of the Organization](#)
- [Manage a Configuration Template](#)
- [Activate an MSP License](#)
- [Configure CNP/CNP Plus Security Services](#)
- [Delete an Organization](#)
- [Remote Access VPN Setup](#)
- [Route L2TP VPN Traffic](#)
- [Configure Guest Isolation on your WiFi Network](#)
- [Configure Content Filter to Block Access to Certain Websites](#)
- [Configure Schedule to Allow WiFi Access Only at Certain Times](#)
- [How to Position Multiple Nebula Devices \(for Nebula Access Points only\)](#)
- [Change the Default SSID and Password](#)
- [Change the WiFi Band Mode](#)
- [Check What Clients are Connected to Nebula Devices in your Network](#)
- [Find the SSID of the WiFi Client \(for Nebula Access Points only\)](#)
- [Use Tags to Assign SSIDs for Nebula Devices \(for Nebula Access Points only\)](#)
- [Resolve WiFi Connection Problems \(for Nebula Access Points only\)](#)
- [Configure WiFi Security with WPA2 Personal \(for Nebula Access Points only\)](#)
- [Configure WiFi Security with WPA2 Enterprise \(for Nebula Access Points only\)](#)

- Using DPPSK to Access the Guest WiFi Network
- Create a DPPSK Key Using the DPPSK API
- Set Up WiFi Network Load Balancing
- Configure a Captive Portal
- Create a Custom Captive Portal Page
- Limit Applications Usage or Block Applications
- Find the LAN Port Used by Connected Wired Client Devices (for Nebula Switches only)
- Configure Voice VLAN (for Nebula Switches only)
- Manage IPTV (for Nebula Switches only)
- Enable IP Source Guard (for Nebula Switches only)
- Set Up MAC Authentication With NCAS (for Nebula Switches only)
- Set Up Dynamic VLAN With RADIUS (for Nebula Switches only)
- Monitor Dynamic VLAN Using Event Logs (for Nebula Switches only)
- Register a Nebula Device (mobile router) in Nebula
- Using Collaborative Detection and Response (CDR)
- Deploy With Nebula Native Mode (for Security Firewalls in Nebula only)
- Configure DHCP Domain Name (for Security Firewalls in Nebula only)
- Monitor Client Bandwidth Usage (for Security Firewalls in Nebula only)
- Configure a Primary and Backup WAN (for Security Firewalls in Nebula only)
- Set Up Nebula Monitor Mode (for Security Firewalls in on-premise only)
- Enable Smart Mesh on a Security Router

3.2 Add a Nebula Device

This section shows you how to add a Mobile Router, Security Gateway, Nebula Firewall, Access Point or Switch to a selected organization and site on NCC for management.

- 1 Go to the Site-wide > Devices > + > Add devices screen. Click +Add.



The screenshot shows the 'Add devices' screen in the NCC interface. At the top, there is a green header bar with the text 'Add devices'. Below the header, there is a green box containing the text: 'Add devices using MAC Address and Serial Number. When you register a device, that device will be added to your organization's inventory and assigned to your site.' Below this text, there is a form with five input fields: 'Device name', 'Serial number', 'MAC Address', 'Model', and 'Registered On'. To the right of the 'MAC Address' field, there is a small icon of a device. To the right of the 'Model' field, there is a small icon of a device. To the right of the 'Registered On' field, there is a small icon of a device. At the top right of the form, there is a green button with a white plus sign and the text '+ Add'. Below the form, there is a table with a header row containing the following columns: 'Device name', 'Serial number', 'MAC Address', 'Model', and 'Registered On'. The table is currently empty.

- 2 Enter the Serial number, MAC address, and a descriptive Name of the Nebula Device you want to add. Click the Finish button to save the changes.

Note: When a Nebula Device is added to a site other than a Nebula Device owner, the Acknowledge button appears. Click this button first to confirm that the Serial number and MAC Address information are correct. Then click the Next button to check the Nebula Device firmware.

The screenshot shows the 'Add devices' dialog box. It has a sidebar with 'Add devices' and 'Firmware upgrade'. The main area contains instructions to enter MAC address and serial number, or to import a file. Below this is a table with columns: MAC address, Serial number, Name, Model, License info, Expiration date, and Assign licenses from inventory. A red box highlights the 'Acknowledge' button at the bottom left, and another red box highlights the 'Cancel' button at the bottom right. A green button labeled 'Add another device' is also visible.

3.3 Activate and Assign a License for a Nebula Device, Site, or Organization

This section shows you how to activate and assign a license for a Nebula Device, site, or organization. See [Section 1.1.5.2 on page 19](#) for a summary of NCC licenses.

The following table describes the license types at the time of writing.

Table 16 License Types

LOCATION	LICENSE TYPE	APPLICATION
MSP (Managed Services Provider)	MSP	NCC (Nebula Control Center) user account
Organization-wide	Professional / PLUS	AP (Access Point) / NSG (Nebula Security Gateway) / Switch / USG FLEX device
Organization-wide	Gold Security	ATP device / USG FLEX device
Site-wide	NSS (Nebula Security Service)	NSG device
Site-wide	UTM (Unified Threat Management) Security / Secure WiFi	USG FLEX device
Site-wide	Content Filter	USG FLEX 50 / USG20-VPN / USG20W-VPN device
Site-wide	Connect & Protect (CNP) / Connect & Protect Plus (CNP+)	NWA1123ACv3, WAC500, WAC500H / NWA110AX, NWA210AX, WAX510D, WAX610D, WAX630S, WAX650S, USG LITE 60AX device
Site-wide	Elite	SCR 50AXE, USG LITE 60AX

3.3.1 Bundled License and Add-on License

A bundled license is a license that is included when you purchase a Nebula Device (Mobile Router, Access Point, Switch, NSG, USG FLEX, ATP, and USG20(W)-VPN). The bundled license is automatically assigned to the purchased Nebula Device when you add the Nebula Device to NCC. A bundled license cannot be transferred to another Nebula Device.

An add-on license is a license purchased separately from a Nebula Device as a license key, from Zyxel or another vendor. An add-on license can be applied to any Nebula Device.

3.3.2 License States

The following are the license states in NCC.

- **Active** – This displays when the license pack assigned to a Nebula Device, is activated, and is in use (expiration countdown/timer has started).
- **Queued** – This displays when the same license pack assigned to a Nebula Device, is activated, but not yet in use (expiration countdown/timer has not started).
- **Deferred** – This displays when you bought a Gold Security pack license and a new UTM Security pack license. The new UTM Security pack license services are deferred as the Gold Security pack license has priority, so the new UTM Security pack license services will not become active until the Gold Security pack license services first become active, then expire.

Note: A bundled license pack has priority over other license pack.


For example, a Gold Security pack license will become Deferred when assigned to a Nebula Device with an Active bundled UTM Security pack license.

- **Inactive** – This displays when the license pack assigned to a Nebula Device, is not activated in NCC.
- **Unused** – This displays when the license pack assigned to an organization, is not assigned to a Nebula Device and not activated in NCC.
- **Expired** – This displays when the license pack assigned to a Nebula Device is past its validity.


3.3.3 License Activation Process

You must have a Nebula Device and a license pack to activate a license. Perform the following to activate a license.

- 1 In the Organization-wide > License & inventory, click Action > Add more licenses.

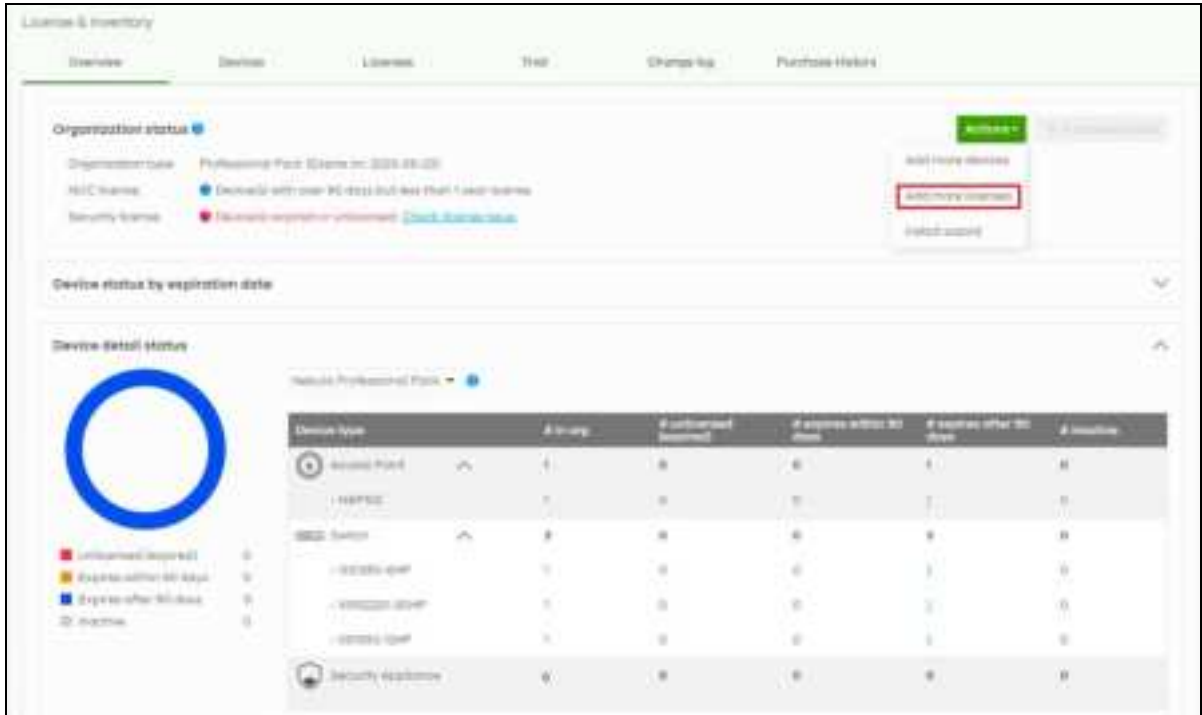

- 2 Enter the License key and the License information will display.

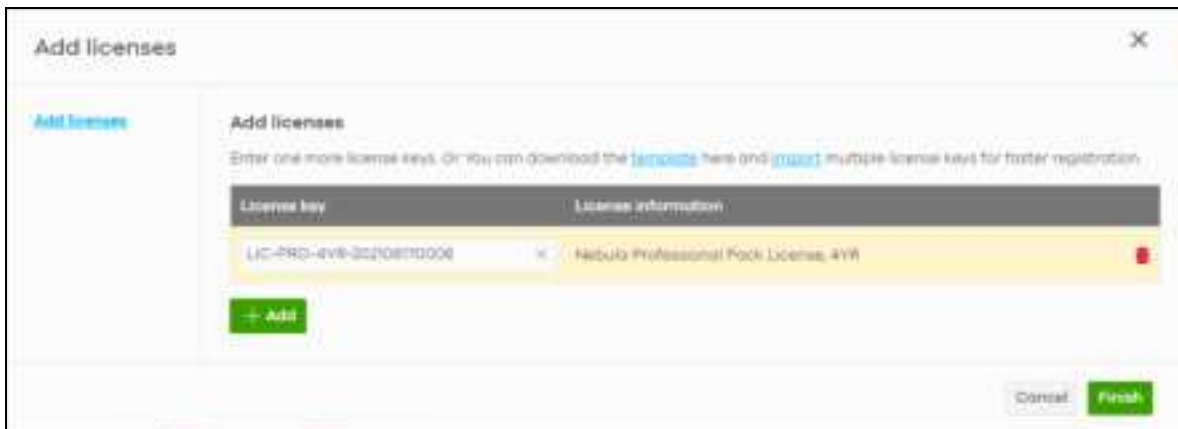


- 3 Click Finish. The license is now assigned to your organization and site.

Note: A newly assigned license will not start its expiration countdown/timer until activated.
Multiple add-on Plus Pack and Pro Pack licenses can be assigned to the same Nebula Device managed by NCC.


- 4 In the Organization-wide > License & inventory, select the Devices tab.
- 5 Locate the Nebula Device to assign a license(s). Click the Actions button and select Assign license on the device row.
- 6 Clear any license that you do not want added to the Nebula Device.

- 7 For multiple licenses of the same type to be added to the Nebula Device, set the number of licenses in the Select # of license field.
- 8 Set the expected expiration date criteria from the License assignment mode.
 - Assign min. period – NCC assigns one of each license type with the shortest duration to each Nebula Devices.
 - Assign all – NCC assigns all selected license type equally to each Nebula Device.
 - Target expiration date – Set a future date. NCC assigns an equal number of licenses to each Nebula Devices until the expiration date (future date) is reached or exceeded.
- 9 Click Please check this box if you want to activate licenses and upgrade. Then, click Finish.

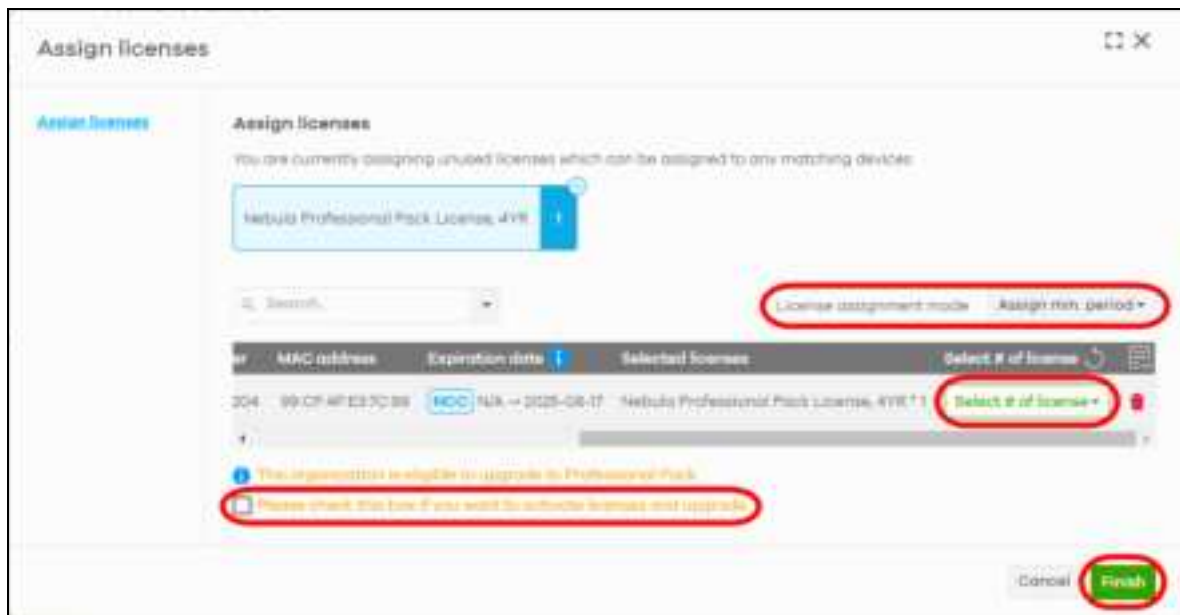

The features that will be unlocked depends on the license type purchased.

Figure 32 License Activation Process

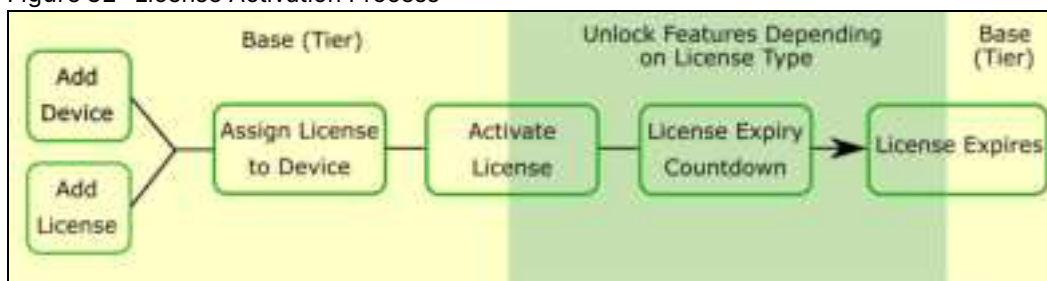

3.4 Monitor a Site

This section shows you how to view and monitor your Nebula Devices and WiFi/wired networks within a site.

-

- [illegible]

3.5 Know What License Tier My Organization Belongs To


The NCC features that your organization can use depends on which license tier it belongs to. See [Section 1.1.5.2 on page 19](#) for more information on organization license tiers and the feature differences between the license tiers.

To view the type of license tier your organization belongs to, go to Organization status: Organization type in Organization-wide > License & inventory > Overview.




When you have many organizations, you can also click the Organization drop-down menu on the NCC title bar to know the license tier that each organization belongs to.

- Base tier: blank
- Plus tier: PLUS
- Professional tier: PRO

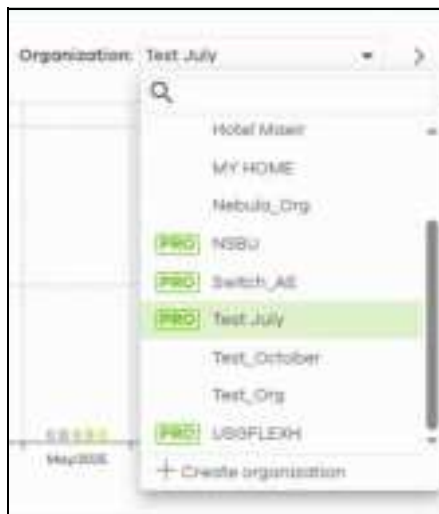

3.6 Know What Licenses are Set to Expire in My Site or Organization

Use the Overview tab in the Organization-wide > License & inventory to keep track of what licenses are set to expire to prevent a cut in services.

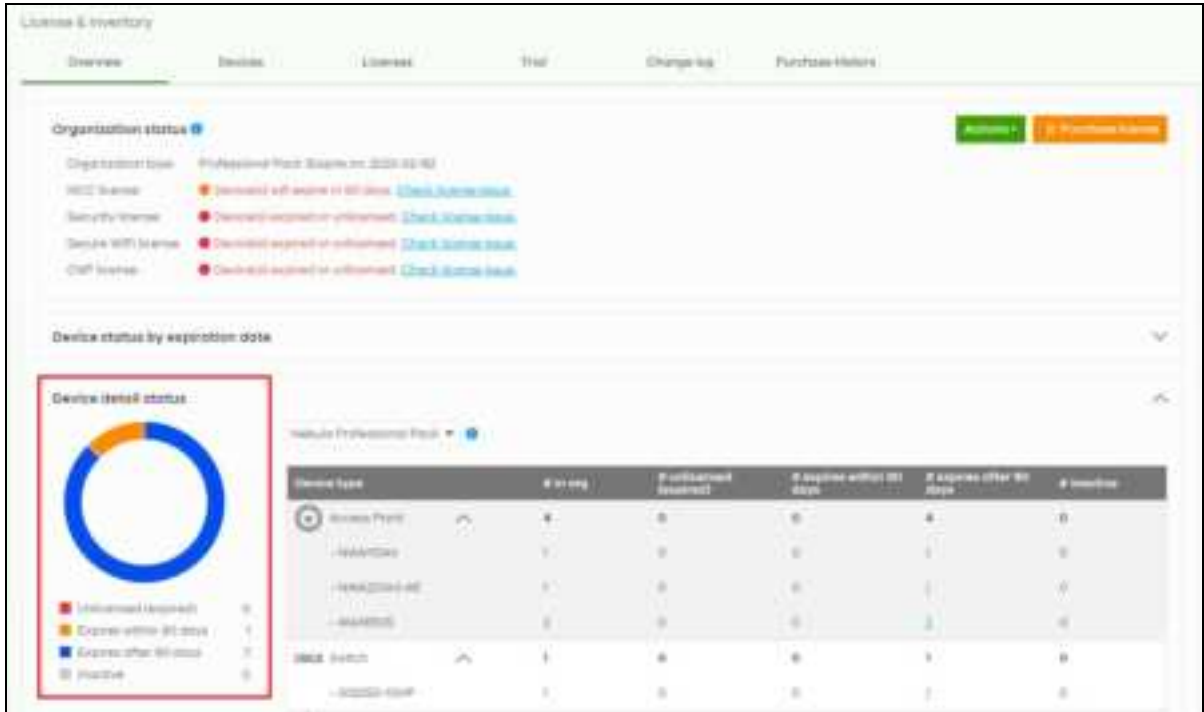

The license health is shown in the Device detail status and the following are the definition:

- Red – Nebula Device with expired license.
- Orange – Nebula Device with license that will expire in 90 days.
- Blue – Nebula Device with license that will expire in less than a year but over 90 days.
- Green – Nebula Device with license that will not expire within a year.

If a Pro or Plus tier license expires while assigned to a Nebula Device or you add an unlicensed Nebula Device to the organization, you have a 15-day grace period during which the organization's license remains active. See [Section on page 25](#) for details on a Nebula Device entering the grace period and what actions you must take.

3.7 Renew an Expired License

An administrator account should have read and write (Full) access privilege to add or renew licenses for Nebula Devices in the organization. Go to Organization-wide > License & inventory to view the available (unused) licenses assigned to your organization.

[illegible]

In the example figure above, four kinds of licenses are available for assigning to your Nebula Device: Pro Pack 1MO / 1YR and Plus Pack 1MO / 1YR. Click any one of the license. For example, if you click Plus Pack 1YR, then only the two Plus Pack License Keys with 1-year validity will display in the table.

Select the checkbox and click Action. Then click Assign license. See [Section 3.3.3 on page 82](#) for details on assigning a license to a Nebula Device.

If the expired Nebula Device is still in the organization after the grace period elapses, the organization automatically downgrades to the Base tier. See [Section on page 25](#) for details on a Nebula Device entering the grace period and what actions you must take.

3.8 Transfer Licenses

A license assigned to an organization and Nebula Device can be transferred to another Nebula Device in the same or different organization. The following guidelines apply when transferring licenses:

- The Nebula Devices must have the same owner.
- Bundled, Trial, and Promotion licenses cannot be transferred. (See [Table 196](#) for more information.)
- If the license transfer causes the Nebula Devices in the organization to be without a valid license, the organization automatically downgrades to the Base tier.

3.8.1 Select Transferable Licenses

To select a transferable license(s), do the following:

- 1 Go to the Organization-wide > License & inventory > Licenses screen.
- 2 Select the license you want to transfer. Click Actions, and then click Transfer license.



3.8.2 Undo Assigning a License

An administrator account should have read and write (Full) access privilege to un-assign licenses. Only an Inactive license (the license is assigned to a specific Nebula Device but not activated) can be un-assigned.

To un-assign a license, do the following:

- 1 Go to the Organization-wide > Configure > License & inventory > License screen.
- 2 Select the License Key with an Inactive license state that you want to undo assign. Click Action, then click Undo assign. The license will return to the Unused license state.




3.8.3 Transfer a License to a Different Organization


Only an Unused license (a license which is assigned to an organization but not assigned to a specific Nebula Device) can be transferred. Both source and destination organizations should belong to the same owner.

To transfer a license to another organization, do the following:

- 1 Perform the steps described in [Select Transferable Licenses](#).
- 2 With the licenses you want to transfer selected, click Actions and then click Change organization.

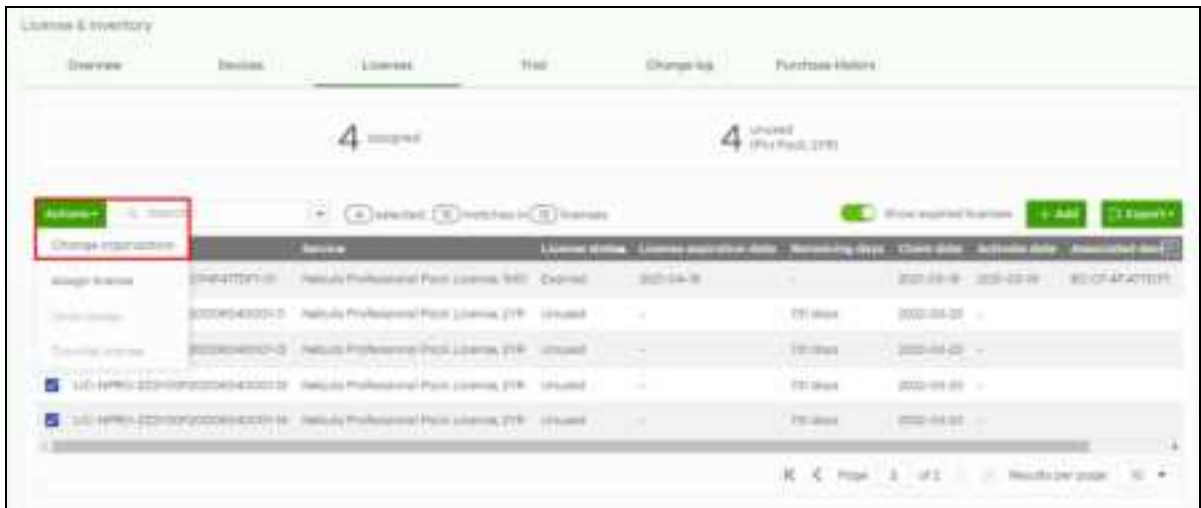

- 3 Select the Organization you want to transfer the licenses to. The current organization will be excluded from the list. Then click Yes.

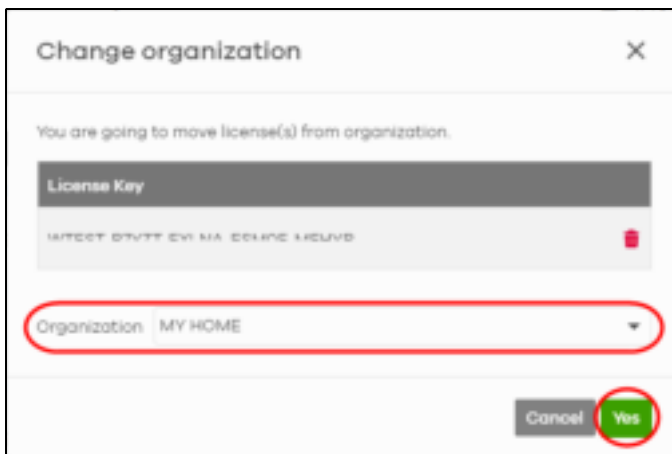


You have successfully transferred a license to another organization, but without assigning it to a Nebula Device yet.

3.8.4 Assign a License to a Nebula Device in the New Organization

To assign a license(s) to a Nebula Device in the new organization, do the following:


- 1 Perform the steps mentioned in [Transfer a License to a Different Organization](#).
- 2 Select the Organization and Site where the license is transferred.

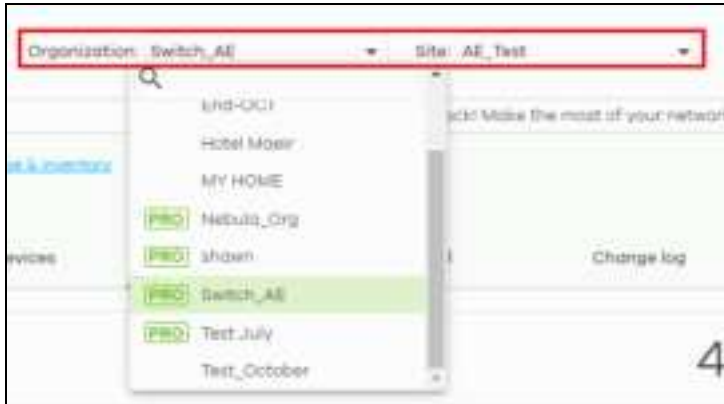

- 3 Go to the Organization-wide > Configure > License & inventory > Device screen.
- 4 Select the Devices, click Actions, then click Assign license.




- 5 Select the License assignment mode to have NCC filter licenses that can be assigned.

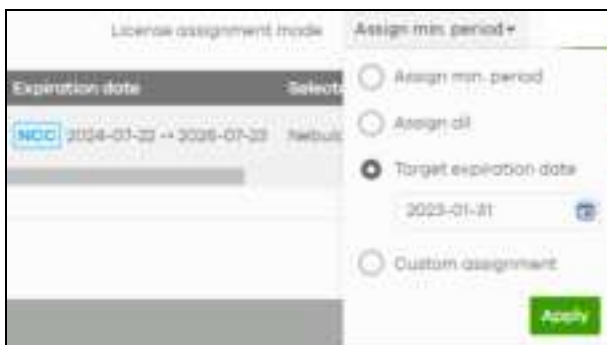

- Assign min. period – one month license packs for your Nebula Device will be picked and displayed.
- Assign all – all licenses that can be assigned are displayed.
- Target expiration date – all licenses that meet the expiry criteria you set and can be assigned are displayed.
- Custom assignment – any change in value to Assign min period and Assign all licenses above will become a Custom assignment and are displayed.


- Click Select # of license. In the pop-up window, confirm or edit the value appearing beside the license type based on the criteria set in License assignment mode. Click Select to confirm. Then click Finish.

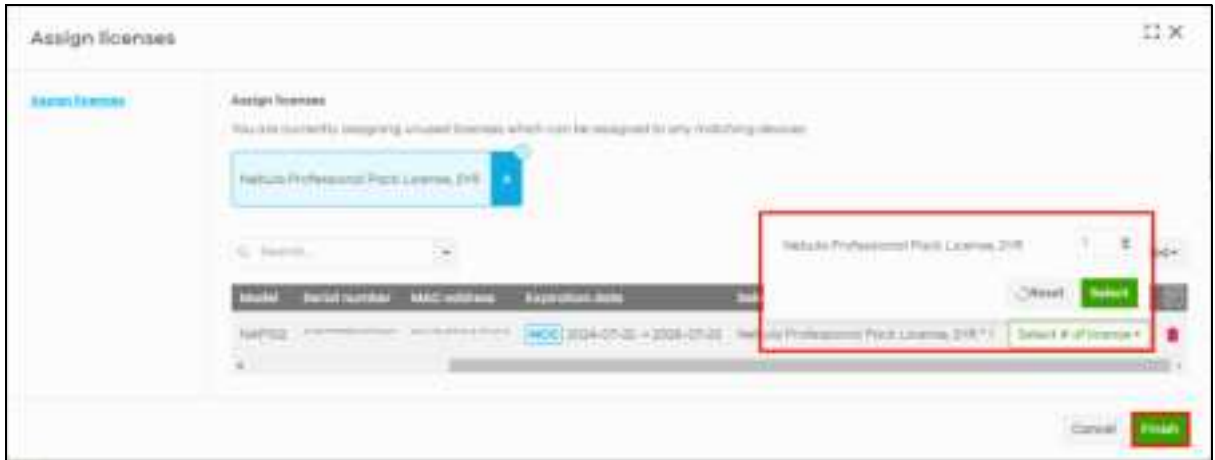

3.8.5 Transfer a License to a Nebula Device in a New Organization

To transfer a license(s) to a Nebula Device in the new organization, do the following:

- Perform the steps mentioned in [Assign a License to a Nebula Device in the New Organization](#).
- Click Organization-wide > License & inventory > Device tab.
- Select the devices with the license to be transferred.
- Click Actions and select Transfer License.

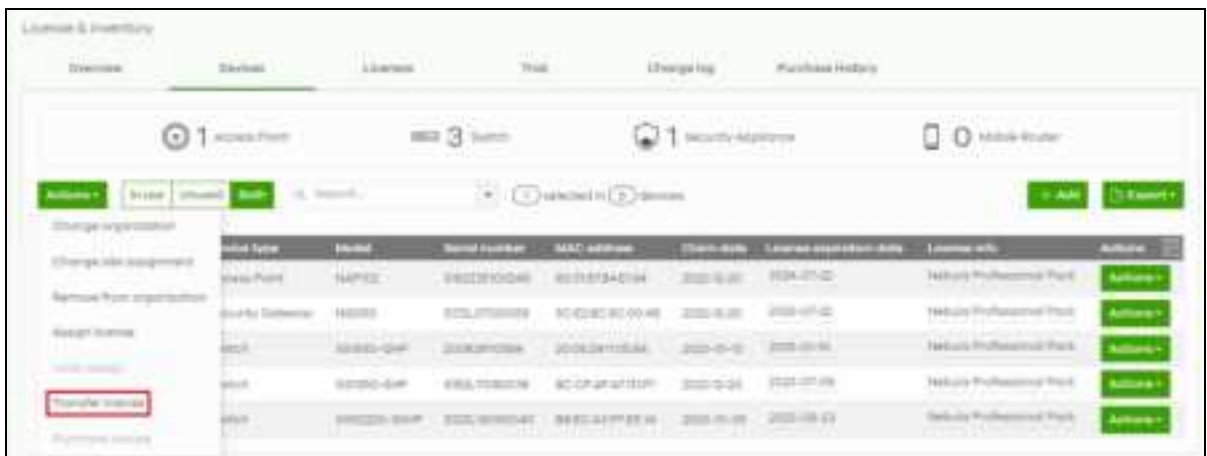

- The License transfer window appears. Click Search to set the filter to select the licenses.



- 6 Click Select target device to transfer all licenses to one Nebula Device by selecting the same/different Organization and target Device. Then click OK. Or select the devices individually.



3.9 Change an Organization and/or Site Name

To change your organization name or site name, do the following:

Organization Name

- 1 Go to Organization-wide > Organization-wide manage > Organization settings.



- 2 Enter a new descriptive name, 1 – 64 characters including 0–9 a–z `~!@#\$%&*(_+ -= {}|[]; '"/<> ?) in Name.

Note: NCC does not allow duplicate organization name.

Note: Changing the organization name will not affect the Nebula Devices configuration in NCC.

- 3 Then, click Save at the bottom of the screen.

Site Name

- 1 Go to Site-wide > Configure > Site settings.

- 2 Enter a descriptive name, 1 – 64 characters including 0–9 a–z A–Z `~!@#\$%&*(_+ -= {}|[];'"./<> ?) in Site name.

Note: NCC does not allow duplicate site name.


Note: Changing the site name will not affect the Nebula Devices configuration in NCC.

- 3 Then, click Save at the bottom of the screen.

3.10 Reset the Nebula Password

If you forget your Nebula portal login password and need to reset it, do the following:

- 1 In the Nebula portal Sign In page, click Forgot Password.

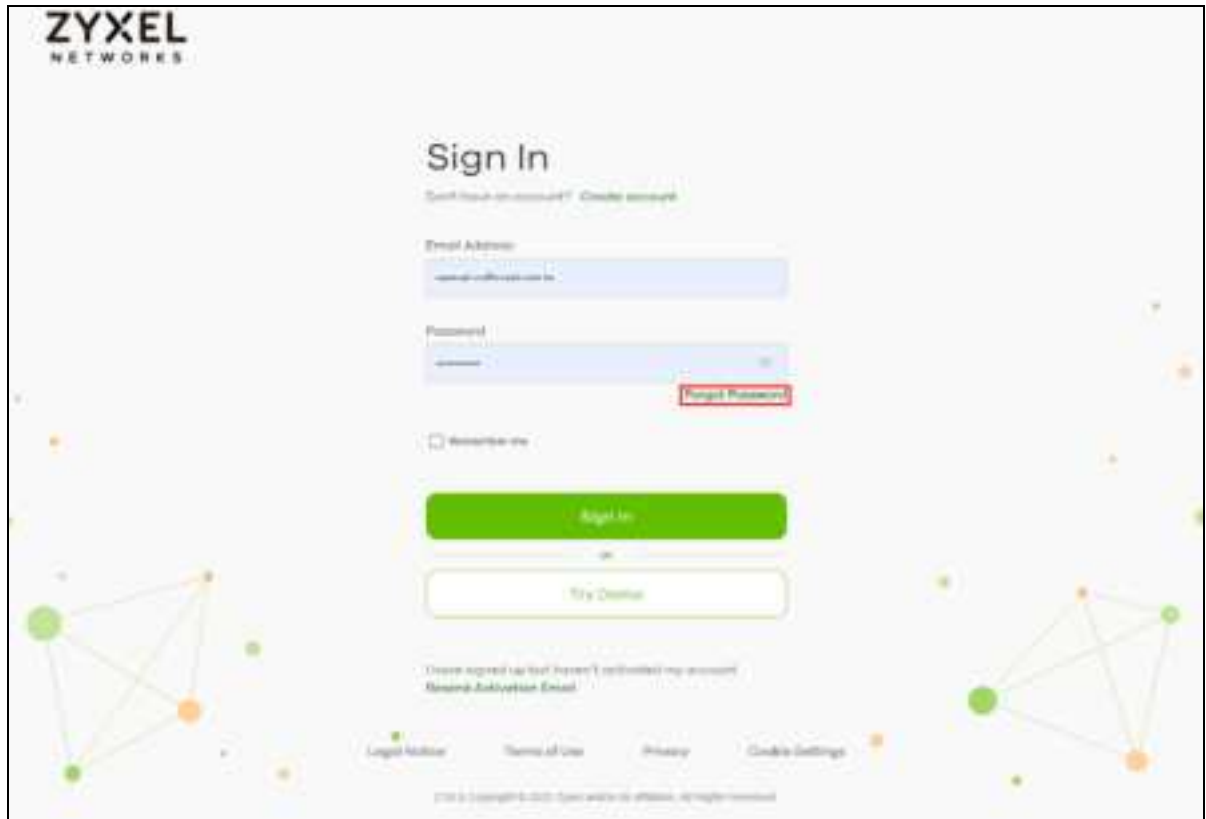


The image shows the ZyXel Networks Sign In page. At the top left is the ZyXel Networks logo. The main heading is "Sign In". Below it, there are two links: "Don't have an account?" and "Create account". The form has two input fields: "Email Address" and "Password". The "Forgot Password" link is highlighted with a red box. Below the password field is a checkbox for "Remember me". There are two buttons: a green "Sign In" button and a white "Try Demo" button. At the bottom, there is a link for "Forgot Password" and a footer with "© 2016 ZyXel Networks Corp. All rights reserved."

- 2 Enter your Zyxel Account's email address, and then click Send.




The image shows the ZyXel Networks Forgot Password page. At the top left is the ZyXel Networks logo. The main heading is "Forgot Password". Below it, there is a text prompt: "No worries! Enter your email address, and we will send you a password reset email shortly." There is an input field for "Email Address" and a green "Send" button. Below the button, there are two links: "Remember your password now?" and "Sign In". At the bottom, there are two links: "Don't have an account?" and "Create account".


A reset password email has been sent notification appears.

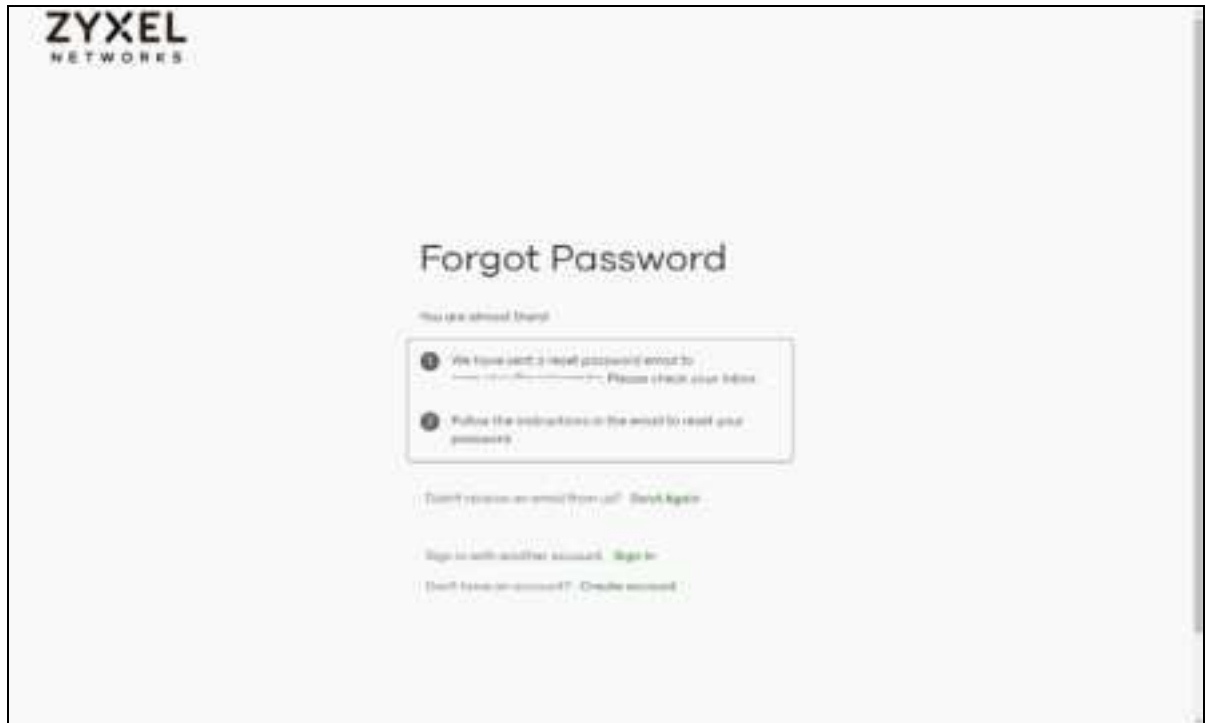


- 3 Click the link in the Request Password Reset to Login ZyXel email.

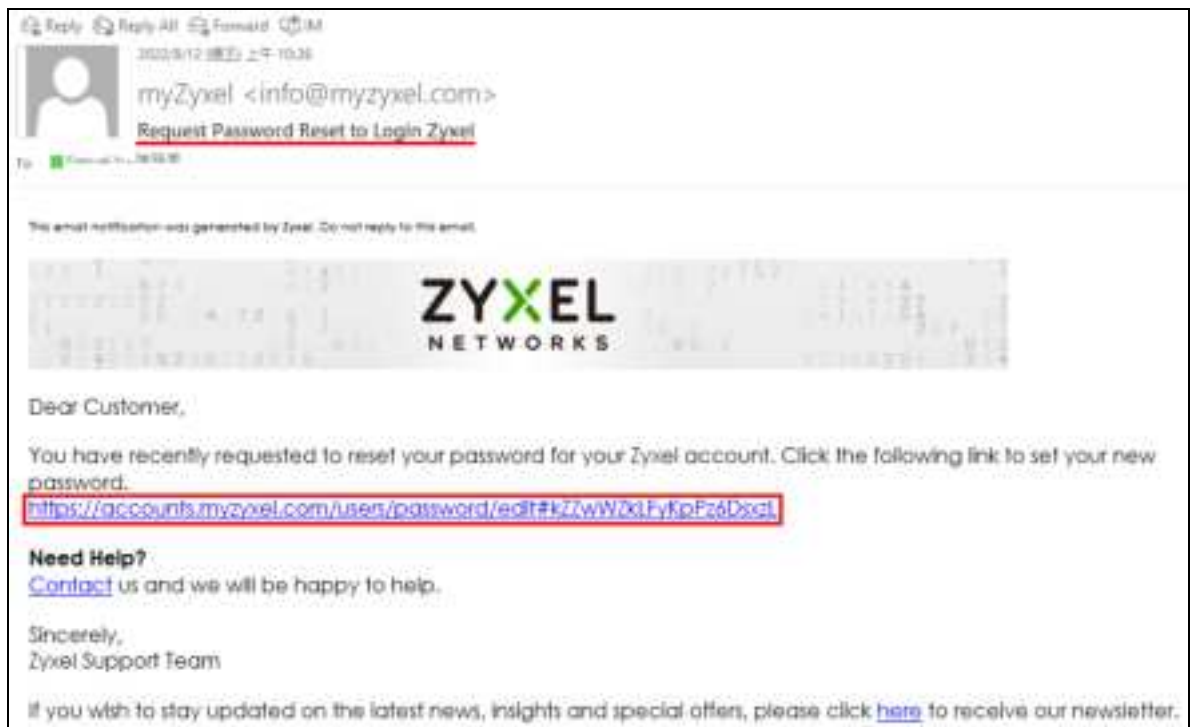


- 4 The following screen appears. Click Reset Password.

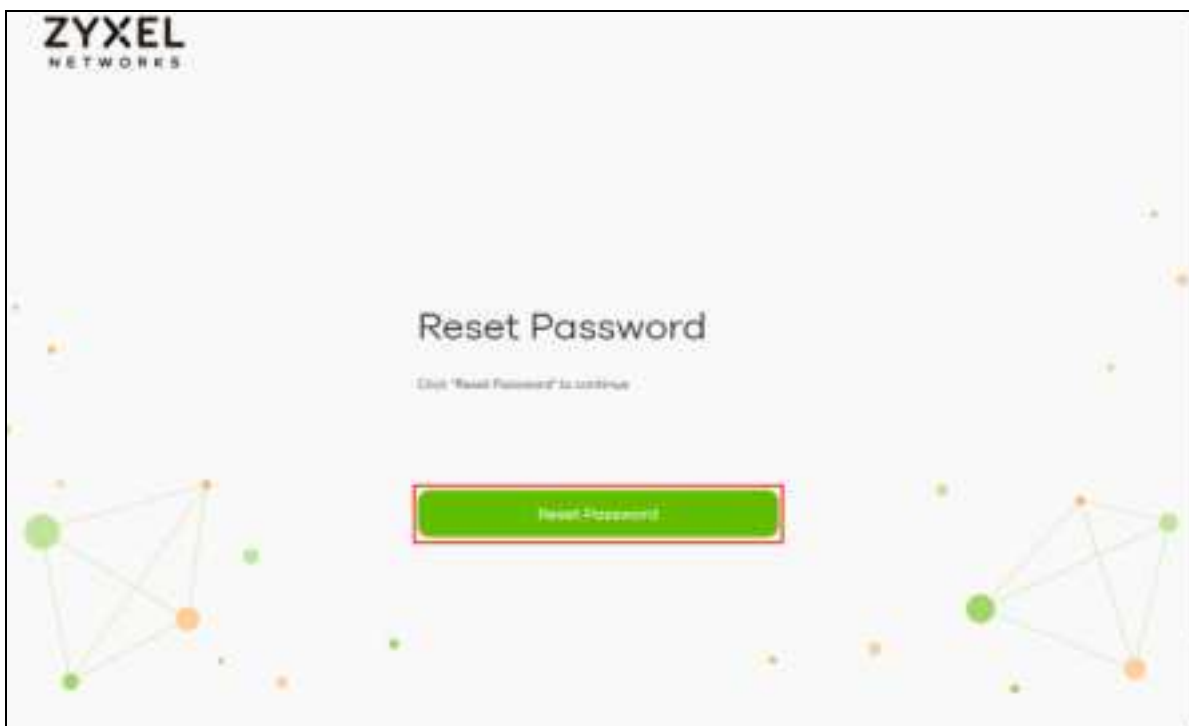

- 5 Enter the New Password. Use a minimum of 8 characters, including 0–9 a–z A–Z `~!@#\$%&*(_+=-{}|[];'"/<>?). Then click Continue.

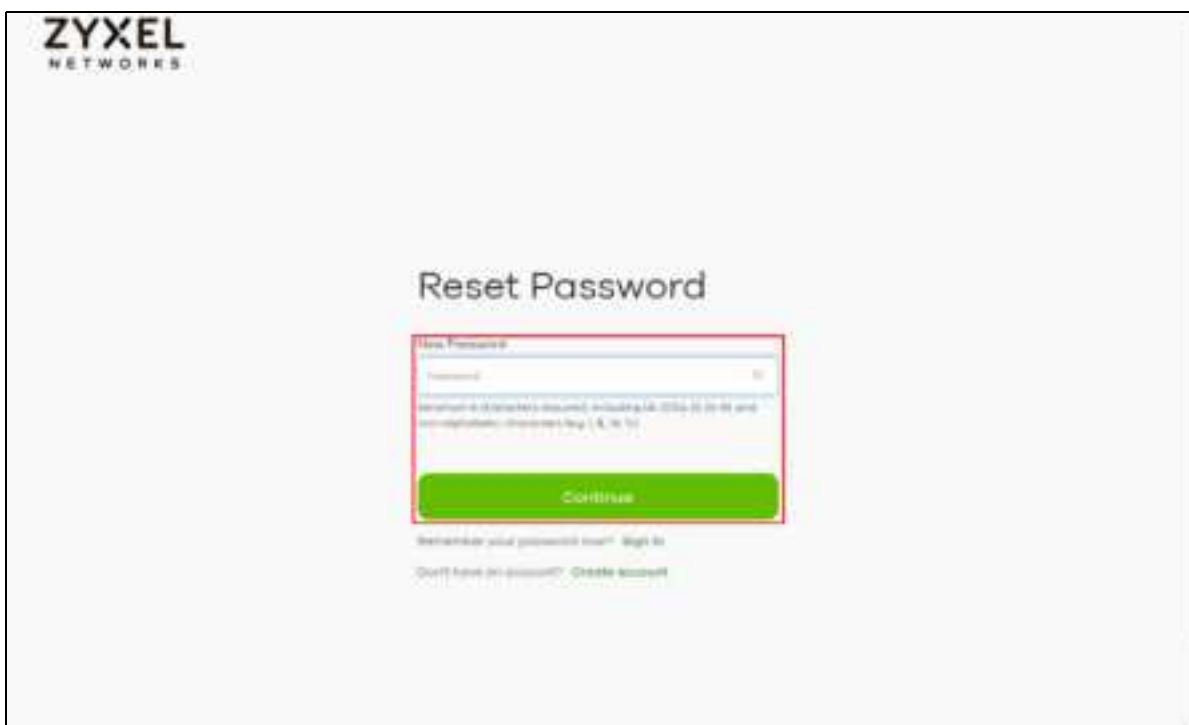


- 6 You will be transferred to the myZyXel portal. Click Update password.

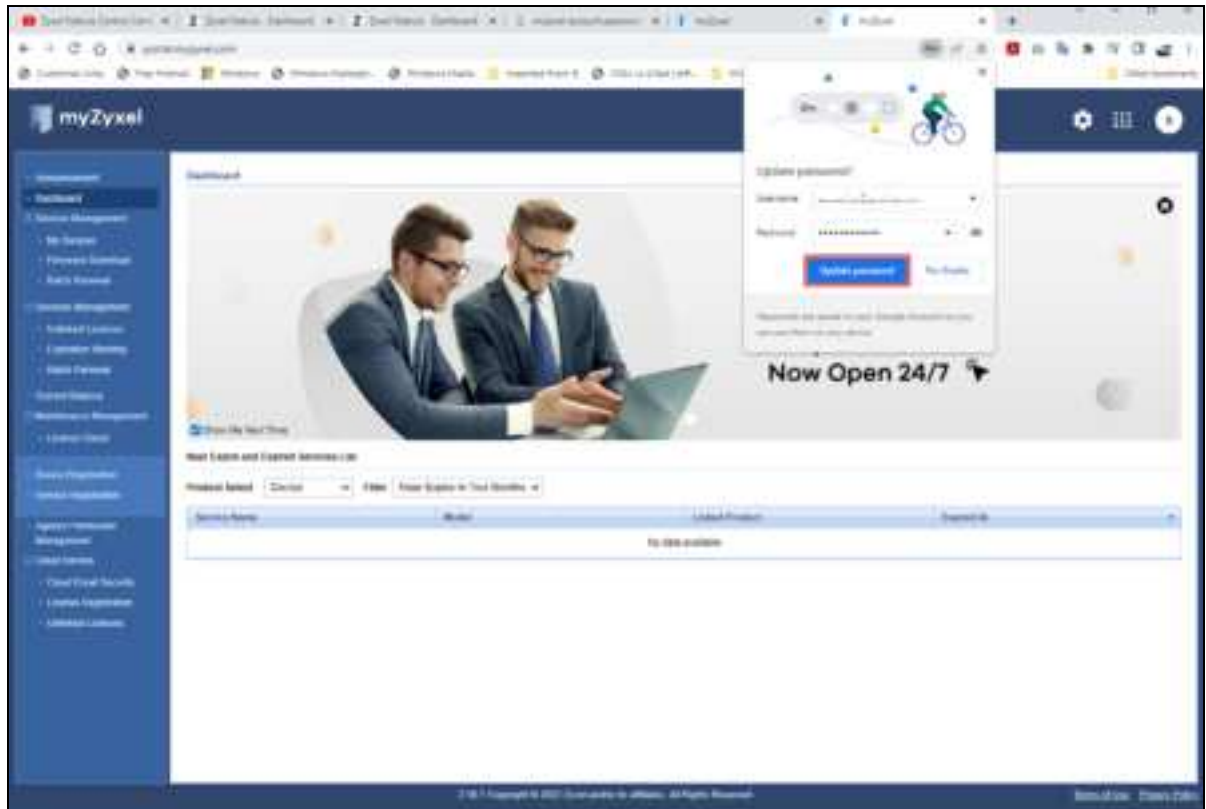

3.11 Maintain Firmware

This section shows you how to update and maintain a Nebula Device's firmware.

- 1 Go to the Site-wide > Configure > Firmware management > Overview screen. Under Settings, you can set different times to upgrade firmware for your Access Points, Switches, Security Routers, Firewalls, Security Gateways, and Mobile Routers in your site. Select the day and time of the week when NCC will detect if any new firmware is available. NCC will send out a reminder email to the administrator for the available updates. If the administrator does NOT perform the update, after the set period of time is over, NCC will automatically upgrade the firmware for the Nebula Devices in the site. Or select Upgrade now to upgrade immediately.

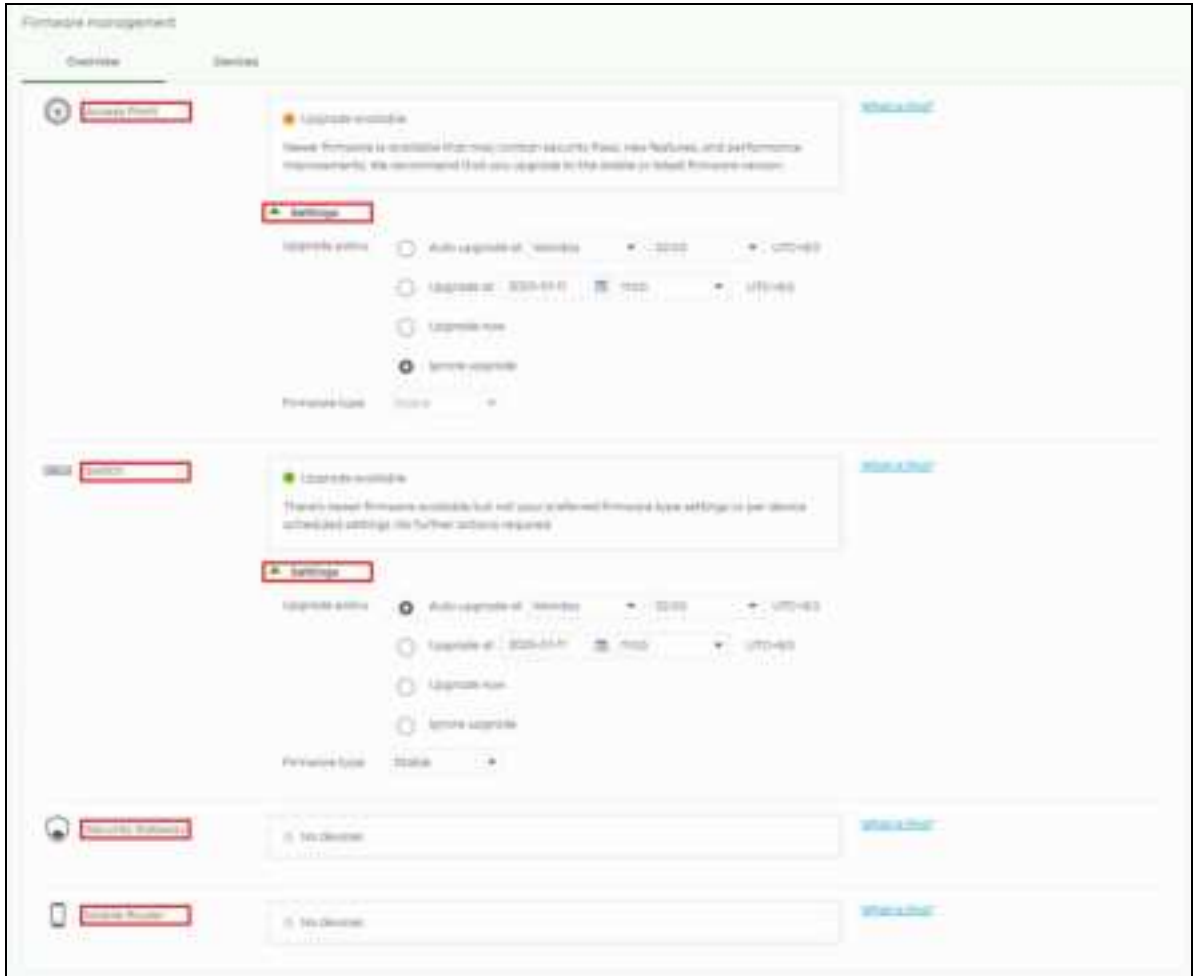

- You can set different times to upgrade firmware for your Nebula Devices to overwrite the site-wide Settings by going to the Site-wide > Configure > Firmware management > Devices screen. Or select Upgrade now to upgrade immediately.

The screenshot displays the 'Firmware management' interface with a table of devices. The table has columns: Status, Device type, Model, MAC address, IP, Current version, Firmware status, Availability, Firmware type, and Upgrade. The table contains 8 rows of device information. The first row is highlighted in yellow. The 'Upgrade' column has a dropdown menu for each device.

Status	Device type	Model	MAC address	IP	Current version	Firmware status	Availability	Firmware type	Upgrade
Switch	Switch	SW4000-10P	00:0C:29:00:00:00	192.168.1.1	V6.00.00.00.00.00	Good	1	Upgrade available: Stable	No
Access point	Access point	AP4000	00:0C:29:00:00:00	192.168.1.2	V6.00.00.00.00.00	Good	1	Upgrade available: General Availability	No
Access point	Access point	AP4000	00:0C:29:00:00:00	192.168.1.3	V6.00.00.00.00.00	Warning	1	Upgrade available: General Availability	No
Access point	Access point	AP4000	00:0C:29:00:00:00	192.168.1.4	V6.00.00.00.00.00	Good	1	Upgrade available: Beta	No
Access point	Access point	AP4000 PRO	00:0C:29:00:00:00	192.168.1.5	V6.00.00.00.00.00	Good	1	Upgrade available: General Availability	No
Access point	Access point	AP4000 PRO	00:0C:29:00:00:00	192.168.1.6	V6.00.00.00.00.00	Good	1	Upgrade available: General Availability	No
Access point	Access point	AP4000-4E	00:0C:29:00:00:00	192.168.1.7	V6.00.00.00.00.00	Good	1	Upgrade available: General Availability	No
Access point	Access point	AP4000-4E	00:0C:29:00:00:00	192.168.1.8	V6.00.00.00.00.00	Good	1	Upgrade available: General Availability	No

- 3 If you do not want to upgrade the firmware immediately, you can click +Schedule Upgrade to create a schedule for your Nebula Device.
- Select Follow device type settings to upgrade the Nebula Device according to the site-wide schedule configured for all Nebula Devices in the site.
 - Select Auto upgrade at every Week/Month on Sunday–Saturday at hh:mm to set up a routine schedule for upgrades.
 - Select Upgrade at to set up a specific date and time for a one time upgrade. This option can be enabled only when the selected Nebula Devices have a new firmware available.

Note: Due to network bandwidth and number of Nebula Devices per site, not all Nebula Devices may get the firmware upgrade on the specified date/time.

- Select Upgrade now to immediately install the firmware. Then select the Firmware type (Stable or Latest (default)).

Note: When a firmware is officially released by Zyxel, it is the Latest firmware. For example, V6 is the Latest firmware. When the next firmware, V7, is released by Zyxel, V7 becomes the Latest firmware, and V6 will be classified as General Availability. Your Nebula Device firmware can be upgraded to V7 to use the new features. Zyxel will select a previous version (for example, V3) as a Stable release if no major issues have been reported by users.

Note: The Upgrade at and Upgrade now options can be enabled only when the selected Nebula Devices have a new firmware available.

- 4 Click Add to save the settings.

Schedule upgrade

Upgrade policy: ☒ Follow device type settings [View all sites](#)

Selected device(s) will be updated to site-wide per device's type settings. Device(s) will remove locked status and clear recurrent schedule.

☐ Auto upgrade at every: Week ☐ on: Sunday ☐ at: 05:00 ☐ UTC+8:0

☐ Upgrade at: 2022-10-11 ☐ 14:00 ☐ UTC+8:0

☐ Upgrade now

Below device(s) will be upgraded on required time:

Device type	Model	MAC address	S/N	Current version	Schedule upgrade version
Access point	W4552D	mac-98:4e:11:11:11:11	SN-123456789	W4552D-V6	V6

[Cancel](#) [Add](#)

3.12 Backup Current Configurations in Nebula

This section shows you how to back up the current configurations for sites to the NCC. You may go back to this configuration if future configuration changes causes problems.

- 1 Go to the Organization-wide > Organization-wide manage > Configuration management: Backup & restore: Site(s) settings screen, then click +Add.



- 2 Enter a name for the backup in Description in order to save it to the NCC. You can use alphanumeric and ()+/:=?!*#@\$_%- characters, up to 512 characters. Then click Save.



The Date of the backup and the name of the Administrator account who performed the backup will appear on the table.



3.13 Assign an Administrator to Manage a Nebula Device

This section shows you how to assign an administrator to manage your Nebula Device.

- 1 Go to the Organization-wide > Administrators screen. Click +Add.



- 2 Enter the Name and Email of a Zyxel Account. Assign the Organization access (Full, Read-Only, None). See [Table 235 on page 801](#) for information on organization privileges.

If you select Full for Organization access, select Delegate owner's authority to grant owner privileges to the new administrator except deleting/transferring organization ownership. Otherwise, do not select this option.

Select Yes if you wish to Activate the account administrator. Alternatively, select No if you wish to create an account administrator, but activate at a later time. The click Create admin.



Create administrator

Name: jon


Email: jon@zyxel.com

Organization access: Full

Activate: Yes

Buttons: Close, Create admin

- 3 The Account status field will show Unverified. Click Save.

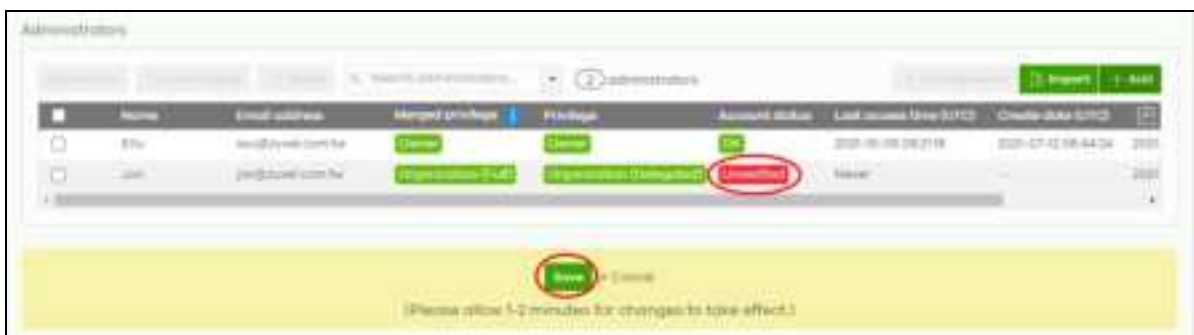

Administrators

2 administrators

Name	Email address	Manager privilege	Privilege	Account status	Last access time (UTC)	Create date (UTC)
Jon	jon@zyxel.com.tw	Full	Full	Unverified	2020-06-08 16:21:18	2020-07-02 16:44:04

Buttons: Save, Cancel

(Please allow 1-2 minutes for changes to take effect.)

The Account status field will show OK after saving. The new administrator will receive an email notification.



Administrators

2 administrators

Name	Email address	Manager privilege	Privilege	Account status	Last access time (UTC)	Create date (UTC)
Jon	jon@zyxel.com.tw	Full	Full	OK	2020-06-07 02:04:07	2020-06-08 16:44:04

Buttons: Change name, Import, Add

(Please allow 1-2 minutes for changes to take effect.)

3.14 Transfer the Ownership of the Organization

This section shows you how to transfer an organization's ownership, which includes transfer ownership of the Nebula Devices.


Note: Only the owner can transfer ownership of an organization to another administrator.

See [Section 3.13 on page 102](#) if you want to transfer management of your Nebula Devices only.

- 1 The new owner must be an administrator in the same organization. Go to the Organization-wide > Administrators screen. Click Change owner.



- 2 Select the new owner from the other administrators in this organization from the drop-down menu. Select the checkbox to continue, and click Yes to confirm transfer of ownership.

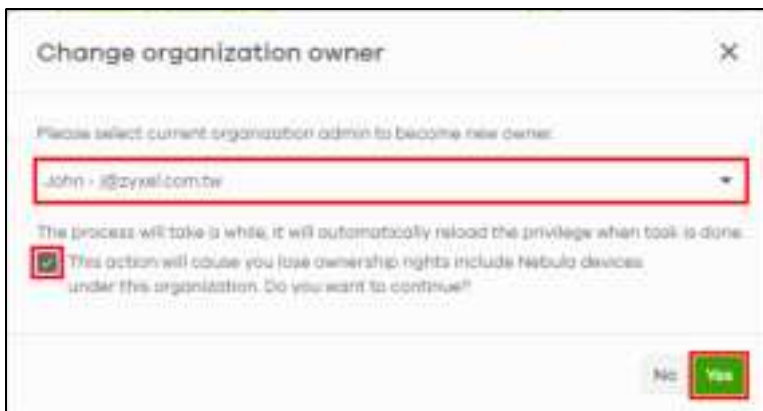

The new owner will be notified by email and must accept ownership of the organization.

3.15 Manage a Configuration Template


This section shows you how to use a configuration template to manage sites for your organization. Create a site and then bind a site to a template. You may enable the local override function if you want to configure some specific settings directly in a site after a site is bound to a template.

Note: This feature is available to an organization administrator with full privileges only (see [Table 235 on page 801](#) for details on organization privileges).


- 1 [Create and Bind a Template Site/Setting](#)
- 2 [Duplicate and Import a Template Setting to a Site](#)
- 3 [Enable the Override Site-wide Configuration \(Local Override\) Feature](#)

3.15.1 Create and Bind a Template Site/Setting

- 1 Go to the Organization-wide > Organization-wide manage > Configuration templates screen. Click +Create.

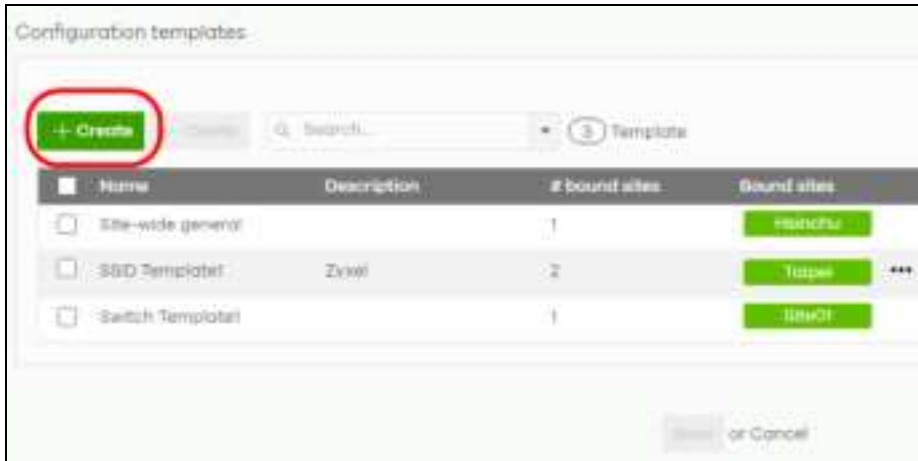

- 2 The following screen appears. Enter a Template name and Template description for the template site or setting you want to create.
To create a new configuration template, select Create new configuration template.
To import an existing template from a site or template, select Import settings from.

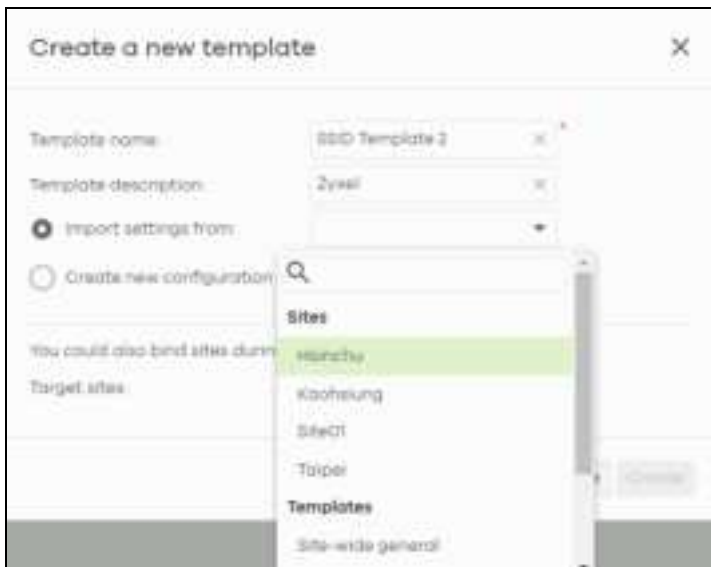

Note: Under Import settings from, select a site from Sites to copy a site's settings. Under Import setting from, select a template from Templates to copy a site's site-wide general setting, an Access Point's SSIDs setting or a Switch's port setting.

- 3 Select a site from the Target sites drop-down list box to bind the template to a site. Click Create and then click Save to save the changes.

If you skip this step, you can bind a template to a site later. Go to the Organization-wide > Organization-wide manage > Configuration templates screen. Select the template you want to use and then click the row with the template that you want to bind to a site.

Name	Description	# bound sites	Bound sites
Site-wide general		1	HsichFu
☒ SSD Template 2	Zyvel	0	
☐ SSD Template1	Zyvel	1	Taipei
☐ SSD Template3		0	
☐ Switch Template1		1	Site01

- 4 The following screen appears. Click Bind additional site to select the site you want to bind the template to.

Name	Type	Device	Bound devices
Site01			

- 5 The following screen appears. Click the Target sites drop-down list box.




- 6 Select a site from the Target sites drop-down box list and then click Bind.



- 7 Click Save to save the changes.



- 8 A configuration template is created as shown in the Organization-wide > Organization-wide manage > Configuration templates screen.

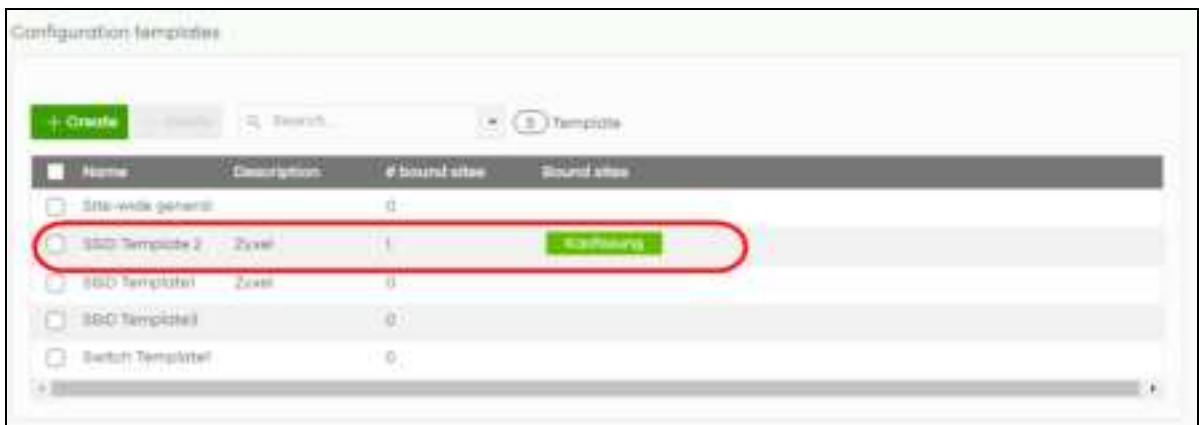

- 9 To release a site from using a configuration template, select a site and then click Unbind to unbind the site. The site which is unbound from the template still retains the settings applied from the template. The following screen appears. Click Confirm to confirm the changes.



- 10 Click Save to save the changes.




3.15.2 Duplicate and Import a Template Setting to a Site

This section shows you how to duplicate and then import the following template settings to a site:

- The site-wide general setting includes the device configuration, SNMP and captive portal re-authentication.
- An Access Point's SSID setting.
- A Switch's port setting.

The site-wide general setting

- 1 Select a bound site from the Site drop-down list box.

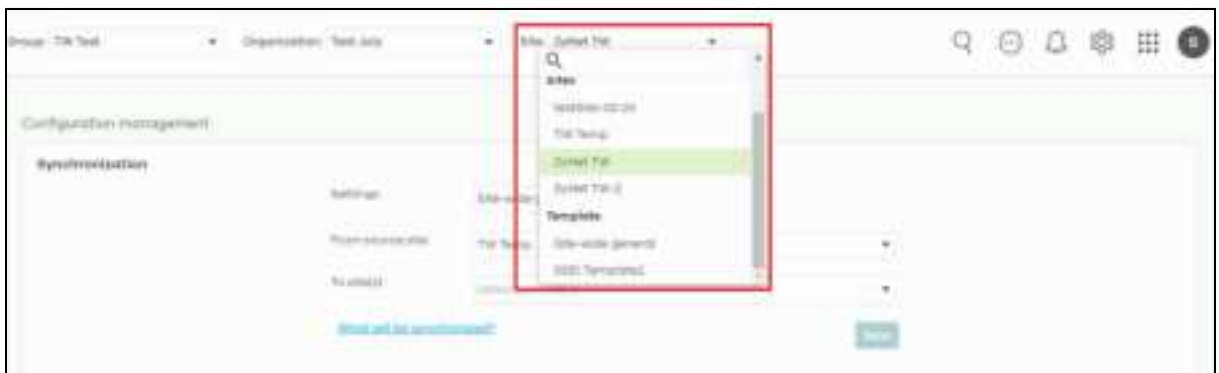

- Go to the Organization-wide > Organization-wide manage > Configuration management screen. Under Synchronization, select the Site-wide settings in Settings to copy a site's general setting to another site.

Configuration management

Synchronization

Settings: Site-wide settings (selected)

From source site: Hanchu

To site(s): Kochung

[What will be synchronized?](#)

[Sync](#)

Switch settings clone

From source device: SOURCE SITE

To device(s):

☐ include uplink port settings

[What will be cloned?](#)

[Clone](#)

- From the From source site drop-down list box, select the site you want to copy the Site-wide settings from.

Configuration management

Synchronization

Settings: Site-wide settings

From source site: Hanchu (selected)

To site(s): Kochung

[What will be synchronized?](#)

[Sync](#)

Switch settings clone

From source device: SOURCE SITE

To device(s):

☐ include uplink port settings

[What will be cloned?](#)

[Clone](#)

- From the To site(s) drop-down list box, select the site you want to import the Site-wide settings to. Click Sync to save the changes.

Configuration management

Synchronization

Settings: Site-wide settings

From source site: RUBINOW_0630

To site(s): Select some sites

[What will be synchronized?](#) Sync

Switch settings clone

From source device:

To device(s):

☐ Include uplink port settings

[What will be cloned?](#) Clone

An Access Point's SSID Setting

- 1 Go to Organization-wide > Organization-wide manage > Configuration management screen. Under Synchronization, select SSIDs to copy a site's SSIDs settings to another site. The duplicated SSIDs include the authentication and captive portal settings.

Configuration management

Synchronization

Settings: SSIDs

From source site: Site-wide settings

To site(s): Kachhung

[What will be synchronized?](#) Sync

Switch settings clone

From source device: RUBINOW_0630

To device(s):

☐ Include uplink port settings

[What will be cloned?](#) Clone

- 2 From the From source site drop-down list box, select the site you want to copy the SSIDs from.

The screenshot shows the 'Configuration management' interface. Under the 'Synchronization' section, the 'Settings' dropdown is set to 'SSIDs'. The 'From source site' dropdown is open, showing a search bar and a list of sites: 'Hsinchu' (highlighted in green), 'Kaoheung', 'SibOI', and 'Tupai'. The 'To site(s)' dropdown is empty. Below this, there is a link 'What will be ported?'. The 'Switch settings clone' section has 'From source device' and 'To device(s)' dropdowns, an 'include uplink port settings' checkbox, a link 'What will be cloned?', and a 'Clone' button.

- 3 From the To site(s) drop-down list box, select the site you want to import the SSIDs to. Click Sync to save the changes.

The screenshot shows the same 'Configuration management' interface. In the 'Synchronization' section, the 'From source site' dropdown is now set to 'FLEXCOW_0630'. The 'To site(s)' dropdown is highlighted with a red rectangle and shows the text 'Select some sites'. The 'Sync' button is circled in red. The 'Switch settings clone' section remains unchanged.

A Switch's Port Setting

- 1 Go to the Organization-wide > Organization-wide manage > Configuration management screen. Under Switch settings clone, select the Nebula Device's MAC address from the From source device drop-down list box. The cloned switch setting includes the port setting, IGMP advanced settings and STP bridge priority.

The screenshot displays the 'Configuration management' interface. It is divided into two main sections: 'Synchronization' and 'Switch settings clone'.
In the 'Synchronization' section, there are three dropdown menus: 'Settings' (set to 'S8Ds'), 'From source site' (set to 'Hanshu'), and 'To site(s)' (set to 'Hochburg'). Below these is a link 'What will be synchronized?' and a 'Sync' button.
In the 'Switch settings clone' section, there is a 'From source device' dropdown menu, which is highlighted with a red circle. It shows the MAC address '00-01-A5-00-02-1A'. Below this is a 'To device(s)' dropdown menu. There is also an unchecked checkbox labeled 'include uplink port settings'. At the bottom of this section is a link 'What will be cloned?' and a 'Clone' button.

- 2 From the To device(s) drop-down list box, select the Nebula Device's MAC address you want to import the Switch setting to. Click Clone to save the changes.

The screenshot shows the 'Configuration management' interface. It has two main sections: 'Synchronization' and 'Switch settings clone'.

Synchronization section:

- Settings: A dropdown menu with 'SSIDs' selected.
- From source site: A dropdown menu with 'Hsinchu' selected.
- To site(s): A dropdown menu with 'Kaohsiung' selected.
- A link: [What will be synchronized?](#)
- Sync button: A green button labeled 'Sync'.


Switch settings clone section:

- From source device: A dropdown menu with 'BB-EP-A3-AE-FA-1A' selected.
- To device(s): A dropdown menu, which is highlighted with a red rectangle.
- Include uplink port settings: An unchecked checkbox.
- A link: [What will be cloned?](#)
- Clone button: A green button labeled 'Clone', which is also highlighted with a red circle.

3.15.3 Enable the Override Site-wide Configuration (Local Override) Feature

A configuration template is a list of common settings that you can bind (apply) to a site. If you do not want to apply any new settings from the template to a site, just unbind that site. If you want to configure some specific settings directly in a site after the site is bound to a template, turn on the local override function. This feature is available to an organization administrator with full privileges only.

This section shows you how to enable the Override site-wide configuration feature to update site information. Select a bound site from the Site drop-down list box to edit the details of the selected site.

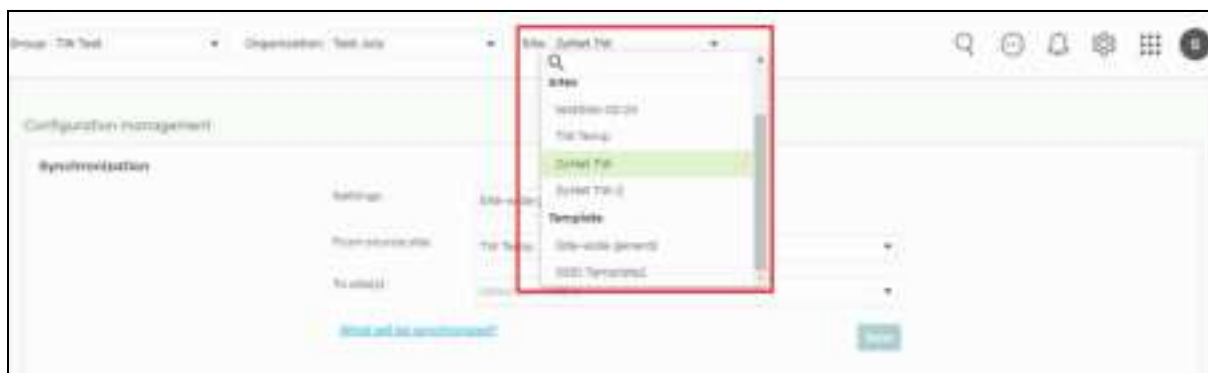

- 1 Go to a page under Site-wide > Configure and then select the Override site-wide configuration box. The Configuration page of a bound site contains an Override site-wide configuration box.

- 2 The following screen appears. Click Confirm to continue.

- 3 In the Site-wide > Configure > Site settings screen, edit the Site information, Device configuration, Captive portal reauthentication, SNMP and Voucher settings on the following page. Click Save to save the changes.

- 4 To verify the local override setting of a site, go to Organization-wide > Organization-wide manage > Configuration templates. The Local Override field may show that AP/SWITCH/GATEWAY/SITE-WIDE settings in the template do not apply to the site. A tag for AP, as shown in the following figure, indicates that Access Point settings have a local override and any further changes in the template's AP settings will not be synchronized to the site.




- 5 If you decide to go back to the original template settings, clear the Override site-wide configuration box on any page under Site-wide > Configuration. The following screen appears. Click Confirm to continue.



Overwrite the Access Point / Switch Setting

- 1 Go to any page under Site-wide > Configure > Access points / Switch and then select the Override access point configuration box. Every Configuration page of a bound site contains an Override site-wide configuration box.


Note: If the local override configuration is enabled on one page, all configuration pages of the Nebula Devices in the selected site will be enabled.

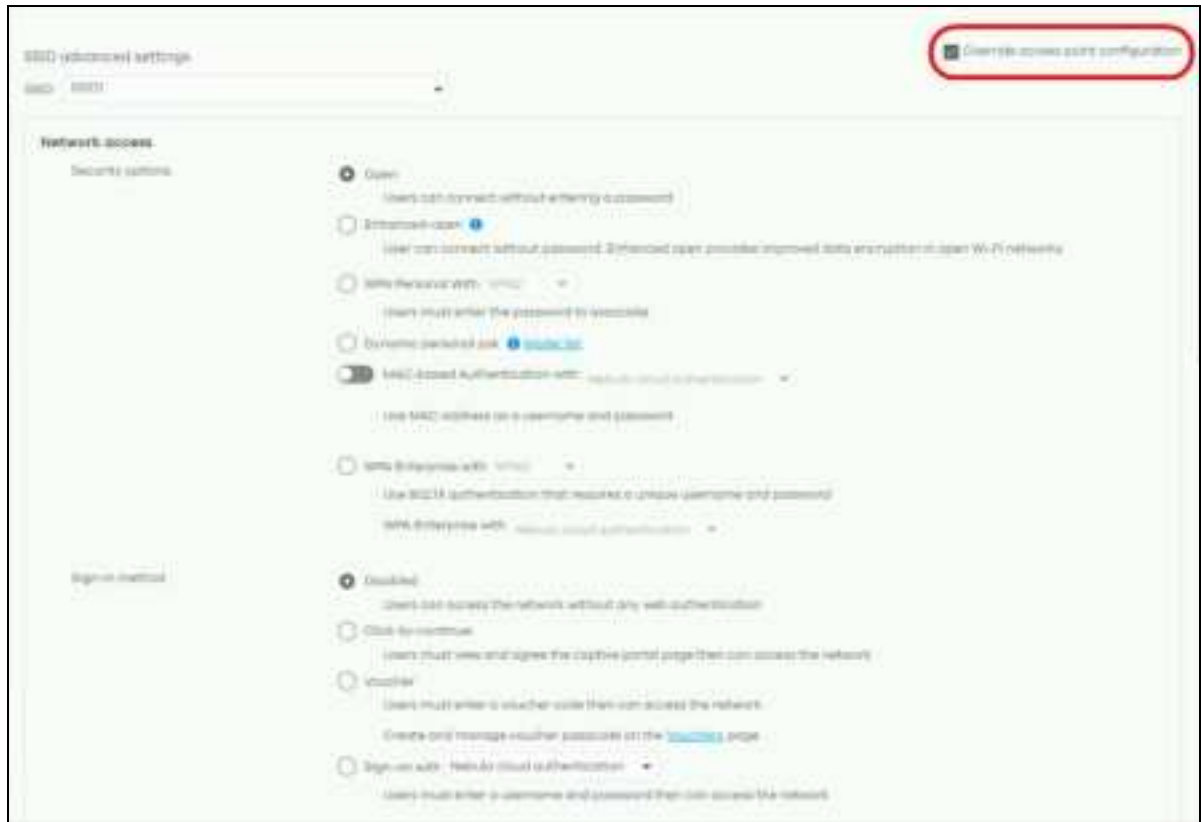

- 2 This allows a specific type of Nebula Device setting override. The following screen appears. Click Confirm to continue.



- 3 In Site-wide > Configure > Access point > SSID settings, edit your SSIDs, authentication or captive portal settings on the following page. Click Save to save the changes.

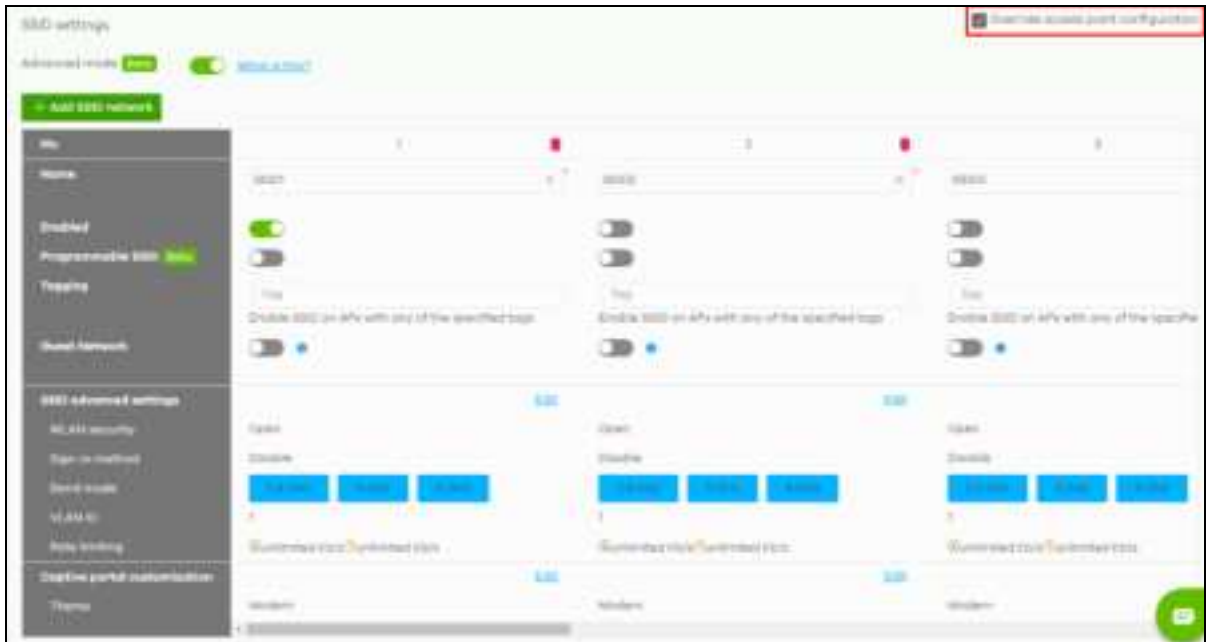

- 4 In the Site-wide > Configuration > Switches > Switch settings screen, edit VLAN configuration, STP configuration, Quality of service, or Port mirroring settings on the following page. Click Save to save the changes.



- 5 To go back to the original template settings, clear the Override switch configuration box on any page under Site-wide > Configuration > Access points / Switches. The following screen appears. Click Confirm to continue.




3.16 Activate an MSP License

You must have an NCC account and an MSP license pack to activate an MSP license.

To activate an MSP pack, do the following:

- 1 Click the More icon (upper right) and select My devices & services.

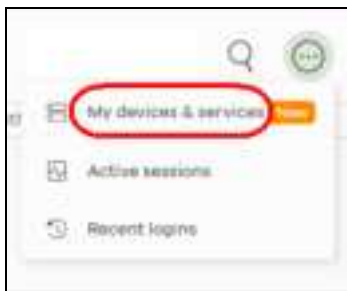

- 2 Select the Services tab.



- 3 Select the MSP Pack license, click Actions, and select Activate. The MSP menus can now unlock the MSP branding, Admins & teams, Cross-org synchronization, and MSP alerts features (see [Chapter 14 on page 796](#) for details on the MSP menus).

3.17 Configure CNP/CNP Plus Security Services

Different features are enabled depending on the type of trial license you purchased.

If you activate the CNP trial license, only the IP reputation filter is enabled. If you activate the CNP Plus trial license, IP reputation filter and application visibility & optimization are enabled.

3.17.1 Threat Protection

An IP address with a bad reputation is an IP address associated with suspicious activities, such as spam, virus, and phishing. These are stored in a database. IP reputation checks the reputation of an IPv4 (only) IP address from the database. When there are packets coming from an IPv4 address with bad reputation, you can set the Nebula Device to respond by blocking these packets. You can change the response action set in NCC. You can also configure an exempt list to allow packets from specific IP addresses regardless of their content rating.

Both the CNP/CNP Plus licenses enable the IP reputation filter feature. To configure IP reputation filter, do the following:

- 1 Go to Site-wide > Configure > Access points > Security service.
- 2 Refer to [Section 5.3.6 on page 364](#) for details on how to configure the Threat Protection fields.

- 3 Then click Save.

Go to Site-wide > Dashboard: Hit for Threat Protection by CNP Service to view the following:

- total number of times packets coming from an IPv4 address with a bad reputation occur, and
- the number of times connection attempts to an IPv4 address with a bad reputation occur.




3.17.2 Application Visibility & Optimization

Application visibility provides a way for a Nebula-managed Access Point to manage applications in WiFi network. It can detect the type of applications used by WiFi clients and how much bandwidth they use.


Application optimization is a way to limit the bandwidth usage of applications in the WiFi network. For example, applications that need real time traffic such as video streaming may use more resources. Use application optimization to limit the bandwidth used to stream video to prevent it from slowing down your WiFi network. Application optimization limits the applications bandwidth usage by their categories. You can manage and view the applications and their categories in Site-wide > Applications usage > Application View by Access Point.

You need to purchase the CNP Plus license to enable application visibility & optimization. To configure application visibility & optimization, do the following:

- 1 Go to Site-wide > Applications usage.
- 2 Make sure you are in Application View (--> Category View is displayed)
- 3 Select Application View by Access Point in the Applications field.
- 4 Hover the mouse pointer anywhere on an application row. Click the Limit icon to set its Bandwidth limit.

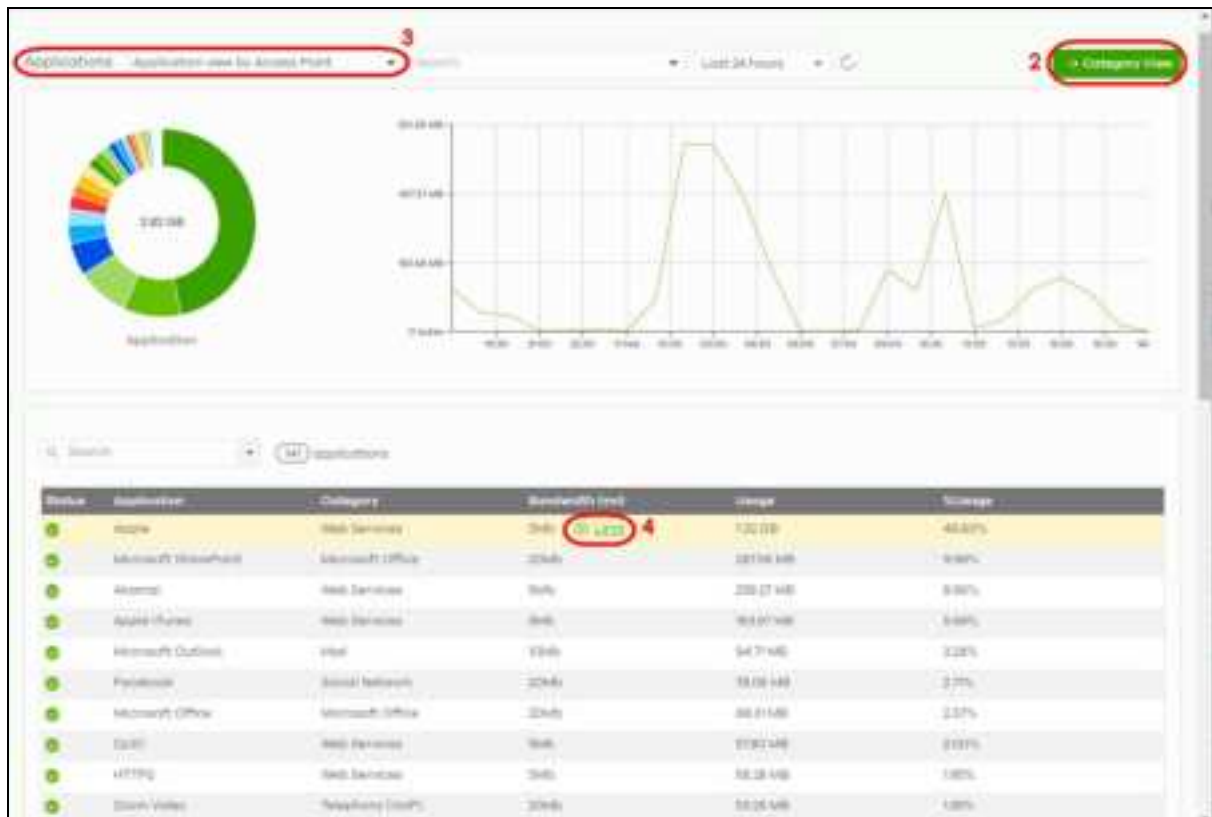


- 5 Use the slider or enter the Traffic allowed in Mb/s (1 – 30 or Unlimited).

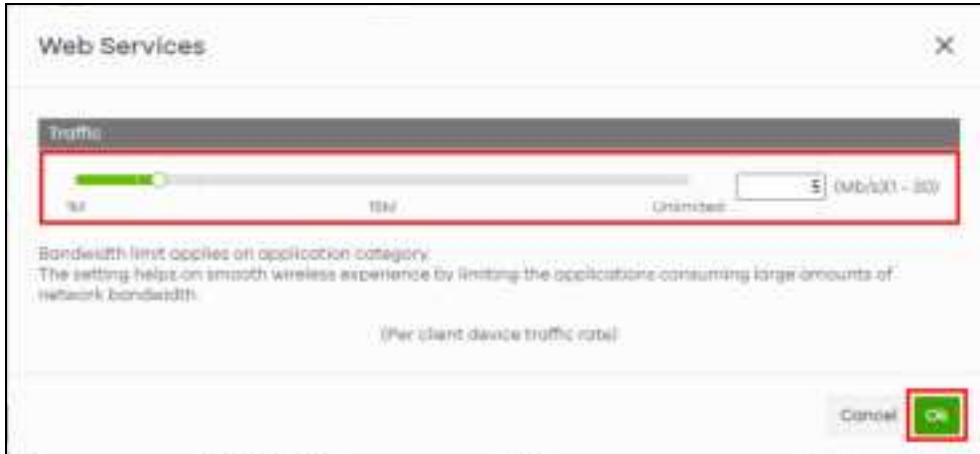

- 6 Then click Ok.

To monitor the application bandwidth usage, go to Site-wide > Dashboard: Access points application usage to view the top ten applications that use the most bandwidth in the site.

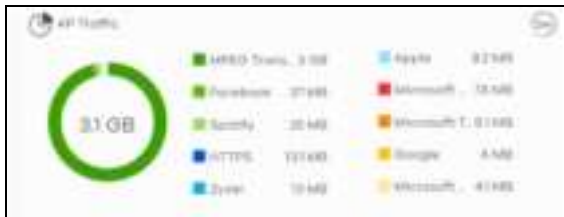


3.18 Delete an Organization

Only the Organization owner can delete an Organization. An Organization can be deleted only when it has no site(s), administrator(s), user(s), license(s), or Nebula Device(s) in the Organization.

To delete an Organization from the NCC, do the following:

3.18.1 Remove All Nebula Devices

- 1 Go to Organization-wide > License & inventory > Devices tab (1).
- 2 Click the checkbox (2) to select all Nebula Devices.
- 3 Click the Actions button (3).

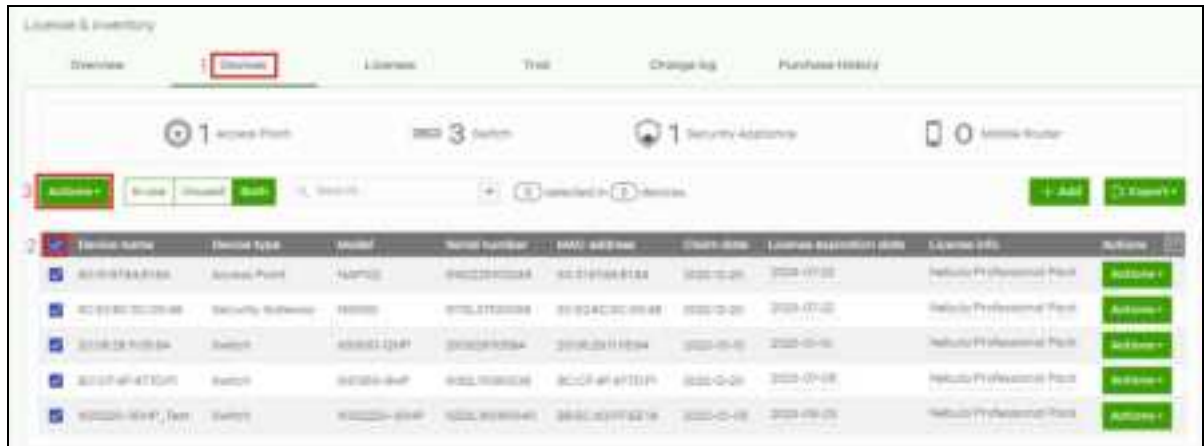

- 4 Click Remove from organization.
- 5 Click the Yes button to confirm, or click the delete icon to remove each devices individually.



3.18.2 Transfer All Licenses

See [Section 3.8 on page 88](#) in this chapter for information on how to transfer licenses assigned to an organization and Nebula Device to another Nebula Device in a different organization.


3.18.3 Delete All Sites

- 1 Go to Organization-wide > Organization-wide manage > Organization portal > Sites tab (1).
- 2 Click the checkbox (2) to select all sites.

- 3 Click the Delete button (3) to remove all sites.



- 4 Click the Delete sites button to confirm.

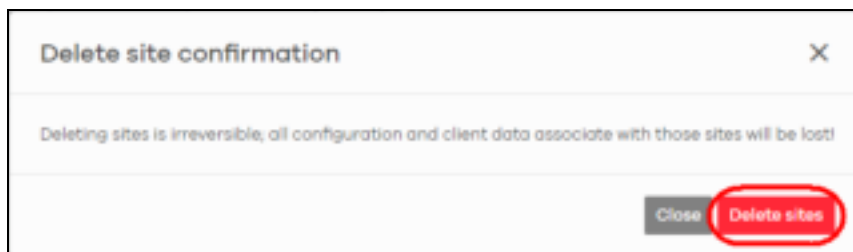

3.18.4 Delete All Administrators

- 1 Go to Organization-wide > Administrators (1).
- 2 Click the checkbox to select all administrators (2).
- 3 Click the Delete button (3).
- 4 Click the Save button (4) to confirm.



3.18.5 Remove All Users

- 1 Go to Organization-wide > Organization-wide manage > Cloud authentication (1).
- 2 Select the User tab (2).
- 3 Click the checkbox to select all users (3).
- 4 Click the Remove users button (4).
- 5 Click the Save button (5) to confirm.



3.18.6 Delete the Organization

- 1 Go to Organization-wide > Organization-wide manage > Organization settings (1).
- 2 Enter the Name of the organization you wish to remove (2).
- 3 Click the Delete organization button (3).

Organization-wide Configuration **Settings** 1

Settings:

Organization information

Name: Test_org 2

Country: Taiwan

Security

Idle Timeout: ☐ minutes of inactivity will log out users

Login IP ranges: ☐ Only allow access to this organization from IP addresses in the specified ranges.
This computer is using IP address: 10.222.09.28

Import certificate: ☒ Using certificate

Delete this organization: You can delete this organization only if it has no roles, administrators, users, licenses, or devices registered in this inventory. Please check your settings below: [roles](#), [administrators](#), [users](#), [licenses/licenses](#) of devices.

Delete organization 3

- 4 Click the OK button to confirm.


WARNING

WARNING!
Deleting an organization cannot be reversed! Are you sure you want to delete this organization?

Cancel OK

3.19 Remote Access VPN Setup

The following figure illustrates a secure VPN channel configured through NCC. The VPN client (C) remotely accesses the office server (A) through the Nebula Device (S) in a typical work from home scenario.

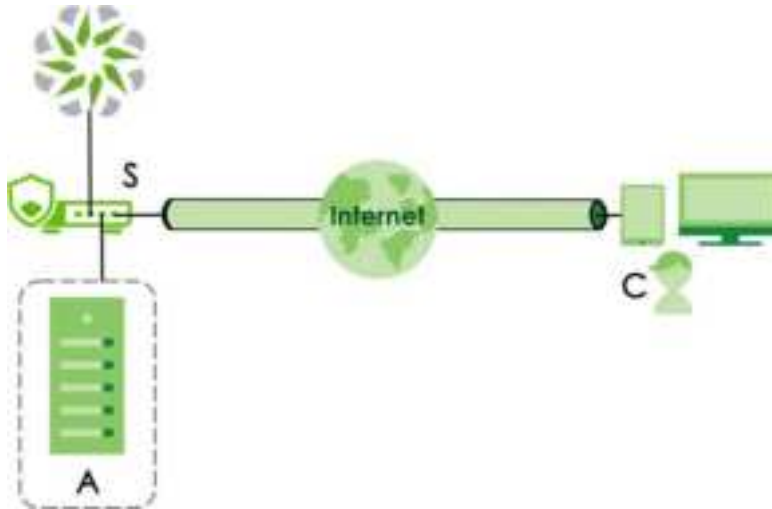

To set up a remote access VPN on Nebula, do the following:


- Create a VPN user
- Enable the remote access VPN rule for IPsec VPN client
- Check the connection in Nebula.

The user needs to do the following:

- Set up the VPN using Zyxel's SecuExtender (only), a VPN client software
- Import the VPN configuration file
- Open the VPN tunnel
- Set up two Factor Authentication on a mobile device to bind the user account.

3.19.1 Create a VPN User

- 1 Go to the Site-wide > Configure > Cloud authentication screen. Click +Add to create a user.

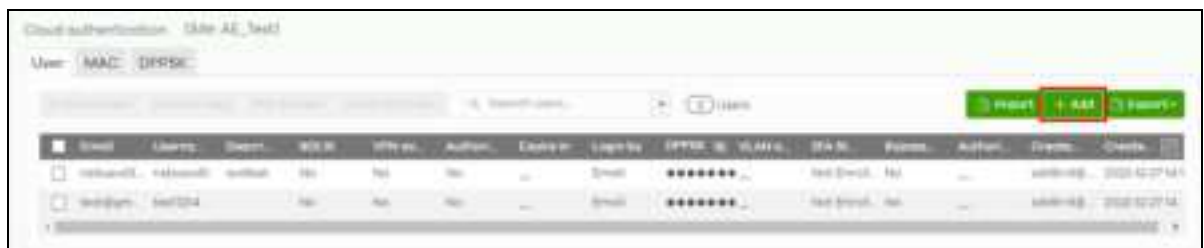

- 2 Enter an Email, Username, generate or enter a Password (4 – 31 characters, including 0–9 a–z A–Z `~!@#\$%&*(_+~={}|[];"/<> ?). Click Allow to use Remote VPN access. Click Does not expire to set no time limit for this user account. Select Username or Email in Login by. Click to select Email account information to user. Then click Create user.

Create user

Account type: USER

Email: vpnuser@zyxel.com

Username: vpnuser

Description:

Password: vfmMB4ln Generate

DPPSK: Generate

802.1X: ☐ Allow to use WPA-Enterprise to access network

VPN Access: ☒ Allow to use Remote VPN access

Authorized: Yes

Expires: ☒ Does not expire
☐ Expires in: minutes

Login by: Username or Email

VLAN assignment: Beta

Two-Factor Auth: ☐ Bypass two-factor authentication.

Email to user: ☒ Email account information to user.

Close Print Create user

- 3 Click Save.

Cloud authentication (File AE, 144)

User: MMC DPPSK

Email	Username	Password	802.1X	VPN ac.	Authn.	Expires	Login by	OTP	VLAN
reduser@zyxel.com	reduser	reduser	No	No	No		Email	*****	Red Email
reduser@zyxel.com	reduser	reduser	No	No	No		Email	*****	Red Email
reduser@zyxel.com	reduser	reduser	No	No	No		Email	*****	Red Email


Save

(Please allow 3-5 minutes for changes to take effect.)


3.19.2 Enable the Remote Access VPN Rule for IPSec VPN Client

- 1 Go to the Site-wide > Configure > Firewall > Remote access VPN screen. Click IPSec VPN server to enable VPN. Enter the IP address range in Client VPN subnet. Select IKEv2 in IKE version.

Click Two-factor authentication with Captive Portal to enable two-factor authentication with the Google authenticator app. The VPN client will be asked to provide a Google authenticator verification code, so must install the Google Authenticator app. Then click Save.

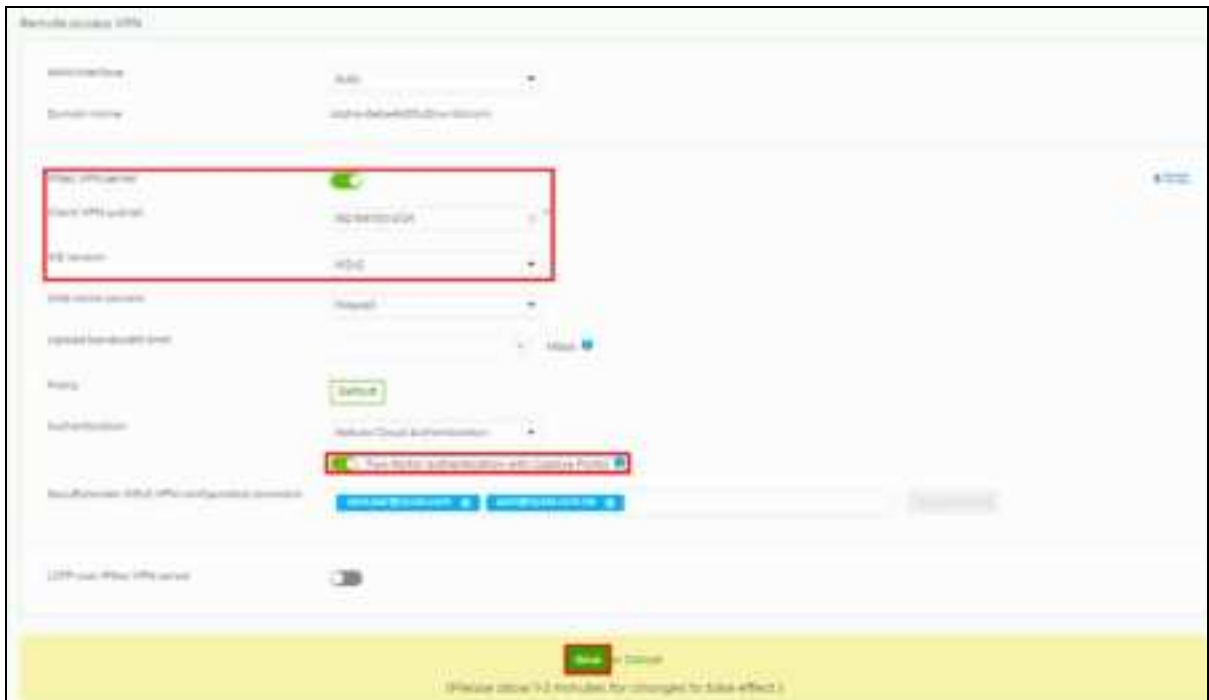

- 2 Click Send Email to give your VPN client the configuration instructions through email.

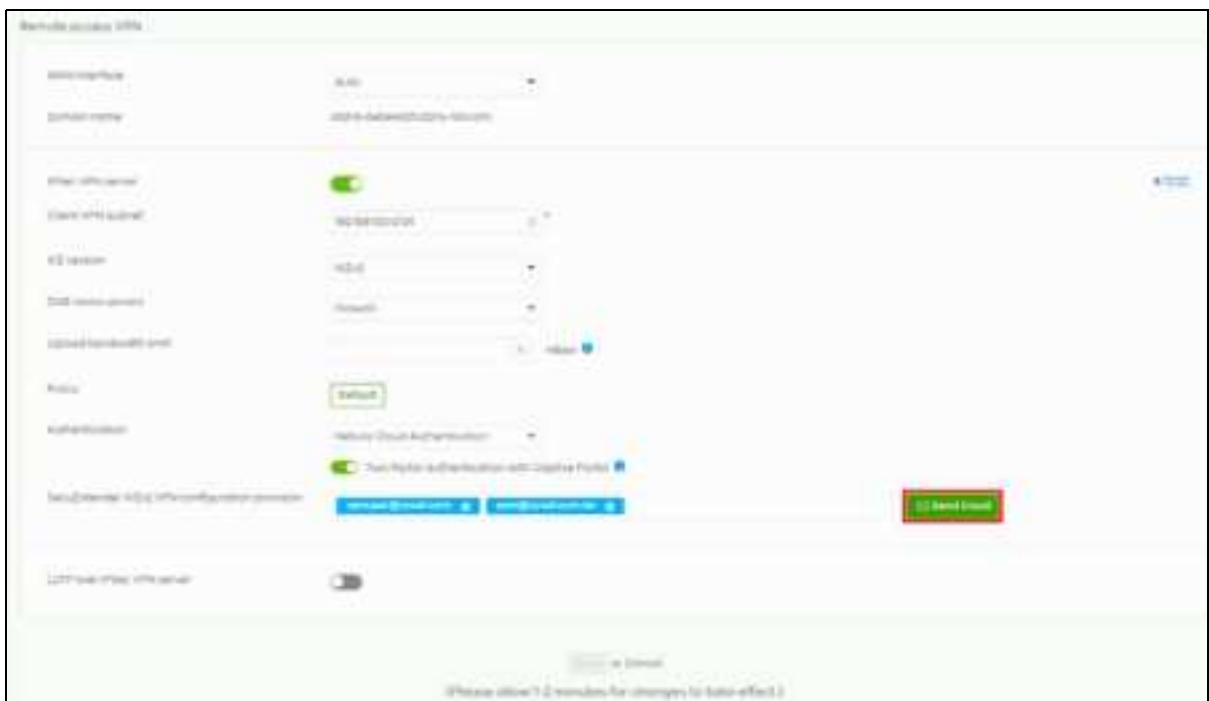


3.19.3 VPN Setup by the VPN Client


- 1 The VPN client should receive the following emails:
 - Configuration for SecuExtender IPsec VPN Client email with attached VPN configuration file (.tgb). Save the configuration file in your computer.
 - Nebula Cloud Account Information email with the following login information: Email, Username, Password, and Expired time (validity = NEVER).
- 2 Click the link in the Configuration for SecuExtender IPsec VPN Client email for instructions on installing the SecuExtender and activating the license key. The How to activate SecuExtender license key after your online purchase webpage appears.
 - Click Download.
 - Select the SecuExtender app based on your computer's operating system to install it.
 - Follow the online prompts to activate the SecuExtender license.

3.19.4 Import the VPN Configuration File


- 1 Save the attached VPN configuration file (.tgb) from the Configuration for SecuExtender IPsec VPN Client email on the VPN user's computer.
- 2 On your computer, open SecuExtender. Click the menu icon.

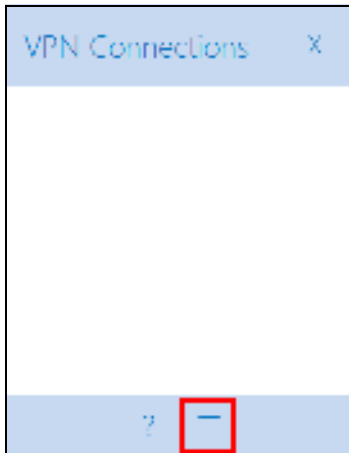


- 3 Click Configuration > Import.

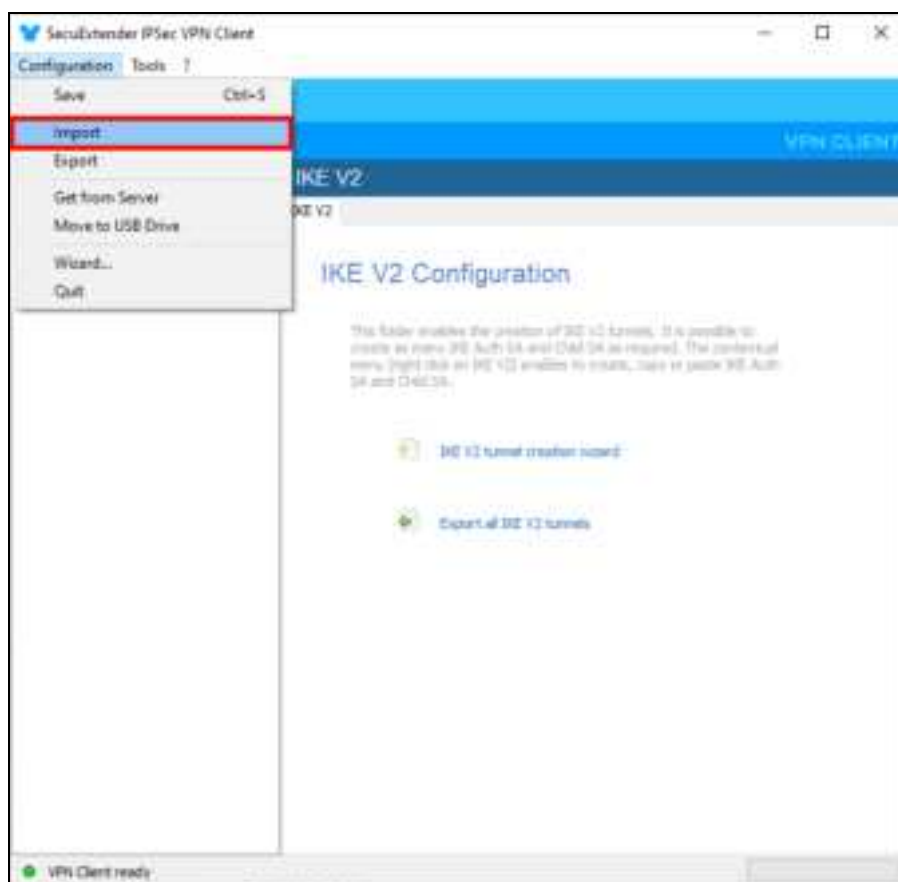

- 4 Locate in your computer and click Open to import the VPN configuration file from the Configuration for SecuExtender IPsec VPN Client email.

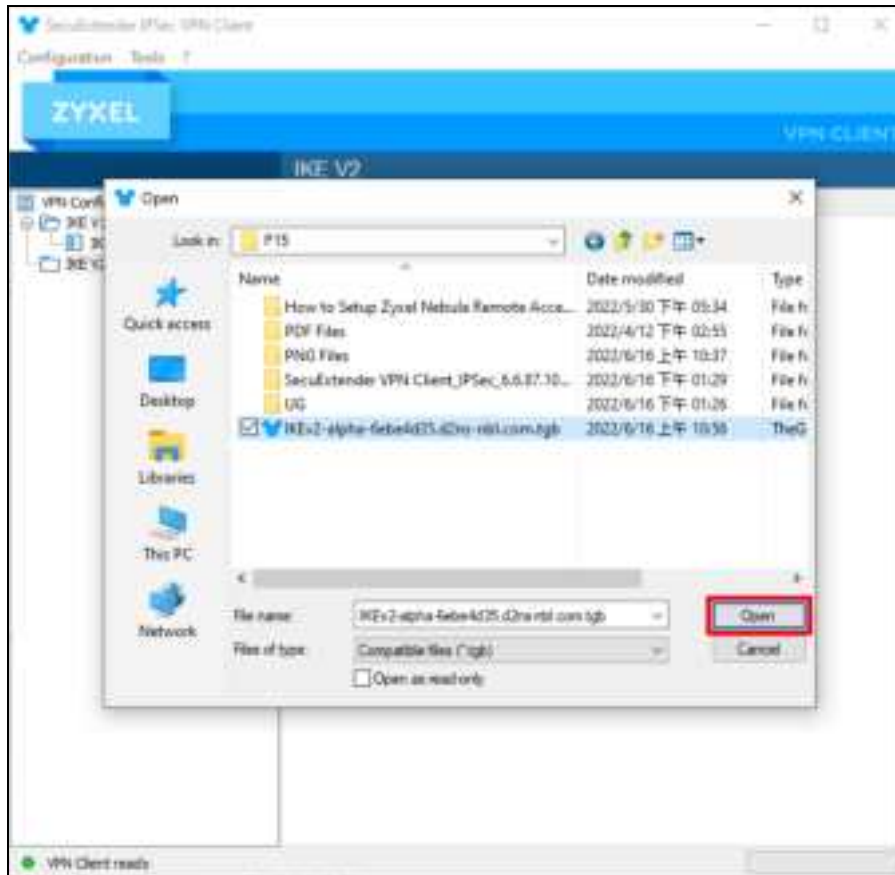


- 5 Click RemoteAccessVPN in VPN Configuration > IKE V2 > RemoteAccessVPN.

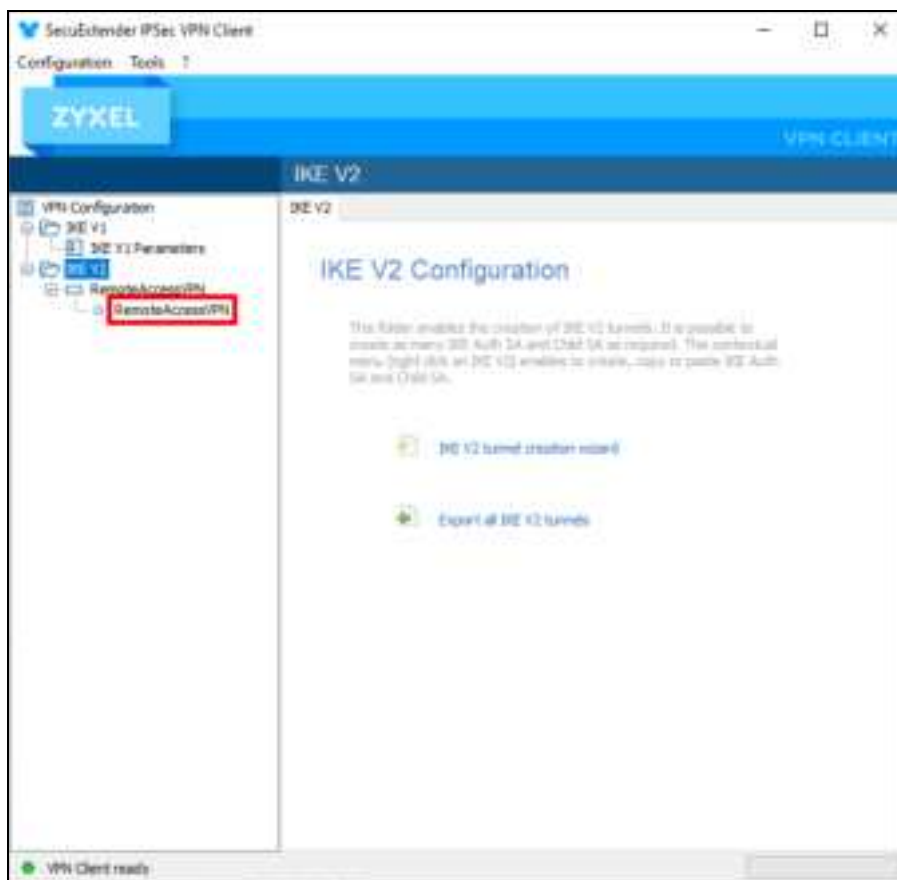


3.19.5 Open the VPN Tunnel

- 1 Right-click RemoteAccessVPN in VPN Configuration > IKE V2 > RemoteAccessVPN and click Open tunnel.

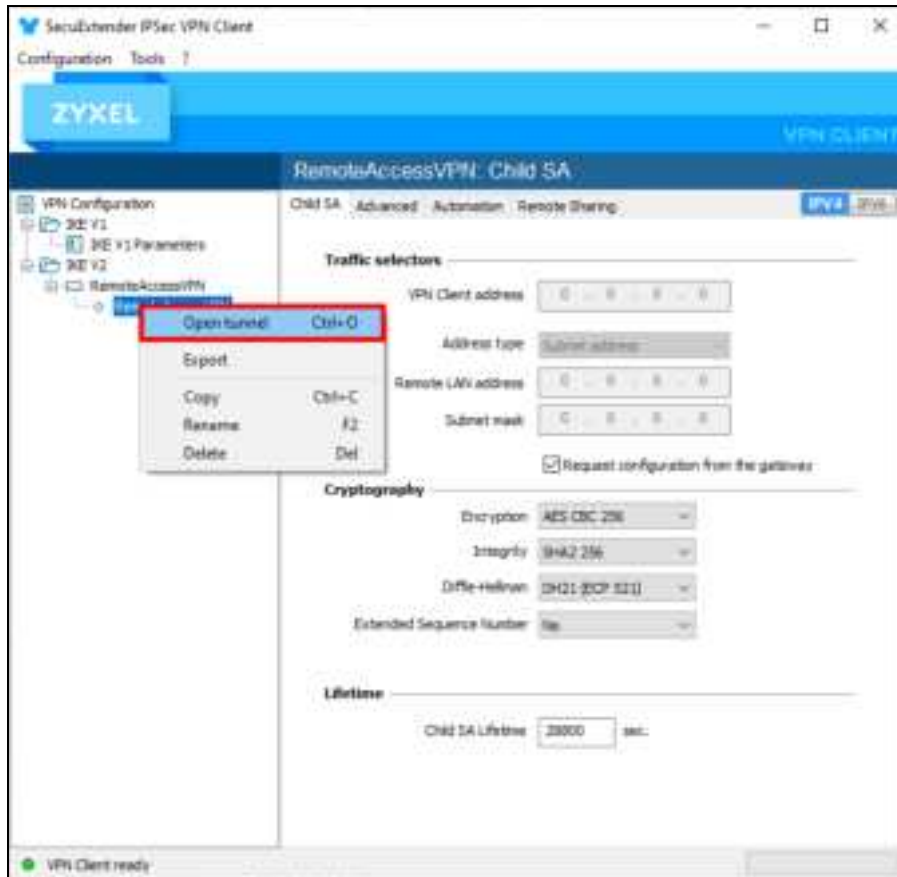

- 2 On the next screen, enter the Login: Username and Password from the Nebula Cloud Account Information email. Then click OK.

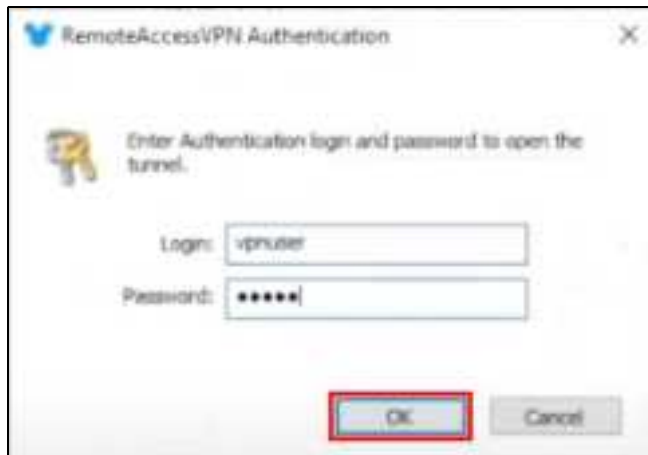

IKEV2 Auth sent will appear on the lower right of the screen.




Wait until Tunnel opened appears on the lower right of the screen.



An IP address will now appear in VPN Client address to replace the previous 0.0.0.0. The button lights green in front of RemoteAccessVPN in VPN Configuration > IKE V2 > RemoteAccessVPN.

- 3 When Your connection isn't private appears on the web browser, click Advanced to continue.

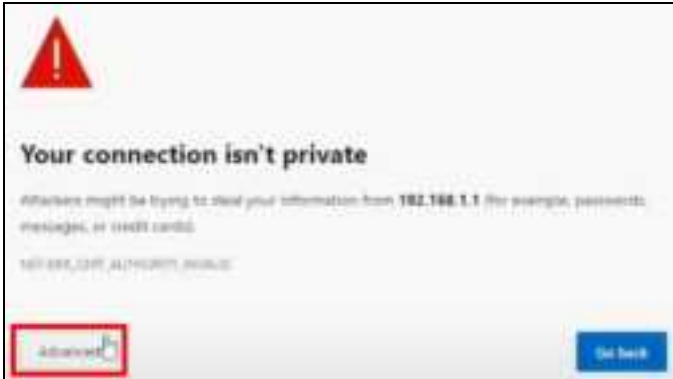

- 4 Click the Continue to xxx.xxx.x.x (unsafe) link on the bottom of the screen.



3.19.6 Set Up Two Factor Authentication to Bind the User Account

- 1 On the Two factor authentication screen, click Setup.



The prompt to download and install the Google Authenticator app on a mobile device appears. Install the Google Authenticator app. Then click Next.




- 2 Use the Google Authenticator app to scan the QR code. The QR code contains the user account information created in step 2 of [Create a VPN User](#). Enter the code. Then click Verify.



Note: Two Factor Authentication needs to be set up by the user only once. On the next login, just enter the Two Factor Authentication passcode.

The following screen will appear in the user's web browser.

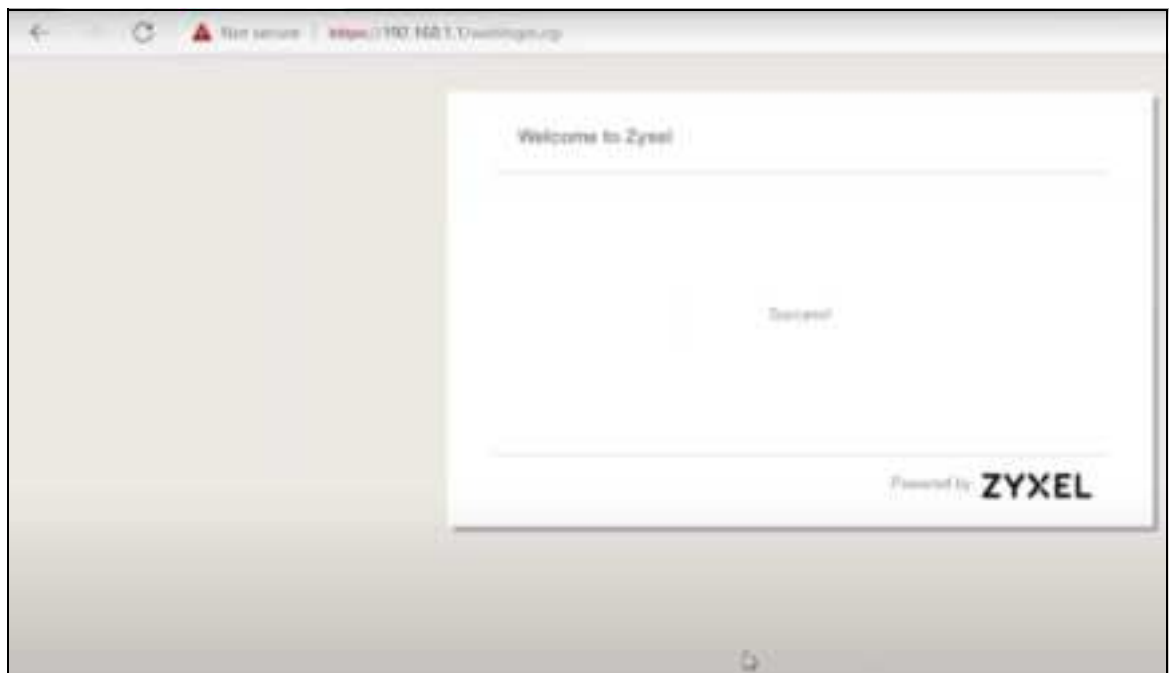

3.19.7 Check the Connection in Nebula by the Administrator


Go to the Site-wide > Monitor > Firewall > VPN connections screen. The remote VPN connection should appear in Client to site VPN login account table.

VPN connections						
Connection status						
Configuration						
This security gateway is extending protection over the VPN connections. It is not a local						
Site connectivity						
Location	Subnet	Status	Interface	Outbound	Uptime/Time	Last Heartbeat
Non-Nebula VPN peers connectivity						
Location	Subnet	Status	Interface	Outbound	Uptime/Time	Last Heartbeat
Remote AP-VPN						
Name	IPsec	Inbound	Outbound	Uptime/Time	Last Heartbeat	
Client to site VPN login account						
User Name	Username	Assigned IP	Public IP			
remote1	remote1	192.168.20.1	192.168.20.100			

3.20 Route L2TP VPN Traffic

L2TP (Layer 2 Tunneling Protocol) is a tunneling protocol used to support virtual private networks (VPNs). L2TP works at layer 2 (the data link layer) to tunnel network traffic between two Nebula Devices over another network (like the Internet). In L2TP VPN, establish an IPsec (Internet Protocol Security) VPN tunnel first and then build an L2TP tunnel inside it. IPsec VPN connects IPsec routers or remote users using an IPsec software such as SecuExtender.

The following example figure shows a VPN client (C) connecting to a Nebula Device (R1) through an L2TP VPN (V1). Nebula Device (R1) connects to Nebula Device (R2) using site-to-site VPN (V2). The VPN client (C) can access a server (S) inside the Nebula Device (R2) through the two VPN tunnels (V1, V2).

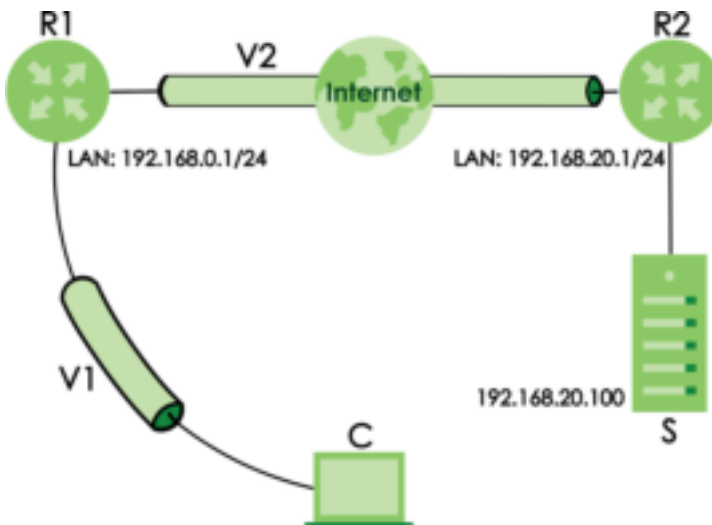

You can set up a VPN site-to-site tunnel to a cloud computing service like Microsoft Azure. To route L2TP traffic between your site and Microsoft Azure site, do the following:

Nebula Device (Firewall device) IP address	192.168.1.1
L2TP VPN (source site)	192.168.3.0/24
Microsoft Azure network (destination site)	172.10.1.0/24

Go to Site-wide > Configure > Firewall > Routing: Policy Route/Traffic Shaping: Add.

- Enter a definition for the rule in Description: for example, L2TP_Routing.
- Enter the L2TP IP address range to which this rule applies in Source IP: 192.168.3.0/24.
- Enter the Destination IP address range to which this rule applies: 172.10.1.0/24.
- Select Any protocol to apply the policy route to in Service.
- Click to enable Policy Route.
- Select VPN Traffic in Type to route the matched packets through the VPN tunnel you specified in the Next-Hop field.
- Select the remote VPN gateway's site name in Next-Hop.

Then click Update. Network traffic can now pass between your site and Microsoft Azure site through the L2TP tunnel.

Update policy route / Traffic Shaping Rule [X]

Matching Criteria

Description:

Source:

Destination:

Service:

Policy Route ☒

Type:

Next-Hop:

Traffic Shaping ☐


3.21 Configure Guest Isolation on your WiFi Network

To enhance security for both host network and guest users, configure guest isolation on your WiFi network. This prevents the guest users from seeing each other on your WiFi network.


- 1 Go to Site-wide > Configure > Access points > SSID settings and click + Add SSID network.



- 2 Click Edit on SSID2 to go to the Site-wide > Configure > Access points > SSID advanced settings screen.

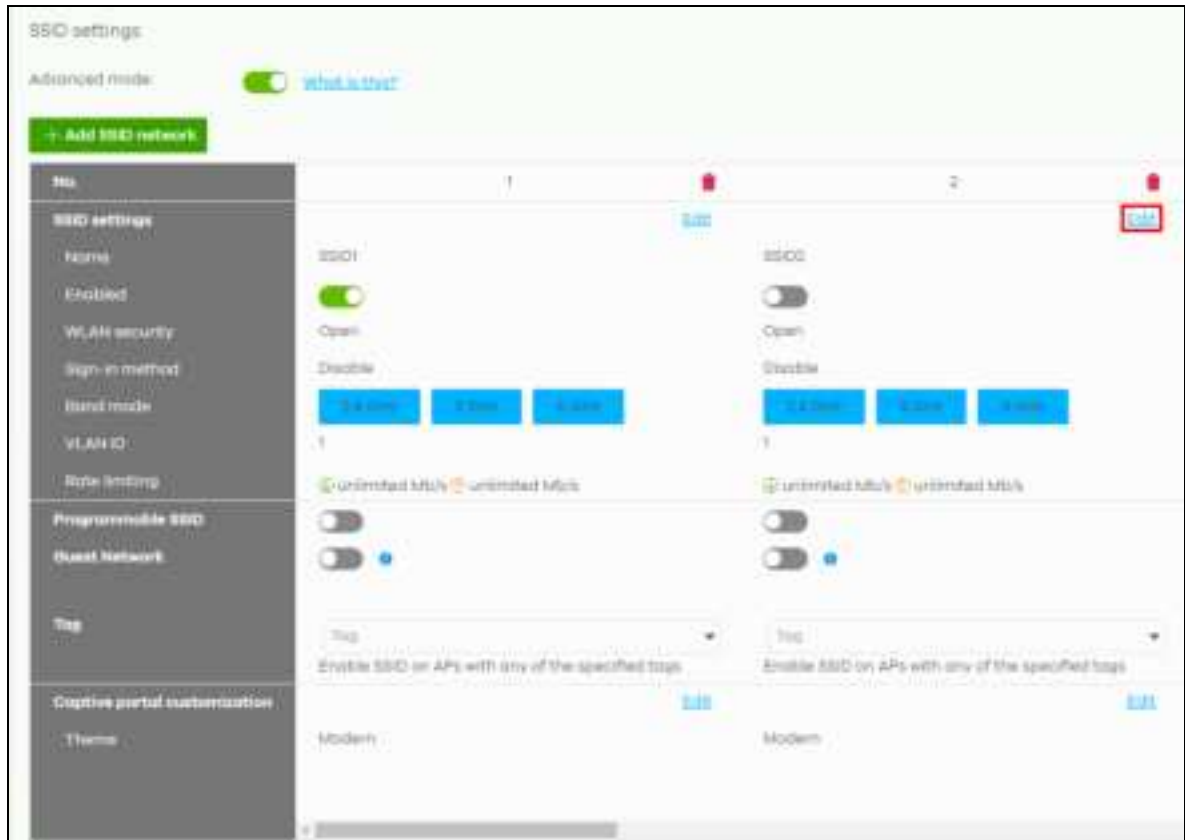

- 3 Enter a name for this WiFi network for identification purposes (for example, Guest). Click Enabled to turn on this WiFi network. Select WPA Personal With (WPA2) and enter a pre-shared key from 8 to 63 case-sensitive keyboard characters in Users must enter this key to associate to enable WPA2-PSK data encryption. Enter the ID number of the VLAN to which the SSID belongs (for example, 20).

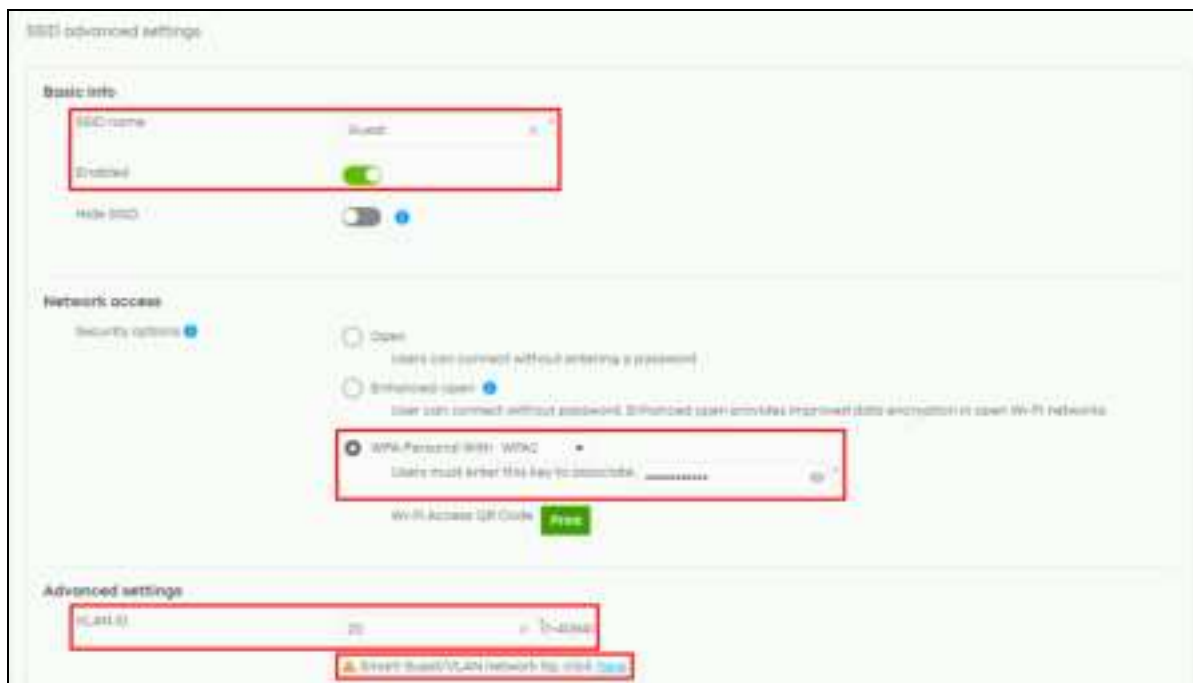

Note: If you have a Nebula Security Appliance installed in the site but did not configure the VLAN ID on the gateway, Smart Guest/VLAN network tip, click here displays. Click here to open a screen where you can create a gateway interface with the new VLAN ID.

4 On the Smart VLAN screen:

- Enter the IP address and Subnet mask, and select the Port group to which the Security Firewall interface belongs. Go to Site-wide > Configure > Firewall > Interface to get the Port group information.
- In DHCP, select DHCP Server to allow the Nebula Device to assign IP addresses and provide subnet mask, gateway, and DNS server information to the network.
- In IP pool start address, enter the IP address from which the Nebula Device begins allocating IP addresses.
- In Pool size, enter the number of IP addresses to allocate. For example, 200. This number must be at least one and is limited by the interface's Subnet mask. If the Subnet mask is 255.255.255.0 and the IP pool start address is 192.168.20.33, the Nebula Device can allocate 192.168.20.33 to 192.168.20.232, or 200 IP addresses.
- Click the Guest switch to the right to configure the interface as a Guest interface. Client devices connected to a Guest interface have Internet access but cannot communicate with each other directly or access networks behind the Nebula Device.

Then click Continue to save your settings for the VLAN to the NCC and return to the Site-wide > Configure > Access points > SSID advanced settings screen.

5 Click Back to save your settings for the Guest SSID to the NCC and return to the Site-wide > Configure > Access points > SSID settings screen.

SSD advanced settings

Basic info

SSD Name: Btrfs

Enabled: ☒

Hide SSD: ☐

Network access

Security system: ☐ Open
Users can connect without entering a password.

☐ Enhanced open
Users can connect without password. Enhanced open provides improved data encryption in open Wi-Fi networks.

☒ WPA Personal (WPA2, WPA3)
Users must enter the key to associate.

WPA Access QR Code:

Advanced settings


VLAN ID: 20

Direct Btrfs/VLAN network to: [vbr0](#)

[Back](#) [Cancel](#)

(Please allow 1-2 minutes for changes to take effect.)

- 6** Activate the Guest Network for the Guest SSID and click Save.

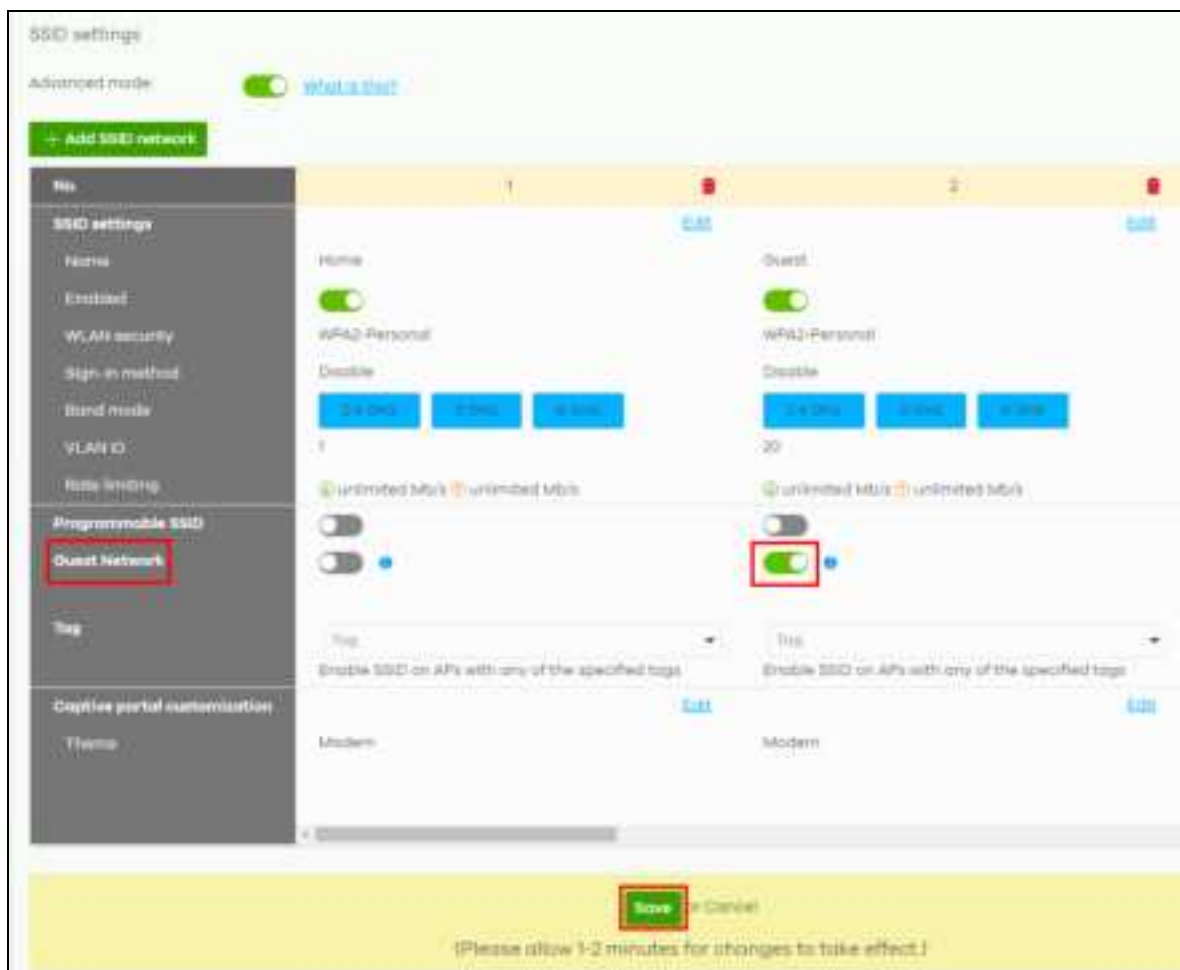


To test the configuration:

- 1 Connect a WiFi client to the Guest SSID. The WiFi client should get an IP address from the Guest SSID.
- 2 Have the Guest WiFi client access the www.zyxel.com website to test Internet connectivity.
- 3 Then, have the WiFi client connected to the Guest SSID ping another WiFi client connected to the Home SSID. The ping attempt should fail as the WiFi client connected to the Guest SSID can only access the Internet.

3.22 Configure Content Filter to Block Access to Certain Websites


This example shows how to block clients from accessing social media websites like Facebook.

The following example figure shows client C1 using computer A and client C2 using computer B to access the Internet through the Nebula Device N.

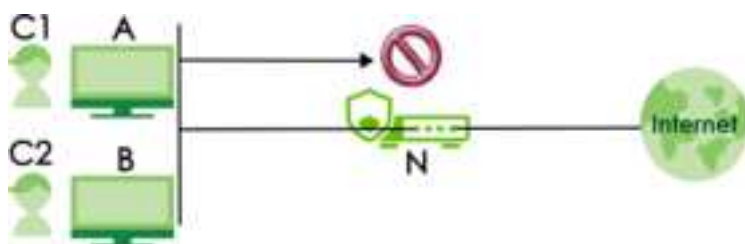

You want to block the LAN clients C1 and C2 from accessing social media websites such as Facebook. Create a content filter profile that includes the social media category.

- 1 Go to Site-wide > Configure > Firewall > Security policy: Security policy and click + Add (1).

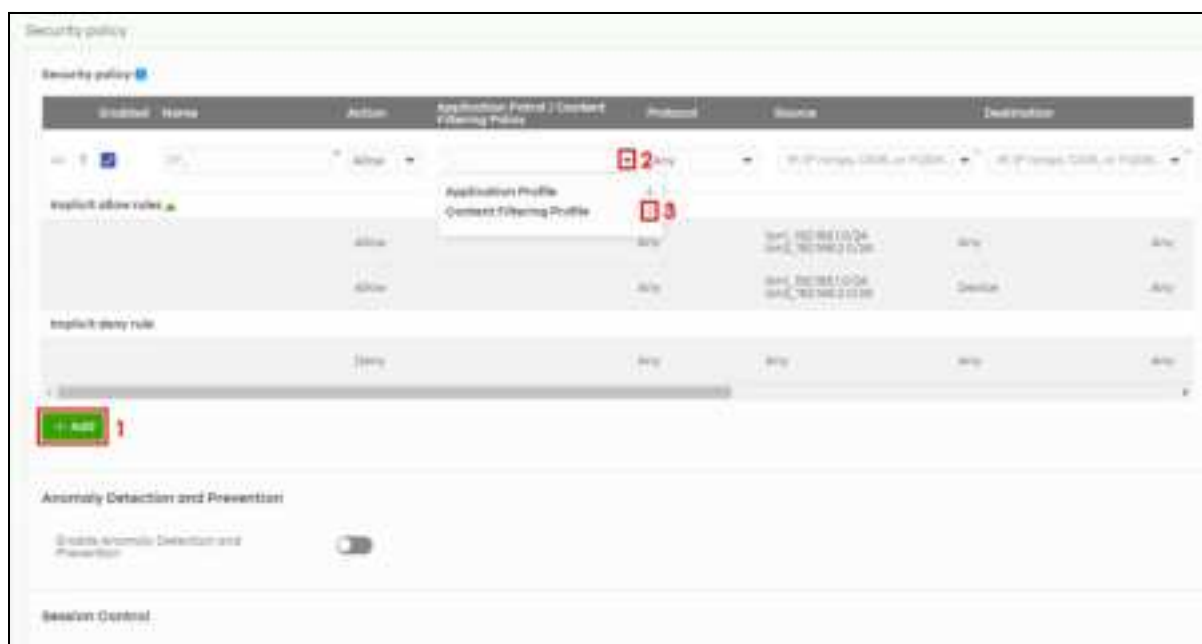

- 2 Click the drop-down menu button (2) and then click '+' (3) for Content Filtering Profile to add a Content Filter profile. The Nebula Device takes the action set in the profile when traffic matches the profile's policy. The following screen appears. See [Table 131 on page 566](#) for a description of the fields in the Create content filter profile screen.


- 3 Enter a name for this profile for identification purposes. For example, Social Media Out.
- 4 Make sure to click the switch to the right for DNS content filter: Enabled.
- 5 Select Custom for Templates.
- 6 To control access to the social networking type of Internet content, click Category list to open the list and select Social Networking in the Search category. This allows you to block access to social networking sites including Facebook.
- 7 Then, click Create to save and exit.

3.23 Configure Schedule to Allow WiFi Access Only at Certain Times

This example shows you how to allow WiFi Internet access only at certain times.

To configure a schedule to control when a WiFi network (SSID) is enabled or disabled, do the following:

- 1 Go to Site-wide > Configure > Access points > SSID advanced settings. Click the Enabled switch in SSID schedule to the right to configure a schedule. The New Schedule window appears. Enter a descriptive Name for the schedule of up to 127 characters (0 – 9 a – z). The casing does not matter. Then, click Create.

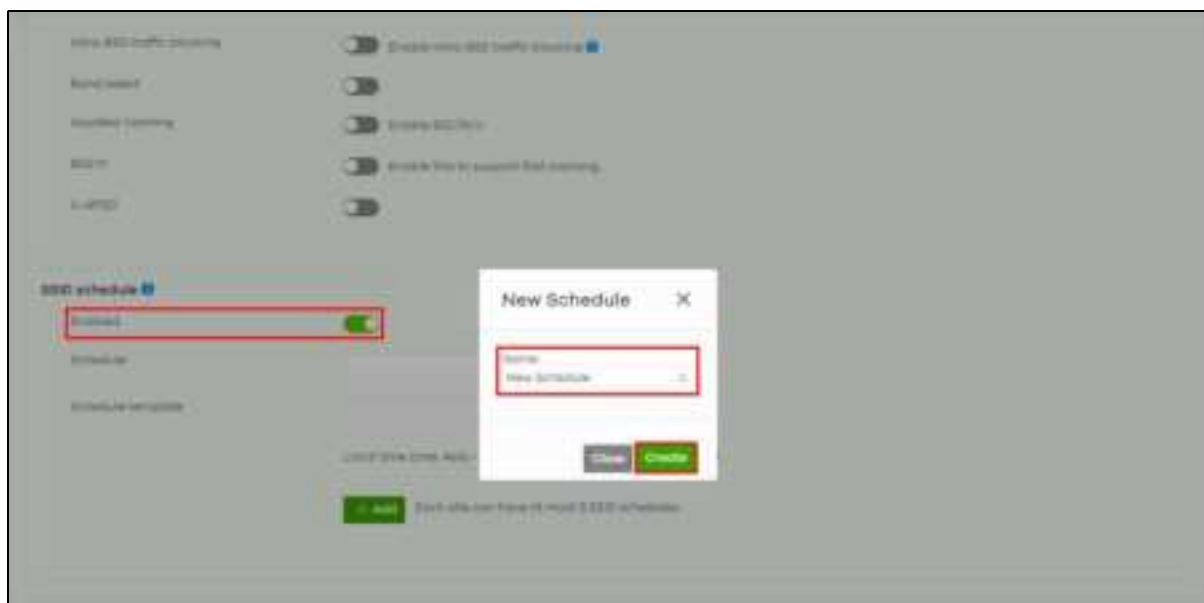

- 2 The schedule Name appears on Schedule. To change it, click the edit icon (✎). Select Custom schedule in Schedule template to manually configure the Day and time at which the WiFi network (SSID) is enabled. Click the Availability switch to the right to enable the WiFi network (SSID) at the specified time on this day. Specify the hour and minute when the schedule begins and ends each day. Then click Save.

The screenshot shows the 'Schedule' screen in the 'My Home' app. At the top, there's a 'Schedule' section with a 'New schedule' button and a 'Custom schedule' button. Below this, it says 'Local time zone: Asia - Tokyo (Standard Time)'. The main part of the screen is a 'Schedule' table with columns 'Day' and 'Availability'. The table lists days from Sunday to Saturday, each with a toggle switch and a horizontal bar representing availability. The 'Add' button is green and the 'Cancel' button is red.

Day	Availability
Sunday	00:00 - 00:00, 04:00 - 04:00, 08:00 - 08:00, 12:00 - 12:00, 16:00 - 16:00, 20:00 - 20:00, 24:00 - 24:00
Monday	00:00 - 00:00, 04:00 - 04:00, 08:00 - 08:00, 12:00 - 12:00, 16:00 - 16:00, 20:00 - 20:00, 24:00 - 24:00
Tuesday	00:00 - 00:00, 04:00 - 04:00, 08:00 - 08:00, 12:00 - 12:00, 16:00 - 16:00, 20:00 - 20:00, 24:00 - 24:00
Wednesday	00:00 - 00:00, 04:00 - 04:00, 08:00 - 08:00, 12:00 - 12:00, 16:00 - 16:00, 20:00 - 20:00, 24:00 - 24:00
Thursday	00:00 - 00:00, 04:00 - 04:00, 08:00 - 08:00, 12:00 - 12:00, 16:00 - 16:00, 20:00 - 20:00, 24:00 - 24:00
Friday	00:00 - 00:00, 04:00 - 04:00, 08:00 - 08:00, 12:00 - 12:00, 16:00 - 16:00, 20:00 - 20:00, 24:00 - 24:00
Saturday	00:00 - 00:00, 04:00 - 04:00, 08:00 - 08:00, 12:00 - 12:00, 16:00 - 16:00, 20:00 - 20:00, 24:00 - 24:00

At the bottom, there's a green 'Add' button and a red 'Cancel' button. A message says 'Each day can have at most 8.000 schedules'.

3.24 How to Position Multiple Nebula Devices (for Nebula Access Points only)

To select the best position to minimize signal interference for multiple Nebula access points, do the following:

- 1 Avoid positioning the Nebula Devices too close to each other. This can cause interference.
- 2 In case it may be necessary to position Nebula Devices in direct line of sight of each other, adjust the transmission power of each Nebula Device so that they are not overlapping each other. This can reduce signal interference. Go to Site-wide > Configure > Access points > Radio settings and select the Deployment selection and Maximum output power. See [Section 5.3.4 on page 358](#) for more information.
- 3 Enable DCS (Dynamic Channel Selection) to let the Nebula Devices scan the best channel to use. This will minimize co-channel interference between the Nebula Devices. Go to Site-wide > Configure > Access points > Radio settings > DCS setting.

Note: When DCS client aware is enabled in Site-wide > Configure > Access points > Radio settings > DCS setting and there are WiFi clients connected to the Nebula Device, the channel will not be changed after a DCS scan.

4. Configure the Nebula Devices in Site-wide > Configure > Access points > Radio settings > DCS setting to operate on non-overlapping channels.
 - For the 2.4 GHz channel deployment, select Manual. Then, select the Channel IDs 1, 6, 11.

- For the 5 GHz channel deployment, select Manual. Then, select the Channel IDs 36 to 165.

Note: The Channel IDs available will depend on your Country field selection.

3.25 Change the Default SSID and Password

To distinguish between different APs in your network, you should change the default name of the Access Point's WiFi network to which clients are connected (also known as SSID) and password.

To change the default SSID and password:

- 1 Go to the Site-wide > Configure > Security router / Access points > SSID settings tab and click Edit.

- 2 Enter a descriptive name of up to 32 printable characters in SSID name.



- 3 Click the Enabled switch to the right to apply this SSID profile.
- 4 Select WPA3 for the strongest security if the connected WiFi clients support it, otherwise select WPA2 to add security on this WiFi network.
- 5 Enter a pre-shared key of between 8 and 63 case-sensitive ASCII characters (including spaces and symbols) or 64 hexadecimal characters in Users must enter this key to associate.
- 6 Click Back to proceed.

3.26 Change the WiFi Band Mode

If your WiFi network is slow, change the WiFi band mode. Choose 6 GHz if the connected WiFi clients support it. Choose 5G for WiFi clients within range that require higher speeds such as video streaming.

To change the WiFi network band mode:

- 1 Go to the Site-wide > Configure > Security router / Access points > SSID settings tab and click Edit.


- 2 In the Site-wide > Configure > Access points > SSID advanced settings: Advanced settings: Band mode; select to have the SSID use a different band (2.4 GHz band, 5 GHz band, or 6 GHz band).

- 3 Click Back to proceed.

3.27 Check What Clients are Connected to Nebula Devices in your Network

To see a list of all wired and WiFi clients connected to Nebula Devices in the site, do the following:

- 1 Go to the Site-wide > Clients > Client list screen.

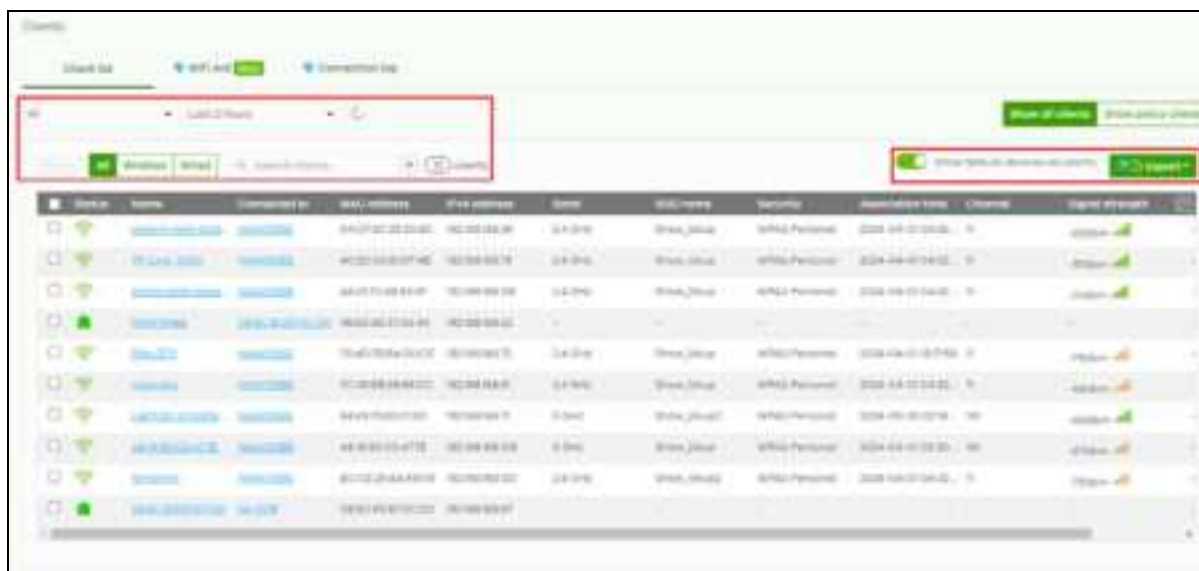

- 2 Select to filter the list of clients, based on what type of Nebula Device (Access point, Switch, Security router) the client is connected to. Alternatively, select All Clients.
- 3 You can also set a time; the list shows each client's connection status in the past two hours, past 24 hours, past 7 days, past 30 days, or custom range. The maximum custom range is 30 days within the past 365 days. You can only show each client's connection status in the past two hours and past 24 hours only when you select All Clients.
- 4 You can select the type of clients that have been online during the selected time period: All (both WiFi and wired clients), Wireless (WiFi clients only), and Wired (wired clients only).

Note: Click Show Nebula devices as clients to show or hide the client Nebula Device(s) in the client list table. By default, this switch is ON for the sites created before the NCC 18.00 release. Otherwise, this switch is OFF for the sites created after the NCC 18.00 release.


Click the Export button to save the client list as a CSV or XML file to your computer.

3.28 Find the SSID of the WiFi Client (for Nebula Access Points only)

You can view a list of all wired and WiFi clients connected to the Nebula Device in the site and the corresponding details. The details include the name of the Access Point's WiFi network to which the client is connected (also known as SSID).

To find the SSID of the WiFi client:

- 1 Go to Site-wide > Clients > Client list tab and click the Description of the WiFi client.

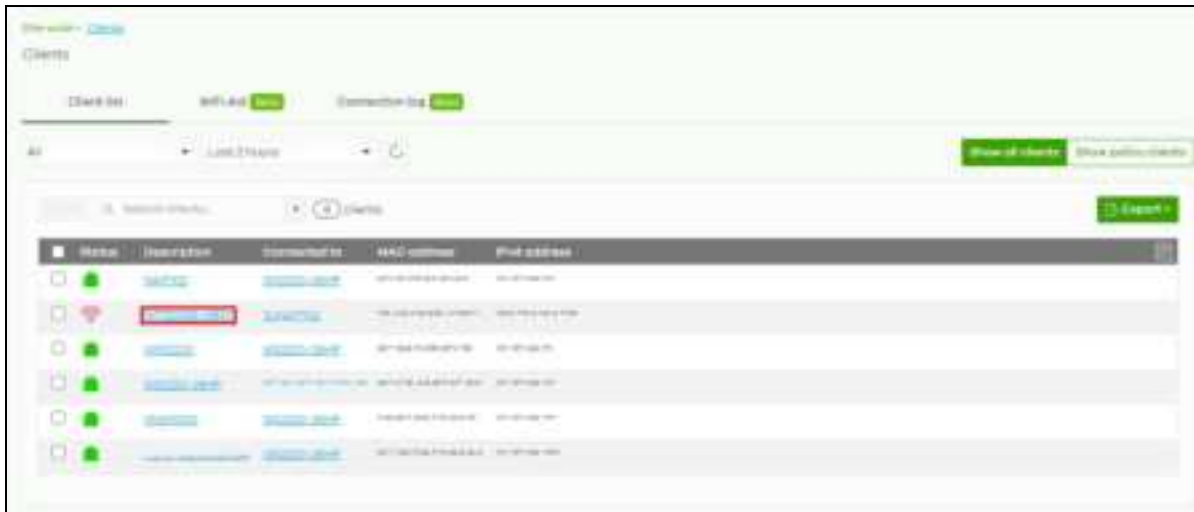


- 2 Locate the SSID in Basic information to know the name of the Access Point's WiFi network to which the client is connected.




3.29 Use Tags to Assign SSIDs for Nebula Devices (for Nebula Access Points only)

When you have 2 Nebula Devices in different locations (for example, one in the lobby and one in the office), and you want Nebula Device A to only broadcast the SSID "SSID_lobby" and Nebula Device B "SSID_office" then do the following:


- 1 Go to Site-wide > Devices > Access points. Select the "Lobby_AP" and click Tag. Enter "lobby" and click + Add new.

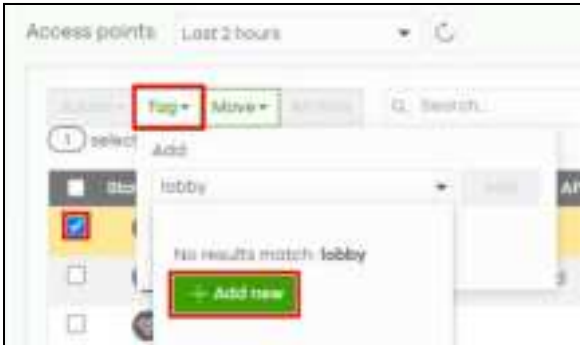


- 2 Click Add to assign the "lobby" tag to the "Lobby_AP".

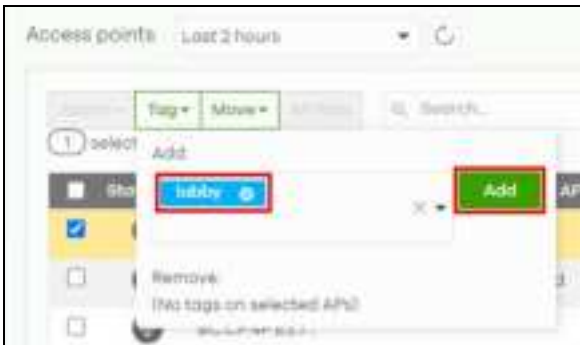

- 3 Select the "Office_AP" and click Tag. Enter "office" and click + Add new.

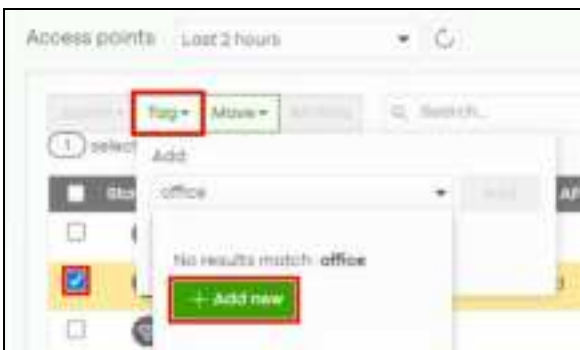


- 4 Click Add to assign the "office" tag to the "Office_AP".

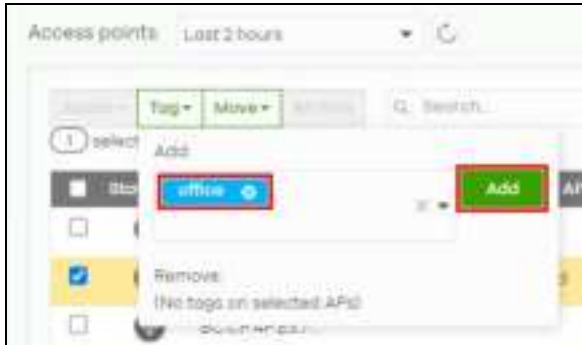

The new Tags appear on the lobby and office APs in Site-wide > Devices > Access points.

Status	Name	Tag
☐	Lobby_AP	lobby
☐	Office_AP	office

- 5 Go to Site-wide > Configure > SSID settings. Select the "lobby" tag for the previously configured "SSID_lobby". Select the "office" tag for the previously configured "SSID_office".

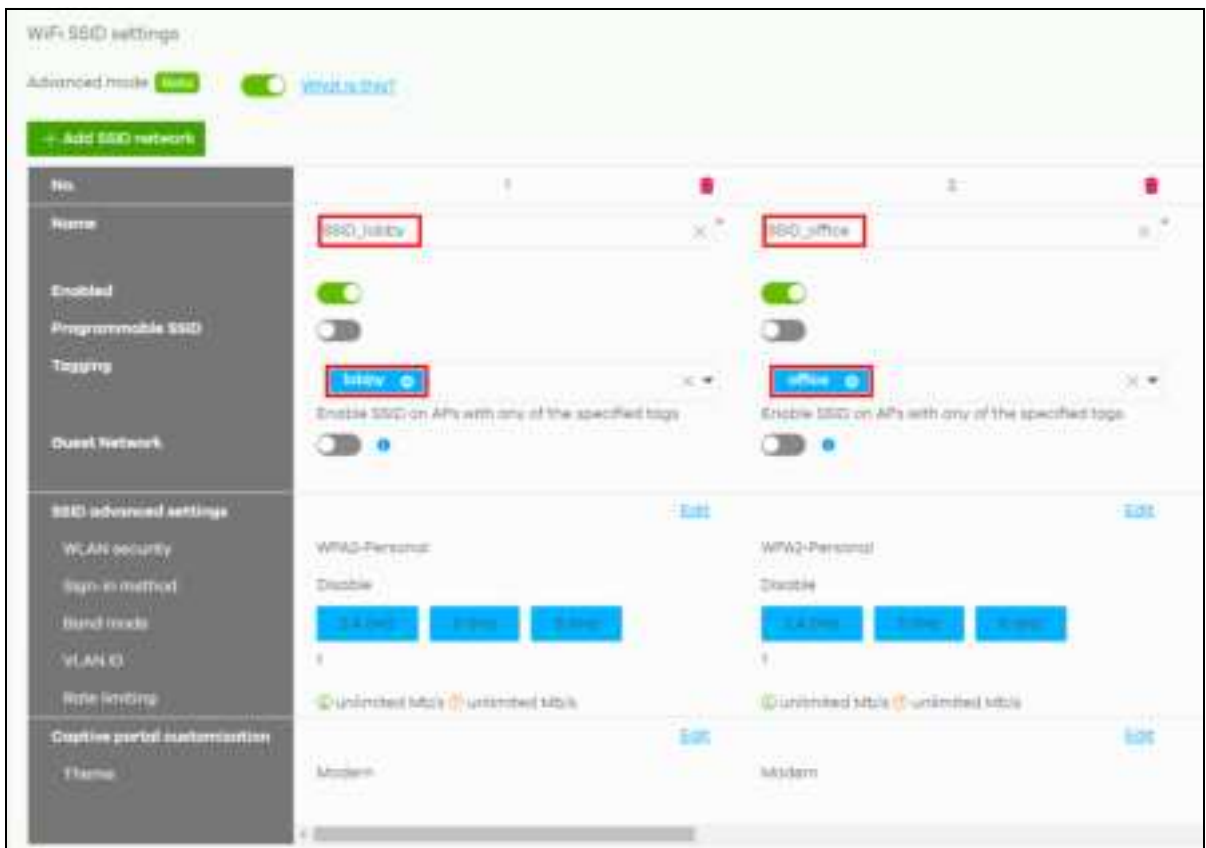

The Nebula Devices will broadcast SSIDs according to the assigned tags. Go to Site-wide > Clients to check the WiFi clients connection status.

Status	Description	Connected to	SSID name
	TV	office AP	SSID_office
	DA	Lobby AP	SSID_lobby


3.30 Resolve WiFi Connection Problems (for Nebula Access Points only)

The WiFi Aid tab in Site-wide > Clients helps you identify connection problems between WiFi clients and supported AP(s) for a selected time range.

Note: Make sure your Nebula AP is using the latest firmware.

The following tables allow you to view and identify connection problems using the following categories.

- [Connection Issues by SSID](#)
- [Connection Issues by Client](#)
- [Connection Issues by Access Point](#)
- [Captive Portal Login Issues by Client](#)

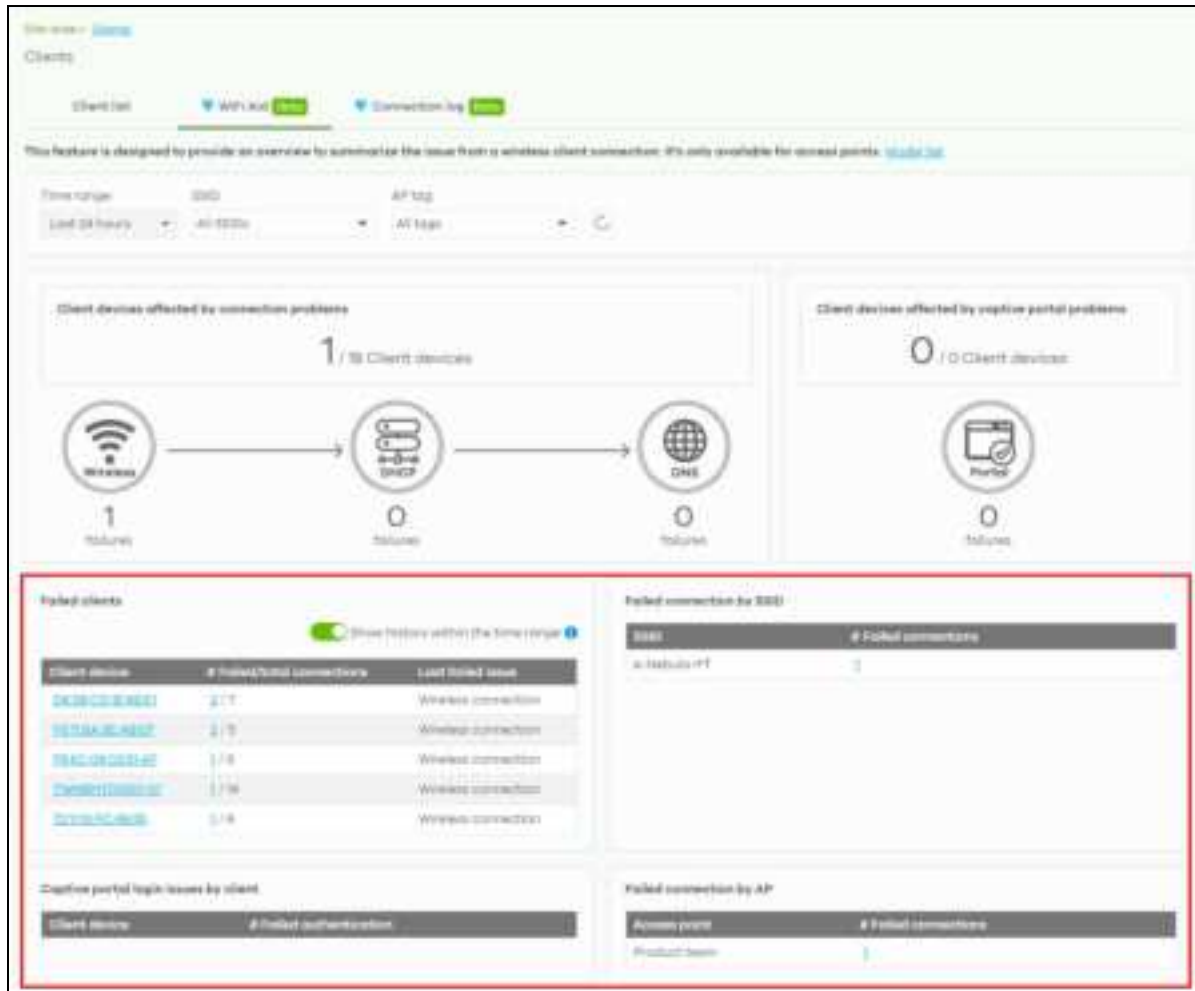

Connection Issues by SSID

This table displays the number of WiFi clients with WiFi connection/DHCP failures/DNS failures in each WiFi network. The list displays the WiFi network with the most connection failures first, in descending order.

- 1 Click a hyperlink in the # Failed connections column.



The Site-wide > Clients > Connection log screen appears showing all related event logs for WiFi clients in the e-Nebula-FT WiFi network in the last 24 hours.

Connection time	Connected to	Event type	Detail issue
2023-05-10 17:07:00	a-1000-PT	Wireless failed connection (WiFi-6E)	Station: 42:78:18:40:00:00 blocked by low bandwidth fail on Channel 10, 5GHz, a-1000-PT, 20MHz, Signal: -80dBm
2023-05-10 17:08:00	a-1000-PT	Wireless failed connection (WiFi-6E)	Station: 3c:54:7c:3c:4c:00 blocked by low bandwidth fail on Channel 6, 5GHz, a-1000-PT, 20MHz, Signal: -80dBm
2023-05-10 17:09:00	a-1000-PT	Wireless failed connection (WiFi-6E)	Station: 32:7b:0b:0b:0b:00 blocked by low bandwidth fail on Channel 10, 5GHz, a-1000-PT, 20MHz, Signal: -80dBm
2023-05-10 17:10:00	a-1000-PT	Wireless failed connection (WiFi-6E)	Station: 7c:7c:7c:7c:7c:7c blocked by low bandwidth fail on Channel 10, 5GHz, a-1000-PT, 20MHz, Signal: -80dBm
2023-05-10 17:11:00	a-1000-PT	Wireless failed connection (WiFi-6E)	Station: 7c:7c:7c:7c:7c:7c blocked by low bandwidth fail on Channel 6, 5GHz, a-1000-PT, 20MHz, Signal: -80dBm
2023-05-10 17:12:00	a-1000-PT	DHCP client (WiFi-6E)	IP 192.168.0.100 failed to request an IP address due to DHCP failure (received no response after offer) with DHCP
2023-05-10 17:13:00	a-1000-PT	Wireless failed connection (WiFi-6E)	Station: 7c:7c:7c:7c:7c:7c blocked by low bandwidth fail on Channel 1, 5GHz, a-1000-PT, 20MHz, Signal: -80dBm
2023-05-10 17:14:00	a-1000-PT	Wireless failed connection (WiFi-6E)	Station: 7c:7c:7c:7c:7c:7c blocked by low bandwidth fail on Channel 10, 5GHz, a-1000-PT, 20MHz, Signal: -80dBm
2023-05-10 17:15:00	a-1000-PT	Wireless failed connection (WiFi-6E)	Station: 7c:7c:7c:7c:7c:7c blocked by low bandwidth fail on Channel 6, 5GHz, a-1000-PT, 20MHz, Signal: -80dBm

- Use the following information listed in chronological order to resolve WiFi connection issues.
 - Connection time. This shows the starting time period from which the event log occurred.
 - Connected to. This shows the name (if available) or MAC address of the connected client.
 - Event type. This shows the event type (Association, Authentication, Disconnection, DHCP server, Wireless failed connection, DHCP client, DNS failure, Captive portal) that occurred.
 - Detail issue. This shows a summary of the APs event logs in chronological order.


Connection Issues by Client

This table displays the number of WiFi clients with failed connection attempts (WiFi connection/DHCP failures/DNS failures) and the number of total connection attempts. The list displays the WiFi client with the most connection failures first, in descending order.

- Click a hyperlink in the Client device column.

Client device	# Failed/total connections	Last failed issue
a-1000-PT	2 / 7	Wireless connection
a-1000-PT	2 / 5	Wireless connection
a-1000-PT	1 / 6	Wireless connection
a-1000-PT	1 / 14	Wireless connection
a-1000-PT	1 / 6	Wireless connection

The Site-wide > Clients > Client list: WiFi client details screen appears showing individual client statistics.

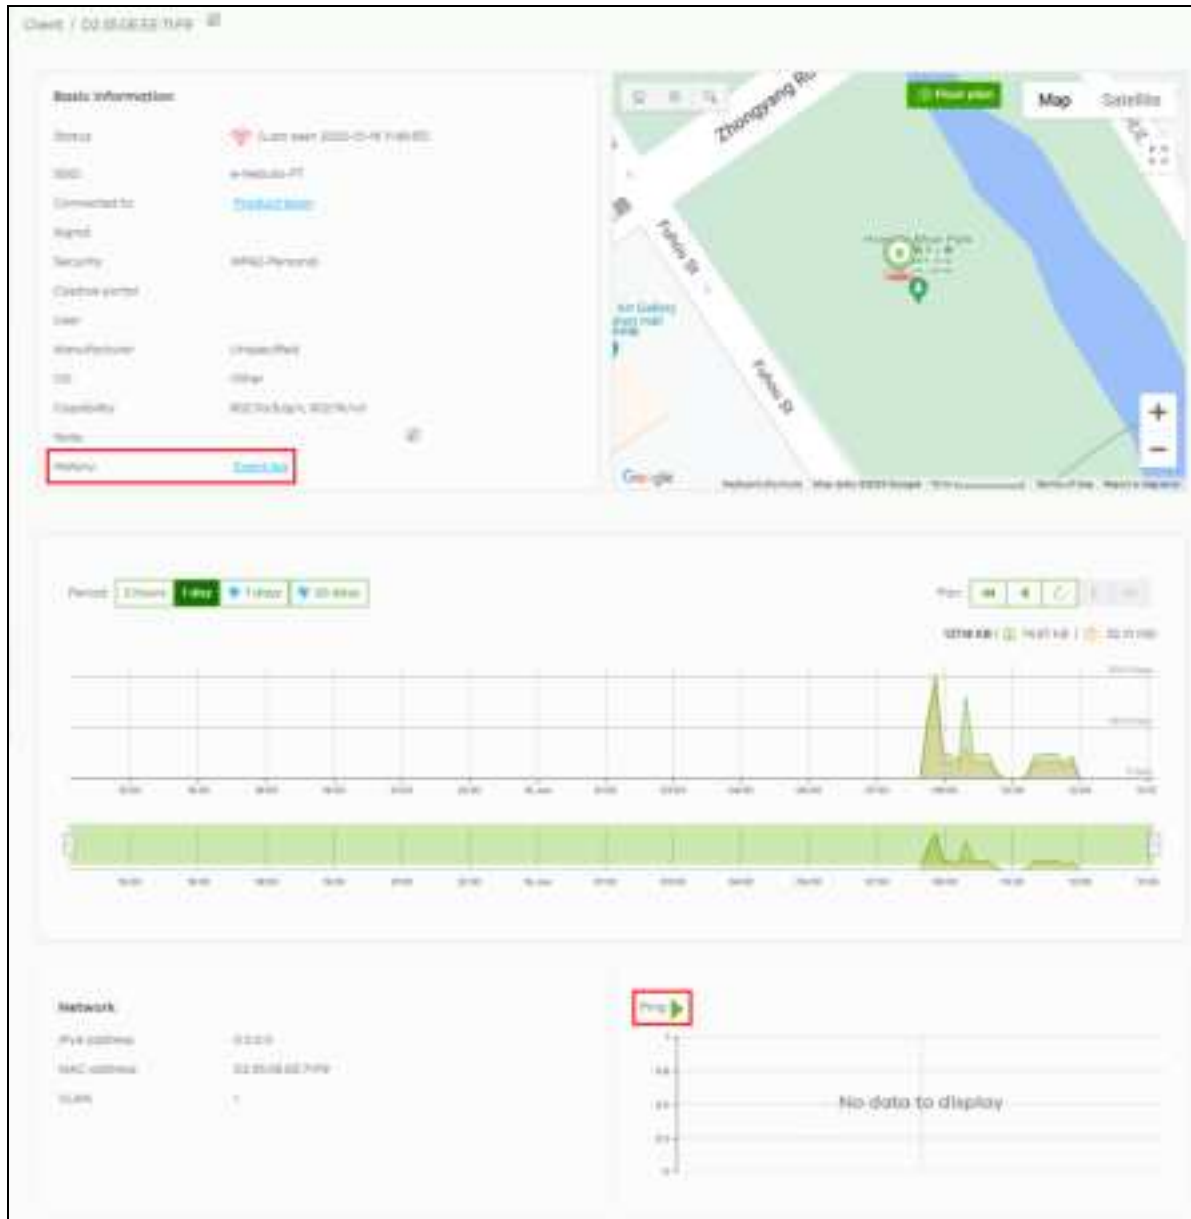

- 2 Use the information in this screen to identify the WiFi client with connection issues. See [Table 30](#) on page 281 for the description of the fields.
- 3 Click History: Event log to view Nebula AP log messages. Enter the Nebula AP's name or a key word, select one or multiple event types, or specify a date/time or even a time range to display only the log messages related to it.
- 4 Click Ping to ping the client's IP address from the Nebula AP to test connectivity.
- 5 Click the numerator hyperlink in the # Failed/total connections column.

Client list

WiFi list **WiFi** Connection log **WiFi**

Last 30 days | All SSIDs | **Product name** | Authentication, Downloaded | All clients

Connection time	Connected to	Event type	Detail view
2023-05-16 14:17:01	Product name	Association	Station 75:05:06:02:71:af connected on Channel 12, 2022 a Nebula PT, 20MHz, Signal -75dBm, interface wlan-2/1
2023-05-16 13:37:55	Product name	Association	214 K341 received MAC: 34:3c:39:24:7b:03, from 71410, To Product name, 2022 a Nebula PT
2023-05-16 13:07:05	Product name	Association	Station 3a:3c:79:3a:8b:03 connected on Channel 12, 2022 a Nebula PT, 20MHz, Signal -45dBm, interface wlan-2/1
2023-05-16 12:42:02	Product name	SNMP client (SNMPv4c)	43 18100-40357a1a007f5046-40P succeeded to receive IP address 172.16.2.43, 2022 a Nebula PT
2023-05-16 12:41:02	Product name	Association	Station a2:19:17:8a:4000 connected on Channel 12, 2022 a Nebula PT, 20MHz, Signal -45dBm, interface wlan-2/1
2023-05-16 12:44:22	Product name	Association	Station 32:0a:0b:0a:0a:0a connected on Channel 12, 2022 a Nebula PT, 20MHz, Signal -45dBm, interface wlan-2/1
2023-05-16 12:44:10	Product name	SNMP client (SNMPv4c)	22 3818:88 7199 succeeded to receive IP address 172.16.2.22, 2022 a Nebula PT
2023-05-16 12:44:06	Product name	Association	Station 7c:25:0e:77:09 connected on Channel 12, 2022 a Nebula PT, 20MHz, Signal -45dBm, interface wlan-2/1
2023-05-16 12:43:31	Product name	SNMP client (SNMPv4c)	63 94:49 89:ff 23:7a:40P succeeded to receive IP address 172.16.2.58, 2022 a Nebula PT
2023-05-16 12:43:46	Product name	Association	Station 02:0a:0b:0a:0a:0a connected on Channel 12, 2022 a Nebula PT, 20MHz, Signal -45dBm, interface wlan-2/1

Page 1 of 22 | 20 results per page

Captive Portal Login Issues by Client


This table displays the list of WiFi clients with the corresponding number of failed connection to the Nebula Device acting as a hotspot. The list displays the WiFi client that could not connect to the Nebula Device acting as a hotspot the most number of times first, in descending order.

- 1 Click a hyperlink in the Client device column.

Captive portal login issues by client

Client device	# failed authentication
Device	1
Station	1
Product	1
User	2
SSID	2

The Site-wide > Clients > Client list: WiFi client details screen appears showing individual client statistics. See [Section on page 157](#) on setting the filters and using the information listed in chronological order to resolve WiFi connection issues.

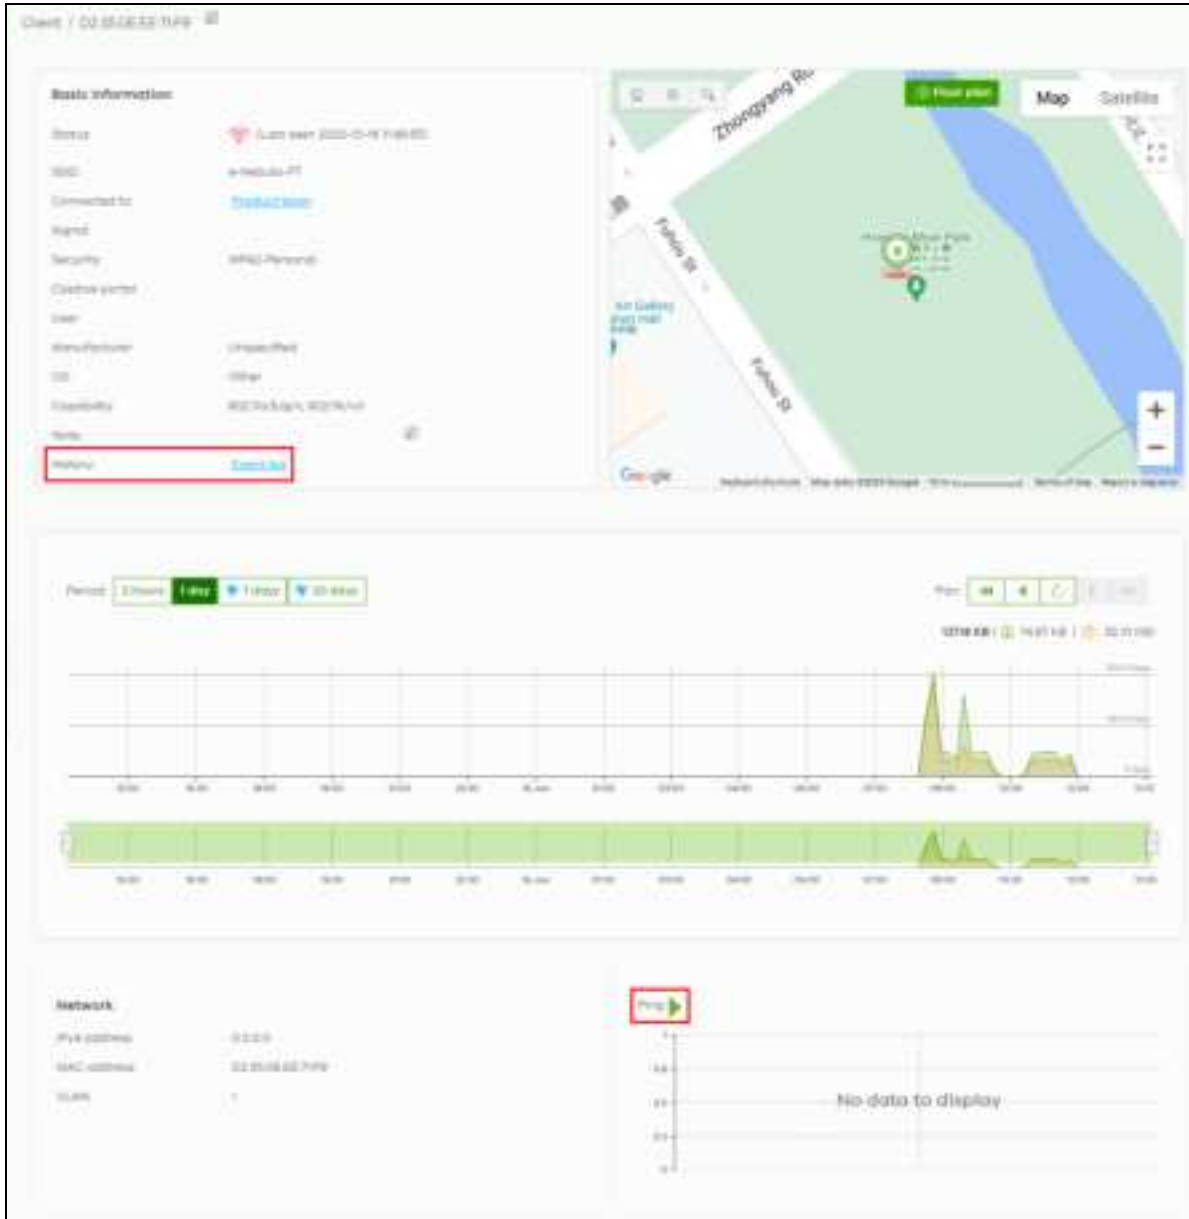

- 2 Use the information in this screen to identify the WiFi client with connection issues. See [Table 30](#) on page 281 for the description of the fields.
- 3 Click History: Event log to view Nebula AP log messages. Enter the Nebula AP's name or a key word, select one or multiple event types, or specify a date/time or even a time range to display only the log messages related to it.
- 4 Click Ping to ping the client's IP address from the Nebula AP to test connectivity.
- 5 Click the hyperlink in the # Failed authentication column.

Client device	# failed authentication
00:0E:3E:00:00:00	1
00:0E:3E:00:00:01	1
00:0E:3E:00:00:02	1
00:0E:3E:00:00:03	1
00:0E:3E:00:00:04	1

The Site-wide > Clients > Connection log screen appears showing all related event logs of a specific client device that could not connect to the Nebula Device acting as a hotspot.



- 6 Use the following information listed in chronological order to resolve WiFi clients that could not connect to the Nebula Device acting as a hotspot.
 - Connection time. This shows the starting time period from which the event log occurred.
 - Detail issue. This shows a summary of the APs event logs in chronological order.

3.31 Configure WiFi Security with WPA2 Personal (for Nebula Access Points only)

This tutorial shows you how to configure WPA2 Personal for an SSID.

An SSID (Service Set Identifier) is the name of the WiFi network to which a WiFi client can connect.

WPA2 Personal uses pre-shared keys (PSK) for authentication of not so many users such as in a small office. IEEE 802.1X is an IEEE Standard for port-based network access control.

- 1 Create a WPA2 Personal QR code.
- 2 Allow WPA2 Personal authentication for this user.
- 3 Give the user the QR code.

3.31.1 Configure WPA2 Personal

- 1 Go to Site-wide > Configure > Access points > SSID advanced settings.
- 2 Select the SSID to which the settings you configure here will be applied.


- 3 In Security options, select WPA2 in WPA Personal With.
- 4 To enable WPA2-PSK data encryption, enter a pre-shared key in Users must enter this key to associate. The allowed characters are 8 to 63 case-sensitive keyboard characters.
- 5 Click Print to display the QR code that includes the password for access to the WiFi network. You can save the QR code as PDF and pass it to users who are allowed to access this WiFi network. Note that anyone with this QR code can access the WiFi network.



- 6 Then click Save.

Manage User Accounts

- 1 Go to Organization-wide > Organization-wide manage > Cloud authentication > User to view and manage the specific user accounts which are authenticated using a pre-shared key.
- 2 Click +Add to create a new user account and fill in the user's information in the Create user window. Then click Create user to save your changes and close the screen.

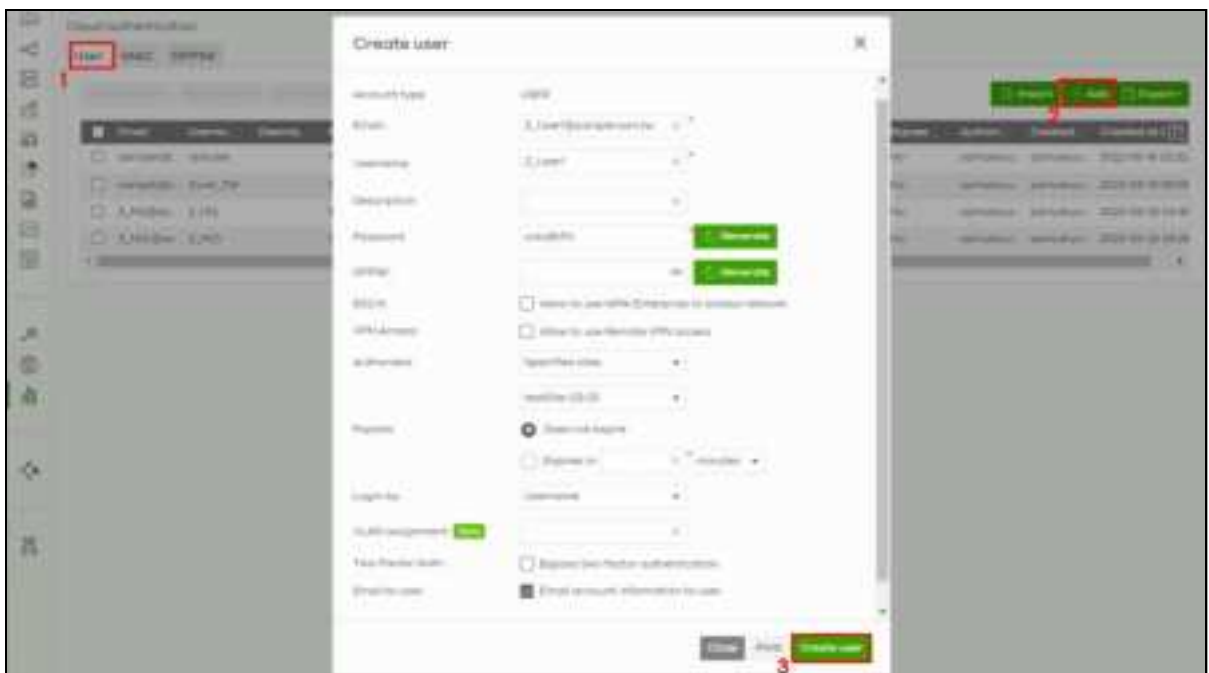

- 3 The click Save.



- 4 To check your settings, go to Site-wide > Configure > SSID settings.

WPA2-Personal is the encryption method shown on SSID advanced settings: WLAN security.



- 5 Give the user the QR code.

3.32 Configure WiFi Security with WPA2 Enterprise (for Nebula Access Points only)

This tutorial shows you how to configure WPA2 Enterprise for an SSID using any of the following authentication servers:

- Nebula Cloud server
- RADIUS server.

WPA2 Enterprise uses IEEE 802.1X for authentication of many users such as in a large organization.

3.32.1 Configure WPA2 Enterprise with Nebula Cloud Authentication / RADIUS Server Authentication

- 1 Go to Site-wide > Configure > Access points > SSID advanced settings.
- 2 Select the SSID to which the settings you configure here will be applied.
- 3 In Security options, select WPA2 in WPA Enterprise with.
- 4 To use NCC's user database, select Nebula cloud authentication in WPA Enterprise with.



If your network has a RADIUS server for authentication, select My RADIUS server in WPA Enterprise with.



If you select My RADIUS server in step 4, enter the RADIUS server's IP address/domain name in RADIUS server's Host. Enter the Port number of the RADIUS server; the default is 1812. Enter up to 32 alphanumeric characters for the Secret password, which is the key to be shared between the external RADIUS server and the Nebula Device.



- 5 Then click Save.

Manage User Accounts

- 1 Go to Organization-wide > Organization-wide manage > Cloud authentication > User to view and manage the user accounts which are authenticated using the NCC user database or external RADIUS server.
- 2 Click +Add to create a new user account and fill in the user's information in the Create user window. Then click Create user to save your changes and close the screen.



- 3 The click Save.



- 4** To check your settings, go to Site-wide > Configure > SSID settings.


For Nebula Cloud authentication, WPA2-Enterprise with Cloud-authentication is the encryption method shown on SSID advanced settings: WLAN security.

For RADIUS Server authentication, WPA2-Enterprise with MyRADIUS is the encryption method shown on SSID advanced settings: WLAN security.




3.33 Using DPPSK to Access the Guest WiFi Network

DPPSK (Dynamic Personal Pre-Shared Key) is a cloud authentication method offered in Nebula Professional Pack that enhances on the traditional Pre-Shared Key (PSK) method. DPPSK introduces dynamic key allocation to address the security weaknesses of static shared passwords. Unlike WPA2-PSK, where all users share the same password, DPPSK assigns a unique pre-shared key (K1, K2, K3) to each user or client device (C-1, C-2, C-3). The pre-shared key can be customized to expire in a particular timeframe. This tutorial shows you how to configure DPPSK for a guest WiFi network (W).

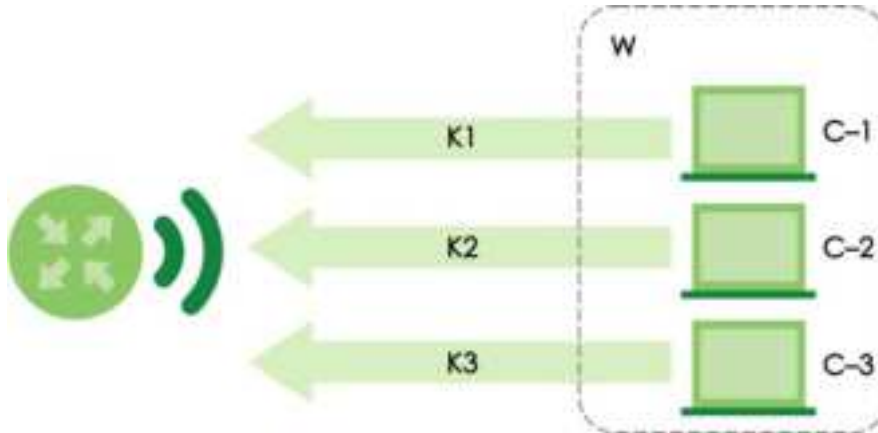

Set Up Guest WiFi

- 1 Go to Site-wide > Configure > Access points > SSID settings.
- 2 Change the SSID Name (1) (for example, SSID_lobby).
- 3 Enable the Guest Network (2).
- 4 Then click Save (3).

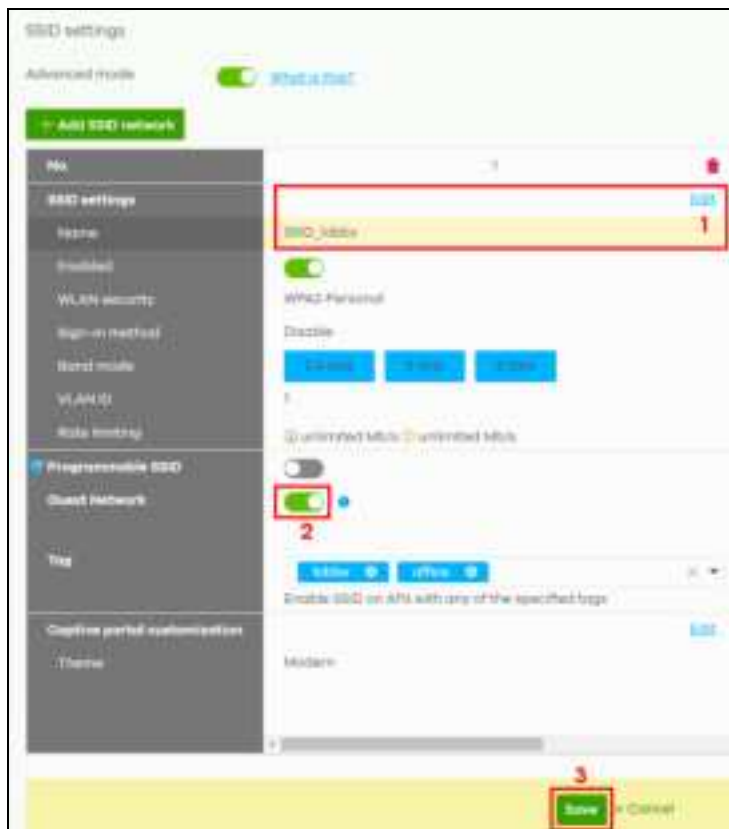

Select DPPSK as the WiFi Security

1 Go to Site-wide > Configure > Access points > SSID advanced settings.


2 Select the SSID (SSID_lobby) (1).

Note: Each site can only have one SSID in DPPSK mode.

3 Select Dynamic personal PSK with Nebula cloud authentication (2).

4 (Optional) Enter a backup key (3) for users who forget their DPPSK but still want to connect to the SSID.

5 Then click Save (4).

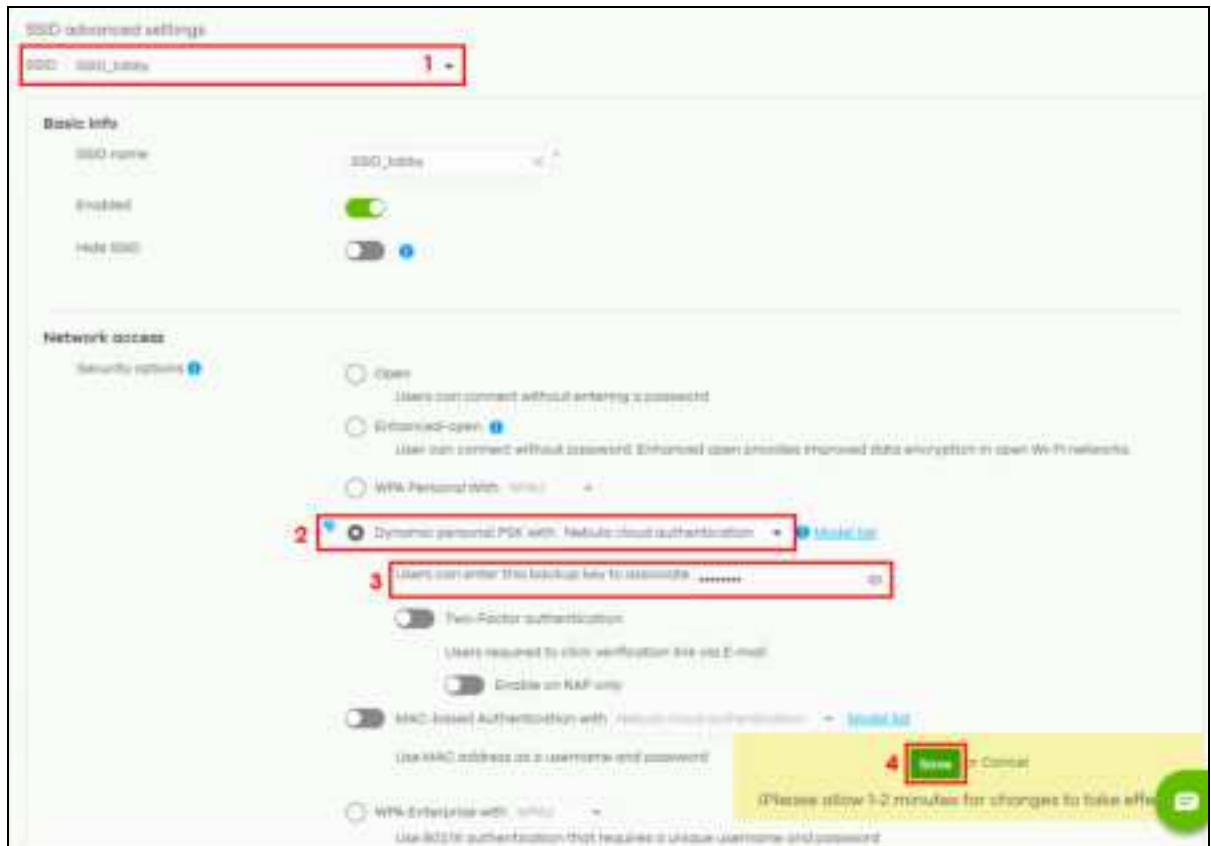


Generate the DPPSK in Batch

1 Go to Organization-wide > Organization-wide manage > Cloud authentication.

2 Click the DPPSK (1) tab.

3 Click +Add (2) and then click Batch create DPPSK (3).

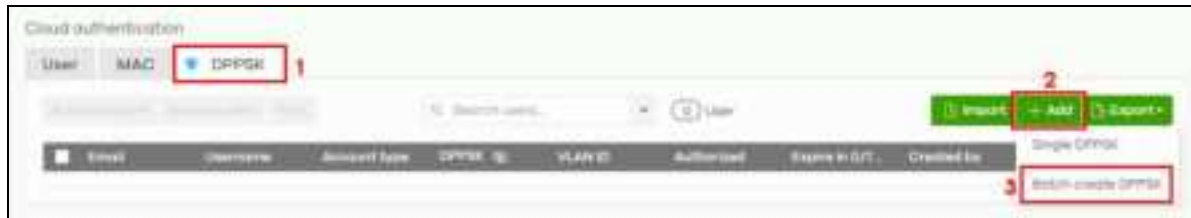

- 4 Enter 12 (for example) in the Number of accounts (1). This is the number of keys to be generated.
- 5 Enter a specific email address (2) to send a copy of each DPPSK and expiration date in a printable format.
- 6 Enter 7 (for example) and select days on the Expires in field (3).
- 7 Click Create user (4) to save your changes and close the screen.

- 8 The 12 DPPSK keys will be sent to the specified email for your distribution.

Notification

Dear Sir,

The following DPPSK keys have been successfully generated in the organizational network.

Key1@telcel generated on 2023-02-13 09:40:00 (UTC)	Key2@telcel generated on 2023-02-13 09:40:00 (UTC)	Key3@telcel generated on 2023-02-13 09:40:00 (UTC)	Key4@telcel generated on 2023-02-13 09:40:00 (UTC)
Key5@telcel generated on 2023-02-13 09:40:00 (UTC)	Key6@telcel generated on 2023-02-13 09:40:00 (UTC)	Key7@telcel generated on 2023-02-13 09:40:00 (UTC)	Key8@telcel generated on 2023-02-13 09:40:00 (UTC)
Key9@telcel generated on 2023-02-13 09:40:00 (UTC)	Key10@telcel generated on 2023-02-13 09:40:00 (UTC)	Key11@telcel generated on 2023-02-13 09:40:00 (UTC)	Key12@telcel generated on 2023-02-13 09:40:00 (UTC)

You will receive a separate email for each key.

This document is automatically generated. If you have any feedback, please contact us.

Attn: Security
The Global Telecom Team

The 12 DPPSK keys can now be used by your WiFi clients to access the SSID_lobby WiFi network.

3.34 Create a DPPSK Key Using the DPPSK API

This tutorial shows you how to create the DPPSK key through the NCC DPPSK API (Application Programming Interface).

- 1 Go to Site-wide > Configure > Site settings. Navigate to API access and then click Generate to create the API token for DPPSK. See [Section 4.9.6 on page 325](#) for more information on API token.



- 2 Use the following parameters to create a DPPSK key through API.

COMMAND	URL	DESCRIPTION	EXAMPLE RESPONSE
PUT	/dppsk/key	Create/modify a PPSK	{ "status": 200, "message": "Ok" }


The API endpoint is <https://api.nebula.zyxel.com/v1/vendor/wiflex/>.

The header (or API token) is:

HEADER (API TOKEN)	
X-ZyxeNebula-API-Key	XXXXXXXXXXXXXXXXXXXX (Replace your API token here)

The following is an example output.

- 3 Create the DPPSK entry with the key 'CreateDppskKey'.

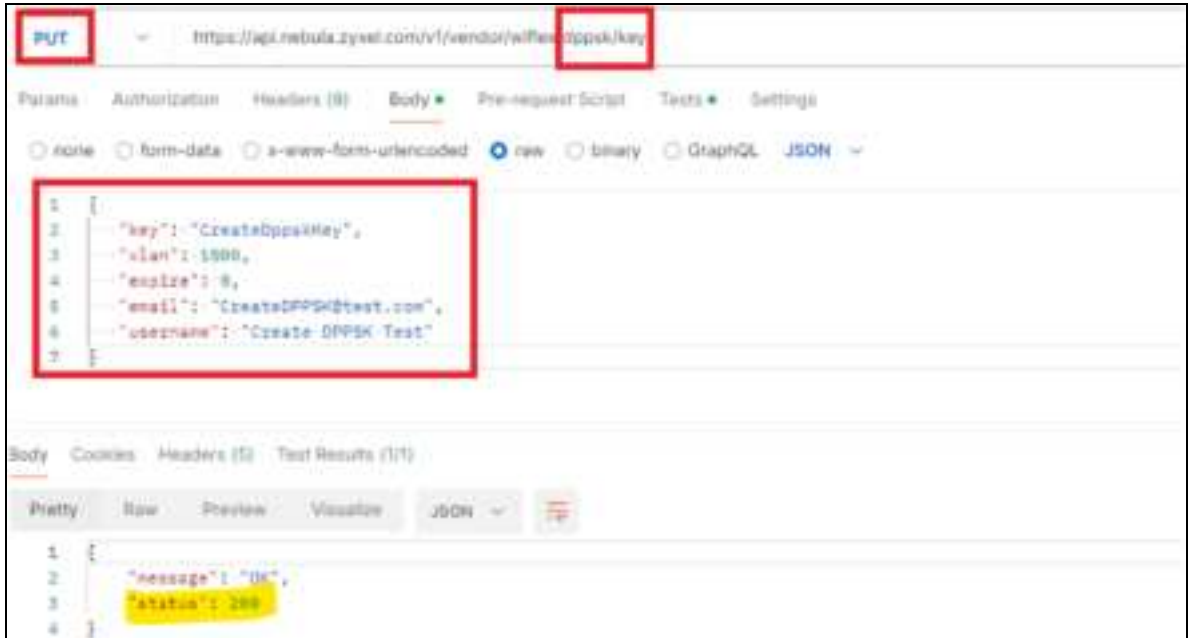


- 4 Go to Site-wide > Configure > Cloud authentication > DPPSK to view the new DPPSK entry.



3.35 Set Up WiFi Network Load Balancing

To avoid too many client devices connecting to the same Nebula Device (AP), which can cause high loading and impact WiFi performance, load balancing steers client devices to another nearby AP to split the loading equally. WiFi performance will decrease if the loading of the Nebula Device is too heavy; the more client devices connecting to the same Nebula Device, the less bandwidth each client device can get.

The following figure shows a high density WiFi deployment scenario. Most of the client devices (C:15) connect to AP2 even when the signal to the other Nebula Devices (AP1, AP3) are good. You can set up load balancing to disassociate idle / weaker WiFi signal client devices on AP2 to balance the loading.

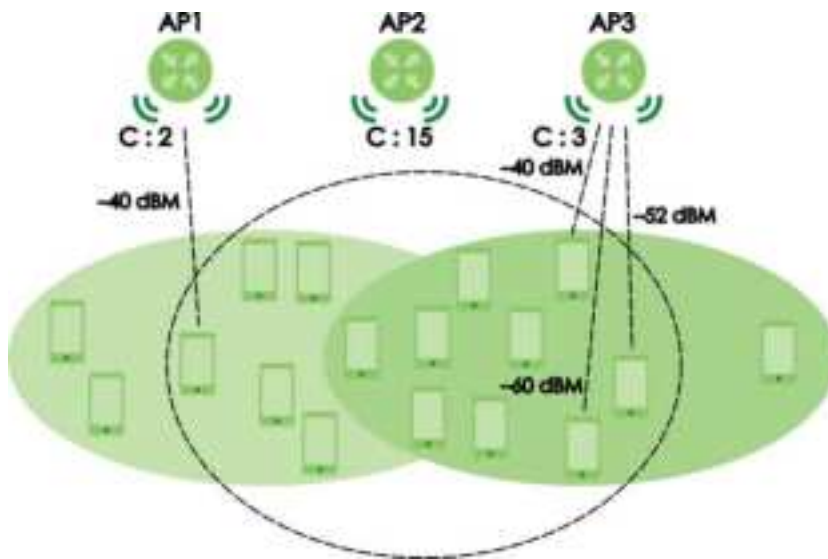

This tutorial shows you how to configure WiFi network load balancing.

- 1 Go to Site-wide > Configure > Access points > AP & port settings > Load balancing and select the load balancing mode:

- Enable 'By client device number' mode –
Click the Disassociate client device when overloaded switch to the right to disassociate WiFi client devices connected to an overloaded Nebula Device (AP). The disassociation priority is WiFi client device with the longest idle time, then disassociate WiFi clients with weak WiFi signal strength. Click the Disassociate client device when overloaded switch to the left to delay the connection of WiFi client devices until the Nebula Device can accommodate the required bandwidth. The Nebula Device can also steer the WiFi client device to another Nebula Device within its broadcast radius.

The disassociation of WiFi client devices by the Nebula Device is based on the following criteria:

- Idle time – WiFi client devices with the longest idle time will be disassociated first. If none of the connected WiFi client devices are idle, then the criteria shifts to weak signal strength.
- Signal strength – WiFi client devices that have the weakest signal strength will be disassociated first.

Note: The Nebula Device will delay sending of response, authentication, and probe request packets to a disassociated WiFi client device up to 3 instances. A disassociated WiFi client device can reconnect to the Nebula Device only after receiving 3 instances of delayed response.

- Enable 'Smart Classroom' mode –
When the maximum number of WiFi client devices has been reached, the Nebula Device disassociates the WiFi client devices instantly and ignores any response, authentication and probe request packets. The disassociation criteria is always poor signal strength.

Note: By default, the Nebula Device allows connection of a WiFi client device when it does not detect another Nebula Device within its broadcast radius.

The following table shows the Nebula Device's response to association requests when the number of associated WiFi client devices threshold has been reached, and the corresponding disassociation criteria based on the load balancing mode.

LOAD BALANCING MODE	BY CLIENT DEVICE NUMBER	SMART CLASSROOM
Association request response when the number of connected WiFi client devices has reached the threshold.	Delay new WiFi client device's association request.	Ignore new WiFi client device's association request.
WiFi client device disassociation criteria.	Longest idle time, then the weakest WiFi signal strength.	Weakest WiFi signal strength.


- 2 Set the Maximum client device number threshold (up to 127) when load balancing will be triggered for each bandwidth (2.4 GHz, 5 GHz and 6 GHz).
- 3 Then click Save.

3.36 Configure a Captive Portal

A captive portal is a login web page where a network user has to be authenticated before they can access the network.


This tutorial shows you how to configure captive portal settings for an SSID profile.

- 1 Go to Site-wide > Configure > SSID settings and enter the SSID Name. See [Section 4.9.1 on page 299](#) for more information on configuring this screen. Then click Save.

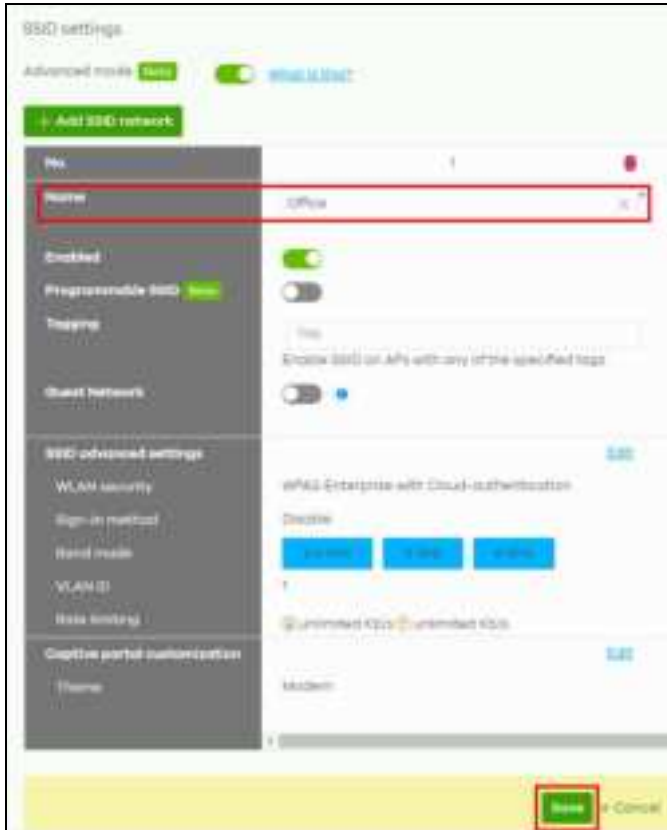

- 2 Go to Site-wide > Configure > Access points > SSID advanced settings and select the SSID Name: Office. Select the Sign-on with: Nebula cloud authentication to use the NCC user database to authenticate users. Then click Save.

Alternatively, select My RADIUS server to use a RADIUS server that will authenticate users. See [Section 5.3.2 on page 343](#) for more information on configuring this screen.

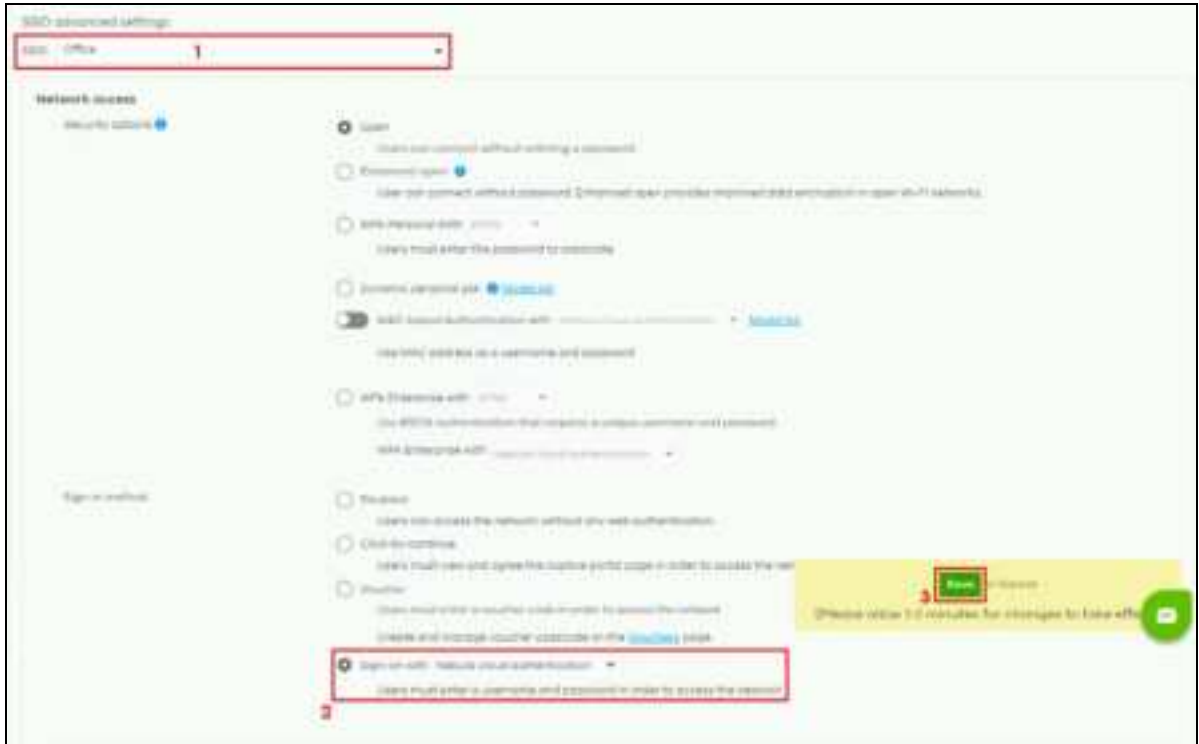

If you select My RADIUS server in step 2, enter the RADIUS server's Host, Port, and Secret. Enter the Network Access Server (NAS) identifier on the Nebula Device to identify the Nebula Device to the RADIUS server, if required. This might be necessary if there are multiple Nebula Devices behind NAT using the same public WAN IP address for the RADIUS server. Then click Save.



Note: Make sure to add the Nebula Device (AP) to the trusted device list in the RADIUS server.

3.37 Create a Custom Captive Portal Page

- 1 Go to Site-wide > Configure > Access points > Captive portal customization. Click the switch to the right to use a custom login page from an external web portal instead of the one built into the NCC. See [Section 5.3.3 on page 353](#) for more information on configuring this screen.
- 2 Specify the login page's URL; for example, <http://IIS server IP Address/login.asp>. The Internet Information Server (IIS) is the web server on which the web portal files are installed.
- 3 Click Download to download a ZIP file containing example captive port HTML files. Unzip and edit these HTML files to upload to a webserver that is accessible from NCC.

External captive portal URL

Use URL: ☒ URL: [Customize page](#)

To use custom captive portal page, please download the zip file and add them:
[Download](#) the customized captive portal page example

Captive portal behavior

After the captive portal page where the user should go?

☒ Stay on captive portal after successful page

☐ To destination URL:

[Save](#) [Cancel](#)

(Please wait 1-2 minutes for changes to take effect.)

- 4 Then click Save.
- 5 To check your captive portal settings, enter the URL `http://<server IP address>/<page name>` in your browser on your smartphone or PC to confirm the login page.

 


3.38 Limit Applications Usage or Block Applications


To control network traffic throughput by limiting or blocking specific applications using too much bandwidth, do the following:

Limit Applications Usage

- 1 To filter the list of widgets to display on the Dashboard screen, go to Site-wide > Dashboard and click Customize to show the Widget, Reset and Close buttons.



- 2 Click Widget to filter the list of widgets to display on the Dashboard screen and select Access points application usage.

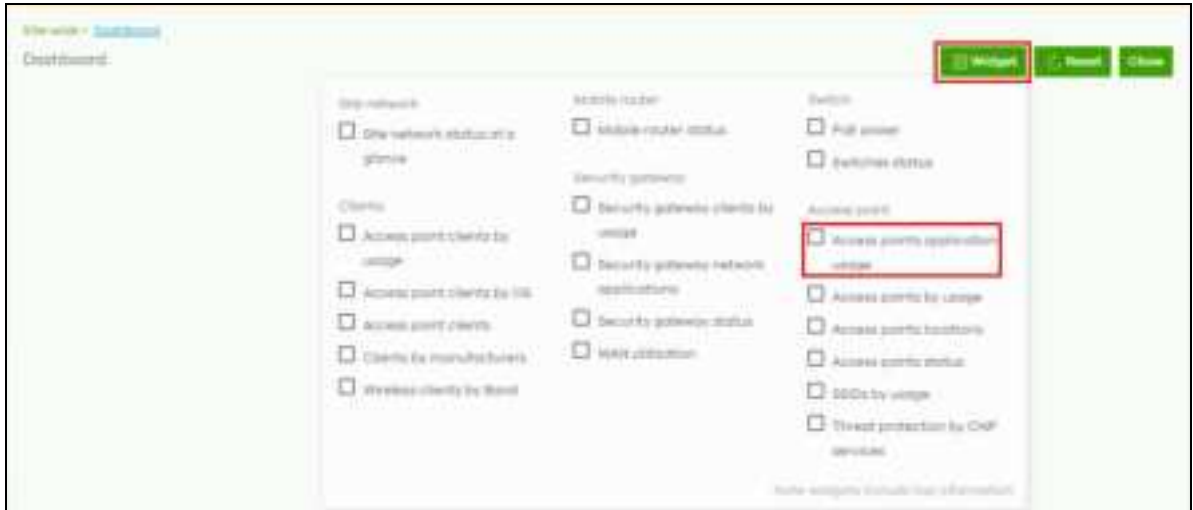


- 3 Then click Close.



The Access points application usage widget appears. This allows you to view the top ten applications used by the Nebula access points in the site in the past 24 hours.



- 4 Go to Site-wide > Applications usage to view the usage statistics for applications used in the site. Hover the mouse on the application (for example, YouTube) you wish to limit the bandwidth and click Limit.

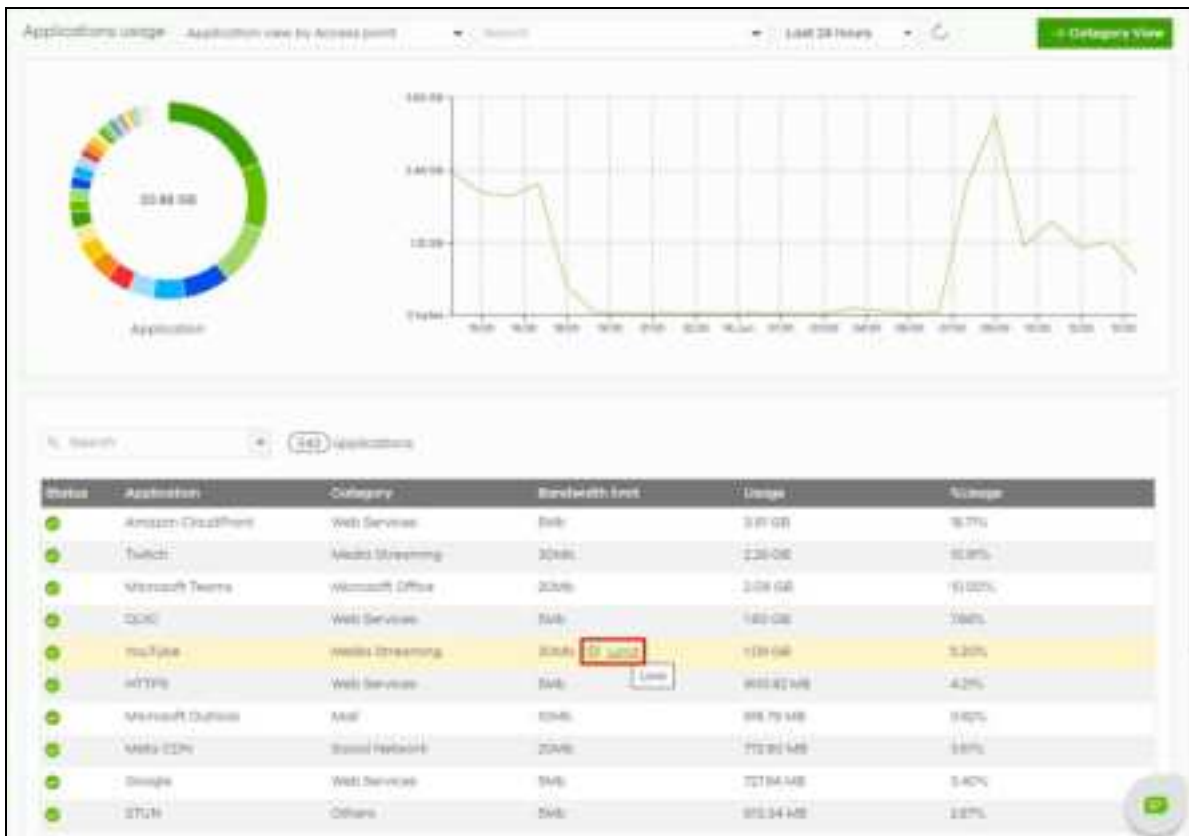

- 5 On the Media Streaming screen that appears, set the maximum bandwidth by:
- using the slider, or
 - entering the bandwidth limit (1 to 30 Mb/s).

Then click Ok.



Block Applications

Go to the Site-wide > Configure > Security router > Traffic management screen and do the following:

- Click the Application identification & control switch to the right to control usage of applications.
- Click +Add to create up to 5 application management profiles.
- Select the Enabled checkbox to turn on the rule. Select the Client to which this rule applies. Select the YouTube Application to apply the rule. Then enter a Description for this profile (up to 512 characters long).
- Then click Save to create a new application management profile.




3.39 Find the LAN Port Used by Connected Wired Client Devices (for Nebula Switches only)

To view a list of all wired clients connected to the Nebula Device in a site and also see the corresponding port connection, do the following:

Method 1:

- 1 Go to Site-wide > Clients > Client list tab and select Switches clients (A) to filter the list of clients based on the type of Nebula Device.

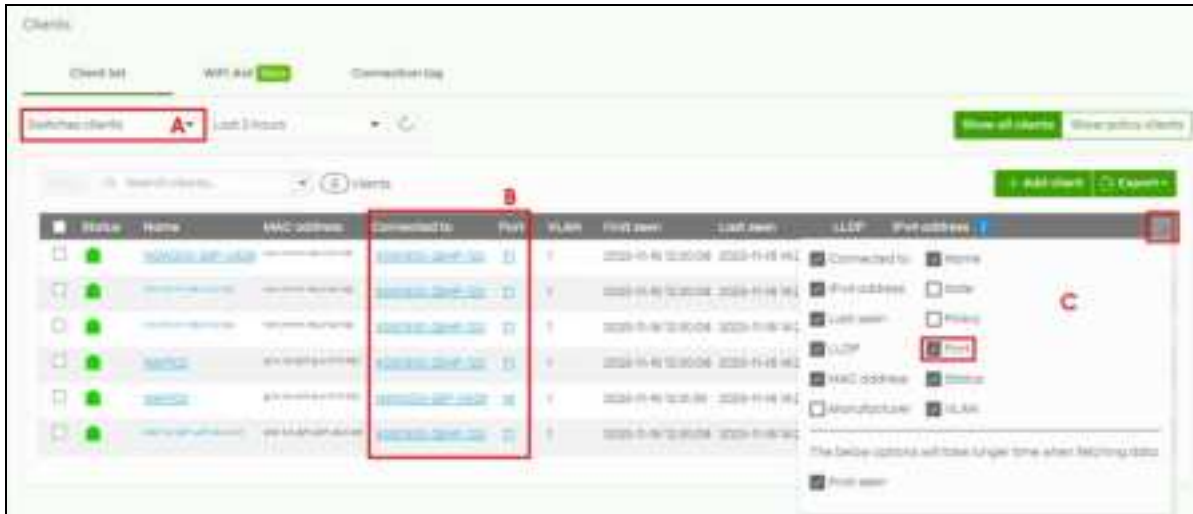

- 2 Locate the Port column (B) to know the port to which the client is connected.


Note: If you do not find the Port column (B), click the  icon (C) and select Port to display the Port column (B).

Method 2:


- 1 Go to Site-wide > Devices > Switches and click the Name of the Switch to go to the Switch details screen.



- 2 Scroll down to the Ports section and hover the mouse over a port to know which client is connected.

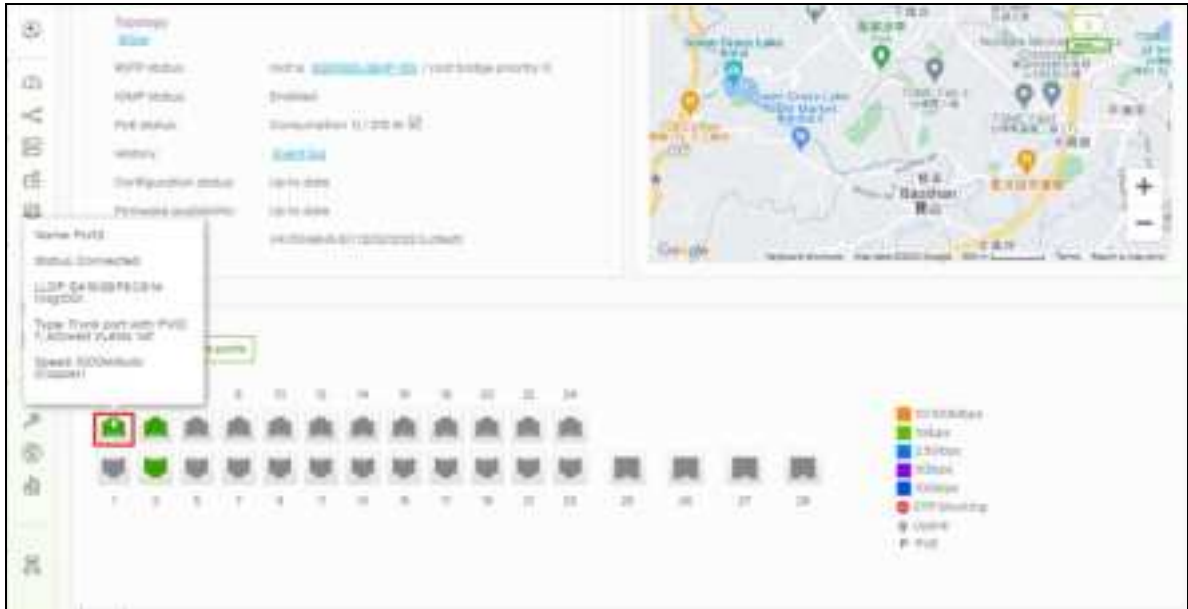


- 3 Click the port to go to the Switch port details screen to view the individual Nebula Device port statistics.

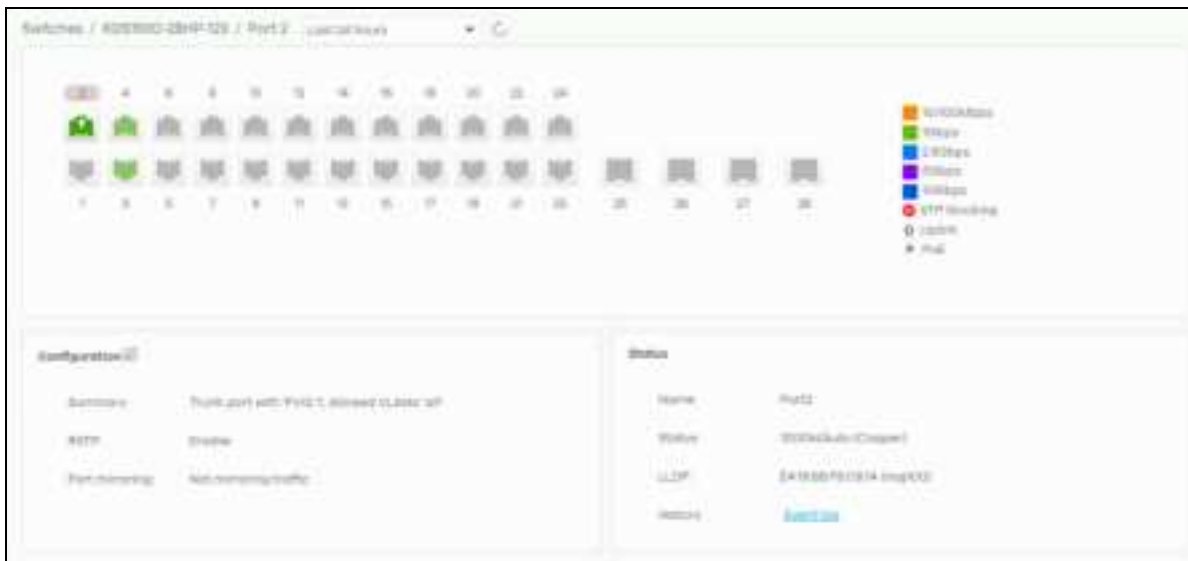

3.40 Configure Voice VLAN (for Nebula Switches only)

VoIP (voice over Internet protocol) devices are commonly in use in office environments. When designing a network, assign a higher priority to voice traffic. Use voice VLAN to prioritize voice packets from a VoIP device, and separate data packets from a computer.

As shown in the next figure, connect the VoIP device (P) to the Nebula Device (S) on one end. Connect the computer (C) to the VoIP device (P) on the other end. The VoIP device (P) serves as a bridge for both the Nebula Device (S) and computer (C).

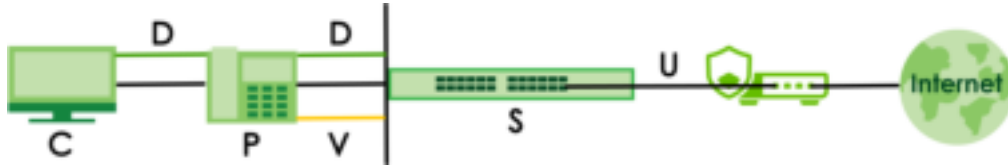

The Nebula Device will add a VLAN tag for voice packets (V) and data packets (D) separately after receiving them. Then forward the voice packets (V) and data packets (D) to the uplink port (U). This section shows you how to separate data packets (D) and voice packets (V) between a VoIP device (P) and computer (C), without having to assign a VLAN tag.

- [Configure the Nebula Device Ports](#)
- [Configure the Voice VLAN](#)

3.40.1 Configure the Nebula Device Ports

- 1 Go to Site-wide > Configure > Switches > Switch ports.
- 2 Select the port that connects to a VoIP device and click Edit.




- 3 Select Access for the port Type.
- 4 Select Voice VLAN for the VLAN type.
- 5 Assign a PVID for the port. Use the PVID to tag data packets with the VLAN ID.
- 6 Then click Update.

3.40.2 Configure the Voice VLAN

- 1 Go to Site-wide > Configure > Switches > Switch settings.
- 2 Scroll to the Voice VLAN part of the screen.
- 3 Click the switch to enable the voice VLAN feature in the Nebula Device.
- 4 Enter a Voice VLAN ID.
- 5 Select the Priority of the voice VLAN from 1 to 6.
- 6 Select OUI in Assign VLAN by. The Nebula Device assigns the port connected to the VoIP device to the voice VLAN if the connected VoIP device's OUI matches any OUI in the list.
- 7 Enter the OUI address of the VoIP device. The OUI (Organizationally Unique Identifier) is the first three octets of the VoIP device's MAC address. By specifying the MAC address, the Nebula Device can identify voice traffic accordingly.

Note: The Nebula Device supports up to six vendor OUIs.

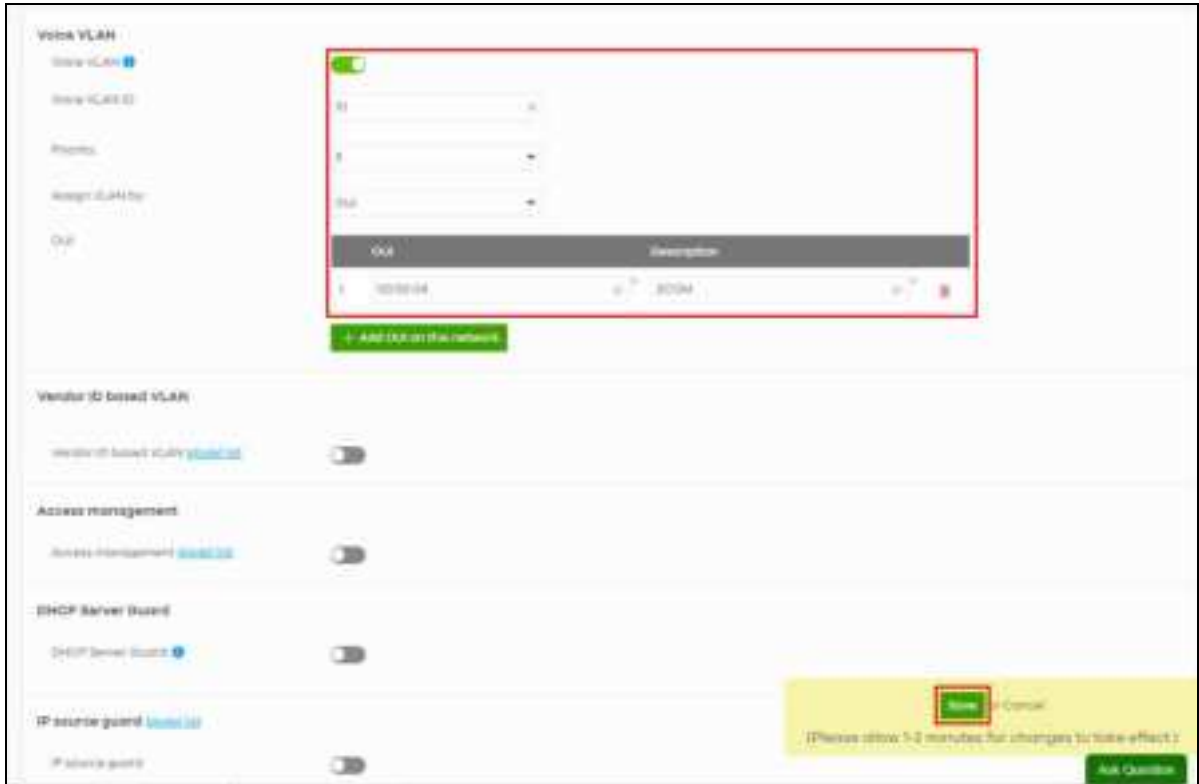

- 8 Then click Save.


3.41 Manage IPTV (for Nebula Switches only)

This section shows you how to configure IPTV settings and view IPTV reports:

- [Set up the VLAN for IPTV](#)
- [Define the Role of a Switch](#)
- [Configure the Channel Profile and Naming](#)

3.41.1 Set up the VLAN for IPTV

- 1 Go to the Site-wide > Configure > Switches > Advanced IGMP screen. Click IGMP snooping to enable IGMP snooping on all Switches in the site. Under IGMP-snooping VLAN, select Auto-detect to automatically detect which VLANs are used for IPTV. Otherwise, manually enter the VLAN IDs (1 – 4094, up to 16 VLANs, separated by commas, no spaces) in the User Assign VLANs field. Click Save when you are finished.

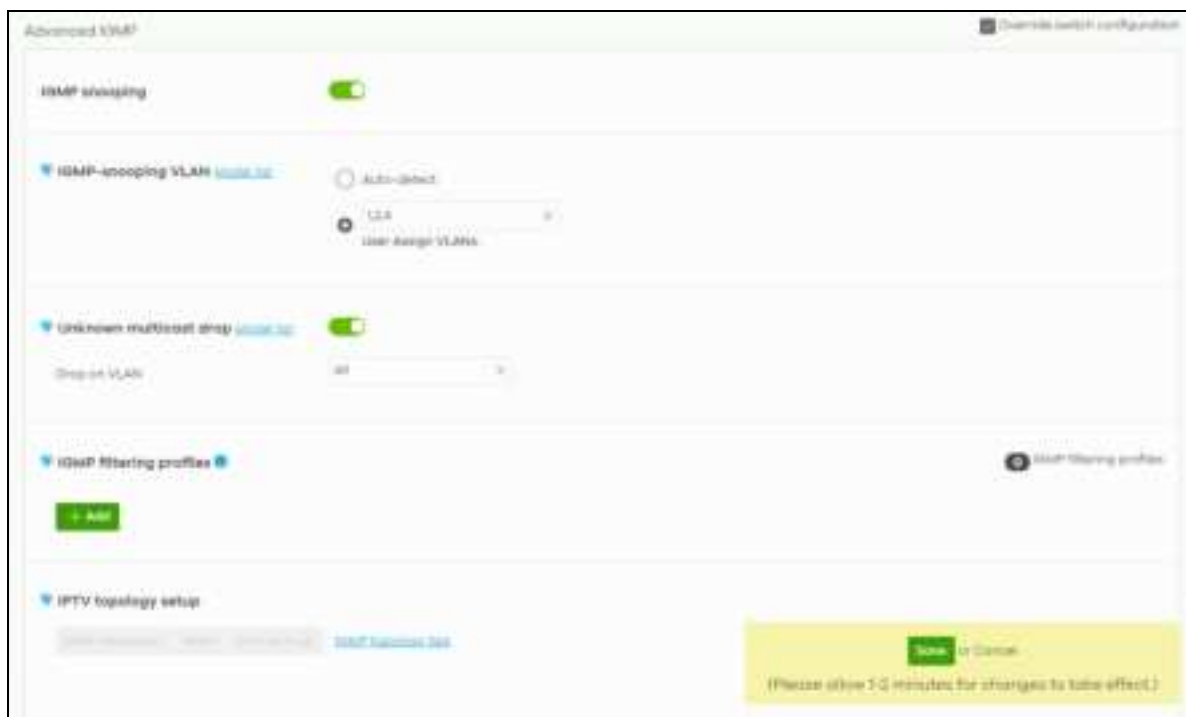


- 2 If you have not defined the IP address of the Switch, go to the Site-wide > Configure > Switches > IP & Routing screen and click +Add under IP interface. The following screen appear. Enter the Interface IP, Subnet mask and ID number of the VLAN used for IPTV. Click Create to save the setting.

3.41.2 Define the Role of a Switch


- 1 Go to the Site-wide > Configure > Switches > Advanced IGMP screen. Under IPTV topology setup, select a Switch you want to configure and select a Role to define the role of your Switch from the drop-down list box.

Note: Click the IGMP topology tips link to view information about Switch roles. If the role of the Switch is not defined accordingly, the IPTV performance will be greatly affected.

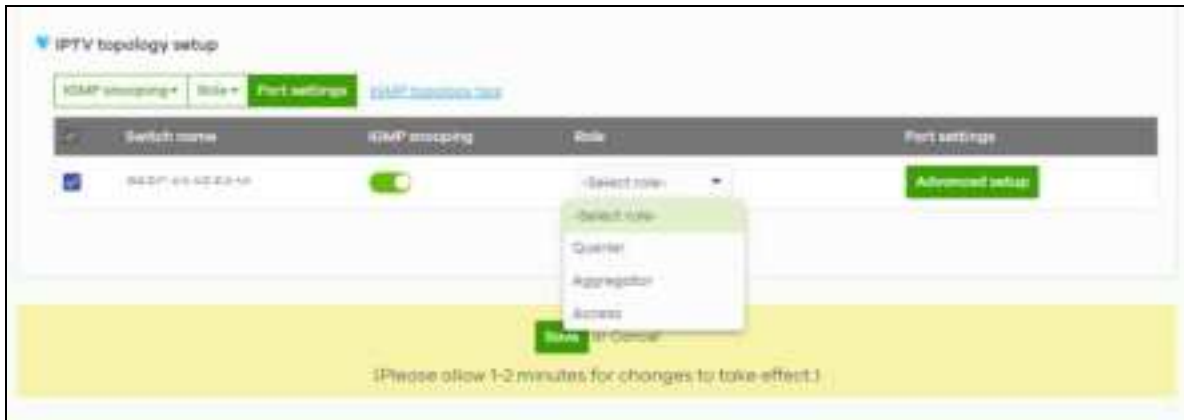


- 2 After you define the role of the Switch, click Advanced setup and the following screen appears. The Leave mode will show the default setting based on the role you select. But you can still go back to the Advanced IGMP screen to configure the Role and Leave mode. Under Maximum group, you can select Enable and enter the maximum number of channels allowed at a time. Otherwise, select Disable. Click Save to save the changes.

Note: You can click Reset to reset the port settings to default.

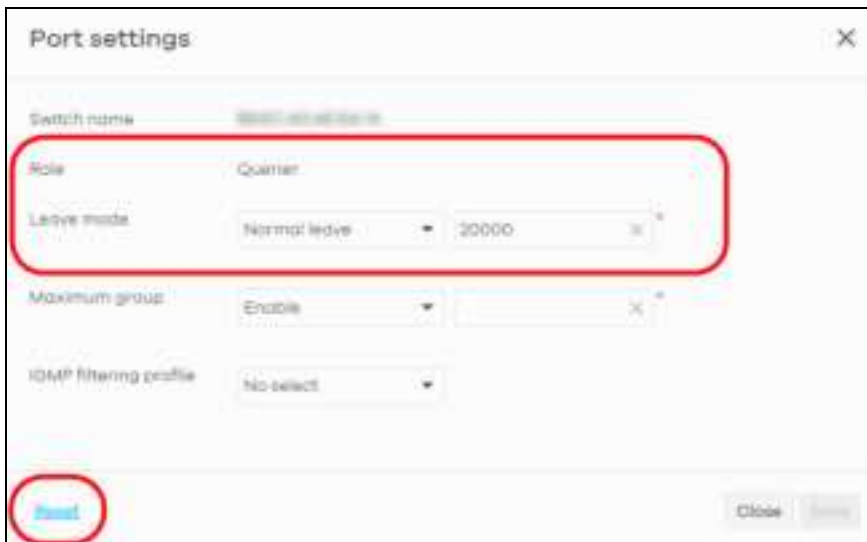

- 3 If a reminder of Network analytic alert appears on the Site-wide > Monitor > Switches > IPTV report page, click the Update filter rules link below to use the default ACL rules to block UPnP packets. In the example screen below, a Network analytic alert indicates that your IPTV traffic flow is affected by unneeded UPnP packets. Click the Update filter rules link to define IP filtering rules in the Site-wide > Configure > Switches > ACL screen to block these packets.

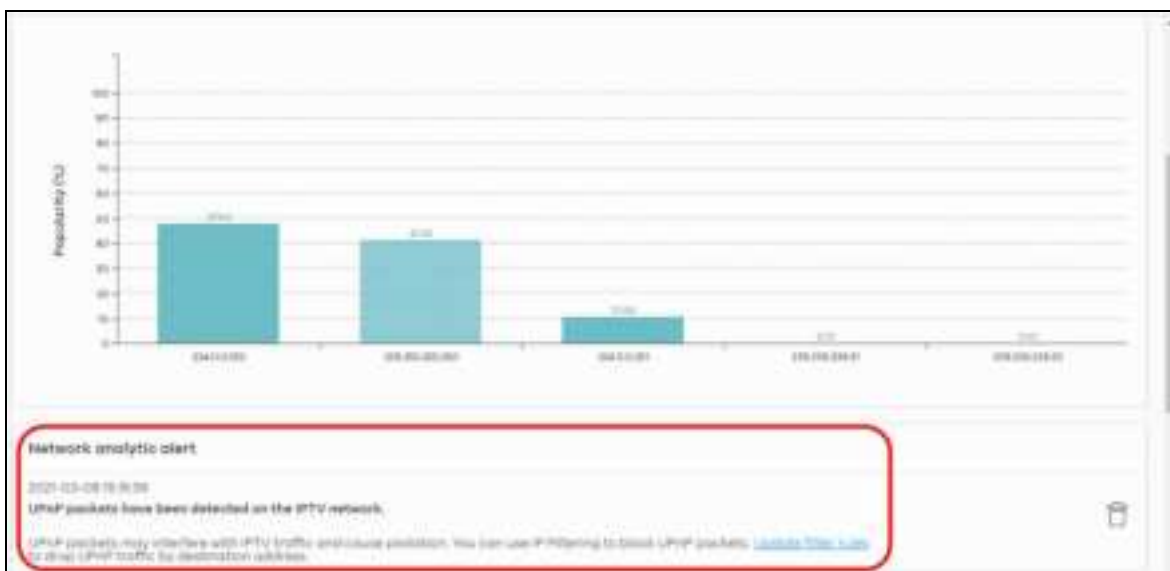

- 4 The Update filter rules link will lead you to the following screen. Click Save to save the default setting to block UPnP packets.



3.41.3 Configure the Channel Profile and Naming


A channel profile is the IP address range allowed to receive IPTV channels. An IPTV channel is used to send video traffic to the IP addresses in the channel profile.

- 1 To set up a range of available IPTV channels, go to the Site-wide > Configure > Switches > Advanced IGMP screen. Under IGMP filtering profiles, click +Add and the following screen appear. Enter a Profile name and enter the Start IP address and End IP address. Click Save & Back to save the changes.




The image shows a configuration window titled "IGMP filter". It has a "Profile name" field with the value "New Profile". Below this is a table with two columns: "Start IP address" and "End IP address". The first row contains the value "1" in the "Start IP address" column. There is a green "+ Add" button below the table. At the bottom right, there are "Close" and "Apply & Save" buttons.


- 2 To edit the naming of the IPTV channels, go to the Site-wide > Monitor > Switches > IPTV report screen and click Channel management under Channel information.

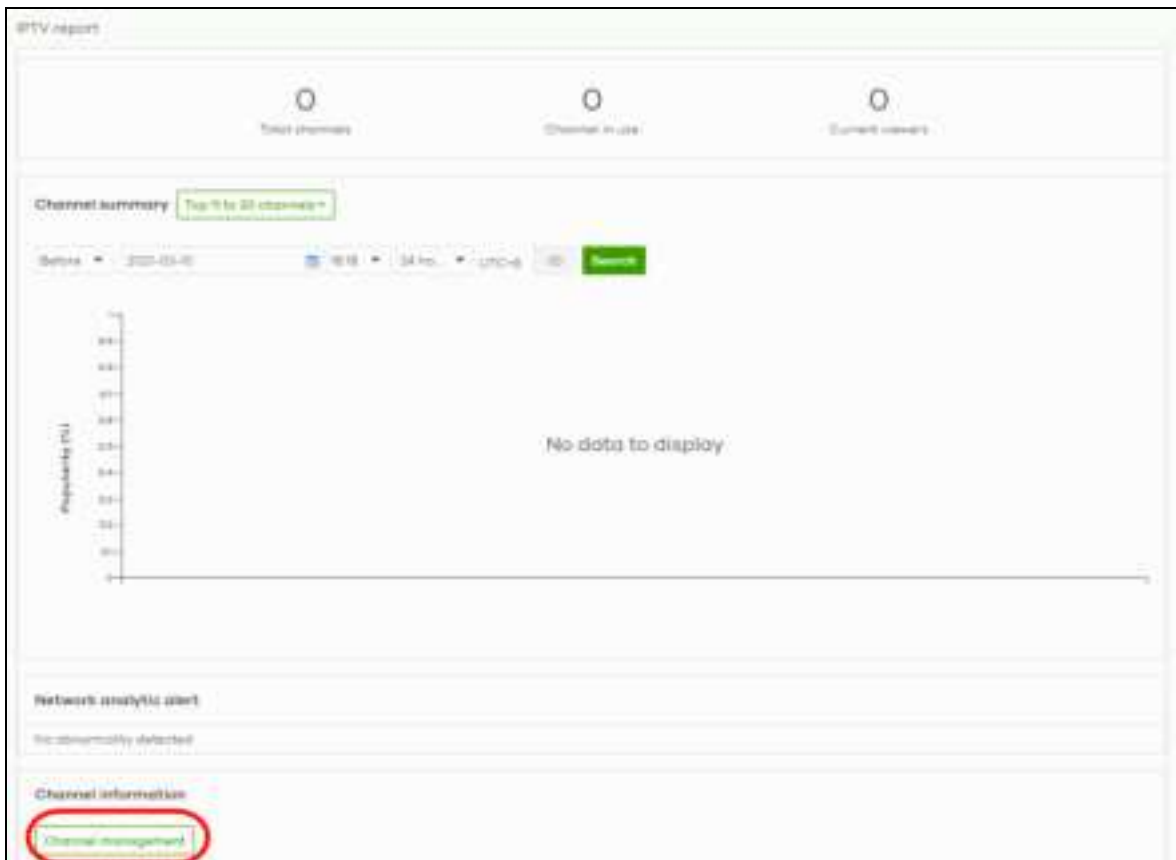

- 3 You can choose to either import an updated channel list (channels.xlsx), or enter/edit each Channel address and Channel name individually.
 - Under Channel management, click channel list to download a blank Excel file template, edit accordingly and save it, and then click import to import the complete channel list to Nebula. Or,
 - Click +Add to add and then add/edit a Channel address and Channel name at a time.

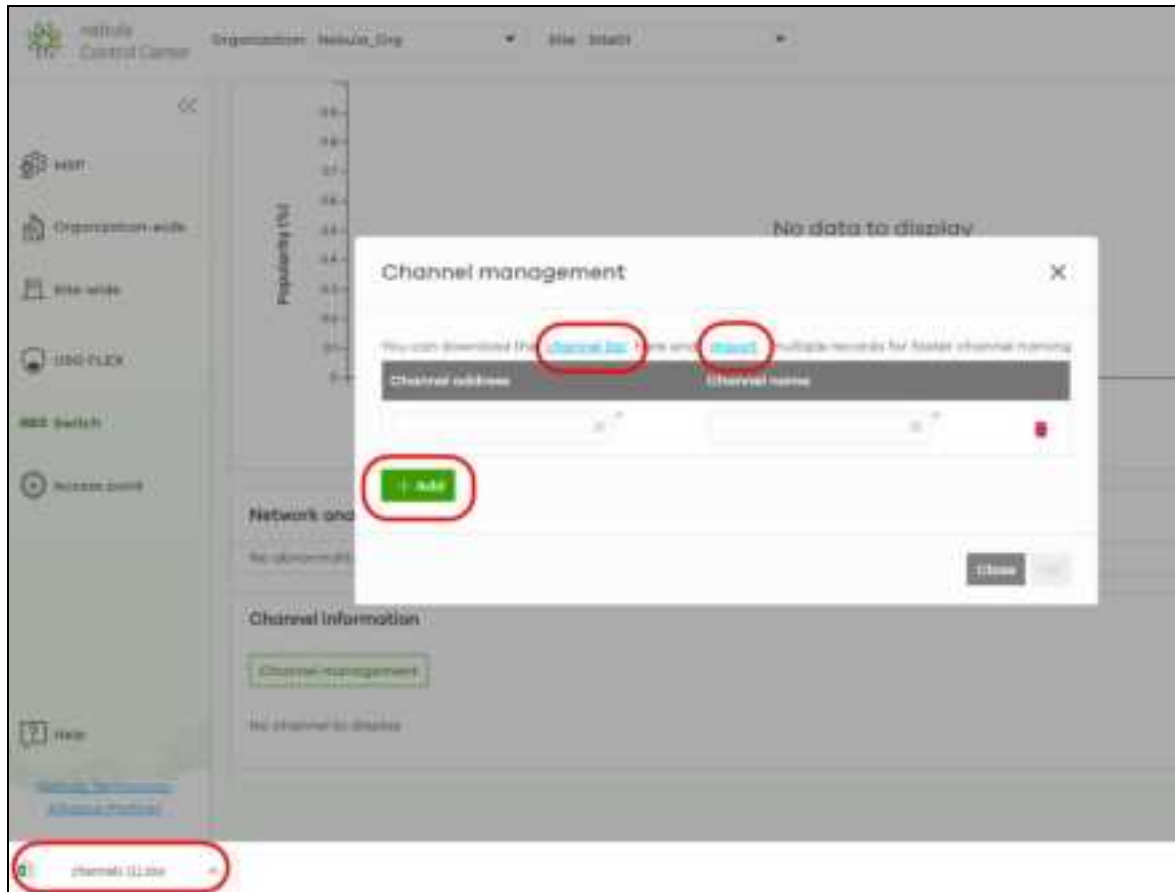

- 4 To view the summary of the IPTV report, go to the Site-wide > Monitor > Switches > IPTV report screen. Click Channel summary to see the top or bottom viewed channels within the specified time period you choose.

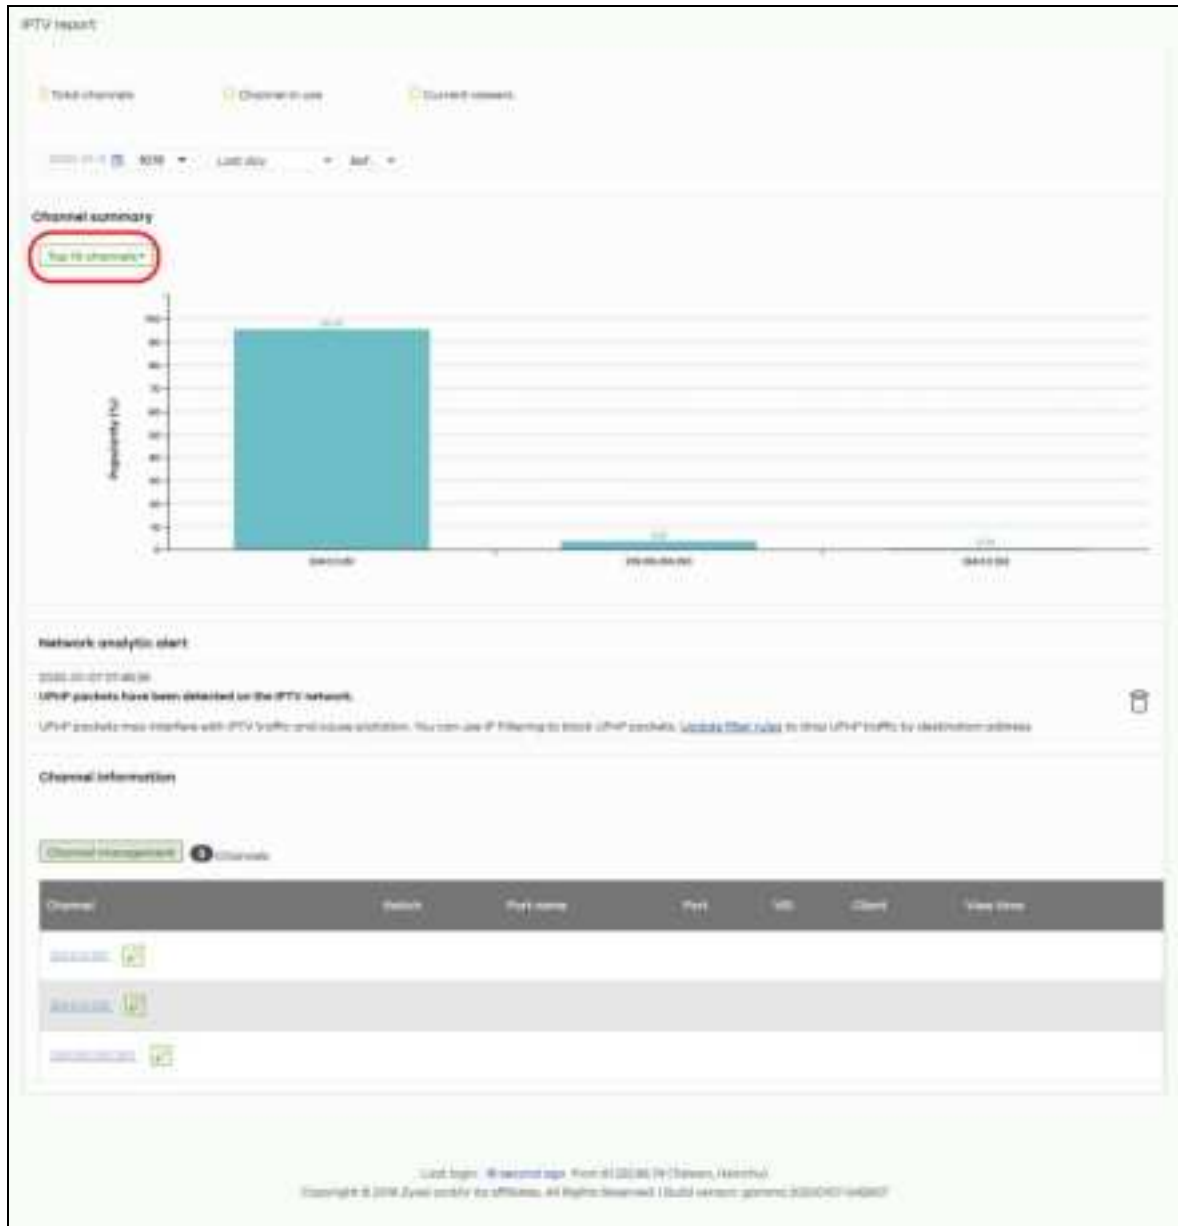

3.42 Enable IP Source Guard (for Nebula Switches only)

IP source guard consists of the following features:

- DHCP snooping. Use this to filter unauthorized DHCP server packets on the network and to build a binding table dynamically.
- ARP inspection. Use this to filter unauthorized ARP packets on the network.
- Static IP bindings. Use this to create static bindings in the binding table.

Binding Table

IP source guard uses a binding table to distinguish between authorized and unauthorized ARP packets in your network. The Nebula Device builds the binding table by snooping DHCP packets (dynamic bindings) and from information provided manually by administrators (static bindings).

DHCP Snooping


The Nebula Device only allows an authorized DHCP server on a trusted port to assign IP addresses. Unauthorized DHCP servers will not be able to assign IP addresses to network clients. When the Nebula Device receives a DHCP server packet from an authorized DHCP server, it inspects the packet and records the DHCP information in a binding table. The binding records are used in ARP inspection to filter unauthorized ARP packets.

ARP Inspection

When the Nebula Device receives an ARP packet, it looks up the appropriate MAC address, VLAN ID, IP address, and port number in the binding table. If there is a binding, the Nebula Device forwards the packet. Otherwise, the Nebula Device discards the packet.

If you want to use dynamic bindings to filter unauthorized ARP packets (typical implementation), you have to enable DHCP snooping before you enable ARP inspection.

The following figure demonstrates a scenario with DHCP snooping and ARP inspection enabled. In this scenario, we connect an authorized DHCP server (A) and the client devices on the ARP trusted ports (T). A client device (B) is assigned the IP address 192.168.1.56 by the authorized DHCP server (A). A malicious host (C) on an untrusted port (UT) puts a wrong MAC address with the IP address 192.168.1.56 in an ARP reply packet pretending to be client device (B) (192.168.1.56). The Nebula Device snoops DHCP packets sent from the authorized DHCP server (A) and creates bindings in the binding table. When the Nebula Device receives ARP packets from an untrusted port (UT), it compares the IP and MAC addresses with the existing bindings. Since the IP and MAC binding is different from the existing bindings, the Nebula Device blocks the unauthorized ARP packets sent from the malicious host (C). The malicious host (C) therefore cannot disguise as client device (B) to build connections with other client devices on your network.

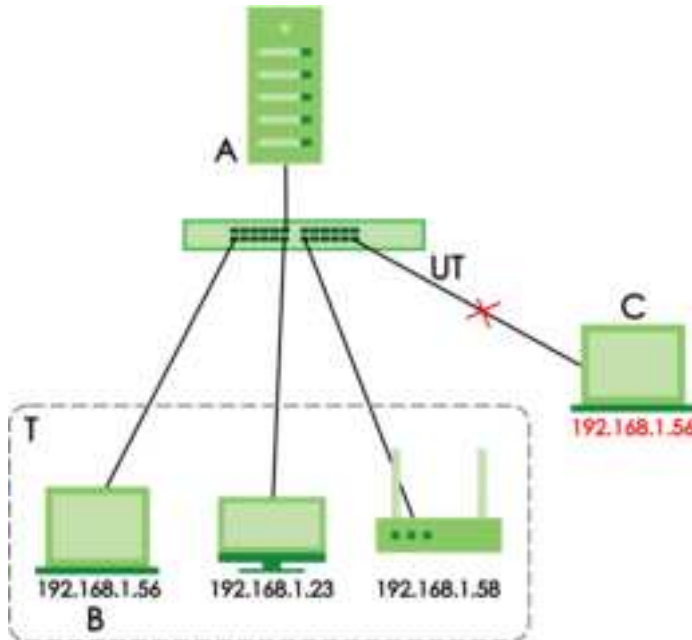

To setup IP source guard on the Nebula, do the following:

- 1 Go to Site-wide > Configure > Switches > Switch settings. Slide the switch to enable IP source guard for the Nebula Devices in your site. Then click Save. The Protected switch and Allowed client list will appear. The Protected switch information synchronizes with the port's IPSG Protected setting in Site-wide > Configure > Switches > Switch ports. It will display the enabled ports.

- 2 Click the IP Source Guard switch to enable/disable IP source guard for the specific registered Nebula Device(s) in your site.

Switch Name	IP Source Guard	Protected ports	Client table
BC-00-11-78-9A-6A		1,3,7	 Run
XS3800-30		1,4	 Run
XG52220-30		Null	 Run

- 3 Click the edit icon to go to Site-wide > Configure > Switches > Switch ports to configure Protected ports for the Nebula Device. A port is protected if IPSPG protected is enabled on this port.

Switch Name	IP Source Guard	Protected ports	Client table
BC-00-11-78-9A-6A		1,3,7	 Run
XS3800-30		1,4	 Run
XG52220-30		Null	 Run


- 4 Click to select the port you want to enable IP source guard.

Switch/Port	Port name	V Port	VLAN	Access type	Send bytes	Received	Connection	PSB	Status	Type	Tag	Number of client device
	Port1	1	1	Protected	0 bytes	0 bytes	Disabled	None	Disabled	Trunk		0
	Port2	2	2	Protected	0 bytes	0 bytes	Disabled	None	Disabled	Trunk		0
	Port3	3	3	Protected	0 bytes	0 bytes	Disabled	None	Disabled	Trunk		0
	Port4	4	4	Protected	0 bytes	0 bytes	Disabled	None	Disabled	Trunk		0
	Port5	5	5	Protected	0 bytes	0 bytes	Disabled	None	Disabled	Trunk		0
	Port6	6	6	Protected	0 bytes	0 bytes	Disabled	None	Disabled	Trunk		0
	Port7	7	7	Protected	0 bytes	0 bytes	Disabled	None	Disabled	Trunk		0
	Port8	8	8	Protected	0 bytes	0 bytes	Disabled	None	Disabled	Trunk		0
	Port9	9	9	Protected	0 bytes	0 bytes	Disabled	None	Disabled	Trunk		0
	Port10	10	10	Protected	0 bytes	0 bytes	Disabled	None	Disabled	Trunk		0

Note: Do NOT configure IPSPG on an uplink port as this may cause disconnection between the client device and Nebula.

To restore connection on an uplink port, go to Site-wide > Configure > Switches > Switch ports to select the uplink port. In the Update 1 port screen select Disabled in IPSPG protected. Then reset the Nebula Device to its factory-default setting (see the Nebula Device's User's Guide for more information).

- 5 In the Update port screen, select Enabled in IPSPG protected. The IPSPG protected field in the Site-wide > Configure > Switches > Switch ports table for the updated port will display Enabled.

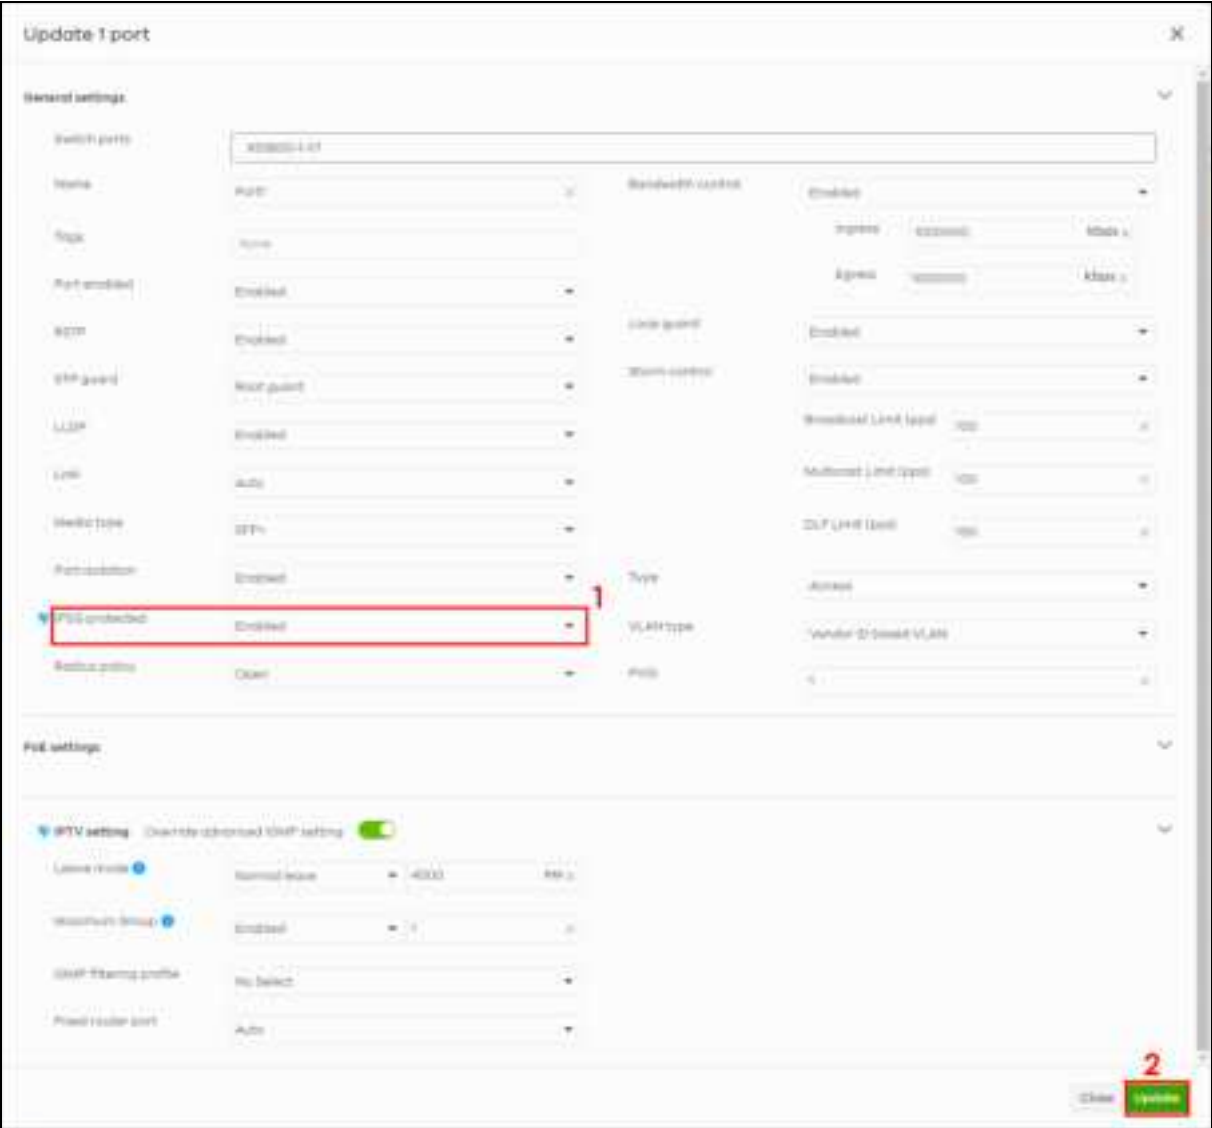

6 Click Run.

Switch Name	IP Source Guard	Protected ports	Client table
XS3800-1-01		1,3,5,7	
XS3800-30		1,4	
XG52220-30		1	

7 A merged list window appears. Click to select the port and then click Transfer.

The learning table could be empty if:

1. It takes about 3 minutes to refresh the address table after you apply the Switch setting.
2. Protected port is not specified.

☐	IP address	MAC address	VLAN	Port	Type
☒	192.168.1.100	080056540000	1	1	allow-protecting

- 8 The port with the particular IP and MAC addresses is added to the Allowed client list. Click Save.

Allowed client list

☐	IP address	MAC address	VLAN
☒	192.168.1.100	080056540000	1

(Please allow 1-2 minutes for changes to take effect.)

3.43 Set Up MAC Authentication With NCAS (for Nebula Switches only)

To set up MAC authentication with NCAS (Nebula Cloud Authentication Server), do the following:

- 1 Go to Site-wide > Configure > Switches > Authentication: Server type to select the authentication server.
- 2 Click +Add to create the Authentication policy.
Enter the Name (for example, Trusted Device) and select MAC-Base in Authentication type.
- 3 Go to Site-wide > Configure > Switches > Switch ports to bind the authentication policy to the access port(s).
 - 3a Select the port(s) and click Edit.
 - 3b In the Update # port screen, select Access in Type.
Select MAC-Base/Trusted Device in Auth. policy. Then click Update.
- 4 Go to Organization-wide > Organization-wide manage > Cloud authentication > MAC to add MAC addresses in the cloud authentication list.
 - 4a Click +Add to create to create a new user account.
 - 4b In the Create user screen, enter the MAC address for this account.

- 4c** In the Authorized field, select the user's access to All sites or Specified sites. If you select Specified sites, a field displays allowing you to specify the sites to which the user access is authorized.
- 4d** Then click Create user.

3.44 Set Up Dynamic VLAN With RADIUS (for Nebula Switches only)

In this example, VLAN10 is configured on port 1 (P1) of the Nebula Device. The user creates the following two accounts in the RADIUS server (R):

- Account with VLAN100 assignment
- Account without VLAN assignment.


Scenario 1:

The login account passes IEEE 802.1x port authentication with dynamic VLAN assignment. Client (C) will connect to the network through VLAN100.

Scenario 2:


The login account passes IEEE 802.1x port authentication without dynamic VLAN assignment. Client (C) will connect to the network through VLAN10.

Figure 33 IEEE 802.1x Port Authentication With and Without Dynamic VLAN Assignment Example

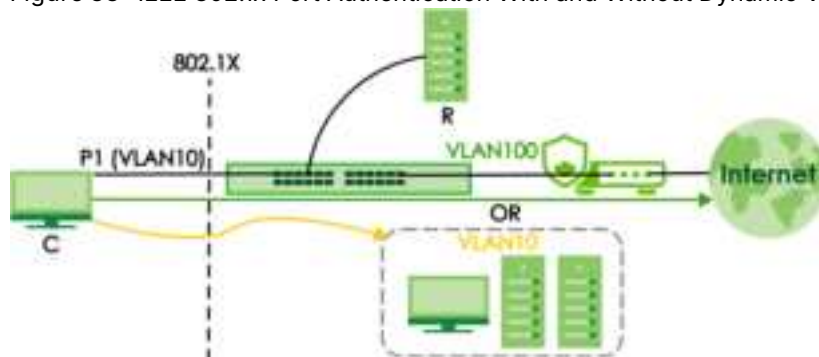


To set up dynamic VLAN with RADIUS, do the following:

- 1 Configure the client list in the RADIUS server. In the example screen below, enter the management IP address of the Nebula Device in NAS. Enter the shared Secret (password) in your Site-wide > Configure > Switches > Authentication screen. Then click the add (+) button.

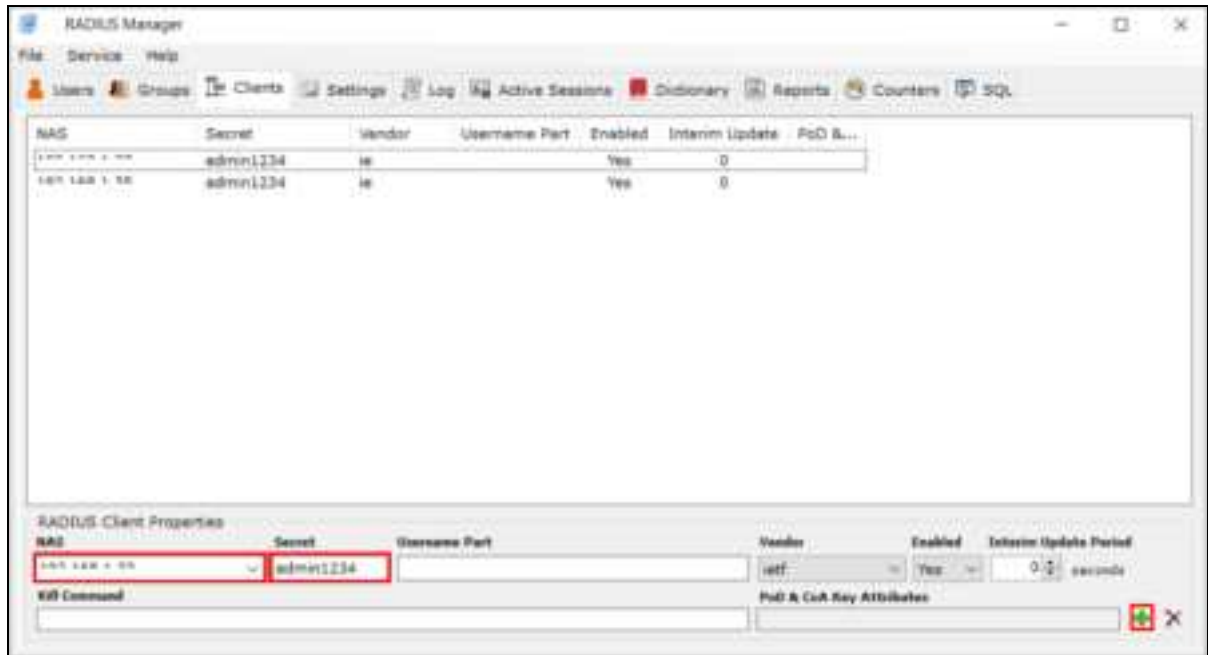

- 2 Create a user with dynamic VLAN attributes in the RADIUS server. In the example screen below, 10 in the Tunnel-Private-Group-ID is the value of the dynamic VLAN of this user account.

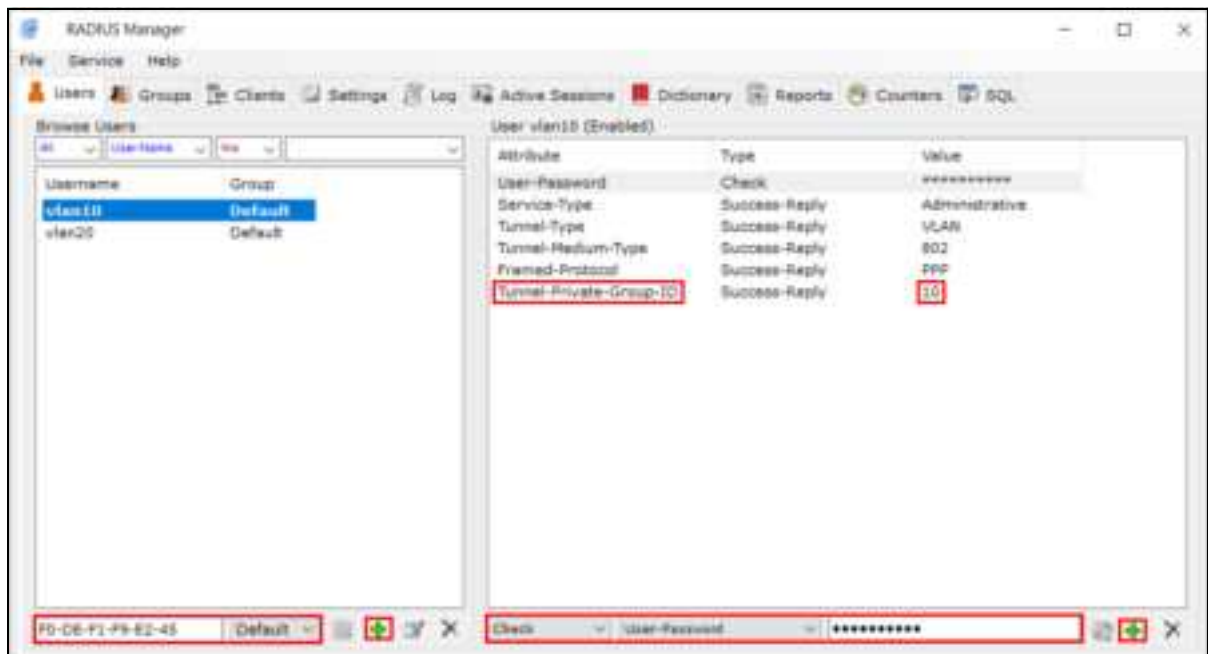

- 3 Go to Site-wide > Configure > Switches > Authentication to create the authentication policy.
- 3a Select the authentication server in Server type.
- 3b Click +Add in Authentication server to create a new RADIUS server entry.
- 3c Enter the IP address of the external RADIUS server in Host.
Enter the port of the RADIUS server for authentication (default 1812) in Port.

Enter a password (up to 32 alphanumeric characters) as the key to be shared between the external RADIUS server and the Nebula Device in Secret.

- 3d Click +Add in Authentication policy to create a new policy.
- 3e Enter a descriptive name for the policy in Name.
Select 802.1x in Authentication type to validate access to the ports based on the user name and password provided by the client.
- 4 Go to Site-wide > Configure > Switches > Switch ports to bind the authentication policy to the Nebula Device access ports.
 - 4a Select the port(s) and click Edit.
 - 4b In the Update # port screen, select Access in Type.
Select 802.1X/VLAN Assignment in Auth. policy. Then click Update.
- 5 Go to Site-wide > Configure > Switches > Switch ports to add the dynamic VLAN list to the allowed VLAN list of uplink ports.
 - 5a Select the uplink port and click Edit.
 - 5b In the Update # port screen, select Trunk in Type.
Enter the dynamic VLAN(s) in Allowed VLANs. Then click Update.

3.45 Monitor Dynamic VLAN Using Event Logs (for Nebula Switches only)

Go to Site-wide > Monitor > Switches > Event log to monitor dynamic VLANs. The following are example dynamic VLAN-related event logs:

- User submits an incorrect 802.1X credential (wrong user name on the client port 'Port4').




Time	Priority	Switch	Category	Detail
2022-09-16 15:19:03	Notice	XGG1933-52b4	AAA	802.1x Authentication Failure [User-Name wronguser] [NAS-Port 4 - Port4]

- The dynamic VLAN attribute received is without a corresponding static VLAN (missing static VLAN 10 for the user name 'vlan10' on the client port 'Port4').



Time	Priority	Switch	Category	Detail
2022-09-16 15:19:20	Warning	XGG1933-52b4	AAA	802.1x Static VLAN 10 does not exist [User-Name vlan10] [NAS-Port 4 - Port4]
2022-09-16 15:19:20	Notice	XGG1933-52b4	AAA	802.1x Authorization failure [username: vlan10]

- The Nebula Device cannot connect with an external RADIUS server.

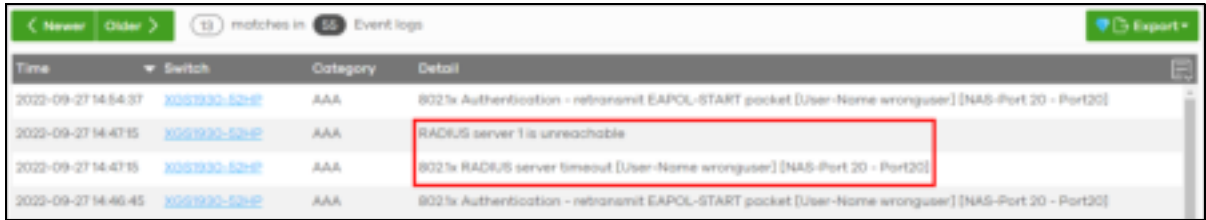

The screenshot shows a table of event logs with columns: Time, Switch, Category, and Detail. A red box highlights the entry: "RADIUS server 1 is unreachable".

Time	Switch	Category	Detail
2022-09-27 14:54:37	X05930-52-E	AAA	8021x Authentication - retransmit EAPOL-START packet [User-Name wronguser] [NAS-Port 20 - Port20]
2022-09-27 14:47:15	X05930-52-E	AAA	RADIUS server 1 is unreachable
2022-09-27 14:47:15	X05930-52-E	AAA	8021x RADIUS server timeout [User-Name wronguser] [NAS-Port 20 - Port20]
2022-09-27 14:46:45	X05930-52-E	AAA	8021x Authentication - retransmit EAPOL-START packet [User-Name wronguser] [NAS-Port 20 - Port20]

- The Nebula Device re-establishes connection with an external RADIUS server.



The screenshot shows a table of event logs with columns: Time, Switch, Category, and Detail. A red box highlights the entry: "RADIUS server 1 becomes reachable".


Time	Switch	Category	Detail
2022-09-27 14:54:37	X05930-52-E	AAA	8021x Authentication - retransmit EAPOL-START packet [User-Name wronguser] [NAS-Port 20 - Port20]
2022-09-27 14:45:07	X05930-52-E	AAA	RADIUS server 1 becomes reachable

3.46 Register a Nebula Device (mobile router) in Nebula

To manage a Nebula Device (mobile router) and monitor its status in Nebula, do the following:

Nebula Configuration

- 1 Use the Setup Wizard to create an organization and a site, and add the Nebula Device. See [Setup Wizard on page 68](#) for more information on using the wizard.
- 2 After configuring the Setup Wizard, close the Nebula Control Center welcome message to go to the Nebula portal dashboard. 0/1 Online will show on Mobile router. This means that one Nebula Device (mobile router) is registered in Nebula but not yet online.

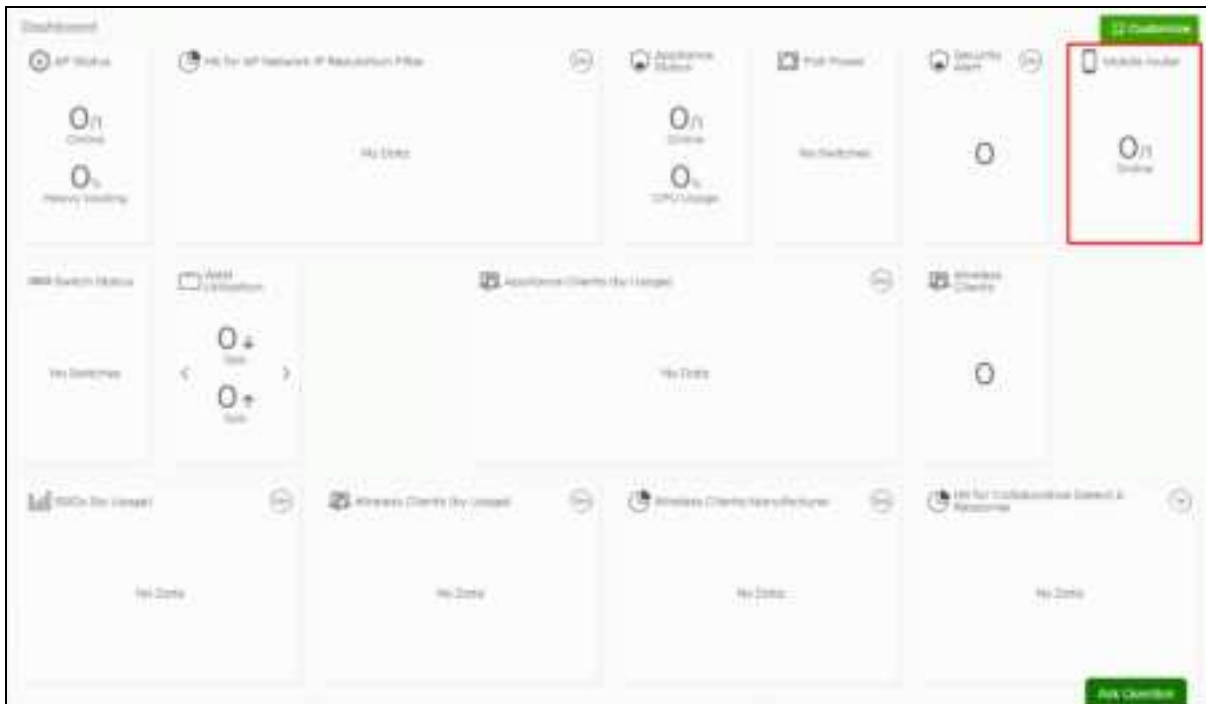


Insert the SIM Card

Insert the SIM card and do the hardware connections on the Nebula Device. Refer to the Nebula Device's QSG (Quick Start Guide) for more information.

Check the Connection in Nebula

- 1 Go to Site-wide > Dashboard. 1/1 Online will show in Mobile router. This means that one Nebula Device (mobile router) is registered in Nebula and is online.

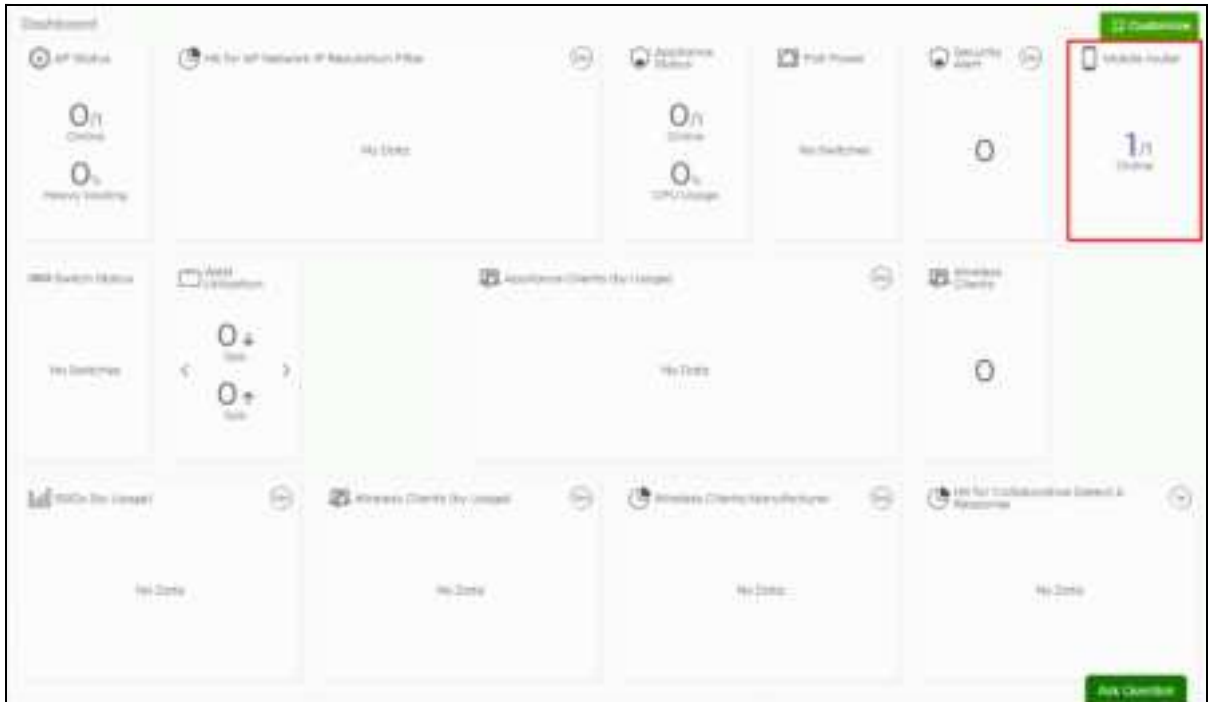

- 2 Click Mobile router to monitor the Nebula Device's status.

The Nebula Device goes into Nebula-managed mode automatically after it is successfully registered in the Nebula web portal and can be accessed there.

Note: Its login password and settings are then overwritten with what you have configured in the Nebula web portal. To access the Web Configurator when the Nebula Device is in Cloud mode, use the Nebula Local credentials password to login. The Local credentials: Password can be found in Site-wide > Configure > Site settings > Device configuration.

3.47 Using Collaborative Detection and Response (CDR)

Use CDR to block client IP traffic when an unsafe connection is detected and reaches the pre-set threshold. See [on page 329](#) for more information.

To configure CDR, do the following:

- 1 Go to Site-wide > Configure > Collaborative detection & response. Click Enable to activate CDR (refer to the A part in the below figure).

Collaborative detection & response A

Enable ☒

Policy B

Category	Event type	Occurrence	Duration (Minutes)	Containment
Malware	Malware detected	5	15	Alert
IDP	Anonymous login detected	5	15	Alert
Web Threats	Connections to malicious web sites detected	5	15	Alert

Containment C

General

Theme:  +

Login:  +

Notification message:

Redirect external url: ☒ URL: +

Containment period: +

Block D

Block external client ☒ +

Quarantine

Quarantine URL: ☒ +

Exempt list E

- 2 Configure the criteria (Occurrence, Duration) and the Containment action (Alert, Block, Quarantine) for each Category (Malware, IDP, Web Threat) (refer to the B part in the above figure). See [Table 48 on page 322](#) for more information.
- 3 Configure the containment alert (Theme), customized pop-up (Notification message) for the client blocked by CDR, and the (Containment Period) time interval (refer to the C part in the above figure).

- 4 In Block, set how long a suspect client should be blocked or quarantined (1 minute to 1 day (1,440 minutes)). Enter 0 to block a suspect client until released in Site-wide > Monitor > Containment list. In Quarantine, configure a VLAN in order to isolate traffic from suspect clients (refer to the D part in the figure for step 1).
- 5 Enter the IPv4 and/or MAC addresses of client device(s) that are exempt from CDR checking in Exempt list (refer to the E part in the figure for step 1).
- 6 To unblock a suspect client, go to Site-wide > Monitor > Containment list. Select a client, then
 - click Release to free the client from CDR containment, or
 - select an IPv4 address or MAC address, click Add to Exempt List and then click OK to release the client device from CDR containment. The client device's IP or MAC address is exempt from future CDR checking.

3.48 Deploy With Nebula Native Mode (for Security Firewalls in Nebula only)

Nebula native mode means the Security Firewall has a certificate (ZTP (Zero Touch Provision) or factory) to connect with Nebula.

Note: Make sure the Nebula Device can connect to NCC through the Internet by using any of the following methods:

- DHCP WAN, or
- configure WAN through the Nebula Device's Web Configurator.

If you are adding a ZyWALL USG FLEX / ATP / USG20(W)-VPN Series Security Firewall (SF) with v5.10 and later firmware to a site, or if your SF has run ZTP before, do the following to deploy the SF using Nebula native mode:

- Reset the SF to factory-default settings
- Select the Nebula management mode.

Reset the SF to Factory-Default Settings

Note: You only need to do this if you have configured the SF before.


Press the RESET button on the SF panel (see the SF user's guide for more information).

Note: Apply the factory-default settings on the SF before switching to cloud mode. Only the following two settings can be changed after resetting:

- Default administrator account password
- WAN settings

Select the Nebula Management Mode

- 1 Log into the SF Web Configurator (see the SF user's guide for more information). When you log into the Web Configurator, the Initial Setup Wizard screen displays.
- 2 Select Nebula Mode and click Next.

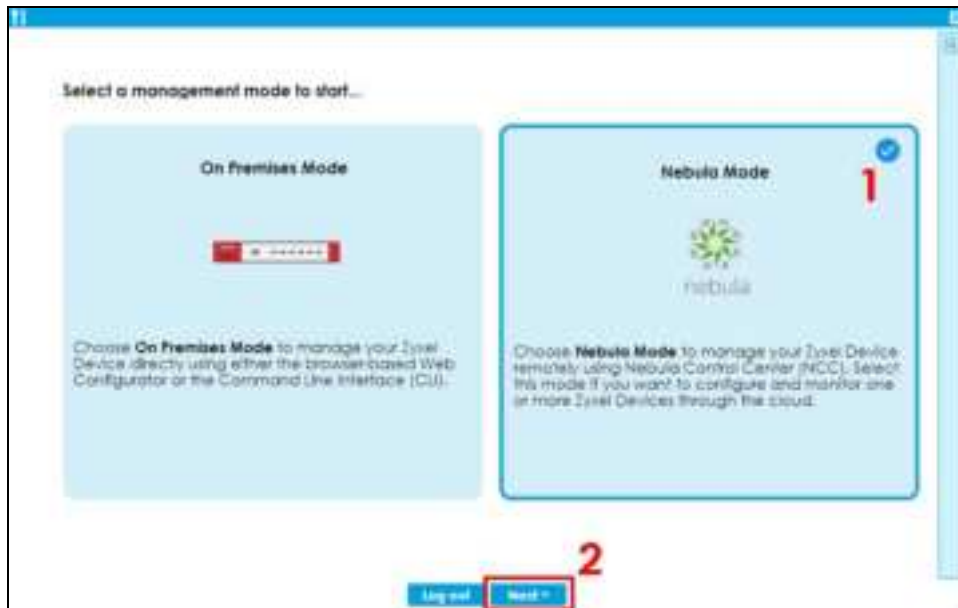

- 3 Configure the WAN settings and click Next.

Initial Setup Wizard

Connect to Internet (WAN) 1 Add Device 2

ISP Setting

☐ I have two ISPs

Internet Access - First WAN Interface

☒ WAN Tagged

WAN ID: (1-1000)

IP Parameters

Description: (0-255)

MTU: (1-65535) Bytes

IP Address Assignment

First WAN Interface: (0-255)

Zone: (0-255)

IP Address Assignment: ☒ Static ☐ DHCP

DHCP Option 81:

- 4 Click Connection Test to check that you can access the Internet and then click Next.

Initial Setup Wizard

Connect to Internet (WAN) 1 Add Device 2

Congratulations, the Internet Access wizard is completed.
Summary of Internet Access Configuration:

First Setting

WAN ID:

Description:

First WAN Interface:

IP Address Assignment: ☒ Static ☐ DHCP

IP Address:

IP Subnet Mask:


Gateway IP Address:

First DNS Server:

Second DNS Server:

Note: Once you complete WAN configuration, you cannot go back to the initial management mode menu.

- 5 Click Go to Nebula.

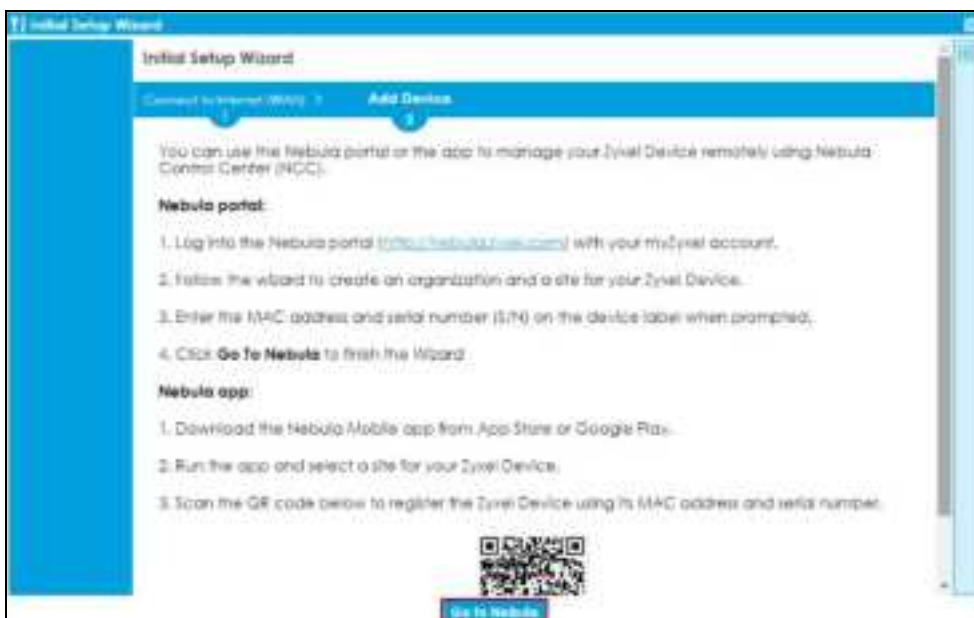

Nebula Configuration


- 1 You will be redirected to the Nebula portal. Click Get Started.




- 2 Use the Setup Wizard to create an organization and a site, and add the Nebula Device. See [Setup Wizard on page 68](#) for more information on using the wizard.

Note: Make sure to select Nebula native mode as the Deployment Method in the Setup Wizard.

Note: Nebula Devices with ZLD5.37 Patch 1 or newer firmware do not support the Zero Touch Provision mode (see [Section 2.1.8 on page 74](#) for more information on the ZTP deployment method).

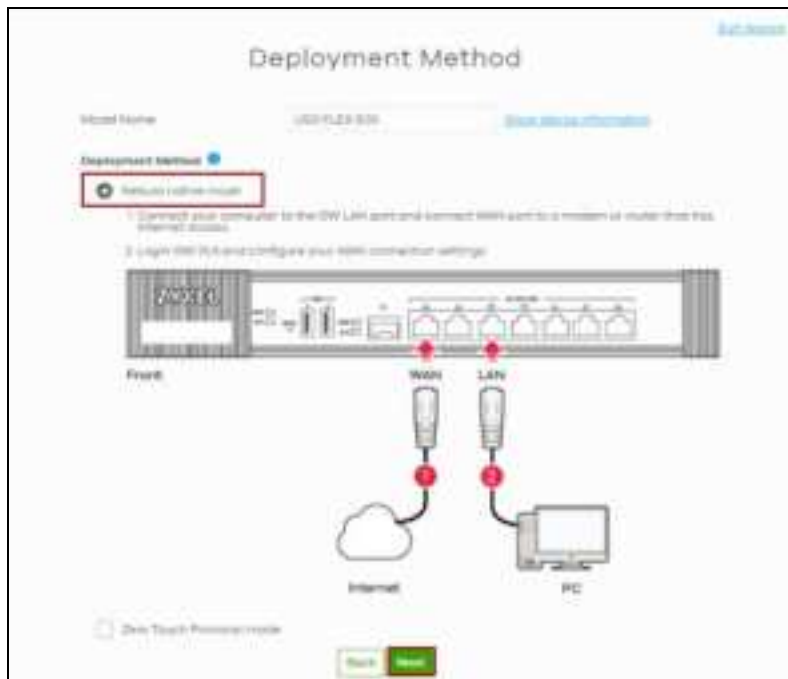

- 3 After configuring the Setup Wizard, close the Nebula Control Center welcome message to go to the Nebula portal dashboard. 1/1 Online will show on Firewall Status. This means that one SF is registered in Nebula and is online.

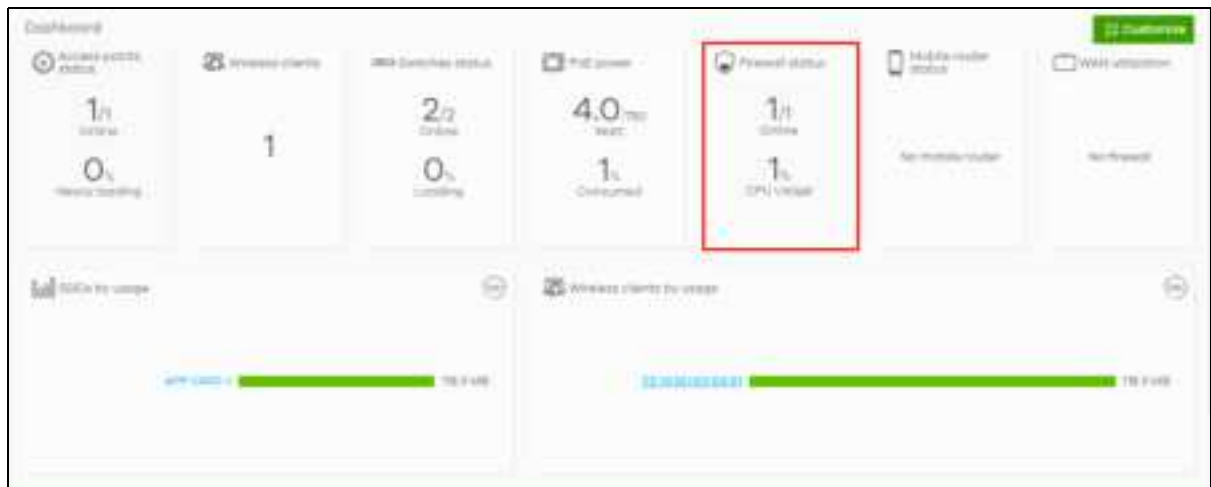

3.49 Configure DHCP Domain Name (for Security Firewalls in Nebula only)

You can configure a DHCP domain name to map to a specific IP address on a specific interface. For this example, to add a domain name for the IP address 192.168.8.1 in the lan1 interface, do the following.

- 1 Go to Site-wide > Configure > Firewall > Interface. Click the Edit icon for the lan1 interface to open the Site-wide > Configure > Firewall > Interface > LAN interface configuration screen.



- 2 Click ADVANCED OPTIONS. Then click +Add new to open the Site-wide > Configure > Firewall > Interface > LAN interface configuration: DHCP option screen.

The image shows a 'LAN interface configuration' window. At the top, there is a red box around the 'ADVANCED OPTIONS' button. Below this, under 'DHCP extended options', there are five input fields: 'First WINS server', 'Second WINS server', 'PXE server', 'PXE Boot loader file', and 'Default gateway'. A red box highlights the '+ Add new' button. Below these fields, there is an 'ICMP proxy' section with a toggle switch and two radio buttons: 'Send responses' and 'Don't respond'. At the bottom right, there are 'Close' and 'OK' buttons.

- 3 Select User defined as the DHCP Option that you want to add in the DHCP packets sent through the LAN interface. Select TEXT for the Type, enter a descriptive Name to identify and the Code number of the selected DHCP option (15, for setting the Domain Name). See <https://www.iana.org/assignments/bootp-dhcp-parameters/bootp-dhcp-parameters.xhtml> for the list of code numbers. Enter the DNS domain name of the IP address in Value. Then click OK.

The image shows a 'DHCP option' window. A red box highlights the following fields: 'Option' (set to 'User defined'), 'Name' (set to 'DomainName'), 'Code' (set to '15'), 'Type' (set to 'text'), and 'Value' (set to 'ss.com'). At the bottom right, there are 'Close' and 'OK' buttons.

- 4 A new user-defined DHCP option appears in LAN interface configuration. Click OK.

LAN interface configuration

DHCP extended options

First WNS server

Second WNS server

PXE server

PXE Boot loader file

Default gateway

Name	Code	Type	Value
DomainName	-5	TEXT	cs.com

+ Add new

IGMP proxy

Close OK

- 5 Go to Site-wide > Configure > Firewall > Firewall settings and click +Add in DNS to create an Address Record. This record specifies the mapping of a Fully-Qualified Domain Name (FQDN) to an IP address.

Firewall settings

DNS

+ Add

Domain, Zone Forwarder


+ Add

- 6 Enter the FQDN (cs.com) and IP Address (192.168.8.1). Then click Save to finish mapping the FQDN to the IP address.



To check if the domain name configuration is successful.


- 1 Connect a computer to the lan1 interface (with IP address 192.168.8.1).
- 2 Run the Command Prompt and enter ipconfig. Check the value for Connection-specific DNS Suffix to confirm.

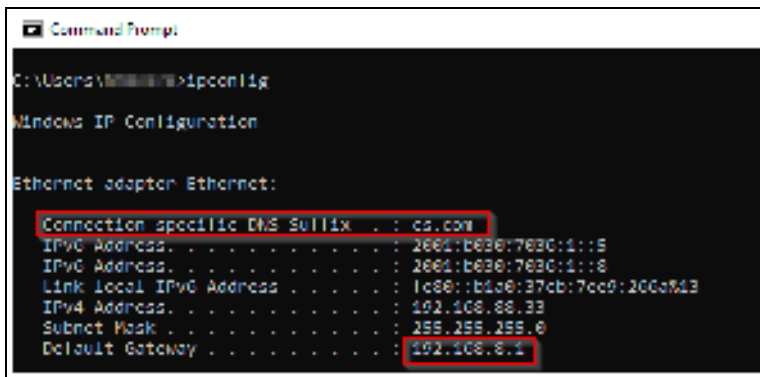

3.50 Monitor Client Bandwidth Usage (for Security Firewalls in Nebula only)

To view network statistics for the Nebula Device of the selected site, such as top client bandwidth usage, do the following.

- 1 Go to Site-wide > Monitor > Firewall > Summary report to select to view the result for the past day, week or month. Alternatively, choose Custom range... to specify a time period the report will span. You can also select the number of results you want to view in a table. Then, click Update.

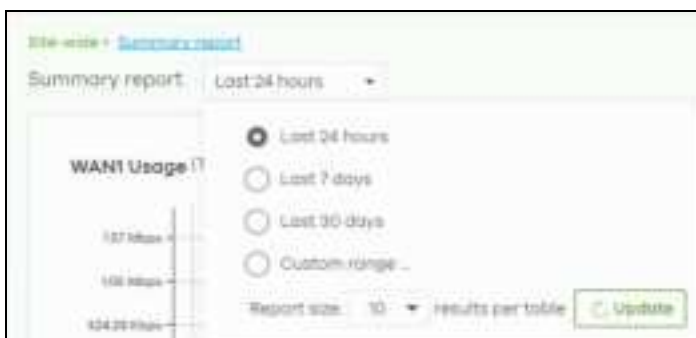


- 2 Check the Top clients by usage widget.

Top clients by usage

	Description	Usage	% Usage
1	192.168.1.100	186.38 MB	55.20%
2	192.168.1.101	68.68 MB	23.28%
3	192.168.1.102	31.84 MB	10.63%
4	192.168.1.103	18.33 MB	6.42%
5	192.168.1.104	8.03 MB	2.68%
6	192.168.1.105	5.32 MB	1.78%
7	192.168.1.106	0 bytes	0.00%

3.51 Configure a Primary and Backup WAN (for Security Firewalls in Nebula only)

When you have 2 Internet connections, you can configure a primary connection and backup connection. For example, if the primary connection (WAN 1) goes offline, the Nebula Device can send its traffic through the backup connection (WAN 2). Traffic will use the primary connection (WAN 1) again when it returns online.

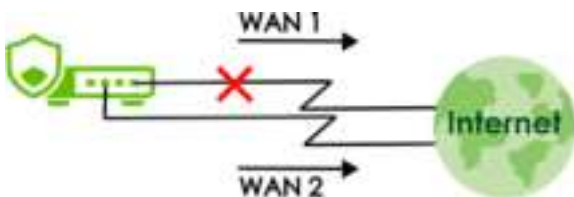


Note: The Nebula Device will periodically send 'Keepalive Packets' through the backup connection.

This tutorial uses the ATP100 as example. To configure a primary (P2) and backup connection (P6), do the following:

- 1 Click +Add to create WAN Group 2.



- 2 Click to assign the P6 port to WAN Group 2.
- 3 Go to Site-wide > Configure > Firewall > Interface, and click the edit icon to set an IP address for each WAN interface.

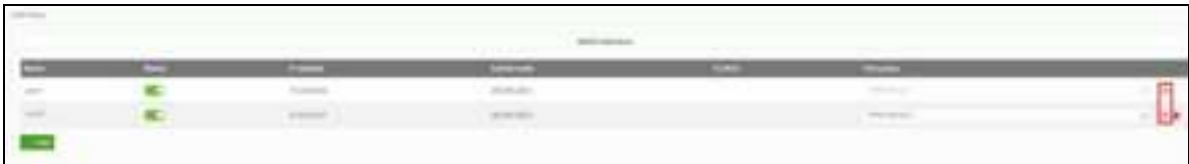

- 4 Go to Site-wide > Configure > Firewall > Routing, turn on Backup interface and select wan2 as the secondary WAN.



- 5 Perform a traceroute to test if wan2 takes over when wan1 goes down. When both wan1 and wan2 connections are working, the destination of the network traffic is the wan1 gateway (in this example, 10.214.48.254). Disconnect the wan1 connection. Outgoing WAN traffic now goes through the wan2 interface to gateway 10.214.30.254 in this example.

```

C:\Jboss>tracert -d 8.8.8.8
Tracing route to 8.8.8.8 over a maximum of 30 hops
  0  4 ms  4 ms  4 ms  10.169.8.1
  1  2 ms  2 ms  2 ms  10.214.48.254
  2  3 ms  3 ms  3 ms  10.214.48.254
  3  2 ms  2 ms  2 ms  10.214.48.254
  4  3 ms  3 ms  3 ms  10.214.48.254
  5  3 ms  3 ms  3 ms  10.214.48.254
  6  3 ms  3 ms  3 ms  10.214.48.254
  7  3 ms  3 ms  3 ms  10.214.48.254
  8  3 ms  3 ms  3 ms  10.214.48.254
  9  3 ms  3 ms  3 ms  10.214.48.254
 10  3 ms  3 ms  3 ms  8.8.8.8
Trace complete.

C:\Jboss>tracert -d 8.8.8.8
Tracing route to 8.8.8.8 over a maximum of 30 hops
  0  4 ms  4 ms  4 ms  10.169.8.1
  1  2 ms  2 ms  2 ms  10.214.48.254
  2  3 ms  3 ms  3 ms  10.214.48.254
  3  2 ms  2 ms  2 ms  10.214.48.254
  4  3 ms  3 ms  3 ms  10.214.48.254
  5  3 ms  3 ms  3 ms  10.214.48.254
  6  3 ms  3 ms  3 ms  10.214.48.254
  7  3 ms  3 ms  3 ms  10.214.48.254
  8  3 ms  3 ms  3 ms  10.214.48.254
  9  3 ms  3 ms  3 ms  10.214.48.254
 10  3 ms  3 ms  3 ms  8.8.8.8
Trace complete.

```

- 6 Perform a traceroute to test if wan2 takes over when wan1 goes down. When both wan1 and wan2 connections are working, the destination of the network traffic is the wan1 gateway (in this example, 10.214.48.254). Disconnect the wan1 connection. Outgoing WAN traffic now goes through the wan2 interface to gateway 10.214.30.254 in this example.


3.52 Set Up Nebula Monitor Mode (for Security Firewalls in on-premise only)

Nebula Monitor Mode provides remote SSH, remote Web Configurator, and backup configuration file functions. This allows you to manage on-premise devices more easily.

Note: Make sure that the firmware version is later than V5.37 (refer to [Section 3.11 on page 98](#) for more information).

This tutorial guides you on how to set up Nebula Monitor Mode on your USG FLEX 100 as example.

- 1 Add an organization (refer to [Section 1.4 on page 62](#) for more information) and site (refer to [Section 1.6 on page 64](#) for more information) on NCC.
- 2 Go to Organization-wide > Organization-wide manage > Organization settings.
- 3 Click the copy icon to copy the Cloud Monitoring Mode ID.

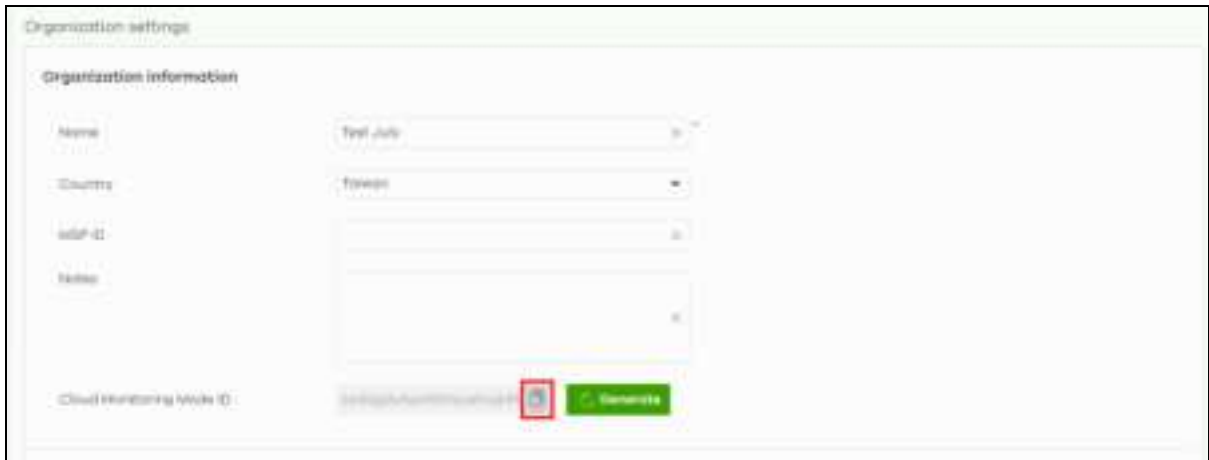


- 4 On your Web Configurator, go to Configuration > Mgmt. & Analytics > Nebula: General Settings. Click the Enable checkbox, paste the Cloud Monitoring Mode ID and click Apply.



The Status will change from N/A to Connecting.



When the Security Firewall has connected successfully to NCC, the Status will change from Connecting to Connected.

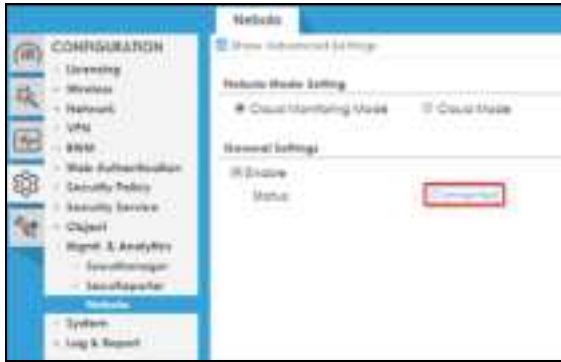

- 5 In NCC, go to Organization-wide > Organization-wide manage > License & inventory > Devices tab. You will find the Nebula Device (Security Firewall) with the Device type set to Firewall (Monitor only). The Site field will be blank as the Nebula Device have not yet been assigned to a site.



- 6 Click Actions, then click Change site assignment to assign the Nebula Device to a site.



- 7 Then click Save.



- 8 Go to Site-wide > Devices > Firewall: Name to check if the Nebula Device that has been assigned to a site is in Monitor mode.



3.53 Enable Smart Mesh on a Security Router

Use Smart Mesh to have two or more Nebula Devices automatically create a mesh network within your home or office, ensuring there are no areas with a weak WiFi signal. For more information on the Smart Mesh feature, see [Section 5.1.1 on page 330](#).

Note: Only one Security Router (for example, USG LITE 60AX) is allowed per site.

Note: Make sure there is one or more supported access points (APs) in the site to use the "Smart mesh" feature.

To use the Smart Mesh feature on the USG LITE 60AX, do the following:

- 1 Go to Site-wide > Configure > Security router > Router settings.




- 2 In General setting, click the Smart mesh switch to the right to enable the NCC Smart Mesh feature on the USG LITE 60AX on the site.
- 3 Then click the Save button to save the changes.


- 4 Go to Site-wide > Configure > Access points > AP & port settings.



- 5 In General setting, click the Smart mesh switch to the right to enable the NCC Smart Mesh feature on the Nebula AP on the site.
- 6 Then click the Save button to save the changes.
- 7 Refer to the USG LITE 60AX User's Guide: Hardware Connections for connecting the Nebula Security Router to the Internet.
- 8 Use an Ethernet cable to connect the USG LITE 60AX to the Nebula AP. Wait until the USG LITE 60AX LED is steady green.
- 9 Go to Site-wide > Devices > Security router to check if the USG LITE 60AX shows Up to date on the Configuration status.

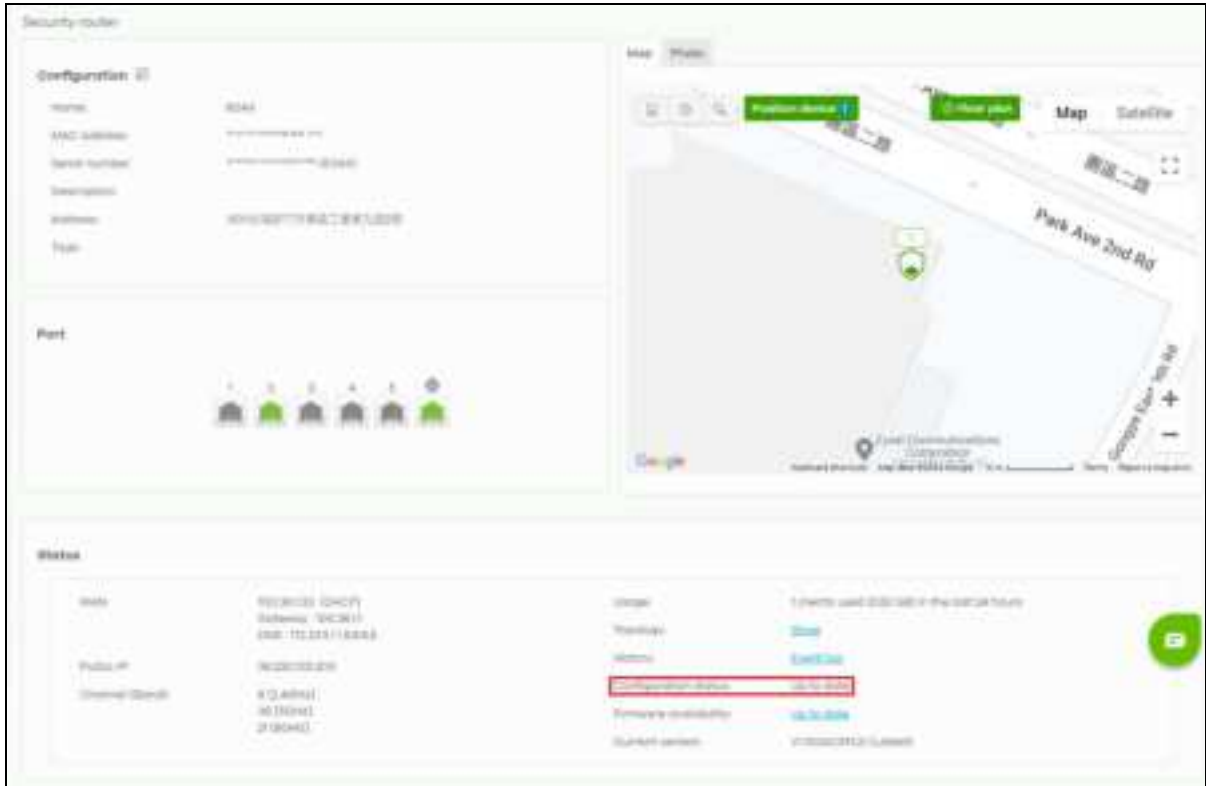

- 10 Go to the Site-wide > Devices > Access points screen to check if the Nebula AP shows Up to date on the Configuration status. This means that the mesh network is configured correctly.

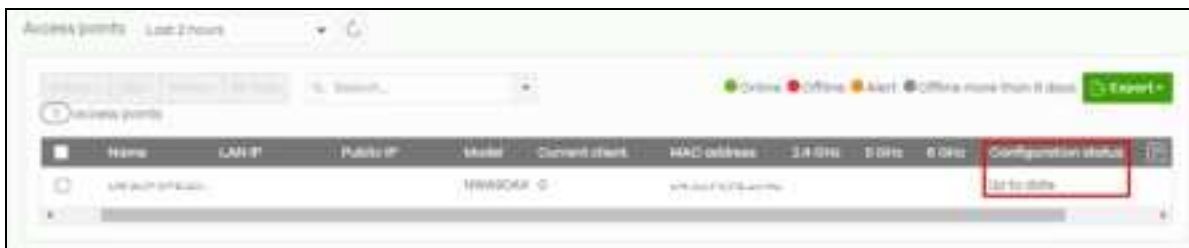

- 11 Unplug the Ethernet and power cable from the Nebula AP. Place the Nebula AP where you want to extend your WiFi signal, approximately 10 to 15 meters away from the USG LITE 60AX with a clear line of sight.
- 12 Plug in the power adapter to the Nebula AP. Make sure the LINK LED is steady green. The Nebula AP will act as a repeater AP.
Alternatively, move the Nebula AP closer to the USG LITE 60AX if the LINK LED is not steady green. For more details on the Nebula AP LEDs, please refer to the Nebula AP User's Guide.
- 13 Go to Site-wide > Devices > Access points to check the Nebula AP's Smart Mesh uplink band (Uplink) and the signal strength (Uplink signal). The Mesh link should use the 6 GHz Smart Mesh uplink band and a signal strength better than -75 dBm. See [How to Position Multiple Nebula Devices \(for Nebula Access Points only\)](#) for selecting the best position to minimize signal interference for multiple Nebula APs.



- 14** Configure an SSID for the Nebula AP. See [Section 3.25 on page 148](#) for more information on configuring an SSID.

PART II

Manage by Site Deployment

CHAPTER 4

Site-wide

4.1 Dashboard


If a site is created and selected, the Dashboard is always the first menu you see when you log into the NCC. You can also click Site-wide > Dashboard to access this screen.

It shows the status and information for all types of Nebula Devices connected to the selected site by default.

Note: The banner N Switches are currently protected by Auto Configuration Recovery will display when the Nebula Switch(es) is locked by NCC. Click N Switches to go to Site-wide > Monitor > Switches for more information.

Click Customize to show the Widget, Reset and Close buttons. You can then rearrange widgets by selecting a block and holding it to move around. You can also click the Widget button to collapse, add and close individual widgets. Click Reset to return the widget settings to the defaults.

Figure 34 Site-wide > Dashboard

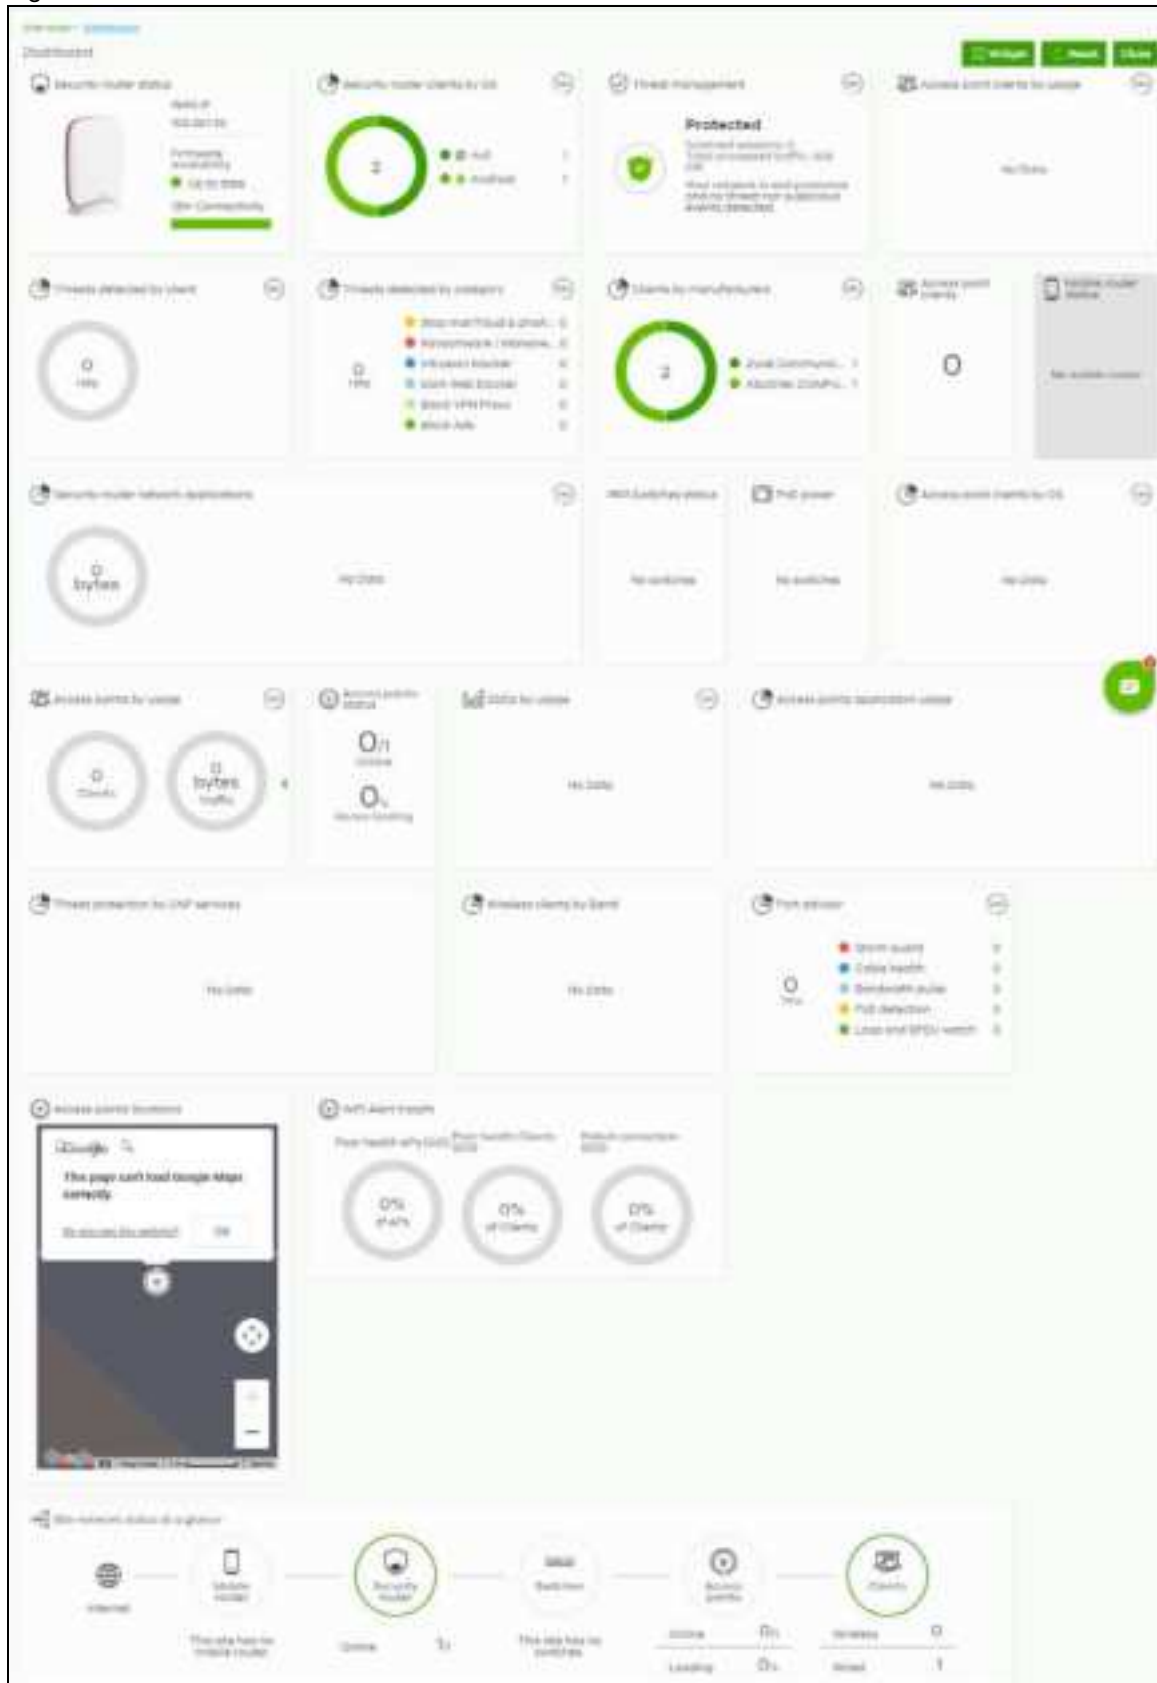

The following table describes the labels in this screen.

Table 17 Site-wide > Dashboard

LABEL	DESCRIPTION
Site network status at a glance	This shows the following: - The number of Nebula mobile routers assigned and connected. - The number of Nebula Security Appliances assigned and connected, and what percentage of the Security Appliance's processing capability is currently being used if the CPU goes over 93% usage. You can click the Online or CPU value to go to the Site-wide > Devices > Firewall screen and view the detailed information about the Nebula Device. - The number of Nebula Switches assigned and connected, and what percentage of the Switches become overloaded, that is, the number of online Nebula Switches that exceed 70% of their upstream bandwidth by total number of online Nebula Switches in the site. - The number of assigned and connected Nebula access points, and what percentage of the access points become overloaded, that is, the number of online access points that exceed the maximum client device number by total number of online access points in the site. - The number of WiFi / Wired clients currently connected to the managed access points. Depending on your choice of either Security Router or Security Appliance in a site, the corresponding data will be provided on the Dashboard. See the below examples. 
Access points by usage	This shows the top five managed access points with the highest percentage of bandwidth usage in the past 24 hours. This also shows the number of WiFi clients associated with the access points. You can click an access point's name to go to the Site-wide > Devices > Access Points: Access Points Details screen.
SSIDs by usage	This shows the top five SSIDs with the highest percentage of bandwidth usage in the past 24 hours. You can click a WiFi network name to go to the Site-wide > Monitor > Access Point > Summary report screen.
PoE power	This shows the total PoE power budget on the Switch and the current amount of power consumed by the powered devices.
Access points application usage	This shows the usage statistic of the top ten applications used in the site in the past 24 hours.
Access point clients by usage	This shows the top five WiFi clients (clients of the access points only) with the highest percentage of bandwidth usage in the past 24 hours. You can click a client's name to go to the Site-wide > Clients: Client list screen.
Wireless client by band	This shows the total number of access points / SCR 50AXE / USG Lite 60AX WiFi client devices in the 2.4 / 5 / 6 GHz band. You can click a band to go to the Site-wide > Clients screen and view the client devices that use the respective WiFi band.
Access point clients by OS	This shows the top five operating systems used by WiFi client devices in the past 24 hours. You can click an operating system to go to the Site-wide > Clients screen and view the client devices that use this operating system.
Clients by manufacturers	This shows the top five manufacturers of WiFi client devices in the past 24 hours. You can click a manufacturer name to go to the Site-wide > Clients screen and view the client devices which are made by the manufacturer.
Security router / Firewall / Security Gateway clients by usage	This shows the top five clients of the Nebula Security Appliance with the highest percentage of bandwidth usage in the past 24 hours. Note: The Security Firewall(s) in Cloud Monitoring mode will not show.

Table 17 Site-wide > Dashboard (continued)

LABEL	DESCRIPTION
WAN utilization	This shows the data rate of inbound/outbound traffic in Kbps (kilobits per second) or Mbps (megabits per second) that has been transmitted through the WAN interface. If the Security Appliance supports multiple WAN interfaces and more than one are active, use the arrow to switch and view the throughput of each WAN interface. Note: The Security Firewall(s) in Cloud Monitoring mode will not show.
Security alert	This shows the total number of the latest alerts sent to the administrator in the last 24 hours. Note: The Security Firewall(s) in Cloud Monitoring mode will not show.
Collaborative detection & response hit	This shows the total number of malicious traffic detected from wired and WiFi clients that are blocked and quarantined using Collaborative Detection & Response (CDR) in the past 7 days. Note: The Security Firewall(s) in Cloud Monitoring mode will not show.
Access point clients	This shows the number of WiFi clients connected (clients of the access points only).
Security router / Firewall / Security Gateway network applications	This shows the top ten applications used by the Nebula Security Appliance in the past 24 hours. You can click an application to go to the Site-wide > Applications usage screen and view the usage statistics the application used in the site. Note: The Security Firewall(s) in Cloud Monitoring mode will not show.
Mobile router / Security router status	This shows the number of Nebula Mobile/Security Routers assigned and connected.
Switches status	This shows the number of Nebula Switches assigned and connected, and what percentage of the Switches become overloaded, that is, the number of online Nebula Switches that exceed 70% of their upstream bandwidth by total number of online Nebula Switches in the site.
Firewall / Security Gateway status	This shows the number of Nebula Security Appliances assigned and connected, and what percentage of the Security Appliance's processing capability is currently being used if the CPU goes over 93% usage. Note: The Security Firewall(s) in Cloud Monitoring mode will only show the online status but not the CPU usage.
Access points locations	This shows the locations of access points on the Google map.
Access points status	This shows the number of assigned and connected Nebula access points, and what percentage of the access points become overloaded, that is, the number of online access points that exceed the maximum client device number (in Site-wide > Configure > Access points > Traffic shaping) by total number of online access points in the site.
Threat protection by CNP services	This shows the total number of times packets coming from an IPv4 address with a bad reputation occur and the number of times connection attempts to an IPv4 address with a bad reputation occur in the past 24 hours.
Security router clients by OS	This shows the top five operating systems used by security router client devices in the past 24 hours. You can click an operating system to go to the Site-wide > Clients screen and view the client devices which use this operating system.
Threat management	This shows the number of threat management detections and the total volume of network traffic (GB) in the past 24 hours.
Threat detected by category	This shows the total number of times the category to which the threat belongs was detected in the past 24 hours.
Threat detected by client	This shows the name of the top five client devices who encountered a threat and the total number of threats detected in the past 24 hours.

Table 17 Site-wide > Dashboard (continued)

LABEL	DESCRIPTION
WiFi Alert Insight	This shows the following: • Poor health APs: This shows the percentage of supported Nebula Devices that are currently online, that are in poor wireless health threshold as detected by Nebula. Click this to go to Site-wide > Monitor > Access points > Wireless health screen. • Poor health Clients: This shows the percentage of connected WiFi clients that are currently online, and in poor wireless health threshold as detected by Nebula. Click this to go to Site-wide > Monitor > Access points > Wireless health screen. • Failed connection: This shows the percentage of WiFi clients with failed connection attempts (WiFi connection / DHCP failures / DNS failures) to the Nebula Device acting as a hotspot as detected by Nebula. Click this to go to Site-wide > Clients > WiFi Aid screen.
Port advisor	This shows the total number of times the following abnormalities was detected on the Nebula Switch ports in the past 24 hours. • Storm guard • Cable health • Bandwidth pulse • PoE detection • Loop and BPDU watch Note: For more details on Port advisor, see Section 6.2.5 on page 382.

4.2 Topology

Use this screen to view the connections between Nebula Devices in the site. Click Site-wide > Topology to access this screen.

Figure 35 Site-wide > Topology



The icon of a node in the network topology indicates its Nebula Device type and the color shows whether the Nebula Device is online (green), has alerts (amber), or is offline (red). Zyxel device is a device manufactured by Zyxel but not registered at the NCC or unable to work in Nebula cloud management mode.

Scroll the mouse up/down to zoom in/out, or click + / – for clearer viewing. Click and hold the left mouse button while moving the mouse to change the position of the network topology diagram. Click the Center icon () to move the network topology diagram to the default position.

Note: Client devices must support LLDP in order to appear correctly after a Nebula accessory.

The following table describes the labels in this screen.

Table 18 Site-wide > Topology

LABEL	DESCRIPTION
()	Click the Refresh icon to update this screen.
Search	Set the filter to view the particular Nebula Device(s) and client device(s) in the network topology diagram. The number of matches is displayed, including the number of online/offline device(s).
Undo	Click this to cancel your action on the Collapse and Expand buttons.

Table 18 Site-wide > Topology (continued)

LABEL	DESCRIPTION
Collapse	Click this button and select All to hide all connections after the Security Appliance in the network topology diagram.  Alternatively, select All access points to hide all connections after the access point(s) in the network topology diagram. 

Table 18 Site-wide > Topology (continued)


LABEL	DESCRIPTION
Expand	Click this button and select All to show all connections after the Security Appliance in the network topology diagram.  Alternatively, select All access points to show all connections after the access point(s) in the network topology diagram.
Display options	Enable Show all clients > Wireless/Wired to display the WiFi/wired client(s) that are connected to your network. Enable Online clients / Offline clients to display all client(s) that are connected to the Nebula Device / disconnected from the Nebula Device. Enable Show device name / Show client name / Show client MAC address to show the Nebula Device information, such as MAC address / device name and/or client device's MAC address / name in the network topology diagram. Note: NCC only displays clients connected to your network from the last 2 hours. Enable Show redundant links to display the secondary connection between two nodes, and also display the Nebula Device(s) that are connected to your network but cannot be identified by the NCC. The non-Nebula Device(s) installed in the network are detected by the NCC through LLDP packets. if any. Enable Trace client path to display the connection path from the filtered client or device on the topology to the leftmost device, including the device on the WAN side of the Nebula Security Appliance. Then, click Apply. NCC remembers the display options for each site and applies them the next time the administrator visits the Topology page.
PDF	Click this button to download the network topology diagram as a PDF file.

4.2.1 General

Click a Nebula Device node to view detailed Nebula Device information in the General tab. Click a client device node to view detailed client device information based on analytics gathered from the Site-wide > Clients pages. In the General tab, you can do the following:

- Click the edit icon beside the Nebula Device name to change the name of the Nebula Device.
- View the percentage of the Nebula Device's processing capability that is currently being used in CPU usage.
- View the percentage of the Nebula Device's RAM processing capability that is currently being used in Memory usage.
- Click Firmware status to update the Nebula Device's firmware if it is not the latest.
- Click Locate to turn on the LOCATOR LED on the Nebula Device for 5 minutes. This shows the actual location of the Nebula Device in the topology.
- Specify the Port number and click Establish using Remote access to establish a remote connection to this Nebula Device.
- Click Reboot to restart the Nebula Device.
- View the percentage of PoE power usage and the Total power the Nebula Device (Switches only) can provide to the connected PDs in PoE Power.
- View the WAN Usage of the Nebula Device (Security Appliances only). The y-axis shows the transmission speed of data sent or received through the WAN connection in megabits per second (Mbps). The x-axis shows the time period over which the traffic flow occurred.

Figure 36 Site-wide > Topology > General

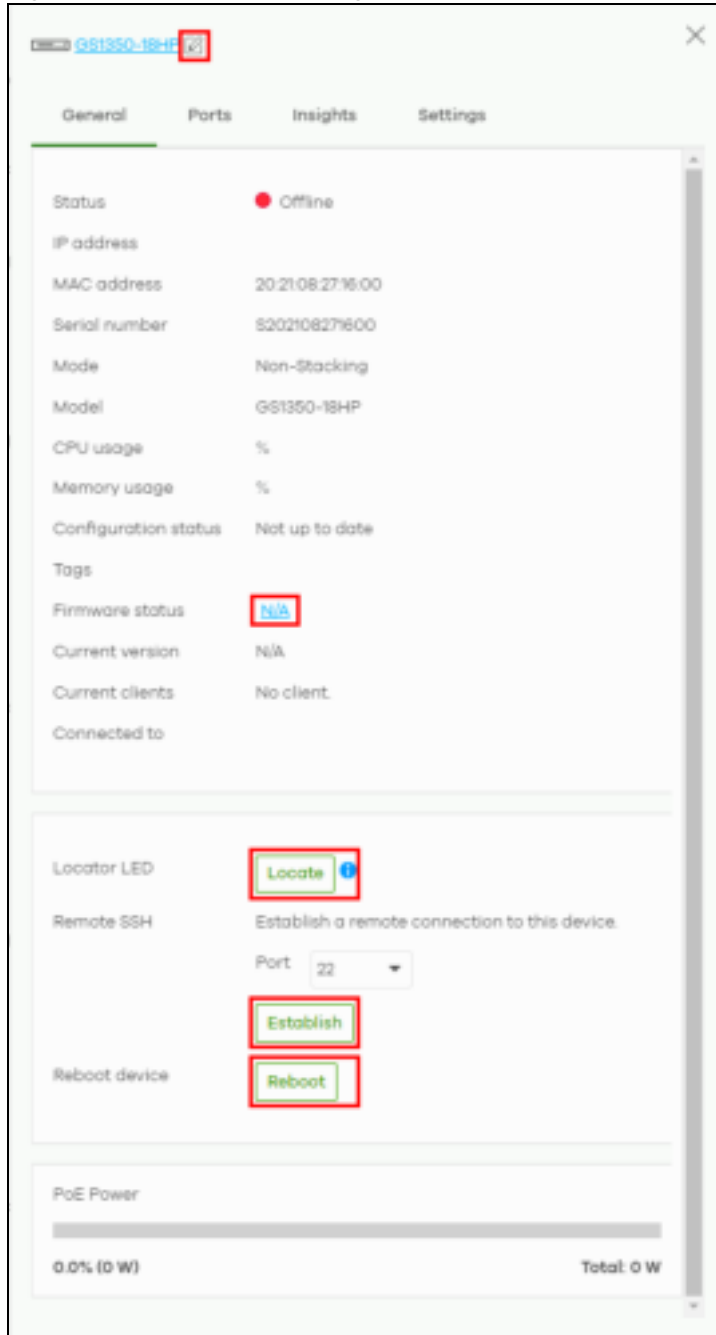

4.2.2 Ports

Click the Ports tab and move the pointer over a port to view the Nebula Device's port details, such as Name, Status, LLDP, Type and Speed. If the port is supplying power to a node using Power over Ethernet (PoE), you can click Power reset to perform a power cycle on the port. This action temporarily disables PoE and then re-enables it, in order to reboot connected PoE devices. Click LLDP to go to the Site-wide > Devices > Access points > Details screen. See [Section 4.3.1.1 on page 237](#) for more information. Click Configure ports to go to the Site-wide > Devices > (Nebula Device) page. See [Table 22 on page 252](#) for more information.

Note: The Ports tab is not available for mobile routers and access points.

Figure 37 Site-wide > Topology > Ports



4.2.3 Insights

Click the Insights tab to view Nebula Device log messages for the past hour. Click View all to go to the Site-wide > Monitor > (Nebula Device) > Event log page to view more log messages. See [Section 6.2.1 on page 372](#) for more information.

Note: The Insights tab is not available for mobile routers.

Figure 38 Site-wide > Topology > Insights



4.2.4 Settings

Click the Settings tab to change the IP type/address, subnet mask, gateway, primary DNS, VLAN setting. See [Table 20 on page 239](#) for more information.

Note: The Settings tab is only available for Access Points and Switches.

Note: To prevent an IP address conflict, NCC will prevent input of an IP address already used by another Nebula Device in the same site.

Figure 39 Site-wide > Topology > Settings

Site-wide > Topology > Settings

General Ports Insights Settings

IP Settings

IP type: Static IP

IP: [text box]

Subnet mask: [text box]

Gateway: [text box]

Primary DNS: [text box]

Global VLAN: ☒ Follow site-wide

VLAN: [text box]

Cancel Apply

4.3 Devices

Use the Devices menus to check Nebula Device information, client information, event log messages and summary report for Nebula Devices in the selected site.

4.3.1 Access Points

This screen allows you to view the detailed information about a Nebula Device in the selected site. Click Site-wide > Devices > Access points to access this screen.

Figure 40 Site-wide > Devices > Access points

Access points List (1 items)

Buttons: Add, Edit, Delete, Search

Status	Name	LAN IP	Service IP	AP Role Config.	Public IP	Model	Client	Current client	MAC address	Location
Online	Green-020-02	172.16.0.101	Disabled	Remote AP	2019/03/15	W60000-00	7	0	01:80:18:79:00:00	01/01/01
Online	W60000-00			Standard		W60000-00	0	0	00:00:00:00:00:00	01/01/01
Online	W60000-00	172.16.0.101	Disabled	Remote AP	2019/03/15	W60000-00	10	0	00:00:00:00:00:00	01/01/01
Online	W60000-00			Standard		W60000-00	0	0	00:00:00:00:00:00	01/01/01
Online	W60000-00	172.16.0.101	Disabled	Remote AP	2019/03/15	W60000-00	10	0	00:00:00:00:00:00	01/01/01
Online	W60000-00			Standard		W60000-00	0	0	00:00:00:00:00:00	01/01/01

The following table describes the labels in this screen.

Table 19 Site-wide > Devices > Access points

LABEL	DESCRIPTION
Access points	Select to view device information and connection status in the past 2 hours, day, week, month.
	Click this button to reload the data-related frames on this page.
Action	Perform an action on the selected Nebula Devices.
Reboot	Select this to restart the Nebula Device.
Upgrade	Select this to upgrade the firmware on the Nebula Device.
Change PSK	Select this to generate a random Pre-Shared Key, or use a custom Pre-Shared Key. This allows a user to access the WiFi network through the Nebula Device.  Note: Programmable SSID must be enabled in Site-wide > Configure > WiFi SSID.
Tag	Select one or multiple Nebula Devices and click this button to create a new tag for the Nebula Devices or delete an existing tag.
Move	Select one or multiple Nebula Devices and click this button to move the Nebula Devices to another site or remove the Nebula Devices from the current site.
AP Role	Select one or multiple Nebula Devices and click this button to enable or disable the Remote AP feature. Remote Nebula Device enables the site's Security Appliance to connect to the Nebula Device through a secure VPN tunnel. This allows you to set up VPN-enabled WiFi Nebula Devices in remote locations, such as in a branch office or at home. Clients connected to these Nebula Devices can securely access your network through the VPN tunnel. Note: Enabling Remote Nebula Device automatically enables Ethernet and wireless storm control on the Nebula Device.
Search	Specify your desired filter criteria to filter the list of Nebula Devices.
access points	This shows the number of Nebula Devices connected to the site network.
Export	Click this button to save the access point list as a CSV or XML file to your computer.
*	Click this to select all the rows in this table.
Status	This shows the status of the Nebula Device. - Green: The Nebula Device is online and has no alerts. - Amber: The Nebula Device has alerts. Hover the mouse over the icon to find the problem. - Red: The Nebula Device is offline. - Gray: The Nebula Device has been offline for 7 days or more. : The Nebula Device is acting as a repeater. For example, an alert is created and the status color is amber when the Nebula Device is transmitting data at 100 Mbps in half duplex mode or when the Nebula Device is in a Limited Power mode. Click the Nebula Device on this page to go to the Nebula Device's details screen for more information.

Table 19 Site-wide > Devices > Access points (continued)

LABEL	DESCRIPTION
Name	This shows the descriptive name of the Nebula Device.
LAN IP	This shows the local (LAN) IP address of the Nebula Device.
Remote AP	This shows whether the Remote Nebula Device function is Enabled or Disabled.
2.4GHz	This shows the number of WiFi clients in the 2.4 GHz band.
5GHz	This shows the number of WiFi clients in the 5 GHz band.
6GHz	This shows the number of WiFi clients in the 6 GHz band.
AP Role Capability	This displays whether the Nebula Device can act as a remote Nebula Device (Remote AP) or not (Standard AP).
Public IP	This shows the global (WAN) IP address of the Nebula Device.
Model	This shows the model number of the Nebula Device.
Client	This shows how many clients are connected to the Nebula Device within the specified time period.
Current client	This shows how many clients are currently connecting to the Nebula Device.
MAC address	This shows the MAC address of the Nebula Device.
Channel	This shows the channel ID the Nebula Device is using.
Channel Utilization 2.4GHz	This shows the percentage of the 2.4 GHz channel ID usage.
Channel Utilization 5GHz	This shows the percentage of the 5 GHz channel ID usage.
Channel Utilization 6GHz	This shows the percentage of the 6 GHz channel ID usage.
Usage	This shows the amount of data consumed by the Nebula Device's clients.
% Usage	This shows the percentage of the Nebula Device's data usage relative to other Nebula Devices.
Description	This shows the user-specified description for the Nebula Device.
Tag	This shows the user-specified tag for the Nebula Device.
Serial number	This shows the serial number of the Nebula Device.
Configuration status	This shows whether the configuration on the Nebula Device is up-to-date.
Connectivity	This shows the access point connection status. The red time slot indicates the connection to the NCC is down, and the green time slot indicates the connection is up. Move the cursor over a time slot to see the actual date and time when an Nebula Device is connected or disconnected.
Ethernet 1	This shows the speed and duplex mode of the Ethernet connection on the Nebula Device's up-link port. It shows Down if the Nebula Device is connected to a mesh controller wirelessly.
Neighbor Info	This shows the LLDP information received on the up-link port.
Production information	This shows the production information of the Nebula Device.
Hop	This shows the hop count of the Nebula Device. For example, "1" means the Nebula Device is connected to a mesh controller directly. "2" means there is another mesh extender between this Nebula Device and the mesh controller.
IP type	This shows whether the IP address was assigned automatically (DHCP), or manually (Static IP).

Table 19 Site-wide > Devices > Access points (continued)

LABEL	DESCRIPTION
Uplink AP	This shows the role and descriptive name of the Nebula Device to which this Nebula Device is connected wirelessly. When Smart Mesh is enabled and the mesh extender loses connection to the mesh controller, click Reconnect to re-establish connection. Note: Make sure to enable Manual uplink in Site-wide > Devices > Access points: Details > Status > Smart mesh > Edit. You also need to specify the mesh controller in select an AP. See Table 20 on page 239 for more information.
Uplink signal	Before the slash, this shows the signal strength the uplink Nebula Device (a mesh controller or a mesh extender) receives from this Nebula Device (in repeater mode). After the slash, this shows the signal strength this Nebula Device (in repeater mode) receives from the uplink access point.
Uplink Tx/Rx rate	This is the maximum transmission/reception rate of the mesh controller or mesh extender to which the Nebula Device is connected.
Wireless bridge	This shows whether wireless bridge is enabled on the Nebula Device. For more information about wireless bridge, see Section 5.1.2.2 on page 332.
Uplink	This shows whether the Nebula Device is connected to the gateway through a wired Ethernet connection or WiFi connection.
Power mode	This shows the Nebula Device's power status. Full – the Nebula Device receives power using a power adapter and/or through a PoE switch/injector using IEEE 802.3at PoE plus. The PoE device that supports IEEE 802.3at PoE Plus can supply power of up to 30W per Ethernet port. Limited – the Nebula Device receives power through a PoE switch/injector using IEEE 802.3af PoE even when it is also connected to a power source using a power adapter. The PoE device that supports IEEE 802.3af PoE can supply power of up to 15.4W per Ethernet port. When the Nebula Device's power mode is Limited, the Nebula Device throughput decreases and has just one transmitting radio chain. It always shows Full if the Nebula Device does not support power detection.
Firmware availability	This shows whether the firmware on the Nebula Device is Up to date, there is firmware update available for the Nebula Device (Upgrade available), or a specific version of firmware has been installed by Zyxel customer support (Locked).
Firmware status	This shows whether the firmware installed on the Nebula Device is up-to-date.
Firmware type	This shows Stable when the installed firmware may not have the latest features but has passed Zyxel internal and external testing. This shows Latest when the installed firmware is the most recent release with the latest features, improvements, and bug fixes. This shows General Availability when the installed firmware is a release before Latest, but is still undergoing Zyxel external testing. This shows Dedicated when the installed firmware is locked and Zyxel support is monitoring. Contact Zyxel customer support if you want to unlock the firmware in order to upgrade to a later one. This shows Beta when the installed firmware is a release version for testing the latest features and is still undergoing Zyxel internal and external testing. This shows N/A when the Nebula Device is offline and its firmware status is not available.
Current version	This shows the firmware version currently installed on the Nebula Device.

Table 19 Site-wide > Devices > Access points (continued)

LABEL	DESCRIPTION
Remote AP VPN	This shows which VPN the Remote Nebula Device tunnel is configured to use. If Remote Nebula Device is disabled, this field shows Disconnected.
	Click this icon to display a greater or lesser number of configuration fields. For faster loading of data, select only the configuration fields listed that do NOT take a long time to fetch data.

4.3.1.1 Access Point Details

Click a Nebula Device entry in the Site-wide > Devices > Access points screen to display individual Nebula Device statistics.

Figure 41 Site-wide > Devices > Access points: Details Part 1

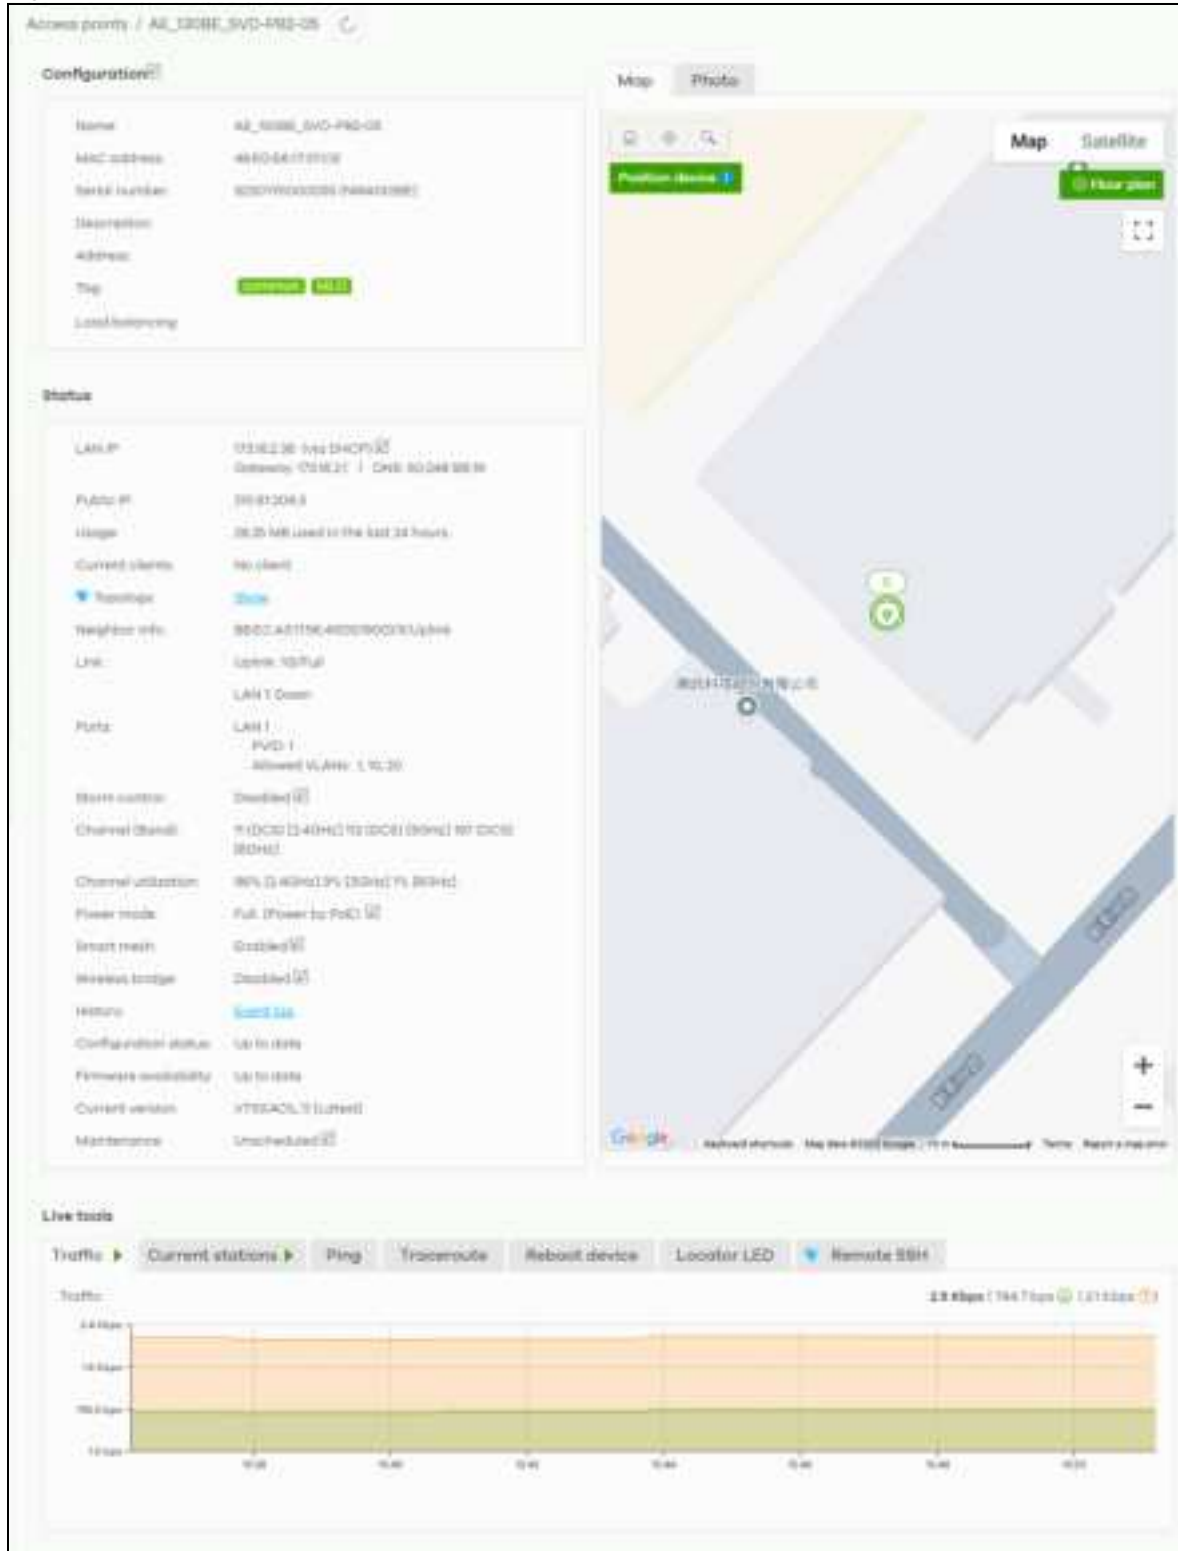


Figure 42 Site-wide > Devices > Access points: Details Part 2



The following table describes the labels in this screen.

Table 20 Site-wide > Devices > Access points: Details

LABEL	DESCRIPTION
	Click this button to reload the data-related frames on this page.
Configuration Click the edit configuration icon to change the Nebula Device name, description, tags, load balancing, and address. You can move the Nebula Device to another site or remove. You can also enter a valid Address and click Move map marker to move the Nebula Device to another location. By default, the Nebula Device's hostname is the MAC address. Enter a Name to identify the Nebula Device. You can use up to 64 alphanumeric characters including period (.) and hyphen (-). Spaces are not allowed. Note: The period (.) and hyphen (-) cannot be the first character, last character, or appear consecutively on the Name. For example, -wax650, wax650-, wax650..wax650, wax650.-wax650. The Name you configure here will be synchronized with the Nebula Device's System Name setting when: • The Nebula Device must have firmware version 6.60 or later • The Name follows the [Hostname] or [Hostname.Domain name] format • The domain name follows the standard DNS structure [A.B.C.D]. Then click Save to save your changes.	

Table 20 Site-wide > Devices > Access points: Details (continued)

LABEL	DESCRIPTION
Remote AP	Click this to enable or disable the Remote AP feature. Remote AP enables the site's Security Appliance to connect to the Nebula Device through a secure VPN tunnel. This allows you to set up VPN-enabled WiFi Nebula Devices in remote locations, such as in a branch office or at home. Clients connected to these Nebula Devices can securely access your network through the VPN tunnel. With the Remote AP feature (in the Secure WiFi license) the connection is from the Nebula Device to a managed access point using NVGRE (Network Virtualization using Generic Routing Encapsulation) over IPSec tunnel. This encapsulates and encrypts traffic from the remote access point to the Nebula Device. The clients connected to the remote access point do not need IPSec client software installed. Note: Enabling Remote AP automatically enables Ethernet and wireless storm control on the Nebula Device. At the time of writing, Ethernet Secure Tunnel Setting for Remote AP Setting is available for WAC500H only.  Configure and enable up to two SSID(s) in Local SSID Setting. WiFi clients connected to these SSIDs are forwarded to the local network of the remote site. The Local SSID Setting are different from the SSIDs you configured in Site-wide > Configure > Access points > SSID advanced settings. See Section 5.3.2 on page 343 for the description of the fields. Select from the available LAN or VLAN interface in Tunnel to gateway interface to enable it, and click Save.
Name	This shows the descriptive name of the Nebula Device.
MAC address	This shows the MAC address of the Nebula Device.
Serial number	This shows the serial number of the Nebula Device.
Change site	Select the new site from the drop-down menu or click Remove to remove the Nebula Device from the site.
Description	This shows the user-specified description for the Nebula Device.
Tags	This shows the user-specified tag for the Nebula Device.
Load balancing	This shows the load balancing group name that the Nebula Device belongs (up to two groups per access point). Nebula Devices in the same group should be within the proximity. This allows them to share the load.

Table 20 Site-wide > Devices > Access points: Details (continued)

LABEL	DESCRIPTION
Address	This shows the user-specified address for the Nebula Device.
Status	
LAN IP	This shows the local (LAN) IP address of the Nebula Device. It also shows the IP addresses of the gateway and DNS server. Click the edit icon to open a screen where you can change the IP addresses, VLAN ID number and tagging setting.  Note: To prevent an IP address conflict, NCC will prevent input of an IP address already used by another Nebula Device in the same site.
Public IP	This shows the global (WAN) IP address of the Nebula Device.
Usage	This shows the amount of data consumed by the clients.
Current clients	This shows the number of clients which are currently connecting to the Nebula Device and its details.
Topology	Click Show to go to the Site-wide > Topology screen. See Section 4.2 on page 226 .
Neighbor info	This shows the LLDP information received on the up-link port.
Link	This shows the speed and duplex mode of the Ethernet connection on the Nebula Device's ports. It shows Uplink: Wireless if the access point is an mesh extender and connected to a mesh controller wirelessly. A warning icon displays when the Nebula Device is running at 100 Mbps or a lower speed.
Ports	This is available only for the Nebula Device that has one or more than one Ethernet LAN port (except the uplink port). This shows the PVID of the LAN port and the ID number of VLANs to which the LAN port belongs. See Section 5.3.7 on page 367 for how to change the port's VLAN settings.
Storm control	Storm control limits the number of broadcast, multicast and destination lookup failure (DLF) packets received per second on the Nebula Device's Ethernet ports. When the maximum number of allowable broadcast, multicast and/or DLF packets is reached per second, the subsequent packets are discarded. Enabling this feature reduces broadcast, multicast and/or DLF packets in your network.

Table 20 Site-wide > Devices > Access points: Details (continued)

LABEL	DESCRIPTION
Channel (Band)	This shows the channel ID and WiFi frequency band currently being used by the Nebula Device.
Channel utilization	This shows the percentage of the channel ID usage.
Power mode	This shows Full when the Nebula Device receives power directly through a power outlet. This shows Full (Power by DC) when the Nebula Device receives power using a power adapter. This shows Full (Power by PoE) when the Nebula Device receives power through a PoE switch/injector using IEEE 802.3at PoE plus. The PoE device that supports IEEE 802.3at PoE Plus can supply power of up to 30W per Ethernet port. This shows Limited (Require 802.3bt power) when the Nebula Device receives power through a PoE switch/injector using IEEE 802.3bt PoE even when it is also connected to a power source using a power adapter. The PoE device that supports IEEE 802.3bt PoE can supply power of up to 71.3W per Ethernet port. This shows Limited (Require 802.3at power) when the Nebula Device receives power through a PoE switch/injector using IEEE 802.3at PoE even when it is also connected to a power source using a power adapter. The PoE device that supports IEEE 802.3at PoE can supply power of up to 15.4W per Ethernet port. This field is blank when the access point's firmware is older than version 5.50 or (WAX650S / WAX510D firmware is older than version 6.00P4C0). Or when the access point is offline. Click the edit icon to open a screen where you can enable full power mode.  Note: As of this writing, the following is a list of models that will show the edit icon for enabling full power mode: NAP303, NAP353, NWA1302-AC, NWA1123-AC HD, NWA5123-AC HD, WAC6303D-S, WAC6502D-E, WAC6502D-S, WAC6503D-S, WAC6552D-S, WAC6553D-S, WAX650S, NWA110AX, WAX510D.
Antenna	This displays the antenna orientation settings for the Nebula Device that comes with internal antennas and also has an antenna switch.
Smart mesh	This shows whether Nebula Smart Mesh is enabled on the Nebula Device. For more information about Smart Mesh, see Section 5.1.1 on page 330. To view the list of Nebula Devices that support smart mesh, go to Help > Device function table.

Table 20 Site-wide > Devices > Access points: Details (continued)

LABEL	DESCRIPTION
Edit	Edit the Nebula Device's Smart Mesh settings. 
Enabled	Enable or disable Smart Mesh on the Nebula Device. This setting overrides the Smart Mesh settings configured for the Nebula Device's site in NCC.
Lock	When enabled, the Nebula Device's local Smart Mesh settings overrides the Smart Mesh settings configured for the Nebula Device's site in NCC. Example 1: If Smart Mesh is enabled for the site in NCC, you can disable Smart Mesh on the Nebula Device by setting Lock to on and Enabled to off. Example 2: If Smart Mesh is disabled for the site in NCC, you can enable Smart Mesh on the Nebula Device by setting Lock to on and Enabled to on.
Uplink Downlink	Select MLO (Multi-Link Operation) to allow a WiFi7 client to connect to the WiFi7 Nebula Device using multiple frequency bands simultaneously. This increases speed and improves reliability of the WiFi connection. MLO makes WiFi7 ideal for streaming 4K / 8K videos, using augmented reality (AR), virtual reality (VR) applications and playing online games. Note: You need to select at least 2 frequency bands for MLO to work.
Band (for non MLO models) / MLO Band (for MLO models)	This setting will apply to mesh extender. - Select 2.4 GHz to use the 2.4 GHz band for regular Internet surfing and downloading. - Select 5 GHz or 6 GHz to use the 5 or 6 GHz band for time sensitive traffic like high-definition video, music, and gaming. Note: 6 GHz will display only for mesh extender that support it.
Non MLO Band	This setting will apply to mesh extender. Select Auto (high band preferred) to allow the mesh extender to select a higher radio band mesh controller.
Manual uplink	When enabled, this allows you to select a mesh controller or mesh extender.
Uplink auto failover	When enabled, an mesh extender that cannot connect to the selected mesh controller after 5 tries, will automatically connect to another mesh controller or mesh extender.
select an AP	Select a mesh controller or mesh extender.
Downlink capability	When enabled, the mesh extender can provide downlink capability to another mesh extender.
Allow downlink	All available radio links are always enabled for better compatibility.

Table 20 Site-wide > Devices > Access points: Details (continued)

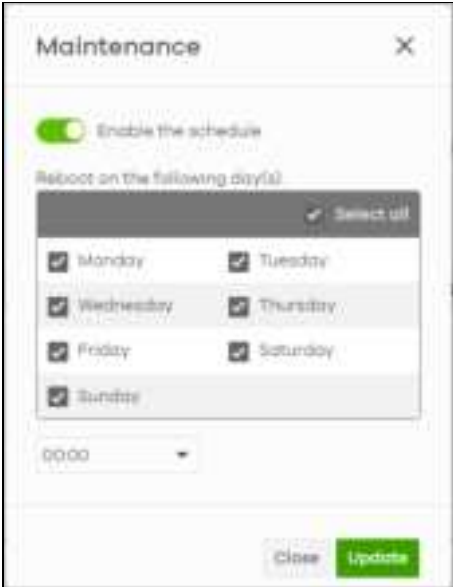
LABEL	DESCRIPTION
Wireless bridge	This shows whether wireless bridge is enabled on the Nebula Device. For more information about wireless bridge, see Section 5.1.2.2 on page 332. Note: Wireless bridge can only work when smart mesh is enabled in this screen.
Edit	Edit the Nebula Device's wireless bridge settings.
Enabled	Enable or disable wireless bridge on the Nebula Device. Note: If Smart Mesh is disabled for the site in NCC, then enabling wireless bridge automatically enables Smart Mesh on the Nebula Device.
Allowed VLANs	Enter the IDs of the VLANs that the Nebula Device will forward over the wireless bridge. By default, this field uses the VLANs allowed for LAN1 at Site-wide > Configure > Access points > AP & port settings. For details, see Section 5.3.7 on page 367.
History	Click Event log to go to the Site-wide > Monitor > Access points > Event log screen.
Configuration status	This shows whether the configuration on the Nebula Device is up-to-date.
Firmware availability	This shows whether the firmware on the Nebula Device is up-to-date or there is firmware update available for the Nebula Device.
Current version	This shows the firmware version currently installed on the Nebula Device.
Maintenance	This shows whether automatic reboot is scheduled on the Nebula Device.
Edit	Click the Enable the schedule switch to the right to have the Nebula Device restart at a specific time on selected days of the week. By scheduling a reboot, you can have the Nebula Device refresh the network connections at a specified time, allowing automatic reconnection with WiFi clients in case of a connection failure. Select the day(s) of the week to have the automatic restart. Specify the time of the day (in 24-hour format) to have the Nebula Device automatically restart. For example, 23:00 is 11:00 PM. 

Table 20 Site-wide > Devices > Access points: Details (continued)

LABEL	DESCRIPTION
Map	This shows the location of the Nebula Device on Google map (Map view or Satellite imagery view) or on a floor plan. Click Floor plan to display a list of existing floor plans. Each floor plan has a drawing that shows the rooms scaled and viewed from above. Drag-and-drop your Nebula Device directly on the Google map or click Position device to update the Nebula Device's address (physical location).  • Select GEO IP to use the public IP address of the Nebula Device. • Select Get my location from web browser to use the public IP address of the computer accessing the NCC portal. • Select Use the following address or coordinates to enter the complete address or coordinates of the Nebula Device. Note: Nebula Devices that are offline cannot use GEO IP.
Photo	This shows the photo of the Nebula Device. Click Add to upload one or more photos. Click x to remove a photo.
Live tools	
Traffic	This shows the Nebula Device traffic statistics.
Current stations	This shows the Nebula Device's connected WiFi clients' MAC address, SSID name, IPv4 Address, Signal strength, Security, Channel, Tx rate, Rx rate, Association time, and Capability.
Ping	Enter the domain name or IP address of a computer that you want to perform ping from the Nebula Device in order to test a connection and click Ping. This can be used to determine if the Nebula Device and the computer are able to communicate with each other.
Traceroute	Enter the domain name or IP address of a computer that you want to perform traceroute from the Nebula Device and click Run. This determines the path a packet takes to the specified computer.
Reboot device	Click the Reboot button to restart the Nebula Device. Note: All connected clients will be temporarily disconnected during reboot.
Locator LED	Enter a time interval between 1 and 60 minutes. The locator LED will blink for the number of minutes set here once you turn on the locator LED. Click the  button to turn on the locator feature, which shows the actual location of the Nebula Device between several devices in the network.
Remote SSH	This allows you to establish a remote connection to this Nebula Device by specifying the port number. Then click Establish. This feature is available to the organization owner, organization administrators with full privileges, and site administrators with full privileges.

Table 20 Site-wide > Devices > Access points: Details (continued)

LABEL	DESCRIPTION
Wired stations	This shows the Nebula Device's connected wired clients' MAC address, IPv4 Address, Port number, and the VLAN ID assigned to the wired station. Note: At the time of writing Wired stations is available for WAC500H only.
Access point usage and connectivity	Move the cursor over the chart to see the transmission rate at a specific time. Click DL (downlink), UL (uplink), 2.4GHz, 5GHz, or 6GHz to hide or display the corresponding line on the chart below.
Zoom	Select to view the statistics in the past 2 hours, day, week, or month.
Pan	Click to move backward or forward by one day or week.

4.3.2 Switches

This screen allows you to view the detailed information about a Nebula Device in the selected site. Click Site-wide > Devices > Switches to access this screen.

Figure 43 Site-wide > Devices > Switches



The following table describes the labels in this screen.

Table 21 Site-wide > Devices > Switches

LABEL	DESCRIPTION
Switches	Select to view the Nebula Device information and connection status in the past two hours, day, week or month.
	Click this button to reload the data-related frames on this page.
Action	Perform an action on the selected Nebula Devices.
Reboot	Restart the Nebula Device.
Upgrade	Upgrade the firmware on the Nebula Device.
Tag	Select one or multiple Nebula Devices and click this button to create a new tag for the Nebula Devices or delete an existing tag.
Move	Select one or multiple Nebula Devices and click this button to move the Nebula Device to another site or remove the Nebula Device from the current site.
Search	Specify your desired filter criteria to filter the list of Nebula Devices.
Switch	This shows the number of Nebula Devices connected to the site network.
Export	Click this button to save the Nebula Device list as a CSV or XML file to your computer.

Table 21 Site-wide > Devices > Switches (continued)

LABEL	DESCRIPTION
Status	This shows the status of the Nebula Device. Hover the mouse over the icon for a brief description. - Green: The Nebula Device is online and has no alerts. - Amber: The Nebula Device has alerts. - Red: The Nebula Device is offline. - Gray: The Nebula Device has been offline for 7 days or more. - With lock: The Nebula Device is locked by Auto Configuration Recovery. See Table 89 on page 438 for more information. Move the cursor over an amber alert icon to view the alerts the NCC generates when an error or something abnormal is detected on the IPTV network.
Name	This shows the descriptive name of the Nebula Device.
Tag	This shows the user-specified tag for the Nebula Device.
MAC address	This shows the MAC address of the Nebula Device. In Cloud Stacking mode, this shows the MAC address of the master Nebula Device in the stacking system.
LAN IP	This shows the local (LAN) IP address of the Nebula Device.
Public IP	This shows the global (WAN) IP address of the Nebula Device.
Model	This shows the model number of the Nebula Device.
# Port	This shows the number of the Nebula Device port which is connected to the NCC.
Configuration status	This shows whether the configuration on the Nebula Device is up-to-date.
Bandwidth Utilization (Uplink port)	This shows what percentage of the upstream/downstream bandwidth is currently being used by the Nebula Device's uplink port.
Production information	This shows the Nebula Device's product description to explain what this Nebula Device is and also provides information about its features.
Connectivity	This shows the Nebula Device connection status. Nothing displays if the Nebula Device is offline. The gray time slot indicates the connection to the NCC is down, and the green time slot indicates the connection is up. Move the cursor over a time slot to see the actual date and time when a Nebula Device is connected or disconnected.
Description	This shows the user-specified description for the Nebula Device.
Device mode	This shows Non-Stacking when the Nebula Device is not a member of a stacking system. This shows Stacking when the Nebula Device is a member of a stacking system.
Serial number	This shows the serial number of the Nebula Device.
Firmware status	This shows whether the firmware installed on the Nebula Device is up-to-date.
Firmware type	This shows Stable when the installed firmware may not have the latest features but has passed Zyxel internal and external testing. This shows Latest when the installed firmware is the most recent release with the latest features, improvements, and bug fixes. This shows General Availability when the installed firmware is a release before Latest, but is still undergoing Zyxel external testing. This shows Dedicated when the installed firmware is locked and Zyxel support is monitoring. Contact Zyxel customer support if you want to unlock the firmware in order to upgrade to a later one. This shows Beta when the installed firmware is a release version for testing the latest features and is still undergoing Zyxel internal and external testing. This shows N/A when the Nebula Device is offline and its firmware status is not available.


Table 21 Site-wide > Devices > Switches (continued)


LABEL	DESCRIPTION
Firmware availability	This shows whether the firmware on the Nebula Device is Up to date, there is firmware update available for the Nebula Device (Upgrade available), or a specific version of firmware has been installed by Zyxel customer support (Locked).
Current version	This shows the firmware version currently installed on the Nebula Device.
Usage	This shows the amount of data transmitted or received by the Nebula Device's clients.
IP type	This shows whether the IP address was assigned automatically (DHCP), or manually (Static IP).
	Click this icon to display a greater or lesser number of configuration fields. For faster loading of data, select only the configuration fields listed that do NOT take a long time to fetch data.

4.3.2.1 Switch Details

Click a Nebula Device entry in the Site-wide > Devices > Switches screen to display individual Nebula Device statistics.


Figure 44 Site-wide > Devices > Switches: Switch Details (Without Stacking)

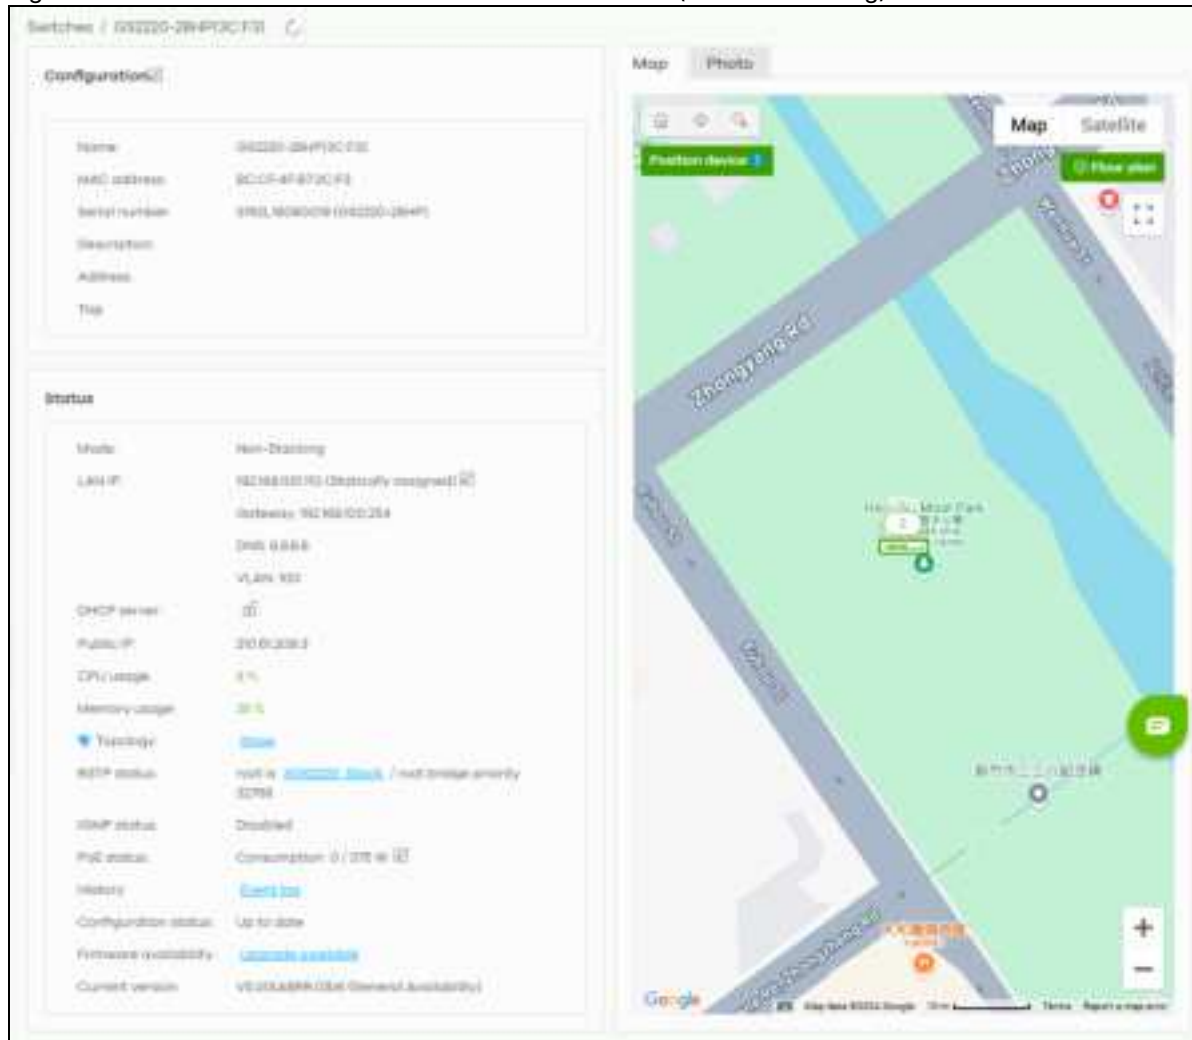

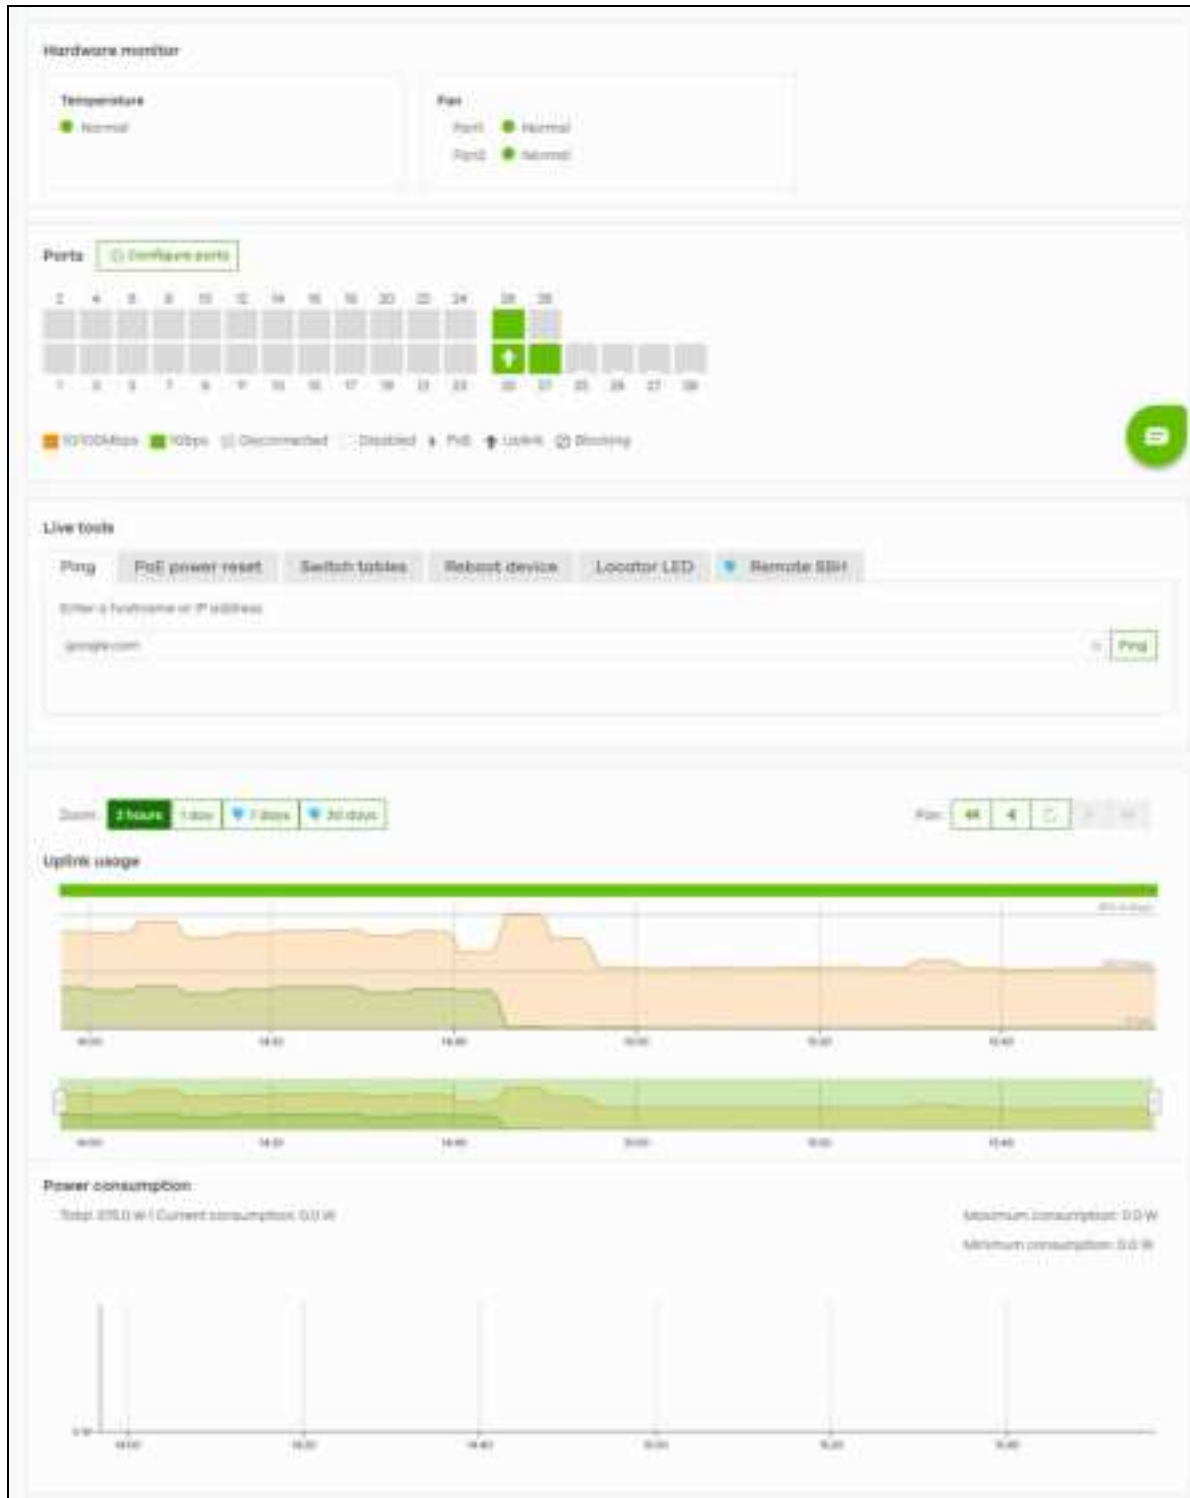

The screenshot displays the Mikrotik WinBox interface for the KIS2000-Stack device. The interface is divided into several sections:

- Configurations:** Shows the device name (KIS2000-Stack), MAC address (9C:4B:1F:47:3E), serial number (0200-9090087 (KIS2000-STACK)), description, address, and type.
- Status:** Provides a comprehensive overview of the device's health and configuration.
 - Mode:** Stacking
 - Stacking Slot:** Slot 1 (MASTER) 9C:4B:1F:47:3E and Slot 2 (BACKUP) 9C:4B:1F:47:3E.
 - Link IP:** 10.0.0.1/24 (Statically assigned) and Gateway: 10.0.0.254. DNS: 8.8.8.8.
 - OS:** V6.90.1
 - DHCP server:** Disabled
 - Public IP:** 20.0.0.0/24
 - CPU usage:** 10%
 - Memory usage:** 10%
 - Topology:** Stacked
 - WIFI status:** Not in use / No Wi-Fi bridge priority.
 - WiFi status:** Disabled
 - Power status:** Consumption: 11/400 W
 - History:** Event log
 - Configuration status:** Up-to-date
 - Firmware availability:** Up-to-date
 - Current version:** V6.90.0 (2024-04-10) (Latest)
- Hardware monitor:**
 - Temperature:** Slot 1 (Master) Normal, Slot 2 (Backup) Normal.
 - Fan:** Slot 1 (Master) Fan1 Normal, Fan2 Normal; Slot 2 (Backup) Fan1 Normal, Fan2 Normal, Fan3 Normal.
- Map:** A Google Map showing the device's location in Zhongyuan Rd, Zhongyuan Rd, and Zhongyuan Rd. The map includes a "Photo device" button and a "Show plan" button.

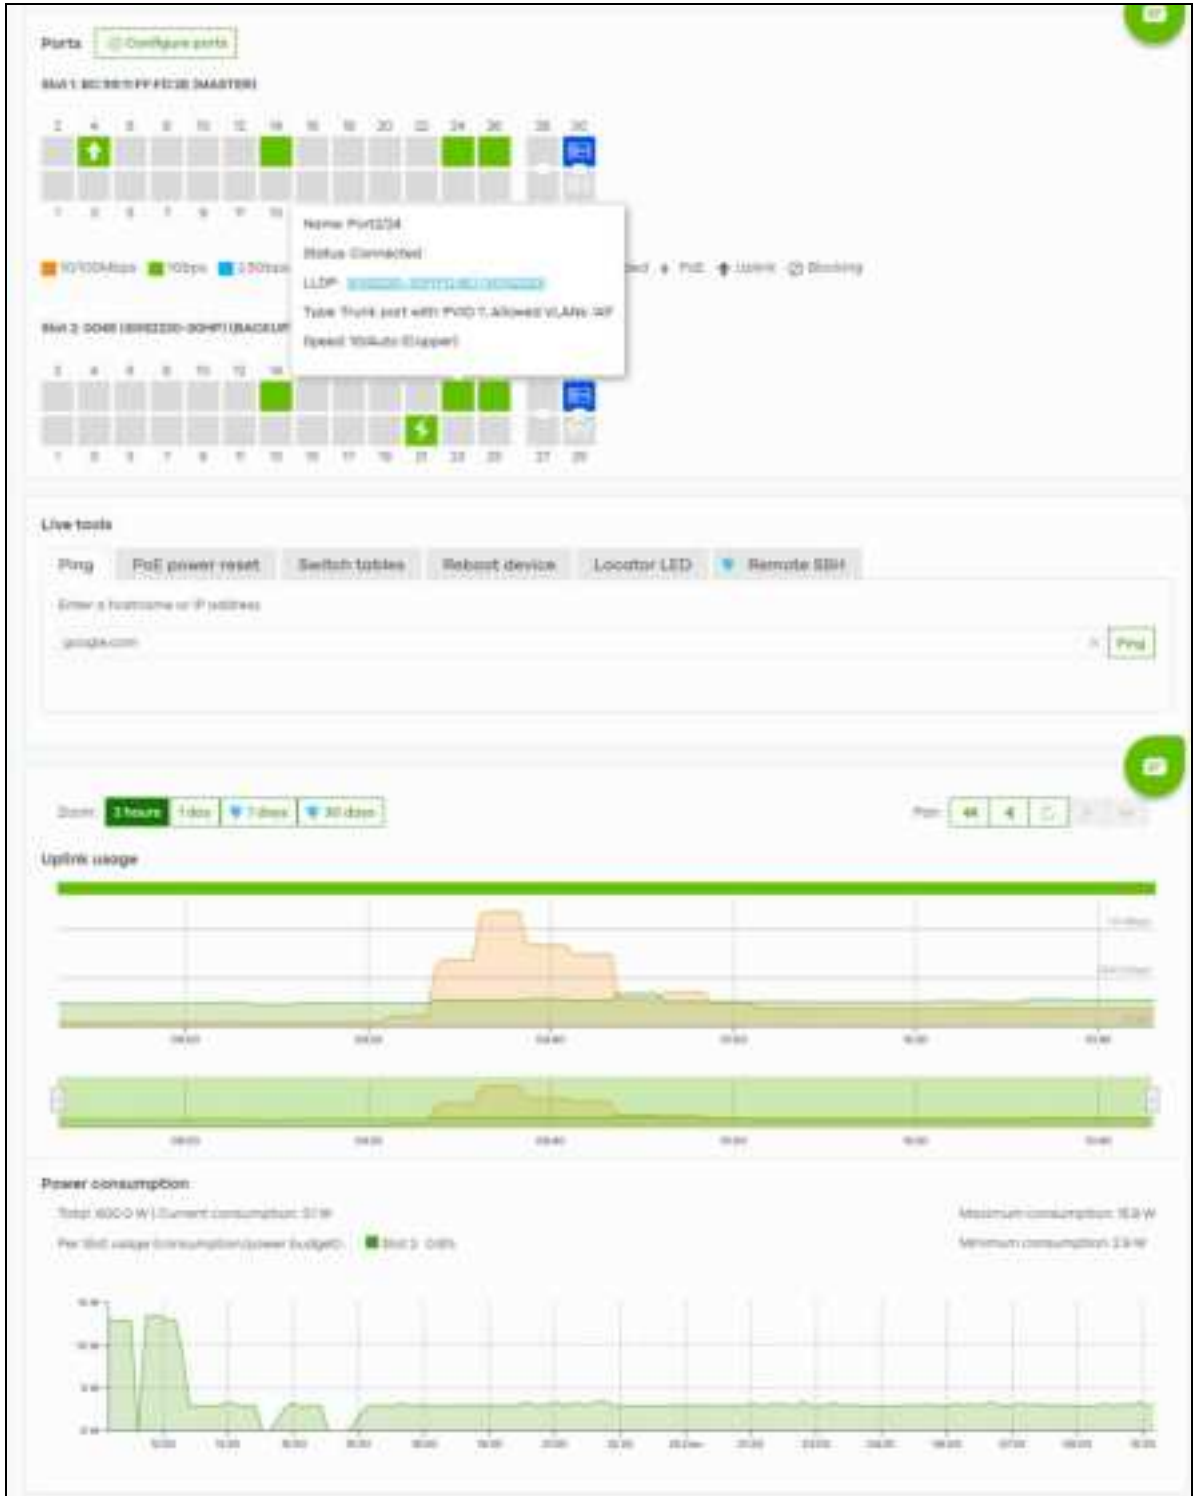

Note: The banner This switch is currently protected by Auto Configuration Recovery will display when this Nebula Device is locked by NCC. Click the Unlock button to continue using the Nebula Device.

The following table describes the labels in this screen.

Table 22 Site-wide > Devices > Switches: Switch Details

LABEL	DESCRIPTION
	Click this button to reload the data-related frames on this page.
Unlock	This button only appears when the Nebula Device is locked by NCC. Click this button to continue using the Nebula Device.
Configuration Click the edit icon to change the Nebula Device name, description, tags and address. You can also move the Nebula Device to another site. After modifying a Nebula Device name, the new name will be synchronized to the Nebula Device and can be seen by protocols such as SNMP and LLDP.	
Name	This shows the descriptive name of the Nebula Device.
MAC address	This shows the MAC address of the Nebula Device. In stacking mode, this shows the MAC address of the master Nebula Device in the stacking system.
Serial number	This shows the serial number of the Nebula Device.
Description	This shows the user-specified description for the Nebula Device.
Address	This shows the user-specified address for the Nebula Device.
Tag	This shows the user-specified tag for the Nebula Device.
Status	
Mode	This shows if the Nebula Device is in Stacking or Non-Stacking mode.
Stacking Slot	This shows the following information of the stacked Nebula Device: - Slot ID, - Role of the stacked Nebula Device; MASTER, BACKUP or LINECARD, and - MAC address.

Table 22 Site-wide > Devices > Switches: Switch Details (continued)

LABEL	DESCRIPTION
LAN IP	This shows the local (LAN) IP address of the Nebula Device. It also shows the IP addresses of the gateway and DNS servers. Click Edit to open a screen where you can change the IP address, VLAN ID number and DNS server settings.  Note: To prevent an IP address conflict, NCC will prevent input of an IP address already used by another Nebula Device in the same site.
DHCP server	This shows the IP address of the DHCP server.
Public IP	This shows the global (WAN) IP address of the Nebula Device.
CPU usage	This shows what percentage of the Nebula Device's processing capability is currently being used.
Memory usage	This shows what percentage of the Nebula Device's RAM is currently being used.
Topology	Click Show to go to the Site-wide > Topology screen. See Section 4.2 on page 226 .
RSTP status	This shows Disabled when RSTP is disabled on the Nebula Device. Otherwise, it shows the name or MAC address of the Nebula Device that is the root bridge of the spanning tree, and the bridge priority.
IGMP status	This shows whether IGMP is enabled on the Nebula Device. If IGMP is enabled, it also shows the ID number of the VLAN on which the Nebula Device learns the multicast group membership and the IP address of the Nebula Device interface in IGMP querier mode.
PoE status	This shows the power management mode, the amount of power the Nebula Device is currently supplying to the connected PoE-enabled devices over the total power the Nebula Device can provide to the connected PoE-enabled devices on the PoE ports. N/A displays if the Nebula Device does not support PoE. In Cloud Stacking mode, this shows the total amount of power all the Nebula Devices in the stacking system are currently supplying to the connected PoE-enabled devices over the total power all the Nebula Devices in the stacking system can provide to the connected PoE-enabled devices on the PoE ports. Click the edit icon to open the PoE Configuration screen. See Section 4.3.2.2 on page 257.
History	Click Event log to go to the Site-wide > Monitor > Switches > Event log screen.

Table 22 Site-wide > Devices > Switches: Switch Details (continued)

LABEL	DESCRIPTION
Configuration status	This shows whether the configuration on the Nebula Device is up-to-date.
Firmware availability	This shows whether the firmware on the Nebula Device is up-to-date or there is firmware update available for the Nebula Device.
Current version	This shows the firmware version currently installed on the Nebula Device.
Map	This shows the location of the Nebula Device on Google map (Map view or Satellite imagery view) or on a floor plan. Click Floor plan to display a list of existing floor plans. Each floor plan has a drawing that shows the rooms scaled and viewed from above. Drag-and-drop your Nebula Device directly on the Google map or click Position device to update the Nebula Device's address (physical location).  • Select GEO IP to use the public IP address of the Nebula Device. • Select Get my location from web browser to use the public IP address of the computer accessing the NCC portal. • Select Use the following address or coordinates to enter the complete address or coordinates of the Nebula Device. Note: Nebula Devices that are offline cannot use GEO IP.
Photo	This shows the photo of the Nebula Device. Click Add to upload one or more photos. Click x to remove a photo.
Hardware monitor	
Temperature	The Nebula Device has temperature sensors (BOARD / PHY / CPU/MAC) that are capable of detecting and reporting if the temperature rises above the threshold. BOARD / PHY / CPU/ MAC refers to the location of the temperature sensor on the Switch printed circuit board. This field displays Normal for temperatures below the threshold and Abnormal for those above. Note: Make sure there is at least 2 cm of clearance on the top and bottom of the Nebula Device, and at least 5 cm of clearance on all four sides of the Nebula Device. This allows air circulation for cooling. Note: Do NOT block the ventilation holes on the Nebula Device. Allow clearance for the ventilation holes to prevent your Nebula Device from overheating. Overheating could affect the performance of your Nebula Device, or even damage it.


Table 22 Site-wide > Devices > Switches: Switch Details (continued)

LABEL	DESCRIPTION
Fan	Normal indicates that this fan is functioning at the normal speed. High Speed indicates that this fan is functioning above the normal speed. When the SFP+ transceiver temperature exceeds the temperature threshold (see your transceiver documentation), the Nebula Device automatically turns on the fans with maximum fan speed to cool down the system. The fans do not automatically turn off after the SFP+ transceiver temperature returns below threshold. To turn off the fans, you have to click Reset. Failure indicates that this fan is functioning below the minimum speed. Note: Go to Help > Support tools > Device function table to view the supported Nebula Devices.
Power source	When the Nebula Device uses two power modules, one is redundant. If one power module fails (PSU1) the system can operate on the remaining module (PSU2). Active indicates that the Nebula Device is currently operating from the power source to which the power module is connected. Standby indicates the redundant power module that is connected to a power source but the Nebula Device is NOT operating from it. Present is displayed when the power module is connected to the Switch, but is not connected to a power source and there is no available power. Absent is displayed when there is no power module connected to the Switch. Error indicates that this power module is functioning below the power requirement. Or, the fan in this power module is not working. Note: Go to Help > Support tools > Device function table to view the supported Nebula Devices.
Ports This shows the ports on the Nebula Device. You can click a port to see the individual port statistics. See Section 4.3.2.3 on page 258. Move the pointer over a port to see additional port information. The port color indicates the connection status of the port. - Gray (#888888): The port is disconnected. - Orange (#FF8900): The port is connected and is transmitting data at 10 or 100 Mbps. - Green (#64BE00): The port is connected and is transmitting data at 1000 Mbps (1 Gbps). - Azure (#00B2FF): The port is connected and is transmitting data at 2.5 Gbps. - Violet (#8800FF): The port is connected and is transmitting data at 5 Gbps. - Blue (#004FEE): The port is connected and is transmitting data at 10000 Mbps (10 Gbps). When the port is in the STP blocking state, failed LACP negotiation state, or failed port authentication state, a blocked icon displays on top of the port ( for example) in the diagram.	
Configure ports	Click this button to go to the Site-wide > Configure > Switches > Switch ports screen, where you can view port summary. See Section 6.3.1 on page 388 .
Name	This shows the Nebula Device name configured in NCC.
Status	This shows the connection status of the port.
LLDP	This shows the LLDP information received on the port.
Type	This shows the port type (Trunk or Access), PVID, and allowed VLANs.
Speed	This shows the current connection speed of the port. If the speed is unavailable, this displays "Ethernet".

Table 22 Site-wide > Devices > Switches: Switch Details (continued)

LABEL	DESCRIPTION
Power reset	This button only appears when the PoE port is connected to a PD (powered device). Follow the prompt and click Confirm to reboot the PD connected to this port. Note: This button is not available for an uplink port.
Live tools	
Ping	Enter the host name or IP address of a computer that you want to perform ping in order to test a connection and click Ping.
PoE power reset	Enter the number of, or range of PoE ports and click the Power reset button to disable and enable the PoE ports again.
MAC table	This shows what device MAC address, belonging to what VLAN group (if any) is forwarded to which ports. You can define how it displays and arrange the data in the summary table below. Note: This tab will appear for NSW100 and NSW200 Series only.
Switch tables	Import the following data into NCC: • MAC table. Click Run to show what device MAC address, belonging to what VLAN group (if any) is forwarded to which ports. You can define how it displays and arrange the data in the summary table. • Routing table. Click Run to show the routing destination, gateway, interface IP addresses, hop count, and routing methods. The routing table is only displayed for L3 Nebula Devices. • ARP table. Click Run to show the IP-to-MAC address mappings. The ARP table is only displayed for L3 Nebula Devices. • IP source guard. Click Run to show the static, DHCP snooping, blocked client entries, and expiration time of DHCP snooping and blocked entries on the Nebula Device. After clicking Run in IP source guard, the IPSG (IP source guard) table could be empty if: • It takes about 5 minutes to refresh the address table after you apply the Nebula Device settings • Protected port is not specified • NCC may not get completed data from Nebula Device due to unstable network. Please retry.
Reboot device	Click the Reboot button to restart the Nebula Device.
Locator LED	Enter a time interval between 1 and 60 minutes to stop the locator LED from blinking. The locator LED will start to blink for the number of minutes set here. Click the  button to turn on the locator feature, which shows the actual location of the Nebula Device between several Nebula Devices in the network.
Remote SSH	Select to use TCP (Transmission Control Protocol) Port 22 or 443 to establish a remote connection to this Nebula Device. The Nebula Device will create a reverse SSH (Secure SHell) connection. Then click Establish. After clicking Ok, NCC will provide a remote connection IPv4 address and service port number. For example, Remote connection: 34.247.173.104:27086. Use this IPv4 address and port to connect to the Nebula Device using an SSH terminal emulator (for example, PuTTY). The remote session will be available for 30 minutes. In case the connection cannot be established, confirm that the network allows Port 22 or 443. Note: Use Remote SSH for troubleshooting only.
Uplink usage	
Move the cursor over the chart to see the transmission rate at a specific time.	
Zoom	Select to view the statistics in the past 2 hours, day, week, month, 3 months or 6 months.
Pan	Click to move backward or forward by one day or week.

Table 22 Site-wide > Devices > Switches: Switch Details (continued)

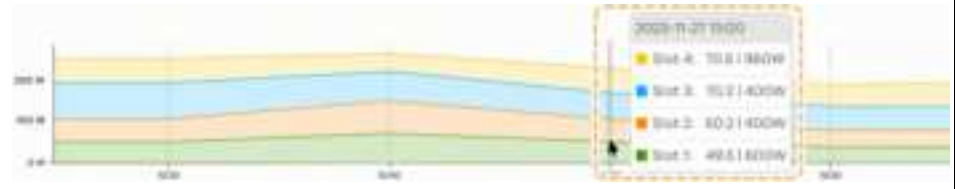LABEL	DESCRIPTION
Power Consumption	
	Select to view the Nebula Device power consumption in the past two hours, day, week or month.
Per slot usage (consumption/power budget)	In Cloud Stacking mode, this shows the current power consumption over the total power budget (in percentage) of each Nebula Device in the stacking system.
Maximum / Minimum consumption	This shows the current, total, maximum and minimum power consumption of the Nebula Device.
y-axis	The y-axis shows the amount of power used in Watts. In Cloud Stacking mode, each stacked colored graph represents the power consumption of each Nebula Device. The highest point of the graph represents the total power consumption of the stacked Nebula Devices at the time. For example, if Nebula Device 1 = 30 W, Nebula Device 2 = 40 W, Nebula Device 3 = 50 W. The highest point in Nebula Device 2 is 70 W. The highest power consumption is 120 W at the time.
x-axis	The x-axis shows the time period over which the power consumption is recorded. Hover the mouse over the graph to view the recorded power consumption of a Nebula Device on a specific time. 

4.3.2.2 PoE Configuration

Use this screen to set the PoE settings for the Nebula Device. To access this screen, click the edit icon next to PoE Status in the Site-wide > Devices > Switches: Switch Details screen.

Note: To set PoE settings for an individual port, such as schedule, priority, and power mode, edit the Nebula Device's port settings. For details, see [Section 6.3.1 on page 388](#).

Figure 46 Site-wide > Devices > Switches: Switch Details: PoE Configuration



The following table describes the labels in this screen.


Table 23 Site-wide > Devices > Switches: Switch Details: PoE Configuration

LABEL	DESCRIPTION
PoE Mode	Select the power management mode you want the Nebula Device to use. Classification mode – Select this if you want the Nebula Device to reserve the Max Power (mW) to each powered device (PD) according to the priority level. If the total power supply runs out, PDs with lower priority do not get power to function. Consumption mode – Select this if you want the Nebula Device to manage the total power supply so that each connected PD gets a resource. However, the power allocated by the Nebula Device may be less than the Max Power (mW) of the PD. PDs with higher priority also get more power than those with lower priority levels.
Close	Click this button to exit this screen without saving.
Saving	Click this button to save your changes and close the screen.

4.3.2.3 Switch Port Details

Use this to view individual Nebula Device port statistics. To access this screen, click a port in the Ports section of the Site-wide > Devices > Switches: Switch Details screen or click the details link next to a port in the Site-wide > Configure > Switches > Switch ports screen.

Figure 47 Site-wide > Devices > Switches: Switch Details: Port Details

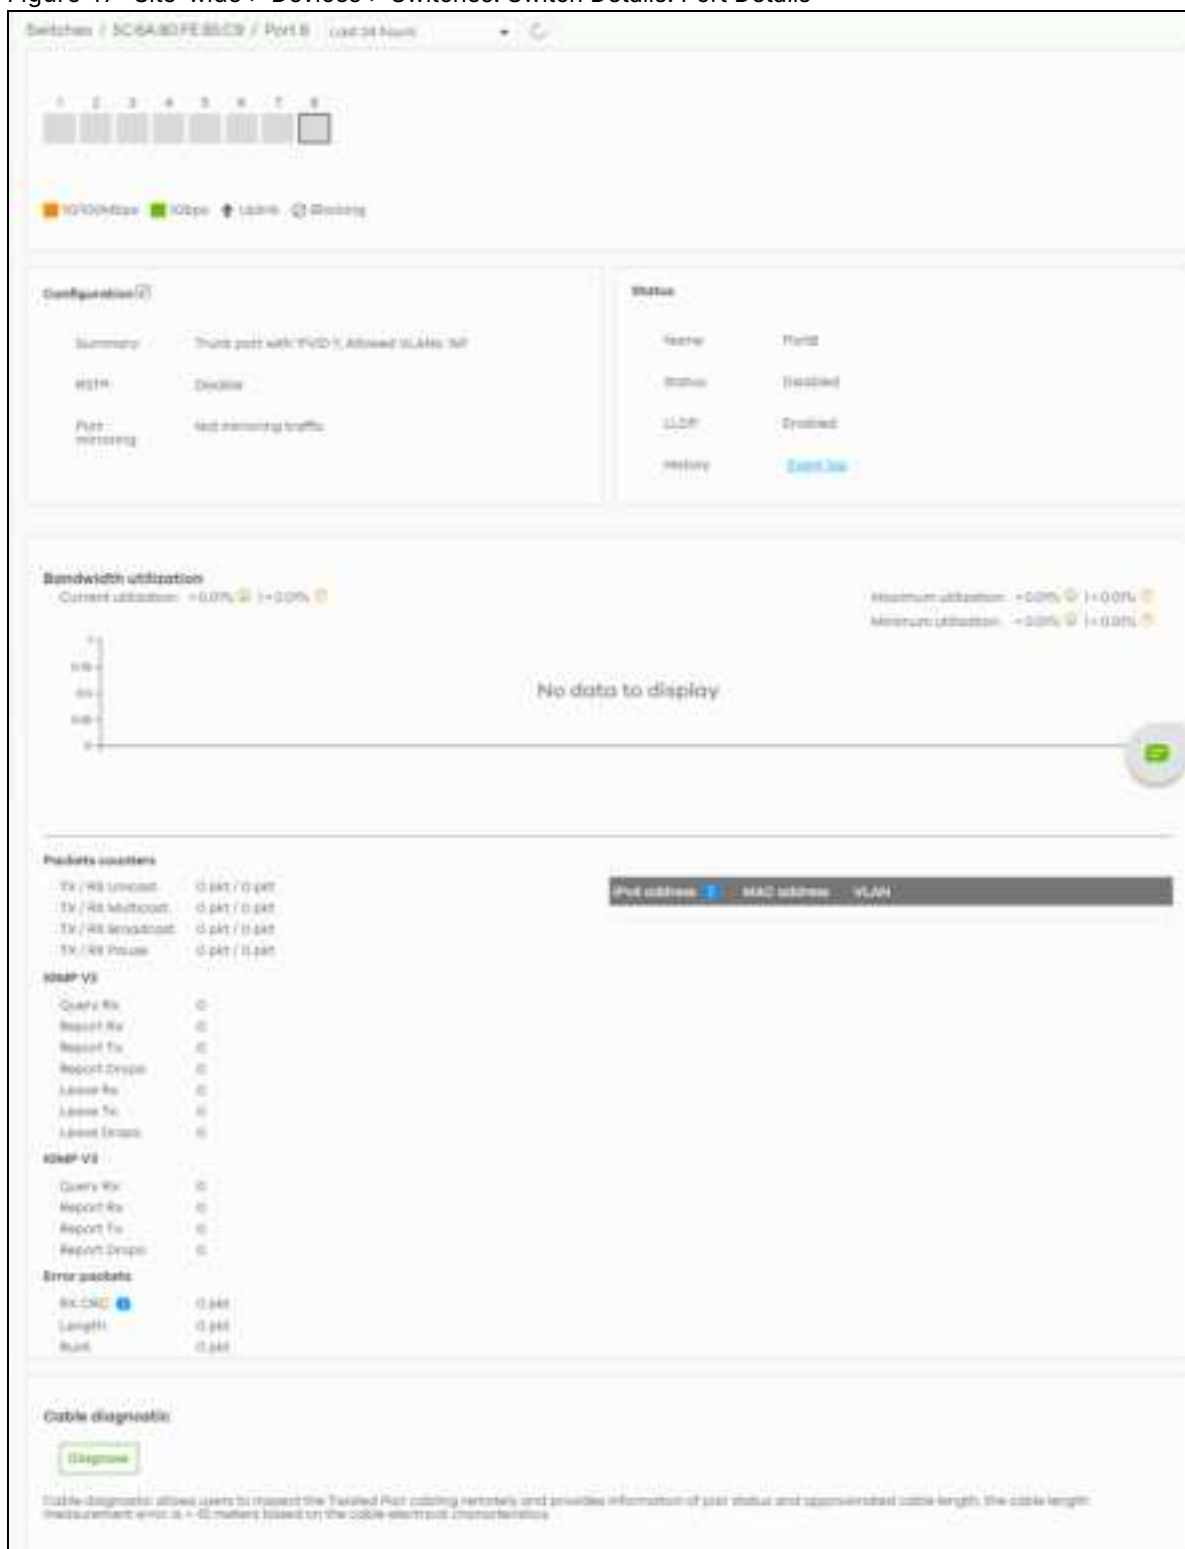

The following table describes the labels in this screen.

Table 24 Site-wide > Devices > Switches: Switch Details: Port Details

LABEL	DESCRIPTION
	Click this button to reload the data-related frames on this page.
Switch / Port	Select to view the port information and connection status in the past two hours, day, week or month.
Port	This figure shows the ports on the Nebula Device. Click a port to go to the corresponding port details screen. The selected port is highlighted. Move the pointer over a port to see additional port information, such as its name, MAC address, type, and connection speed. The port color indicates the connection status of the port. - Gray (#888888): The port is disconnected. - Orange (#FF8900): The port is connected and is transmitting data at 10 or 100 Mbps. - Green (#64BE00): The port is connected and is transmitting data at 1000 Mbps (1 Gbps). - Azure (#00B2FF): The port is connected and is transmitting data at 2.5 Gbps. - Violet (#8800FF): The port is connected and is transmitting data at 5 Gbps. - Blue (#004FEE): The port is connected and is transmitting data at 10000 Mbps (10 Gbps). When the port is in the STP blocking state, failed LACP negotiation state, or failed port authentication state, a blocked icon displays on top of the port ( for example) in the diagram.
Name	This shows the descriptive name of the port.
Status	This shows the connection status of the port.
MAC address	This shows the MAC address of the port.
Type	This shows the port type (Trunk or Access), PVID, and allowed VLANs.
Speed	This shows the current connection speed of the port. If the speed is unavailable, this displays "Ethernet".
LLDP	This shows the LLDP information received on the port.
Configuration	
Click the edit icon to open the Switch ports screen and show the ports that match the filter criteria (the selected port number). See Section 6.3.1 on page 388 .	
Summary	This shows the port's VLAN settings.
RSTP	This shows whether RSTP is disabled or enabled on the port.
Port mirroring	This shows whether traffic is mirrored on the port.
Status	
Name	This shows the name of the port.
Status	This shows the status of the port.
LLDP	This shows the LLDP (Link Layer Discovery Protocol) information received on the port.
History	Click Event log to go to the Site-wide > Monitor > Switches > Event log screen.
Bandwidth Utilization	
Current Utilization	This shows what percentage of the upstream/downstream bandwidth is currently being used by the port.
Maximum Utilization	This shows the maximum upstream/downstream bandwidth utilization (in percentage).
Minimum Utilization	This shows the minimum upstream/downstream bandwidth utilization (in percentage).
y-axis	The y-axis represents the transmission rate in Kbps (kilobits per second).
x-axis	The x-axis shows the time period over which the traffic flow occurred.
Power Consumption	

Table 24 Site-wide > Devices > Switches: Switch Details: Port Details (continued)

LABEL	DESCRIPTION
Total	This shows the total power consumption of the port.
Current Consumption	This shows the current power consumption of the port.
Maximum Consumption	This shows the maximum power consumption of the port.
Minimum Consumption	This shows the minimum power consumption of the port.
y-axis	The y-axis shows how much power is used in Watts.
x-axis	The x-axis shows the time period over which the power consumption is recorded.
Packets Counters	
TX/RX Unicast	This shows the number of good unicast packets transmitted/received on the port.
TX/RX Multicast	This shows the number of good multicast packets transmitted/received on the port.
TX/RX Broadcast	This shows the number of good broadcast packets transmitted/received on the port.
TX/RX Pause	This shows the number of 802.3x Pause packets transmitted/received on the port.
IGMP V2/V3	
Query Rx	This shows the number of IGMP query packets received on the port.
Report Rx	This shows the number of IGMP report packets received on the port.
Report Tx	This shows the number of IGMP report packets transmitted on the port.
Report Drops	This shows the number of IGMP report packets dropped on the port.
Leave Rx	This shows the number of IGMP leave packets received on the port.
Leave Tx	This shows the number of IGMP leave packets transmitted on the port.
Leave Drops	This shows the number of IGMP leave packets dropped on the port.
Error Packets	
RX CRC	This shows the number of packets received with CRC (Cyclic Redundant Check) errors. CRC errors indicate packet errors in the network, potentially caused by mismatching Ethernet speed/duplex, bad cables or transceivers, or malfunctioning client devices.
Length	This shows the number of packets received with a length that was out of range.
Runt	This shows the number of packets received that were too short (shorter than 64 octets), including the ones with CRC errors.
IPv4 Address	This shows the IP address of the incoming frame which is forwarded on the port. Note: The IP address is obtained using one of the following three methods: • LLDP remote information • Information collected by the Nebula Security Gateway (NSG) in this site • Information collected by NCC when the client connected to Nebula
MAC Address	This shows the MAC address of the incoming frame which is forwarded on the port.
VLAN	This shows the VLAN group to which the incoming frame belongs.
Cable Diagnostics	
Diagnose	Click Diagnose to perform a physical wire-pair test of the Ethernet connections on the port. The following fields display when you diagnose a port.
Channel	An Ethernet cable usually has four pairs of wires. A 10BASE-T or 100BASE-TX port only use and test two pairs, while a 1000BASE-T port requires all four pairs. This displays the descriptive name of the wire-pair in the cable.


Table 24 Site-wide > Devices > Switches: Switch Details: Port Details (continued)

LABEL	DESCRIPTION
Pair Status	OK: The physical connection between the wire-pair is okay. Open: There is no physical connection (an open circuit detected) between the wire-pair. Short: There is a short circuit detected between the wire-pair. Unknown: The Nebula Device failed to run cable diagnostics on the cable connected to this port. Unsupported: The port is a fiber port or it is not active.
Cable Length	This displays the total length of the Ethernet cable that is connected to the port when the Pair Status is OK and the Nebula Device chipset supports this feature. This shows N/A if the Pair Status is Open or Short. Check the Distance to fault. This shows Unsupported if the Nebula Device chipset does not support to show the cable length.
Distance to fault (m)	This displays the distance between the port and the location where the cable is open or shorted. This shows N/A if the Pair Status is OK. This shows Unsupported if the Nebula Device chipset does not support to show the distance.
DDMI	This section is available only on an SFP (Small Form Factor Pluggable) port.
DDMI	Click DDMI (Digital Diagnostics Monitoring Interface) to display real-time SFP transceiver information and operating parameters on the port. You can also see the alarm and warning thresholds for temperature, voltage, transmission bias, transmission and receiving power.
Port	This shows the number of the port on the Nebula Device.
Vendor	This shows the vendor name of the transceiver installed in the port.
PN	This shows the part number of the transceiver installed in the port.
SN	This shows the serial number of the transceiver installed in the port.
Revision	This shows the firmware version of the transceiver installed in the port.
Date-code	This shows the date the installed transceiver's firmware was created.
Transceiver	This shows the type and the Gigabit Ethernet standard supported by the transceiver installed in the port.
Calibration	This shows whether the diagnostic information is internally calibrated or externally calibrated.
Current	This shows the current operating parameters on the port, such as transceiver temperature, laser bias current, transmitted optical power, received optical power and transceiver supply voltage.
High Alarm Threshold	This shows the high alarm threshold for temperature, voltage, transmission bias, transmission and receiving power. A trap is sent when the operating parameter is above the threshold.
High Warn Threshold	This shows the high warning threshold for temperature, voltage, transmission bias, transmission and receiving power.
Low Warn Threshold	This shows the low alarm threshold for temperature, voltage, transmission bias, transmission and receiving power. A trap is sent when the operating parameter is below the threshold.
Low Alarm Threshold	This shows the low warning threshold for temperature, voltage, transmission bias, transmission and receiving power.

4.3.3 Security Router

This screen allows you to view the detailed information about the Nebula Device in the selected site. Click Site-wide > Devices > Security router to access this screen.

Figure 48 Site-wide > Devices > Security router

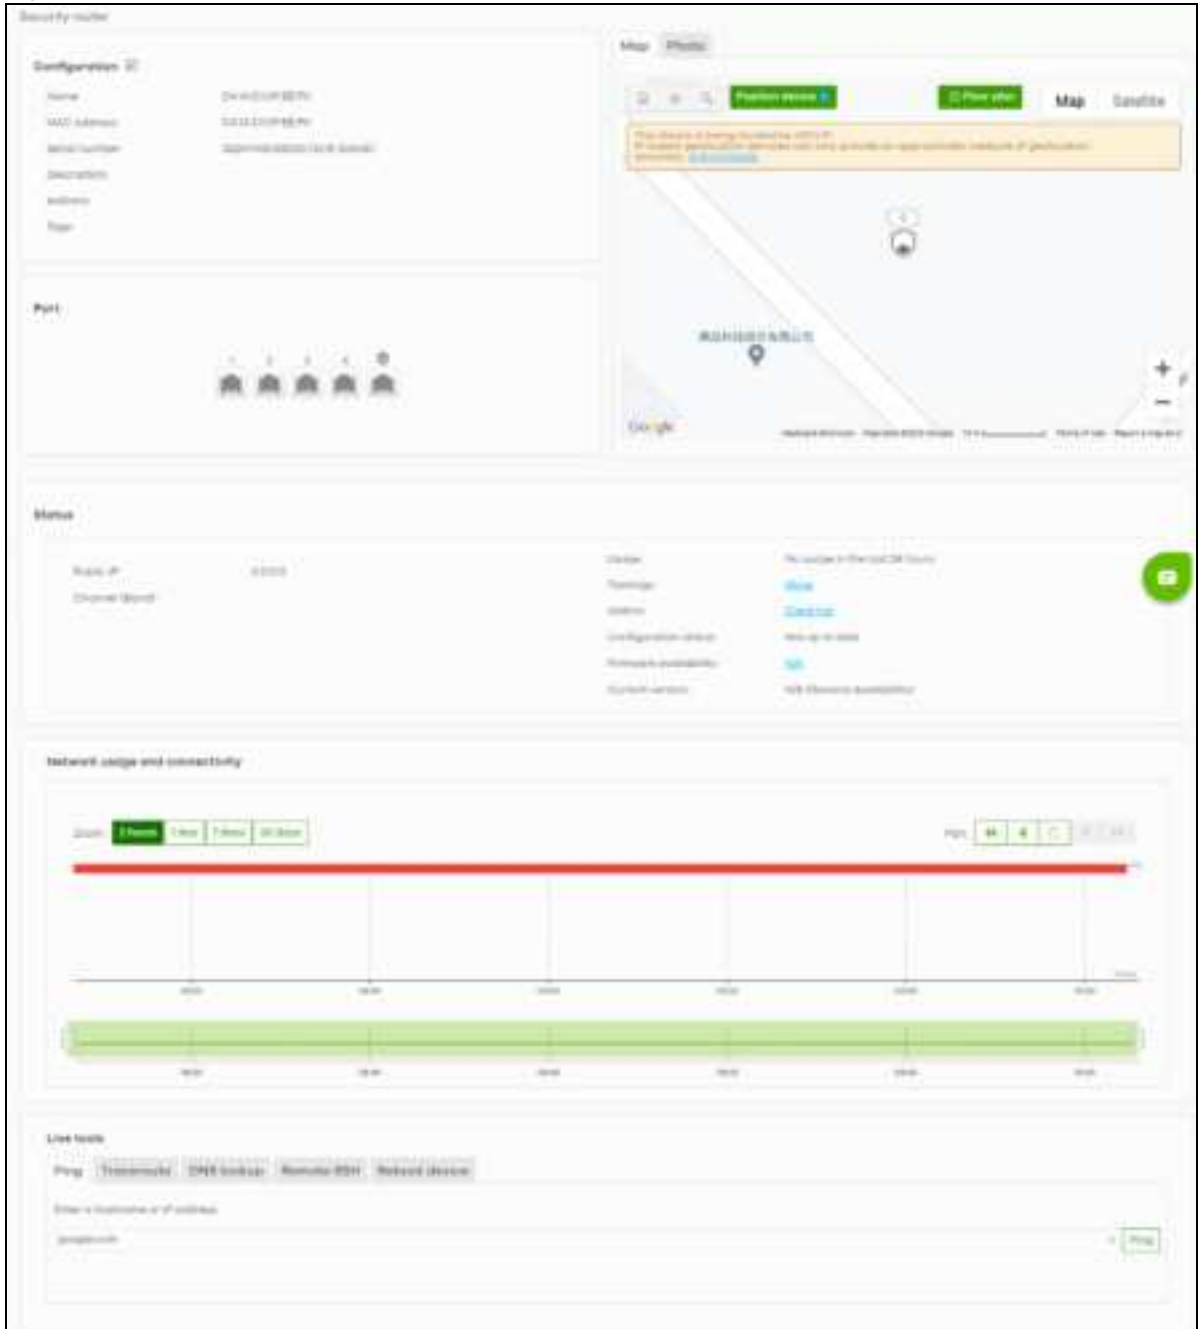

The following table describes the labels in this screen.

Table 25 Site-wide > Devices > Security router

LABEL	DESCRIPTION
Configuration	
Click the edit icon to change the Nebula Device name, description, tags and address (physical location). You can also move the Nebula Device to another site or remove.	
Name	This shows the descriptive name of the Nebula Device.
MAC address	This shows the MAC address of the Nebula Device's WAN port.

Table 25 Site-wide > Devices > Security router (continued)

LABEL	DESCRIPTION
Serial number	This shows the serial number of the Nebula Device.
Description	This shows the user-specified description for the Nebula Device.
Address	This shows the user-specified address (physical location) for the Nebula Device.
Tags	This shows the user-specified tags for the Nebula Device.
Port	This shows the ports on the Nebula Device. The port is highlighted in green color when it is connected and the link is up. Move the pointer over a port to see additional port information, such as its name, connection status, MAC address, and connection speed.
Map	This shows the location of the Nebula Device on Google Maps (Map view or Satellite imagery view) or on a floor plan. Click Floor plan to display a list of existing floor plans. Each floor plan has a drawing that shows the rooms scaled and viewed from above. Drag-and-drop your Nebula Device directly on the Google map or click Position device to update the Nebula Device's address (physical location). • Select GEO IP to use the public IP address of the Nebula Device. • Select Get my location from web browser to use the public IP address of the computer accessing the NCC portal. • Select Use the following address or coordinates to enter the complete address or coordinates of the Nebula Device. Note: Nebula Devices that are offline cannot use GEO IP.
Photo	This shows the photo of the Nebula Device. Click Add to upload one or more photos. Click x to remove a photo.
Status	
Public IP	This shows the IPv4 address of the WAN interface, and whether it was assigned automatically (DHCP), manually (Static IP), or by PPPoE.
Channel (Band)	This shows the channel ID and WiFi frequency band currently being used by the Nebula Device. Note: This field only appears for ZyWALL ATP100W, USG FLEX 100W, and USG20W-VPN.
Usage	This shows the amount of data that has been transmitted or received by the Nebula Device's clients.
Topology	Click Show to go to the Site-wide > Topology screen. See Section 4.2 on page 226 .
History	Click Event log to go to the Site-wide > Monitor > Security router > Event log screen.
Configuration status	This shows whether the configuration on the Nebula Device is Up-to-date.

Table 25 Site-wide > Devices > Security router (continued)

LABEL	DESCRIPTION
Firmware availability	This shows whether the firmware installed on the Nebula Device is Up-to-date.
Current version	This shows the firmware version currently installed on the Nebula Device.
Network usage and connectivity	
Move the cursor over the chart to see the transmission rate at a specific time.	
Zoom	Select to view the statistics in the past 2 hours, 24 hours, 7 days, or 30 days.
Pan	Click to move backward or forward by one day or week.
Live tools	
Ping	Enter the host name or IP address of a computer that you want to perform ping in order to test a connection and click Ping. You can select the interface (WAN, LAN, or VLAN) through which the Security Firewall sends queries for ping. Note: - To ping for VPN/routing issues, it is not necessary to connect an end-device on the LAN interface of the Nebula Device. - A routing problem is possible if the WAN interface can reach the Internet but not the LAN interface.
Traceroute	Enter the host name or IP address of a computer that you want to perform the traceroute function. This determines the path a packet takes to the specified computer.
DNS lookup	Enter a host name and click Run to resolve the IP address for the specified domain name.
Remote SSH	This allows you to establish a remote connection to this Nebula Device by specifying the port number. Then click Establish. This feature is available to the organization owner, organization administrators with full privileges, and site administrators with full privileges.
Reboot device	Click the Reboot button to restart the Nebula Device.

4.3.4 Firewall

This screen allows you to view the detailed information about the Nebula Device in the selected site. Click Site-wide > Devices > Firewall to access this screen.

Figure 49 Site-wide > Devices > Firewall (Cloud Mode)


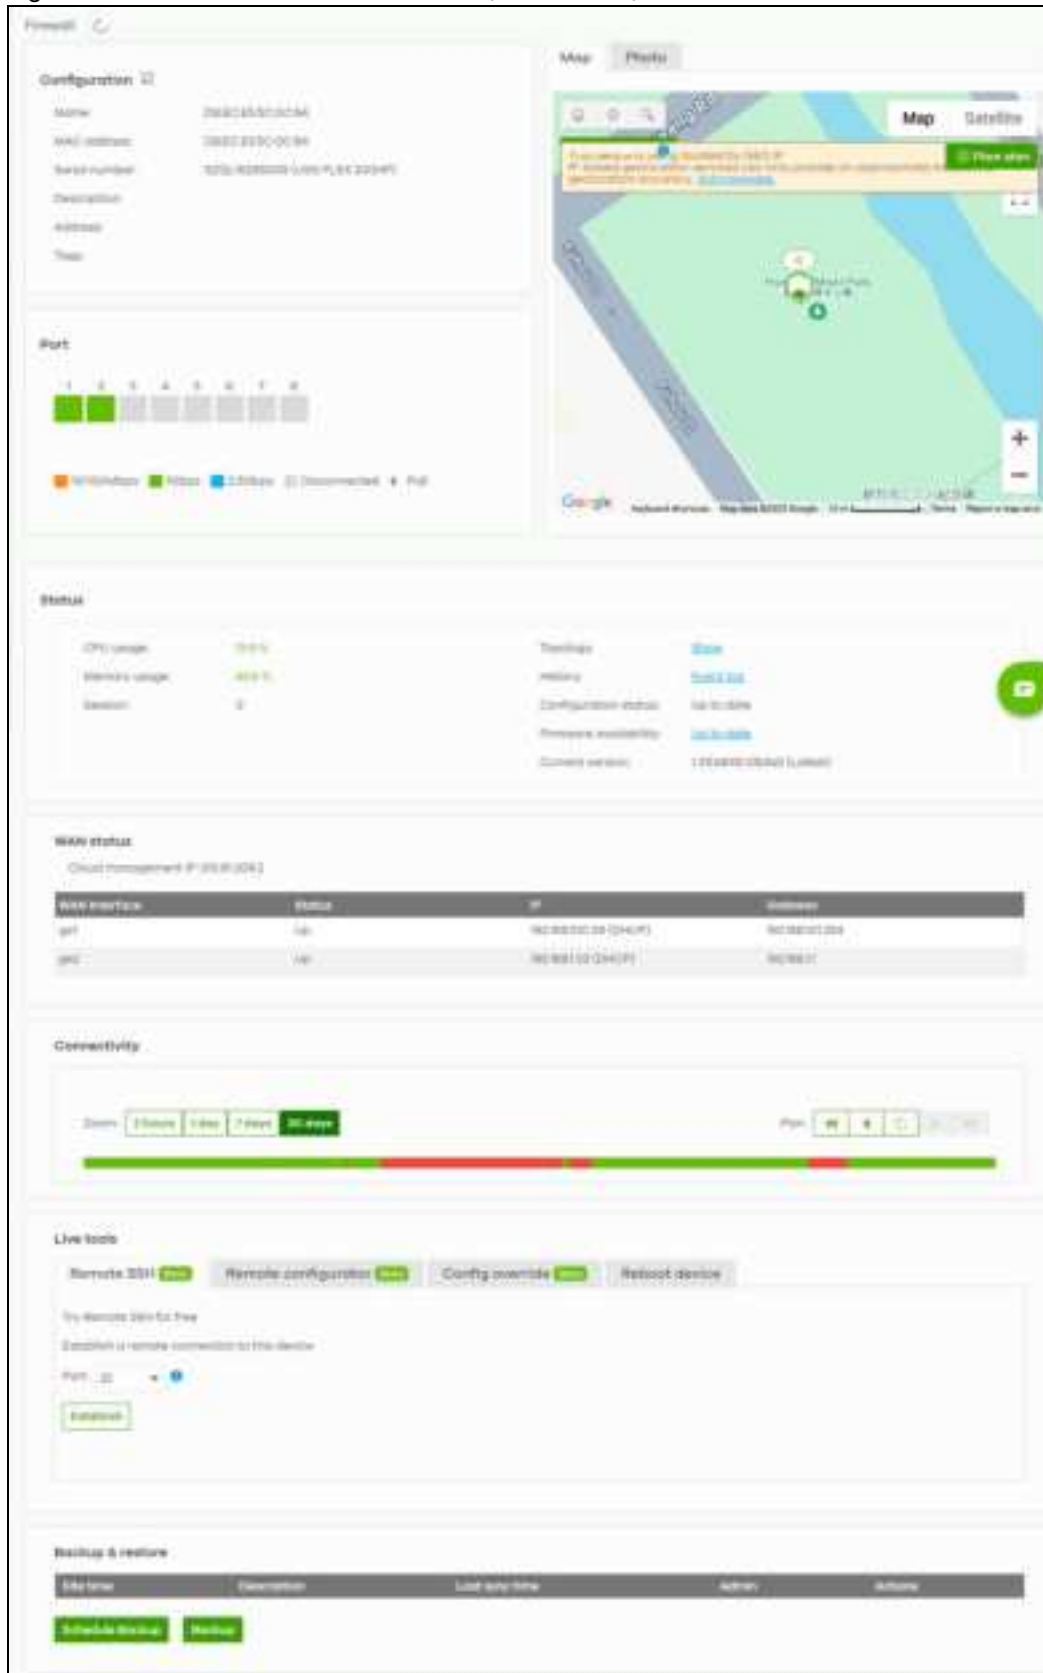


Figure 50 Site-wide > Devices > Firewall (Cloud Monitoring Mode)

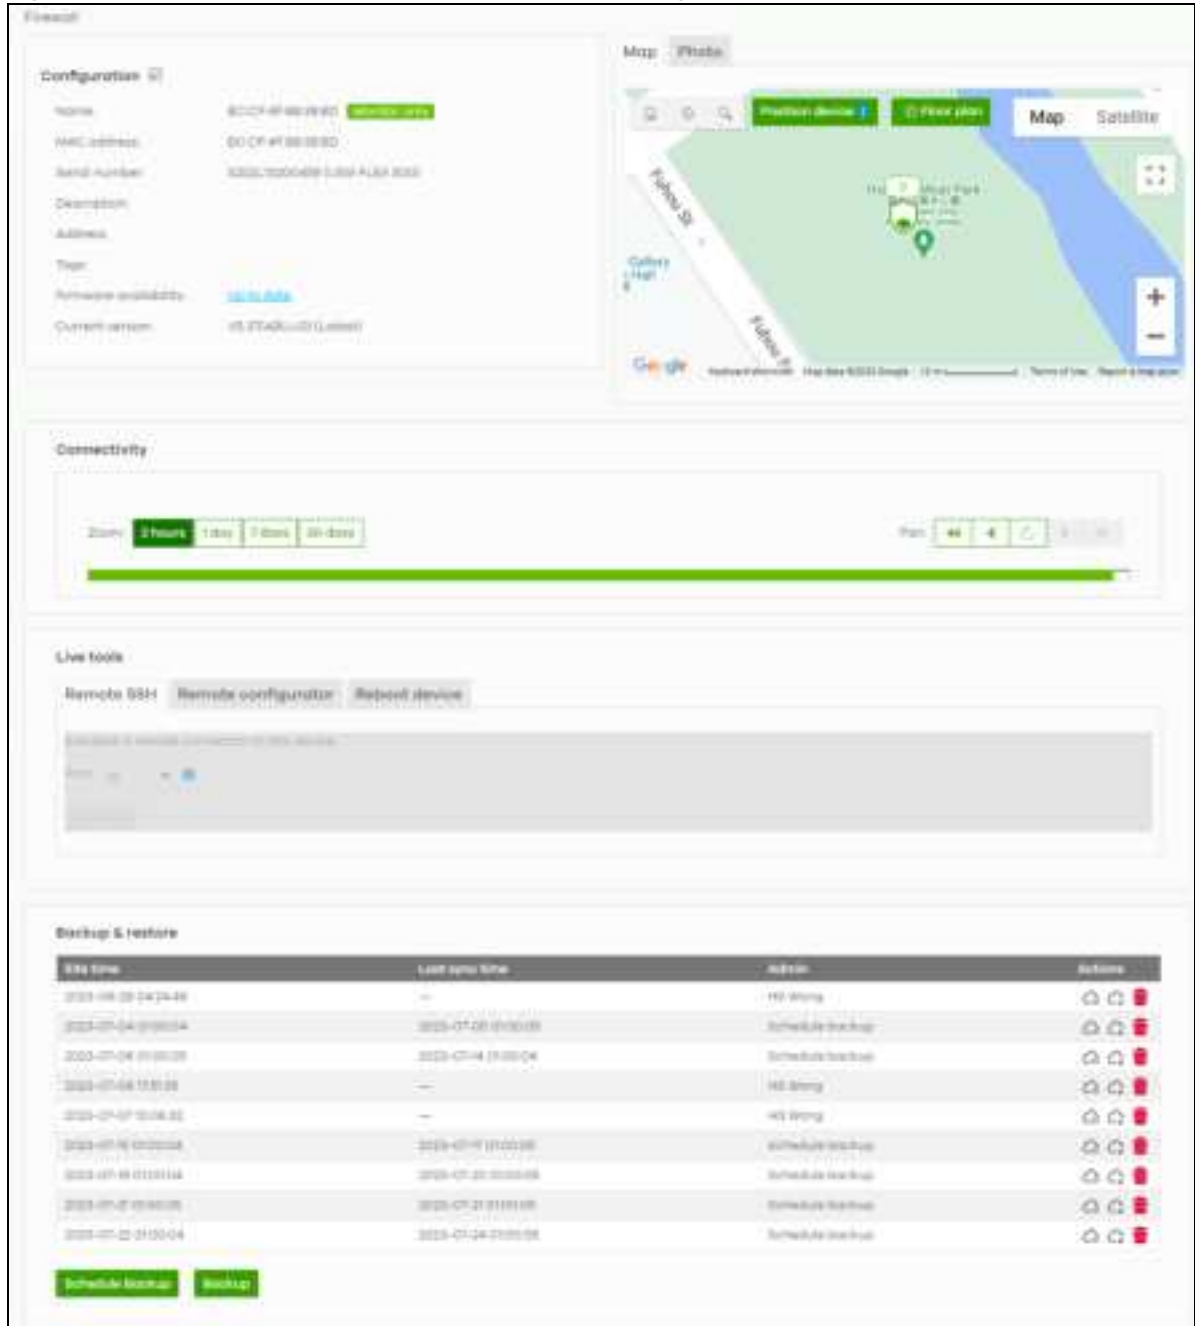

The following table describes the labels in this screen.

Table 26 Site-wide > Devices > Firewall

LABEL	DESCRIPTION
Configuration	
	Click the edit icon to change the Nebula Device name, description, tags and address (physical location). You can also move the Nebula Device to another site or remove.
Name	This shows the descriptive name of the Nebula Device.
MAC address	This shows the MAC address of the Nebula Device's WAN port.

Table 26 Site-wide > Devices > Firewall (continued)

LABEL	DESCRIPTION
Serial number	This shows the serial number of the Nebula Device.
Description	This shows the user-specified description for the Nebula Device.
Address	This shows the user-specified address (physical location) for the Nebula Device.
Tags	This shows the user-specified tags for the Nebula Device.
Port	This shows the ports on the Nebula Device. The port is highlighted in green color when it is connected and the link is up. Move the pointer over a port to see additional port information, such as its name, connection status, MAC address, and connection speed. Note: These fields will not show in Cloud Monitoring mode.
Port	This shows the identity number of the selected port.
Port Group	This shows the name of the port group that the port belongs to.
Status	This shows the connection status of the port.
Map	This shows the location of the Nebula Device on Google Maps (Map view or Satellite imagery view) or on a floor plan. Click Floor plan to display a list of existing floor plans. Each floor plan has a drawing that shows the rooms scaled and viewed from above. Drag-and-drop your Nebula Device directly on the Google map or click Position device to update the Nebula Device's address (physical location).  • Select GEO IP to use the public IP address of the Nebula Device. • Select Get my location from web browser to use the public IP address of the computer accessing the NCC portal. • Select Use the following address or coordinates to enter the complete address or coordinates of the Nebula Device. Note: Nebula Devices that are offline cannot use GEO IP.
Photo	This shows the photo of the Nebula Device. Click Add to upload one or more photos. Click x to remove a photo.
Status Note: These fields will not show in Cloud Monitoring mode.	
CPU usage	This shows what percentage of the Nebula Device's processing capability is currently being used.
Memory usage	This shows what percentage of the Nebula Device's RAM is currently being used.
Session	This shows how many sessions the Nebula Device currently has. A session is a unique established connection that passes through, from, to, or within the Nebula Device.

Table 26 Site-wide > Devices > Firewall (continued)

LABEL	DESCRIPTION
Channel (Band)	This shows the channel ID and WiFi frequency band currently being used by the Nebula Device. Note: This field only appears for ZyWALL ATP100W, USG FLEX 100W, and USG20W-VPN.
Usage	This shows the amount of data that has been transmitted or received by the Nebula Device's clients.
Topology	Click Show to go to the Site-wide > Topology screen. See Section 4.2 on page 226 .
History	Click Event log to go to the Site-wide > Monitor > Firewall > Event log screen.
Configuration status	This shows whether the configuration on the Nebula Device is Up-to-date.
Firmware availability	This shows whether the firmware installed on the Nebula Device is Up-to-date.
Current version	This shows the firmware version currently installed on the Nebula Device.
WAN status	
Note: These fields will not show in Cloud Monitoring mode.	
WAN Interface	This shows the descriptive name of the active WAN connection.
Status	This shows the connection status of the WAN interface (up or down).
IP	This shows the IP address of the WAN interface, and whether it was assigned automatically (DHCP), manually (Static IP), or by PPPoE.
Gateway	This shows the IP address of the default Nebula Device assigned to the WAN interface.
DNS Server	This shows the IP addresses of the DNS servers assigned to the WAN interface.
Network usage and connectivity / Connectivity	
Move the cursor over the chart to see the transmission rate at a specific time.	
Zoom	Select to view the statistics in the past 2 hours, 24 hours, 7 days, or 30 days.
Pan	Click to move backward or forward by one day or week.
Live tools	
Note: Traffic, DHCP lease, Ping, Traceroute and DNS lookup, will not show in Cloud Monitoring mode.	
Traffic	This shows the WAN port statistics. The y-axis represents the transmission rate for uploads and downloads. The x-axis shows the time period over which the traffic flow occurred.
DHCP leases	This shows the IP addresses currently assigned to DHCP clients.
Ping	Enter the host name or IP address of a computer that you want to perform ping in order to test a connection and click Ping. You can select the interface (WAN, LAN, or VLAN) through which the Security Firewall sends queries for ping. Note: - To ping for VPN/routing issues, it is not necessary to connect an end-device on the LAN interface of the Nebula Device. - A routing problem is possible if the WAN interface can reach the Internet but not the LAN interface.
Traceroute	Enter the host name or IP address of a computer that you want to perform the traceroute function. This determines the path a packet takes to the specified computer.
DNS lookup	Enter a host name and click Run to resolve the IP address for the specified domain name.

Table 26 Site-wide > Devices > Firewall (continued)

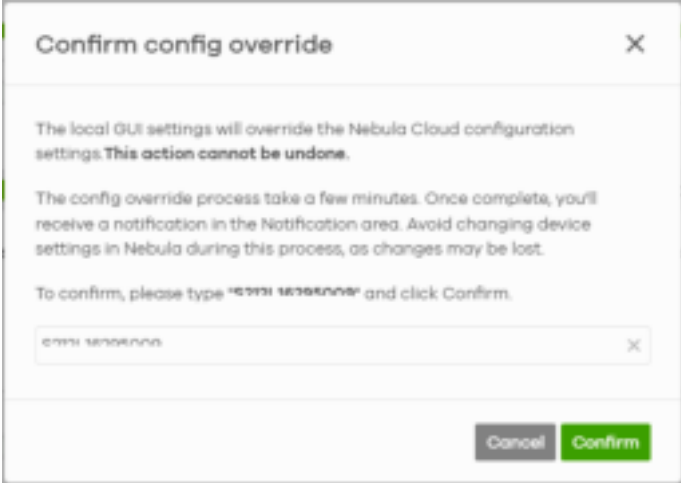
LABEL	DESCRIPTION
Remote SSH	This option is available only for the Nebula Device owner. Establish a remote command line interface (CLI) connection to the Nebula Device by specifying the Port number and clicking Establish.
Remote configurator	Click Establish to use TCP (Transmission Control Protocol) port 443 to establish a remote connection to this Nebula Device. The Nebula Device will create a reverse SSH (Secure SHell) connection. After clicking Ok, NCC will provide a remote connection IPv4 address and service port number. For example, https://63.35.218.205:31479. Use this IPv4 address and port to connect to the Nebula Device to open the Web Configurator. The remote session will be available for 30 minutes. In case the connection cannot be established, confirm that the network allows Port 443. Note: Remote configurator will only show in Cloud Monitoring mode.
Config override	Click Config override to apply the current Nebula Device Web Configurator setting to NCC. You will be prompted to copy and enter your Nebula Device's serial number shown on screen and click Confirm. The Confirm button is not clickable until you enter the correct serial number.  Note: This action cannot be undone.
Reboot device	Click the Reboot button to restart the Nebula Device.
Backup & Restore Note: These fields will only show in Cloud Monitoring mode.	
Site time	This shows the date and time of the site, to which the change was applied, when the log was recorded.
Description	This shows the description of the backup.
Last sync time	This shows the year-month-date hour:minute:second when NCC checked the Nebula Device, but skip the scheduled backup because there is no configuration change.
Admin	This shows the name of the administrator who made the back up or Schedule backup.
Actions	Click the Restore icon to restore a previously saved configuration file from NCC to the Nebula Device. Click the Download icon to download the configuration file to your computer or laptop. Click the Delete icon to remove the configuration file on the Nebula Device.

Table 26 Site-wide > Devices > Firewall (continued)

LABEL	DESCRIPTION
Schedule Backup	Select a Monthly, Weekly, or Daily backup of the current configuration of the Nebula Device to the NCC. Then select the Day of the month/week. Otherwise, select Disable. Then click Confirm. Note: • NCC will skip the scheduled backup when there is no configuration change. • NCC can retain up to 10 backup configurations per Nebula Device in this screen. When the maximum number of backup configuration per Nebula Device is reached, a new backup configuration automatically overwrites an existing backup configuration, starting with the oldest existing backup configuration first.
Backup	Click this button to create a new backup of the current configuration of the Nebula Device to the NCC.

4.3.5 Security Gateway

This screen allows you to view the detailed information about a Nebula Device in the selected site. Click Site-wide > Devices > Security gateway to access this screen.

The following table describes the labels in this screen.

Table 27 Site-wide > Devices > Security gateway

LABEL	DESCRIPTION
Configuration	Click the edit icon to change the Nebula Device name, description, tags and address. You can also move the Nebula Device to another site or remove.
Name	This shows the descriptive name of the Nebula Device.
MAC address	This shows the MAC address of the Nebula Device.
Serial number	This shows the serial number of the Nebula Device.
Description	This shows the user-specified description for the Nebula Device.
Address	This shows the user-specified address for the Nebula Device.
Tags	This shows the user-specified tag for the Nebula Device.
Port	This shows the ports on the Nebula Device. The port is highlighted in green color when it is connected and the link is up. Move the pointer over a port to see additional port information, such as its name, connection status, MAC address, and connection speed.
Name	This shows the descriptive name of the port.
Status	This shows the connection status of the port.
MAC address	This shows the MAC address of the port.
LLDP	This shows the LLDP information received on the port.
Speed	This shows the current connection speed of the port. If the speed is unavailable, this displays "Ethernet".
Map	This shows the location of the Nebula Device on the Google map (Map view or Satellite imagery view) or on a floor plan. Click Floor plan to display a list of existing floor plans. Each floor plan has a drawing that shows the rooms scaled and viewed from above. Drag-and-drop your Nebula Device directly on the Google map or click Position device to update the Nebula Device's address (physical location).  • Select GEO IP to use the public IP address of the Nebula Device. • Select Get my location from web browser to use the public IP address of the computer accessing the NCC portal. • Select Use the following address or coordinates to enter the complete address or coordinates of the Nebula Device. Note: Nebula Devices that are offline cannot use GEO IP.

Table 27 Site-wide > Devices > Security gateway (continued)

LABEL	DESCRIPTION
Photo	This shows the photo of the Nebula Device. Click Add to upload one or more photos. Click x to remove a photo.
Status	
WAN1/WAN2	This shows the IP address, gateway, DNS, and VLAN ID information for the active WAN connection.
Public IP	This shows the global (WAN) IP address of the Nebula Device.
CPU usage	This shows what percentage of the Nebula Device's processing capability is currently being used.
Memory usage	This shows what percentage of the Nebula Device's RAM is currently being used.
Security Service	This shows whether Nebula Security Services (NSS) are enabled on the Nebula Device. Click What is this? to view the type of enabled security services. When the gateway's NSS license expires, NSS is automatically disabled. This field displays an edit button which you can use to re-enable the services after renewing the NSS license.
Session	
Usage	This shows the amount of data that has been transmitted or received by the Nebula Device's clients.
Topology	Click Show to go to the Site-wide > Topology screen. See Section 4.2 on page 226 .
History	Click Event log to go to the Site-wide > Monitor > Security gateway > Event log screen.
Configuration status	This shows whether the configuration on the Nebula Device is up-to-date.
Firmware availability	This shows whether the firmware installed on the Nebula Device is up-to-date.
Current version	This shows the firmware version currently installed on the Nebula Device.
Live tools	
Internet traffic	This shows the WAN port statistics. The y-axis represents the transmission rate in Kbps (kilobits per second). The x-axis shows the time period over which the traffic flow occurred.
DHCP leases	This shows the IP addresses currently assigned to DHCP clients.
Ping	Enter the host name or IP address of a computer that you want to perform ping in order to test a connection and click Ping. You can select the interface through which the Nebula Device sends queries for ping.
Traceroute	Enter the host name or IP address of a computer that you want to perform the traceroute function. This determines the path a packet takes to the specified computer.
DNS lookup	Enter a host name and click Run to resolve the IP address for the specified domain name.
Remote SSH	This option is available only for the Nebula Device owner. Establish a remote connection by specifying the Port number and clicking Establish.
Reboot device	Click the Reboot button to restart the Nebula Device.
Network usage and connectivity	
	Move the cursor over the chart to see the transmission rate at a specific time.
Zoom	Select to view the statistics in the past 2 hours, day, week, or month.
Pan	Click to move backward or forward by one day or week.

4.3.6 Mobile Router

This screen allows you to view the detailed information about a Nebula Device in the selected site. Click Site-wide > Devices > Mobile router to access this screen. See the [Mobile Router](#) chapter for more information.

4.3.7 Accessories

This screen allows you to view the detailed information about a Nebula Device in the selected site. Click Site-wide > Devices > Accessories to access this screen. See the [Accessory](#) chapter for more information.

4.4 Map & Floor Plans

This screen allows you to locate a Nebula Device on the world map and use a floor plan to show where Nebula Devices are physically located. Click Site-wide > Map & floor plans to access this screen.

Note: Map & floor plans do not support Nebula Accessories.

Figure 52 Site-wide > Map & floor plans



Place device on map

You can mark on the map the places where the Nebula Devices are located. Click the Place device on map tab to display the Nebula Device list for the selected site. Click the arrow (↕) on the upper left corner of the Map & floor plans screen to collapse or expand the list.

Click the Placed button to show the Nebula Devices that you have pinned on the map and/or the floor plan. Click the Un-placed button to show the Nebula Devices that remain to be pinned on the map. To pin a Nebula Device, select the Nebula Device from the Un-placed list, then drag and drop it on the map.

The pin icon next to a Nebula Device name is green (📍) if you have marked the Nebula Device on the map. Otherwise, the pin icon is gray (📍). Click the 📍 icon to remove a Nebula Device from the map.

Figure 53 Site-wide > Map & floor plans: Place device on map



Edit floor plans

Click the Edit floor plans tab to display the list of existing floor plan, a drawing that shows the rooms scaled and viewed from above. Click the arrow (↕) on the upper left corner of the Map & floor plans screen to collapse or expand the list.

Use the Create+ button to upload a new floor plan. The floor plan then shows on the Google map at the right side of the screen. Use your mouse to move the floor plan, and use the icons at the top of the map to rotate, change the transparency, resize or hide the floor plan. Click Set position to apply your changes. If you want to relocate the floor plan, select the floor plan from the list and click its edit icon.

Figure 54 Site-wide > Map & floor plans: Edit floor plans



The following table describes the labels in this screen.

Table 28 Site-wide > Map & floor plans: Edit floor plans

LABEL	DESCRIPTION
Floor plan	This shows the descriptive name of the floor plan.
Devices	This shows the number of Nebula Devices marked on this floor plan.
	Click this icon to open a screen, where you can modify the name, address and/or dimension of the floor plan.
	Click this icon to delete the floor plan.


4.5 Clients

This screen shows a list of all wired and WiFi clients connected to Nebula Devices (access points, Switches, Security Appliances) in the site. You can also block or allow clients. Click Site-wide > Clients to access this screen.

Note: The blocked WiFi clients will apply to both Access Points and Security Router.

Note: NCC will not show the wired clients connected to Nebula Accessories in the site.

Figure 55 Site-wide > Clients > Client list

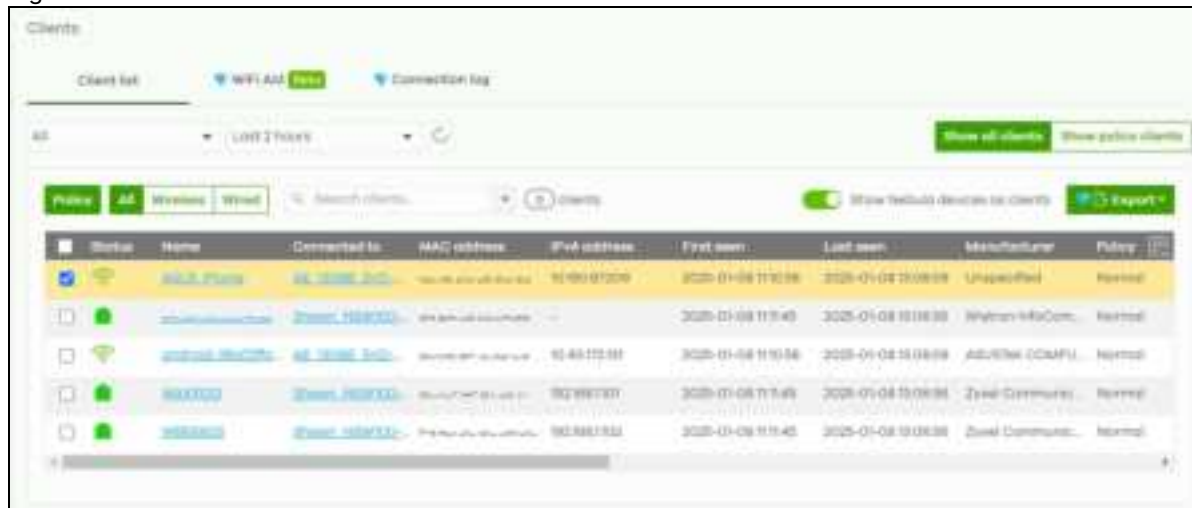

The following table describes the labels in this screen.

Table 29 Site-wide > Clients > Client list

LABEL	DESCRIPTION
Client list	Select to filter the Clients by device type (Access point clients, Switch clients, Firewall clients, Security gateway clients, Security router clients) the client is connected to. You can also set a time; the list shows each client's connection status in the Last 2 hours, Last 24 hours, Last 7 days, Last 30 days, or Custom range. The maximum Custom range is 30 days within the past 365 days. When you select Clients: All, you can show each client's connection status in the Last 2 hours and Last 24 hours only.
	Click this button to reload the data-related frames on this page.
Show all clients	Click this to show all clients that have been online during the selected time period.

Table 29 Site-wide > Clients > Client list (continued)

LABEL	DESCRIPTION
Show policy clients	Click this to show clients that have a white-listed, blocked, or reserved IP policy applied to them, regardless of when they were last online. The client's usage data is calculated according to the selected time period.
Total Client Usage Note: Total Client Usage is not available when Clients by device type is All (default setting). It is only available when you select Access point clients, Firewall clients, Security gateway clients, and Security router clients.	
y-axis	The y-axis shows the total amount of data (in bytes) used by the clients by Nebula Device type in the site.
x-axis	The x-axis shows the time period over which the data usage occurred.
Policy	Select the clients from the table below, and then choose the security policy that you want to apply to the selected clients. Choose one of the following policies, then click Apply policy. - Allow list: The selected clients to bypass captive portal authentication. Selecting the Allow list policy will automatically add the Reserve IP policy to the security firewall clients. - Block list: The selected clients cannot connect to the site. How a client is blocked depends on the connected Nebula Device type selected under Client list. AP: The client is blocked by MAC address from connecting to any AP in the site. Switch: The client is blocked by MAC address from sending or receiving network traffic. Gateway: The Security Appliance will not route traffic for the client's IP address. Selecting the Block list policy will automatically add the Reserve IP policy to the security firewall clients. - To specific SSID: Selectively apply captive portal authentication to specific_SSIDs on an AP. - Normal: The selected clients have no policies applied to them. - Reserve IP: The client is allowed by IPv4 address to connect to the site. This is the default policy. Select this to reserve/freeze the assigned dynamic IPv4 address to the client device. The security router client will be added to the Static DHCP table in the Site-wide > Configure > Security router > Interface > LAN interface configuration. The security firewall client will be added to the Static DHCP table in the Site-wide > Configure > Firewall > Interface > LAN interface configuration. Note: Removing the default Reserve IP policy will automatically show Normal.
All / Wireless / Wired	Select the type of clients that have been online during the selected time period. - All: Click this to show all clients that have been online during the selected time period. - Wireless: Click this to show all WiFi clients that have been online during the selected time period. - Wired: Click this to show all wired clients that have been online during the selected time period.
Search clients	Specify your desired filter criteria to filter the list of clients (Status, Manufacturer, Connected to, Band (for All, Access point clients, and Security router clients), VLAN, Policy).
N clients	This shows the number of clients (N) connected to the gateway in the site network.
Show Nebula devices as clients	This allows you to show or hide the client Nebula Device(s) in the Client list table (for All clients only). By default, this switch is ON for the sites created before the NCC 18.00 release. Otherwise, this switch is OFF for the sites created after the NCC 18.00 release.
Export	Click this button to save the client list as a CSV or XML file to your computer.
General fields Note: A '-' (dash) will show on the field with no value.	
	Select an entry's checkbox to select a specific client. Otherwise, select the checkbox in the table heading row to select all clients.

Table 29 Site-wide > Clients > Client list (continued)

LABEL	DESCRIPTION
Status	This shows whether the client is online (green) or offline (red), and whether the client is wired or wireless. • Clients connected to an Access Point are reported as wireless. • Clients connected to a Switch or Security Appliance are reported as wired.
Name	This shows the descriptive name of the client. By default, this is the client's MAC address. The client description can be obtained through the following: • User customized description • Hostname detected from client's LLDP (Link Layer Discovery Protocol) System Name • Hostname detected from the Nebula-managed access point • Hostname detected from the Nebula-managed Security Appliance. Click the name to display the individual client statistics. See wireless: Section 4.5.1 on page 280 and wired: Section 4.5.2 on page 282.
Connected to	This shows the name of the Nebula Device to which the client is connected in this site. Click the Nebula Device name to display the screen where you can view detailed information about the Nebula Device.
MAC address	This shows the MAC address of the non-WiFi7 client or the MLD MAC address of the WiFi7 client. Click the MAC address to display the individual client statistics. See wireless: Section 4.5.1 on page 280 and wired: Section 4.5.2 on page 282.
IPv4 address	This shows the IPv4 address of the client. By default, the field is blank. The client IPv4 address can be obtained through the following: • IPv4 address detected from client's LLDP (Link Layer Discovery Protocol) Management Address • IPv4 address detected from the Nebula-managed access point • IPv4 address detected from the Nebula-managed Security Appliance.
First seen	This shows the first date and time the client was discovered over the specified period of time.
Last seen	This shows the last date and time the client was discovered over the specified period of time.
Manufacturer	This shows the manufacturer of the client hardware.
Policy	This shows the security policy applied to the client.
Note	This shows additional information about the client.
User	This shows the name or the email address used to authenticate the wireless/wired clients.
Interface	This shows the interface of the Nebula Device to which the client is connected.
Band	This shows whether the SSID use either 2.4 GHz band, 5 GHz band, or the 6 GHz band.
Capability	This shows the WiFi standards supported by the client or the supported standards currently being used by the client.
SSID name	This shows the name of the Access Point and Security Router's WiFi network to which the client is connected.
Security	This shows the encryption method used to connect to the Access Point or Security Router.
Association time	This shows the time the client first associated with the Nebula Device's WiFi network.
Authentication	This shows the authentication method used for this client.
Channel	This shows the channel number currently used by the WiFi interface.


Table 29 Site-wide > Clients > Client list (continued)

LABEL	DESCRIPTION
Signal strength	This shows the RSSI (Received Signal Strength Indicator) of the client's WiFi connection, and an icon showing the signal strength. Icon default thresholds: • Green/5 blocks: signal is greater than -67 dBm, strong signal • Amber/4 blocks: signal -67 to -73 dBm, average signal • Amber/3 blocks: signal -74 to -80 dBm, below average signal • Red/2 blocks: signal is less than -80 dBm, weak signal
Port	This shows the port number of the Nebula Device the client is connected.
LLDP	This shows the LLDP (Link Layer Discovery Protocol) information received from the remote device.
VLAN	This shows the ID number of the VLAN to which the client belongs.
OS	This shows the operating system running on the client device, if known.
Rx rate	This shows the maximum transmission rate of the client.
Download	This shows the amount of data received by the Nebula Device's clients.
Upload	This shows the amount of data transmitted by the Nebula Device's clients.
Usage	This shows the amount of data consumed by the Nebula Device's clients.
Tx rate	This shows the maximum reception rate of the client.
	Click this icon to display a greater or lesser number of information about a specific client.

4.5.1 WiFi Client Details

Click a WiFi client entry in the Site-wide > Clients > Clients list screen to display individual client statistics.

Figure 56 Site-wide > Clients > Clients list: WiFi Client Details

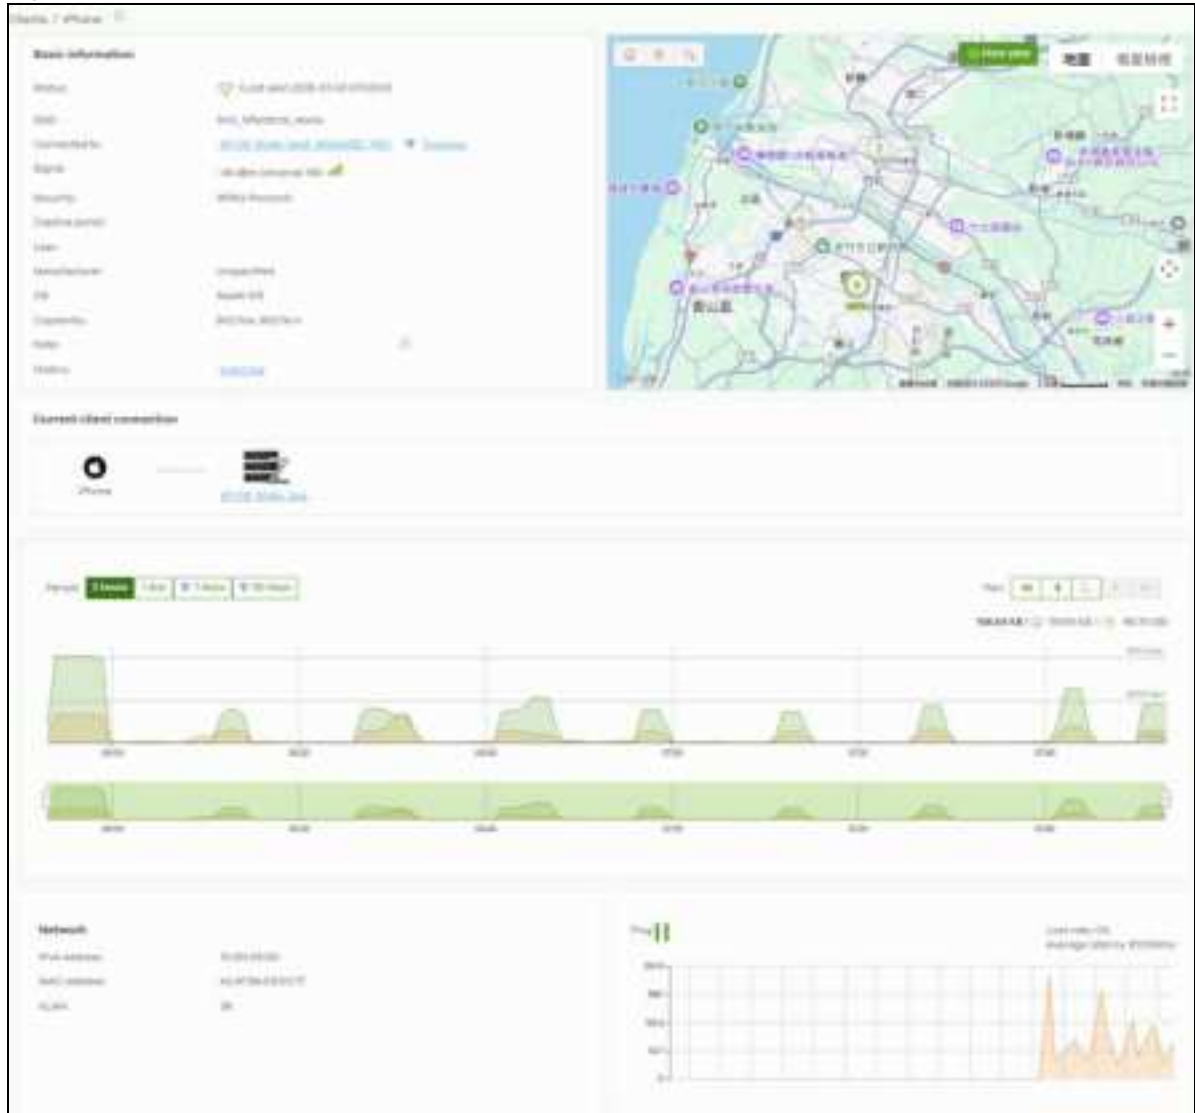

The following table describes the labels in this screen.

Table 30 Site-wide > Clients > Clients list: WiFi Client Details

LABEL	DESCRIPTION
Clients	Click the edit icon to change the client name.
Basic information	
Status	This shows whether the client is online (green), or goes offline (red). It also shows the last date and time the client was discovered.
SSID	This shows the name of the Access Point's WiFi network to which the client is connected.
Connected to	This shows the name of the Nebula managed Access Point to which the client is connected. Click the name to display the individual Access Point statistics. See Section 4.3.1.1 on page 237 . Click Topology to go to the Site-wide > Topology screen. See Section 4.2 on page 226 .

Table 30 Site-wide > Clients > Clients list: WiFi Client Details (continued)

LABEL	DESCRIPTION
Signal	This shows the RSSI (Received Signal Strength Indicator) of the client's WiFi connection, and an icon showing the signal strength. Icon default thresholds: - Green/5 blocks: signal is greater than -67 dBm, strong signal - Amber/4 blocks: signal -67 to -73 dBm, average signal - Amber/3 blocks: signal -74 to -80 dBm, below average signal - Red/2 blocks: signal is less than -80 dBm, weak signal
Security	This shows the encryption method used to connect to the Access Point.
Captive portal	This shows the web authentication method used by the client to access the network.
User	This shows the number of users currently connected to the network through the client device.
Manufacturer	This shows the manufacturer of the device connected to the Access Point.
OS	This shows the operating system running on the client device, if known.
Capability	This shows the WiFi standards supported by the client or the supported standards currently being used by the client.
Note	This shows additional information for the client. Click the edit icon to change it.
History	Click Event log to go to the Site-wide > Monitor > Access points > Event log screen.
Map	This shows the location of the client on the Google map.
Current client connection	This shows the Nebula Device(s) currently connecting to the client.
Top Application	Click Show info to view the following fields. Alternatively, click Hide info to hide the following fields.
#	This shows the ranking of the application.
Application	This shows the application name.
Category	This shows the category of the application, for example email, file sharing.
Usage	This shows the amount of data consumed by the application.
% Usage	This shows the percentage of usage for the application.
Period	Select to view the statistics in the past two hours, day, week or month.
Pan	Click to move backward or forward by two hours or one day.
y-axis	The y-axis shows the transmission speed of data sent or received by the client in kilobits per second (Kbps).
x-axis	The x-axis shows the time period over which the traffic flow occurred.
Network	
IPv4 address	This shows the IP address of the client.
MAC address	This shows the MAC address of the client.
VLAN	This shows the ID number of the VLAN to which the client belongs.
Ping	Click the button to ping the client's IP address from the Nebula AP to test connectivity.
Loss rate	This shows the rate of packet loss when you perform ping.
Average latency	This shows the average latency in ms when you perform ping.

4.5.2 Wired Client Details

Click a wired client's descriptive name in the Site-wide > Clients > Clients list screen to display individual client statistics.

Figure 57 Site-wide > Clients > Clients list: Wired Client Details



The following table describes the labels in this screen.

Table 31 Site-wide > Clients > Clients list: Wired Client Details

LABEL	DESCRIPTION
Clients	Click the edit icon to change the client name.
Basic information	
Status	This shows whether the client is online (green) or offline (red). It also shows the last date and time the client was discovered, and whether the client is wired or wireless.

Table 31 Site-wide > Clients > Clients list: Wired Client Details (continued)

LABEL	DESCRIPTION
Connected to	This shows the name of the Security Appliance to which the client is connected. Click the Nebula Device name to display the screen where you can view detailed information about the Nebula Device. Click Topology to go to the Site-wide > Topology screen. See Section 4.2 on page 226 .
User	This shows the number of users currently connected to the network through the client device.
Manufacturer	This shows the manufacturer of the client device.
OS	This shows the operating system running on the client device, if known.
Note	Enter information about this Nebula Device, for yourself or for other administrators.
History	Click Event log to go to the Site-wide > Monitor > Access points > Event log screen.
LLDP information	This shows the LLDP (Link Layer Discovery Protocol) information received from the remote device.
Network	
IPv4 address	This shows the IPv4 address of the client.
MAC address	This shows the MAC address of the client.
VLAN	This shows the VLAN ID for this client.
Interface	This shows the interface of the Nebula Device to which the client is connected.
Port	This shows the port number of the Nebula Device the client is connected.
Port forwarding	This shows the port forwarding rule configured for inbound traffic. Otherwise, it is none.
1:1 NAT IPs	This shows the local (LAN) IP address of the Nebula Device the client is connected.
Current client connection	This shows the Nebula Device(s) currently connecting to the client.
Top Application	Click Show info to view the following fields. Alternatively, click Hide info to hide the following fields.
#	This shows the ranking of the application.
Application	This shows the application name.
Category	This shows the category of the application, for example email, file sharing.
Usage	This shows the amount of data consumed by the application.
% Usage	This shows the percentage of usage for the application.
Move the cursor over the chart to see the transmission rate at a specific time.	
Zoom	Select to view the statistics in the past 2 hours, day, week, or month.
Pan	Click to move backward or forward by one day or week.
Ping	Click the button to ping the client's IP address from the gateway to test connectivity. Note: This button is grayed-out when client is not assigned an IP address.
Loss rate	This shows the rate of packet loss when you perform ping.
Average latency	This shows the average latency in ms when you perform ping.

4.5.3 WiFi Aid


The WiFi Aid screen displays the number of WiFi clients that cannot connect to a Nebula Device(s) in a site. It also displays the number of WiFi clients who cannot authenticate with a Nebula Device acting as a hotspot (captive portal) or who have timed out.

Use this screen to identify connection problems between WiFi clients and supported Nebula Device(s). Click Site-wide > Clients > WiFi Aid to access this screen.

Note: This feature is only available if you have the Nebula Pro Pack license.

Note: After a WiFi client successfully connects to the Nebula Device, NCC erases past connection failures.

Figure 58 Site-wide > Clients > WiFi Aid

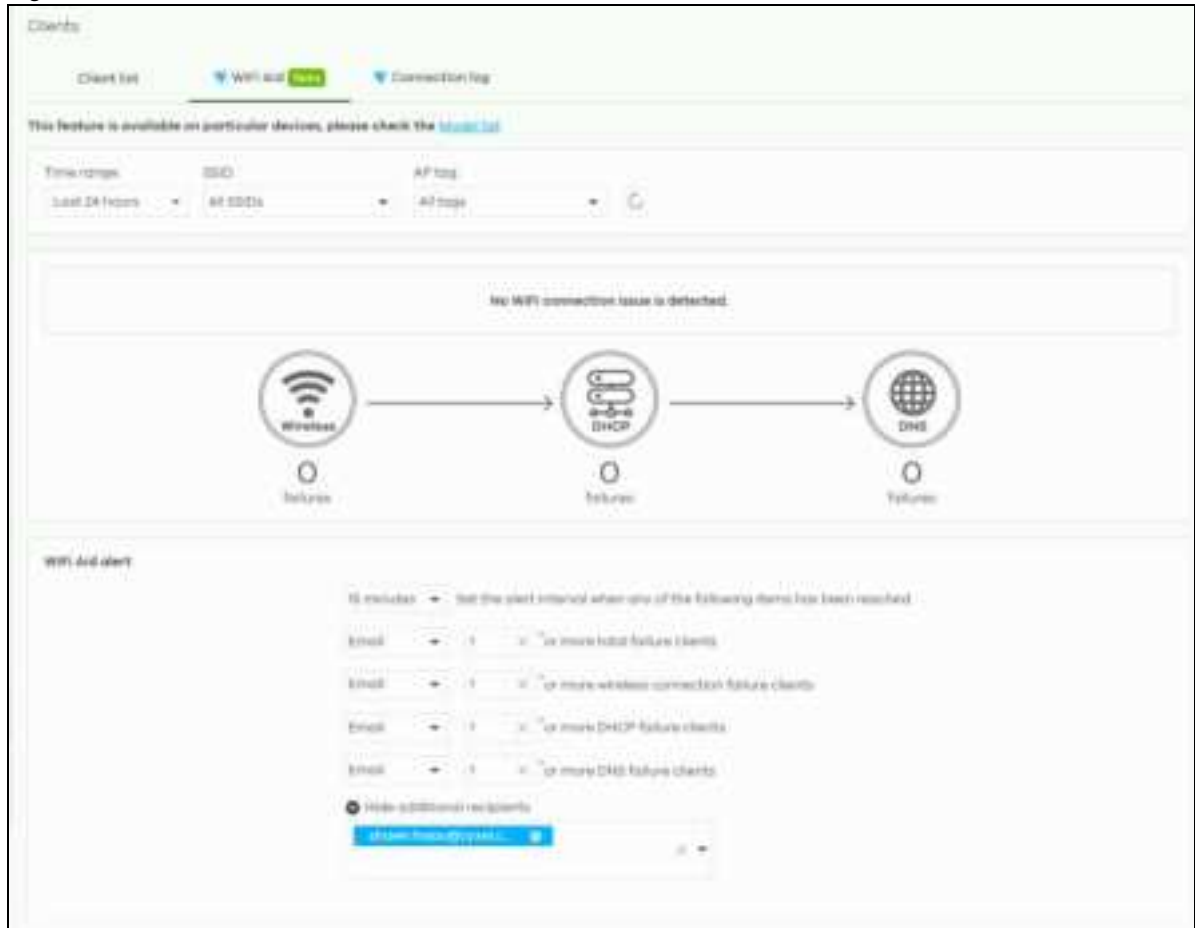

The following table describes the labels in this screen.

Table 32 Site-wide > Clients > WiFi Aid

LABEL	DESCRIPTION
WiFi Aid	Select a Time range. The overview will show all WiFi clients' connection issues in the Last hour, Last 12 hours, Last 24 hours, or Custom range (from 15 minutes to one day). Select to filter the overview of the client's WiFi connection issues based on one AP WiFi network (SSID), or all AP WiFi networks in this site (All SSIDs, default). Select to filter the overview of all WiFi clients' connection issues based on one AP tag, or All tags (default). This is the tag you create in Site-wide > Devices > Access points. Click the Refresh icon to update this screen.
Client devices affected by connection problems	This chart displays the number of WiFi clients in this site with the following connection problems. - Wireless (WiFi) failures. This displays the number of WiFi clients that could not connect to the Nebula Device. - Make sure the WiFi client is within transmission range of the Nebula Device. - Make sure the WiFi client connects to the correct SSID and enters the correct password. - Make sure the WiFi adapter on the WiFi client is working properly. - DHCP failures. This displays the number of WiFi clients that failed to receive an IP address due to DHCP failure/timeout with the DHCP server. - Increase the number of IP addresses that the DHCP server can allocate. - Shorten the DHCP lease time that the WiFi client can use the assigned IP address. - DNS failures. This displays the number of WiFi clients that failed DNS query due to DNS timeout from a DNS server. - Make sure the DNS server is working properly. If the Nebula Device is acting as the DHCP server or DNS server in this site, check the settings. For a Security Router, see Section 7.3.1.2 on page 451 for more information. For a Security Firewall, see Section 8.3.3.2 on page 520 for more information. For a Security Gateway, see Section 9.3.1.1 on page 641 for more information. For a Mobile Router, see Section 10.4 on page 692 for more information.
Client devices affected by captive portal problems	This chart displays the number of WiFi clients that could not connect to the Nebula Device acting as a hotspot. This includes entering the wrong user credentials or an authentication timeout.
Failed clients	This table displays the number of WiFi clients with failed connection attempts (WiFi connection/DHCP failures/DNS failures) and the number of total connection attempts. The list displays the WiFi client with the most connection failures first, in descending order. Clicking the hyperlink in the Client device column will direct you to the Site-wide > Monitor > Client: Client device screen. See Section 4.5 on page 277 for more information on this screen. Clicking the numerator hyperlink in the # Failed/total connections column will direct you to the Site-wide > Monitor > Connection log screen. See Section 4.8 on page 293 for more information on this screen. The Last failed issue column displays the reason for the last connection failure.
Failed connection by SSID	This table displays the number of WiFi clients with WiFi connection/DHCP failures/DNS failures in each WiFi network. The list displays the WiFi network with the most connection failures first, in descending order. Clicking the hyperlink in the # Failed connections column will direct you to the Site-wide > Monitor > Connection log screen. See Section 4.8 on page 293 for more information on this screen.

Table 32 Site-wide > Clients > WiFi Aid (continued)

LABEL	DESCRIPTION
Captive portal login issues by client	This table displays the list of WiFi clients with the corresponding number of failed hotspot authentication or timeout. The list displays the WiFi client that could not connect to the Nebula Device acting as a hotspot the most number of times first, in descending order. Clicking the hyperlink in the Client device column will direct you to the Site-wide > Clients > Client: Client device screen. See Section 4.5 on page 277 for more information on this screen. Clicking the hyperlink in the # Failed authentication column will direct you to the Site-wide > Monitor > Connection log screen. See Section 4.8 on page 293 for more information on this screen.
Failed connection by AP	This table displays the number of WiFi clients with WiFi connection/DHCP failures/DNS failures to each Nebula Device. The list displays the Nebula Device with the most connection failures first, in descending order. Clicking the hyperlink in the # Failed connection column will direct you to the Site-wide > Clients > Connection log screen. See Section 4.8 on page 293 for more information on this screen.
WiFi Aid alert	Specify how long (15/30 minutes / 1 hour) the NCC waits before generating and sending an alert. Select the items to have the NCC generate and send an alert by email when the following events has reached the threshold (maximum 999): • WiFi clients with failed connection attempts (WiFi connection / DHCP failures / DNS failures). • WiFi clients with failed WiFi connection attempts. • WiFi clients with DHCP failures. • WiFi clients with DNS failures.

4.6 Applications Usage

This screen displays usage statistics for applications used in the site. An application can be a specific app or service (for example, Facebook) or a general protocol (for example, HTTP). You can also block or restrict bandwidth for applications at the gateway, and for multiple applications by category.

Click Site-wide > Applications Usage to access this screen.

Note: You can view this screen by application or by category.

Figure 59 Site-wide > Applications usage: Application View


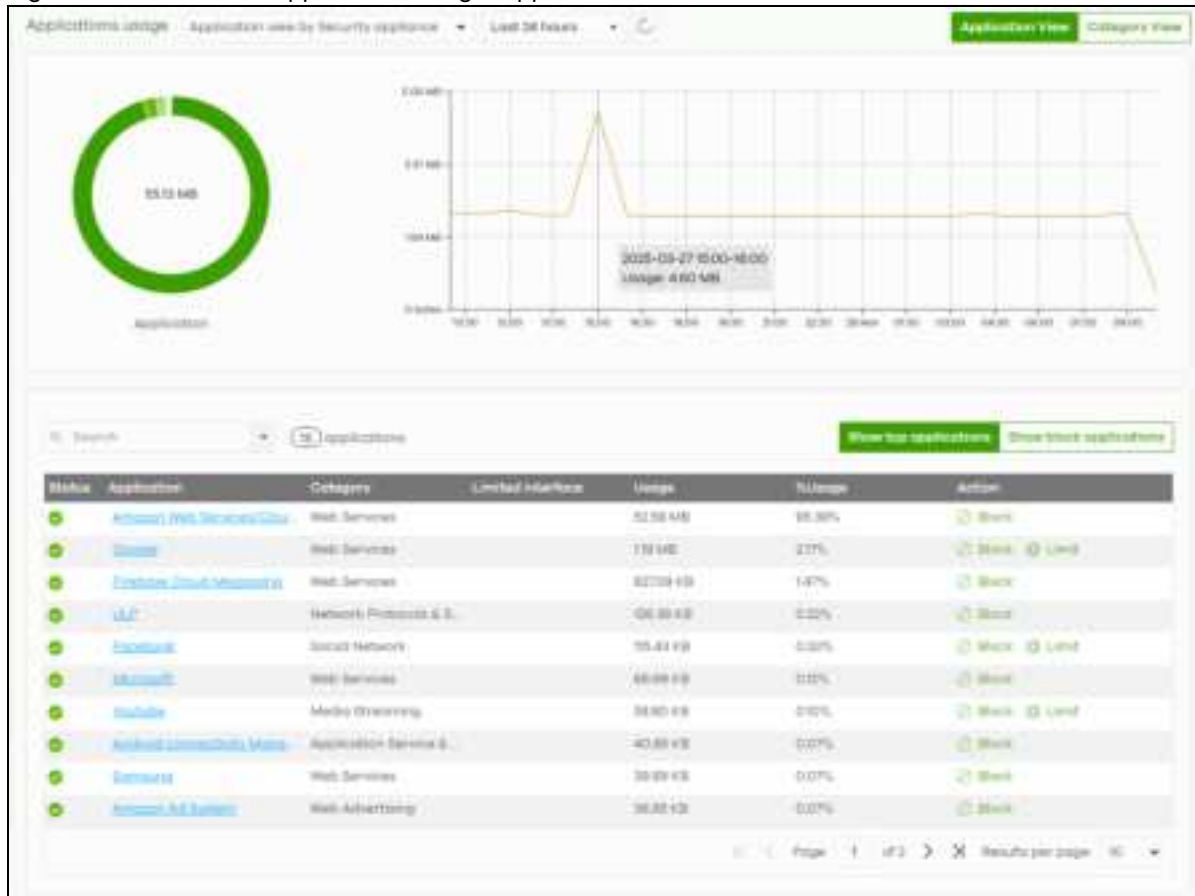


Figure 60 Site-wide > Applications usage: Category View

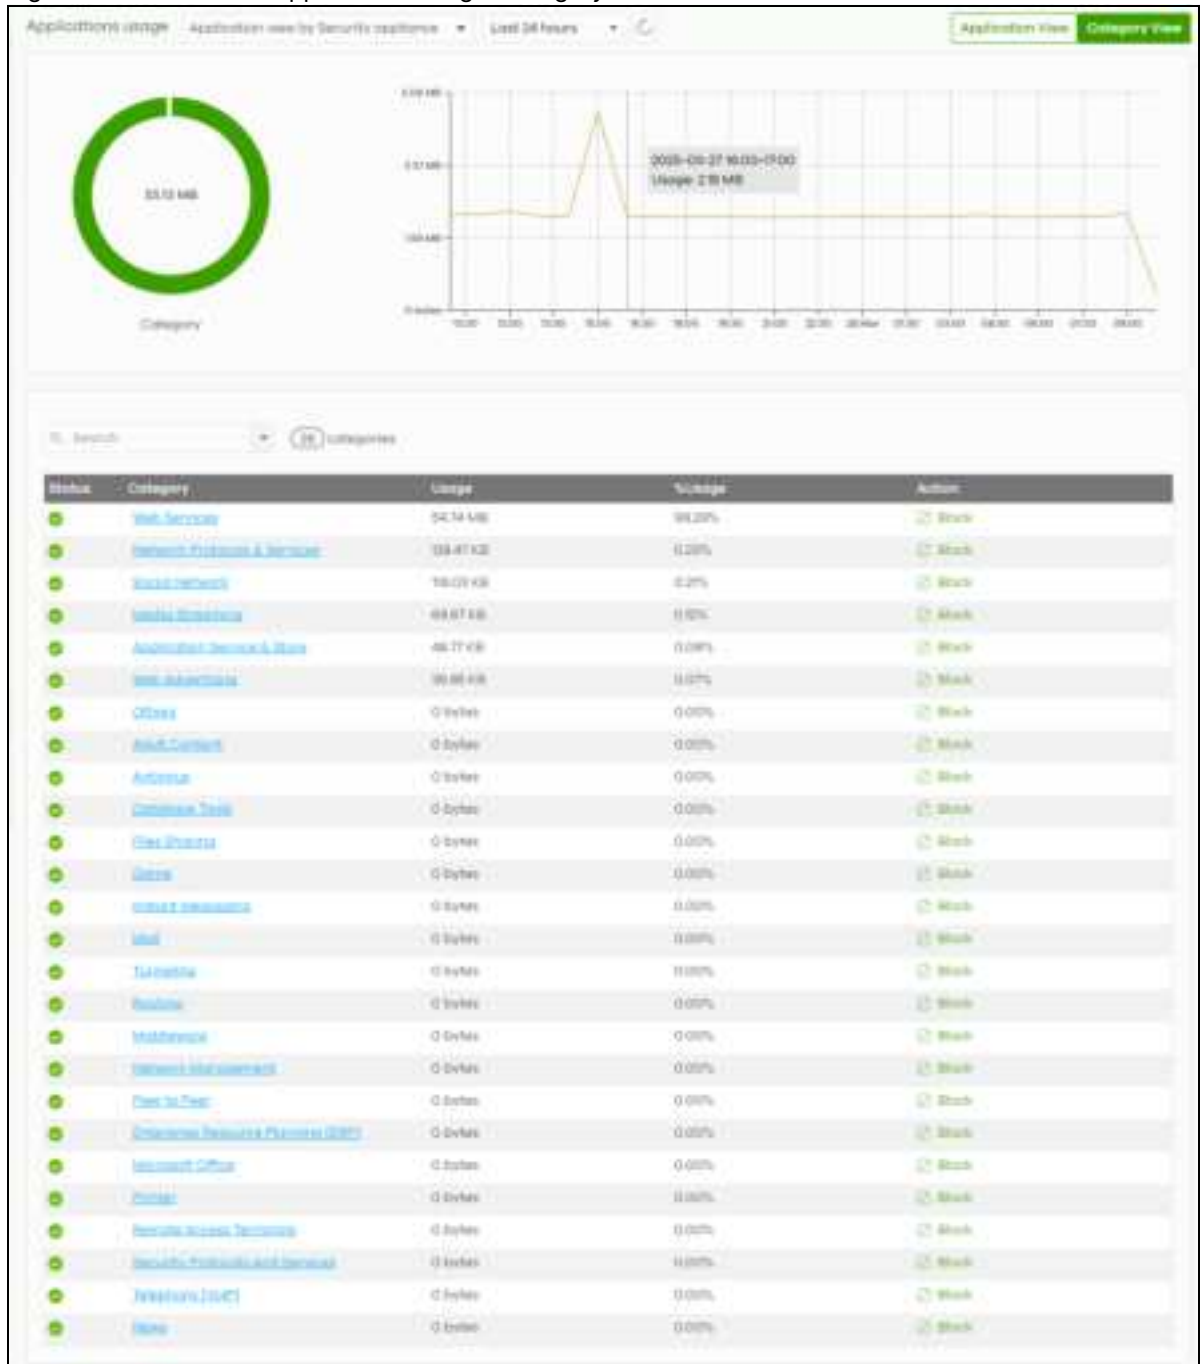

The following table describes the labels in this screen.

Table 33 Site-wide > Applications usage


LABEL	DESCRIPTION
Applications	In Application view, select to view all applications of Nebula Security Appliances / Nebula Access Points, or only applications with bandwidth or block policies applied to Nebula Security Appliances. In Category view, select to view all applications of Nebula Security Appliances / Nebula Access Points only. Select to view the report for the past day, week, or month. Alternatively, select Custom range... to specify a time period the report will span. You can also select the number of results you want to view in a table. 
	Click this button to reload the data-related frames on this page.
Category View / Application View	Click this button to view statistics by application or category.
y-axis	The y-axis shows the total amount of data used by applications or categories in the site.
x-axis	The x-axis shows the time period over which the data usage occurred.
Keyword	Enter a keyword to filter the list of log entries.
N applications/ categories	This shows the number of applications/categories (N) in the list.
Application/Category-View Fields	
Show top applications	Click this button to show the top applications by usage.
Show block applications	Click this button to show the blocked applications.
Status	This shows whether the application or category is blocked or allowed within the current site.
Application	This shows the application name.
Category	This shows the name of the category to which the application belongs. Note: Click this field in Category view to see all applications in the category.
Limited interface	This shows the bandwidth restriction policy for the application.
Usage	This shows the amount of data consumed by the application, or all applications in the category.
% Usage	This shows the percentage of usage for the application or category.
Action	Click Block to prevent usage of this application. Click Unblock to allow usage of this application. Click Limit to set the bandwidth for the application on the site's gateway. You can apply the restrictions per gateway interface, or for all interfaces. Note: At the time of writing, this item is not available for USG FLEX H Series.

4.7 Summary Report

Use this screen to view statistics for the Nebula Devices and networks in the selected site.

Click Site-wide > Summary report to access this screen.

Figure 61 Site-wide > Summary report

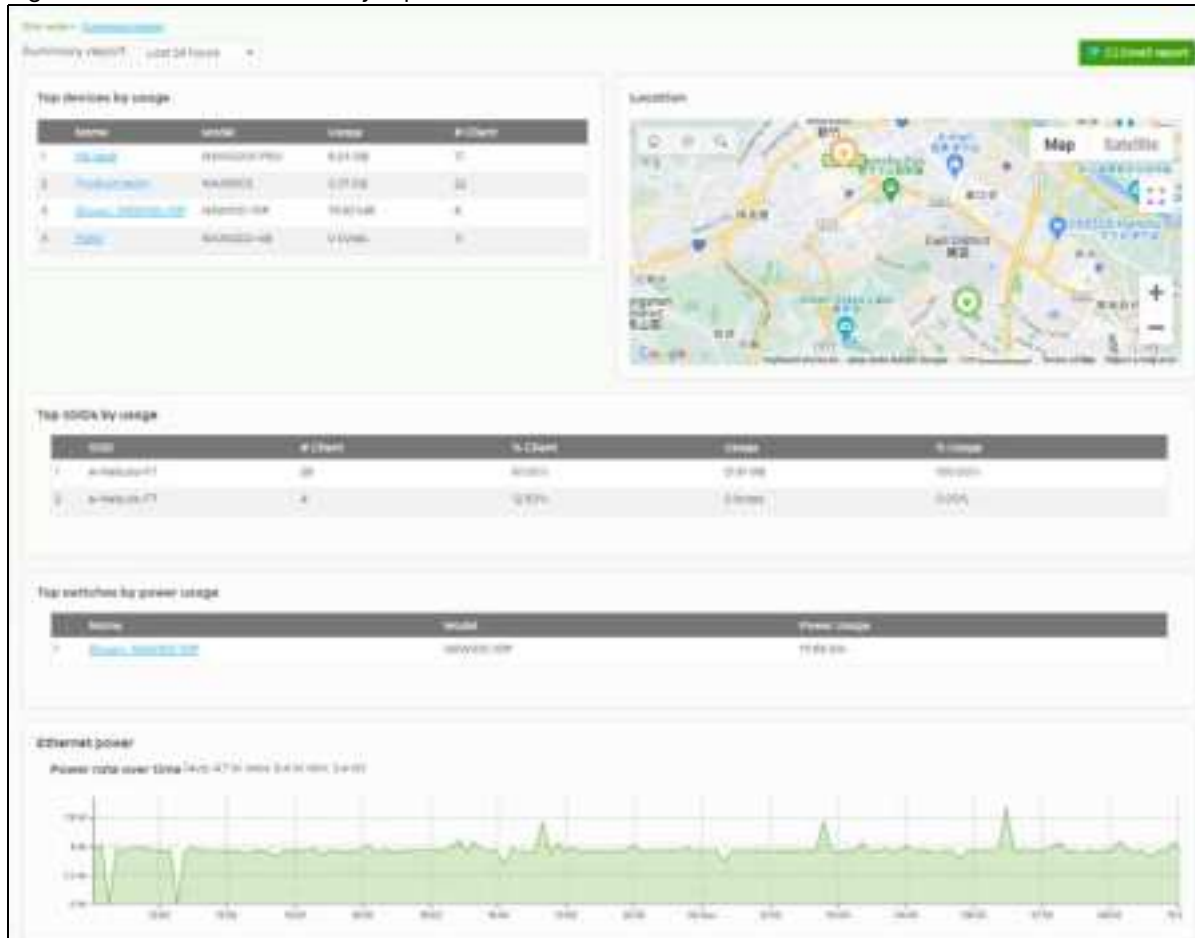

The following table describes the labels in this screen.

Table 34 Site-wide > Summary report

LABEL	DESCRIPTION
Summary report	Select to view the report for the past day, week or month. Alternatively, select Custom range... to specify a time period the report will span. You can also select the number of results you want to view in a table. 
Email report	Click this button to send summary reports by email, change the logo and set email schedules.
Top devices by usage	
Note: The Security Firewall(s) in Cloud Monitoring mode will not show here.	
	This shows the index number of the Nebula Device.
Name	This shows the descriptive name of the Nebula Device. You can click the name to view the Nebula Device details.
Model	This shows the model number of the Nebula Device.
Usage	This shows the amount of data that has been transmitted by or through the Nebula Device.
Client	This shows the number of clients currently connected to the Nebula Device.
Location	
This shows the location of the site's gateway device on the map.	
Note: The Security Firewall(s) in Cloud Monitoring mode will not show here.	
Top SSIDs by usage	
#	This shows the ranking of the SSID.
SSID	This shows the SSID network name.
Encryption	This shows the encryption method use by the SSID network.
# Client	This shows how many WiFi clients are connecting to this SSID.
% Client	This shows what percentage of associated WiFi clients are connecting to this SSID.
Usage	This shows the total amount of data transmitted or received by clients connecting to this SSID.
% Usage	This shows the percentage of usage for the clients connecting to this SSID.
Top switches by power usage	
#	This shows the ranking of the Nebula Switch.
Name	This shows the descriptive name of the Nebula Switch.
Model	This shows the model number of the Nebula Switch.
Power Usage	This shows the total amount of power consumed by the Nebula Switch's connected PoE devices during the specified period of time.
Ethernet power	This graph shows power used by all PoE Switch ports in the site within the specified time, in Watts.
Avg	This shows the average power consumption for all Switch ports.
Max	This shows the maximum power consumption of the Switch ports.

Table 34 Site-wide > Summary report (continued)

LABEL	DESCRIPTION
Min	This shows the minimum power consumption of the Switch ports.
y-axis	The y-axis shows how much power is used by all Switches in the site, in Watts.
x-axis	The x-axis shows the time period over which power consumption is recorded.

4.8 Monitor

Use the Monitor menus to check the site features logs and containment list of the Nebula Devices for the selected site. Please click the following links to go to the respective Nebula Devices Monitor menus.

- Access points ([Section 5.2 on page 332](#))
- Switches ([Section 6.2 on page 372](#))
- Security router ([Section 7.2 on page 441](#))
- Mobile router ([Section 10.4 on page 692](#))
- Firewall ([Section 8.2 on page 494](#))
- Security gateway ([Section 9.2 on page 628](#))

4.8.1 Containment List

This screen shows a list of clients that are currently blocked in the site by the CDR security service. You can use this screen to release blocked clients. Click Site-wide > Monitor > Containment list to access this screen.

Figure 62 Site-wide > Monitor > Containment list

The following table describes the labels in this screen.

Table 35 Site-wide > Monitor > Containment list

LABEL	DESCRIPTION
Search	Enter a MAC or IP address to filter the list of clients.
Time	This field displays the date and time CDR contained this client.
IP address	This field displays the IPv4 address of the client contained by CDR.

Table 35 Site-wide > Monitor > Containment list (continued)

LABEL	DESCRIPTION
MAC address	This field displays the MAC address of the client contained by CDR.
User	This field displays the user name of a client contained by CDR who has been authenticated for Internet access. The field is blank if user authentication is not required.
Event type	This field displays details on the category of signature that triggered CDR: Web Filtering, Anti-Malware or IPS (IDP).
Containment	This field displays if the client is blocked, quarantined or just triggers an alert.
Time Remaining (mins.)	This field displays the amount of time left until this client is released by CDR.
Connect to	This field displays the description of the Access Point or the interface of the Nebula Device that the contained client is connected to.
Release/Add to Exempt List	
Release	Select a client and then click this to release this client device from CDR containment.
Add to Exempt List	Select a client, select an IPv4 address or MAC address, and then click OK to release this client device from CDR containment. This client device's IP or MAC address is exempt from future CDR checking.

4.8.2 Vouchers

A voucher is a unique printable code that allows a user to authenticate with a WiFi network for a limited period of time. A user connects to the WiFi network's SSID and then enters the code in a captive portal. After a successful login, the expiry time of the voucher starts counting down.

Vouchers are useful in situations where you want to give individual users time-limited WiFi access. For example: A customer can purchase a voucher for 2 hours of Internet access in a hotel or coffee shop.

4.8.2.1 Using Vouchers

- 1 Go to Site-wide > Configure > WiFi SSID, and create a dedicated SSID for voucher-based WiFi access. For example, "Hotel_Guest_Network".
For details on configuring SSIDs, see [Section 5.3.1 on page 340](#).
- 2 Go to Site-wide > Configure > WiFi SSID, select the SSID, and then under Sign-in method select Voucher.
- 3 Go to Site-wide > Monitor > Vouchers > Settings to configure how the vouchers will look when printed. For details, see [Section 4.8.2.4 on page 297](#).
- 4 Go to Site-wide > Monitor > Vouchers, and then click Create to create one or more vouchers.

4.8.2.2 Vouchers Screen

This screen allows you to create and manage vouchers for WiFi network authentication.

Click Site-wide > Monitor > Vouchers to access this screen.

Figure 63 Site-wide > Monitor > Vouchers



The following table describes the labels in this screen.

Table 36 Site-wide > Monitor > Vouchers

LABEL	DESCRIPTION
Reset	Select one or more vouchers and then click this button to reset the vouchers back to their original states. Each voucher's status is set to Unused and time remaining is reset to the time configured in Duration.
Delete	Select one or more vouchers and then click this button to delete the vouchers.
Print	Select one or more vouchers and then click this button to print the vouchers.
Search	Use this field to search for vouchers, by voucher code, duration, and/or status.
Create	Click this button to create one or more vouchers. For details, see Section 4.8.2.3 on page 295 .
Export	Click this button to export the voucher table and all information in it to a CSV or XML file.
Voucher	This displays the voucher's unique authentication code.
Comments	This displays information about the voucher.
Duration	This displays how long the voucher is valid from when it is activated, in hours.
Remaining	This displays how much time is left before the voucher expires. NCC only starts counting this time after the voucher has been activated.
Expire in	This displays the date and time that the voucher will expire.
Status	This displays the current status of the voucher: Unused: The voucher has not yet been used for authentication. Active: A user has used the voucher for authentication. NCC has started counting down the duration. Expire: The voucher has reached the end of its duration period and can no longer be used. Delete: The voucher is unused and has reached the time set under Purge after (days). Note: NCC automatically deletes vouchers with the status Expire or Delete after 24 hours. You can see a history of these automatic deletions in the NCC event log.
Created	This displays the date and time that the voucher was created.

4.8.2.3 Create Vouchers Screen

Use this screen to create one or more new vouchers.

Figure 64 Site-wide > Monitor > Vouchers > Create

The screenshot shows a 'Create Vouchers' dialog box. It contains the following fields and controls:

- Quantity:** A text input field with the value '1'.
- Code length:** A text input field with the value '6'.
- Comment:** A text area for additional information.
- Valid period:** A section with two options:
 - Duration (hours):** A radio button that is selected, followed by a text input field with the value '12'.
 - Purge after (days):** A text input field with the value '30'.
- Expires on:** A radio button that is not selected, followed by a date and time picker.
- Print after created:** A checkbox that is checked.
- Save as default:** A checkbox that is not checked.
- Buttons:** 'Cancel' and 'Create' buttons at the bottom right.

The following table describes the labels in this screen.

Table 37 Site-wide > Monitor > Vouchers > Create

LABEL	DESCRIPTION
Quantity	Sets the number of vouchers you want to create. The valid range for this setting is 1 – 999.
Code length	Sets the length of the unique code on each voucher. The valid range for this setting is 6 – 10.
Comment	Enter information about the voucher that might be useful for other administrators.
Valid period	There are two ways to set your voucher's validity.
Duration (hours)	Sets how long the voucher is valid after it has been activated, in hours. The valid range for this setting is any whole number from 1 – 8760.
Purge after (days)	Sets how long a non-activated voucher is valid for, in days. The valid range for this setting is 1 – 180.
Expires on	Sets the date and time for the expiration of this voucher.
Print after created	Select this to print the vouchers immediately after clicking Create. Note: Before printing a voucher, select which SSID name to appear on the voucher when you have two or more SSIDs enabled on your site.
Save as default	Click this to make the settings on this page the default settings for new vouchers.

Note: Dynamic Personal Pre-Shared Keys (DPPSKs) also allow you to give individual users a printable password and time-limited WiFi access.

4.8.2.4 Voucher Settings Screen

Use this screen to change the voucher settings for the Nebula Device. Click Site-wide > Monitor > Voucher > Settings to access this screen.

Figure 65 Site-wide > Monitor > Voucher > Settings

The following table describes the labels in this screen.

Table 38 Site-wide > Monitor > Voucher > Settings

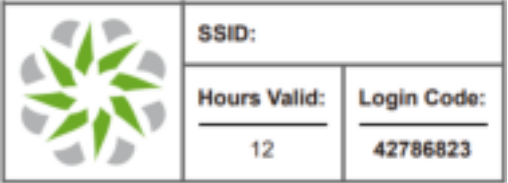
LABEL	DESCRIPTION
Voucher settings	Use these settings to configure how WiFi network authentication vouchers for this site look when printed.  For more information on vouchers, see Section 4.8.2 on page 294.
Duration text	Sets the text that precedes the duration on the voucher. The text must consist of 1 – 16 characters.
Date text	Sets the text that precedes the expiration date on the voucher. The text must consist of 1 – 16 characters.
Access text	Sets the text that precedes the voucher code on the voucher. The text must consist of 1 – 16 characters.
Show image	Sets whether to display an image at the top-left of the voucher. This image is optional.
Promotion text	Sets the promotional text on the voucher. This text is optional. The text must consist of 1 – 64 characters.
Promotion URL	Sets the promotional URL on the voucher. This URL is optional. The URL is displayed as a QR code on the voucher.

Table 38 Site-wide > Monitor > Voucher > Settings (continued)

LABEL	DESCRIPTION
Voucher image	This shows the uploaded image that will be displayed at the top-left of the voucher.
Upload an image	Click this button to upload an image from your local computer. The Choose File button appears. Click this button to locate the PNG (preferred for its transparency) / JPEG/GIF image file. The maximum image file size is 200 KB.
Replace this image	Click this button to change the uploaded image.
Remove this image	Click this button to delete the uploaded image.

4.8.3 Site Features Logs

This screen displays events from the Security Appliance within the selected site, such as CDR service events, alerts, and firmware management.

Click Site-wide > Monitor > Site features logs to access this screen.

Figure 66 Site-wide > Monitor > Site features logs

Cloud intelligent logs

Feature: Any Keyword: Any Category: All

From: 2021-03-01 14:18 To: 2021-03-31 14:18 UTC+8:00

Range: 30 days (the dates will be auto-adjusted)

< Newer Older > 40/98 Logs Export

Time	Feature	Category	Detail
2021-03-29 14:35:32	CDR	Block	Release contained client: Time's up: IP192.168.2.37, src: 192.168.2.37
2021-03-29 14:35:32	CDR	Block	CDR event detected: IP192.168.2.37, src: 192.168.2.37
2021-03-29 09:29:56	CDR	Block	Release contained client: Time's up: IP192.168.47160, src: 192.168.47160
2021-03-29 09:29:56	CDR	Block	CDR event detected: IP192.168.47160, src: 192.168.47160
2021-03-29 09:29:26	CDR	Block	Release contained client: Time's up: IP192.168.47160, src: 192.168.47160
2021-03-29 09:29:26	CDR	Block	CDR event detected: IP192.168.47160, src: 192.168.47160
2021-03-29 09:29:26	CDR	Block	Release contained client: Time's up: IP192.168.47160, src: 192.168.47160
2021-03-29 09:29:26	CDR	Block	CDR event detected: IP192.168.47160, src: 192.168.47160
2021-03-29 09:29:26	CDR	Block	Release contained client: Time's up: IP192.168.47160, src: 192.168.47160
2021-03-29 09:29:26	CDR	Block	CDR event detected: IP192.168.47160, src: 192.168.47160

The following table describes the labels in this screen.

Table 39 Site-wide > Monitor > Site features logs

LABEL	DESCRIPTION
Feature	Select the features that you want to view logs for.
Keyword	Enter a keyword to filter the list of log entries.
Category	Select the type of log messages you want to view. The available categories will depend on the features you have selected under Feature.

Table 39 Site-wide > Monitor > Site features logs (continued)

LABEL	DESCRIPTION
Range/Before	Select filtering options, set a date, and then click Search to filter log entries by date. Range: Display log entries from the first specified date to the second specified date. Before: Display log entries from the beginning of the log to the selected date.
Reset filters 	Click this to return the search criteria to the previously saved time setting.
Search	Click this to update the list of logs based on the search criteria.
Newer/Older	Click to sort the log messages by most recent or oldest.
N Logs	This shows the number of log messages (N) in the list.
Export	Click this button to download the log list as a CSV or XML file to your computer.
Time	This shows the date and time when the log was recorded. It uses the local time set for the site at Site-wide > Configure > Site settings.
Feature	Select the feature that created the log message.
Category	This shows the type of log message, for example "Block". The available categories will depend on the feature.
Detail	This shows the details of the event. Note: Click the Nebula Device name link for an Auto configuration recovery alert to go to Site-wide > Devices > Switches: Switch Details screen for more information.
	Click this icon to display a greater or lesser number of configuration fields.

4.9 Configure

Use the Configure menus to set the WiFi security settings for Nebula Devices of the selected site. Please click the following links to go to the respective Nebula Devices Configure menus.

- Access points ([Section 5.3 on page 340](#))
- Switches ([Section 6.3 on page 387](#))
- Security router ([Section 7.3 on page 446](#))
- Mobile router ([Section 10.2 on page 684](#))
- Firewall ([Section 8.3 on page 503](#))
- Security gateway ([Section 9.3 on page 636](#))

4.9.1 Alert Settings

Use this screen to set which alerts and reports are created and emailed. You can also set the email addresses to which an alert is sent. Click Site-wide > Configure > Alert settings to access this screen.

Note: NCC's Smart Alert Engine uses knowledge of network topology and cross-device functionality to only generate alerts for unexpected events. This helps avoid unnecessary emails and notifications.

For example, an Access Point is receiving power from a PoE switch. If the Access Point loses power because its Ethernet cable is disconnected, NCC generates an alert. If the Access Point loses power because the Switch has a PoE schedule that disables power to the Access Point, NCC does not generate an alert.

Figure 67 Site-wide > Configure > Alert settings

Alert settings

Recipient

☐ All site administrators
☐ Email to all site administrators

☐ Custom email recipient

System alerts

Alert Aggregation

☐ Aggregate device offline/online alerts within 5 minutes into 1 notification when "No-APF push" is selected

Wired

Example: 60 minutes after AP goes offline
☒ Hide additional recipients

Wi-Fi APs On

60 minutes: Set the alert interval when any of the following items has been reached

Deadline: 30 or more total failure clients
 Deadline: 30 or more wireless connection failure clients
 Deadline: 30 or more DHCP failure clients
 Deadline: 30 or more DNS failure clients

☒ Hide additional recipients

Switches

Example: 60 minutes after Switches goes offline
☒ Hide additional recipients

N-App push: notification after blocking member goes offline
☒ Hide additional recipients

Example: 60 minutes Any switch port push down
☒ Hide additional recipients

Deadline: 5 minutes after Switches hardware abnormal is detected On
☒ Hide additional recipients

Port selection

Email: 60 minutes when any of the following reasons has been reach:
☒ Hide additional recipients

☒ Storm guard
☒ Cable health
☒ PoE detection
☒ Bandwidth pulse -Port bandwidth has exceeded 22%
☒ Loop and BPDU watch On

Security appliance	Disable ☐ 60 minutes after the appliance goes offline ☒ Hide additional recipients E.g. redacted@your.com
	Disable ☐ Any DHCP lease pool is exhausted ☒ Hide additional recipients E.g. redacted@your.com
	Disable ☐ A redundant SD-WAN connection is established or disconnected ☒ Hide additional recipients E.g. redacted@your.com
	Disable ☐ WAN connectivity status changed ☒ Hide additional recipients E.g. redacted@your.com
Mobile router	Disable ☐ 60 minutes after the mobile router goes offline ☒ Hide additional recipients E.g. redacted@your.com
Accessary	Disable ☐ 60 minutes after the accessory goes offline ☒ Hide additional recipients E.g. redacted@your.com
Other	Disable ☐ Configuration settings are changed ☒ Hide additional recipients E.g. redacted@your.com
Security alerts	
CCW component	Disable ☐ To receive container alerts ☒ Hide additional recipients E.g. redacted@your.com
SecuReporter	
Notification mode	Disable ☐ To receive security alerts by SecuReporter ☒ Hide additional recipients E.g. redacted@your.com
Email subject	(Optional; maximum character is 64)
Email description	(Optional; maximum character is 255)
Notification interval	1 hour Select notification interval if events were triggered

[illegible]

The following table describes the labels in this screen.

Table 40 Site-wide > Configure > Alert settings

LABEL	DESCRIPTION
Recipient	
All site administrators	Select this to send alerts by email to all site administrators for the current site. Note: Only the site administrators with Full privilege can receive the alerts.
Custom email recipient	Enter the email addresses to which you want to send alerts.
System alerts	
Alert Aggregation	Alert aggregation combines offline/online alerts within a 5 minutes time frame into a single alert notification when In-app push in the notification type is selected.
Wireless	Specify how long in minutes (5/10/15/30/60) the NCC waits before generating and sending an alert when an AP becomes offline. For each alert, you can set how to receive alert notifications: - Email: Alert notifications are sent by email to configured administrators, custom email recipients, and additional recipients. - In-app push: Alert notifications are sent to site administrators who are logged into the Nebula Mobile app. This type of notification is not available for some features. - Both: Alert notifications are sent by email and app notification. - Disable: No alerts are sent.
Show additional recipients	Depending on your configuration on the notification type, add additional user accounts who will receive email notifications for the alert.
Hide additional recipients	Do not show the additional user accounts who will receive email and/or in-app notifications for the alert.

Table 40 Site-wide > Configure > Alert settings (continued)

LABEL	DESCRIPTION
WiFi Aid	Specify how long (15/30 minutes / 1 hour) the NCC waits before generating and sending an alert. Select the items to have the NCC generate and send an alert by email when the following events has reached the threshold (maximum 999): • WiFi clients with failed connection attempts (WiFi connection / DHCP failures / DNS failures). • WiFi clients with failed WiFi connection attempts. • WiFi clients with DHCP failures. • WiFi clients with DNS failures. For each alert, you can set to receive alert notifications through email: • Email: Alert notifications are sent by email to configured administrators, custom email recipients, and additional recipients. • Disable: No alerts are sent.
Show additional recipients	Depending on your configuration on the notification type, add additional user accounts who will receive email notifications for the alert.
Hide additional recipients	Do not show the additional user accounts who will receive email and/or in-app notifications for the alert.
Switches	Specify how long in minutes (5/10/15/30/60) the NCC waits before generating and sending an alert when a port or a Switch or a stacking member goes offline, when the Switch temperature rises above the threshold, or the fan is functioning above the normal speed. For each alert, you can set how to receive alert notifications: • Email: Alert notifications are sent by email to configured administrators, custom email recipients, and additional recipients. • In-app push: Alert notifications are sent to site administrators who are logged into the Nebula Mobile app. This type of notification is not available for some features. • Both: Alert notifications are sent by email and app notification. • Disable: No alerts are sent.
Show additional recipients	Depending on your configuration on the notification type, add additional user accounts who will receive email notifications for the alert.
Hide additional recipients	Do not show the additional user accounts who will receive email and/or in-app notifications for the alert.
Port advisor	Specify how long in minutes (15/30/60) the NCC waits before generating and sending an alert when a storm guard, cable health, PoE detection, bandwidth pulse, loop guard and BPDU watch event occurs on a port or a Switch or a stacking member. See Section 6.2.5 on page 382 for more information on Port advisor. In Bandwidth pulse, set the bandwidth usage threshold in percent (60/75/80/85/90/95) for NCC to send an alert. For each alert, you can set how to receive alert notifications: • Email: Alert notifications are sent by email to configured administrators, custom email recipients, and additional recipients. • In-app push: Alert notifications are sent to site administrators who are logged into the Nebula Mobile app. This type of notification is not available for some features. • Both: Alert notifications are sent by email and app notification. • Disable: No alerts are sent.
Show additional recipients	Depending on your configuration on the notification type, add additional user accounts who will receive email notifications for the alert.
Hide additional recipients	Do not show the additional user accounts who will receive email and/or in-app notifications for the alert.

Table 40 Site-wide > Configure > Alert settings (continued)

LABEL	DESCRIPTION
Security Appliance	Specify how long in minutes (5/10/15/30/60) the NCC waits before generating and sending an alert when a Security Appliance goes offline, there are more requests for IP addresses than what is available in the pool, a VPN connection is established or disconnected, or the WAN connection status has changed. For each alert, you can set how to receive alert notifications: • Email: Alert notifications are sent by email to configured administrators, custom email recipients, and additional recipients. • In-app push: Alert notifications are sent to site administrators who are logged into the Nebula Mobile app. This type of notification is not available for some features. • Both: Alert notifications are sent by email and app notification. • Disable: No alerts are sent.
Show additional recipients	Depending on your configuration on the notification type, add additional user accounts who will receive email notifications for the alert.
Hide additional recipients	Do not show the additional user accounts who will receive email and/or in-app notifications for the alert.
Mobile router / Accessory	Specify how long in minutes (5/10/15/30/60) the NCC waits before generating and sending an alert when a mobile router / accessory goes offline. For each alert, you can set how to receive alert notifications: • Email: Alert notifications are sent by email to configured administrators, custom email recipients, and additional recipients. • In-app push: Alert notifications are sent to site administrators who are logged into the Nebula Mobile app. This type of notification is not available for some features. • Both: Alert notifications are sent by email and app notification. • Disable: No alerts are sent.
Show additional recipients	Depending on your configuration on the notification type, add additional user accounts who will receive email notifications for the alert.
Hide additional recipients	Do not show the additional user accounts who will receive email and/or in-app notifications for the alert.
Other	Specify whether to send an alert each time configuration settings are changed.
Show additional recipients	Depending on your configuration on the notification type, add additional user accounts who will receive email notifications for the alert.
Hide additional recipients	Do not show the additional user accounts who will receive email and/or in-app notifications for the alert.
Security alerts	
CDR containment	Specify whether to send an email alert each time a CDR block or containment action is triggered.
Show additional recipients	Add additional user accounts who will receive email notifications for the alert.
Hide additional recipients	Do not show the additional user accounts who will receive email notifications for the alert.
SecuReporter	
Notification mode	For each alert, you can set how to receive alert notifications: • Email: Alert notifications are sent by email to configured administrators, custom email recipients, and additional recipients. • In-app push: Alert notifications are sent to site administrators who are logged into the Nebula Mobile app. This type of notification is not available for some features. • Both: Alert notifications are sent by email and app notification. • Disable: No alerts are sent.
Show additional recipients	Add additional user accounts who will receive email and in-app notifications for the alert.

Table 40 Site-wide > Configure > Alert settings (continued)

LABEL	DESCRIPTION
Hide additional recipients	Do not show the additional user accounts who will receive email and/or in-app notifications for the alert.
Email subject	Enter an email title here.
Email description	Enter a description of the emails to be sent here. For example, maybe these emails are just for high severity events.
Notification interval	Specify how often to receive a SecuReporter report. If no security events were triggered, SecuReporter will not send a report.
Event severity	Select the severity level of events that will be included in each report.
Event threshold	This table lists the events that trigger SecuReporter security alerts. You can set the alert threshold. For example, X count(s) of malware/virus attack within 5 minutes means SecuReporter includes a report in the email if the total number of combined malware and virus detection events exceed X within a 5 minute time period.

4.9.2 Firmware Management

Use this screen to schedule a firmware upgrade. You can make different schedules for different types of Nebula Devices in the site or create a schedule for a specific Nebula Device. Click Site-wide > Configure > Firmware management to access these screens.

4.9.2.1 Firmware Management Overview Screen

Use this screen to schedule a firmware upgrade for each Nebula Device type. You can make different schedules for different types of Nebula Devices in the site. Click Site-wide > Configure > Firmware management > Overview to access this screen.

Figure 68 Site-Wide > Configure > Firmware management > Overview

Firmware management

Overview Devices

Access point [What's this?](#)

Up to date

Settings

Upgrade policy: ☒ Auto upgrade at: Monthly ☐ 10:00 ☐ UTC+8:0

☐ Upgrade at: 2024-07-05 10:00 UTC+8:0

☐ Upgrade now

☐ Ignore upgrade

Firmware type: Stable

Switch [What's this?](#)

Up to date

Settings

Upgrade policy: ☒ Auto upgrade at: Monthly ☐ 10:00 ☐ UTC+8:0

☐ Upgrade at: 2024-07-05 10:00 UTC+8:0

☐ Upgrade now

☐ Ignore upgrade

Firmware type: Stable

Security gateway [What's this?](#)

Up to date

Settings

Upgrade policy: ☒ Auto upgrade at: Monthly ☐ 10:00 ☐ UTC+8:0

☐ Upgrade at: 2024-07-05 10:00 UTC+8:0

☐ Upgrade now

☐ Ignore upgrade

Firmware type: Stable

Mobile router [What's this?](#)

No devices

Accessory [What's this?](#)

Upgrade available

Upcoming upgrade: Jul 08 2024 at 10:00 AM UTC+8:0 [Upgrade now](#)

Settings

Upgrade policy: ☒ Auto upgrade at: Monthly ☐ 10:00 ☐ UTC+8:0

☐ Upgrade at: 2024-07-08 10:00 UTC+8:0

☐ Upgrade now

☐ Ignore upgrade

Firmware type: Stable

The following table describes the labels in this screen.

Table 41 Site-Wide > Configure > Firmware management > Overview

LABEL	DESCRIPTION																		
Access point / Switch / Security router / Firewall or Security Gateway / Mobile router / Accessory																			
Upgrade available	This shows the status of the Nebula Device's firmware in your site. - Up to date is displayed if all the Nebula Device(s) of a particular type (for example, all Switches) in your site are using the latest firmware version. - Upgrade available is displayed if there is firmware update available for any of the Nebula Device(s) of a particular type in your site. Click Devices to see a table list of your Nebula Device(s) that can receive this upgrade. Applicable devices Firmware Type Status <table><thead><tr><th>Device type</th><th>Model</th><th>MAC address</th><th>SN</th><th>Current version</th><th>Schedule upgrade version</th></tr></thead><tbody><tr><td>Access point</td><td>WA455-AC-HD</td><td>8F:64:3D:4F:1A:45</td><td>000000000000</td><td>V6.30(A8T4)</td><td>V6.30(A8T4)</td></tr><tr><td>Access point</td><td>WA455-AC-HD</td><td>8F:64:3D:4F:1A:45</td><td>000000000000</td><td>V6.30(A8T4)</td><td>V6.30(A8T4)</td></tr></tbody></table> Close - Locked is displayed if all the Nebula Device(s) of a particular type (for example, all Switches) in your site are using a specific version of firmware that Zyxel customer support is monitoring for troubleshooting. - No devices is displayed if there is no Nebula Device of a particular type (for example, Mobile Router) registered in your site.	Device type	Model	MAC address	SN	Current version	Schedule upgrade version	Access point	WA455-AC-HD	8F:64:3D:4F:1A:45	000000000000	V6.30(A8T4)	V6.30(A8T4)	Access point	WA455-AC-HD	8F:64:3D:4F:1A:45	000000000000	V6.30(A8T4)	V6.30(A8T4)
Device type	Model	MAC address	SN	Current version	Schedule upgrade version														
Access point	WA455-AC-HD	8F:64:3D:4F:1A:45	000000000000	V6.30(A8T4)	V6.30(A8T4)														
Access point	WA455-AC-HD	8F:64:3D:4F:1A:45	000000000000	V6.30(A8T4)	V6.30(A8T4)														

Table 41 Site-Wide > Configure > Firmware management > Overview (continued)

LABEL	DESCRIPTION
Settings	Create a schedule for each Nebula Device type. The following Upgrade policy are available: • Select Auto upgrade at to create a recurring schedule. With a recurring schedule, NCC will check and install the firmware when a new firmware release is available for each Nebula Device type. • Select Upgrade at to install the firmware at a specific date and time (up to 1 month from now) when firmware update is available for each Nebula Device type. Note: Due to network bandwidth and number of Nebula Devices per site, not all Nebula Devices may get the firmware upgrade on the specified date/time. This field's setting will change to the Auto upgrade at schedule after performing the firmware update. • Select Upgrade now to immediately install the firmware for each Nebula Device type. Then select the Firmware type (Stable or Latest (default)). Note: This button is selectable only when there is firmware update available. This field's setting will return to it's previous setting (Auto upgrade at or Ignore upgrade) after performing the firmware update. • Select Ignore upgrade if you choose not to install the firmware. Note: NCC will still perform a mandatory upgrade if the Nebula Device's firmware have security vulnerabilities, and/or lack key performance improvements. When the schedule for Auto upgrade at is earlier than the mandatory upgrade schedule, then the Auto upgrade at schedule has priority.
Firmware type	Set the type of firmware to be installed for each Nebula Device type. • Select Stable to install a firmware that may not have the latest features but has passed Zyxel internal and external testing. • Select Latest to install the most recently release firmware with the latest features, improvements, and bug fixes. Note: This field is hidden when Ignore upgrade is selected in Settings. We generally recommend updating to the Latest firmware type so that you get the latest features, improvements, and bug fixes. All firmware releases are thoroughly tested internally by our engineers. If your requirements are such that you prefer fewer updates, go with the Stable firmware type.

4.9.2.2 Firmware Management Devices Screen

Use this screen to make different firmware upgrade schedules for different types of Nebula Devices in the site. Click Site-wide > Configure > Firmware management > Devices to access this screen.

Note: While installing a firmware update, the Nebula Device will continue to operate normally until it reboots. The reboot will take 3 to 5 minutes, so it is best to pick an upgrade time that has minimal impact on your network.

Figure 69 Site-wide > Configure > Firmware management > Devices

Site-wide > Configure > **Firmware management**

Firmware management

Overview Devices

Status Device type Tag Model Current version Firmware status Firmware type Availability Locked

Any Any Any Any Any Any Any Any Any

Upgrade now Upgrade selected Rollback 1 selected of 7 devices

Status	Device type	Serial	MAC address	SN	Current version	Firmware status	Availability	Firmware type	Upgrade url
	Switch	NA02000-001	00:0C:29:00:00:00	0000-00000000	V00000000000000000000	Good	Upgrade available	Stable	No
	Access point	NA00000-001	00:0C:29:00:00:00	0000-00000000	V00000000000000000000	Custom	Upgrade available	General Availability	No
	Access point	NA00000-002	00:0C:29:00:00:00	0000-00000000	V00000000000000000000	Warning	Upgrade available	General Availability	No
	Access point	NA00000-003	00:0C:29:00:00:00	0000-00000000	V00000000000000000000	Custom	Upgrade available	Stable	No
	Access point	NA00000-004	00:0C:29:00:00:00	0000-00000000	V00000000000000000000	Custom	Upgrade available	General Availability	No
	Access point	NA00000-005	00:0C:29:00:00:00	0000-00000000	V00000000000000000000	Custom	Upgrade available	General Availability	No
	Access point	NA00000-006	00:0C:29:00:00:00	0000-00000000	V00000000000000000000	Custom	Upgrade available	General Availability	No

The following table describes the labels in this screen.

Table 42 Site-wide > Configure > Firmware management > Devices

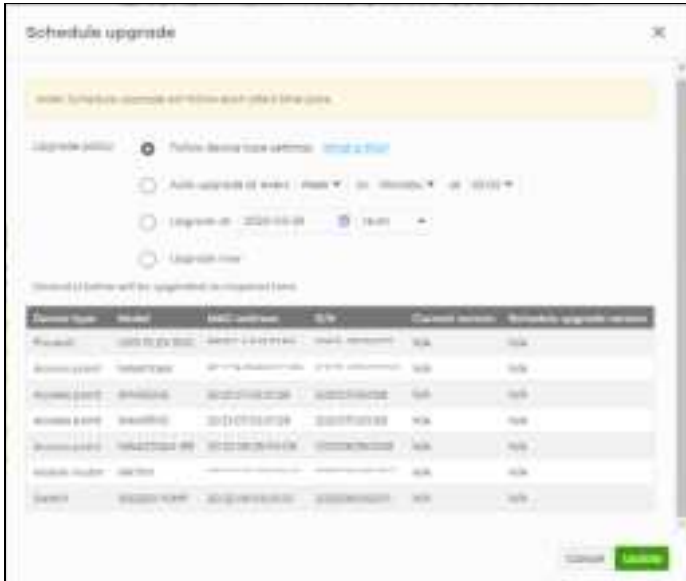
LABEL	DESCRIPTION
Upgrade Now	Click this to immediately install the firmware on the selected Nebula Devices. This button is selectable only when there is firmware update available for all the selected Nebula Devices. Then, select the Firmware type to be installed. • Select Stable to install a firmware that may not have the latest features but has passed Zyxel internal and external testing. • Select Latest to install the most recently release firmware with the latest features, improvements, and bug fixes. 
Schedule Upgrade	Click this to pop up a window where you can create a new schedule for the selected Nebula Devices. You can select to upgrade firmware according to the site-wide schedule configured for the Nebula Device type in the site, create a recurring schedule, edit the schedule with a specific date and time when firmware update is available for all the selected Nebula Devices, or immediately install the firmware. With a recurring schedule, the NCC will check and perform a firmware update when a new firmware release is available for any of the selected Nebula Devices. If the NCC service is downgraded from Nebula Professional Pack to Nebula Base, the Nebula Devices automatically changes to adhere to the site-wide schedule. 

Table 42 Site-wide > Configure > Firmware management > Devices (continued)

LABEL	DESCRIPTION
Reset	Select one or more Nebula Devices, and then click Reset to allow the Nebula Devices to follow the site-wide firmware management settings.
Status	This shows the status of the Nebula Device. - Green: The Nebula Device is online and has no alerts. - Amber: The Nebula Device has alerts. - Red: The Nebula Device is offline. - Gray: The Nebula Device has been offline for 7 days or more.
Device type	This shows the type of the Nebula Device.
Model	This shows the model number of the Nebula Device.
Tag	This shows the tag created and added to the Nebula Device.
Name	This shows the descriptive name of the Nebula Device.
MAC address	This shows the MAC address of the Nebula Device.
S/N	This shows the serial number of the Nebula Device.
Current version	This shows the version number of the firmware the Nebula Device is currently running. It shows N/A when the Nebula Device goes offline and its firmware version is not available.
Firmware status	The status shows Good if the Nebula Device is running a Stable / General Availability / Latest firmware type. The status shows Warning if the Nebula Device is running a firmware type older than Stable, a newer firmware is available, and immediate action is recommended. The newer firmware may contain security enhancements, new features, and performance improvements. The status shows Critical if the Nebula Device is running a firmware type older than Stable, a newer firmware is available, and immediate action is required. The firmware may have security vulnerabilities and/or lack key performance improvements. The status shows Custom if the Nebula Device is running a firmware with specialized features that is not available to the general public. The status changes to Upgrading... after you click Upgrade Now to install the firmware immediately.
Firmware type	This shows Stable when the installed firmware may not have the latest features but has passed Zyxel internal and external testing. This shows Latest when the installed firmware is the most recent release with the latest features, improvements, and bug fixes. This shows General Availability when the installed firmware is a release before Latest, but is still undergoing Zyxel external testing. This shows Dedicated when the installed firmware is locked and Zyxel support is monitoring. Contact Zyxel customer support if you want to unlock the firmware in order to upgrade to a later one. This shows Beta when the installed firmware is a release version for testing the latest features and is still undergoing Zyxel internal and external testing. This shows N/A when the Nebula Device is offline and its firmware status is not available.
Availability	This shows whether the firmware on the Nebula Device is Up to date, there is firmware update available for the Nebula Device (Upgrade available), or a specific version of firmware has been installed by Zyxel customer support (Locked). Contact Zyxel customer support if you want to unlock the firmware in order to upgrade to a later one.

Table 42 Site-wide > Configure > Firmware management > Devices (continued)

LABEL	DESCRIPTION
Upgrade scheduled	This shows the date and time when a new firmware upgrade is scheduled to occur. Otherwise, it shows Follow upgrade time and the Nebula Device sticks to the site-wide schedule or No when the firmware on the Nebula Device is up-to-date or the Nebula Device goes offline and its firmware status is not available. A lock icon displays if a specific schedule is created for the Nebula Device, which means the Nebula Device firmware will not be upgraded according to the schedule configured for all Nebula Devices in the site.
Last upgrade time	This shows the last date and time the firmware was upgraded on the Nebula Device.
Schedule upgrade version	This shows the version number of the firmware which is scheduled to be installed.
	Click this icon to display a greater or lesser number of configuration fields.

4.9.3 Cloud Authentication

Use this screen to view and manage the user accounts which are authenticated using the NCC user database, rather than an external RADIUS server. Click Site-wide > Configure > Cloud authentication to access these screen.


Note: The changes you made in this screen apply only to the current site. To change the cloud authentication settings for all sites in the organization, go to Organization-wide > Organization-wide manage > Cloud authentication (see [Section 4.9 on page 299](#)).

Note: For more information on user account types, see [Section 12.4.7.1 on page 763](#).

4.9.3.1 Cloud Authentication User Screen

Use this screen to view and manage regular NCC network user accounts. Click Site-wide > Configure > Cloud authentication > User to access this screen.

Figure 70 Site-wide > Configure > Cloud authentication > User

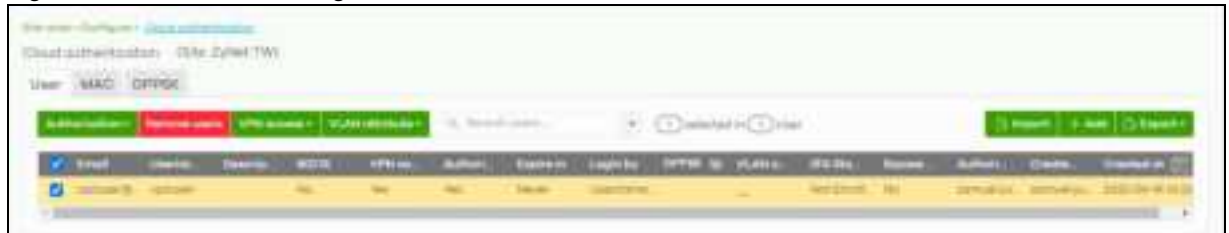

The following table describes the labels in this screen.

Note: Some of the actions on this screen are only available if your administrator account has full access to the organization.

Table 43 Site-wide > Configure > Cloud authentication > User

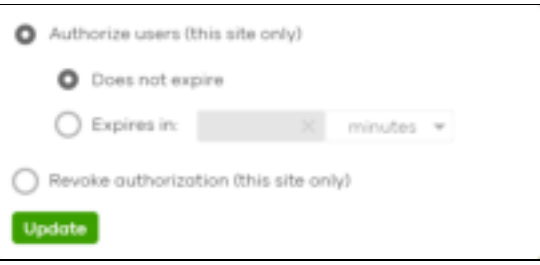
LABEL	DESCRIPTION
Authorization	Select one or more than one user account and click this button to configure the authorization settings for the selected user accounts. 
Remove users	Select one or more than one user account and click this button to remove the selected user accounts.
VPN access	Select one or more than one user account and click this button to configure whether the accounts can be used to connect to the organization's networks through VPN.
VLAN attribute	Select one or more than one user account and click this button to assign the users to a specific VLAN ID, or clear the VLAN ID. Then click Update. 
Search users	Enter a key word as the filter criteria to filter the list of user accounts.
N User	This shows how many user accounts (N) match the filter criteria and how many user accounts of the selected type are created in total.
Import	Click this button to create user accounts in bulk by importing a complete list of all new users in an Excel file. 
Add	Click this button to create a new user account. See Section 4.9.3.2 on page 315.
Export	Click this button to save the account list as a CSV or XML file to your computer.
Email	This shows the email address of the user account.
Username	This shows the user name of the user account.

Table 43 Site-wide > Configure > Cloud authentication > User (continued)

LABEL	DESCRIPTION
Description	This shows the descriptive name of the user account.
802.1X	This shows whether 802.1X (WPA-Enterprise) authentication is enabled on the account.
VPN access	This shows whether the accounts can be used to connect to the organization's networks through VPN.
Authorized	This shows whether the user has been authorized in this site or not.
Expire in (UTC)	This shows the date and time that the account expires. This shows -- if authentication is disabled for this account. This shows Never if the account never expires. This shows Multiple value if the account has different Expire in values across different sites.
Login by	This shows whether the user needs to log in with the email address and/or user name.
DPPSK	This shows the account's dynamic personal pre-shared key (DPPSK), if one is set.
VLAN assignment	This field is available only when the account type is set to User. This shows the VLAN assigned to the user.
2FA Status	This shows whether the account has set up two-factor authentication yet.
Bypass 2FA	This shows whether the account is allowed to bypass two-factor authentication, if two-factor authentication is enabled on a captive portal or VPN gateway.
Authorized by	This shows the email address of the administrator account that authorized the user. If the account has been authorized by different administrators across different sites, it shows Multiple value.
Created by	This shows the email address of the administrator account that created the user.
Created at	This shows the date and time that the account was created.
	Click this icon to display a greater or lesser number of configuration fields.

4.9.3.2 Add/Edit User Account

In the Site-wide > Configure > Cloud authentication > User screen, click Add to create a new user account or double-click an existing account entry to modify the account settings.

Figure 71 Site-wide > Configure > Cloud authentication > User: Create/Update user

Create user

Account type: USER

Email:

Username:

Description:

Password: Generate

DPPSK: Generate

802.1X: ☐ Allow to use WPA-Enterprise to access network

VPN Access: ☐ Allow to use Remote VPN access

Authorized:

Login by:

VLAN assignment: Beta

Two-Factor Auth(2FA): ☐ Bypass two-factor authentication.

Email to user: ☒ Email account information to user.

Close Print Create user

The following table describes the labels in this screen.

Table 44 Site-wide > Configure > Cloud authentication > User: Create/Update user

LABEL	DESCRIPTION
Account type	This shows the type of the account.
Email	Enter the email address of the user account, which is used to log into the networks.
Username	Enter a user name for this account. Note: This field is optional if Login by is set to Email.
Description	Enter a descriptive name for the account.
Password	Enter a password for this user account. It can consist of 4 – 31 alphanumeric characters. You can click Generate to have the NCC create a password for the account automatically.
DPPSK	Enter a dynamic personal pre-shared key (DPPSK) for this DPPSK user account, if you want to be able to authenticate using DPPSK in addition to a user name and password. It can consist of 8 – 31 alphanumeric characters. You can click Generate to have the NCC create a DPPSK for the account automatically.
802.1X	Select this to allow the account to be used for single sign-on (SSO) network and WiFi authentication using 802.1X (WPA-Enterprise).

Table 44 Site-wide > Configure > Cloud authentication > User: Create/Update user (continued)

LABEL	DESCRIPTION
VPN access	Select this to allow the account to be used to connect to the organization's networks through VPN.
Authorized	Set whether you want to authorize the user of this account.
Expires	This field is available only when the user is authorized. Click Expires in to specify the number of minutes/hours/days/weeks the user can be logged into the network in one session before the user of this account has to log in again. Note: If the account has been set with different Expires in values across different sites, it will show Multiple value and the Change link. Otherwise, select Does not expire and the user of this account will never be logged out.
Login by	Select whether the user needs to log in with the email address and/or user name.
VLAN assignment	This allows you to assign a user to a specific VLAN based on the user credentials instead of using a RADIUS server.
Two-Factor Auth (2FA)	This shows whether the account is allowed to bypass two-factor authentication, if two-factor authentication is enabled on a captive portal or VPN gateway.
Email to user	Select this to send a copy of the information on this screen to the account email address, after the account has been created.
Close	Click this button to exit this screen without saving.
Print	Click this button to print the account information.
Create user	Click this button to save your changes and close the screen.

4.9.3.3 Cloud Authentication MAC Screen

Use this screen to view and manage Nebula Device user accounts, used for MAC-based authorization. Click Site-wide > Configure > Cloud Authentication > MAC to access this screen.

Figure 72 Site-wide > Configure > Cloud Authentication > MAC

MAC address	Description	Account type	Authorized	Authorized by	Expires in	Created at
00:0A:8C:3E:37:90	00:0A:8C:3E:37:90	MAC	All sites	00:0A:8C:3E:37:90	Never	2019-11-01 06:40
00:0E:D7:0-A2:5C	274	MAC	All sites	00:0E:D7:0-A2:5C	Never	2019-03-16 13:15

The following table describes the labels in this screen.

Note: Some of the actions on this screen are only available if your administrator account has full access to the organization.

Table 45 Site-wide > Configure > Cloud Authentication > MAC

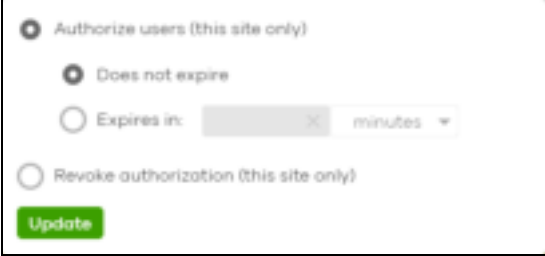
LABEL	DESCRIPTION
Authorization	Select one or more than one account and click this button to configure the authorization settings for the selected user accounts. 
Remove users	Select one or more than one user account and click this button to remove the selected user accounts.
Search users	Enter a key word as the filter criteria to filter the list of user accounts.
N User	This shows how many user accounts (N) match the filter criteria and how many user accounts of the selected type are created in total.
Import	Click this button to create user accounts in bulk by importing a complete list of all new users in an Excel file. 
Add	Click this button to create a new user account. See Section 4.9.3.4 on page 319 .
Export	Click this button to save the account list as a CSV or XML file to your computer.
MAC address	This shows the MAC address of the user account.
Description	This shows the descriptive name of the user account.
Account type	This shows the type of user account: USER, MAC, or DPPSK.
Authorized	This shows whether the user has been authorized in this site or not.
Authorized by	This shows the email address of the administrator account that authorized the user. If the account has been authorized by different administrators across different sites, it shows Multiple value.
Expire in	This shows the date and time that the account expires. This shows -- if authentication is disabled for this account. This shows Never if the account never expires. This shows Multiple value if the account has different Expire in values across different sites.


Table 45 Site-wide > Configure > Cloud Authentication > MAC (continued)

LABEL	DESCRIPTION
Created at	This shows the date and time that the account was created.
	Click this icon to display a greater or lesser number of configuration fields.

4.9.3.4 Cloud Authentication DPPSK Screen

Use this screen to view and manage DPPSK network user accounts. Click Site-wide > Configure > Cloud Authentication > DPPSK to access this screen.

Figure 73 Site-wide > Configure > Cloud Authentication > DPPSK

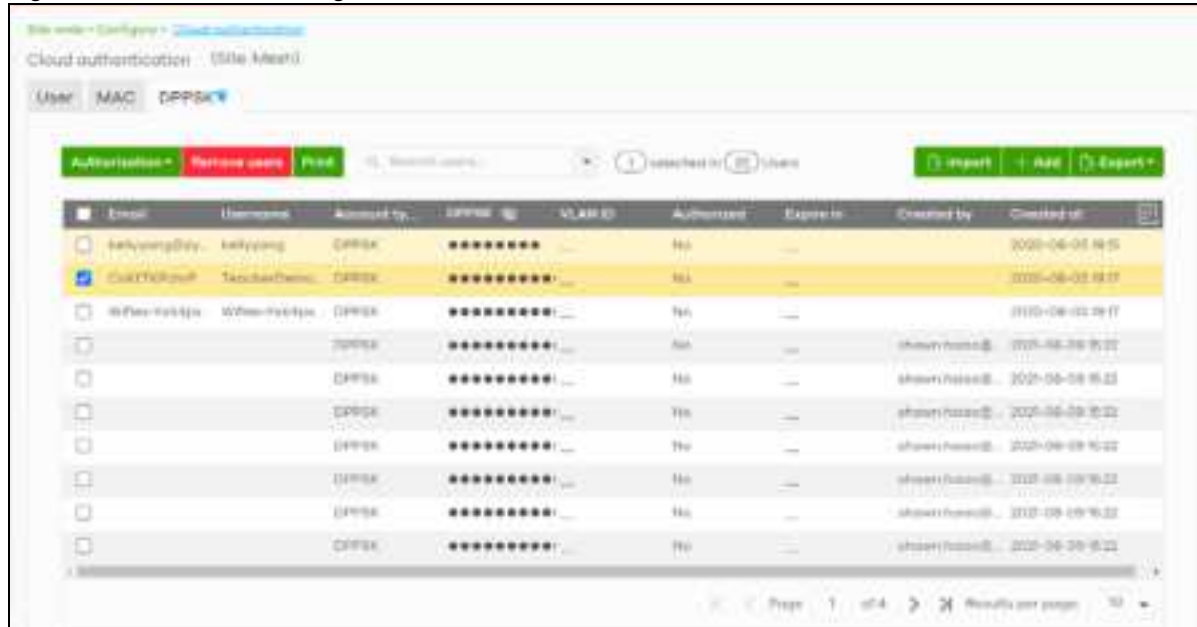

The following table describes the labels in this screen.

Table 46 Site-wide > Configure > Cloud Authentication > DPPSK

LABEL	DESCRIPTION
Authorization	Select one or more than one user account and click this button to configure the authorization settings for the selected user accounts. ☒ Authorize users (this site only) ☒ Does not expire ☐ Expires in: minutes ☐ Revoke authorization (this site only) Update
Remove users	Select one or more than one user account and click this button to remove the selected user accounts.

Table 46 Site-wide > Configure > Cloud Authentication > DPPSK (continued)

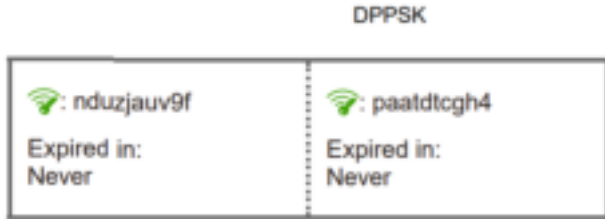
LABEL	DESCRIPTION
Print	Click this button to print the unique dynamic personal pre-shared key (DPPSK) and expiry time of each selected user account. The account details can be cut into cards, and then given to users in order to grant them WiFi network access. 
Search users	Enter a key word as the filter criteria to filter the list of user accounts.
N Users	This shows how many user accounts (N) match the filter criteria and how many user accounts of the selected type are created in total.
Import	Click this button to create user accounts in bulk by importing a complete list of all new users in an Excel file. tutorial to import. There is a 'Browse' button and a dashed box for 'Or drag file here.'. A 'Close' button is at the bottom right." data-bbox="303 408 758 576"/>
Add	Click this button to create a single new account, or a batch of accounts. - Single DPPSK: See Section 12.4.7.7 on page 772. - Batch create DPPSK: See Section 12.4.7.8 on page 773.
Export	Click this button to save the account list as a CSV or XML file to your computer.
Email	This shows the email address of the user account.
Username	This shows the user name of the user account.
Account type	This shows the type of user account: USER, MAC, or DPPSK.
DPPSK	This shows the account's dynamic personal pre-shared key (DPPSK).
VLAN ID	This shows the VLAN assigned to the account.
Description	This shows the descriptive name of the user account.
Authorized	This shows whether the user has been authorized in this site or not.
Expire in	This shows the date and time that the account expires. This shows -- if authentication is disabled for this account. This shows Never if the account never expires. This shows Multiple value if the account has different Expire in values across different sites.
Created by	This shows the email address of the administrator account that created the user.

Table 46 Site-wide > Configure > Cloud Authentication > DPPSK (continued)

LABEL	DESCRIPTION
Created at	This shows the date and time that the account was created.
	Click this icon to display a greater or lesser number of configuration fields.

4.9.4 Collaborative Detection & Response

Collaborative Detection & Response (CDR) allows you to detect wired and WiFi clients that are sending malicious traffic in your network and then block or quarantine traffic coming from them. In this way, malicious traffic is not spread throughout the network. Secure policies can block malicious traffic for specific traffic flows, but CDR can block malicious traffic from the sender. Malicious traffic is identified using a combination of Web Filtering, Anti-Malware and IPS (IDP) signatures.

Note: To use the CDR feature, a Gold/UTM Security Pack license and a Nebula Pro Pack license is required.

The following table shows the CDR feature with/without a Gold/UTM Security Pack license.

Table 47 CDR Feature With/Without a Gold/UTM Security Pack License

CDR	WITHOUT GOLD/UTM SECURITY PACK	WITH GOLD/UTM SECURITY PACK	AFTER GOLD/UTM SECURITY PACK EXPIRES
With Nebula Pro Pack	CDR will not function. CDR settings will be grayed-out.	CDR full functionality.	CDR will disable its full functionality. - CDR fields in an "Enabled/Disabled" state will show "Enabled/Disabled" but grayed-out. - The Policy rule settings, Quarantine VLAN, and Exempt list will be kept in Site-wide > Configure > Collaborative detection & response. - Previously quarantined clients will be released.
With Nebula Base/Plus Pack	CDR will not function. CDR settings will be grayed-out.	User is notified that CDR is with partial functionality only. - CDR event detection is available - CDR triggered events are logged in the Site-wide > Monitor > Site features logs - Containment actions (Alert/Block/Quarantine) is not available - Previously blocked/quarantined clients will be released in Site-wide > Monitor > Containment list.	CDR will disable its full functionality. - CDR fields in an "Enabled/Disabled" state will show "Enabled/Disabled" but grayed-out. - The Policy rule settings, Quarantine VLAN, and Exempt list will be kept in Site-wide > Configure > Collaborative detection & response. - Previously quarantined clients will be released.

Figure 74 Site-wide > Configure > Collaborative Detection & Response

Collaborative detection & response

Enable

Policy

Policy	Event type	Occurrence	Duration (seconds)	Contentment
Malware	Malware detected	5	5 - 60	Alert
IPS	Intrusion detected	5	5 - 60	Alert
Web Filtering	Connect to a blocked web site	5	5 - 60	Alert

Deployment

Deploy

No logs

Notification message

Please see network administrator for more details. Please contact network administrator.

Feedback external URL

Contentment period

Status

Quarantine

Exempt list

Please allow 5-10 minutes for changes to take effect.

The following table describes the labels in this screen.

Table 48 Site-wide > Configure > Collaborative Detection & Response

LABEL	DESCRIPTION
Collaborative detection & response	
Enable	Select this checkbox to activate Collaborative Detection & Response. Make sure you have active Web Filtering, Anti-Malware, IPS (Intrusion Prevention System), and CDR (Collaborative Detection & Response) licenses.
Policy	

Table 48 Site-wide > Configure > Collaborative Detection & Response (continued)

LABEL	DESCRIPTION
Category	Category refers to the signature type that identified the malicious traffic: Malware (Anti-Malware, Anti-Virus), IDP (IPS), and Web Threat (Content Filter and URL Threat Filtering).
Event Type	This displays some details on the category of malicious traffic detected.
Occurrence (1–100)	Enter the number of security events that need to occur within the defined Duration to trigger a CDR Containment action.
Duration (1–1440)	Enter the length of time in minutes the event should occur from a client the Occurrence number of times to trigger a CDR Containment action. For example, Occurrence is set to 10, and Duration is set to 100. If the NCC detects 10 or more occurrences of malicious traffic in less than 100 minutes, then CDR Containment is triggered.
Containment	Select the action to be taken when the number of security events exceed the threshold within the defined duration. Alert: Select this if you just want to issue a notification in NCC. Block: Select this if you want to block traffic from a suspect client at the NCC, or from a suspect WiFi client at the AP connected to the NCC. Traffic is still broadcast to other clients in the same subnet. A 'notification' web page is displayed when this action is triggered. Quarantine: Select this if you want to isolate traffic from a suspect client at the NCC in a quarantine VLAN. Traffic is not broadcast to other clients in the same subnet. A 'notification' web page is displayed to the client when this action is triggered.
Containment	Use this section to configure the selection containment action.
General	
Theme	Configure the CDR block page. - Click the Preview icon at the upper right corner of a theme image to display the block page in a new frame. - Click the Copy icon to create a new custom theme (block page).
Logo	This shows the logo image that you uploaded for the customized block page. Click Choose File and specify the location and file name of the logo graphic or click Browse to locate it. You can use the following image file formats: GIF, PNG, or JPG. File size must be less than 200 KB, and images larger than 244 x 190 will be resized.
Notification message	Enter the message that is displayed on the CDR block page. The client is redirected here when a Block or Quarantine action is triggered. For example, "Malicious traffic is coming from your device so traffic is temporarily stopped. Please contact the network administrator." Redirect external URL: Enter a URL in "http://domain" or "https://domain" format to an external notification page. The client is redirected here when a Block or Quarantine action is triggered. Make sure the external notification page is accessible from the NCC.
Redirect external URL	Enable this setting, and then enter a URL in "http://domain" or "https://domain" format to an external notification page. The client is redirected to this page when a Block or Quarantine action is triggered. You can download a sample block page by clicking Download. Note: The external notification page must be accessible from NCC.
Containment Period	Enter how long the client should be blocked or quarantined. This should be at least twice the DHCP server lease time in order to prevent false positives.
Block	Enter how long a suspect client should be blocked or quarantined. You can enter from 1 minute to 1 day (1,440 minutes). 0 means the suspect is blocked forever until released in Site-wide > Monitor > Containment list.
Block wireless client	Select this to have traffic from the suspect client blocked at the AP. Clear this to have traffic from the suspect client blocked at the NCC.
Quarantine	

Table 48 Site-wide > Configure > Collaborative Detection & Response (continued)

LABEL	DESCRIPTION
Quarantine VLAN	Click Set to configure a VLAN in order to isolate traffic from suspect clients. Traffic from a suspect client is broadcast to all members in the VLAN.
Exempt list	Enter IPv4 and /or MAC addresses of client devices that are exempt from CDR checking.

4.9.5 Quarantine Interface Configuration

Click Set at Site-wide > Configure > Collaborative detection & response > Containment > Quarantine to configure the VLAN and interface used to isolate a client when a quarantine action is triggered. The following screen appears.

Note: Only IPv4 addresses can be used in quarantine VLANs.

Figure 75 Site-wide > Configure > Collaborative detection & response > Containment > Quarantine

The screenshot shows the 'Quarantine interface configuration' dialog box. It is organized into three main sections:

- Interface Properties:**
 - Interface name:** A text field containing 'Quarantine'.
 - Port group:** A dropdown menu showing 'VLAN Group 1'.
 - VLAN ID:** A text field containing '44'.
- IP address assignment:**
 - IP address:** A text field containing '10.254.252.1'.
 - Subnet mask:** A text field containing '255.255.255.0'.
- DHCP server:**
 - IP pool start address:** A text field containing '10.254.252.2'.
 - Pool size:** A text field containing '255'.

At the bottom right of the dialog are two buttons: 'Cancel' and 'Ok'.

Each field is explained in the following table.

Table 49 Site-wide > Configure > Collaborative detection & response > Containment > Quarantine

LABEL	DESCRIPTION
Interface Properties	
Interface Name	This field is read-only. The default name is "Quarantine".
Port group	Select the name of the port group to which you want the interface to belong.
Base Port	Select the Ethernet interface on which the VLAN interface runs.
VLAN ID	Enter the VLAN ID. This 12-bit number uniquely identifies each VLAN. Allowed values are 1–4094. (0 and 4095 are reserved)

Table 49 Site-wide > Configure > Collaborative detection & response > Containment > Quarantine

LABEL	DESCRIPTION
IP address assignment	This is a 3-bit field within a 802.1Q VLAN tag that is used to prioritize associated outgoing VLAN traffic. "0" is the lowest priority level and "7" is the highest.
IP address	Enter the IP address for this interface.
Subnet mask	Enter the subnet mask of this interface in dot decimal notation. The subnet mask indicates what part of the IP address is the same for all computers in the network.
DHCP Server	
Get Automatically	Enter the IP address from which the Security Appliance begins allocating IP addresses. If you want to assign a static IP address to a specific computer, click Add new under Static DHCP table.
IP pool start address	Enter the IP address from which the Security Appliance begins allocating IP addresses for this VLAN.
Pool size	Enter the total number of IP addresses the DHCP server will hand out.
OK	Click OK to save your changes back to the NCC.
Cancel	Click Cancel to exit this screen without saving.

4.9.6 Site Settings

Use this screen to change the general settings for the site, such as the site name, Nebula Device login password, captive portal reauthentication, SNMP, AP traffic logs to a Syslog server, traffic logs to SecuReporter, and API access for DPPSK third-party integration. Click Site-wide > Configure > Site settings to access this screen.

Figure 76 Site-wide > Configure > Site settings

Site settings

Site information

Site name:

UTC time zone:

Site location:

[What's New?](#)

Device configuration

Local credentials: Username: (Default username is 'superuser') Password:

Administrative access: [SSH/SSL](#)

☒ SSH ☒ HTTPS ☒ HTTP ☒ SSH ☒ SSH

Warning: The system will not be accessible via HTTP and HTTPS is not enabled by default.

☒ Remote access to the device is permitted from the specified IP addresses.

Start IP address: End IP address:

Default:

[Add new IP range](#)

SSH access: Access: Community string:

SSH port: ☒ [What's New?](#)

Captive portal reauthentication

For my AD server users:

For my RADIUS server users:

For my local users:

For my other users:

Reporting

Working server:

Use threshold for working server: ☒ [What's New?](#)

API working status: ☒ [What's New?](#)

API monitoring: ☒

SecurityReporter: ☒ [What's New?](#)

API access

API access: Generate API access for OpenStack integration. For more information, please contact [Link]

The following table describes the labels in this screen.

Table 50 Site-wide > Configure > Site settings

LABEL	DESCRIPTION
Site information	
Site name	Enter a descriptive name for the site.
Local time zone	Choose the time zone of the site's location.
Site location	Enter the complete address or coordinates (physical location) of the Nebula Devices in the site. All newly added Nebula Devices will automatically use this as the default address and location on the Google map. Note: You can edit each Nebula Device's location on the Google map.
Device configuration	
Local credentials	The default password is generated automatically by the NCC when the site is created. You can specify a new password to access the status page of the Nebula Device's built-in web-based configurator. The settings here apply to all Nebula Devices in this site.
Administrative access	Administrative access enables you to select the services that the connected device can use to access the Nebula Device on this site. NCC will block any connection attempts using the methods below when you disable it. - SSH (Secure SHell) – combine authentication and data encryption for secure encrypted communication. - HTTPS (HyperText Transfer Protocol over Secure Socket Layer, or HTTP over SSL) – enable secure transfer of data. Data is scrambled through encryption, making it useless to eavesdroppers. - HTTP – data is sent in plain text (no encryption). Anyone on the same network (for example, public WiFi) can potentially see and steal that data. - FTP (File Transfer Program) – enable fast transfer of files, including large files that may not be possible by email. - SNMP (Simple Network Management Program) – manage and monitor the Nebula Device through SNMP version 1 (V1) or SNMP version 2 (V2). Note: The Nebula Security Appliances (except Nebula Security Routers) can only use the SNMP method for administrative access (LAN to Nebula Device). To allow for WAN to Nebula Device access, go to Site-wide > Configure > Firewall > Security policy. Enable Permit access to Nebula Devices exclusively from designated IP address to set access to Nebula Devices from a specific IP address (range). Disable this option to access from any IPv4 addresses. Click Add allow IP range to enter the Starting IP address and Ending IP address. Note: The following range of IPv4 addresses is not allowed. 255.255.255.255 (broadcast) 224.0.0.0 to 239.255.255.255 (multicast) 240.0.0.0 to 255.255.255.254 (reserved) 127.0.0.0 to 127.255.255.255 (loopback) 0.0.0.0 to 0.255.255.255 (zeros) Note: Enable HTTP and HTTPS for captive portal.
SNMP access	This field is available when you select SNMP in Administrative access. This field displays V1/V2c to allow SNMP managers using SNMP to access the Nebula Devices on this site.
Community string	This field is available when you select SNMP in Administrative access. Enter the password for the incoming SNMP requests from the management station.

Table 50 Site-wide > Configure > Site settings (continued)

LABEL	DESCRIPTION
Smart guest/ VLAN network	Click On to enable this feature. This allows the NCC to check if the VLAN ID and guest network settings are consistent on the APs and Security Appliance in the same site to ensure guest network connectivity. The guest settings you configure for a gateway interface (in Site-wide > Configure > Security gateway > Interface addressing) will also apply to the WiFi networks (SSIDs) associated with the same VLAN ID (in Site-wide > Configure > Access points > SSID settings). For example, if you set a gateway interface in VLAN 100 as a guest interface, the SSID that belongs to VLAN 100 will also act as a guest network.
Captive portal reauthentication	
For my AD server users	Select how often the user (authenticated by an AD server) has to log in again.
For my RADIUS server users	Select how often the user (authenticated by a RADIUS server) has to log in again.
For click-to-continue users	Select how often the user (authenticated through the captive portal) has to log in again.
For cloud authentication users	Select how often the user (authenticated using the NCC user database) has to log in again.
SNMP	
Reporting	
Syslog server	Click Add to create a new entry.
Server IP	Enter the IP address of the server.
Types	Select the type of logs the server is for. Note: Besides sending Security appliance traffic log to a Syslog server, you can also set the Security Appliance (through its Web Configurator) to save a copy of the logs to a connected USB storage device. Security appliance traffic log includes the traffic information (such as its source, destination or usage) of the Security Appliance clients. Note: The Security appliance log and Security appliance traffic log will not include Security Firewall(s) in Cloud Monitoring mode.
Action	Click the Delete icon to remove the entry.
Use timezone for syslog server logs	Click On to enable this feature. This allows the Syslog server logs to use the site's timezone. If disabled, the Syslog server logs will show GMT 0 time. GMT does not adjust automatically for Daylight Savings Time (DST). You must adjust for Daylight Savings directly in the Syslog server.
AP syslog prefix	Attach a prefix to distinguish a specific site's Nebula access points system logs. It can consist of 1 – 31 alphanumeric characters except space. Empty (blank) means no prefix. <PRI>timestamp hostname <u>prefix</u> :src'src ip' dst='dst ip' msg='Traffic Log' Refer to the following log, which includes the example prefix 'will_site' added. 
AP traffic log	Log traffic for access points in the site that have NAT mode enabled. You can also send the logs to a Syslog server, by selecting AP traffic log under Syslog server > Types. For details on configuring NAT mode, see Section 5.3.2 on page 343.

Table 50 Site-wide > Configure > Site settings (continued)

LABEL	DESCRIPTION
SecuReporter	Click On to enable this feature. This allows the Nebula Device to send traffic logs to SecuReporter. Note: NCC will not include the traffic logs for Security Firewall(s) in Cloud Monitoring mode. Note: Disable this option if you have configured sending of traffic logs to an external syslog server. Note: The supported models are USG FLEX/ATP Series and USG LITE 60AX.
API access	API access allows third-party software to integrate with the DPPSK feature in NCC. For more information, please contact Zyxel.
API token	Generate an API token for DPPSK third-party integration.
Copy	Click this button to copy the API key to the system's clipboard.
Delete	Click this button to delete the API key.

CHAPTER 5

Access Point

5.1 Overview

This chapter discusses the menus that you can use to monitor the Nebula-managed APs (Access Points) in your network and configure settings even before an AP is deployed and added to the site.

Nebula Device refers to Zyxel Hybrid APs (NAP / NWA / WAC / WAX Series) in this chapter. To view the list of Nebula Devices that can be managed through NCC, go to Help > Support tools > Device function table.

The following features in the Access Point menus apply to specific models only.


Table 51 Features/Fields Supported on Specific Nebula Devices Only

FEATURES/FIELDS	INCLUDED NEBULA DEVICES	LOCATION
Ethernet Secure Tunnel Setting in Remote AP Setting	WAC500H	Click a Nebula Device entry in the Site-wide > Devices > Access points screen to display individual Nebula Device statistics. See Section 4.3.1 on page 233 for more information.
Wired stations		
WPA3 in Security options	NWA110AX, WAX510D, WAX650S	Click Site-wide > Configure > Access points > SSID advanced settings. See Section 5.3.2 on page 343 for more information.
Ethernet Traffic options Forwarding Mode	WAC500H	Click an entry in the Port setting table of the Site-wide > Configure > Access points > AP & port settings screen to access the Edit – AP & port settings screen. See Section 5.3.7.1 on page 370 for more information.

5.1.1 Nebula Smart Mesh

Nebula Smart Mesh, also called Smart Mesh or AP Smart Mesh, is a WiFi mesh solution for Nebula Devices. With Smart Mesh, you can have two or more Nebula Devices automatically create a mesh network within your home or office, ensuring there are no areas with a weak WiFi signal.

Figure 77 Nebula Smart Mesh

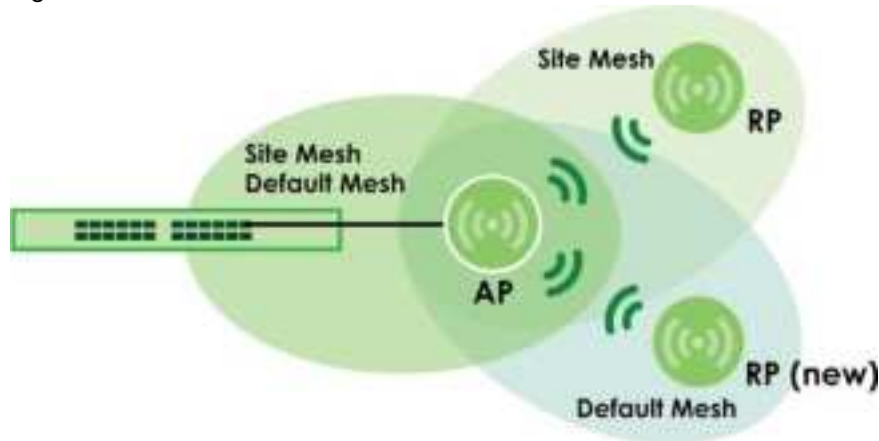

Smart Mesh assigns a role to each Nebula Device depending on its connection method.

- Root AP (AP): A Nebula Device (mesh controller) that is connected to the network by Ethernet and can reach the gateway device.
- Repeater AP (RP): A Nebula Device (mesh extender) that is connected to the network wirelessly, or that is connected to the network by Ethernet but cannot reach the gateway device.

The mesh extender rebroadcast the mesh controller's SSID, and then relay WiFi traffic back to the gateway.

To create a Smart Mesh network, add two or more Nebula Devices to the same Nebula-managed site and ensure that each Nebula Device has Smart Mesh enabled. Then connect one or more Nebula Devices to your network's gateway using an Ethernet cable, so that you have at least one mesh controller. Finally, place one or more non-wired Nebula Devices in areas where you want to extend WiFi coverage.

5.1.2 Smart Mesh Network Topology


After you add a Nebula Device to an NCC site and then turn it on, the new Nebula Device automatically connects to a mesh network called the default mesh. The Nebula Device then tries to connect to a mesh controller and contact NCC. After the Nebula Device successfully contacts NCC and joins the site, the Nebula Device stops using the default mesh and instead connects to other Nebula Devices in the site using a dedicated network called the site mesh.

5.1.2.1 Smart Mesh Wireless Hops

Each mesh extender tries to connect to the site gateway through a mesh controller. If a mesh extender cannot connect directly to a mesh controller, then the mesh extender relays its WiFi traffic through another mesh extender. Each time traffic passes through a WiFi connection in the mesh network, it counts as one hop.

Nebula Smart Mesh supports an unlimited number of hops. However, each hop in a mesh network reduces network throughput by up to half. Therefore, we recommend only allowing a maximum of two hops within your Smart Mesh network.

Figure 78 Nebula Smart Mesh Wireless Hops

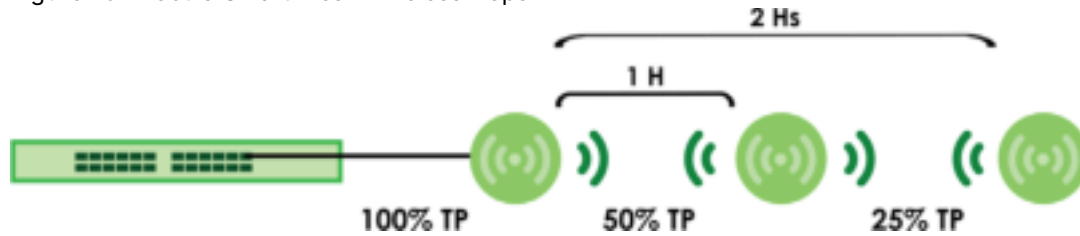


5.1.2.2 Wireless Bridge

Wireless bridge is a Smart Mesh feature that allows two Nebula Devices to automatically connect two network segments together over a WiFi connection. This is useful when you want to extend your wired network to a new area, but it is difficult to run cables to that area.

To use wireless bridge, enable Wireless Bridge on two Nebula Devices (AP, RP) in NCC. Then connect wired clients to one of the Nebula Device's LAN port. These wired clients form a new network segment and are able to reach the site gateway (SG) through the Nebula Device's WiFi connection.

Figure 79 Nebula Smart Mesh Wireless Bridge

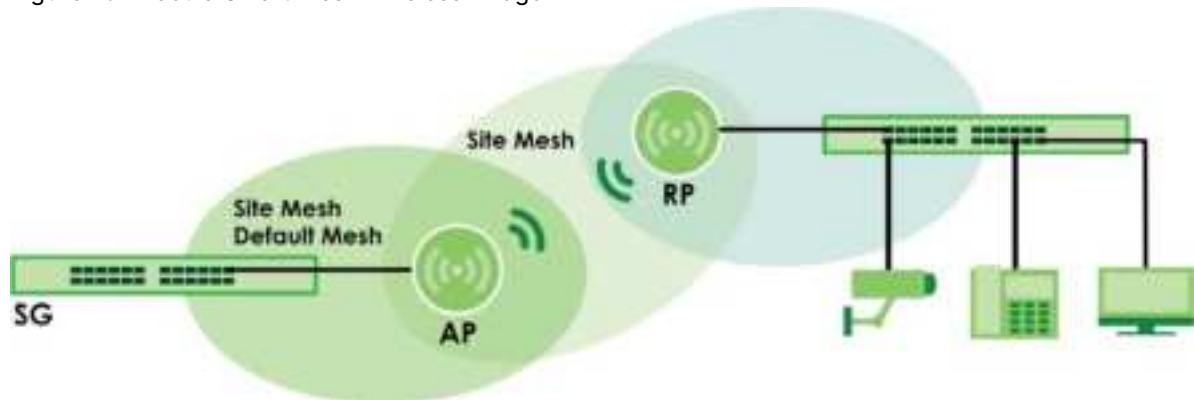

5.2 Monitor

Use the Monitor menus to check Nebula Device event log messages and summary report for Nebula Devices in the selected site.

5.2.1 Event Log

Use this screen to view WiFi Nebula Device log messages. You can enter the Nebula Device name or a key word, select one or multiple event types, or specify a date/time or even a time range to display only the log messages related to it.

Click Site-wide > Monitor > Access points > Event log to access this screen.

Figure 80 Site-wide > Monitor > Access points > Event log

Access point > Monitor > Event log

Event log

Access Point: Keyword: Category:

Before:

130 Event log

Time	Access point	Category	Detail
2019-10-30 16:14:23	86.20.87.84.27.38	Wireless LAN	Station: 8c:5c:f9:81:f6:c7 has associated on Channel 6, SS...
2019-10-30 16:14:27	86.20.87.84.27.38	Wireless LAN	Station: 8c:5c:f9:81:f6:c7 has blocked by Hotspot2 on Ch...
2019-10-30 16:14:27	86.20.87.84.27.38	Wireless LAN	Station: 8c:5c:f9:81:f6:c7 has blocked by prev-Auth Failed
2019-10-30 16:14:27	86.20.87.84.27.38	Wireless LAN	WPA authenticator requests disconnect: reason 1: Interf...
2019-10-30 16:14:27	86.20.87.84.27.38	Wireless LAN	WPA authenticator requests disconnect: reason 2: Interf...
2019-10-30 16:15:26	86.20.87.84.27.38	Wireless LAN	Station: 8c:5c:f9:81:f6:c7 has associated on Channel 6, SS...
2019-10-30 16:16:30	86.20.87.84.27.38	Wireless LAN	Station: 8c:5c:f9:81:f6:c7 has blocked by Hotspot2 on Ch...
2019-10-30 16:16:30	86.20.87.84.27.38	Wireless LAN	Station: 8c:5c:f9:81:f6:c7 has blocked by prev-Auth Failed
2019-10-30 16:16:30	86.20.87.84.27.38	Wireless LAN	WPA authenticator requests disconnect: reason 1: Interf...
2019-10-30 16:16:30	86.20.87.84.27.38	Wireless LAN	WPA authenticator requests disconnect: reason 2: Interf...

Page 1 of 14 Results per page 10

5.2.2 Wireless Health


This screen lets you monitor the health of WiFi networks for your Nebula Devices and connected WiFi clients.


You can improve WiFi network performance by doing the following:

- Enable DCS (Dynamic Channel Selection) to select a radio channel with least interference
- Enable client steering to use a stronger WiFi signal
- Change channel bandwidth to reduce radio interference from other WiFi devices

Click Site-wide > Monitor > Access points > Wireless health to access this screen.

Figure 81 Site-wide > Monitor > Access points > Wireless health

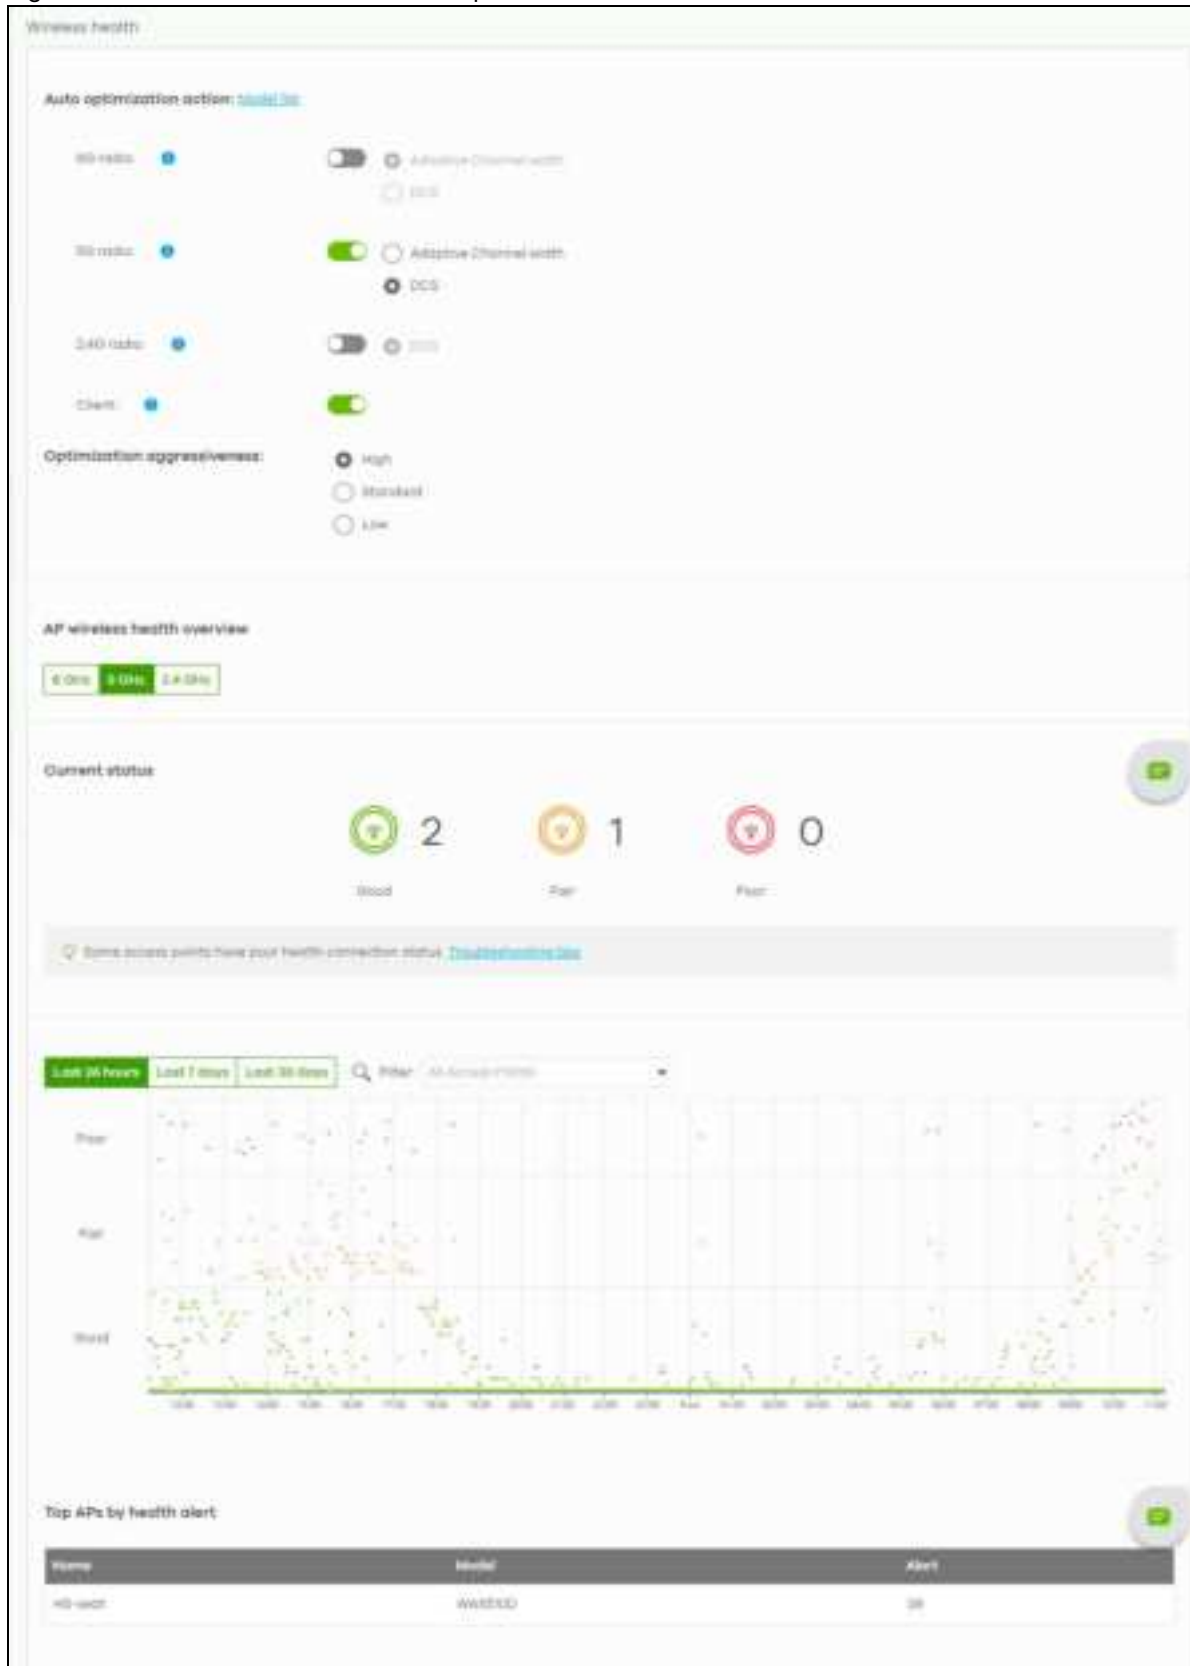

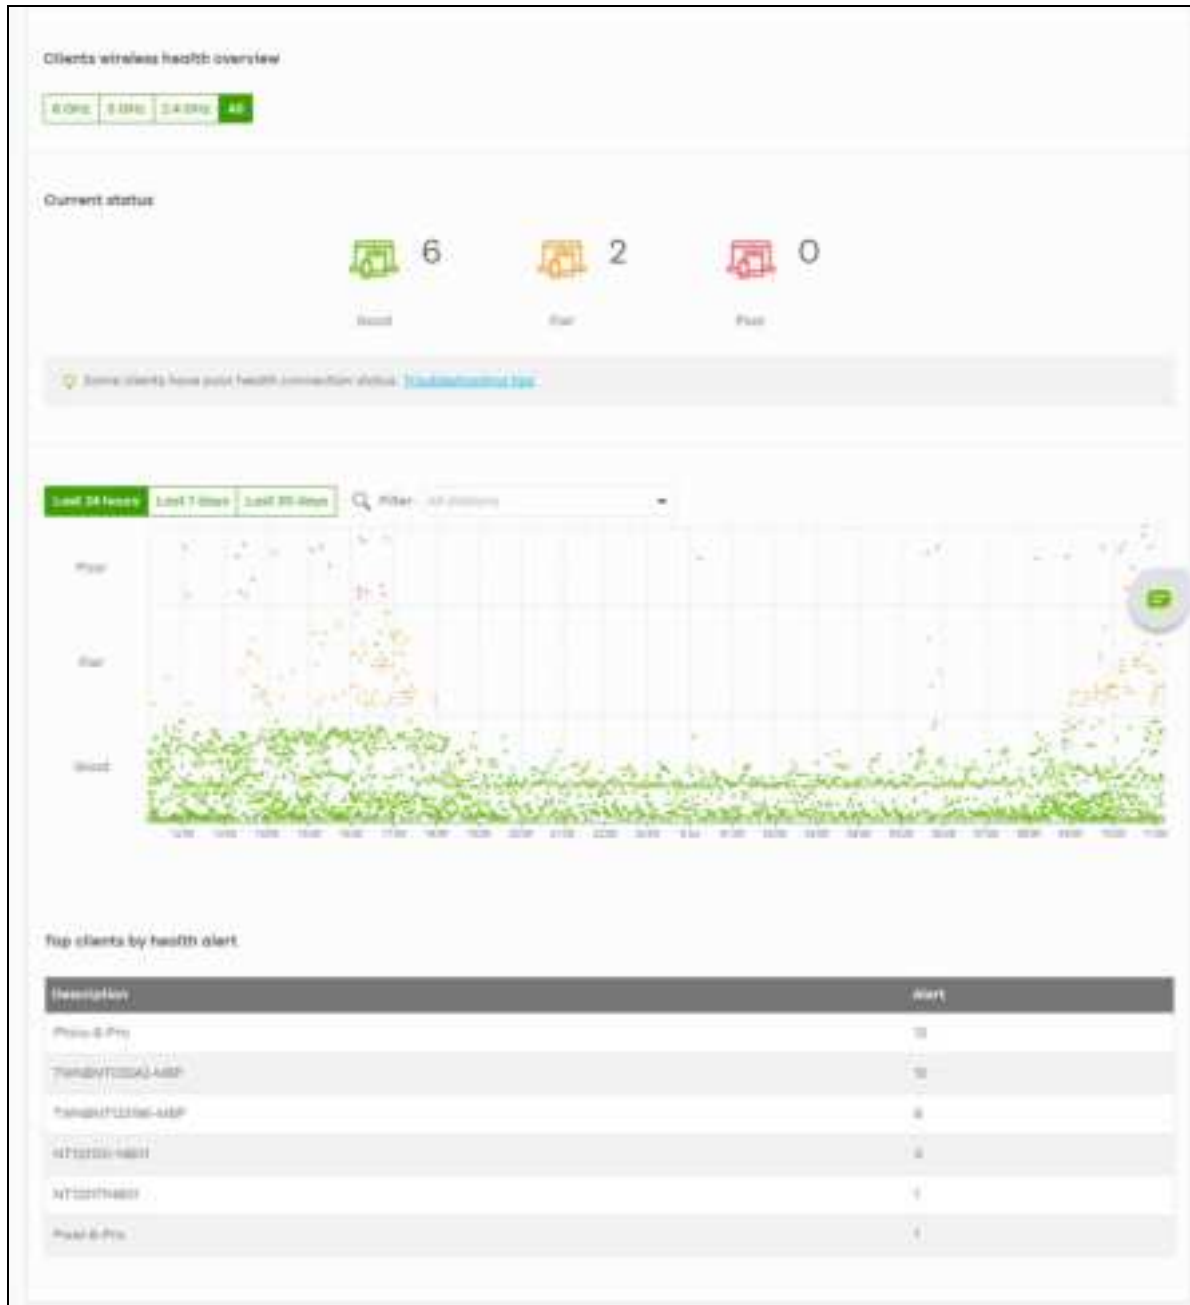

The following table describes the labels in this screen.

Table 52 Site-wide > Monitor > Access points > Wireless health

LABEL	DESCRIPTION
Auto optimization action	
6 GHz radio	Select ON to enable and specify how the Nebula Device improves the WiFi network performance. Otherwise, select OFF to disable it. - Adaptive channel width – select this option to have the Nebula Device change the channel bandwidth from 160 MHz to 80 MHz to reduce the radio interference with other WiFi devices. If adaptive channel width does not improve WiFi performance then the Nebula Device also performs Dynamic Channel Selection (DCS). - DCS (Dynamic Channel Selection) – select this option to have the Nebula Device scan and choose a radio channel that has least interference.
5 GHz radio	Select ON to enable and specify how the Nebula Device improves the WiFi network performance. Otherwise, select OFF to disable it. - Adaptive channel width – select this option to have the Nebula Device change the channel bandwidth from 80 MHz to 20 MHz to reduce the radio interference with other WiFi devices. If adaptive channel width does not improve WiFi performance then the Nebula Device also performs Dynamic Channel Selection (DCS). - DCS (Dynamic Channel Selection) – select this option to have the Nebula Device scan and choose a radio channel that has least interference.
2.4 GHz radio	Select ON to enable the Nebula Device to improve the WiFi network performance. Otherwise, select OFF to disable it. DCS (Dynamic Channel Selection) – select this option to have the Nebula Device scan and choose a radio channel that has least interference.
Client	Select ON to have the Nebula Device try to steer the WiFi clients in poor health to a Nebula Device or SSID with a strong signal. Client steering to improve the signal strength is done every 30 minutes. Otherwise, select OFF to disable steering.
Optimization aggressiveness	The Nebula Device optimizes the WiFi network performance by doing the following:. - Change the channel bandwidth from 160 MHz to 80 MHz, or 80 MHz to 20 MHz to reduce radio interference from other wireless devices (Adaptive Channel Width). - Select a radio channel with least interference (DCS, Dynamic Channel Selection). - Direct clients to an AP with a stronger WiFi signal. There might be some disruption to the client's WiFi connections while the Nebula Device is optimizing the WiFi network. To minimize disruption, you can decide to optimize the WiFi network only when the WiFi network is below a certain level of busyness. Low, Standard, and High stand for different levels of busyness. The busyness level you select decides when the Nebula Device takes action to optimize the WiFi network. Low: Only perform WiFi network optimization action when the WiFi network traffic is below Low. Standard: Only perform WiFi network optimization action when the WiFi network traffic is Low. High: Only perform WiFi network optimization action when the WiFi network traffic is Standard, or Low.
AP wireless health overview	
Current status	This shows the number of supported Nebula Devices that are currently online, using the specified frequency band that are in Good, Fair or Poor wireless health threshold as detected by Nebula.
y-axis	The y-axis represents the state of wireless health.
x-axis	The x-axis shows the time period over which the Nebula Device health state is recorded.
Top APs by health alert	
Name	This shows the descriptive name of the Nebula Device.
Model	This shows the model number of the Nebula Device.

Table 52 Site-wide > Monitor > Access points > Wireless health (continued)


LABEL	DESCRIPTION
Alert	This shows how many times the Nebula Device is in a poor state of wireless health. The NCC generates a log when the Nebula Device is in poor wireless health. You can view the log messages in the Site-wide > Monitor > Access points > Event log screen.
Clients wireless health overview	
Current status	This shows the number of connected WiFi clients that are currently online, using the specified frequency band and in Good, Fair or Poor wireless health threshold as detected by Nebula.
Client health	Select to view the health of all WiFi clients which are connected to the supported Nebula Devices using the 6 GHz, 5 GHz or 2.4 GHz band. You can select to view the health report for the past day, week or month, as well as filter the WiFi station to view.
y-axis	The y-axis represents the state of wireless health.
x-axis	The x-axis shows the time period over which the client health state is recorded.
Top clients by health alert	
Description	This shows the descriptive name of the client.
Alert	This shows how many times the client is in a poor state of wireless health. The NCC generates a log when the client is in poor wireless health. You can view the log messages in the Site-wide > Monitor > Access points > Event log screen.

5.2.3 Summary Report

This screen displays network statistics for Nebula Devices of the selected site, such as bandwidth usage, top clients and/or top SSIDs.

Click Site-wide > Monitor > Access points > Summary report to access this screen.

Figure 82 Site-wide > Monitor > Access points > Summary report

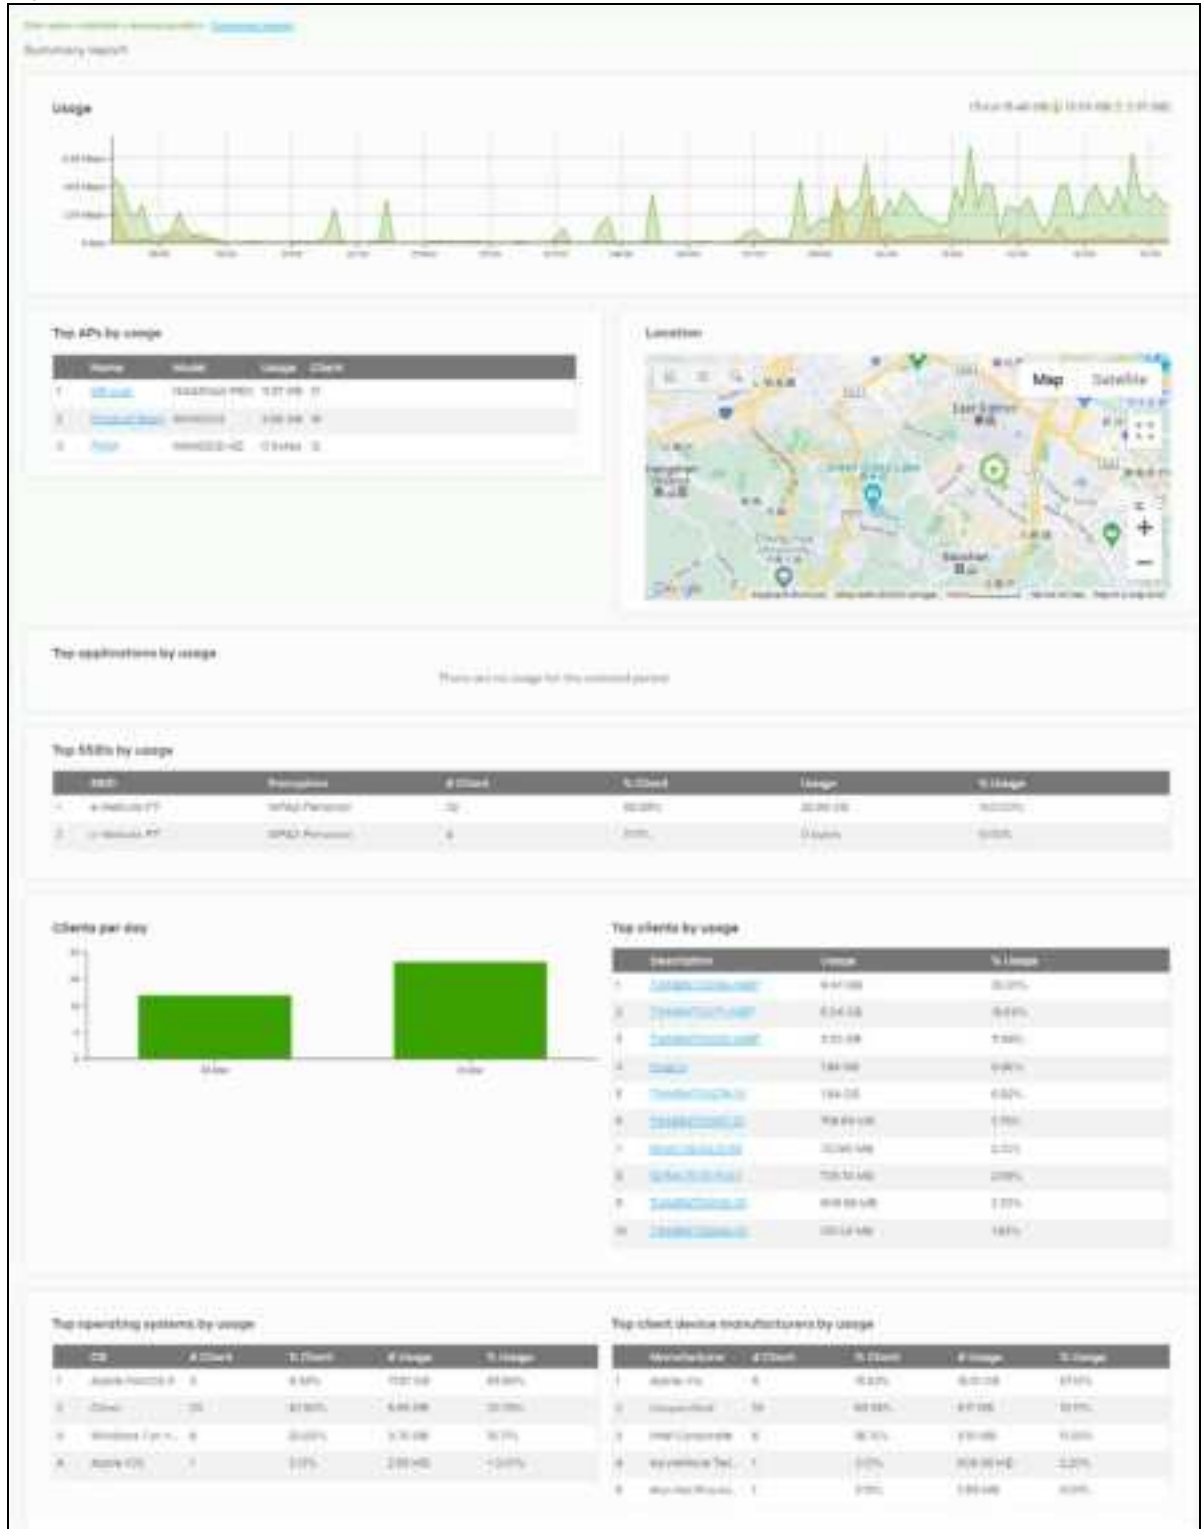

The following table describes the labels in this screen.

Table 53 Site-wide > Monitor > Access points > Summary report

LABEL	DESCRIPTION
Summary report	
Usage	
y-axis	The y-axis shows the transmission speed of data sent on this port in megabits per second (Mbps).
x-axis	The x-axis shows the time period over which the traffic flow occurred.
Top APs by usage	
#	This shows the ranking of the Nebula Device.
Name	This shows the descriptive name of the Nebula Device.
Model	This shows the model number of the Nebula Device.
Usage	This shows the amount of data transmitted or received by the Nebula Device.
Client	This shows how many clients are currently connecting to the Nebula Device.
Location	
This shows the location of the Nebula access points on the map.	
Top applications by usage	
#	This shows the ranking of the application.
Application	This shows the application name.
Category	This shows the category of the application, for example email, file sharing.
Usage	This shows the amount of data consumed by the application.
% Usage	This shows the percentage of usage for the application.
Top SSIDs by usage	
#	This shows the ranking of the SSID.
SSID	This shows the SSID network name.
Encryption	This shows the encryption method used by the SSID network.
# Client	This shows how many WiFi clients are connecting to this SSID.
% Client	This shows what percentage of associated WiFi clients are connecting to this SSID.
Usage	This shows the total amount of data transmitted or received by clients connecting to this SSID.
% Usage	This shows the percentage of usage for the clients connecting to this SSID.
Clients per day	
y-axis	The y-axis represents the number of clients.
x-axis	The x-axis represents the date.
Top clients by usage	
#	This shows the ranking of the client.
Description	This shows the descriptive name or MAC address of the client.
Usage	This shows the total amount of data transmitted and received by the client.
% Usage	This shows the percentage of usage for the client.
Top operating systems by usage	
#	This shows the ranking of the operating system.
OS	This shows the operating system of the client device.
# Client	This shows how many client devices use this operating system.

Table 53 Site-wide > Monitor > Access points > Summary report (continued)

LABEL	DESCRIPTION
% Client	This shows the percentage of top client devices which use this operating system.
# Usage	This shows the amount of data consumed by the client device on which this operating system is running.
% Usage	This shows the percentage of usage for top client devices which use this operating system.
Top client device manufacturers by usage	
#	This shows the ranking of the manufacturer.
Manufacturer	This shows the manufacturer name of the client device.
# Client	This shows how many client devices are made by the manufacturer.
% Client	This shows the percentage of top client devices which are made by the manufacturer.
# Usage	This shows the amount of data consumed by the client device.
% Usage	This shows the percentage of usage for the client device.

5.3 Configure

Use the Configure menus to set the WiFi security settings for Nebula Devices of the selected site.


5.3.1 SSID Settings

This screen allows you to configure up to 24 different SSID profiles for your Nebula Devices. An SSID, or Service Set Identifier, is basically the name of the WiFi network to which a WiFi client can connect. The SSID appears as readable text to any device capable of scanning for WiFi frequencies (such as the WiFi adapter in a laptop), and is displayed as the WiFi network name when a person makes a connection to it.

Note: The WiFi SSID settings on the NCC can currently support AP and SCR models only. At the time of writing, the Nebula mobile routers do not support this feature. If you are using a Nebula mobile router, configure the SSID settings through the mobile router's local Web Configurator.

Click Site-wide > Configure > Access points > SSID settings to access this screen.

Figure 83 Site-wide > Configure > Access points > SSID settings

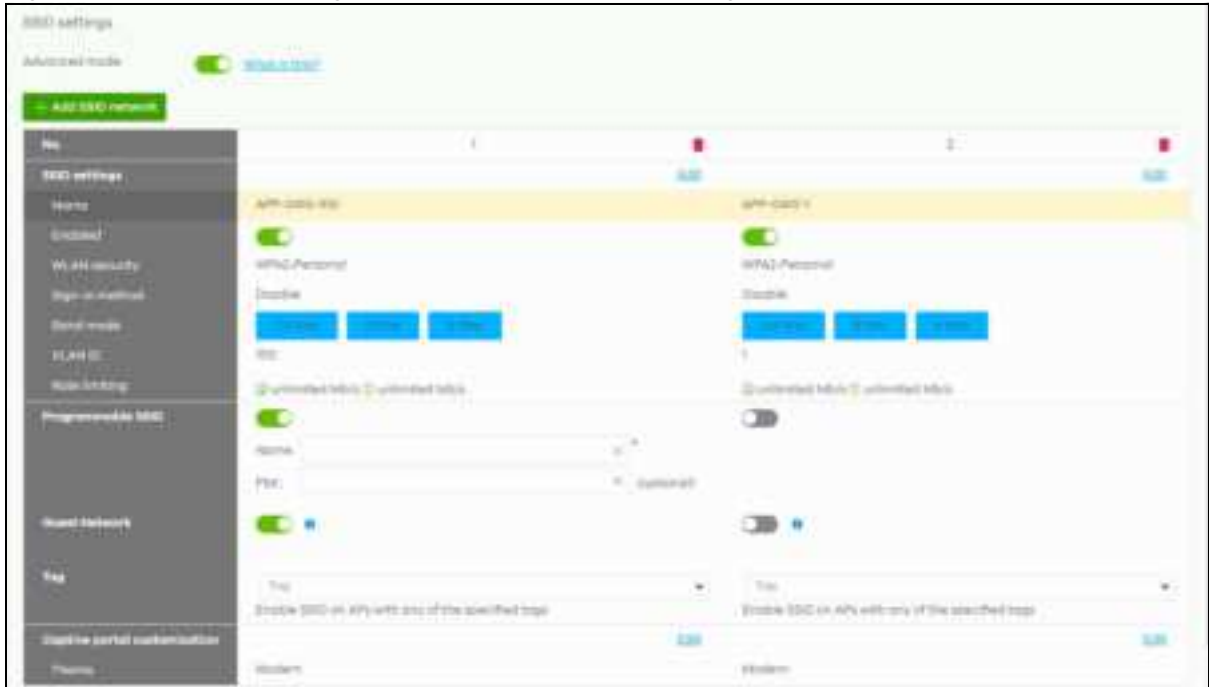

The following table describes the labels in this screen.

Table 54 Site-wide > Configure > Access points > SSID settings

LABEL	DESCRIPTION
Advanced mode	Select Off to disable Advanced mode. This allows you to create SSID profiles by only specifying an SSID name and optional password. NCC sets all other WiFi settings to default.
+ Add SSID network	Click this button to configure up to eight different SSID profiles for your Nebula Device. To configure more than eight SSID profiles (up to 24), enable AP grouping in Site-wide > Configure > Access points > AP & port settings. For details, see Section 5.3.7 on page 367 . Note: Only four SSIDs are allowed on each SCR 50AXE. Note: Only eight SSIDs are allowed on each Nebula Device Access Points and USG LITE 60AX. Use the Tag field to assign up to eight AP groups per Nebula Device. A blank Tag field is counted as an AP group. Note: Disabling AP grouping in Site-wide > Configure > Access points > AP & port settings will hide SSID9 to SSID24, but keep the settings.
No.	This shows the index number of this profile.
delete	Click this icon to remove the SSID profile.
SSID settings	
Edit	Click this button to go to the SSID advanced settings screen and configure WiFi name/ security and advanced settings, such as band selection, enable assisted roaming and U-APSD (Unscheduled automatic power save delivery). See Table 55 on page 346 for more information on assisted roaming and U-APSD.
Name	This shows the SSID name for this profile.
Enabled	Click to turn on or off this profile.
WLAN security	This shows the encryption method used in this profile.

Table 54 Site-wide > Configure > Access points > SSID settings (continued)

LABEL	DESCRIPTION
Sign-in method	This shows the authentication method used in this profile or Disable.
Band mode	This shows whether the SSID use either 2.4 GHz band, 5 GHz band, or the 6 GHz band.
VLAN ID	This shows the ID number of the VLAN to which the SSID belongs.
Rate limiting	This shows the maximum incoming/outgoing transmission data rate (in Kbps) on a per-station basis.
Programmable SSID	Select On to have each Nebula Device that uses this SSID generate a unique SSID name and pre-shared key (PSK) based on the Nebula Device's model name, serial number, or MAC address. Use this method when you require more than 8 unique SSID names on your site. For example, a hotel can install a Nebula Device in each room and then have each Nebula Device broadcast a unique SSID based on the room number: FreeWiFi_Room1, FreeWiFi_Room2, FreeWiFi_Room3, and so on.
Name	Name: Enter a programmable SSID name in the format PREFIX+VALUE(X). This name overrides the original SSID name. - PREFIX: Optional prefix to add to the SSID, for example "FreeWiFi_". To use "\$" in the SSID name, enter "\$\$" - VALUE: Specify a Nebula Device value to use to generate the SSID name. Use one of the following: \$AP = Nebula Device device name. \$MAC = Nebula Device MAC address. \$SN = Nebula Device serial number. - X: Specify how many characters of the Nebula Device value to use in the SSID. A positive number means the first X characters, and a negative number means the last X characters. Example: <i>FreeWiFi_Room\$AP(-3)</i> generates an SSID called "FreeWiFi_Room" + the last three characters of the access point device name.
PSK	PSK: Enter an optional programmable PSK in the format GENTYPE(Y). GENTYPE: Specify how the Nebula Device will generate a random PSK. \$GENMIX = The Nebula Device generates a mix of random letters and numbers. \$GENNUM = The Nebula Device generates a mix of random numbers only. \$AP = Nebula Device device name. \$MAC = Nebula Device MAC address. \$SN = Nebula Device serial number. Y = Specify the length of the PSD. The minimum length is 8. Example 1: <i>\$GENNUM(10)</i> generates a unique 10-character PSK for this SSID, consisting only of numbers. Example 2: <i>\$MAC(-5)\$SN(-5)</i> uses the MAC address's last 5 characters and the serial number's last 5 characters (for example, 8E3AE02451). Example 3: <i>ZYXEL-\$GENMIX(4)</i> appends the fixed characters 'ZYXEL' and generates a unique 4-character mix of random letters and numbers (for example, ZYXEL-3c4d). Note: You can specify a fixed PSK for this SSID at Site-wide > Configure > Access points / Security router > SSID advanced settings.


Table 54 Site-wide > Configure > Access points > SSID settings (continued)

LABEL	DESCRIPTION
Guest Network	Select On to set this WiFi network as a guest network. Layer 2 isolation and intra-BSS blocking are automatically enabled on the SSID. WiFi clients connecting to this SSID can access the Internet through the Nebula Device but cannot directly connect to the LAN or the WiFi clients in the same SSID or any other SSIDs. Note: In your VLAN-enabled network, if the SSID's gateway MAC address and the Nebula Device's gateway MAC address are different and belong to different VLANs, you need to manually add the SSID's gateway MAC address to the layer 2 isolation list. See Section 5.3.2 on page 343. Note: If you have a Nebula Security Appliance installed in the site but the gateway interface with the same VLAN ID is not configured as a guest interface, Smart Guest/VLAN network tip, click here. displays after you select On. Click here to open a screen where you can directly select to use the interface as a Guest interface. 
Broadcasting APs	Select All APs or specify the AP to use this SSID profile. Note: This field only appears when you have a Security Router in your site.
Tag	Enter or select the tags you created for Nebula Devices in the Site-wide > Devices > Access points / Security router / Mobile router screen or Site-wide > Devices > Access points / Security router / Mobile router: Details screen. Only the Nebula Devices with the specified tag will broadcast this SSID. If you leave this field blank, all the Nebula Devices on the site will broadcast this SSID.
Note: At the time of writing, the following rules apply when the site includes both Access Point(s) and a Security Router: - Specify the Access Point(s) in Broadcasting APs and Tag to broadcast this SSID. - The Security Router must be specified in Broadcasting APs to broadcast this SSID.	
Captive portal customization	
Edit	Click this button to go to the Captive portal screen and configure the captive portal settings. See Section 5.3.3 on page 353 .
Theme	If captive portal is enabled, this shows the name of the captive portal page used in this profile.

5.3.2 SSID Advanced Settings

Use this screen to configure the WiFi security, L2 isolation, intra-BSS traffic blocking and walled garden settings for the SSID profiles.

As shown in the next figure, the Nebula (AP) can connect wirelessly to the Nebula Cloud server (NC) or RADIUS server (RS) for WPA2-Enterprise authentication.

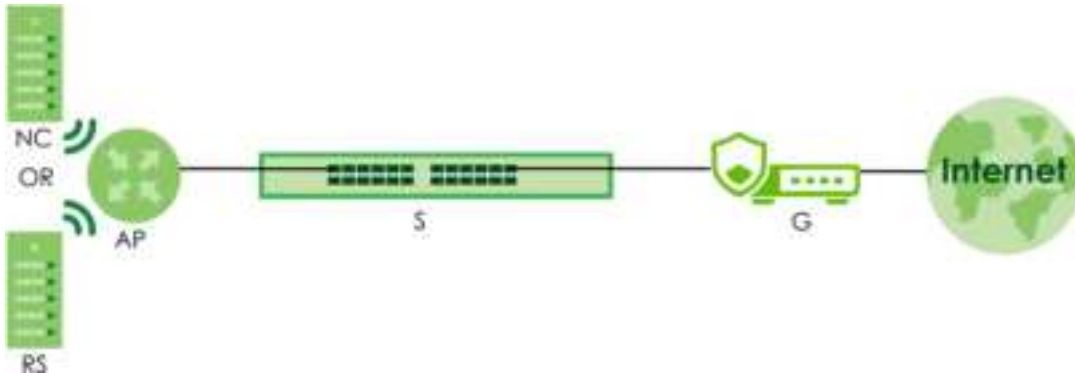

Click Site-wide > Configure > Access points > SSID advanced settings to access this screen.

Figure 84 Site-wide > Configure > Access points > SSID advanced settings Part 1

The screenshot shows the 'SSID advanced settings' page in the Nebula Cloud interface. The page is divided into several sections:

- Basic info:** Includes fields for SSID name (set to 'SSID_12345'), Enabled (checked), and Hide SSID (unchecked).
- Network access:** Includes a 'Security settings' link and several radio button options:
 - ☐ Open: Users can connect without entering a password.
 - ☐ Enterprise open: Users can connect without password. Enterprise open provides improved data and session in open Wi-Fi networks.
 - ☒ WPA Personal (WPA2-PSK): Users must enter the key to connect. Includes a 'Show/Hide PSK Code' button.
 - ☐ Enterprise personal (WPA2-Enterprise): Includes a 'Learn more' link.
 - ☐ WPA2-Enterprise with MAC address authentication: Includes a 'Learn more' link.
 - ☐ WPA2-Enterprise with 802.1X authentication: Includes a 'Learn more' link.
- Sign-in method:** Includes several radio button options:
 - ☐ Disabled: Users can access the network without any web authentication.
 - ☒ Click-to-connect: Users must view and agree the captive portal page in order to access the network.
 - ☐ Webpage: Users must enter a voucher code in order to access the network. Includes a 'Create and manage voucher passcode in the Voucher page' link.
 - ☐ Sign-in with: Includes a 'Learn more' link.

Figure 85 Site-wide > Configure > Access points > SSID advanced settings Part 2

Captive portal advanced setting

☒ **Enabled portal**
 Allowed portal ranges:
[What do I enter here?](#)

Self-registration: allow users to create accounts with email and is attempted
 Simultaneous login limit: unlimited [What do I enter here?](#)
 Strict Policy: Block all access until login
 Logout time: Follow site-wide setting
 WLAN disconnection behavior: ☒ All reset
 Client devices can access the network without logging in, except those are explicitly blocked.
☐ Limited
 Only currently authorized clients and white listed client device will be able to access the network.

Traffic options

Forwarding mode: ☒ Local bridge
☐ NAT mode [What do I enter here?](#)
 Use IPv4 DHCP & NAT
 Clients receive IP addresses in an isolated network.
 Client cannot communicate with other clients associated with different AP.
☐ Tunnel mode [What do I enter here?](#)
 APs send traffic over a tunnel to Zyxel security gateway
 Tunnelled to a specified VLAN at the Zyxel security gateway.

Rate limit: ☒ Download 100.0 Kbps/s (1-1000)
☒ Upload 100.0 Kbps/s (1-1000)

Advanced settings

VLAN ID: 1 (1-4094)
 Bond mode: ☒ LACP bond
☒ 802.3ad bond
☐ 802.3ad bond [What do I enter here?](#)
 MLD: ☒ Enabled [What do I enter here?](#)
 MLD is linked to the operation state of the Wi-Fi 7 standard.
 Enabling the 802.3ad protocol on a device automatically enables MLD capabilities.
 Layer 2 isolation: ☒ Enable layer 2 isolation [What do I enter here?](#)

MAC	Description
1	

☒ Add Please enter at least the gateway MAC address to prevent Internet access restriction.

Intra-SSID traffic blocking: ☒ Enable Intra-SSID traffic blocking [What do I enter here?](#)
 Bond select: ☐ Enable the (n) attempt clearing clients from 2.4GHz to 5GHz [What do I enter here?](#)
 Assisted roaming: ☐ Enable 802.11k
 802.11: ☐ Enable this to support fast roaming [What do I enter here?](#)
 802.11: ☐

Figure 86 Site-wide > Configure > Access points > SSID advanced settings Part 3

SSID schedule

Enabled

Schedule

Schedule template

New Schedule

Access point

Access point name: Access point (You can select it in [Access point page](#))

Time	Availability
Sunday	08:00 08:30 09:00 09:30 10:00 10:30 11:00 11:30 12:00 12:30 13:00 13:30 14:00 14:30 15:00 15:30 16:00 16:30 17:00 17:30 18:00 18:30 19:00 19:30 20:00 20:30 21:00 21:30 22:00 22:30 23:00 23:30 24:00
Monday	08:00 08:30 09:00 09:30 10:00 10:30 11:00 11:30 12:00 12:30 13:00 13:30 14:00 14:30 15:00 15:30 16:00 16:30 17:00 17:30 18:00 18:30 19:00 19:30 20:00 20:30 21:00 21:30 22:00 22:30 23:00 23:30 24:00
Tuesday	08:00 08:30 09:00 09:30 10:00 10:30 11:00 11:30 12:00 12:30 13:00 13:30 14:00 14:30 15:00 15:30 16:00 16:30 17:00 17:30 18:00 18:30 19:00 19:30 20:00 20:30 21:00 21:30 22:00 22:30 23:00 23:30 24:00
Wednesday	08:00 08:30 09:00 09:30 10:00 10:30 11:00 11:30 12:00 12:30 13:00 13:30 14:00 14:30 15:00 15:30 16:00 16:30 17:00 17:30 18:00 18:30 19:00 19:30 20:00 20:30 21:00 21:30 22:00 22:30 23:00 23:30 24:00
Thursday	08:00 08:30 09:00 09:30 10:00 10:30 11:00 11:30 12:00 12:30 13:00 13:30 14:00 14:30 15:00 15:30 16:00 16:30 17:00 17:30 18:00 18:30 19:00 19:30 20:00 20:30 21:00 21:30 22:00 22:30 23:00 23:30 24:00
Friday	08:00 08:30 09:00 09:30 10:00 10:30 11:00 11:30 12:00 12:30 13:00 13:30 14:00 14:30 15:00 15:30 16:00 16:30 17:00 17:30 18:00 18:30 19:00 19:30 20:00 20:30 21:00 21:30 22:00 22:30 23:00 23:30 24:00
Saturday	08:00 08:30 09:00 09:30 10:00 10:30 11:00 11:30 12:00 12:30 13:00 13:30 14:00 14:30 15:00 15:30 16:00 16:30 17:00 17:30 18:00 18:30 19:00 19:30 20:00 20:30 21:00 21:30 22:00 22:30 23:00 23:30 24:00

Add Cancel

The following table describes the labels in this screen.

Table 55 Site-wide > Configure > Access points > SSID advanced settings

LABEL	DESCRIPTION
SSID	Select the SSID profile to which the settings you configure here is applied.
Basic info	
SSID name	This shows the SSID name as it appears to WiFi clients. Click the text box and enter a new SSID if you want to change it.
Enabled	Click this to enable the SSID to be discoverable by WiFi clients.
Hide SSID	Click this if you want to hide your SSID from WiFi clients. This tells any WiFi clients in the vicinity of the Nebula Device using this SSID profile not to display its SSID name as a potential connection. When an SSID is "hidden" and a WiFi client cannot see it, the only way you can connect to the SSID is by manually entering the SSID name in your WiFi connection setup screens. Note: This field only appears when you have a Nebula Device AP and SCR 50AXE in your site.
Network access	Note: You cannot enable MAC authentication, 802.1X authentication and web authentication at the same time. Note: User accounts can be created and authenticated using the NCC user database. See Section on page 780.

Table 55 Site-wide > Configure > Access points > SSID advanced settings (continued)

LABEL	DESCRIPTION
Security options	Select Open to allow any client to associate this network without any data encryption or authentication. Select Enhanced-open to allow any client to associate this network without any password but with improved data encryption. Select WPA Personal With (WPA1/WPA2/WPA3) and enter a pre-shared key from 8 to 63 case-sensitive keyboard characters to enable WPA1/2/3-PSK data encryption. After selecting WPA Personal With WPA3, Nebula Devices that do not support it will revert to WPA2. - Turn on Transition mode to generate two VAPs (virtual APs) so devices that do not support Enhanced-open / WPA Personal With WPA3 can connect using Open / WPA Personal With WPA2 network. Click Print to display the Wi-Fi Access QR Code that includes the password for quick access. You can save the QR code as PDF. To test, use a smartphone to scan the QR code. Click to join the network. The client device should connect to WiFi directly without asking the password. Select Dynamic personal psk with to have every user connect to the SSID using a unique pre-shared key (PSK) that is linked to their user account; together with My RADIUS server to use an external RADIUS server. Or select Nebula cloud authentication to use the NCC for MAC authentication. This allows you to revoke a user's WiFi network access by disabling their account. Enter an optional backup key in Users can enter this backup key to associate for clients who forget their DPPSK but still want to connect to the SSID. Note: DPPSK only supports Click-to-continue in the Sign-in method. Note: Only one SSID can be configured with DPPSK. After enabling this option, you must create one or more DPPSK users in the site or organization at Site-wide > Configure > Cloud authentication > Account Type > DPPSK. - For details on creating a site DPPSK user, see Section 4.9.3.4 on page 319. - For details on creating organization DPPSK users, see Section 12.4.7.3 on page 766. Turn on MAC-based Authentication with to authenticate WiFi clients by their MAC addresses together with My RADIUS server to use an external RADIUS server. Or select Nebula cloud authentication to use the NCC for MAC authentication. Select WPA-Enterprise with to enable 802.1X secure authentication. You can select My RADIUS server to use an external RADIUS server or select Nebula cloud authentication to use the NCC for 802.1X authentication. - Select Two-Factor Authentication to require that the user log in using both their password and a Google Authenticator code. To log in, users must have Two-Factor Authentication enabled on their account and have setup Google Authenticator on their mobile device. Select Enable on RAP only to only require Two-Factor Authentication when accessing the network through a remote access point (RAP).

Table 55 Site-wide > Configure > Access points > SSID advanced settings (continued)

LABEL	DESCRIPTION
Sign-in method	Select Disabled to turn off web authentication. Select Click-to-continue to block network traffic until a client agrees to the policy of user agreement. Note: After enabling Click-to-continue, the Nebula Device creates a user account with user name "clicktocontinue_X_Y", where X is the radio type (1 = 2.4 GHz, 2 = 5 GHz) and Y is the SSID number (1–8) of the SSID profile. The Nebula Device uses this account to authenticate clients who agree to the terms of the click-to-continue page. Select Voucher to require that a user logs in with a voucher code. For details on vouchers, see Section 5.2.2 on page 333. Note: Vouchers cannot be enabled if Dynamic Personal Pre-Shared Key (DPPSK) or WPA Enterprise are enabled. Select Sign-on with and: - select Nebula cloud authentication to block network traffic until a client authenticates with the NCC through the specifically designated web portal page. - select My RADIUS server to block network traffic until a client authenticates with an external RADIUS server through the specifically designated web portal page. Enable MAC authentication fallback when both RADIUS-based MAC authentication and web authentication are implemented. Scenario 1: When MAC authentication fails. A WiFi client tries to connect to the WiFi network using MAC authentication (RADIUS server). If MAC authentication fails, he will fall back to web authentication. The WiFi client needs to provide a user name and password for web authentication. Scenario 2: When MAC authentication is successful. A WiFi client tries to connect to the WiFi network and passes MAC authentication. Web authentication is then skipped. Note: When MAC authentication fallback is enabled, the WiFi client can avoid network disassociations due to MAC authentication failure. - select Facebook to block network traffic until a client authenticates with the NCC using Facebook Login. Facebook Login is a secure and quick way for users to log into your app or website using their existing Facebook accounts. If you get the App ID for your app at the Facebook developers site, you can enter your Facebook app ID to obtain more information about your users using Facebook Analytics, such as user activity, age, gender, and so on. Note: Facebook Wi-Fi authentication is no longer available (grayed-out). Meta Platforms, Inc. has stopped offering the Facebook Wi-Fi service. If you have been using Facebook Wi-Fi authentication, select another authentication method to continue your WiFi service. - select Microsoft Entra ID (Azure AD) to block network traffic until a client authenticates with the NCC using Microsoft's cloud-based identity and access management service. Then click Download Metadata / Upload Metadata file that contains the configuration details. The metadata file contains all the callback URLs (where to send the successful/unsuccessful authentication responses to) as well as the certificates to use when communicating between the trusted Service Provider (SP) and Identity Provider (IdP). Note: Only one SSID can use Microsoft Entra ID authentication at a time. Since Microsoft Entra ID authentication is a Professional tier license feature, the SSID will be disabled when the organization's license has expired.

Table 55 Site-wide > Configure > Access points > SSID advanced settings (continued)

LABEL	DESCRIPTION
RADIUS server	This field is available only when you select to use the following: • MAC-based Authentication with My RADIUS server or WPA2-Enterprise with My RADIUS server in the WLAN security field, or • when you select Sign-on with My RADIUS server in the Sign-in method field. WPA2-Enterprise features the following: • Over-the-air encryption for wireless network security • Uses 128-bit encryption keys and dynamic session keys to guarantee the privacy of wireless networks as well as enterprise security. Click Add to specify the IP address/domain name, port number, and shared secret password of the RADIUS server to be used for authentication. Note: User must enter the Account Format and Calling Station ID when MAC authentication fallback field is enabled. Note: Nebula Devices with firmware version 5.50 or older will turn OFF this SSID when the Host field is configured with a domain name.
NAS Identifier	Enter the Network Access Server (NAS) Identifier on the Nebula Device to identify the Nebula Device to the RADIUS server, if required. This might be necessary if there are multiple Nebula Devices behind NAT using the same public WAN IP address for the RADIUS server.
RADIUS accounting	This field is available only when you select to use WPA2-Enterprise with My RADIUS server in the WLAN security field, or when you select Sign-on with My RADIUS server in the Sign-in method field. Select RADIUS accounting enabled to enable user accounting through an external RADIUS server. Select RADIUS accounting disabled to disable user accounting through an external RADIUS server.
RADIUS accounting servers	If you select RADIUS accounting enabled, click Add to specify the IP address, port number and shared secret password of the RADIUS server to be used for accounting.
Captive portal advance setting	
Walled garden	Select On to enable Walled garden.
Walled garden ranges	This field is not configurable if you set Sign-in method to Disable. With a walled garden, you can define one or more web site addresses that all users can access without logging in. These can be used for advertisements for example. Select to turn on or off the walled garden feature. Specify walled garden web site links, which use a (wildcard) domain name or an IP address for web sites that all users are allowed to access without logging in.
Self-registration	This field is available only when you set Sign-in method to Sign-on with Nebula Cloud authentication. Select Allow users to create accounts with auto authorized or Allow users to create accounts with manual authorized to display a link in the captive portal login page. The link directs users to a page where they can create an account before they authenticate with the NCC. For Allow users to create accounts with manual authorized, users cannot log in with the account until the account is authorized and granted access. For Allow users to create accounts with auto authorized, users can just use the registered account to log in without administrator approval. Select Don't allow users to create accounts to not display a link for account creation in the captive portal login page.

Table 55 Site-wide > Configure > Access points > SSID advanced settings (continued)

LABEL	DESCRIPTION
Simultaneous login limit	This field is available only when you set Sign-in method to Sign-on with My RADIUS server or Sign-on with Nebula Cloud authentication. Select Unlimited if you allow users to log in as many times as they want as long as they use different IP addresses. Select 1 to 10 if you do NOT allow users to have simultaneous logins.
Strict Policy	Select Allow HTTPS traffic without sign-on to let users use HTTPS to access a web site without authentication. Select Block all access until sign-on to block both HTTP and HTTPS traffic until users authenticate their connections. The portal page will not display automatically if users try to access a web site using HTTPS. They will see an error message in the web screen.
Reauth time	Select Follow site-wide setting or select a specific time the user can be logged in through the captive portal in one session before having to log in again.
NCAS disconnect behavior	This field is available only when: • you set Sign-in method to Sign-on with Nebula Cloud authentication • you enable MAC-based Authentication with and you select Nebula cloud authentication Select Allowed to allow any users to access the network without authentication when the NCAS (Nebula Cloud Authentication Server) is not reachable. Select Limited to allow only the currently connected users or the users in the white list to access the network.
Traffic options	
Forwarding mode	Select Local bridge if you only want to access the Internet. Network traffic from clients connected to the Nebula Device is sent directly to the network through the access point's local gateway. Select NAT mode to have the Nebula Device create a DHCP subnet with its own NAT for the SSID. This simplifies WiFi network management, as you do not need to configure a separate DHCP server. The following Nebula Device features do not work when NAT mode is enabled: • 802.11r • Layer2 isolation • Dynamic VLAN (cloud authentication, RADIUS server) Note: In NAT mode, clients cannot communicate with clients connected to a different Nebula Device. Select Tunnel mode to forward broadcast and multicast traffic using an existing VLAN interface in the Nebula Device (Security Firewall device). This is the interface you configured in Site-wide > Configure > Security gateway > Interface addressing. Note: Tunnel mode is available for Nebula Device (Security Firewall device) only. In Tunnel mode, make sure the ICMP protocol is enabled. See Site-wide > Configure > Firewall: Policy routes/Traffic shaping and Site-wide > Configure > Firewall > Security policy: Action for information. Select Tunnel mode for clients that want to access the network behind the Nebula Device. Select Local bridge for clients that want to access the Internet, but you do not want them to access the network behind the Nebula Device.


Table 55 Site-wide > Configure > Access points > SSID advanced settings (continued)

LABEL	DESCRIPTION
Rate-limit	Set the maximum data download and upload rates in Kbps, on a per-station basis. Click a lock icon to change the lock state. If the lock icon is locked, the limit you set applies to both download and upload traffic. If the lock is unlocked, you can set download and upload traffic to have different transmission speeds. Note: This feature is not available when you enable MLO.
Advanced settings	
VLAN ID	Enter the ID number of the VLAN to which the SSID belongs. Note: If you have a Nebula Security Appliance installed in the site but did not configure an identical VLAN interface on the gateway, Smart Guest/VLAN network tip, click here. displays. Click here to open a screen where you can create a gateway interface with the specified VLAN ID.  Note: If you select Tunnel mode in Forwarding mode, the Tunnel to gateway interface field appears. Select LAN1 as the default.
Band mode	Select to have the SSID use either 2.4 GHz band, 5 GHz band, or 6 GHz band only.
MLO	Select MLO to allow a WiFi7 client to connect to the WiFi7 Nebula Device using multiple frequency bands simultaneously. This increases speed and improves reliability of the WiFi connection. MLO makes WiFi7 ideal for streaming 4K / 8K videos, using augmented reality (AR), virtual reality (VR) applications and playing online games. Note: The following are not supported when MLO is selected. - Band steering (see Site-wide > Configure > Access points > SSID advanced settings: Advanced settings and Site-wide > Configure > Security router > SSID advanced settings: Advanced settings for more details on band steering) - WiFi fast roaming (see Site-wide > Configure > Access points > SSID advanced settings: Network access and Site-wide > Configure > Security router > SSID advanced settings: Network access for more details on WiFi fast roaming) - Dynamic Personal Pre-Shared Key (DPPSK) (see Site-wide > Configure > Access points > SSID advanced settings: Advanced settings for more details on DPPSK)

Table 55 Site-wide > Configure > Access points > SSID advanced settings (continued)

LABEL	DESCRIPTION
Layer 2 isolation	This field is not configurable if you select NAT mode. Select to turn on or off layer-2 isolation. If a device's MAC addresses is NOT listed, it is blocked from communicating with other devices in an SSID on which layer-2 isolation is enabled. Click Add to enter the MAC address of each device that you want to allow to be accessed by other devices in the SSID on which layer-2 isolation is enabled.
Intra-BSS traffic blocking	Select on to prevent crossover traffic from within the same SSID. Select off to allow intra-BSS traffic.
Band select	Select to enable band steering. When enabled, the Nebula Device steers WiFi clients to the 5 GHz band. Note: This feature is not available when you enable MLO. Note: Band mode must be set to Concurrent operation (2.4 GHz and 5 GHz).
Assisted roaming	Select to turn on or off IEEE 802.11k/v assisted roaming on the Nebula Device. When the connected clients request 802.11k neighbor lists, the Nebula Device will respond with a list of neighbor Nebula Devices that can be candidates for roaming. When the 802.11v capable clients are using the 2.4 GHz band, the Nebula Device can send 802.11v messages to steer clients to the 5 GHz band.
802.11r	Select to turn on or off IEEE 802.11r fast roaming on the Nebula Device. 802.11r fast roaming reduces the delay when the clients switch from one Nebula Device to another, by allowing security keys to be stored on all Nebula Devices in a network. Information from the original association is passed to the new Nebula Device when the client roams. The client does not need to perform the whole 802.1x authentication process. Note: This feature is not available when you enable MLO.
U-APSD	Select to turn on or off Automatic Power Save Delivery. This helps increase battery life for battery-powered WiFi clients connected to the Nebula Device.
SSID schedule	
Enabled	Click this switch to the right to enable and configure a schedule.
Schedule	Select a schedule to control when the SSID is enabled or disabled. You can click the edit icon to change the schedule name.
Schedule template	Select a pre-defined schedule template or select Custom schedule and manually configure the day and time at which the SSID is enabled or disabled.
Day	This shows the day of the week.
Availability	Click this switch to the right to enable the SSID at the specified time on this day. Otherwise, click this switch to the left to disable the SSID on the day and at the specified time. Specify the hour and minute when the schedule begins and ends each day.

Table 55 Site-wide > Configure > Access points > SSID advanced settings (continued)

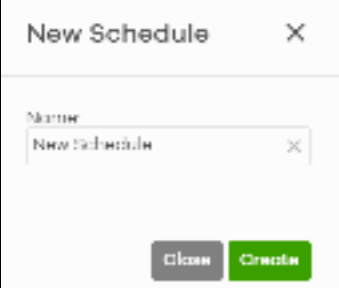LABEL	DESCRIPTION
Add	Click this button to create a new schedule. A window pops up asking you to enter a descriptive name for the schedule for identification purposes. 
Delete	Click this button to remove a schedule which is not used in any SSID profile.

MLO (Multi-Link Operation) in WiFi 7 Nebula Device

Starting from firmware version 7.20, MLO (Multi-Link Operation) in Nebula APs is automatically enabled for WiFi networks using the 802.11be radio. However, you cannot use Open, WPA1, WPA2, WPA2-Mixed security settings for any WiFi network using this radio, nor can you hide a WiFi network's SSID. You also cannot use DPPSK (Dynamic Personal Pre-Shared Key). Using these settings may result in the WiFi network's SSID being disabled and can lead to WiFi connectivity issues.

Note: If you configure any of these security settings for a WiFi network's SSID using the 802.11be radio, then that WiFi network's SSID will be disabled. You will see a log for this in the event logs. To re-enable the WiFi network's SSID, you must change the security setting to one of Open, WPA1, WPA2, WPA2-Mixed, unhide the SSID, and disable DPPSK.


To maximize WiFi connectivity following the deployment of version 7.20, switch the 2.4 GHz radio to 802.11ax mode. This configuration ensures uninterrupted operation of all existing SSIDs on the 2.4 GHz band. This also allows for backward compatibility with legacy devices by retaining support for older security protocols, including Open, WPA1, and WPA2, which are no longer supported under the IEEE 802.11be (WiFi 7) standard. For network environments where all WiFi clients support WPA3, you may optionally revert the 2.4 GHz band to 802.11be mode in order to use the performance benefits of WiFi 7.

5.3.3 Captive Portal Customization

Use this screen to configure captive portal settings for SSID profiles. A captive portal intercepts network traffic until the user authenticates his or her connection, usually through a specifically designated login web page.

Note: The Captive portal customization options are not available when you select Microsoft Entra ID (Azure AD) authentication in Site-wide > Configure > Access points > SSID advanced settings.

The following figure shows the WiFi clients (W) connecting to the (AP) through the SSID1: Office. The Security Gateway (G) connects to an external captive portal server (ES) or RADIUS Server (RS) for authentication.

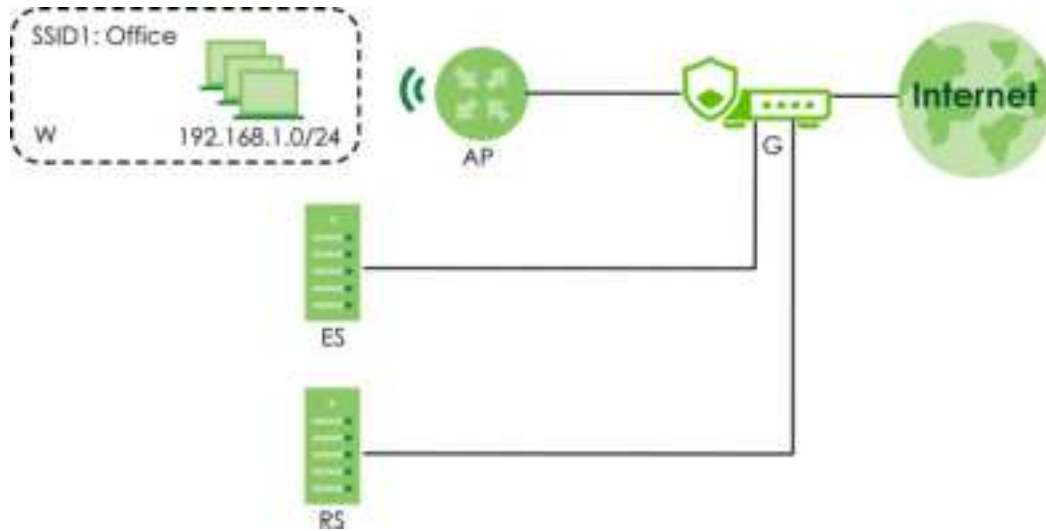

Click Site-wide > Configure > Access points > Captive portal customization to access this screen.

Figure 87 Site-wide > Configure > Access points > Captive portal customization

Captive portal customization

SSID:
Captive portal on this SSID is enabled. You can change this setting. [Learn](#)

Themes

[View theme](#)

Click-to-continue/Welcome/Sign-on page

Logo:  [Upload a logo](#)

Message:

Success page

Message:

External captive portal URL

Use URL: [URL](#)
Please custom captive portal page, please download the zip file and edit theme.
[Download](#) the customized captive portal page example

Captive portal behavior

After the captive portal page where the user should log?

☒ Stay on Captive portal authentication successfully page
☐ To promotion URL

The following table describes the labels in this screen.

Table 56 Site-wide > Configure > Access points > Captive portal customization

LABEL	DESCRIPTION
SSID	Select the SSID profile to which the settings you configure here is applied.
Themes	This section is not configurable when External captive portal URL is set to ON. - Click the Preview icon at the upper right of a theme image to display the portal page in a new frame. - Click the Copy icon to create a new custom theme (login page). - Click the Edit icon of a custom theme to go to a screen where you can view and configure the details of the custom theme pages. See Section 5.3.3.1 on page 356. - Click the Remove icon to delete a custom theme page. Select the theme you want to use on the specified SSID.
Click-to-continue/Voucher/Sign-on page	
This section is not configurable when External captive portal URL is set to ON.	
Logo	This shows the logo image that you uploaded for the customized login page. Click Upload a logo and specify the location and file name of the logo graphic or click Browse to locate it. You can use the following image file formats: GIF, PNG, or JPG.
Message	Enter a note to display below the title. Use up to 1024 printable ASCII characters. Spaces are allowed.
Success page	
Message	Enter a note to display on the page that displays when a user logs in successfully. Use up to 1024 printable ASCII characters. Spaces are allowed.
External captive portal URL	


Table 56 Site-wide > Configure > Access points > Captive portal customization (continued)

LABEL	DESCRIPTION
Use URL	Select On to use a custom login page from an external web portal instead of the one built into the NCC. You can configure the look and feel of the web portal page. Specify the login page's URL; for example, <code>http://IIS server IP Address/login.asp</code>. The Internet Information Server (IIS) is the web server on which the web portal files are installed. Click Download to download a ZIP file containing example captive port files. Edit these files then upload them to a webserver which is accessible from NCC.  The screenshot shows an 'Edit' dialog box with a close button (X) in the top right. It contains a 'URL format:' section with a sample URL: <code>http(s)://external_html?gw_addr=http(s)://192.168.1.35&loginac=aa:bb:cc:ee:ff:gg&usermac=aa:ff:bb:32:cc:33&apip=192.168.1.35&userip=192.168.1.37&ssid_name=MySSID&auth_path=/login.cgi&url=http(s)://192.168.1.35</code>. Below this is a table with two columns: 'Attribute Name' and 'Customized Name'. The table lists several attributes: gw_addr, loginac, usermac, apip, userip, and ssid_name, each with a corresponding customized name field and a delete (X) button. At the bottom right are 'Close' and 'OK' buttons.
Captive portal behavior	
After the captive portal page where the user should go?	Select To promotion URL and specify the URL of the web site or page to which the user is redirected after a successful login. Otherwise, select Stay on Captive portal authenticated successfully page.

5.3.3.1 Custom Theme Edit

Use this screen to check what the custom portal pages look like. You can also view and modify the CSS values of the selected HTML file. Click a custom login page's Edit button in the Site-wide > Configure > Access points > Captive portal screen to access this screen.

Figure 88 Site-wide > Configure > Access points > Captive portal: Edit

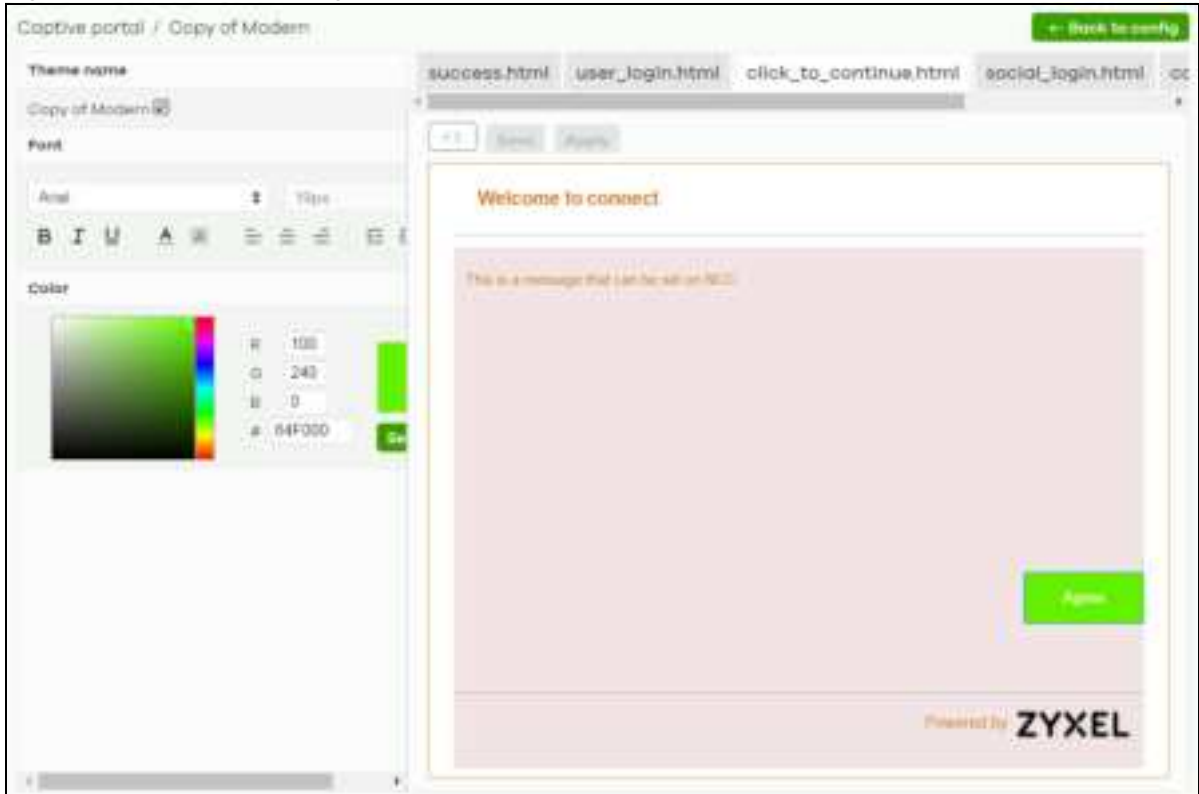

The following table describes the labels in this screen.

Table 57 Site-wide > Configure > Access points > Captive portal: Edit

LABEL	DESCRIPTION
Back to config	Click this button to return to the Captive portal screen.
Theme name	This shows the name of the theme. Click the edit icon to change it.
Font	Click the arrow to hide or display the configuration fields. To display this section and customize the font type and/or size, click on an item with text in the preview of the selected custom portal page (HTML file).
Color	Click the arrow to hide or display the configuration fields. Click an item in the preview of the selected custom portal page (HTML file) to customize its color, such as the color of the button, text, window's background, links, borders, and so on. Select a color that you want to use and click the Select button.
HTML/CSS	This shows the HTML file name of the portal page created for the selected custom theme. This also shows the name of the CSS files created for the selected custom theme. Click a HTML file to display the portal page. You can also change colors and modify the CSS values of the selected HTML file.
	Click this button to view and modify the CSS values of the selected HTML file. It is recommended that you do NOT change the script code to ensure proper operation of the portal page.
	Click this button to preview the portal page (the selected HTML file).
Save	Click this button to save your settings for the selected HTML file to the NCC.
Apply	Click this button to save your settings for the selected HTML file to the NCC and apply them to the access points in the site.

5.3.4 Radio Settings

Use this screen to configure global radio settings for all Nebula Devices in the site. Click Site-wide > Configure > Access points > Radio settings to access this screen.

Figure 89 Site-wide > Configure > Access points > Radio settings

The screenshot displays the 'Radio settings' configuration page. The interface is organized into several sections:

- Country:** A dropdown menu is set to 'United States'. A note indicates: 'The 5 GHz supported country list can be found [here](#)'.
- Deployment selection:** A dropdown menu is set to 'Custom'.
- Maximum output power:** Three rows for 2.4 GHz, 5 GHz, and 6 GHz. Each row has a 'Max power' dropdown and a 'Max dBm' dropdown. The 6 GHz 'Max dBm' dropdown is set to '80 dBm' and includes a 'Global list' link.
- Channel width:** Three rows for 2.4 GHz, 5 GHz, and 6 GHz. Each row has a 'Channel width' dropdown. The 5 GHz dropdown is set to '80 MHz' and includes a note: 'It's a good practice to use channel width 80MHz when is 5 GHz'. The 6 GHz dropdown is set to '160 MHz' and includes a 'Global list' link.
- DCC setting:**
 - DCC time interval:** A toggle switch is turned on, with a value of '15' and a note '300 MHz required'.
 - DCC amplitude:** A toggle switch is turned on. A 'Select pt' dropdown menu is open, showing a list of checkboxes: Monitor, Transmit, Webconsole, Throughput, Ping, Security, and Backup. All are checked.
 - DCC client scan:** A toggle switch is turned on.
 - Avoid SS DFS channel:** A toggle switch is turned on.
 - Block SS DFS channel with greenish channel:** A toggle switch is turned off.
 - 2.4 GHz channel deployment:** A dropdown menu is set to 'Three channel deployment'.
 - 5 GHz channel deployment:** A dropdown menu is set to 'All available channels'.
 - 6 GHz channel deployment:** A dropdown menu is set to 'All available channels' with a 'Global list' link.
- Allow 802.11n/ac/ax authentication:** A toggle switch is turned on. A note states: 'If turned On, legacy clients including 802.11g will not be allowed to associate'.
- Signal sensing:**
 - A toggle switch is turned on. A note states: 'Enabling this function will make AP clear the client to the initial signal AP'.
 - ADVANCED OPTIONS:**
 - 3.4G Setting:**
 - Discontinuous Slot Threshold:** A dropdown menu is set to 'off'.
 - Optimization aggressiveness:** A dropdown menu is set to 'High'.
 - Radio list:** Three radio buttons are present: 'High' (selected), 'Medium', and 'Low'.

The screenshot displays the configuration interface for a Nebula Device, specifically the 'Radio settings' section. It is divided into two main parts: 'RF Setting' and 'WLAN Setting'.

RF Setting:

- Transmit Power Threshold:** Set to -85 dBm (range: -100 to -50).
- Interference Suppression:** Enabled (green bar).
- Mode:** Set to 'Standard' (radio button selected).

WLAN Setting:

- Transmit Power Threshold:** Set to -85 dBm (range: -100 to -50).
- Interference Suppression:** Enabled (green bar).
- Mode:** Set to 'Standard' (radio button selected).

WLAN Mode Control Setting:

- 2.4 GHz:** Lower Density (0 to 30 dBm), High Density (30 to 40 dBm).
- 5 GHz:** Lower Density (0 to 30 dBm), High Density (30 to 40 dBm).
- 6 GHz:** Lower Density (0 to 30 dBm), High Density (30 to 40 dBm).

Summary Bar:

- Mode:** 100% Auto
- 2.4 GHz:** 100% Auto
- 5 GHz:** 100% Auto
- 6 GHz:** 100% Auto
- Channel Width:** 20 MHz
- Power:** 100%
- Mode:** Standard

Table:

Radio #	Model	Radio mode	Channel	Transmit power	Channel width	Interference	Antenna	Antenna gain
1	W8000-01	Auto	AUTO (DCE)	10 dBm	20 MHz	Disabled	Disabled	Disabled
2	W8000-02	Auto	AUTO (DCE)	10 dBm	20 MHz	Disabled	Disabled	Disabled
3	W8000-03	Auto	AUTO (DCE)	10 dBm	20 MHz	Disabled	Disabled	Disabled
4	W8000-04	Auto	AUTO (DCE)	10 dBm	20 MHz	Disabled	Disabled	Disabled

The following table describes the labels in this screen.

Table 58 Site-wide > Configure > Access points > Radio settings

LABEL	DESCRIPTION
Country	Select the country where the Nebula Device is located or installed. The available channels vary depending on the country you selected. Be sure to select the correct or same country for both radios on a Nebula Device and all connected Nebula Devices in order to prevent roaming failure and interference with other systems.
Deployment selection	Select High-density (More than 10 APs) for the lowest output power for 10 or more Access Points. Select Moderate-density (6-9 APs) for moderate output power for 5 to 9 Access Points. Select Low-density (2-5 APs) for higher concentration of output power for less than 5 Access Points. Select Single AP for highest concentration of output power for a single Access Point.
Maximum output power	Selecting any of the options in the Deployment selection field will automatically set the maximum output power for 2.4 / 5 / 6 GHz. But you can change the setting (1 – 30 dBm).

Table 58 Site-wide > Configure > Access points > Radio settings (continued)

LABEL	DESCRIPTION
Channel width	Select the wireless channel bandwidth you want the access point to use. A standard 20 MHz channel offers transfer speeds of up to 144 Mbps (2.4 GHz) or 217 Mbps (5 GHz) whereas a 40 MHz channel uses two standard channels and offers speeds of up to 300 Mbps (2.4 GHz) or 450 Mbps (5 GHz). An IEEE 802.11ac-specific 80 MHz channel offers speeds of up to 1.3 Gbps. An IEEE 802.11be-specific 160 MHz channel offers speeds of up to 2.9 Gbps (6 GHz with 2 spatial streams) whereas a 320 MHz channel offers speeds of up to 5.8 Gbps (6 GHz with 2 spatial streams). 40 MHz (channel bonding or dual channel) bonds two adjacent radio channels to increase throughput. An 80 MHz channel consists of two adjacent 40 MHz channels. The WiFi clients must also support 40 MHz or 80 MHz. It is often better to use the 20 MHz setting in a location where the environment hinders the WiFi signal. Note: It is suggested that you select 20 MHz when there is more than one 2.4 GHz Nebula Device in the network. Note: It is not possible to set channel width to 160 MHz / 240 MHz on 5 GHz for the whole site. To configure a Nebula Device to use 160 MHz / 240 MHz on 5 GHz, select a supported Nebula Device in the table at the bottom of the screen, click Edit, and then select 160 MHz under Channel width.
DCS setting	
DCS time interval	Select ON to set the DCS time interval (in minutes) to regulate how often the Nebula Device surveys the other Nebula Devices within its broadcast radius. If the channel on which it is currently broadcasting suddenly comes into use by another Nebula Device, the Nebula Device will then dynamically select the next available clean channel or a channel with lower interference.
DCS schedule	Select ON to have the Nebula Device automatically find a less-used channel within its broadcast radius at a specific time on selected days of the week. You then need to select each day of the week and specify the time of the day (in 24-hour format) to have the Nebula Device use DCS to automatically scan and find a less-used channel.
DCS client aware	Select ON to have the Nebula Device wait until all connected clients have disconnected before switching channels.
Avoid 5G DFS channel	If your Nebula Devices are operating in an area known to have RADAR devices, the Nebula Device will choose non-DFS channels to provide a stable WiFi service.
Blacklist DFS channels in the presence of radar	Select ON to blacklist a channel if RADAR is detected. After being blacklisted, the Nebula Device will not use the channel again until the Nebula Device is rebooted. However, the Nebula Device can still use other DFS channels.
2.4 GHz channel deployment	Select Three-Channel Deployment to limit channel switching to channels 1, 6, and 11, the three channels that are sufficiently attenuated to have almost no impact on one another. In other words, this allows you to minimize channel interference by limiting channel-hopping to these three "safe" channels. Select Four-Channel Deployment to limit channel switching to four channels. Depending on the country domain, if the only allowable channels are 1 – 11 then the Nebula Device uses channels 1, 4, 7, 11 in this configuration; otherwise, the Nebula Device uses channels 1, 5, 9, 13 in this configuration. Four channel deployment expands your pool of possible channels while keeping the channel interference to a minimum. Select All available channels to allow channel-hopping to have the Nebula Device automatically select the best channel. Select Manual to select the individual channels the Nebula Device switches between.

Table 58 Site-wide > Configure > Access points > Radio settings (continued)

LABEL	DESCRIPTION
5 GHz channel deployment	Select how you want to specify the channels the Nebula Device switches between for 5 GHz operation. Select All available channels to have the Nebula Device automatically select the best channel. Select Manual to select the individual channels the Nebula Device switches between. Note: The method is automatically set to All available channels when no channel is selected or any one of the previously selected channels is not supported.
6 GHz channel deployment	Select how you want to specify the channels the Nebula Device switches between for 6 GHz operation. Select All available channels to have the Nebula Device automatically select the best channel. Select Manual to select the individual channels the Nebula Device switches between. Note: The method is automatically set to All available channels when no channel is selected or any one of the previously selected channels is not supported.
Allow 802.11ax/ac/n stations only	Select ON to have the Nebula Device allow only IEEE 802.11n/ac/ax clients to connect, and reject IEEE 802.11a/b/g clients.
Smart Steering	Select ON to enable smart client steering on the Nebula Device. Client steering helps monitor WiFi clients and drop their connections to optimize the bandwidth when the clients are idle or have a low signal. When a WiFi client is dropped they have the opportunity to steer to an Nebula Device with a strong signal. Additionally, dual band WiFi clients can also steer from one band to another. Select OFF to disable this feature on the Nebula Device.
ADVANCED OPTIONS	Click this to display a greater or lesser number of configuration fields.
2.4 GHz / 5 GHz / 6 GHz Setting	
Disassociate Station Threshold	Set a minimum kick-off signal strength. When a WiFi client's signal strength is lower than the specified threshold, the Nebula Device disconnects the WiFi client. –20 dBm is the strongest signal you can require and –105 dBm is the weakest.
Optimization aggressiveness	High, Standard and Low stand for different traffic rate threshold levels. The level you select here decides when the Nebula Device takes action to improve the access point's WiFi network performance. The Nebula Device will postpone the actions implemented on access points until your network is less busy if the threshold is exceeded. Select a suitable traffic rate threshold level for your network. High: Select this if you want the Nebula Device to postpone the action set when the access point network traffic is heavy. Standard: Select this if you want the Nebula Device to postpone the action set when the access point network traffic is medium. Low: Select this if you want the Nebula Device to postpone the action set when the access point network traffic is low.
802.11d	Click this to enable 802.11d on the access point. 802.11d is a WiFi network specification, for use in countries where 802.11 WiFi is restricted. Enabling 802.11d causes the Nebula Device to broadcast the country where it is located, which is determined by the Country setting. Note: Disable 802.11d on older client devices with connection issues.
WLAN Rate Control Setting	

Table 58 Site-wide > Configure > Access points > Radio settings (continued)

LABEL	DESCRIPTION
2.4 GHz / 5 GHz / 6 GHz	Sets the minimum data rate that 2.4 GHz, 5 GHz, and 6 GHz WiFi clients can connect to the Nebula Device, in Mbps. Increasing the minimum data rate can reduce network overhead and improve WiFi network performance in high density environments. However, WiFi clients that do not support the minimum data rate will not be able to connect to the Nebula Device.
Edit	Click this button to modify the channel, output power, channel width, airtime fairness (the same setting will apply to both 2.4 GHz and 5 GHz), and smart steering settings for the selected Nebula Devices. On the Nebula Device that comes with internal antennas and also has an antenna switch, you can adjust coverage depending on the orientation of the antenna for the Nebula Device radios. Select Wall if you mount the Nebula Device to a wall. Select Ceiling if the Nebula Device is mounted on a ceiling. You can switch from Wall to Ceiling if there are still WiFi dead zones, and so on. If you select Hardware Switch, you use the physical antenna switch to adjust coverage and apply the same antenna orientation settings to both radios.  Note: On this screen, you can set channel width to 160 MHz for the 5/6 GHz channel, if the Nebula Device supports it.
DCS Now	Click this button to have the selected Nebula Devices immediately scan for and select a channel that has least interference.
List	Click this to display a list of all connected Nebula Devices.
Map	Click this to display the locations of all connected Nebula Devices on the Google map.
2.4 GHz	Click this to display the connected Nebula Devices using the 2.4 GHz frequency band.
5 GHz	Click this to display the connected Nebula Devices using the 5 GHz frequency band.
6 GHz	Click this to display the connected Nebula Devices using the 6 GHz frequency band.
BandFlex	Click this to display the connected Nebula Devices that supports BandFlex (5 GHz or 6 GHz frequency bands).
Hide transmit circles	Click this button to not show the transmission range on the Map.
Access point	This displays the descriptive name or MAC address of the connected Nebula Device.
Radio #	This displays the number of the connected Nebula Device's radio.
Model	This displays the model name of the connected Nebula Device.

Table 58 Site-wide > Configure > Access points > Radio settings (continued)

LABEL	DESCRIPTION
Radio mode	This displays the type of WiFi radio the Nebula Device is currently using, for example 802.11b/g/n / 802.11be / Auto. Note: 802.11be and Auto (up to 802.11be) is available for WiFi 7 devices only.
Channel	This displays the channel ID currently being used by the connected Nebula Device's radio.
Transmit power	This displays the current transmitting power of the connected Nebula Device's radio. If the Nebula Device is offline, this shows the maximum output power you configured for the Nebula Device.
Channel width	This displays the wireless channel bandwidth the connected Nebula Device's radio is set to use.
Smart steering	This displays whether smart client steering is enabled or disabled on the connected Nebula Devices.
Antenna	This displays the antenna orientation settings for the Nebula Device that comes with internal antennas and also has an antenna switch.
Airtime fairness	This displays whether airtime fairness is enabled or disabled on the connected Nebula Device.
	Click this icon to display a greater or lesser number of configuration fields. For faster loading of data, select only the configuration fields listed that do NOT take a long time to fetch data.

The following table describes the pre-defined deployments and the related output power, channel width, DFS (Dynamic Frequency Selection) setting, rate control, and channel deployment.

Table 59 Radio Deployment Selection and Corresponding Parameters

DEPLOYMENT		HIGH DENSITY	MODERATE DENSITY	LOW DENSITY	SINGLE AP
Number of APs		More than 10	6 – 9	2 – 5	1
Power (dBm)	2 GHz	12	15	20	30 20 (EU)
	5 GHz	15	18	30	30
	6 GHz	18	21	30	30
Channel width (MHz)	5 GHz	20	40	80	80
	6 GHz	80	160	160	160
Avoid 5 GHz DFS channel / Blacklist DFS channels in the presence of radar		Disabled / Enabled	Enabled / Disabled	Enabled / Disabled	Enabled / Disabled
Rate control (Mbps)	2.4 GHz	11	1	1	1
	5 GHz	12	6	6	6
2.4 GHz channel deployment		All channels	Three-channel	Three-channel	Three-channel

5.3.5 Traffic Shaping

This feature is for dynamic VLAN application. The data limit set here applies to the VLAN on a per WiFi client basis. This has a higher priority than the data limit set in Site-wide > Configure > Access points > SSID advanced settings, which is applied on a per station basis. Use this screen to configure maximum bandwidth on the Nebula Device.

Click Site-wide > Configure > Access points > Traffic shaping to access this screen.

Figure 90 Site-wide > Configure > Access point > Traffic shaping



The following table describes the labels in this screen.

Table 60 Site-wide > Configure > Access points > Traffic shaping

LABEL	DESCRIPTION
WLAN traffic shaping	
Rule Name	Enter the name of the traffic shaping rule. The name is used to refer to the traffic shaping rule. You may use 1 – 31 alphanumeric characters, underscores(_), or dashes (-). This value is case-sensitive.
VLAN ID	Enter the VLAN ID. This 12-bit number uniquely identifies each VLAN. Allowed values are 1 – 4094. (0 and 4095 are reserved.)
Rate-limit	Set the maximum data download and upload rate in Mb/s, on a per WiFi client basis. Allowed values are 1 – 160. Click the lock icon to change the lock state. If the lock icon is locked, the data limit you set applies to both download and upload traffic. If the lock is unlocked, you can set download and upload traffic to have different data limits.
Add	Click this button to create a new rule.

5.3.6 Security Service

Use this screen to enable or disable the features available in the security pack for your Nebula Device, such as application visibility and optimization and/or IP reputation filter.

Click Site-wide > Configure > Access points > Security service to access this screen.

Figure 91 Site-wide > Configure > Access points > Security service



The following table describes the labels in this screen.

Table 61 Site-wide > Configure > Access points > Security service

LABEL	DESCRIPTION
Application Visibility & Optimization	
Application visibility & Optimization	Select this option to turn on application visibility and optimization. Application visibility and optimization does the following: • Detects the type of applications used by WiFi clients, • Throttles specific applications to save WiFi bandwidth. Application visibility provides a way for a Nebula Device to manage the use of various applications on its WiFi network. It can detect the type of applications used by WiFi clients and how much bandwidth they use. Application optimization limits the applications bandwidth usage by their categories. You can manage and view the applications and their categories in Site-wide > Applications usage > Application view by Access Point.
Threat Protection	

Table 61 Site-wide > Configure > Access points > Security service (continued)

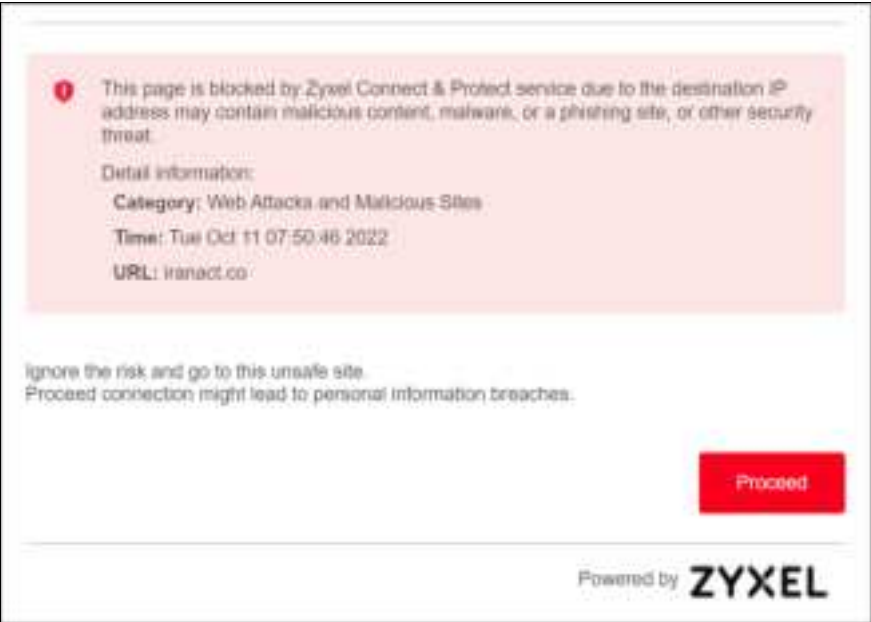
LABEL	DESCRIPTION
Enabled	Select this option to allow inspection of DNS queries made by clients on your network and turn on IP blocking on the Nebula Device. When you enable the DNS threat service, your Nebula Device inspects the DNS queries against a database of blocked or allowed Fully Qualified Domain Names (FQDNs). You can have the Nebula Device reply to the user with a fake DNS response (where the user will see a "Web Page Blocked!" page). When you enable the IP reputation service, your Nebula Device downloads signature files that identifies reputation of IPv4 addresses. You can have the Nebula Device forward, block, and/or log packets from IPv4 addresses based on these signatures and categories.
Block log	Select this option to create a log on the Nebula Device when the packet comes from an IPv4 address with bad reputation.
Click to proceed	Select this option to allow clients to browse unsafe websites. When enabled, the denied access message window includes the Proceed button. To continue, you must close and restart your web browser to visit the unsafe website. 
Denied access message	Enter a message to be displayed when IP reputation filter blocks access to a web page. Use up to 127 characters (0–9a–zA–Z;/?:@&=+\$\._!~*()'%, "). For example, "Access to this web page is not allowed. Please contact the network administrator". It is also possible to leave this field blank if you have a URL specified in the Redirect external URL field. In this case if the IP reputation filter blocks access to a web page, the Nebula Device just opens the web page you specified without showing a denied access message.
Redirect external URL	Enter the URL of the web page to which you want to send users when their web access is blocked by IP reputation filter. The web page you specify here opens in a new frame below the denied access message. Use "http://" or "https://" followed by up to 262 characters (0–9a–zA–Z;/?:@&=+\$\._!~*()'%, "). For example, http://192.168.1.17/blocked access.
Notification page	Select this option to display the notification page.
Enable on	Select the SSID 1 – 8 that is allowed access to WiFi clients.
Access message	Enter a message to be displayed when access to a web page is allowed. Use up to 127 characters (0–9a–zA–Z;/?:@&=+\$\._!~*()'%, "). For example, "Access to this web page is not allowed. Please contact the network administrator".

Table 61 Site-wide > Configure > Access points > Security service (continued)

LABEL	DESCRIPTION
Category list	Select the categories of packets that come from the Internet and are known to pose a security threat to users or their computers.
IP Reputation exempt list	Sites that you want to allow access to, regardless of their content rating, can be allowed by adding them to this list. Add the IPv4 addresses that the Nebula Device will allow the incoming and outgoing packets.
DNS Threat exempt list	Domain names that you want to allow access to, regardless of their reputation, can be allowed by adding them to this list. Add the Fully Qualified Domain Names (FQDNs) that the Nebula Device will allow the DNS query packets.

5.3.7 AP & Port Settings

Use this screen to configure general Nebula Device settings and network traffic load balancing between the Nebula Devices in the site. This screen also allows you to enable or disable a port on the managed Nebula Device and configure the port's VLAN settings. The port settings apply to all Nebula Devices that are assigned to the site and have one or more than one Ethernet LAN port (except the uplink port).

Click Site-wide > Configure > Access points > AP & port settings to access this screen.

Figure 92 Site-wide > Configure > Access points > AP & port settings

AP & port settings

General setting

LED lights ☒

Smart mesh ☒ [Subnet list](#)

Ethernet fallback ☒

MLO [Auto](#) ⓘ MLO is linked to the activation state of the Wi-Fi 7 standard. Enabling the 802.11be protocol on a device simultaneously enables MLO capabilities.

AP grouping [Auto](#) ⓘ ☐

Load balancing

☐ Disable

☒ Enable "By client device number" mode

Recommended for general use

140 Maximum client device number: 10 = 1-121

50 Maximum client device number: 10 = 1-121

60 Maximum client device number: [Multiple](#) ⓘ 10 = 1-121

☐ Crossconnect client device when overloaded

☐ Enable "Smart Classroom" mode

Recommended for Classroom only

140 Maximum client device number: 10 = 1-121

50 Maximum client device number: 10 = 1-121

60 Maximum client device number: [Multiple](#) ⓘ 10 = 1-121

Port setting

LAN 1 ☒

PVID: 1 ⓘ

Allowed VLANs: 1 ⓘ

LAN 2 ☒

PVID: 1 ⓘ

Allowed VLANs: 1 ⓘ

LAN 3 ☒

PVID: 1 ⓘ

Allowed VLANs: 1 ⓘ

Access point	Status	Port Setting
BC88TCS0P-0A	LAN 1: Enable LAN 2: Enable LAN 3: Enable	LAN 1: PVID 1 - Allowed VLAN 1 LAN 2: PVID 1 - Allowed VLAN 1 LAN 3: PVID 1 - Allowed VLAN 1

The following table describes the labels in this screen.

Table 62 Site-wide > Configure > Access points > AP & port settings

LABEL	DESCRIPTION
General setting	
LED lights	Click to turn on or off the LEDs on the Nebula Devices.
Smart mesh	Click to enable or disable the Nebula Smart Mesh feature on all Nebula Devices in the site. Click Model list to see whether your Nebula Device supports Nebula Smart Mesh. Note: Nebula Smart Mesh is a WiFi mesh solution for Nebula Devices. For details, see Section 5.1.1 on page 330. Note: You can override NCC settings and enable or disable Smart Mesh on individual Nebula Devices. For details, see Section 4.3.1.1 on page 237. Note: Disabling Nebula Device Smart Mesh automatically disables wireless bridge on all Nebula Devices in the site. For details on wireless bridge, see Section 4.3.1.1 on page 237.
Ethernet failover	When enabled, a wired Nebula Device in the site automatically changes its role from mesh controller to mesh extender if the Nebula Device is unable to reach the site's gateway. When disabled, a wired Nebula Device in the site automatically changes its role from mesh controller to mesh extender only if the Nebula Device's uplink Ethernet cable is unplugged. Note: For details on mesh controller and mesh extender, see Section 5.1.1 on page 330.
MLO	Select MLO (Multi-Link Operation) to allow a WiFi7 client to connect to the WiFi7 Nebula Device using multiple frequency bands simultaneously. This increases speed and improves reliability of the WiFi connection. MLO makes WiFi7 ideal for streaming 4K / 8K videos, using augmented reality (AR), virtual reality (VR) applications and playing online games.
AP grouping	Select this option to enable the creation of up to 24 SSIDs per site in the Site-wide > Configure > Access points > SSID settings screen. Additionally, use tags to assign up to 8 SSIDs to each AP group.
Load balancing	
Disable	Select this option to disable load balancing on the Nebula Device.
Enable "By client device number" mode	Select this option to balance network traffic based on the number of specified client devices connected to the Nebula Device.
2.4 GHz / 5 GHz / 6 GHz Maximum client device number	Enter the threshold number of client devices (1 to 127) at which the Nebula Device begins load balancing its connections.
Disassociate client device when overloaded	Select ON to disassociate WiFi clients connected to the Nebula Device when it becomes overloaded. Select OFF to disable this option, then the Nebula Device simply delays the connection until it can afford the bandwidth it requires, or it transfers the connection to another Nebula Device within its broadcast radius. The disassociation priority is determined automatically by the Nebula Device and is as follows: • Idle Time – Devices that have been idle the longest will be disassociated first. If none of the connected devices are idle, then the priority shifts to Signal Strength. • Signal Strength – Devices with the weakest signal strength will be disassociated first.

Table 62 Site-wide > Configure > Access points > AP & port settings (continued)

LABEL	DESCRIPTION
Enable "Smart Classroom" mode	Select this option to balance network traffic based on the number of specified client devices connected to the Nebula Device. The Nebula Device ignores association request and authentication request packets from any new client device when the maximum number of client devices is reached. The Disassociate client device when overloaded function is enabled by default and the disassociation priority is always Signal Strength when you select this option.
2.4 GHz / 5 GHz / 6 GHz Maximum client device number	Enter the threshold number of client devices (1 to 127) at which the Nebula Device begins load balancing its connections.
Port setting	
LAN x	This is the name of the physical Ethernet port on the Nebula Device. This section lets you configure global port VLAN settings for all Nebula Devices in the site. To modify port settings for a specific Nebula Device, use its Edit button in the table below.
ON/OFF	Select ON to turn on the LAN port of the Nebula Device. Select OFF to disable the port.
PVID	Enter the port's PVID. A PVID (Port VLAN ID) is a tag that adds to incoming untagged frames received on a port so that the frames are forwarded to the VLAN group that the tag defines.
Allowed VLANs	Enter the VLAN ID numbers to which the port belongs. Only the network traffic from the allowed VLANs will be sent or received through this port. You can enter individual VLAN ID numbers separated by a comma or a range of VLANs by using a dash, such as 1,3,5-8.
Access point	This displays the descriptive name or MAC address of the connected Nebula Device. Only the Nebula Device that has an extra Ethernet LAN port will be listed, such as NAP203 or NAP303.
Status	This shows whether the Nebula Device's Ethernet LAN port is enabled or disabled.
Port Setting	This displays the port's VLAN settings for the managed Nebula Device.

5.3.7.1 Edit Port Settings

Click an entry in the Port setting table of the Site-wide > Configure > Access points > AP & port settings screen to access this screen.

Select NAT mode to have the Nebula Device create a DHCP subnet with its own NAT for the SSID. This simplifies WiFi network management, as you do not need to configure a separate DHCP server. Otherwise, select Local bridge.

The following Nebula Device features do not work when NAT mode is enabled:

- 802.11r (see [Table 55 on page 346](#) for more information on enabling 802.11r)
- Layer2 isolation
- Dynamic VLAN (cloud authentication, RADIUS server)

Note: In NAT mode, clients cannot communicate with clients connected to a different Nebula Device.

Only WAC500H supports Ethernet Traffic options Forwarding Mode at the time of writing.

By default, all Nebula Devices in the site use the global port settings. Use this screen to change the port settings on a per-device basis. You can turn on or off the port, modify its PVID or update the ID number of VLANs to which the port belongs.

Figure 93 Site-wide > Configure > Access points > AP & port settings: Edit

Edit

Ethernet Traffic options

Forwarding Mode

☒ Local bridge

☐ NAT mode

[Use Zyvel DHCP & NAT](#) [Get Model list](#)

Clients receive IP addresses in an isolated network.

Client cannot communicate with other clients associated with different AP.

LAN 1

Enabled ☒

PVID

Allowed VLANs

Close OK

CHAPTER 6

Switch

6.1 Overview

This chapter discusses the menus that you can use to monitor the Nebula managed Switches in your network and configure settings even before a Nebula Device is deployed and added to the site.

Nebula Device refers to Zyxel Hybrid Switches (GS / XGS / XMG / XS Series) in this chapter. The Nebula Device can operate in either standalone or Nebula cloud management mode. When the Nebula Device is in standalone mode, it can be configured and managed by the Web Configurator. When the Nebula Device is in Nebula cloud management mode, it can be managed and provisioned by the NCC. To view the list of Nebula Devices that can be managed through NCC, go to Help > Support tools > Device function table.

6.2 Monitor


Use the Monitor menus to check the Nebula Device information, client information, event log messages and summary report for Nebula Devices in the selected site.

6.2.1 Event Log

Use this screen to view Nebula Device log messages. You can enter the Nebula Device name or a key word, select one or multiple event types, or specify a date/time or even a time range to display only the log messages related to it.

Click Site-wide > Monitor > Switches > Event log to access this screen.

Figure 94 Site-wide > Monitor > Switches > Event log

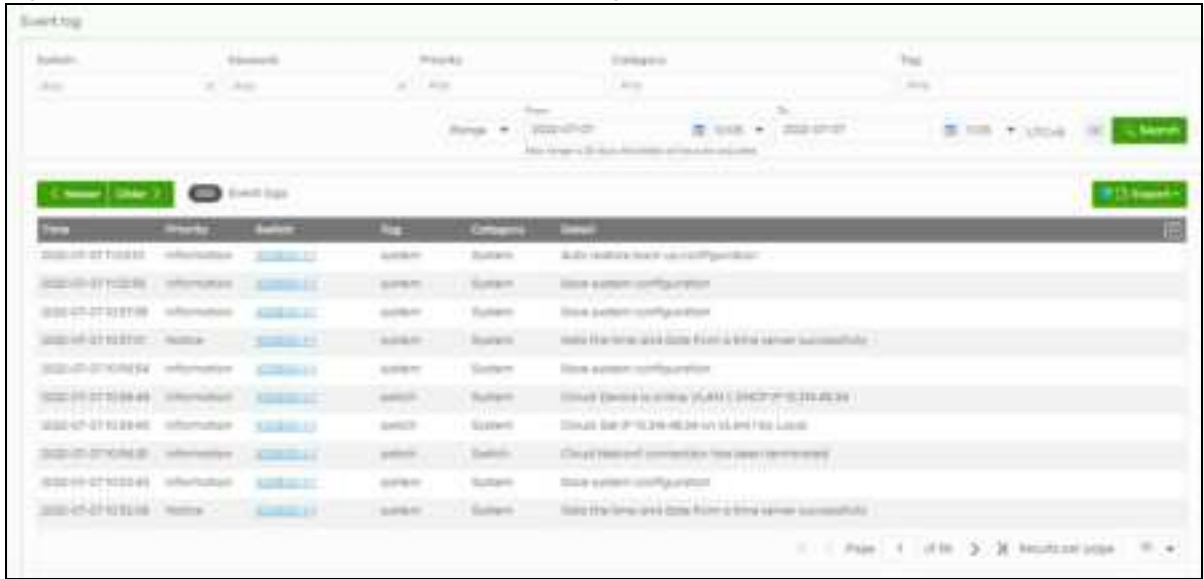

6.2.2 Surveillance

Use this screen to view information about Powered Devices (PDs) connected to ports on the Nebula Device.

Click Site-wide > Monitor > Switches > Surveillance to access this screen.

Figure 95 Site-wide > Monitor > Switches > Surveillance

The screenshot shows the 'Surveillance' interface. At the top, there are tabs for 'Switch ports' and 'Powered devices'. Below these, there are filters for 'Search ports' and 'Switch ports'. The main table has columns: Switch/Port, PD Name, PD Type, Link speed, Port status, Switch ID (ID), CID, Extended range, Device type, and System name. The table lists several switch ports and their connected PDs, including '300F4H1000S - Port1' and '300F4H1000S - Port2'.

The following table describes the labels in this screen.

Table 63 Site-wide > Monitor > Switches > Surveillance

LABEL	DESCRIPTION
Search ports	Enter a keyword to filter the list of ports or devices.
N switch ports	This shows the number of Nebula Device ports (N) in the list.
	This shows the number of connected PDs that did not respond to an automatic PD alive check.
	This shows the number of ONVIF-compatible IP camera devices connected to Nebula Devices in the site.

Table 63 Site-wide > Monitor > Switches > Surveillance (continued)

LABEL	DESCRIPTION
	This shows the number of ONVIF-compatible NVR devices connected to Nebula Devices in the site.
	This shows the number of connected devices that did not respond to an ONVIF discovery query, or are of an unknown type.
Switch/Port	This shows the port number of the Nebula Device.
Port name	This shows the port description on the Nebula Device.
PD health	This shows the status of auto PD recovery on this port. - Red: The Nebula Device failed to get information from the PD connected to the port using LLDP, or the connected PD did not respond to the Nebula Device's ping requests. - Yellow: The Nebula Device is restarting the connected PD by turning the power off and turning it on again. - Green: The Nebula Device successfully discovered the connected PD using LLDP or ping. --: Auto PD Recovery is not enabled on the Nebula Device and/or the port, or the switch is not supplying power to the connected PD. Note: For details on configuring auto PD recovery on a port, see Section 6.3.1 on page 388.
Link speed	This shows the speed (either 10M for 10 Mbps, 100M for 100 Mbps, or 1G for 1 Gbps) and the duplex (F for full duplex or H for half). This field displays Down if the port is not connected to any device.
PoE draw(W)	This shows the total power that the connected PD draws from the port, in watts. This allows you to plan and use within the power budget of the Nebula Device.
Bandwidth (Kbps)	Tx shows the number of kilobytes per second transmitted on this port. Rx shows the number of kilobytes per second received on this port.
CRC	This shows the number of packets received with CRC (Cyclic Redundant Check) errors.
Extended range	This shows whether extended range is enabled on the port.
Device type	This shows the device type of the PD, as reported by ONVIF discovery.
System name	This shows the name of the connected PD, as reported by ONVIF or LLDP.
IP	This shows the IP address of the connected PD, as reported by ONVIF or LLDP.
Discovered devices	This shows how many devices are connected to the port. Click the number to go to the Surveillance Port Details screen.

6.2.3 Surveillance Port Details

Use this screen to view detailed information about a port on the Surveillance screen.

Go to Site-wide > Monitor > Switches > Surveillance and click on a value in the Discovered Devices column to access this screen.

Figure 96 Site-wide > Monitor > Switches > Surveillance > Port Details



The following table describes the labels in this screen.

Table 64 Site-wide > Monitor > Switches > Surveillance > Port Details

LABEL	DESCRIPTION
Status	
Link speed	This shows the speed (either 10M for 10 Mbps, 100M for 100 Mbps, or 1G for 1 Gbps) and the duplex (F for full duplex or H for half). This field displays Down if the port is not connected to any device.
PoE draw	This shows the total power that the connected PD draws from the port, in watts. This allows you to plan and use within the power budget of the Nebula Device.
PD health	This shows the status of auto PD recovery on this port. - Red: The Nebula Device failed to get information from the PD connected to the port using LLDP, or the connected PD did not respond to the Nebula Device's ping requests. - Yellow: The Nebula Device is restarting the connected PD by turning the power off and turning it on again. - Green: The Nebula Device successfully discovered the connected PD using LLDP or ping. --: Auto PD Recovery is not enabled on the Nebula Device and/or the port, or the Nebula Device is not supplying power to the connected PD. For details on configuring auto PD recovery on a port, see Section 6.3.1 on page 388.
Extended range	This shows whether extended range is enabled on the port.
Bandwidth Tx/Rx (%)	Tx shows the number of kilobytes per second transmitted on this port. Rx shows the number of kilobytes per second received on this port.
CRC	This shows the number of packets received with CRC (Cyclic Redundant Check) errors.
Power reset	Click Power reset to power off the PD connected to the port, by temporarily disabling then re-enabling PoE.
Neighbor detail	This section shows all clients connected to the port.
Search clients	Search for one or more clients in the list by keyword, status, system name, port, IP address, or firmware version.
clients	This shows the number of clients connected to this port.
Flush	Click this to remove all offline clients from the list.
Status	This shows whether the client is online (green) or offline (red), and whether the client is wired or wireless.
System name	This displays the system name of the Nebula Device.
Port	This displays the number of the Nebula Device port that is connected to the Nebula Device.
IP	This shows the IP address of the Nebula Device.

Table 64 Site-wide > Monitor > Switches > Surveillance > Port Details (continued)


LABEL	DESCRIPTION
Firmware	This shows the firmware version currently installed on the Nebula Device.
Description	This shows the descriptive name of the Nebula Device.

6.2.4 IPTV Report

Use this screen to view available IPTV channels and client information.

Click Site-wide > Monitor > Switches > IPTV report to access this screen.

Figure 97 Site-wide > Monitor > Switches > IPTV Report

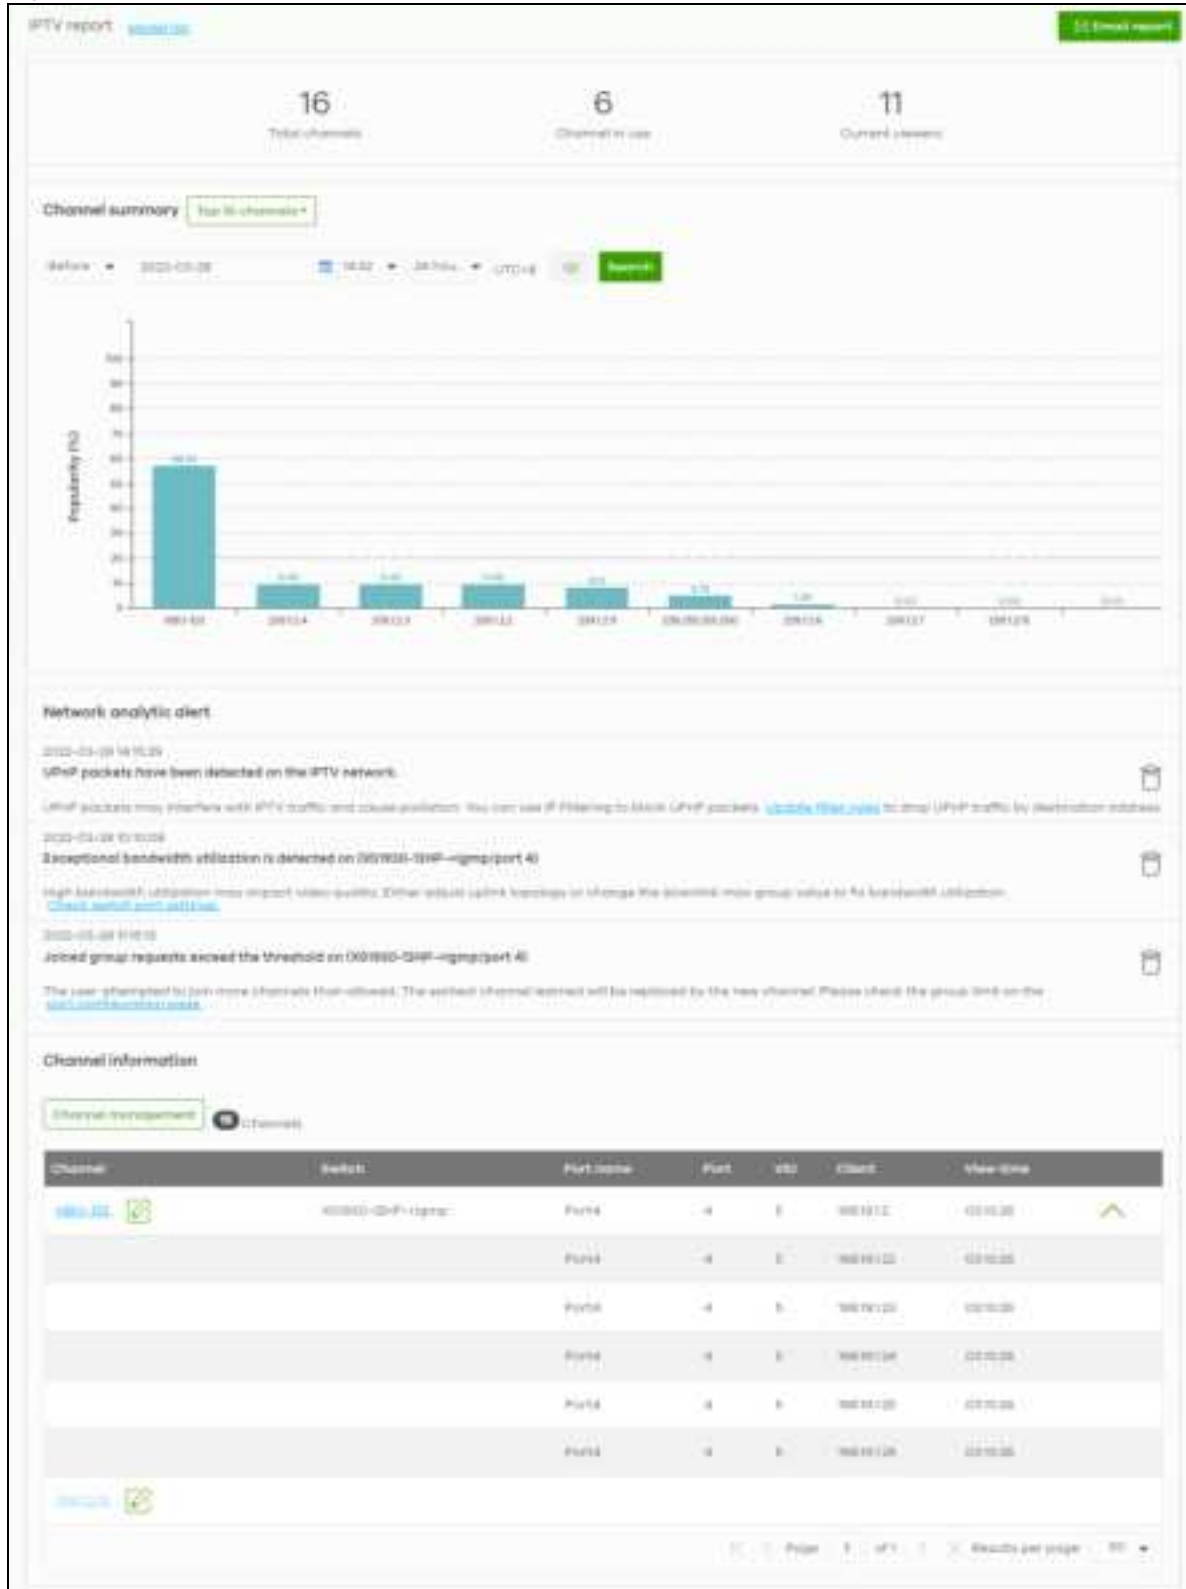

The following table describes the labels in this screen.

Table 65 Site-wide > Monitor > Switches > IPTV Report

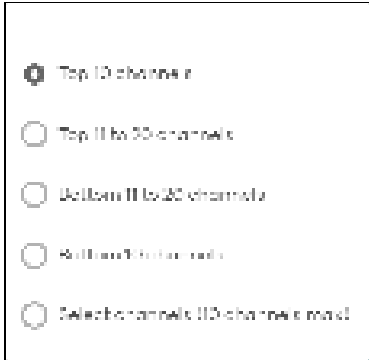
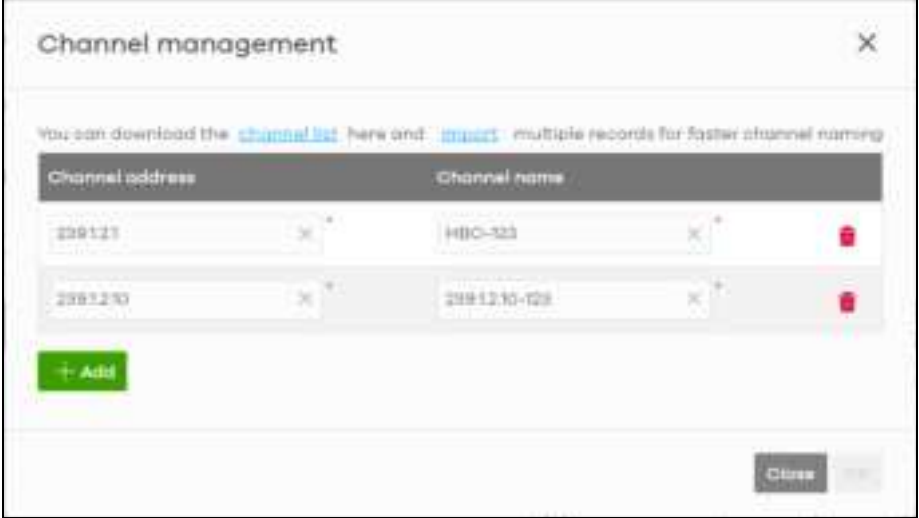
LABEL	DESCRIPTION
IPTV report	Click Model list to show the Non-supported model list. Click See more to go to the Help > Support tools > Device function table screen.
Email report	Click this button to send channel summary report by email, change the report logo and set email schedules.
Total channels	This shows the total number of IPTV channels that match the search criteria.
Channel in use	This shows the number of channels that are being watched by IPTV clients.
Current viewers	This shows the number of clients who are watching the IPTV channels.
Channel Summary	
	Select to view the channels according to the ranking. Alternatively, select Select channels to choose specific channels and click Apply. 
Search	Specify a date/time and select to view the channels available in the past day, week or month before the specified date/time after you click Search. You can also select Range in the second field, set a time range and click Search to display only the channels available within the specified period of time.
y-axis	The y-axis represents the Popularity (%) of IPTV channels.
x-axis	The x-axis shows the name of the IPTV channel. It shows the channel's multicast group address by default.
Network Analytic Alert	This shows the alerts the NCC generates when an error or something abnormal is detected on the IPTV network. For example, the maximum number of the IGMP multicast groups (TV channels) a Nebula Device port can join is reached and new groups replace the earliest ones, UPnP packets are detected on the IPTV network and may interfere with IPTV traffic to cause TV pixelation, or high bandwidth usage on a certain Nebula Device port results in loss of video quality.
Channel Information	

Table 65 Site-wide > Monitor > Switches > IPTV Report (continued)

LABEL	DESCRIPTION
Channel Management	Download the channel list and import multiple records for faster channel naming. Click Add to add new channels. 
Channel	This shows the name of the channel. Click the edit icon to change the channel name. Click the channel name to display the channel's client statistics. See Section 6.2.4.2 on page 381.
Switch	This shows the name of the Nebula Device to which the client is connected.
Port Name	This shows the name of the Nebula Device port to which the client is connected.
Port	This shows the number of the Nebula Device port to which the client is connected.
VID	This shows the ID number of the VLAN to which the Nebula Device port belongs.
Client	This shows the IP address of the client who is watching the TV program on the channel.
View-time	This shows the amount of time the client has spent watching the IPTV channel.

6.2.4.1 Email Report

Use this screen to configure the email recipient's address, change the logo and set email schedules. To access this screen, click the Email report button in the Site-wide > Monitor > Switches > IPTV Report screen.

Email report

Email Channel Summary report - 2022-03-31 to 2022-04-01

Address

Format

HTML

Send now

Schedule reports

☒ Current logo

☐ Upload new logo

Choose File

☐ No logo

Email address	Subject	Frequency	Type	Channel summary
v@live.com.br	HTML-test	Weekly	HTML	Selected Top 10 channels, Top 11 to 20 channels, Bottom 11 to 20 channels, Bottom 31 channels, 234 0 0 281, 204 0 0 281, 229 235 255 265, 229 234 255 265, 229 234 255 265, 229 234 255 265 Select channels
v@live.com.br	plain-text	Weekly	Plain text	Selected Top 10 channels, Top 11 to 20 channels, Bottom 11 to 20 channels, Bottom 31 channels, 234 0 0 281, 204 0 0 281, 229 235 255 265, 229 234 255 265, 229 234 255 265, 229 234 255 265 Select channels

+

Add

Cancel

LABEL	DESCRIPTION
Email Channel Summary report	This shows the range of the date/time you specified in the Site-wide > Monitor > Switches > IPTV Report screen.
Address	Enter the recipient's email address of the IPTV channel summary report.
Format	Select to send the IPTV channel summary report in HTML or Plain text format.
Send now	Click this button to send the IPTV channel summary report now.
Schedule reports	
logo	This shows the logo image that you uploaded for the customized IPTV channel summary report. Select Current logo to continue using the present logo. Select Upload new logo and click Choose File to locate the logo graphic. You can use the following image file formats: GIF, PNG, or JPG. File size must be less than 200 KB, and images larger than 244 x 190 will be resized. Select No logo if you do not want a logo to appear on the IPTV channel summary report.


Table 66 Site-wide > Monitor > Switches > IPTV Report: Email report (continued)

LABEL	DESCRIPTION
+ Add	Click this button to add a scheduled IPTV channel summary report profile.
Email address	Enter the recipient's email address of the IPTV channel summary report.
Subject	Enter the subject of the IPTV channel summary report.
Frequency	Select to send the IPTV channel summary report Monthly, Weekly, or Daily.
Type	Select to send the IPTV channel summary report in HTML or Plain text format.
Channel summary	
	Select to view the channels report according to the ranking. Alternatively, select Select channels to choose specific channels and click Update. ☒ Top 10 channels ☐ Top 11 to 20 channels ☐ Bottom 11 to 20 channels ☐ Bottom 10 channels ☐ Select channels (10 channels max) ⓘ Update
Remove	Click this to delete a scheduled profile.
Save	Click Save to save the new scheduled profile.

6.2.4.2 Channel Information

Use this screen to view the IPTV channel's client information and statistics. To access this screen, click a channel name from the Channel Information list in the Site-wide > Monitor > Switches > IPTV Report screen.

Figure 99 Site-wide > Monitor > Switches > IPTV Report: Channel Information

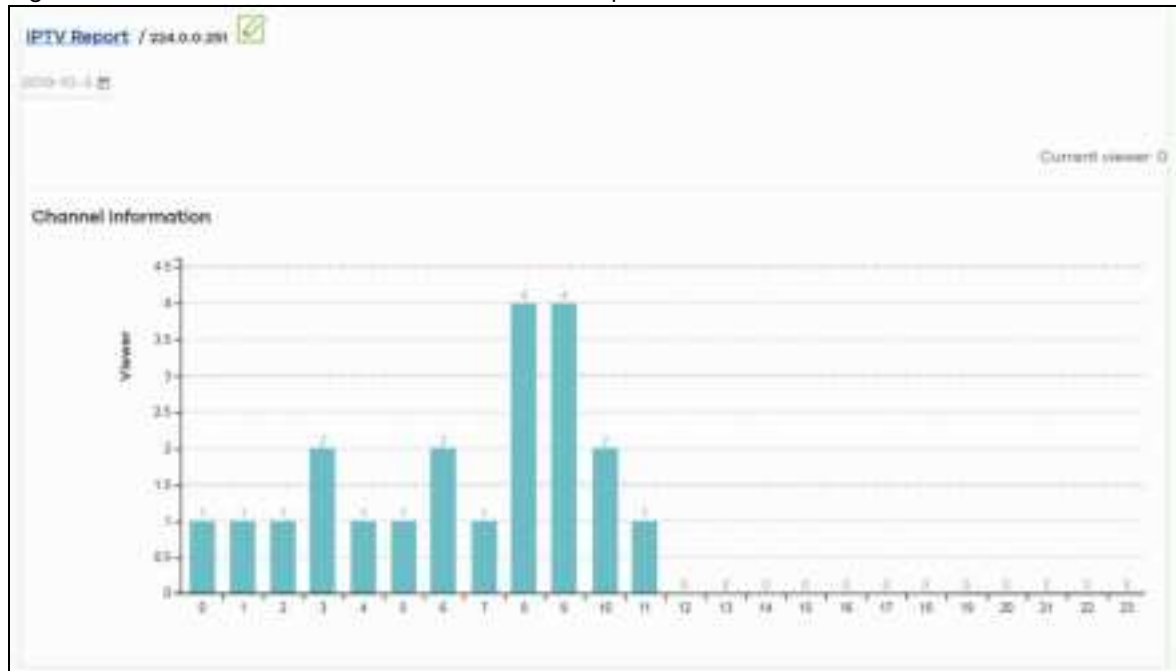

The following table describes the labels in this screen.

Table 67 Switches > Monitor > Switches > IPTV Report: Channel Information

LABEL	DESCRIPTION
	Select a specific date to display only the clients who watch the IPTV channel on that day.
Current Viewer	This shows the number of clients who are currently watching the IPTV channel.
y-axis	The y-axis shows the number of clients watching the IPTV channel.
x-axis	The x-axis shows the hour of the day in 24-hour format.
Switch	This shows the name of the Nebula Device to which the client is connected.
Port Name	This shows the name of the Nebula Device port to which the client is connected.
Port	This shows the number of the Nebula Device port to which the client is connected.
VID	This shows the ID number of the VLAN to which the Nebula Device port belongs.
Client	This shows the IP address of the client who is watching the TV program on the channel.
View-time	This shows the amount of time the client has spent watching the IPTV channel.

6.2.5 Port Advisor

Use this screen to monitor the following Nebula Switch port abnormalities:

- Network loops and BPDU (Bridge Protocol Data Units) watch
- PoE alerts
- Cable health
- Network traffic surge and storm protection
- Port bandwidth monitoring

Click Site-wide > Monitor > Switches > Port advisor to access this screen.

Port Advisor Last 24 hours

The dashboard displays the status of 68 ports. The pie chart shows the distribution of port states: Open (red, ~55%), Closed (blue, ~35%), and others (yellow, green, purple, ~10%). The line chart shows the percentage of ports in each state over the last 24 hours. The Y-axis represents the percentage of ports (0-100%). The X-axis represents time in hours (0-24). The 'Open' state (red) starts at ~55% and fluctuates between 45% and 65%. The 'Closed' state (blue) starts at ~35% and fluctuates between 25% and 45%. Other states (yellow, green, purple) remain below 10%.


Category	Ports	Ports, %
Open	40	59%
Closed	20	29%
Other	8	12%

LABEL	DESCRIPTION
Port advisor	Select to view which Nebula Device port has detected abnormalities in the Last hour, Last 12 hours, Last 24 hours, or Custom range. The maximum Custom range is 30 days within the past 365 days.
Show all detected ports	Click this to show all ports that have been online with detected abnormalities during the selected period.
Show shutdown ports	Click this to show all ports that were shut down to fix the abnormalities. This will show for 30 days.
Category	This shows the name of the category to which the abnormality belongs.
Ports hits	This shows the amount of hits on a specific abnormality category.
Ports % hits	This shows the percentage of the hit counts for the abnormality encountered by a specific category.

Table 68 Site-wide > Monitor > Switches > Port advisor (continued)

LABEL	DESCRIPTION
Storm guard	Storm guard limits the number of broadcast and multicast packets the Nebula Device receives per second on the ports. When the maximum number of allowable packets is reached per second, the event will be counted. Click the following categories to display the individual category statistics table. - Broadcast-storm – This shows the number of times the maximum number of broadcast packets per second that the Nebula Device accepts on the ports exceeds the threshold set in Site-wide > Configure > Switches > Port: Broadcast Limit (pps). Click the Broadcast-storm link to view a list of the names of the switches, port numbers, port names that triggered the hit, number of hits, number of broadcast packets received, and Storm Control enabled/disabled. Select the port(s) and click Limit to set a custom broadcast/multicast limit (pps) to drop packets that exceed this threshold. This will override your setting in Site-wide > Configure > Switches > Port: Broadcast Limit (pps) for the specific port. Note: You cannot set a custom broadcast/multicast limit on a port that is bound to a template or port profile.  - Multicast-storm – This shows the number of times the maximum number of multicast packets per second that the Nebula Device accepts on the ports that exceed the threshold set in Site-wide > Configure > Switches > Port: Multicast Limit (pps).
Cable health	A Poor cable quality hit is triggered when Port advisor detects that the network cable may be damaged. Click the Poor cable quality link to view a list of the names of the switches, port numbers, port names that triggered the hit, and the number of hits. 

Table 68 Site-wide > Monitor > Switches > Port advisor (continued)

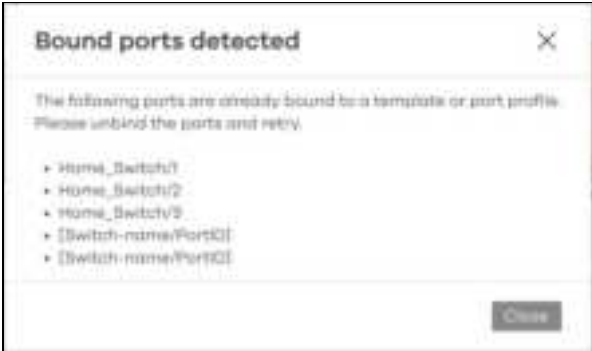
LABEL	DESCRIPTION
Bandwidth pulse	A hit is triggered when any of the following conditions are met. • RX bandwidth usage exceeded the specified threshold that you set in Site-wide > Configure > Alert settings: Port advisor: Bandwidth pulse. • TX bandwidth usage exceeded the specified threshold that you set in Site-wide > Configure > Alert settings: Port advisor: Bandwidth pulse.
PoE detection	A hit is triggered when any of the following conditions are met. • PoE short-circuit – There is a short circuit detected between the port and the PD (powered device). • PoE overload – The PD requested more PoE power than the port allows. • PoE power management – The PD is unable to get PoE power based on its PoE priority setting in Site-wide > Configure > Switches > Switch ports.
Loop and BPDU watch	A hit is triggered when any of the following conditions are met. • Loop – The loop guard feature detects that packets sent out on a port loop back to the Nebula Device. • BPDU – The BPDU guard feature allows you to prevent any new STP-aware (Spanning Tree Protocol) switch from connecting to an existing network and causing STP topology changes in the network. Click the Loop or BPDU link to view a list of the names of the switches, port numbers, port names that triggered the hit, and the number of hits. Select the port(s) to shut down and click Shutdown. Note: You cannot shut down a port that is bound to a template or port profile. The following screen appears. Click Close to exit. 

6.2.6 Summary Report

This screen displays network statistics for Nebula Devices of the selected site, such as bandwidth usage, top ports and/or top Nebula Devices.

Click Site-wide > Monitor > Switches > Summary Report to access this screen.

Figure 101 Site-wide > Monitor > Switches > Summary Report

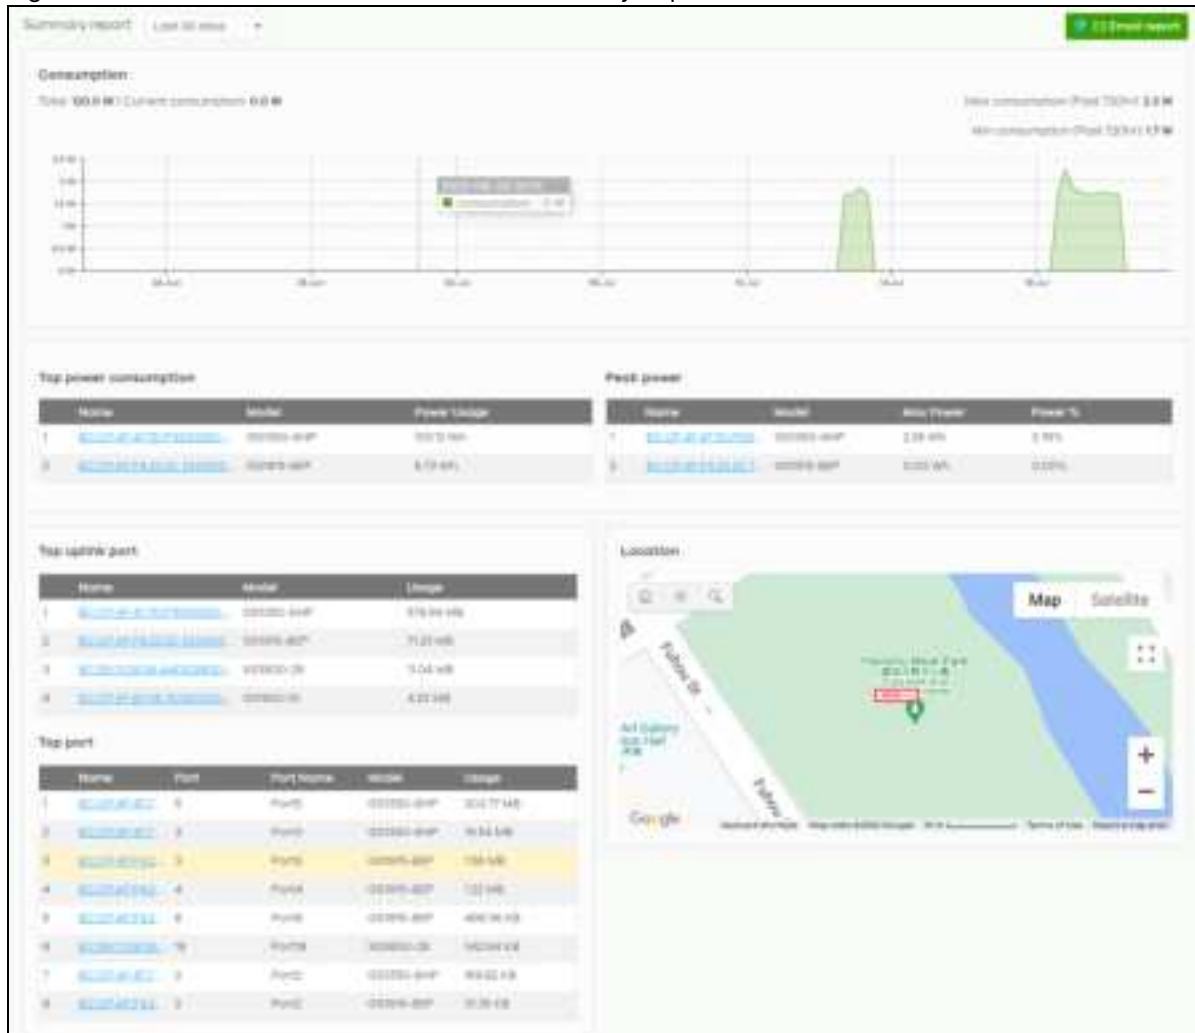

The following table describes the labels in this screen.

Table 69 Site-wide > Monitor > Switches > Summary Report

LABEL	DESCRIPTION
Switch – Summary report	Select to view the report for the past day, week or month. Alternatively, select Custom range... to specify a time period the report will span. You can also select the number of results you want to view in a table. ☐ Last 24 hours ☒ Last 7 days ☐ Last 30 days ☒ Custom range... 2023-07-06 to 2023-07-07 (Max range is 30 days, the dates will be auto-adjusted) Report size: 10 results per table Update
Email report	Click this button to send summary reports by email, change the logo and set email schedules.

Table 69 Site-wide > Monitor > Switches > Summary Report (continued)

LABEL	DESCRIPTION
Consumption	
Total	This shows the total power consumption of the Nebula Device ports.
Current Consumption	This shows the current power consumption of the Nebula Device ports.
Max Consumption	This shows the maximum power consumption of the Nebula Device ports.
Min Consumption	This shows the minimum power consumption of the Nebula Device ports.
y-axis	The y-axis shows how much power is used in Watts.
x-axis	The x-axis shows the time period over which the power consumption is recorded.
Top power consumption	
#	This shows the ranking of the Nebula Device.
Name	This shows the descriptive name of the Nebula Device.
Model	This shows the model number of the Nebula Device.
Power Usage	This shows the total amount of power consumed by the Nebula Device's connected PoE devices during the specified period of time.
Peak Power	
#	This shows the ranking of the Nebula Device.
Name	This shows the descriptive name of the Nebula Device.
Model	This shows the model number of the Nebula Device.
Max Power	This shows the maximum power consumption for the Nebula Device's connected PoE devices during the specified period of time.
Power %	This shows what percentage of the Nebula Device's total power budget has been consumed by connected PoE powered devices.
Top uplink port	
#	This shows the ranking of the Nebula Device.
Name	This shows the descriptive name of the Nebula Device.
Model	This shows the model number of the Nebula Device.
Usage	This shows the amount of data that has been transmitted through the Nebula Device's uplink port.
Top port	
#	This shows the ranking of the Nebula Device port.
Name	This shows the descriptive name of the Nebula Device.
Port	This shows the port number on the Nebula Device.
Model	This shows the model number of the Nebula Device.
Usage	This shows the amount of data that has been transmitted through the Nebula Device's port.
Location	
This shows the location of the Nebula Devices on the map.	

6.3 Configure

Use the Configure menus to configure port setting, IP filtering, RADIUS policies, PoE schedules, and other Nebula Device settings for Nebula Devices of the selected site.

6.3.1 Switch Ports

Use this screen to view port summary and configure Nebula Device settings for the ports. To access this screen, click Site-wide > Configure > Switches > Switch ports or click the Configure ports button in the Site-wide > Devices > Switch: Switch Details screen.

Figure 102 Site-wide > Configure > Switches > Switch ports



The following table describes the labels in this screen.

Table 70 Site-wide > Configure > Switches > Switch ports

LABEL	DESCRIPTION
Switch ports	Select to view the detailed information and connection status of the Nebula Device port in the past two hours, day, week or month.
	Click this button to reload the data-related frames on this page.
Edit	Select the ports you want to configure and click this button to configure Nebula Device settings on the ports, such as link aggregation, PoE schedule, LLDP and STP.
Aggregate	Select more than one port and click this button to group the physical ports into one logical higher-capacity link.
Split	Select a trunk group and click this button to delete the trunk group. The ports in this group then are not aggregated. A trunk group is one logical link containing multiple ports.
Tag	Click this button to create a new tag or delete an existing tag.
Power reset	Click this button to reboot the PD (powered device) connected to the PoE port. Follow the prompt and click Confirm to reboot the PD connected to this port. Note: This button is not available for an uplink port.
Search	Specify your desired filter criteria to filter the list of Nebula Device ports. You can filter the search by selecting one or more Nebula Devices. Under Ports, you can search for multiple ports separated by a comma, or a range separated by a hyphen. For example: 1,2,4-6.
Switch ports	This shows the number of ports on the Nebula Device.
Export	Click this button to save the Nebula Device port list as a CSV or XML file to your computer.
CRC alert icon	This prompt appears if CRC errors are detected in the port(s). Go to Site-wide > Devices > Switches: Switch Details: Port Details for the details. See Section 4.3.2.1 on page 248 for more information.

Table 70 Site-wide > Configure > Switches > Switch ports (continued)

LABEL	DESCRIPTION
Switch / Port	This shows the Nebula Device name and port number. If the port is added to a trunk group, this also shows whether it is configured as a static member of the trunk group (Static) or configured to join the trunk group through LACP (LACP). If the port is connected to an uplink gateway, it shows Uplink. If the port is a stacking port, it shows the stacking name, slot ID and port number. Click details to display the port details screen. See Section 4.3.2.1 on page 248.
Port name	This shows the descriptive name of the port.
Port profiles	This shows the name of the port profile applied on this port.
#Port	This shows the port number.
LLDP	This shows whether Link Layer Discovery Protocol (LLDP) is supported on the port.
Received broadcast packets	This shows the number of good broadcast packets received.
Received bytes	This shows the number of bytes received on this port.
Received packets	This shows the number of received frames on this port.
Sent broadcast packets	This shows the number of good broadcast packets transmitted.
Sent bytes	This shows the number of bytes transmitted on this port.
Sent multicast packets	This shows the number of good multicast packets transmitted.
Received multicast packets	This shows the number of good multicast packets received.
Sent packets	This shows the number of transmitted frames on this port.
Total bytes	This shows the total number of bytes transmitted or received on this port.
Enabled	This shows whether the port is enabled or disabled.
Link	This shows the speed of the Ethernet connection on this port. Auto (auto-negotiation) allows one port to negotiate with a peer port automatically to obtain the connection speed and duplex mode that both ends support.
Connection	This shows the connection status of the port. - Gray (#888888): The port is disconnected. - Orange (#FF8900): The port is connected and is transmitting data at 10 or 100 Mbps. - Green (#64BE00): The port is connected and is transmitting data at 1000 Mbps (1 Gbps). - Azure (#00B2FF): The port is connected and is transmitting data at 2.5 Gbps. - Violet (#8800FF): The port is connected and is transmitting data at 5 Gbps. - Blue (#004FEE): The port is connected and is transmitting data at 10000 Mbps (10 Gbps). When the port is in the STP blocking state, failed LACP negotiation state, or failed port authentication state, a blocked icon displays. Move the cursor over a time slot to see the actual date and time when a port is connected or disconnected.
Auth. policy	This shows the name of authentication policy applied to the port.
Allowed VLAN	This shows the VLANs from which the traffic comes is allowed to be transmitted or received on the port.
PoE	This shows whether PoE is enabled on the port.
RSTP	This shows whether RSTP is enabled on the port.

Table 70 Site-wide > Configure > Switches > Switch ports (continued)

LABEL	DESCRIPTION
Status	If STP/RSTP is enabled, this field displays the STP state of the port. If STP/RSTP is disabled, this field displays FORWARDING if the link is up, otherwise, it displays Disabled.
Schedule	This shows the name of the PoE schedule applied to the port.
Type	This shows the port type (Trunk or Access).
PVID	This shows the port VLAN ID. It is a tag that adds to incoming untagged frames received on the port so that the frames are forwarded to the VLAN group that the tag defines.
Tag	This shows the user-specified tag that the Nebula Device adds to the outbound traffic on this port.
Storm Control	This shows whether traffic storm control is enabled or disabled on the port.
Broadcast Limit (pps)	This shows the maximum number of broadcast packets the Nebula Device accepts per second on this port.
Multicast Limit (pps)	This shows the maximum number of multicast packets the Nebula Device accepts per second on this port.
DLF Limit (pps)	This shows the maximum number of Destination Lookup Failure (DLF) packets the Nebula Device accepts per second on this port.
Loop Guard	This shows whether loop guard is enabled or disabled on the port.
Network Analytic Alert	An amber alert icon displays if the NCC generates alerts when an error or something abnormal is detected on the port for the IPTV network. Move the cursor over the alert icon to view the alert details.
IPSG protected	This shows whether IP source guard protection is enabled on this port.
Received CRC packets	This shows the number of CRC (Cyclic Redundancy Check) errors received on the port.
Number of IGMP Group	This shows the number of IGMP groups the port has joined.
Mgmt VLAN control	This shows if management control is enabled on this port. See Table 71 on page 392 for more information. Note: When the Nebula Device's Set IP address: Global VLAN configuration is enabled, it will use the site-wide management VLAN ID. When the Nebula Device's Set IP address: Global VLAN configuration is disabled, the Nebula Device's management VLAN will use its individual VLAN settings rather than the site-wide management VLAN ID.
Flow control	This shows if flow control is enabled on this port. See Table 71 on page 392 for more information.
	Click this icon to display a greater or lesser number of configuration fields.

6.3.1.1 Update ports

Click to select the port you want to configure in the Site-wide > Configure > Switches > Switch ports screen.

Figure 103 Site-wide > Configure > Switches > Switch ports: Edit

Update 1 port

General settings

Switch ports

00000-2B4F0C4F2D0

Name

Port0

Tag

None

Port profile

None

Port enabled

Enabled

ARP

Enabled

STP guard

None

LLDP

Enabled

LINK

Auto

Port isolation

Disabled

IPSG protected

Disabled

Bandwidth control

Enabled

Ingress

6000000

Kbps

Egress

6000000

Kbps

Link guard

Disabled

Flow control

Disabled

Storm control

Disabled

Broadcast Limit (pps)

100

Multicast Limit (pps)

100

Unicast Limit (pps)

100

Type

Trunk

igmp VLAN control

Enabled

PVID

1

Allowed VLANs

all

The screenshot displays the configuration interface for a Nebula Device, specifically the 'PoE settings' and 'QoS setting' sections.

PoE settings:

- PoE:** Enabled
- PoE schedule:** Unscheduled
- PoE profile:** 1/2w
- Power up mode:** EIGRP
- Auto PD recovery:** Enabled
- Restoring mode:** LLDP
- Active:** Polling Alarm
- Resume polling interval (sec):** 600
- PD reboot count:** 3
- Resume power interval (sec):** 60

QoS setting: (Overwrite advanced QoS setting is toggled on)

- Link mode:** Normal link
- Normal link:** 4000
- Admission Control:** Disabled
- QoS filtering profile:** New Name
- Flow router type:** Auto

At the bottom right, there are 'Close' and 'Save' buttons.

The following table describes the labels in this screen.

Table 71 Site-wide > Configure > Switches > Switch ports: Edit

LABEL	DESCRIPTION
Switch ports	This shows the Nebula Device name and port number for the ports you are configuring in this screen.
Name	Enter a descriptive name for the ports.
Tags	Select or create a new tag for outgoing traffic on the ports.
Port profile	Select the port profile you created in Site-wide > Configure > Switches > Port profiles > Create port profile and make sure to enable this port profile to apply to this port. Note: You cannot create link aggregation on ports that have applied a port profile.
Port enabled	Select to enable or disable the ports. A port must be enabled for data transmission to occur.
RSTP	Select to enable or disable RSTP (Rapid Spanning Tree Protocol) on the ports. RSTP detects and breaks network loops and provides backup links between switches, bridges or routers. It ensures that only one path exists between any two stations on the network.
STP guard	This field is available only when RSTP is enabled on the ports. Select Root guard to prevent the Nebula Devices attached to the ports from becoming the root bridge. Select BPDU guard to have the Nebula Device shut down the ports if there is any BPDU received on the ports. Otherwise, select None.

Table 71 Site-wide > Configure > Switches > Switch ports: Edit (continued)

LABEL	DESCRIPTION
LLDP	Select to enable or disable LLDP (Link Layer Discovery Protocol) on the ports. LLDP allows the connected network device to advertise its identity and capabilities on the local network.
Link	Select the speed and the duplex mode of the Ethernet connection on the ports. Choices are 10M/Half Duplex, 10M/Full Duplex, 100M/Half Duplex, 100M/Full Duplex, 1000M/Full Duplex, Auto, 10M/AN, and 100M/AN (Gigabit connections only).
Extended range	Select to enable or disable extended range. Extended range allows the port to transmit power and data at a distance of 250 meters. Note: When enabled, the port's PoE Power up mode is locked to 802.3at, and the port's Link speed is limited to 10M/Full Duplex.
Media type	You can insert either an SFP+ transceiver or an SFP+ Direct Attach Copper (DAC) cable into the 10 Gigabit interface of the Nebula Device. Select the media type (SFP+ or DAC 10G) of the SFP+ module that is attached to the 10 Gigabit interface.
FEC	To minimize signal degradation of data at high transmission speeds (for example, 25 Gbps or 100 Gbps), set the same FEC (Forward Error Correction) type between the Nebula Device and the connected device. Select Auto to allow both connected ports to automatically set the FEC type according to the following rules: - For 10G transceivers, the FEC type on the port will automatically be None. - For 25G transceivers, the FEC type on the port will automatically be CL108. - For 100G transceivers, the FEC type on the port will automatically be None if the transceiver type is 100G LR4/ER4; all other types of transceiver will automatically be CL91. Select CL74 when both connected ports support 25 Gbps speed and require low latency in data transmission. Select CL91 when both connected ports support 25 Gbps and 100 Gbps speeds. Select CL108 when both connected ports support 25 Gbps speed but low latency in data transmission is not required. Alternatively, select None when you do not need to set the FEC type. Note: Make sure to set the correct Link on this screen (see the previous field).
Port Isolation	Select to enable or disable port isolation on the ports. The ports with port isolation enabled cannot communicate with each other. They can communicate only with the CPU management port of the same Nebula Device and the Nebula Device's other ports on which the isolation feature is not enabled.
IPSG protected	Select to enable or disable IP source guard protection on the port. IP source guard checks incoming IPv4 packets on that port. A packet is allowed when it matches any entry in the IPSG binding table. If a user tries to send IPv4 packets to the Nebula Device that do not match an entry in the IPSG binding table, the Nebula Device will drop these packets. The Nebula Device forwards matching traffic normally.
Auth. policy	This field is available only when you select Access in the Type field. Select the authentication policy type and name of the pre-configured authentication policy that you want to apply to the ports. See Table 87 on page 433 for more information on authentication policy type. See Section 6.3.9 on page 431 for more information on configuring authentication policy. Select Open if you do NOT want to enable port authentication on the ports.

Table 71 Site-wide > Configure > Switches > Switch ports: Edit (continued)

LABEL	DESCRIPTION
Bandwidth Control	Select to enable or disable bandwidth control on the port. Bandwidth control means defining a maximum allowable bandwidth for incoming and/or outgoing traffic flows on a port.
Ingress	Specify the maximum bandwidth allowed in kilobits per second (Kbps) for the incoming traffic flow on the ports.
Egress	Specify the maximum bandwidth allowed in kilobits per second (Kbps) for the out-going traffic flow on the ports.
Loop guard	Select to enable or disable loop guard on the ports. Loop guard allows you to configure the Nebula Device to shut down a port if it detects that packets sent out on that port to the edge of your network loop back to the Nebula Device. While you can use STP (Spanning Tree Protocol) to prevent loops in the core of your network, STP cannot prevent loops that occur on the edge of your network. Note: The loop guard feature cannot be enabled on the ports that have Spanning Tree Protocol (RSTP, MRSTP or MSTP) enabled.
Flow control	Select to enable or disable flow control on all ports. Enable flow control to allow the Nebula Device's port to send a pause signal to the connected device, and for the connected device to send a pause signal to the Nebula Device. The Nebula Device will temporarily stop sending signals after receiving a pause signal. Note: Make sure the connected device also supports flow control.
Storm control	Select to enable or disable broadcast storm control on the ports. Storm control limits the number of broadcast, multicast and destination lookup failure (DLF) packets the Nebula Device receives per second on the ports. When the maximum number of allowable packets is reached per second, the subsequent packets are discarded.
Broadcast Limit (pps)	Specifies the maximum number of broadcast packets the Nebula Device accepts per second on the ports.
Multicast Limit (pps)	Specifies the maximum number of multicast packets the Nebula Device accepts per second on the ports.
DLF Limit (pps)	Specifies the maximum number of DLF packets the Nebula Device accepts per second on the ports.
Type	Set the type of the port. Select Access to configure the port as an access port which can carry traffic for just one VLAN. Frames received on the port are tagged with the port VLAN ID. Select Trunk to configure the port as a trunk port which can carry traffic for multiple VLANs over a link. A trunk port is always connected to a Nebula Device or router.
Mgmt VLAN control	Select Enabled to configure the port as a management port. This allows the administrator to set the Nebula Device ports through which the device management VLAN traffic is allowed. The default value depends on your setting for the previous Type field. The default value is Enabled when the Type is Trunk. The default value is Disabled when the Type is Access. Note: Make sure to enable this for an uplink port to maintain connection with Nebula.

Table 71 Site-wide > Configure > Switches > Switch ports: Edit (continued)

LABEL	DESCRIPTION
VLAN type	This field is available only when you select Access in the Type field. None: This port is a regular access port and follows the device's access port rules. Vendor ID based VLAN: Apply the Vendor ID based VLAN settings from Switch > Configure > Switch settings to this port. Voice VLAN: Apply the Voice VLAN settings from Site-wide > Configure > Switches > Switch settings to this port. Note: For details on configuring Vendor ID based VLAN and Voice VLAN settings, see Section 6.3.11 on page 435.
PVID	A PVID (Port VLAN ID or native VLAN) is a tag that adds to incoming untagged frames received on a port so that the frames are forwarded to the VLAN group that the tag defines. Enter a number between 1 and 4094 as the port VLAN ID.
Allowed VLANs	This field is available only when you select Trunk in the Type field. Specify the VLANs from which the traffic comes. You can then transmit or receive traffic on the ports. See Section 3.44 on page 197 for the steps in setting up dynamic VLAN with RADIUS. See Section 3.45 on page 199 for more information on monitoring dynamic VLANs using event logs.
PoE Settings	
PoE	Select Enabled to provide power to a PD connected to the ports.
PoE schedule	This field is available only when you enable PoE. Select a pre-defined schedule (created using the Site-wide > Configure > Switches > PoE schedules screen) to control when the Nebula Device enables PoE to provide power on the ports. Note: You must select Unschedule in the PoE schedule field before you can disable PoE on the ports. If you enable PoE and select Unschedule, PoE is always enabled on the ports. Note: The Nebula Device will follow the PoE schedule even when the Nebula Device is not connected to NCC. Click Edit to go to Site-wide > Configure > Switches > PoE schedules screen to create a new PoE schedule.
PoE priority	When the total power requested by the PDs exceeds the total PoE power budget on the Nebula Device, you can set the PD priority to allow the Nebula Device to provide power to ports with higher priority. Select Low to set the Nebula Device to assign the remaining power to the port after all critical and medium priority ports are served. Select Medium to set the Nebula Device to assign the remaining power to the port after all critical priority ports are served. Select Critical to give the highest PD priority on the port.

Table 71 Site-wide > Configure > Switches > Switch ports: Edit (continued)

LABEL	DESCRIPTION
Power up mode	Set how the Nebula Device provides power to a connected PD at power-up. 802.3at – the Nebula Device supports the IEEE 802.3at High Power over Ethernet standard and can supply power of up to 30W per Ethernet port. IEEE 802.3at is also known as PoE+ or PoE Plus. An IEEE 802.3at compatible device is referred to as Type 2. Power Class 4 (High Power) can only be used by Type 2 devices. If the connected PD requires a Class 4 current when it is turned on, it will be powered up in this mode. 802.3af – the Nebula Device follows the IEEE 802.3af Power over Ethernet standard to supply power to the connected PDs during power-up. Legacy – the Nebula Device can provide power to the connected PDs that require high inrush currents at power-up. Inrush current is the maximum, instantaneous input current drawn by the PD when first turned on. Pre-802.3at – the Nebula Device initially offers power on the port according to the IEEE 802.3af standard, and then switches to support the IEEE 802.3at standard within 75 milliseconds after a PD is connected to the port. Select this option if the Nebula Device is performing 2-event Layer-1 classification (PoE+ hardware classification) or the connected PD is NOT performing Layer 2 power classification using Link Layer Discovery Protocol (LLDP). Force 802.3at – the Nebula Device provides PD Wide Range Detection (WRD) with power of up to 33 W on the port without performing PoE classification. Select this if the connected PD does not comply with any PoE standard. 802.3bt – the Nebula Device follows the IEEE 802.3bt standard to supply power of up to 60 W per Ethernet port to the connected PDs at power-up. Pre-802.3bt – the Nebula Device offers power on the port according to the IEEE 802.3bt standard. Select this if the connected PD was manufactured before the IEEE 802.3bt standard was implemented on September 2018, but requires power between 33 W and 60 W. IEEE 802.3bt is also known as PoE++ or PoE Plus Plus.
Power up mode	Set how the Nebula Device provides power to a connected PD at power-up. Standard – the Nebula Device follows the IEEE 802.3 Power over Ethernet standard to supply power to the connected PDs during power-up. Compatible – the Nebula Device provides PD with power on the port without performing PoE classification. Select this if the connected PD does not comply with any PoE standard. Note: When you change the Power-Up mode, you need to do any of the following: - Click Confirm on the Power reset field of the port supplying PoE power to the connected PD in Site-wide > Configure > Switches > Switch port, or - Disconnect and reconnect the Ethernet cable supplying PoE power from the port to the connected PD. Note: At the time of writing, this option is only available for Nebula XS1935 Series.
Auto PD recovery	Select to enable or disable automatic PD recovery on the port. Automatic PD recovery allows the Nebula Device to restart a Powered Device (PD) connected to the port by turning the device on and off again.
Detecting mode	Select LLDP to have the Nebula Device passively monitor current status of the connected Powered Device (PD) by reading LLDP packets from the PD on the port. Select Ping to have the Nebula Device ping the IP address of the connected Powered Device (PD) through the designated port to test whether the PD is reachable or not.

Table 71 Site-wide > Configure > Switches > Switch ports: Edit (continued)

LABEL	DESCRIPTION
Action	Set the action to take when the connected Powered Device (PD) has stopped responding. Select Reboot-Alarm to have the Nebula Device send an SNMP trap and generate a log message, and then turn off the power of the connected PD and turn it back on again to restart the PD. Select Alarm to have the Nebula Device send an SNMP trap and generate a log message.
Neighbor IP	Set the IPv4 address of the Powered Device (PD) connected to this port. Note: If Detecting Mode is set to Ping and the PD supports LLDP, the connected PD's IPv4 address to which the Nebula Device sends ping requests is displayed automatically.
Polling interval (sec)	Specify the number of seconds the Nebula Device waits for a response before sending another ping request. For example, the Nebula Device will try to detect the PD status by performing ping requests every 20 seconds.
Polling count	Specify how many times the Nebula Device resends a ping request before considering the PD unreachable.
Resume polling interval (sec)	Specify the number of seconds the Nebula Device waits before monitoring the PD status again after it restarts the PD on the port.
PD reboot count	Specify how many times the Nebula Device attempts to restart the PD on the port. The PD Reboot Count resets if any of the following conditions are true: • The Nebula Device successfully pings the PD. • You modify any Auto PD Recovery settings and apply them. • The Nebula Device restarts.
Resume power interval (sec)	Specify the number of seconds the Nebula Device waits before supplying power to the connected PD again after it restarts the PD on the port.
IPTV Setting	
Override advanced IGMP setting	Select ON to overwrite the port's advanced IGMP settings (configured in the Site-wide > Configure > Switches > Advanced IGMP screen) with the settings you configure in the fields below. Otherwise, select OFF.
Leave mode	Select Immediate Leave to remove this port from the multicast tree immediately when an IGMP leave message is received on this port. Select this option if there is only one host connected to this port. Select Normal Leave or Fast Leave and enter an IGMP normal/fast leave timeout value to have the Nebula Device wait for an IGMP report before the leave timeout when an IGMP leave message is received on this port. You need to specify how many milliseconds the Nebula Device waits for an IGMP report before removing an IGMP snooping membership entry when an IGMP leave message is received on this port from a host. In Normal Leave mode, when the Nebula Device receives an IGMP leave message from a host on a port, it forwards the message to the multicast router. The multicast router then sends out an IGMP Group-Specific Query (GSQ) message to determine whether other hosts connected to the port should remain in the specific multicast group. The Nebula Device forwards the query message to all hosts connected to the port and waits for IGMP reports from hosts to update the forwarding table. In Fast Leave mode, right after receiving an IGMP leave message from a host on a port, the Nebula Device itself sends out an IGMP Group-Specific Query (GSQ) message to determine whether other hosts connected to the port should remain in the specific multicast group. This helps speed up the leave process.

Table 71 Site-wide > Configure > Switches > Switch ports: Edit (continued)

LABEL	DESCRIPTION
Maximum Group	Select Enable and enter the maximum number of multicast groups this port is allowed to join. Once a port is registered in the specified number of multicast groups, any new IGMP join report received on this port will replace the earliest group entry in the multicast forwarding table. Otherwise, select Disable to turn off multicast group limits.
IGMP filtering profile	An IGMP filtering profile specifies a range of multicast groups that clients connected to the Nebula Device are able to join. Select the name of the IGMP filtering profile to use for this port. Otherwise, select No Select to remove restrictions and allow the port to join any multicast group.
Fixed router port	Select Auto to have the Nebula Device use the port as an IGMP query port if the port receives IGMP query packets. The Nebula Device forwards IGMP join or leave packets to an IGMP query port. Select Fixed to have the Nebula Device always use the port as an IGMP query port. This helps prevent IGMP network topology changes when query packet losses occur in the network.
Close	Click this button to exit this screen without saving.
Update	Click this button to save your changes and close the screen.

6.3.2 Port Profiles

Use this screen to create profiles that can be applied to each port on the Nebula Device. A port profile can contain features such as RSTP (Rapid Spanning Tree Protocol), STP guard, port isolation, loop guard, storm control, and PoE (Power over Ethernet). To access this screen, click Site-wide > Configure > Switches > Port profiles.

Figure 104 Site-wide > Configure > Switches > Port profiles



The following table describes the labels in this screen.

Table 72 Site-wide > Configure > Switches > Port profiles

LABEL	DESCRIPTION
Port profile	This shows the number of port profiles configured on this site.
used by port(s)	This shows the port profile name and the number of ports that are using this port profile. Click the number to go to the Site-wide > Configure > Switches > Switch ports screen.
edit	Click this icon to go to Site-wide > Configure > Switches > Port profiles > Update port profile to edit an existing port profile.

Table 72 Site-wide > Configure > Switches > Port profiles (continued)

LABEL	DESCRIPTION
delete	Click this icon to remove the port profile. Note: You can remove a port profile only when the port profile is not applied to any port.
+ Add	Click this button to create a new port profile for Nebula Switches on the site.
Save	Click Save to save your changes and create the port profile.
Cancel	Click Cancel to exit this screen without saving.

6.3.2.1 Port Profile Configuration

Click the Add button or click the Edit button in the Port profile screen to open the Site-wide > Configure > Switches > Port profiles > Create/Edit port profile screen.

Figure 105 Site-wide > Configure > Switches > Port profiles > Create/Edit port profile

Create port profile

General settings

Profile name: Port profile 1 Example

Port enabled: Enabled

Loop guard: Disabled

STP guard: None

Port isolation: Disabled

Storm control: Enabled

Broadcast Limit type: pps

Multicast Limit type: pps

Out Limit type: pps

Type: Trunk

Management control: Enabled

Prio: 1

Allowed VLANs: all

PoE settings

PoE: Enabled

PoE schedule: Unrestricted

Close Create

The following table describes the labels in this screen.

Table 73 Site-wide > Configure > Switches > Port profiles > Create/Edit port profile

LABEL	DESCRIPTION
General settings	
Profile name	Enter a name for this profile for identification purposes. Use up to 127 characters (0 – 9 a – z). The casing does not matter.
Port enabled	Select to enable or disable the port. A port must be enabled for data transmission to occur.
RSTP	Select to enable RSTP (Rapid Spanning Tree Protocol) on this profile. RSTP detects and breaks network loops and provides backup links between switches, bridges, or routers. It ensures that only one path exists between any two stations on the network.
STP guard	This field is available only when RSTP is enabled on this profile. Select Root guard to prevent the Nebula Devices attached to the ports from becoming the root bridge. Select BPDU guard to have the Nebula Device shut down the ports if there is any BPDU received on the ports. Otherwise, select None.
Port isolation	Select to enable port isolation on the ports. The ports with port isolation enabled cannot communicate with each other. They can communicate only with the CPU management port of the same Nebula Device and the ports on which the isolation feature is disabled.
Loop guard	Select to enable loop guard on the ports. Loop guard allows you to configure the Nebula Device to shut down a port if it detects that packets sent out on that port to the edge of your network loop back to the Nebula Device. While you can use STP (Spanning Tree Protocol) to prevent loops in the core of your network, STP cannot prevent loops that occur on the edge of your network. Note: You cannot enable the loop guard feature on the ports with Spanning Tree Protocol (RSTP, MRSTP, or MSTP) enabled.
Storm control	Select to enable broadcast storm control on the ports. Storm control limits the number of broadcast, multicast, and destination lookup failure (DLF) packets the Nebula Device receives per second on the ports. When the maximum number of allowable packets per second is reached, the subsequent packets are discarded.
Broadcast Limit (pps)	Specify the maximum number of broadcast packets per second the Nebula Device accepts on the ports.
Multicast Limit (pps)	Specify the maximum number of multicast packets per second the Nebula Device accepts on the ports.
DLF Limit (pps)	Specify the maximum number of DLF packets per second the Nebula Device accepts on the ports.
Type	Set the type of the port. Select Access to configure the port as an access port that can carry traffic for just one VLAN. Frames received on the port are tagged with the port VLAN ID. Select Trunk to configure the port as a trunk port to carry traffic for multiple VLANs over a link. A trunk port always connects to a Nebula Device or router.
Management control	Select Enabled to configure the port as a management port. The default is Enabled. This allows the administrator to set the Nebula Device ports to allow the device to manage VLAN traffic. Note: Make sure to enable this for an uplink port to maintain a connection with Nebula.

Table 73 Site-wide > Configure > Switches > Port profiles > Create/Edit port profile (continued)

LABEL	DESCRIPTION
PVID	A PVID (Port VLAN ID or native VLAN) is a tag that adds to incoming untagged frames received on a port so that the frames are forwarded to the VLAN group that the tag defines. Enter a number between 1 and 4094 as the port VLAN ID.
Allowed VLANs	This field is available only when you select Trunk in the Type field. Specify the VLANs from which the traffic comes. You can then transmit or receive traffic on the ports. See Section 3.44 on page 197 for steps in setting up dynamic VLAN with RADIUS. See Section 3.45 on page 199 for more information on monitoring dynamic VLANs using event logs.
PoE settings	
PoE	Select Enabled to provide power to a PD connected to the ports.
PoE schedule	This field is available only when you enable PoE. Select a pre-defined schedule (created using the Site-wide > Configure > Switches > PoE schedules screen) to control when the Nebula Device enables PoE to provide power on the ports. Note: You must select Unscheduled in the PoE schedule field before disabling PoE on the ports. If you enable PoE and select Unscheduled, then PoE is always enabled on the ports. Note: The Nebula Device will follow the PoE schedule even when the Nebula Device is disconnected from NCC. Click Edit to go to Site-wide > Configure > Switches > PoE schedules screen to create a new PoE schedule.
Close	Click this button to exit this screen without saving.
Create	Click this button to save your changes and close the screen.

6.3.3 Cloud Stacking Mode

In Cloud Stacking mode, you can stack Nebula Devices using the NCC. You can set the Nebula Device to Cloud Stacking mode and configure the stacking settings on the NCC.

In NCC, a Nebula Device in the stacking system is referred to as a slot. For example, slot 4 refers to the fourth Nebula Device in the stacking system.

Note: When you change modes, all Nebula Device configurations, including Running Config, Config1, Config2 and Custom Default configuration, are erased. User accounts will be kept after mode changing if saved to a configuration file. The Nebula Device will automatically reboot with the Cloud Stacking mode or Cloud mode factory default settings correspondingly. You have to reconfigure everything again on each Nebula Device.

6.3.3.1 From Cloud Mode to Cloud Stacking Mode

Follow the steps below to stack Nebula Devices in Cloud mode:

- 1 Add the Nebula Devices to your site. See [Section 3.2 on page 80](#) for more information.

Note: Each Nebula Device must have a successful connection to the Internet. The stacking ports of the Nebula Devices must not be connected to each other.

- 2 Use the Create new stacking wizard to add the Nebula Device to a stacking system on the NCC. See [Section 6.3.4.1 on page 405](#) for more information. The Nebula Device will then go into Cloud Stacking mode.

Note: When you change from Cloud mode to Cloud Stacking mode, the Nebula Device keeps the IP address settings (DHCP-assigned or static IP address) you set in Cloud mode.

6.3.3.2 From Cloud Stacking Mode to Cloud Mode

Follow the steps below to change from Cloud Stacking mode to Cloud mode, that is remove stacking in Cloud Stacking mode:

- 1 Go to Site-wide > Configure > Switches > Stacking management to remove the Nebula Device from the stack system on the NCC. See [Section 6.3.4.1 on page 405](#) for more information.
- 2 Reset the Nebula Device to its factory defaults. The Nebula Device will go to Standalone mode after you reset the Nebula Device, and you will lose all configurations done in NCC.
- 3 Make sure the Nebula Device can access the NCC and is registered on the NCC. The Nebula Device will then go into Cloud mode.


Important Notes

- Someone must be onsite to connect the stacking ports for each Nebula Device and then check the LED status. See the User's Guide for the stacking ports and LED status for each model. Follow the instructions on the wizard to connect the stacking ports on your Nebula Devices.
- The Nebula Device can only connect to other Nebula Devices of the same model and firmware version.
- NCC allows up to four Nebula Devices in a stack.
- NCC allows up to ten stacks per site.
- Each Nebula Device should have a valid Nebula Professional license.
- Each Nebula Device must belong to the same site in NCC.
- If the NCC detects any connection abnormality in your stack system, the NCC will pause the configuration process until all Nebula Devices in your stacking system are online and connected properly. You can check the stacking system status on the NCC. See [Section 6.3.4.1 on page 405](#) for more information.
- You cannot switch from 2-Port Mode stacking to 4-Port Mode directly. You need to remove the stacking and re-create the stacking system. See [Section 6.3.3.2 on page 402](#) for more information on removing stacking. See [Section 6.3.4.2 on page 406](#) for more information on creating the stacking system.

6.3.4 Stacking Nebula Devices

Stacking is directly connecting Nebula Devices to form a larger system that behaves as a single Nebula Device or a virtual chassis with increased port density.

Figure 106 Switch Stacking Concept

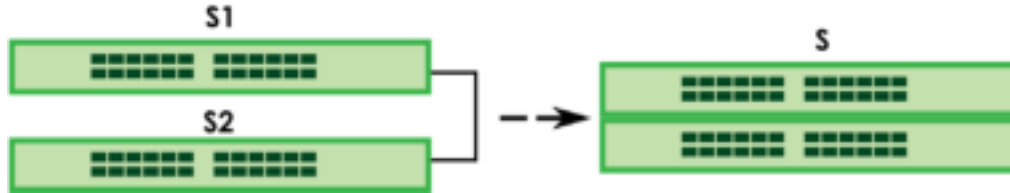


You can manage each Nebula Device in the stack from a master Nebula Device using the NCC.

Note: 'Nebula Device' refers to a Switch in the stacking system.

Each Nebula Device supports up to two stacking channels.

The Nebula Device ports of a stacking channel can only connect to the Nebula Device ports of one stacking channel on the neighboring Nebula Device. A stacking channel cannot simultaneously connect to two different stacking channels on the neighboring Nebula Device. For example, ports 25 and 26 (channel 1) on Nebula Device A can connect to ports 25 and 26 (channel 1) or ports 27 and 28 (channel 2) on Nebula Device B. You cannot connect port 26 (channel 1) on Nebula Device A to port 28 (channel 2) on Nebula Device B while connecting port 25 (channel 1) on Nebula Device A to port 25 (channel 1) on Nebula Device B at the same time.

Figure 107 Stacking Channel and Port Examples

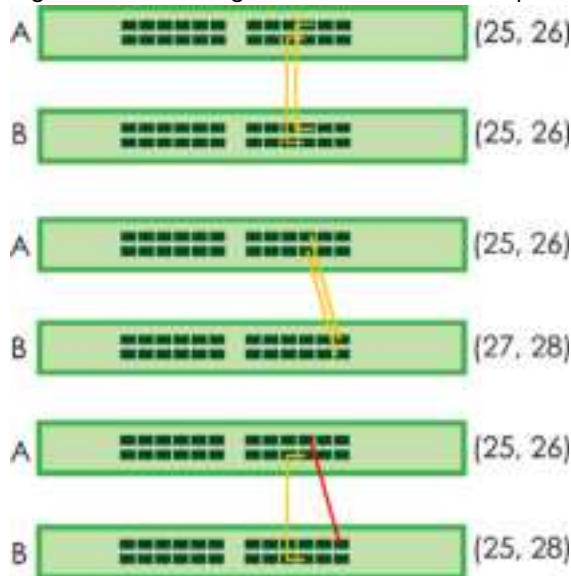

4-Port and 2-Port Stacking Modes (XGS2220 Series)

In 4-port mode, all four 10G stacking ports are used for stacking. Use this mode if you want to stack Nebula Devices with automatic link aggregation giving a stacking connection of 20 Gbps. The default algorithm type is src-dst-mac, and is not configurable.

In 2-port mode, just the last two 10G stacking ports of the Nebula Device are used for stacking. Use this mode if you want to use the first two fiber ports for high-speed connections such as a fiber uplink connection and a connection to a 10G NAS. You may stack Nebula Devices without automatic link aggregation giving a stacking connection of 10 Gbps.

You must make the stacking connections as shown in the following tables.

Table 74 Stacking Channels in 2-Port Mode (XGS2220 Series)

	STACKING CHANNEL	STACKING PORT
XGS2220-30 / XGS2220-30HP / XGS2220-30F	1	29
	2	30
XGS2220-54 / XGS2220-54HP / XGS2220-54FP	1	53
	2	54

Table 75 Stacking Channels in 4-Port Mode (XGS2220 Series)

	STACKING CHANNEL	STACKING PORTS
XGS2220-30 / XGS2220-30HP / XGS2220-30F	1	27, 28
	2	29, 30
XGS2220-54 / XGS2220-54HP / XGS2220-54FP	1	51, 52
	2	53, 54

Table 76 Stacking Channels in 4-Port Mode (XS3800-28)

	STACKING CHANNEL	STACKING PORTS
XS3800-28	1	25, 26
	2	27, 28

Note: At the time of writing, XS3800-28 with firmware version ZyNOS 4.80(ABML.2) and later supports Cloud Stacking mode ('ABML' refers to the Nebula Device's model code). XGS2220 Series with firmware version ZyNOS 4.80 (patch 4) and later supports Cloud Stacking mode. See [Section 6.3.3 on page 401](#) for more information on Cloud Stacking mode.


Chain Topology and Ring Topology

You can build a Nebula Device stack using a ring or chain topology.

In a chain (C) topology, each Nebula Device connects to the next Nebula Device with the last Nebula Device connected to the Nebula Device before it. If Nebula Device 3 fails, then only Nebula Devices 1 and 2 will still function.

In a ring (R) topology, each Nebula Device connects to the next Nebula Device with the last Nebula Device connected to the first. If Nebula Device 3 fails, then Nebula Devices 1, 2 and 4 will function as a chain topology.

Figure 108 Stacking Topology

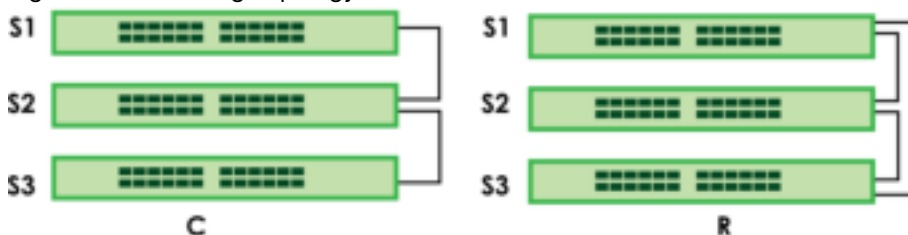

Stacking will automatically choose a master Nebula Device. The Nebula Device with the longest up-time is selected. Uptime is measured in increments of 10 minutes. The Nebula Device with the higher number of increments is selected. If they have the same uptime, then the Nebula Device with the lowest MAC address will be the master.

This is the master election priority in a stack system:

- 1 Longest uptime
- 2 Lowest MAC address.

Note: Master election occurs when:

- a stacking port cable is disconnected
- a Nebula Device in the stack reboots
- you add a Nebula Device to the stack or
- a Nebula Device in the stack shuts down.

6.3.4.1 Stacking management

Use this screen to create a stack, configure the stack settings, and view the stack status of Nebula Devices on the NCC.

Click Site-wide > Configure > Switches > Stacking management to access this screen.

Figure 109 Site-wide > Configure > Switches > Stacking management



The following table describes the labels in this screen.

Table 77 Site-wide > Configure > Switches > Stacking management

LABEL	DESCRIPTION
Stack status/Name/Members	Use this field to display the stacking system configured in NCC using criteria such as Stack status/Name/Members. Note: This field is blank if there is no stacking configured on the NCC.
Note: The following fields will appear after you create at least one stacking system.	

Table 77 Site-wide > Configure > Switches > Stacking management (continued)

LABEL	DESCRIPTION
Status	This shows the status of the stacking system. - Green – all the Nebula Devices in the stacking system are online and the stack is configured correctly. - Green with lock icon – NCC has locked the stack system because it lacks provisioning. NCC needs to apply the site-wide port settings to all Nebula Devices in the stacking system (provisioning). To unlock, click the Provision button. See Section 6.3.4.2 on page 406 for more information. - Orange with lock icon – NCC has locked the stacking system because of one of the following reasons: - One or more Nebula Devices are offline. Make sure all the stacking ports of the Nebula Devices are connected, the power is on, and one Nebula Device is connected to the Internet. - You removed a Nebula Device from the stacking system in NCC but did not disconnect the onsite stacking cable. Disconnect the stacking cable. - NCC has detected that the onsite Nebula Device's cable connection does not match the Slot ID configuration in NCC. - Red – the stacking system is offline. Make sure a Nebula Device has Internet connection. - Gray – the stacking system is offline for more than six days.
Name	This shows the NCC-assigned name of the stacking system. To change, click the Name to go to the Slot management screen. Click the Name on any Nebula Device to go to the Site-wide > Devices > Switches detail screen. See Section 4.3.2 on page 246 for more information.
Model	This shows the model type of the Nebula Device in the stacking system.
Configuration status	This shows Up to date when NCC has finished applying the site-wide settings to the stacking Nebula Device. Otherwise, it shows Not up to date.
Current version	This shows the ZyNOS firmware that is currently running on the Nebula Devices in the stacking system.
Slot	This shows the Nebula Device's name in the stacking system.
Stacking mode	This shows the number of stacking ports. 2-port means the last 2 SFP+ slots are dedicated for Nebula Device stacking. 4-port means the last 4 SFP+ slots are dedicated for Nebula Device stacking. Note: At the time of writing, only XGS2220 Series with firmware version ZyNOS 4.80 (patch 4) and later support 2-port / 4-port Stacking mode.
Media type	This shows the media type (SFP+ or DAC) of the SFP+ module that is attached to the 10 Gigabit interface.
Delete	Click this when you want to remove the stacking system on the NCC. The Nebula Devices will appear as individual devices in NCC. Reset the Nebula Devices to factory-default settings so that the Nebula Devices will not appear offline in NCC. Follow the steps in Section 6.3.3.2 on page 402 to change from Cloud Stacking mode to Cloud mode.
Create new Stack	Click this button to run the Create a new Stacking wizard. See the next section for more information.

6.3.4.2 Create a New Stacking System Wizard

The wizard helps you create a stacking system quickly.

Step1: Run the Wizard

Go to Site-wide > Configure > Switches > Stacking management and click Create new Stack.



Step2: Before you start

Make sure to do the steps listed on the screen. Then click Next.

Note: Someone must be onsite to connect the stacking ports for each Nebula Device and then check the LED status. Make sure that you do not make the stacking port connections yet.



Step3: Add slot


- 1 Click +Add (1) and then select the first Nebula Device in the Name field (2) to add to the stacking system. Click +Add (1) and then select the second Nebula Device in the Name field (2) to add to the stacking system.

Note: The Slot ID is assigned based on the order the Nebula Device is added. The first Nebula Device (S1) added to the stacking system had Slot ID 1.

- 2 Select the media type (SFP+ or DAC) (3) of the SFP+ module to attach to the stacking port.
- 3 Select the number of stacking ports (2-ports or 4-ports) (4).

Note: At the time of writing, this field is only available for the XGS2220 Series. This field is not configurable for the XS3800-28, 4-ports stacking mode.

Figure 110 Slot ID Sequence

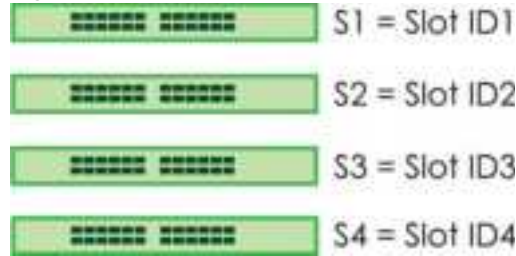

Note: Click Refresh to have NCC update the status of the Nebula Device(s), for example, from offline to online.

- 4 Click the I acknowledge the Switch will erase running configuration when it is set to Stacking mode checkbox (5). This means that you will lose all configurations made in NCC for each Nebula Device. You cannot back up the configurations in NCC first.
- 5 Then click Create (6). The Nebula Devices will automatically reboot to Cloud Stacking mode. NCC will assign the Slot ID to each Nebula Device.

Note: The Create button is enabled when:

- There are at least two online Nebula Devices in the stacking system
- The 'erase running configuration' confirmation box is selected.

Create a new Stacking wizard

Before you start

Add Switch to the slot

Select at least 2 switches to join the Stacking system.

Stacking A

Slot ID	Slot status	Name	MAC address	Model	Current version
1	Offline	SC-2017-01-01	DC:3E11FF:FD:EE	X86G221-30F	V4.80(ADVE RE1 DA/10/2024)

Make sure the selected switch is online. Then click the Refresh button to update status.
Make sure there are at least two switches in the Stacking system.
Please upgrade to the latest firmware. Make sure all Stacking members are running the same firmware version.
- X86G221 series / V4.80 Patch A and later

1 Add Refresh

Stacking port media type CNC 3

Stacking mode 2-ports 4

5 ☒ I acknowledge the switch will erase running configuration when it is being set to Stacking mode

Previous Cancel Create 6

Step4: Setup guidance (onsite hardware connections)

- 1 Perform the hardware connections onsite. See [Section 6.3.4.3 on page 411](#) for the steps.
- 2 Then click Next.

Figure 111 Setup Guidance (2-Port Mode)



Figure 112 Setup Guidance (4-Port Mode)



Step5: Ready to Provision

NCC must apply the site-wide port settings to all Nebula Devices in the stack. The Slot Status of the stacking Nebula Device appear green in the following screen when:

- All the Nebula Devices in the stacking system are online
- The Nebula Device connection order matches the Slot ID configuration in NCC.

Note: See [Table 77 on page 405](#) for the Slot Status LED description.

Click Provision to apply the site-wide port settings and exit the wizard.

Figure 113 Ready to Provision



The following screen appears when:

- One or more Nebula Devices in the stacking system are offline
- You remove a Nebula Device from the stacking system in NCC, but did not disconnect the onsite stacking port cable
- The Nebula Device's onsite cable connection does not match the Slot ID configuration in NCC.

After fixing the problem, click Refresh to have NCC update the stacking status. Click Provision when each stacking Nebula Device's Slot Status shows green with lock icon.

Figure 114 Not Ready to Provision



6.3.4.3 Hardware Connections (for Stacking)

Do the following steps onsite:

- 1 Remove all Ethernet cable connections from all ports on all the Nebula Devices that are going to be in the stacking system.
- 2 Check the STACK ID LED on each Nebula Device to find the Slot ID. Position the Nebula Devices accordingly.

Figure 115 Nebula Device STACK ID LED



- 3 Connect the stacking cables to the stacking ports. See the example figure below.
 - Ports 25 and 26 (channel 1) on Slot ID 1 (S1) connects to ports 27 and 28 (channel 2) on Slot ID 2 (S2).
 - Ports 25 and 26 (channel 1) on Slot ID 2 (S2) connects to ports 27 and 28 (channel 2) on Slot ID 3 (S3).
 - Ports 25 and 26 (channel 1) on Slot ID 3 (S3) connects to ports 27 and 28 (channel 2) on Slot ID 4 (S4).
 - Ports 25 and 26 (channel 1) on Slot ID 4 (S4) connects to ports 27 and 28 (channel 2) on Slot ID 1 (S1).

Figure 116 Onsite Stacking Cable Connection: Ring Topology



- 4 Connect one Nebula Device's uplink Ethernet port only to the Internet for the stacking system.

Note: A stacking port cannot be the uplink port.

- 5 Wait until all the Nebula Device's SYS LED are steady green. You are now ready to manage your stacking system through NCC.

6.3.4.4 Slot Management

Use this screen to add, remove, or swap Nebula Devices in a stacking system. Click Site-wide > Configure > Switches > Stacking management, then click the name of the stacking system to access this screen.

Figure 117 Site-wide > Configure > Switches > Stacking management: Slot management



Remove a non-Master Nebula Device

To remove a Nebula Device except the master in a stacking system, do the following:

- 1 Select the Nebula Device you want to remove. Then click the delete icon on the right.
- 2 The following pop-up window appears. Select Retain the slot's port setting if you want to apply the setting to the new Nebula Device. Then, click Delete slot.



Note: To apply the slot's port setting to another Nebula Device, make sure the Nebula Device is the same model and firmware version.

- 3 Disconnect the stacking cable on the Nebula Device onsite.
- 4 Press the RESTORE button on the front panel of the Nebula Device for more than 7 seconds to reset to the factory-default settings.

Remove a Master Nebula Device


To remove a master Nebula Device in a stacking system, do the following:

- 1 Disconnect the stacking cable to the master Nebula Device and reconnect. NCC will elect a new master Nebula Device for the stacking system. You can now remove the old master Nebula Device.

Note: To ensure continuity of the stacking system's management MAC address, the new master Nebula Device will inherit the old master Nebula Device's MAC address.

This is the MAC address that will display in the Site-wide > Topology, Site-wide > Clients > Client list, and Site-wide > Devices > Switches: Switch Details screens.

- 2 On the Nebula Device you want to remove, click the delete icon on the right.
- 3 The following pop-up window appears. Select Retain the slot's port setting if you want to apply the setting to the new Nebula Device. Then, click Delete slot.

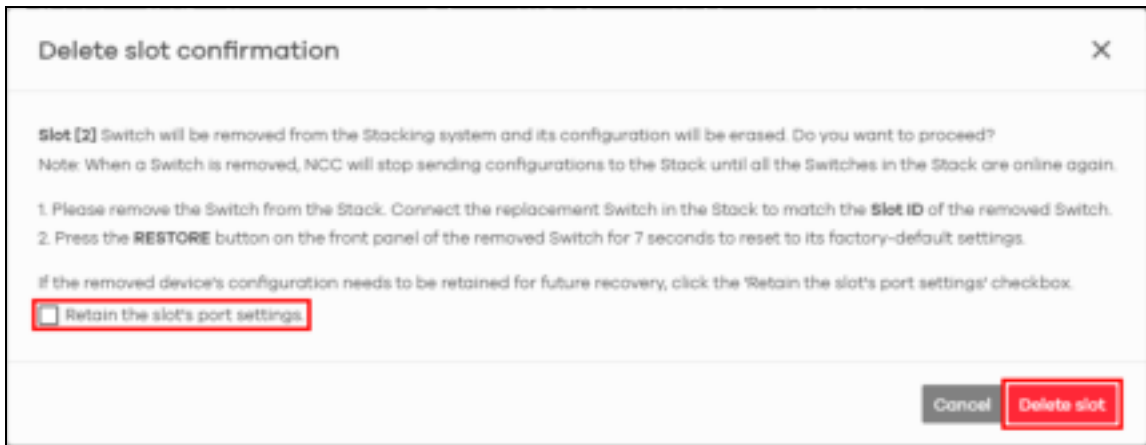

Note: To apply the slot's port setting to another Nebula Device, make sure the Nebula Device is the same model and firmware version.

- 4 Disconnect the stacking cable on the Nebula Device onsite.
- 5 Press the RESTORE button on the front panel of the Nebula Device for more than 7 seconds to reset to the factory-default settings.

Add a Nebula Device

To add a Nebula Device to the stacking system, do the following:


- 1 Click + Swap/Add, see [Figure 117 on page 412](#).
- 2 On the Swap/Add Slot screen, click + Add to add another Nebula Device to the stacking system.
- 3 In the Name field, select the Nebula Device in your site to add to the stacking system.
- 4 When the Slot Status of the new Nebula Device is green, click I acknowledge.

Note: The Slot Status will show red when the Nebula Device is offline.

- 5 Click Change. The Nebula Device will automatically reboot to Cloud Stacking mode. NCC will assign the new Slot ID to the Nebula Device, see the STACK ID LED of the Nebula Device.



- 6 Update the stacking cable connection onsite. See [Section 6.3.4.3 on page 411](#) for the steps.
- 7 Then click Next.

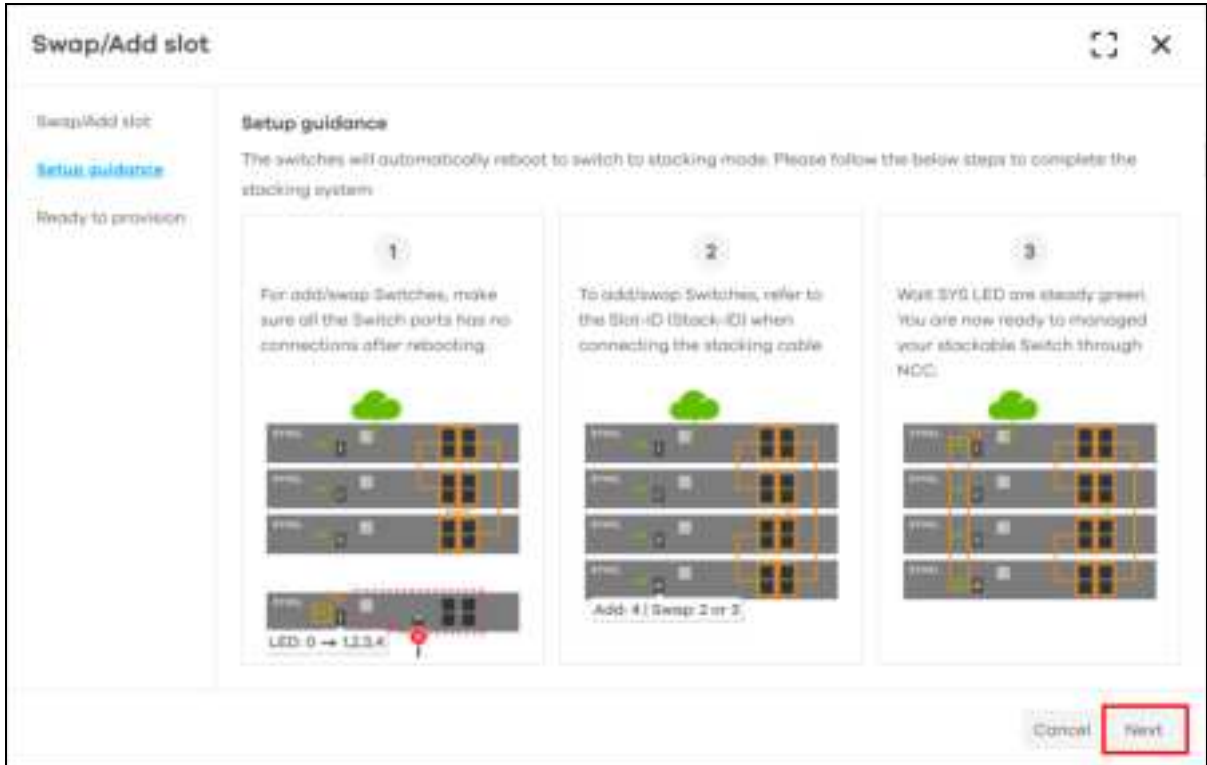

- 8 Click Provision to apply the site-wide port settings to the new Nebula Device and exit the wizard.



Note: If the new Nebula Device is the same model and firmware version, NCC will automatically restore the configurations to the new Nebula Device. Otherwise, the Nebula Device will restore to its factory-default settings to prevent mis-configurations in NCC. You need to reconfigure the port settings in NCC.

Note: The Provision button may be disabled (gray-out) when:

- One or more Nebula Devices in the stacking system are offline
- The Nebula Device's order of connection do not match the Slot ID configuration in NCC.

After fixing the problem, click Reload to update the stacking status. Then click Provision when all the stacking Nebula Device's Slot Status shows green with lock icon.

Swap a Nebula Device

Note: To replace a faulty Nebula Device in a stacking system and keep the configurations, do NOT remove or swap the Nebula Device. See [I need to replace a defective Nebula Device on my stacking system. I want to keep the NCC configurations.](#) for more information.

Note: If the new Nebula Device is the same model and firmware version, NCC will automatically restore the configurations to the new Nebula Device. Use the swap icon to replace the Nebula Device, see step 2.

Otherwise, after replacing a new Nebula Device on a stacking system, the Nebula Device will restore to its factory-default settings to prevent mis-configurations in NCC. You need to reconfigure the port settings in NCC.

To swap a Nebula Device in the stacking system, do the following:

- 1 Click + Swap/Add, see [Figure 117 on page 412](#).
- 2 On the Swap/Add Slot screen, select the Nebula Device you want to swap and click the swap icon.




- 3 In the Name field, select the Nebula Device in your site to swap in the stacking system.

- 4 When the Slot Status of the new Nebula Device is green, click I acknowledge.
- 5 Click Change. The new Nebula Device will automatically reboot to Cloud Stacking mode. NCC will assign the previous Slot ID to the new Nebula Device, see the STACK ID LED on the front panel.

Note: The new Nebula Device will inherit the configuration of the old Nebula Device when both models are the same. For example, replace XGS2220-30F with another XGS2220-30F.



- 6 Update the stacking cable connection onsite. See [Section 6.3.4.3 on page 411](#) for the steps.
- 7 Then click Next.

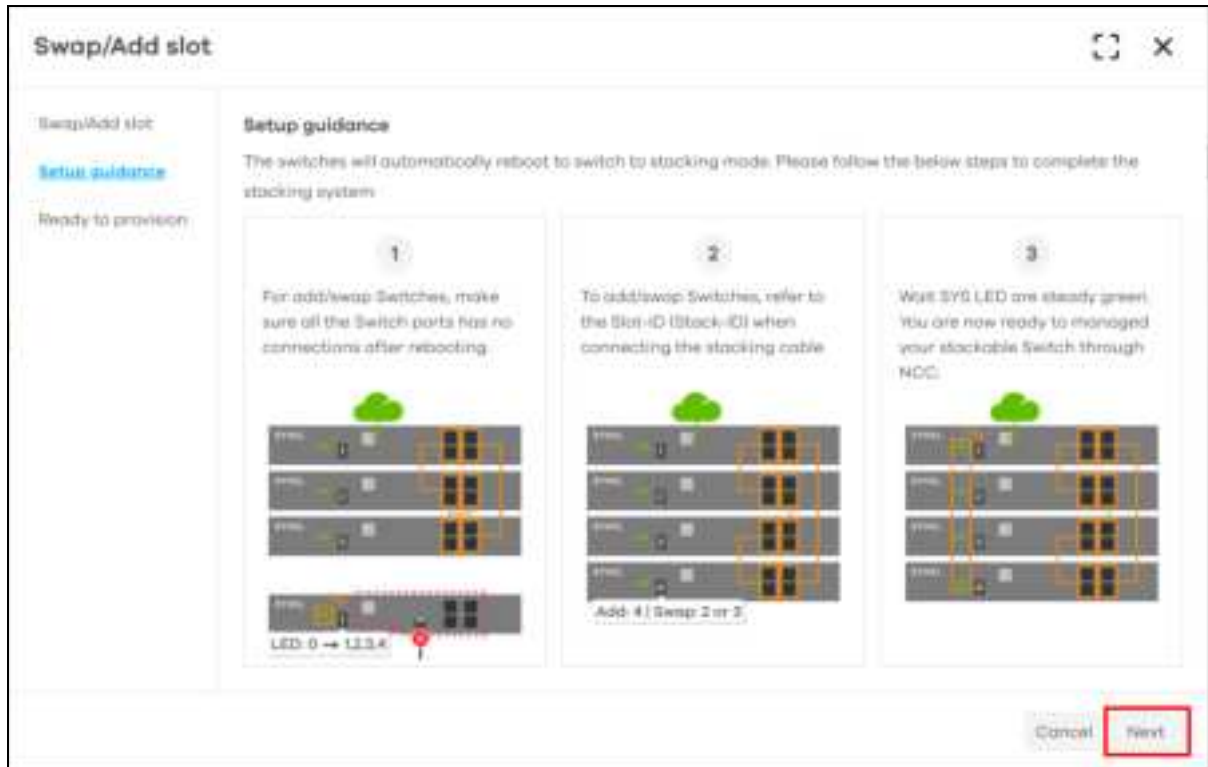

- 8 Click Provision to apply the site-wide port settings to the new Nebula Device and exit the wizard.



6.3.5 ACL

ACL lets you allow or block traffic going through the Nebula Devices according to the rule settings. Use this screen to configure ACL rules on the Nebula Devices.

Click Site-wide > Configure > Switches > ACL to access this screen.

Figure 118 Site-wide > Configure > Switches > ACL



The following table describes the labels in this screen.

Table 78 Site-wide > Configure > Switches > ACL

LABEL	DESCRIPTION
Management rules	The NCC automatically creates rules to allow traffic from/to the Nebula Control Center IP addresses in the list.
Customization rules	
	Click the icon of a rule and drag the rule up or down to change the order.
Enabled	Select the checkbox to turn on the rule. Otherwise, clear the checkbox to turn off the rule.
Policy	Select to allow or deny traffic that matches the filtering criteria in the rule.
Protocol	Select the type of IP protocol used to transport the traffic to which the rule is applied.
Source MAC	Enter the source MAC address of the packets that you want to filter.
Source IP	Enter the source IP address of the packets that you want to filter.
Source port	Enter the source port numbers that defines the traffic type.
Destination MAC	Enter the destination MAC address of the packets that you want to filter.
Destination IP	Enter the destination IP address of the packets that you want to filter.
Destination port	Enter the destination port numbers that defines the traffic type.
VLAN	Enter the ID number of the VLAN group to which the matched traffic belongs.
Description	Enter a descriptive name for the rule.
Delete	Click the delete icon to remove the rule.
Add	Click this button to create a new rule.

6.3.6 IP & Routing


This screen enables you to create IP interfaces, static routes, and DHCP option 82 profiles on Nebula Devices in the site. This allows you to do the following:

- Create IP interfaces on a L2 Nebula Device for management or monitoring services, such as IGMP querier, auto PD recovery, ping, and ONVIF discovery.

- Create multiple IP interface on a L3 Nebula Device to route across VLANs.
- Create an IP interface and static route to specify the next hop to a specific destination subnet.
- Add Nebula Device (relay agent) information when forwarding client-originated DHCP packets to a DHCP server. This feature provides additional security when DHCP allocates network IPv4 addresses. This prevents DHCP client requests from untrusted sources.

Click Site-wide > Configure > Switches > IP & Routing to access this screen.

Figure 119 Site-wide > Configure > Switches > IP & Routing

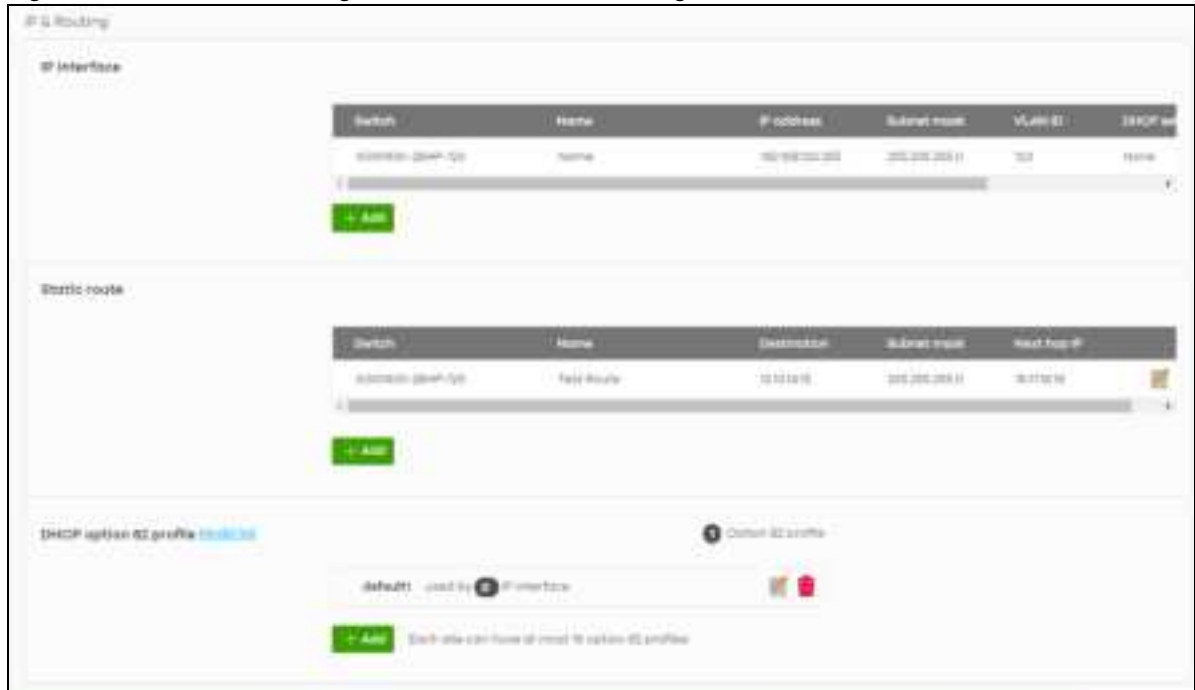

The following table describes the labels in this screen.

Table 79 Site-wide > Configure > Switches > IP & Routing

LABEL	DESCRIPTION
IP interface	
Switch	This shows the name of the Nebula Device.
Name	This shows the name of the interface (network) on the Nebula Device.
IP address	This shows the IP address of the interface (network).
Subnet mask	This shows the subnet mask of the interface (network).
VLAN ID	This shows the ID number of the VLAN with which the interface (network) is associated.
DHCP setting	This shows the type of DHCP service the Nebula Device provides to the network in the site. This shows None when the Nebula Device does not provide any DHCP services. This shows DHCP relay when the Nebula Device routes DHCP requests to one or more DHCP servers you specify. The DHCP servers may be on another network in the site.
Relay profile	This shows the name of the DHCP option 82 profile that is bound to the IP interface. See Section 6.3.6.3 on page 424 on adding and enabling a DHCP option 82 profile on the IP interface. Otherwise, this shows None.
	Click this icon to modify the interface.

Table 79 Site-wide > Configure > Switches > IP & Routing (continued)

LABEL	DESCRIPTION
	Click this icon to delete the interface.
+ Add	Click this button to create a new interface on a Nebula Device in the site.
Static route	
Switch	This shows the name of the Nebula Device.
Name	This shows the name of the static route.
Destination	This shows the destination IP address.
Subnet mask	This shows the IP subnet mask.
Next hop IP	This shows the IP address of the next-hop gateway or the interface through which the traffic is routed. The gateway is a router or Nebula Device on the same segment as your Security Appliance's interfaces. It helps forward packets to their destinations.
	Click this icon to modify the static route.
	Click this icon to delete the static route.
+ Add	Click this button to create a new static route on a Nebula Device in the site.
DHCP option 82 profile	A DHCP option 82 profile allows the Nebula Device to send additional information (such as the VLAN ID) together with the DHCP requests to the DHCP server. This allows the DHCP server to assign the appropriate IP address according to the VLAN ID. This shows the DHCP option 82 profile that is created on NCC.
	Click the edit icon to change the DHCP option 82 profile settings.
	Click the remove icon to delete the DHCP option 82 profile. Note: Make sure the option 82 profile is not in use before deleting it. See Section 6.3.6.3 on page 424 for more information.
+ Add	Click this button to create a new DHCP option 82 profile on a Nebula Device in the site.

6.3.6.1 Add IP Interface

Click the + Add button on the Site-wide > Configure > Switches > IP & Routing > IP Interface screen to access this screen.

Figure 120 Site-wide > Configure > Switches > IP & Routing > IP Interface > Add

Interface editor [X]

Switch: GS1350-26HP

This switch only supports interfaces for management and monitor purpose. No routing capability on this switch.

Name: Sample-name [X]

Interface IP: 192.168.10.13 [X] *

Subnet mask: 255.255.255.0 [X] *

VLAN: 2 [X] *

DHCP setting

DHCP: DHCP Relay

Relay server 1: [X] (IP Address)

Relay server 2: [X] (IP Address)

Relay server 3: [X] (IP Address)

Option 82 profile: None

None [Create new profile]

[Close] [Create]

The following table describes the labels in this screen.

Table 80 Site-wide > Configure > Switches > IP & Routing > IP Interface > Add

LABEL	DESCRIPTION
Switch	Select a Nebula Device in the site on which to create the interface.
Name	Enter a name of the interface (network) on the Nebula Device.
Interface IP	Enter the IP address of the interface (network). Note: To prevent an IP address conflict, NCC will prevent input of an IP address already used by another Nebula Device in the same site.
Subnet mask	Enter the subnet mask of the interface (network).
VLAN	Enter the ID number of the VLAN with which the interface (network) is associated.
DHCP setting	
DHCP	Select DHCP Relay if you want the Nebula Device to route DHCP requests to one or more DHCP servers you specify. The DHCP servers may be on another network in the site. Otherwise, select None.

Table 80 Site-wide > Configure > Switches > IP & Routing > IP Interface > Add

LABEL	DESCRIPTION
Relay server 1	Enter the IPv4 address of a DHCP server for the network in the site.
Relay server 2 / 3	These fields are optional. Enter the IP address of another DHCP server for the network in the site.
Option 82 profile	Select an existing option 82 profile. Alternatively, click Create new profile to go to the Option 82 profile screen to add information such as port, VLAN ID, hostname, and MAC address (in hexadecimal format) to DHCP messages. This allows the DHCP server to assign the appropriate IP address according to the port, VLAN ID, hostname, and MAC address. Go to Section 6.3.6.3 on page 424 for more information. Otherwise, select None.
Close	Click Close to exit this screen without saving.
Create	Click Create to save your changes and create the interface.

6.3.6.2 Add Static Route

Click the + Add button on the Site-wide > Configure > Switches > IP & Routing > Static Route screen to access this screen.

Figure 121 Site-wide > Configure > Switches > IP & Routing > Static Route > Add

The following table describes the labels in this screen.

Table 81 Site-wide > Configure > Switches > IP & Routing > Static Route > Add

LABEL	DESCRIPTION
Switch	Select a Nebula Device in the site on which to create the interface.
Name	Enter a descriptive name for this route.
Destination	Specifies the IP network address of the final destination.
Subnet mask	Enter the IP subnet mask.
Next hop IP	Enter the IP address of the next-hop gateway.

Table 81 Site-wide > Configure > Switches > IP & Routing > Static Route > Add

LABEL	DESCRIPTION
Close	Click Close to exit this screen without saving.
Create	Click Create to save your changes and create the static route.

6.3.6.3 Add Option 82 Profile

Use this screen to add information such as port, VLAN ID, hostname, and MAC address (in hexadecimal format) to DHCP messages. DHCP servers then create policies that match these new identifiers for DHCP assignment. Click the + Add button on the Site-wide > Configure > Switches > IP & Routing > DHCP option 82 profile screen to access this screen.

Note: Each site can have up to 16 option 82 profiles only.

Figure 122 Site-wide > Configure > Switches > IP & Routing > DHCP option 82 profile > Add

The following table describes the labels in this screen.

Table 82 Site-wide > Configure > Switches > IP & Routing > DHCP option 82 profile > Add

LABEL	DESCRIPTION
Profile name	Enter a descriptive name for this profile, up to 64 keyboard characters.
Circuit-ID	Use this section to configure the Circuit ID sub-option to include information such as port, VLAN ID, and hostname (in hexadecimal format) that is specific to the DHCP relay agent (the Nebula Device). For example: '0014000a475331333530string'. Where: '0014' is the port information, '00' is the slot ID and '14' is the port number '000a' is the VLAN ID '475331333530' is the hostname 'string' is the optional string. See String (Optional) for more information.
Enabled	Select this checkbox to have the Nebula Device add the Circuit ID sub-option to client DHCP requests that it relays to a DHCP server.
ID	This identifies the row for Circuit-ID sub-option.

Table 82 Site-wide > Configure > Switches > IP & Routing > DHCP option 82 profile > Add

LABEL	DESCRIPTION
Sub-option	Select the Port option to have the Nebula Device add the port information that the DHCP client connects to. This allows the DHCP server to assign IPv4 addresses to the Nebula Device with the corresponding port information. Select the VLAN ID option to have the Nebula Device add the VLAN ID information to which the port belongs. This allows the DHCP server to assign IPv4 addresses to the Nebula Device with the corresponding VLAN ID. Select the Hostname option to add the system name information to the client DHCP requests that it relays to a DHCP server. This allows the DHCP server to assign IPv4 addresses to the Nebula Device with the corresponding hostname. Otherwise, leave this field blank.
String (Optional)	Enter an optional string of up to 64 printable ASCII characters that the Nebula Device adds into the client DHCP requests, except the characters inside the square brackets [?], [], ['], ["] or [,].
Remote-ID	Use this section to configure the Remote ID sub-option to include information such as the MAC address (in hexadecimal format) that is specific to the DHCP relay agent (the Nebula Device). For example: 'bccf4f000001custom'. Where: 'bccf4f000001' is the MAC address 'custom' is the optional string. See String (Optional) for more information.
Enabled	Select this checkbox to have the Nebula Device append the Remote ID sub-option to the option 82 field of DHCP requests.
ID	This identifies the row for Remote-ID sub-option.
Sub-option	Select the MAC option to have the Nebula Device add its MAC address information to the client DHCP requests that it relays to a DHCP server. Otherwise, leave this field blank.
String (Optional)	Enter an optional string of up to 64 printable ASCII characters that the Nebula Device adds into the client DHCP requests, except the characters inside the square brackets [?], [], ['], ["] or [,].
Close	Click Close to exit this screen without saving.
Save & Back	Click Save & Back to save your changes and close this screen.

6.3.7 ONVIF Discovery

IP-based security products use a specific protocol for communication. One of the most common protocols is ONVIF (Open Network Video Interface Forum). ONVIF is a standard interface for interoperability of IP-based security products. When ONVIF is enabled and configured on a Nebula Device, the Nebula Device can obtain information from connected ONVIF-compatible devices, such as a device's system name and IP address.

In NCC, you can configure ONVIF-compatible Nebula Devices (for example, GS1350) in a site to discover ONVIF-compatible devices in one designated VLAN.

Note: ONVIF and UPnP are similar protocols and may conflict with each other. If NCC detects UPnP packets on the same network as ONVIF, then it will prompt you to automatically create an ACL rule that blocks UPnP traffic (UDP, port 1900).

UPnP packets have been detected on the IPTV network.

UPnP packets may interfere with IPTV traffic and cause pollution. You can use IP Filtering to block UPnP packets. [Update filter rules](#) to drop UPnP traffic by destination address.

6.3.7.1 Configuring ONVIF Discovery

Follow these steps to configure ONVIF discovery within a site.

- 1 Decide on the VLAN ID you want to use for ONVIF discovery within the site. This VLAN is the ONVIF discovery VLAN.
- 2 Go to Site-wide > Configure > Switches > IP & Routing. For each Nebula Device that you want to enable ONVIF discovery on, add an IP interface for the Nebula Device on the ONVIF discovery VLAN.
- 3 Go to Site-wide > Configure > Switches > ONVIF discovery. Enable ONVIF discovery, and then set ONVIF VLAN ID to the ID of your ONVIF discovery VLAN.
- 4 For each Nebula Device that you want to enable ONVIF discovery on, click + Add. Select the Nebula Device, and then enter the ports that you want to listen for ONVIF devices.

6.3.7.2 ONVIF Discovery Screen

Click Site-wide > Configure > Switches > ONVIF discovery to access this screen.

Figure 123 Site-wide > Configure > Switches > ONVIF discovery



The following table describes the labels in this screen.

Table 83 Site-wide > Configure > Switches > ONVIF discovery

LABEL	DESCRIPTION
Model list	Click this to view a list of Zyxel Nebula Device models that support ONVIF discovery.
ONVIF discovery	Enable this to allow ONVIF-compatible Nebula Devices in the site to send ONVIF packets to discover or scan for ONVIF-compatible IP-based security devices.
ONVIF VLAN ID	Enter the ID number of the VLAN to run ONVIF. You can enter multiple VLAN IDs separated by a comma (,). For example, enter "1,2" for VLAN IDs 1 and 2.
Switch name	Select the Nebula Device that you want to enable ONVIF discovery on.
Port list	Enter the port numbers to allow discovery of ONVIF-compatible devices. You can enter multiple ports separated by comma (,) or hyphen (-) without spaces. For example, enter "3-5" for ports 3, 4, and 5. Enter "3,5,7" for ports 3, 5, and 7.
Description	Enter a descriptive name for this Nebula Device.
Model	This shows the Nebula Device model.
	Click this icon to delete the ONVIF configuration for the Nebula Device.
+ Add	Click this to configure ONVIF discovery on another Nebula Device in the site.

6.3.8 Advanced IGMP

A Nebula Device can passively snoop on IGMP packets transferred between IP multicast routers/Nebula Devices and IP multicast hosts to learn the IP multicast group membership. It checks IGMP packets passing through it, picks out the group registration information, and configures multi-casting accordingly. IGMP snooping allows the Nebula Device to learn multicast groups without you having to manually configure them.

The Nebula Device forwards multicast traffic destined for multicast groups (that it has learned from IGMP snooping or that you have manually configured) to ports that are members of that group. IGMP snooping generates no additional network traffic, allowing you to significantly reduce multicast traffic passing through your Nebula Device.

Use this screen to enable IGMP snooping on the Nebula Devices in the site, create IGMP filtering profiles and configure advanced IGMP snooping settings that apply to all ports on the Nebula Device for your IPTV network. Click Site-wide > Configure > Switches > Advanced IGMP to access this screen. You can make adjustments on a per-port basis using the Site-wide > Configure > Switches > Switch ports screen.

Figure 124 Site-wide > Configure > Switches > Advanced IGMP

The screenshot shows the 'Advanced IGMP' configuration page. It includes the following sections:

- IGMP snooping:** A toggle switch is turned on.
- IGMP-snooping VLAN:** A dropdown menu is set to 'Auto-select', and there is a text input field for 'User design VLANs'.
- Unknown multicast drop:** A toggle switch is turned on, and there is a text input field for 'Drop on VLAN'.
- IGMP filtering profiles:** A message states 'There are no IGMP filtering profiles for this site', with an 'Add' button below it.
- IPTV topology setup:** A table with columns for 'Switch name', 'IGMP snooping', 'IGMP report proxy', 'Role', and 'Port settings'.

Switch name	IGMP snooping	IGMP report proxy	Role	Port settings
Auto-select IGMP	☒	☒	Querier	Advanced setup
000000-IGMP_Test	☒	☒	Access	Advanced setup

The following table describes the labels in this screen.

Table 84 Site-wide > Configure > Switches > Advanced IGMP

LABEL	DESCRIPTION
IGMP snooping	Select ON to enable and configure IGMP snooping settings on all Nebula Devices in the site. Select OFF to disable it.
IGMP-snooping VLAN	Select Auto-detect to have the Nebula Device learn multicast group membership information of any VLANs automatically. Select User Assigned VLANs and enter the VLAN IDs to have the Nebula Device only learn multicast group membership information of the VLANs that you specify. Click Model List to view a list of Zyxel Nebula Device models that do not support this feature. Note: The Nebula Device can perform IGMP snooping on up to 16 VLANs.
Unknown multicast drop	Specify the action to perform when the Nebula Device receives an unknown multicast frame. Select ON to discard the frames. Select OFF to send the frames to all ports. Click Model List to view a list of Zyxel Nebula Device models that do and do not support this feature.
Drop on VLAN	This allows you to define the VLANs in which unknown multicast packets can be dropped. Note: The Nebula Device can drop unknown multicast packets on up to 8 VLANs.
IGMP filtering profiles	An IGMP filtering profile specifies a range of multicast groups that clients connected to the Nebula Device are able to join. You can set the Nebula Device to filter the multicast group join reports on a per-port basis by configuring an IGMP filtering profile and associating a port to the profile.
	Click the edit icon to change the profile settings. See Section 6.3.8.1 on page 429 .
	Click the remove icon to delete the profile.
+Add	Click this button to create a new profile. See Section 6.3.8.1 on page 429 .
IPTV topology setup The following three buttons are available only when there are multiple Nebula Devices in the site and your administrator account has full access to this screen.	
IGMP snooping	Select the Nebula Devices you want to configure and click this button to turn on or off IGMP snooping on the selected Nebula Devices.
Role	Select the Nebula Devices you want to configure and click this button to change the IGMP role of the selected Nebula Devices.
Port settings	Select the Nebula Devices you want to configure and click this button to open the Port settings screen, where you can change IGMP leave mode and IGMP filtering profile for the ports on the selected Nebula Devices. See Section 6.3.8.2 on page 430 .
IGMP topology tips	Click this to view information about configuring your network and device roles to optimize IPTV performance.
The following list shows you the IGMP settings for each Nebula Device in the site.	
Switch Name	This shows the name of the Nebula Device in the site.
IGMP snooping	Click this to enable IGMP snooping on the Nebula Device. See Section 6.3.8 on page 427 for more information on IGMP snooping.

Table 84 Site-wide > Configure > Switches > Advanced IGMP (continued)

LABEL	DESCRIPTION
IGMP report proxy	Click this to enable IGMP report proxy on the Nebula Device. An IGMP report is generated when monitoring multicast address or membership query. It is highly recommended to disable this in the following conditions: - When the Nebula Device is deployed in a Networked AV environment. A Networked AV environment is specifically designed to simplify configuration and management of the Nebula Device for AVoIP (Audio-Video over Internet Protocol) application. - When the Nebula Device is connected to CPEs (customer premise equipment) that require a specific IPTV source. Some CPEs validate IPTVs based on the source IP and MAC address of their IGMP join request. IGMP report proxy trims down the amount of IGMP join packets and sends its own IGMP join request.
Role	This shows whether the Nebula Device is acting as an IGMP snooping querier, aggregation Nebula Device or access Nebula Device in the IPTV network.
Port settings	Click Advanced setup to open the Port settings screen, where you can change IGMP leave mode and IGMP filtering profile for the ports on the Nebula Device. See Section 6.3.8.2 on page 430 .
The following fields display when the IGMP role of a Nebula Device is set to Querier.	
VLAN	Enter the ID number of the VLAN on which the Nebula Device learns the multicast group membership.
Querier IP Interface	Enter the IP address of the Nebula Device interface in IGMP querier mode. The Nebula Device acts as an IGMP querier in that network/VLAN to periodically send out IGMP query packets with the interface IP address and update its multicast forwarding table.
Mask	Enter the subnet mask of the Nebula Device interface in IGMP querier mode.
	Click the remove icon to delete the rule.
Add	Click this button to create a new rule.

6.3.8.1 Add/Edit IGMP Filtering Profiles

Use this screen to create a new IGMP filtering profile or edit an existing profile. To access this screen, click the Add button or a profile's Edit button in the IGMP filtering profiles section of the Site-wide > Configure > Switches > Advanced IGMP screen.

Figure 125 Site-wide > Configure > Switches > Advanced IGMP: Add IGMP Filtering Profile



The following table describes the labels in this screen.


Table 85 Site-wide > Configure > Switches > Advanced IGMP: Add/Edit IGMP Filtering Profile

LABEL	DESCRIPTION
Profile name	Enter a descriptive name for this profile for identification purposes.
	This shows the index number of the rule.
Start IP address	Enter the starting multicast IP address for a range of multicast IP addresses that you want to belong to the IGMP filter profile.
End IP address	Enter the ending multicast IP address for a range of IP addresses that you want to belong to the IGMP filter profile. If you want to add a single multicast IP address, enter it in both the Start IP Address and End IP Address fields.
	Click the remove icon to delete the rule.
+Add	Click this button to create a new rule in this profile.
Close	Click this button to exit this screen without saving.
Save & Back	Click this button to save your changes and close the screen.

6.3.8.2 IGMP Port Settings

Use this screen to modify the IGMP snooping settings, such as IGMP leave mode and filtering profile for all ports on the Nebula Device. To access this screen, select one or more Nebula Devices and click the Port settings button or click a Nebula Device's Advanced setup button in the IPTV topology setup section of the Site-wide > Configure > Switches > Advanced IGMP screen.

Figure 126 Site-wide > Configure > Switches > Advanced IGMP: Port settings

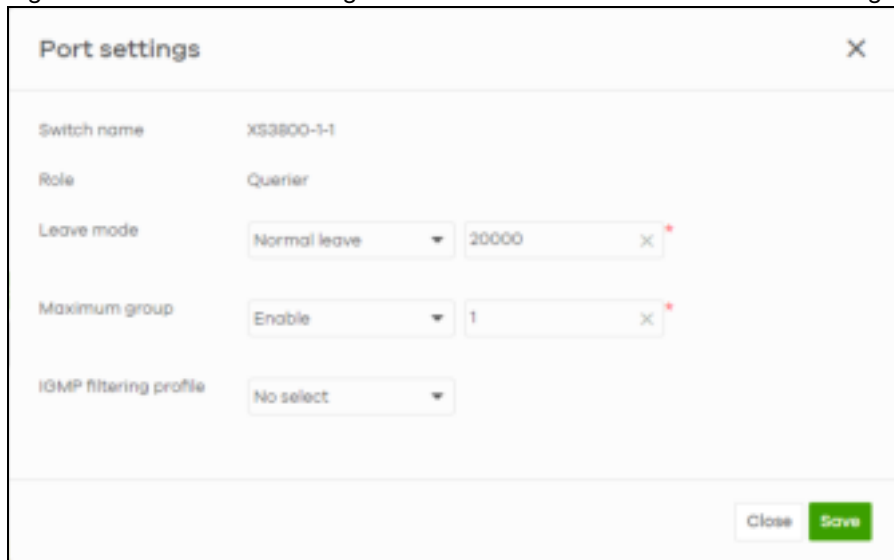

The following table describes the labels in this screen.

Table 86 Site-wide > Configure > Switches > Advanced IGMP: Port settings

LABEL	DESCRIPTION
Switch name	This shows the name of the Nebula Devices that you select to configure.
Role	This shows whether the Nebula Devices you selected is an IGMP snooping querier, aggregation Nebula Device or access Nebula Device in the IPTV network.

Table 86 Site-wide > Configure > Switches > Advanced IGMP: Port settings (continued)


LABEL	DESCRIPTION
Leave mode	Select Immediate Leave to set the Nebula Device to remove this port from the multicast tree immediately when an IGMP leave message is received on this port. Select this option if there is only one host connected to this port. Select Normal Leave or Fast Leave and enter an IGMP normal/fast leave timeout value to have the Nebula Device wait for an IGMP report before the leave timeout when an IGMP leave message is received on this port. You need to specify how many milliseconds the Nebula Device waits for an IGMP report before removing an IGMP snooping membership entry when an IGMP leave message is received on this port from a host. In Normal Leave mode, when the Nebula Device receives an IGMP leave message from a host on a port, it forwards the message to the multicast router. The multicast router then sends out an IGMP Group-Specific Query (GSQ) message to determine whether other hosts connected to the port should remain in the specific multicast group. The Nebula Device forwards the query message to all hosts connected to the port and waits for IGMP reports from hosts to update the forwarding table. In Fast Leave mode, right after receiving an IGMP leave message from a host on a port, the Nebula Device itself sends out an IGMP Group-Specific Query (GSQ) message to determine whether other hosts connected to the port should remain in the specific multicast group. This helps speed up the leave process.
Maximum group	Select Enable and enter the maximum number of multicast groups this port is allowed to join. Once a port is registered in the specified number of multicast groups, any new IGMP join report received on this port will replace the earliest group entry in the multicast forwarding table. Otherwise, select Disable to turn off multicast group limits.
IGMP filtering profile	An IGMP filtering profile specifies a range of multicast groups that clients connected to the Nebula Device are able to join. Select the name of the IGMP filtering profile to use for this port. Otherwise, select No Select to remove restrictions and allow the port to join any multicast group.
Reset	Click this button to return the screen to its last-saved settings.
Close	Click this button to exit this screen without saving.
Save	Click this button to save your changes and close the screen.

6.3.9 Authentication

Use this screen to configure authentication servers and policies to validate access to ports on the Nebula Device using the Nebula cloud authentication server or an external RADIUS server.


Note: Network traffic from clients will be denied when the Nebula cloud authentication (A) server (NCAS) cannot be reached.

Figure 127 NCAS Disconnect Behavior

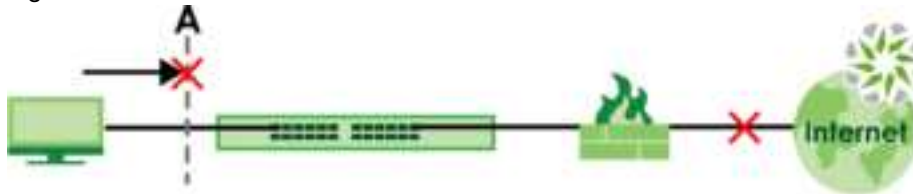

The following figure shows an example Nebula Device with ports enabled for MAC authentication. Clients 1 and 2 (C1, C2) passes MAC authentication (authorized). Client 3 (C3) fails MAC authentication (not authorized).

Figure 128 MAC Authentication Application

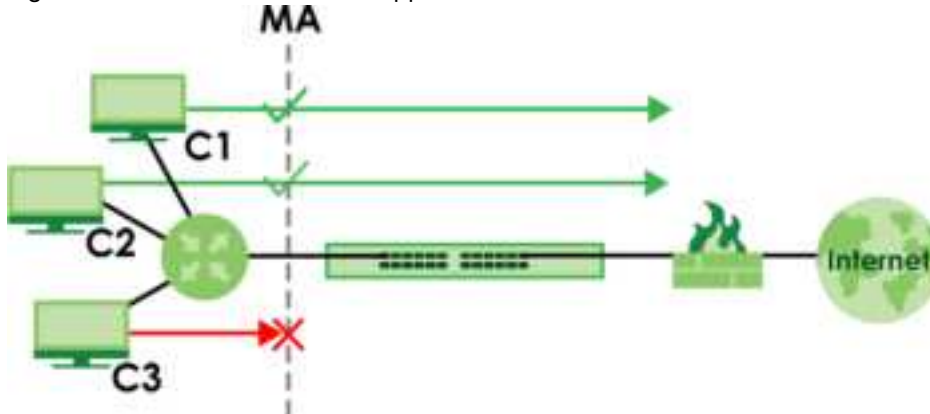

Click Site-wide > Configure > Switches > Authentication to access this screen.

Figure 129 Site-wide > Configure > Switches > Authentication

Authentication

Authentication Server

Server type: External radius server

Please make sure you have enabled the corresponding switch setting at the switch before enabling switch assignment in the external radius server.

Name	Port	Secret
Test	17	12345678

1 Add

Authentication policy

Prepared for RADIUS (State Auth): 17

Name	Auth. type	Default VLAN	Port security	MAC Extension	Auth. port
Test	17	RADIUS (State Auth)	On	17	17

1 Add

The following table describes the labels in this screen.

Table 87 Site-wide > Configure > Switches > Authentication

LABEL	DESCRIPTION
Authentication Server	
Server type	Select External radius server to have both IEEE 802.1x (WPA-Enterprise) authentication and MAC-based authentication. The Nebula Device sends a request message to a RADIUS server in order to authenticate clients. The administrator must enter the IP address of the RADIUS server. The default port is 1812. Note: Make sure to configure VLAN for the Nebula Device before enabling VLAN assignment in the external RADIUS server. Select Nebula cloud authentication to have MAC-based authentication only. The Nebula Device sends HTTPS message to NCAS (Nebula Cloud Authentication Server) to authenticate clients. The default port is 443. See Section 3.43 on page 196 for the steps in setting up MAC authentication with NCAS. Blocked clients do not appear in the Nebula Device MAC address table. The Nebula Device re-authenticates blocked clients when: • 5 minutes after blocked client failed authentication • Blocked client disconnects and reconnects to the Nebula Device port. Note: The Blocked client in the Site-wide > Clients > Client list screen has a higher priority than MAC-based authentication. All network traffic from clients will be denied when the NCAS cannot be reached.
The following fields appear when you select External radius server as the Server type.	
	Click the icon of a rule and drag the rule up or down to change the order.
Host	Enter the IP address of the external RADIUS server.
Port	Enter the port of the RADIUS server for authentication (default 1812).
Secret	Enter a password (up to 32 alphanumeric characters) as the key to be shared between the external RADIUS server and the Nebula Device.
	Click the remove icon to delete the entry.
Add	Click this button to create a new RADIUS server entry.
Authentication policy	You apply the policy to a port in Site-wide > Configure > Switches > Switch ports: Edit (a selected port).
Password for MAC-Base Auth	Enter the password the Nebula Device sends along with the MAC address of a client for authentication with the RADIUS server. You can enter up to 32 printable ASCII characters.
Name	Enter a descriptive name for the policy.
Auth. type	Select MAC-Base if you want to validate access to the ports based on the MAC address and password of the client. Select 802.1X if you want to validate access to the ports based on the user name and password provided by the client. Note: 802.1X is not supported when you select Nebula cloud authentication in Server type.
Guest VLAN	A guest VLAN is a pre-configured VLAN on the Nebula Device that allows non-authenticated users to access limited network resources through the Nebula Device. Enter the number that identifies the guest VLAN.
Port security	Click On to enable port security on the ports. Otherwise, select Off to disable port security on the ports.

Table 87 Site-wide > Configure > Switches > Authentication (continued)

LABEL	DESCRIPTION
MAC limitation	This field is configurable only when you enable port security. Specify the maximum number of MAC addresses learned on a port. For example, if you set the MAC limitation to 5, then only five clients can be learned on a specific port on any time.
Auth. ports	This shows the number of the Nebula Device ports to which this policy is applied.
	Click the remove icon to delete the profile.
Add	Click this button to create a new policy.

6.3.10 PoE Schedules

Use this screen to view and configure Power over Ethernet (PoE) schedules which can be applied to the ports. PoE is enabled at the specified time/date. Click Site-wide > Configure > Switches > PoE schedules to access this screen.

Note: The NCC will not generate an alert when PoE is disabled and the connected APs go offline because of the pre-defined PoE schedules.

The table shows the name of the existing schedules and the number of ports to which a schedule is applied. Click a schedule's edit icon to modify the schedule settings or click the Add button to create a new schedule. See [Section 6.3.10.1 on page 434](#).

Figure 130 Site-wide > Configure > Switches > PoE schedules



6.3.10.1 Create new schedule

Click the Add button in the Site-wide > Configure > Switches > PoE schedules screen to access this screen.

Figure 131 Site-wide > Configure > Switches > PoE schedule: Add

The following table describes the labels in this screen.

Table 88 Site-wide > Configure > Switches > PoE schedules: Add

LABEL	DESCRIPTION
Name	Enter a descriptive name for this schedule for identification purposes.
Schedule templates	Select a pre-defined schedule template or select Custom schedule and manually configure the day and time at which PoE is enabled.
Day	This shows the day of the week.
Availability	Click On to enable PoE at the specified time on this day. Otherwise, select Off to turn PoE off on the day and at the specified time. Specify the hour and minute when the schedule begins and ends each day.
Close	Click this button to exit this screen without saving.
Add	Click this button to save your changes and close the screen.

6.3.11 Switch Settings

Use this screen to configure global Nebula Device settings, such as (R)STP, QoS, port mirroring, voice VLAN, DHCP server guard, and IP source guard.

Click Site-wide > Configure > Switches > Switch settings to access this screen.

Figure 132 Site-wide > Configure > Switches > Switch settings

Site-wide > Configure > Switches > Switch settings

Switch settings

Auto configuration recovery [Viewed 3/3](#)

Auto configuration recovery 

VLAN configuration

Management VLANs (Mgmt VLAN)

Before changing management VLAN, please check that uplink port enable management control and belongs to management VLANs member for avoiding disconnect with NCC.

To configure management control port, see [Switch settings](#).

STP configuration

Rapid spanning tree protocol (RSTP) 

STP bridge priority 

Switches	Bridge priority
Default	32768

[Get the bridge priority for another switch](#)

Quality of service

Quality of service

VLAN	Priority	Weight

[add](#)

[What is QoS?](#)

QoS offers network traffic prioritization based on application and service demands. IEEE802.1P defines eight priority levels to be mapped to different class of service (CoS) queue with traffic prioritization. For each VLAN, a traffic priority class value from 0 (low) through 7 (high) can be set. Priority 7 is reserved for system priority, while 0 is not recommended to use.

Port mirroring

Port mirroring

Switch	Destination Port	Source Port
1	GE0/0/20 (PC1)	GE0/0/20

[add](#)

Err-disable recovery [Viewed 3/3](#)

Err-disable recovery

Recovery Type	Recover	Expiration Time (seconds)
Loop guard		300
BPDU guard		300

The following table describes the labels in this screen.

Table 89 Site-wide > Configure > Switches > Switch settings

LABEL	DESCRIPTION
Auto configuration recovery	
Auto configuration recovery	When On, connectivity check to NCC is done 5 minutes after any configuration change. If an NCC connection problem is detected, the Nebula Device will return to its last saved custom default configuration. The Nebula Device will be locked by NCC and the banner N Switches are currently protected by Auto Configuration Recovery will be displayed. Otherwise, the latest configuration will be saved as the new custom default configuration. Note: If the NCC connectivity error occur 5 minutes after a configuration change, the Nebula Device will not return to its last saved configuration. Note: When Auto configuration recovery is turned Off, a pop-up message appears informing you that the locked Nebula Device(s) will be unlocked. Click Confirm if you wish to continue.
VLAN configuration	
Management VLAN (Mgmt VLAN)	Enter the VLAN identification number associated with the Nebula Device IP address. This is the VLAN ID of the CPU and is used for management only. The default is "1". All ports, by default, are fixed members of this "management VLAN" in order to manage the device from any port. If a port is not a member of this VLAN, then users on that port cannot access the device. To access the Nebula Device make sure the port that you are connected to is a member of Management VLAN. Before changing the management VLAN for an uplink port, check the following to avoid disconnection with NCC: • Management Control is enabled in Site-wide > Configure > Switches > Switch ports • The uplink port belongs to the management VLAN in Site-wide > Configure > Switches > Switch ports: PVID.
STP configuration	
Rapid spanning tree protocol (RSTP)	Select On to enable RSTP on the Nebula Device. Otherwise, select Off.
STP bridge priority	Bridge priority is used in determining the root Nebula Device, root port and designated port. The Nebula Device with the highest priority (lowest numeric value) becomes the STP root Nebula Device. If all Nebula Devices have the same priority, the Nebula Device with the lowest MAC address will then become the root Nebula Device. The lower the numeric value you assign, the higher the priority for this bridge. Click Set the bridge priority for another switch to create a new entry. Select the Nebula Devices for which you want to configure the bridge priority, and select a value from the drop-down list box.
Quality of service	
Quality of service	Enter a VLAN ID and select the priority level that the Nebula Device assigns to frames belonging to this VLAN. Enter a descriptive name for the QoS (Quality of Service). Click Add to create a new entry.
Port mirroring	

Table 89 Site-wide > Configure > Switches > Switch settings (continued)

LABEL	DESCRIPTION
Port mirroring	Click Add to create a new entry. Select the Nebula Device/stacking system for which you want to configure port mirroring, specify the destination port you copy the traffic to in order to examine it in more detail without interfering with the traffic flow on the original ports, and also enter the source port on which you mirror the traffic. If the port is on a stacking Nebula Device, enter the slot ID/port number to specify the destination and source ports. For example, to specify slot ID 2 port 20 in a stacking system, enter '2/20'.
Err-disable recovery	
Err-disable recovery	Enter the number of seconds (from 30 to 86400) to wait to activate a port or allow specific packets on a port, after the loop guard / BPDU guard error was gone. The loop guard feature shuts down a port if it detects that packets sent out on that port loop back to the Nebula Device. The BPDU guard feature allows you to prevent any new STP-aware (Spanning Tree Protocol) switch from connecting to an existing network and causing STP topology changes in the network. If there is any BPDU detected on the ports on which BPDU guard is enabled, the Nebula Device disables the ports automatically. • Loop guard recovery is always enabled. • Click the switch to enable BPDU guard recovery. Default setting is disabled. • The range of Expiration time (seconds) for both Loop guard recovery and BPDU guard recovery is 30 to 86400.
Voice VLAN	
Voice VLAN	Select On to enable the Voice VLAN feature on the Nebula Device. Otherwise, select Off. It groups the voice traffic with defined priority into an assigned VLAN which enables the separation of voice and data traffic coming into the Nebula Device port.
Voice VLAN ID	Enter a VLAN ID number.
Priority	Select the priority level of the Voice VLAN from 1 to 6.
Assign VLAN by	Select how the Nebula Device assigns ports connected to VoIP devices to the Voice VLAN. OUI (Organizationally Unique Identifier): The Nebula Device assigns a port connected to a VoIP device to the Voice VLAN if the connected device's OUI matches any OUI in the list. LLDP-MED: The Nebula Device assigns a port connected to a VoIP device to the voice VLAN if the connected device is identified as a VoIP device using the LLDP-MED protocol. Note: The connected device must support LLDP-MED and have LLDP-MED enabled.
OUI	This field appears when you select OUI in the Assign VLAN by field. Click Add OUI on this network to add an OUI and a description for the OUI. An Organizationally Unique Identifier identifies a manufacturer. Typically, a device's OUI is the first three octets of the device's MAC address. For example, if you have an IP phone from Company A with MAC address 00:0a:95:9d:68:16, you can enter OUI 00:0a:95 to match all devices from Company A.
DSCP	This field appears when you select LLDP-MED in the Assign VLAN by field. Enter the Differentiated Services Code Point (DSCP) value for traffic on the voice VLAN. The value is defined from 0 through 63, and 0 is the default.
Vendor ID based VLAN	

Table 89 Site-wide > Configure > Switches > Switch settings (continued)

LABEL	DESCRIPTION
Vendor ID based VLAN	Select On to enable the Vendor ID based VLAN feature on the Nebula Device. Otherwise, select Off. Click the Add Vendor-ID on this network button to define the vendor MAC address OUI, assign to which VLAN, and set the priority. Enter a descriptive name for the Vendor ID based VLAN. Enter up to 64 characters for this field including special characters inside the square quotes [~!@#\$%^&*()_+{} :~<>-=[]\';,/].
DHCP Server Guard	
DHCP Server Guard	Select On to enable the DHCP server guard feature on the Nebula Device in order to prevent illegal DHCP servers. Only the first DHCP server that assigned the Nebula Device IP address is allowed to assign IP addresses to devices in this management VLAN. Otherwise, select Off to disable it.
IP source guard	
IP source guard	Select On to enable IP source guard protection. IP source guard uses a binding table to distinguish between authorized and unauthorized DHCP and ARP packets in your network. When the client does not exist in the binding table, the client is unauthorized and traffic will be blocked. To successfully access the network: - Client with static IP address will need to be added to the Allowed client list - Client with dynamic IP address will need to get their IP address from an authorized DHCP server.
Protected switch	This shows the Nebula Device/stacking system. - Select On to enable IP source guard protection on the Nebula Device/stacking system. Then click Save. - Click the edit icon to go to Site-wide > Configure > Switches > Switch ports to configure Protected ports (see Section 6.3.1 on page 388 for more information). - Click Run to display a pop-up window showing the current client table. - Select the DHCP-snooping or Block entries and click Transfer to add these to the allowed client list. Then click Save.
Allowed client list	This allows the administrator to define a set of clients. Click Add client to define the IPv4 address, MAC address, and VLAN of the static client. A previous entry will be overwritten when you enter a duplicate MAC address and VLAN ID. Click Action > Edit to modify the static client entry. Then click Update. The MAC address and VLAN ID will appear in red when you enter a duplicate entry. Click Action > Delete to remove the static client entry. Click Save to activate the settings. Note: Maximum of 128 static entries is allowed per site.

CHAPTER 7

Security Router

7.1 Overview

This chapter discusses the menus that you can use to monitor the Nebula-managed Security Routers in your network and configure settings even before a Security Router is deployed and added to the site.

A Nebula Security Router is a router firewall that can be managed by Nebula. It is referred to as a Nebula Device in this chapter.

7.2 Monitor

Use the Monitor menus to check the Nebula Device information, client information, event log messages and threat report for the Nebula Device in the selected site.

7.2.1 Event Log

Use this screen to view Nebula Device log messages. You can enter a key word, select one or multiple event types, or specify a date/time or a time range to display only the log messages that match these criteria.

Select Range to set a time range or select Before to choose a specific date/time and the number of hours/minutes to display only the log messages generated within a certain period of time (before the specified date/time). Then click Search to update the list of logs based on the search criteria. The maximum allowable time range is 30 days.

Click Site-wide > Monitor > Security router > Event log to access this screen.

Figure 133 Site-wide > Monitor > Security router > Event log



7.2.2 VPN Connections

Use this screen to view the status of site-to-site IPSec VPN connections.

Note: If the peer gateway is not a Nebula Device, go to the Site-wide > Configure > Security router > Site-to-Site VPN screen to view and configure a VPN rule. See [Section 7.3.5 on page 468](#) for more information.

Click Site-wide > Monitor > Security router > VPN connections to access this screen.

Figure 134 Site-wide > Monitor > Security router > VPN connections



The following table describes the labels in this screen.

Table 90 Site-wide > Monitor > Security router > VPN connections

LABEL	DESCRIPTION
	Click this button to reload the data on this page.
Connection Status	
Configuration	This shows the number and address of the local networks behind the Nebula Device, on which the computers are allowed to use the VPN tunnel.
Nebula SD-VPN	
Location	This shows the name of the site to which the Nebula peer gateway is assigned. Click the name to view the VPN usage and connectivity status screen.
VTI IP	This field shows the current IP address of the virtual interface and subnet mask in bits. If the field is blank, the interface does not have an IP address yet or not using VTI.
Subnet	This shows the address of the local networks behind the Nebula peer gateway.
Status	This shows whether the VPN tunnel is connected or disconnected.
Inbound	This shows the amount of traffic that has gone through the VPN tunnel from the Nebula peer gateway to the Nebula Device since the VPN tunnel was established.
Outbound	This shows the amount of traffic that has gone through the VPN tunnel from the Nebula Device to the Nebula peer gateway since the VPN tunnel was established.
Tunnel Up Time	This shows how many seconds the VPN tunnel has been active.
Last heartbeat	This shows the last date and time a heartbeat packet is sent to determine if the VPN tunnel is up or down.
Auto-Link VPN	
Location	This shows the name of the site to which the Non-Nebula peer gateway (Zyxel or non-Zyxel IPSec VPN gateway and Cloud VPN (Azure VPN or AWS VPN)) is assigned. Click the name to go to the Site-wide > Configure > Security router > Site-to-Site VPN screen, where you can modify the VPN settings.

Table 90 Site-wide > Monitor > Security router > VPN connections (continued)

LABEL	DESCRIPTION
VTI IP	This field shows the current IP address of the virtual interface and subnet mask in bits. If the field is blank, the interface does not have an IP address yet or not using VTI.
Subnet	This shows the address of the local networks behind the Non-Nebula peer gateway.
Status	This shows whether the VPN tunnel is connected or disconnected.
Inbound	This shows the amount of traffic that has gone through the VPN tunnel from the Non-Nebula peer gateway to the Nebula Device since the VPN tunnel was established.
Outbound	This shows the amount of traffic that has gone through the VPN tunnel from the Nebula Device to the Non-Nebula peer gateway since the VPN tunnel was established.
Tunnel up time	This shows how many seconds the VPN tunnel has been active.
Last heartbeat	This shows the last date and time a heartbeat packet was sent to determine if the VPN tunnel is up or down.
Client to site VPN login account See Section 7.3.6 on page 473 for information on configuring the VPN client settings on the Nebula Device. Note: The SCR 50AXE does not support the Client to site VPN login account feature.	
User Name	This shows the VPN client's login account name.
Assigned IP	This shows the IP address assigned by the Nebula Device to the VPN client device for use within the VPN tunnel.
Public IP	This shows the public IP address that the VPN client is using to connect to the site.
Inbound	This shows the amount of traffic that has gone through the VPN tunnel from the VPN client to the Nebula Device since the VPN tunnel was established.
Outbound	This shows the amount of traffic that has gone through the VPN tunnel from the Nebula Device to the VPN client since the VPN tunnel was established.
Tunnel up time	This shows how many seconds the VPN tunnel has been active.

7.2.3 Threat Report

Use this screen to view statistics for threat management categories. Click Site-wide > Monitor > Security router > Threat report to access this screen.

Figure 135 Site-wide > Monitor > Security router > Threat report



The following table describes the labels in this screen.

Table 91 Site-wide > Monitor > Security router > Threat report

LABEL	DESCRIPTION
Threat report	Select to view the report for the past day, week or month. Alternatively, select Custom range... to specify a time the report will span. You can also select the number of results you want to view in a table. Then, click Update.
Email report	Click this button to send threat reports by email, change the logo and set email schedules.
Location	This shows the location on the map where the blocked threats occurred by category.
Threat detected by category	
Category	This shows the name of the category to which the threat belongs.
Domain/IP	This shows the domain name or IP address where the threat was encountered. Click the Domain/IP to display the individual category statistics table.
Hits	This shows the amount of hits on a specific threat category.
% Hits	This shows the percentage of the hit counts for the threat encountered by a specific category.
Action	Click + Add to Exception to the domain name or IP address that will bypass the threat management category check. Click x Remove from Exception to remove the previously added domain name or IP address that will bypass the threat management category check. Note: A maximum of 50 entries can be added to the exception list.

Table 91 Site-wide > Monitor > Security router > Threat report (continued)

LABEL	DESCRIPTION
Threat detected by client	
Description	This shows the name of the client device who encountered a threat. Click the name to display the individual client statistics table.
IPv4 address	This shows the IPv4 address of the client device who encountered a threat.
MAC address	This shows the MAC address of the client device who encountered a threat.
Hits	This shows the number of threat hits of the client device.
% Hits	This shows the percentage of the hit counts encountered by a specific client device.
Action	Click Block client to prevent Internet connection to the wired and WiFi LAN client. Click Unblock Client to allow the previously blocked wired and WiFi LAN client to connect to the Internet. Note: A maximum of 50 entries can be added to the exception list.

7.2.4 Content Filter Report

Use this screen to view statistics for content filter categories. Click Site-wide > Monitor > Security router > Content Filter report to access this screen.

Figure 136 Site-wide > Monitor > Security router > Content Filter report



The following table describes the labels in this screen.

Table 92 Site-wide > Monitor > Security router > Content Filter report

LABEL	DESCRIPTION
Content Filter report	Select to view the report for the past day, week or month. Alternatively, select Custom range... to specify a time the report will span. You can also select the number of results you want to view in a table. Then, click Update.
Email report	Click this button to send content filter reports by email, change the logo, set email format and schedules. Then, click Save.

Table 92 Site-wide > Monitor > Security router > Content Filter report (continued)

LABEL	DESCRIPTION
y-axis	The y-axis shows the number of hits on web pages that the Nebula Device's content filter service has blocked.
x-axis	The x-axis shows the time period over which the web page is checked.
Content Filter block by category	
Category	This shows the name of the category to which the web page belongs. Click the Category to display the individual category statistics table.
Hits	This shows the amount of hits on a specific content filter block category.
% Hits	This shows the percentage of the hit counts that the Nebula Device's content filter service has blocked by a specific category.
Content Filter block by client	
Description	This shows the name of the client device who's web page was blocked by the Nebula Device's content filter service. Click the name to display the individual client statistics table.
IPv4 address	This shows the IPv4 address of the client device who's web page was blocked by the Nebula Device's content filter service.
MAC address	This shows the MAC address of the client device who's web page was blocked by the Nebula Device's content filter service.
Hits	This shows the number of content filter service blocks of the client device.
% Hits	This shows the percentage of the hit counts encountered by a specific client device.

7.3 Configure

Use the Configure menus to configure interface addressing, firewall, site-to-site VPN, captive portal, traffic shaping, authentication server, IPTV, and other gateway settings for the Nebula Device of the selected site.

Note: Only one Security Router is allowed per site.

7.3.1 Interface

Use this screen to configure network interfaces on the Nebula Device. An interface consists of a VLAN ID and an IP address, plus other configuration settings.

To access this screen, click Site-wide > Configure > Security router > Interface.

Figure 137 Site-wide > Configure > Security router > Interface

The screenshot shows the 'Interface' configuration page. It includes sections for WAN Interface, LAN Interface, IPTV, and Static Route. The WAN Interface section has a table with one row 'wan1'. The LAN Interface section has a table with one row 'LAN' showing IP address 192.168.100.1 and Subnet mask 255.255.255.0. The IPTV section has a toggle for 'IPTV' and radio buttons for 'Bridge', 'Trunking', and 'Advanced bridge'. The Static Route section has a table with one row for a route to 192.168.100.1 via 192.168.100.1.

The following table describes the labels in this screen.

Table 93 Site-wide > Configure > Security router > Interface

LABEL	DESCRIPTION
Interface	
WAN Interface	
Name	This field is read-only.
IP address	This shows the IP address for this interface.
Subnet mask	This shows the subnet mask of this interface in dot decimal notation. The subnet mask indicates what part of the IP address is the same for all computers in the network.
VLAN ID	This shows the VLAN ID. This 12-bit number uniquely identifies each VLAN. Allowed values are 2 – 4094. (0, 1 and 4095 are reserved.)
Description	This shows the description of this interface.
	Click the edit icon to modify this interface.
LAN Interface	

Table 93 Site-wide > Configure > Security router > Interface (continued)

LABEL	DESCRIPTION
Name	This field is read-only if you are editing an existing LAN interface. Specify a name for the interface. The format of interface names is strict. Each name consists of 2 – 4 letters (interface type), followed by a number (x). For most interfaces, x is limited by the maximum number of the type of interface. For VLAN interfaces, x is defined by the number you enter in the VLAN name field. For example, VLAN interfaces are vlan0, vlan1, vlan2, and so on.
IP address	This is the IP address for this interface.
Subnet mask	This is the subnet mask of this interface in dot decimal notation. The subnet mask indicates what part of the IP address is the same for all computers in the network.
VLAN ID	This shows the VLAN ID. This 12-bit number uniquely identifies each VLAN. Allowed values are 2 – 4094. (0, 1 and 4095 are reserved.)
Guest	Click the switch to the right to configure this interface as a Guest interface. Client devices connected to this Guest interface have Internet access but cannot access a non-guest interface. Alternatively, click the switch to the left to disable Internet access for client devices connected to this Guest interface. Note: You cannot turn on the guest interface when the subnet is used by the VPN.
Description	This shows the description of this interface.
	Click the edit icon to modify it.
Add	Click this button to create a new LAN interface.
IPTV	The following fields are available only when IPTV is enabled. Note: Nebula SCR 50AXE does not support IPTV.
IPTV	Click the switch to the right to turn on the IPTV (Internet Protocol Television) service. IPTV is a service that delivers video traffic over an Internet Protocol (IP) network connection.
IPTV mode	Select Bridge mode when your IPTV service provider does not use a VLAN tag for the IPTV multicast traffic. Note: At the time of writing, Port 1 is the IPTV port. Select Triple play mode when your IPTV service provider uses a VLAN tag for the IPTV multicast traffic. The Nebula Device will tag outgoing traffic from port 1 with the IPTV service provider VLAN tag. Select Advanced bridge mode when a manageable Switch is connected to port 1 of the Nebula Device for IPTV traffic and Internet access. Make sure to assign a different VLAN ID for IPTV traffic.
Port 1	This field is available only when the IPTV mode is set to Bridge. Multicast traffic from the IPTV server on the Internet goes through the Nebula Device to port 1 only. This field is read-only.
VLAN ID	This field is available only when the IPTV mode is set to Triple play. Configure the IPTV VLAN ID, for example 4081. The Nebula Device will tag traffic from port 1 with the IPTV VLAN tag going to the Internet. Allowed values are 2 – 4094. (0, 1 and 4095 are reserved.) Note: The IPTV VLAN ID must not conflict with other VLAN IDs on the WAN or LAN interface.

Table 93 Site-wide > Configure > Security router > Interface (continued)

LABEL	DESCRIPTION
Priority (802.1P)	This field is available only when the IPTV mode is set to Triple play. Enter the 802.1p number your IPTV service provider gave you to prioritize IPTV traffic. "0" is the lowest priority level and "7" is the highest. Note: At the time of writing, IPTV video traffic's priority depends on the 802.1p number your IPTV service provider gave you.
Port	This field is available only when the IPTV mode is set to Advanced bridge. Multicast traffic from the IPTV server on the Internet goes through the Nebula Device to port 1 only. This field is read-only.
Application	This field is available only when the IPTV mode is set to Advanced bridge. Multicast traffic from the IPTV server on the Internet goes through the Nebula Device. This field is read-only.
PVID	This field is available only when the IPTV mode is set to Advanced bridge. Configure the IPTV VLAN ID, for example 4081. The Nebula Device will tag traffic from port 1 with the IPTV VLAN tag going to the Internet. Allowed values are 2 – 4094. (0, 1 and 4095 are reserved.) When the multicast traffic is through the WAN (Internet) then it is untagged. Note: The IPTV VLAN ID must not conflict with other VLAN IDs on the WAN or LAN interface.
Tagging	This field is available only when the IPTV mode is set to Advanced bridge. Select Tx Tagging for the connected manageable Switch to forward IPTV-tagged traffic to the subscribers. If you do not have a connected manageable Switch, select Tx Untag or select Bridge mode in IPTV mode.
Static Route	
Destination	Enter the destination IP address.
Subnet mask	Enter an IP subnet mask. The route applies to all IP addresses in the subnet.
Next hop interface	Select the interface you want to send all traffic to.
Next hop IP	Enter the IP address of the next-hop gateway.
Description	This is the descriptive name of the static route, maximum up to 255 alphanumeric characters.
	Click this icon to modify a static route.
	Click this icon to remove a static route.
Add	Click this button to create a new static route, maximum up to 20.

7.3.1.1 WAN Interface Configuration

Click the Edit button in the WAN Interface section to open the Security router > Configure > Interface > WAN interface configuration screen.

Figure 138 Site-wide > Configure > Security router > Interface > WAN interface configuration

The following table describes the labels in this screen.

Table 94 Site-wide > Configure > Security router > Interface > WAN interface configuration

LABEL	DESCRIPTION
Interface properties	
Interface name	This field is read-only.
Description	Enter a description of the WAN interface here. You can use alphanumeric and ()+/:=?!*#@\$_%- characters, and it can be up to 512 characters long.
SNAT	Select this to enable SNAT. When enabled, the Nebula Device rewrites the source address of packets being sent from this interface to the interface's IP address.
VLAN	Select On to enable the VLAN feature on the WAN interface. Otherwise, select Off.
VLAN ID	Enter the VLAN ID. This 12-bit number uniquely identifies each VLAN. Allowed values are 2 – 4094. (0, 1 and 4095 are reserved.)
Type	Select the type of interface to create. DHCP: The interface will automatically get an IP address and other network settings from a DHCP server. Static: You must manually configure an IP address and other network settings for the interface. PPPoE: The interface will authenticate with an Internet Service Provider, and then automatically get an IP address from the ISP's DHCP server. You can use this type of interface to connect to a DSL modem. PPPoE with static IP: Assign a static IP address to the WAN interface and your WAN interface is getting an Internet connection from a PPPoE server.

Table 94 Site-wide > Configure > Security router > Interface > WAN interface configuration (continued)

LABEL	DESCRIPTION
IP address assignment	These fields are displayed if you select Static.
IP address	Enter the static IP address of this interface.
Subnet mask	Enter the subnet mask for this interface's IP address.
Default gateway	Enter the IP address of the Nebula Device through which this interface sends traffic.
First DNS server	Enter a DNS server's IP address. The Domain Name System (DNS) maps a domain name to an IP address and vice versa. The Nebula Device uses the first and second DNS servers, in that order to resolve domain names for VPN, DDNS and the time server. Leave the field blank if you do not want to configure DNS servers.
Second DNS server	Enter the IP address of another DNS server. This field is optional.
These fields are displayed if you selected PPPoE or PPPoE with static IP.	
Username	Enter the user name provided by your ISP. You can use up to 31 alphanumeric characters and the underscore. Spaces are not allowed.
Password	Enter the password provided by your ISP. You can use up to 64 alphanumeric characters and the underscore. Spaces are not allowed.
IP address assignment	
IP address	Enter the static IP address of this interface.
DNS server	Enter a DNS server's IP address. The Domain Name System (DNS) maps a domain name to an IP address and vice versa. The Nebula Device uses the first and second DNS servers, in that order to resolve domain names for VPN, DDNS and the time server. Leave the field blank if you do not want to configure DNS servers.
ADVANCED OPTIONS	
MTU	Maximum Transmission Unit. Enter the maximum size of each data packet, in bytes, that can move through this interface. If a larger packet arrives, the Nebula Device divides it into smaller fragments. Allowed values are 1280 – 1500 for static IP/DHCP; 1280 – 1492 for PPPoE/PPPoE with static IP.
DHCP option 60	This field is available only when the Type is set to DHCP. DHCP option 60 is used by the Nebula Device for identification to the DHCP server using the VCI (Vendor Class Identifier) on the DHCP server. The Nebula Device adds it in the initial DHCP discovery message that a DHCP client broadcasts in search of an IP address. The DHCP server can assign different IP addresses or options to clients with the specific VCI or reject the request from clients without the specific VCI. Enter a string using up to 63 of these characters [a–z A–Z 0–9 !"#%&'()*+,-./:;<=>?@\[\]^_`{}] to identify this Nebula Device to the DHCP server. For example, Zyxel-TW.
Cancel	Click Cancel to exit this screen without saving.
OK	Click OK to save your changes.

7.3.1.2 LAN Interface Configuration

Click the Add button or click the Edit button in the LAN interface section to open the Site-wide > Configure > Security router > Interface > LAN interface configuration screen.

Figure 139 Site-wide > Configure > Security router > Interface > LAN interface configuration

LAN interface configuration

Interface properties

Interface name

LAN

Description

IP address assignment

IPv4 address

192.168.184.1

Subnet mask

255.255.255.0

DHCP setting

DHCP

DHCP server

IP pool start address

192.168.184.33

Pool size

200

DNS server

Custom defined

Second DNS server

(Optional)

Lease time

2

days

0

hours(Optional)

0

minutes(Optional)

Static DHCP table

IPv4 address	MAC address	Description

+ Add

Cancel

Ok

The following table describes the labels in this screen.

Table 95 Site-wide > Configure > Security router > Interface > LAN interface configuration

LABEL	DESCRIPTION
Interface properties	
Interface name	Specify a name for the LAN interface. Enter up to 15 alphanumeric characters. Note: The following reserved interface names in lowercase are not allowed. For example, 'vlan' or 'vlanxx' are not allowed, but 'VLAN' or 'VLANxx' are allowed. • ethernet • ppp • vlan • bridge • virtual • wlan • cellular • aux • tunnel • status • summary • all
Description	Enter a description of the LAN interface here. You can use alphanumeric and ()+/:=?!*#@\$_%- characters, and it can be up to 512 characters long.
IP address assignment	
IPv4 address	Enter the IPv4 address for this interface.
Subnet mask	Enter the subnet mask of this interface in dot decimal notation. The subnet mask indicates what part of the IP address is the same for all computers in the network.
DHCP setting DHCP	Select what type of DHCP service the Nebula Device provides to the network. Choices are: None – the Nebula Device does not provide any DHCP services. There is already a DHCP server on the network. DHCP relay – the Nebula Device routes DHCP requests to one or more DHCP servers you specify. The DHCP servers may be on another network. DHCP server – the Nebula Device assigns IP addresses and provides subnet mask, gateway, and DNS server information to the network. The Nebula Device is the DHCP server for the network.
This field appear if the Nebula Device is a DHCP Relay.	
DHCP server	Enter the IP address of a DHCP server for the network.
These fields appear if the Nebula Device is a DHCP Server.	
IP pool start address	Enter the IP address from which the Nebula Device begins allocating IP addresses. If you want to assign a static IP address to a specific computer, use the Static DHCP table. If this field is blank, the Pool size must also be blank. In this case, the Nebula Device can assign every IP address allowed by the interface's IP address and subnet mask, except for the first address (network address), last address (broadcast address) and the interface's IP address.

Table 95 Site-wide > Configure > Security router > Interface > LAN interface configuration (continued)

LABEL	DESCRIPTION
DNS server	Specify the IP addresses of up to two DNS servers for the DHCP clients to use. Use one of the following ways to specify these IP addresses. Custom defined – enter a static IP address. From ISP – select the DNS server that another interface received from its DHCP server. This Router – the DHCP clients use the IP address of this interface and the Nebula Device works as a DNS relay.
Second DNS server	Enter the IP address of another DNS server. This field is optional. Note: This field appears only when you select Custom Defined in DNS Server.
Lease time	Specify how long each computer can use the information (especially the IP address) before it has to request the information again. days, hours, and minutes (Optional) – enter how long IP addresses are valid. Note: The minimum Lease time is 1 day and the maximum is 360 days.
Static DHCP table	Configure a list of static IP addresses the Nebula Device assigns to computers connected to the interface. Otherwise, the Nebula Device assigns an IP address dynamically using the interface's IP pool start address and Pool size.
IPv4 address	Enter the IPv4 address to assign to a device with this entry's MAC address.
MAC address	Enter the MAC address to which to assign this entry's IP address.
Description	Enter a description to help identify this static DHCP entry. You can use alphanumeric and ()+/:=?!*#@\$_%- characters, and it can be up to 60 characters long.
	Select an entry in this table and click this to delete it. This will also remove the client information on the Site-wide > Clients > Client list.
+Add	Click this to create an entry in the Static DHCP table. This will also add the client reserve IP policy on the Site-wide > Clients > Client list.
Cancel	Click Cancel to exit this screen without saving.
OK	Click OK to save your changes.

7.3.1.3 IPTV Scenarios

The Nebula Device forwards IPTV multicast traffic to IPTV subscribers connected to port 1. The following are the supported IPTV scenarios:

- Your IPTV service provider does not use a VLAN tag for the IPTV multicast traffic.
- Your IPTV service provider uses a VLAN tag for the IPTV multicast traffic.
- Your IPTV service provider uses a VLAN tag for the IPTV multicast traffic and you have a VLAN-aware Switch in your network connected to port 1 of the Nebula Device.
- The Set Top Box tags IPTV traffic with a VLAN tag for IPTV multicast traffic. You also have a VLAN-aware Switch connected to port 1 of the Nebula Device.


Note: Connect the IPTV subscribers to port 1 of the Nebula Device only.

7.3.1.4 IPTV Scenario Configurations

IPTV Bridge (IPTV Direct)

In this scenario, your IPTV service provider does not use a VLAN tag for the IPTV multicast traffic. Connect the IPTV subscriber to port 1 (P1) of the Nebula Device (Z). IPTV multicast traffic from the IPTV server on the Internet goes through the Nebula Device (Z) to this port (P1) only.

Figure 140 IPTV Bridge Application

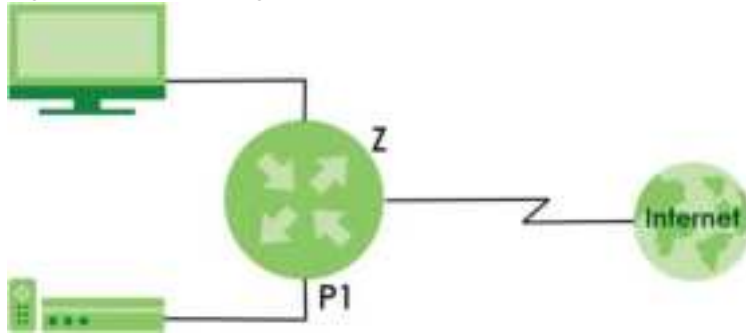

On NCC, do the following:

- 1 Go to Site-wide > Configure > Security router > Interface.
- 2 Click the IPTV switch to the right.
- 3 Select Bridge in IPTV mode.

Figure 141 Site-wide > Configure > Security router > Interface: Bridge Mode



IPTV Triple Play (IPTV with VLAN Tag)

In this scenario, your IPTV service provider uses a VLAN tag for the IPTV multicast traffic. The Nebula Device will tag outgoing traffic from port 1 (P1) with the IPTV service provider VLAN tag that you configured in NCC.


Configure an IPTV VLAN ID, for example 4081, on the Nebula Device (Z), so that the Nebula Device (Z) will tag traffic from port 1 (P1) with the IPTV VLAN tag going to the Internet.

In the following figure, IPTV-T is the IPTV service provider VLAN tag.

Note: The IPTV VLAN ID must not conflict with other VLAN IDs on the WAN or LAN interface.

If your IPTV service provider gave you an 801.1p number to prioritize IPTV traffic, you may also configure it in the Nebula Device (Z).

Figure 142 IPTV Triple Play Application

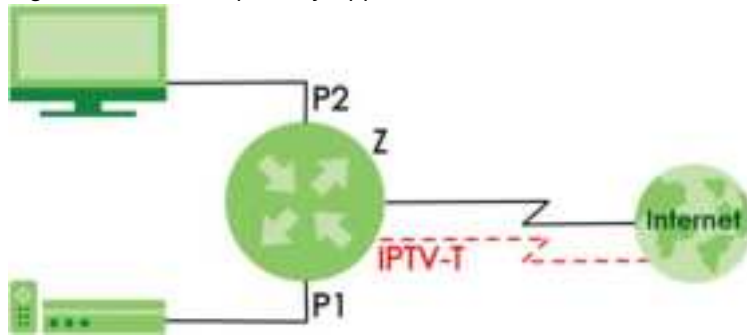

On NCC, do the following:

- 1 Go to Site-wide > Configure > Security router > Interface.
- 2 Click the IPTV switch to the right.
- 3 Select Triple Play in IPTV mode.
- 4 Enter 4081 in VLAN ID.
- 5 Select 1 in Priority.

Figure 143 Site-wide > Configure > Security router > Interface: Triple Play Mode



IPTV Advanced VLAN 1

In this scenario, your IPTV service provider uses a VLAN tag for the IPTV multicast traffic and you have a VLAN-aware Switch (S) in your network connected to port 1 (P1) of the Nebula Device. For this example scenario, connect the IPTV subscribers to a VLAN-aware Switch (S) that is connected to port 1 (P1) of the Nebula Device (Z).

Then make the following configurations:

- Configure the VLAN-aware Switch (S) to tag egress (outgoing) traffic going to port 1 (P1) on the Nebula Device (Z) with the IPTV service provider VLAN tag.


- Configure the Nebula Device (Z) to allow TX Tagging for incoming tagged traffic coming from the Switch and going to the Internet.

In the following figure, IPTV-T is the IPTV service provider VLAN tag.

Note: The IPTV VLAN ID must not conflict with other VLAN IDs on the WAN or LAN interface.

If your IPTV service provider gave you an 801.1p number to prioritize IPTV traffic, you may also configure it in the Nebula Device (Z).

Figure 144 IPTV Advanced VLAN 1 Application

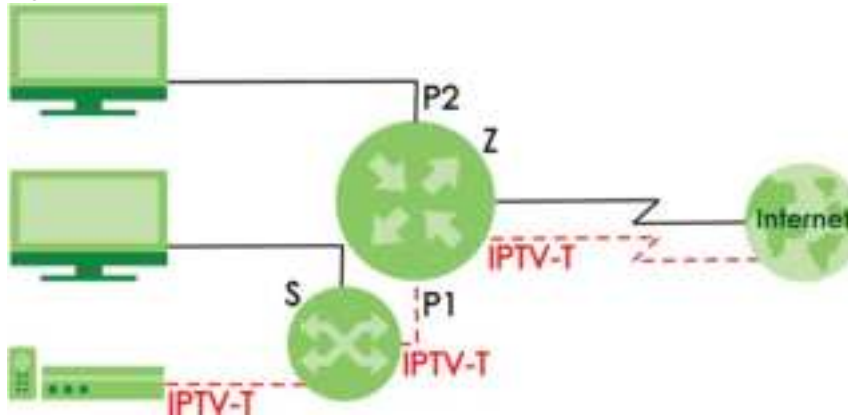

On NCC, do the following:

- 1 Go to Site-wide > Configure > Security router > Interface.
- 2 Click the IPTV switch to the right.
- 3 Select Advanced bridge in IPTV mode.
- 4 Enter 4081 in PVID.
- 5 Select TX Tagging in Tagging.

Figure 145 Site-wide > Configure > Security router > Interface: Advanced VLAN 1



IPTV Advanced VLAN 2

In this scenario, the Set Top Box (STB) tags IPTV traffic with a VLAN tag for IPTV multicast traffic. You also have a VLAN-aware Switch (S) connected to port 1 (P1) of the Nebula Device (Z). For this example scenario, connect the IPTV subscribers to a VLAN-aware Switch (S) that is connected to port 1 (P1) of the Nebula Device (Z).

Then make the following configurations:


- Configure the VLAN-aware Switch (S) to forward IPTV-tagged traffic coming from the STB subscribers and going to the Switch (S).
- Configure the Nebula Device (Z) to also allow TX Tagging for tagged traffic coming from the Switch and going to the Internet.

In the following figure, IPTV-T is the IPTV service provider VLAN tag.

Note: The IPTV VLAN ID must not conflict with other VLAN IDs on the WAN or LAN interface.

If your IPTV service provider gave you an 801.1p number to prioritize IPTV traffic, you may also configure it in the Nebula Device (Z).

Figure 146 IPTV Advanced VLAN 2 Application

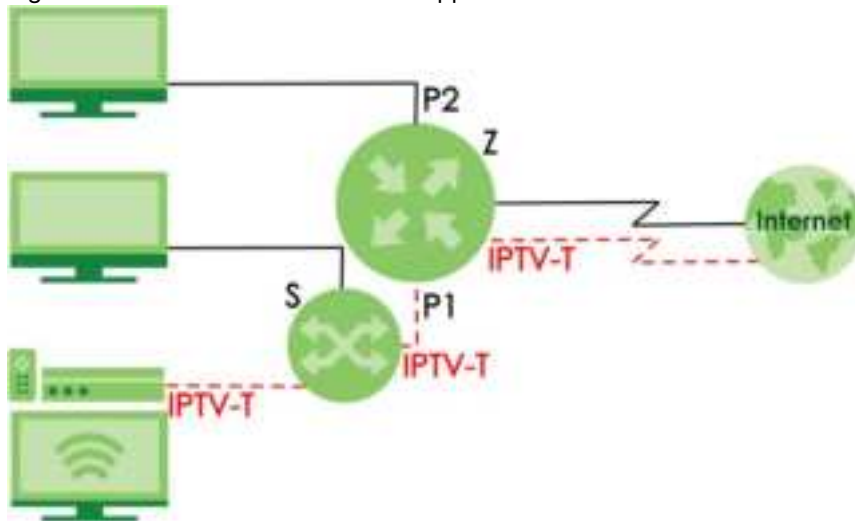

On NCC, do the following:

- 1 Go to Site-wide > Configure > Security router > Interface.
- 2 Click the IPTV switch to the right.
- 3 Select Advanced bridge in IPTV mode.
- 4 Enter 4081 in PVID.
- 5 Select TX Tagging in Tagging.

Figure 147 Site-wide > Configure > Security router > Interface: Advanced VLAN 2



7.3.2 Threat Management

Use this screen to enable the threat management categories such as:


- Ransomware and malware prevention that protects LAN clients from accessing or downloading harmful web contents.
- Intrusion blocker that prevents personal data theft in your network.
- Dark Web blocker that prevents unauthorized access from TOR proxies to the LAN clients.
- Stop mail fraud and phishing that blocks access by your LAN clients to phishing websites and SPAM URLs.
- Ads blocker that prevents access to websites containing annoying advertisements with links to harmful programs.
- VPN proxy blocker that prevents LAN clients connected to the Nebula Device from sending personal data to a cybercriminal's VPN gateway.

You can also configure the following:

- Up to 50 exception list, using the Nebula Device connected client device's name or IP address
- Up to 50 allowed domain name list
- Up to 50 blocked domain name list.

Click Site-wide > Configure > Security router > Threat management to access this screen.

Figure 148 Site-wide > Configure > Security router > Threat management

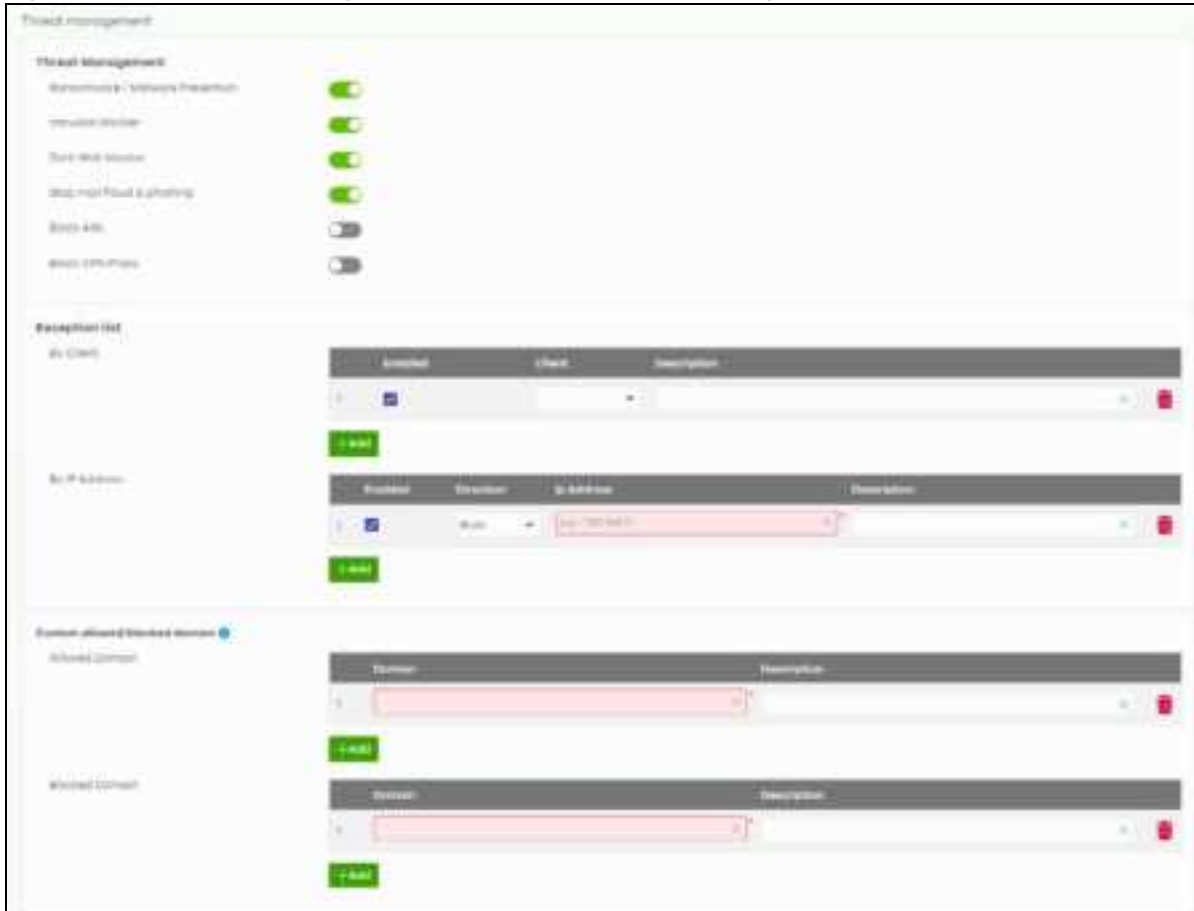

The following table describes the labels in this screen.

Table 96 Site-wide > Configure > Security router > Threat management

LABEL	DESCRIPTION
Threat management	
Ransomware / Malware	Ransomware and malware prevention protects the LAN clients connected to the Nebula Device from accessing or downloading harmful web content. These contents may contain files that could harm your operating system and personal files. Click the switch to enable ransomware/malware protection on the Nebula Device.
Intrusion blocker	Intrusion blocker prevents cybercriminals from harming, spying, or stealing personal data in your network. Click the switch to enable intrusion blocker protection on the Nebula Device.
Dark Web blocker	The Dark Web is an anonymous network accessed by browsers such as TOR. The purpose of the Dark Web is to enable anonymous access to content and prevent the identification of both the request and destination. The dark web blocker prevents unauthorized access from TOR proxies to the LAN clients connected to the Nebula Device. Click the switch to enable dark web blocker protection on the browsers of LAN clients connected to the Nebula Device.
Stop mail fraud & phishing	Mail fraud and phishing sites protection blocks access by your LAN clients to phishing websites and spam URLs. Click the switch to enable mail fraud and phishing protection on the browsers of LAN clients connected to the Nebula Device.

Table 96 Site-wide > Configure > Security router > Threat management (continued)

LABEL	DESCRIPTION
Block Ads	Ad blocking or ad filtering prevents exposure to websites containing advertisements with links to harmful programs. Click the switch to enable ads blocker protection on the browsers of LAN clients connected to the Nebula Device.
Block VPN Proxy	VPN proxy blocker prevents the LAN clients connected to the Nebula Device from sending personal data to a cybercriminal's VPN gateway. Click the switch to enable VPN proxy blocker protection on the browsers of LAN clients connected to the Nebula Device.
Exception list	Both wired and WiFi LAN clients connected to the Nebula Device in this list will bypass the threat management category check. Note: A maximum of 50 entries can be added to the exception list.
By Client	Enabled – Select this option to turn on this client exception profile. This allows both wired and WiFi LAN clients connected to the Nebula Device to bypass the threat management category check. Select the Client from the drop-down list. See Section 4.5.1 on page 280 and Section 4.5.2 on page 282 for more information on WiFi and wired clients. Enter a Description of the allowed client. You can use alphanumeric and ()+/:=?!*#@\$_%-characters, and it can be up to 512 characters long.
	Click this icon to remove the client exception profile.
Add	Click this to create a client exception profile.
By IP Address	Enabled – Select this option to turn on this IPv4 address exception profile. This allows the client with this IPv4 address to bypass the threat management category check. Direction – Select Both to allow incoming/outgoing packets to/from the Nebula Device that match this IPv4 address. Select Source to allow incoming packets to the Nebula Device that match this IPv4 address. Select Destination to allow outgoing packets from the Nebula Device that match this IPv4 address. Add the IP Address that the Nebula Device will allow incoming and/or outgoing packets. Enter a description of the allowed IPv4 address. The description can be up to 512 characters long.
	Click this icon to remove the IPv4 address exception profile.
Add	Click this icon to create an IPv4 address exception profile.
Custom allowed/ blocked domain	Create a list of host names to allow access to, or block access to, regardless of their content rating. Note: A maximum of 50 entries can be added to the Allowed Domain and Blocked Domain lists.

Table 96 Site-wide > Configure > Security router > Threat management (continued)


LABEL	DESCRIPTION
Allowed Domain	If you want to access any site, regardless of their content rating, add them to this list. Domain – Enter the host name, such as <code>www.good-site.com</code> into this text field. Do not enter the complete URL of the site – that is, do not include <code>"http://"</code>. All sub-domains are allowed. For example, entering <code>"zyxel.com"</code> also allows <code>"www.zyxel.com"</code>, <code>"partner.zyxel.com"</code>, <code>"press.zyxel.com"</code>, and so on. You can also enter just a top level domain. For example, enter <code>.com</code> to allow all <code>.com</code> domains. Use up to 127 characters (0–9 a–z). The casing does not matter. Enter a Description of the allowed domain. You can use alphanumeric and <code>()+/:=?!*#@\$_%-</code> characters, and it can be up to 60 characters long. Click Add to create a domain name profile.
Blocked Domain	If you want to block specific sites, regardless of their content rating, add them to this list. Domain – Enter the host name, such as <code>www.bad-site.com</code> into this text field. Do not enter the complete URL of the site – that is, do not include <code>"http://"</code>. All sub-domains are also blocked. For example, entering <code>"bad-site.com"</code> also blocks <code>"www.badsite.com"</code>, <code>"partner.bad-site.com"</code>, <code>"press.bad-site.com"</code>, and so on. You can also enter just a top level domain. For example, enter <code>.com</code> to block all <code>.com</code> domains. Enter a Description of the blocked domain. You can use alphanumeric and <code>()+/:=?!*#@\$_%-</code> characters, and it can be up to 60 characters long. Click Add to create a domain name profile.

7.3.3 Traffic Management

Application management allows you to manage the use of various applications on the network. Content Filter allows you to control access to specific web sites or web content.

Click Site-wide > Configure > Security router > Traffic management to access this screen. Use this screen to control application usage and configure content filter.

Figure 149 Site-wide > Configure > Security router > Traffic management

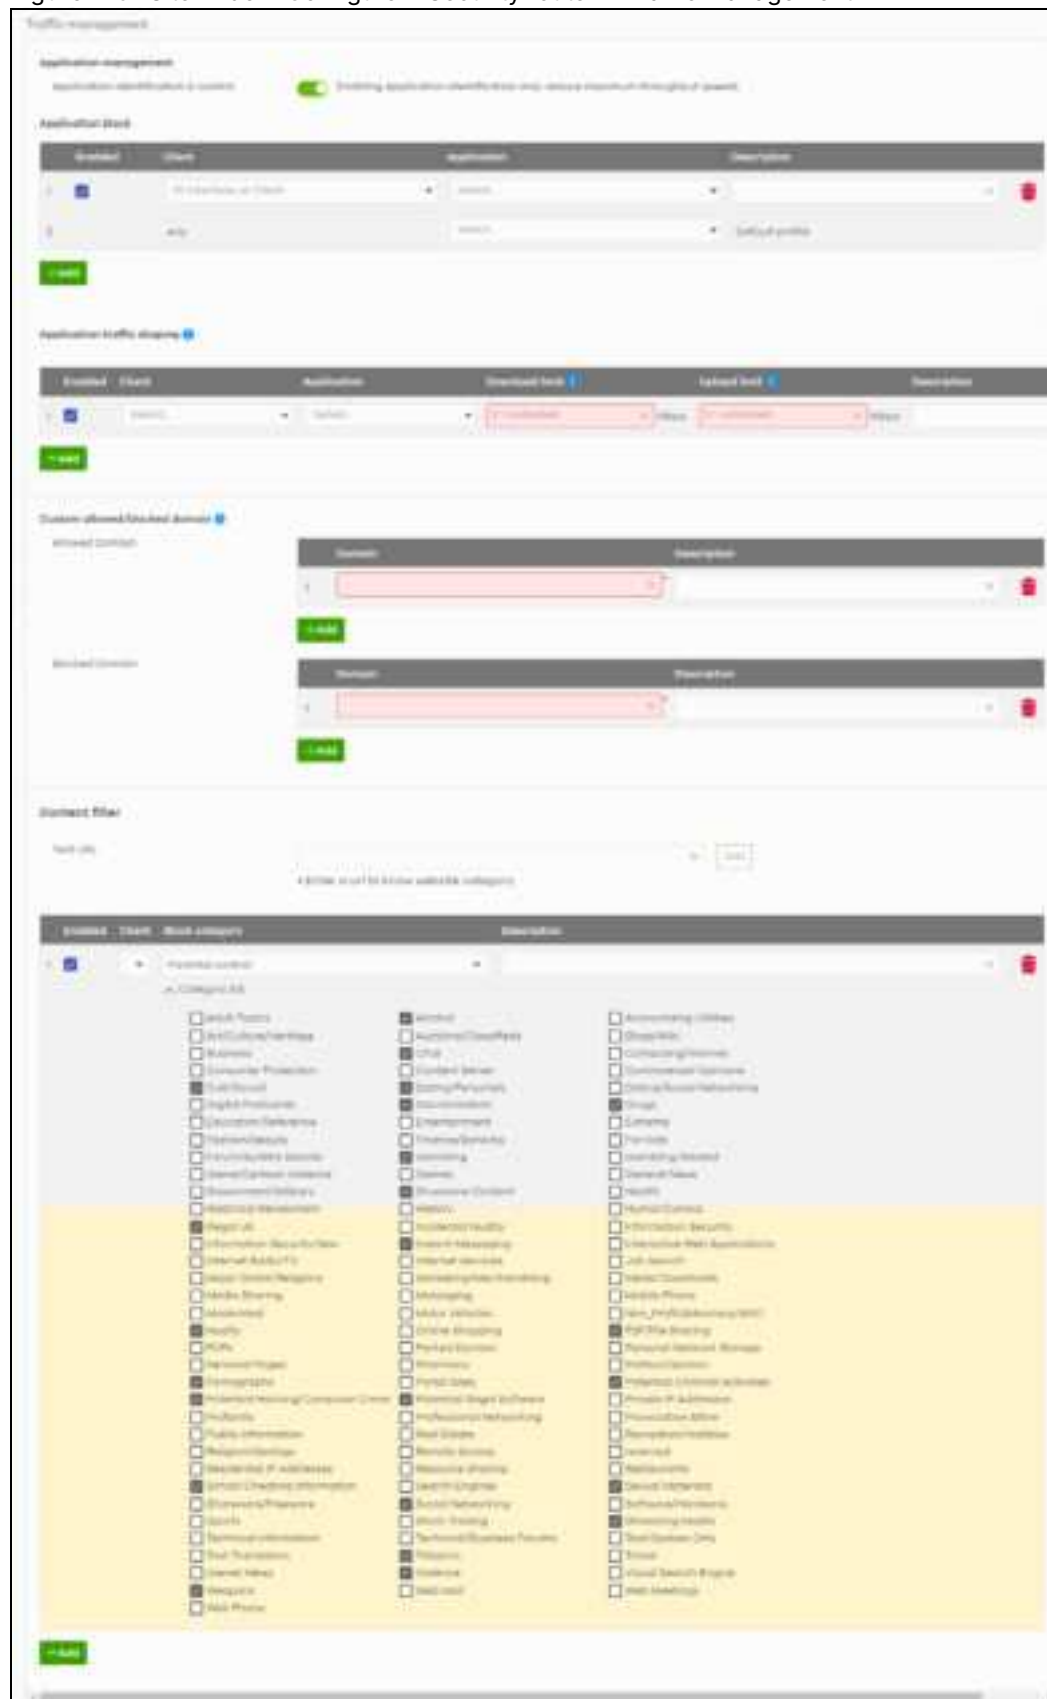

The following table describes the labels in this screen.

Table 97 Site-wide > Configure > Security router > Traffic management

LABEL	DESCRIPTION
Application management	
Application identification & control	Click this to enable the Nebula Device to control usage of applications for a client or all clients. When disabled: - the Security router network applications widget in the Site-wide > Dashboard screen will show Application monitor disabled - the Site-wide > Applications usage screen will show Application identification is turned off.
Application block	
Enabled	Select the checkbox to turn on the rule. Otherwise, clear the checkbox to turn off the rule.
Client	Select the client, or enter a single IP address (LAN interface) or IPv4 CIDR (for example, 192.168.1.1/24) to which this rule applies. Then press Enter or click + Add new. Or, select Any to apply the rule to all clients. Note: Entering a single IP address or IPv4 CIDR is not allowed for SCR 50AXE.
Application	Select All or select an application to apply the rule.
Description	Enter a description for this profile. The description can be up to 512 characters long.
	Click this icon to remove the entry.
Add	Click this button to create up to five application management profiles.
Application traffic shaping	
Enabled	Select the checkbox to turn on the rule. Otherwise, clear the checkbox to turn off the rule. If there is a lock icon, go to the Site-wide > Applications usage screen to change the maximum downstream/upstream bandwidth. See Section 4.6 on page 287 for more information.
Client	Select the client, or enter a single IP address (LAN interface) or IPv4 CIDR (for example, 192.168.1.1/24) to which this rule applies. Then press Enter. Or, select Any to apply the rule to all clients.
Application	Select All or select an application to apply the rule.
Download limit	Set the maximum downstream bandwidth (1 to 1000 Mbps) for all client traffic that matches the policy will be shared.
Upload limit	Set the maximum upstream bandwidth (1 to 1000 Mbps) for all client traffic that matches the policy will be shared.
Description	Enter a description for this profile. The description can be up to 512 characters long.
	Click this icon to remove the entry.
Add	Click this button to create up to 10 application traffic shaping rules.
Custom allowed/blocked domain	

Table 97 Site-wide > Configure > Security router > Traffic management (continued)

LABEL	DESCRIPTION
Allowed Domain	Sites that you want to allow access to, regardless of their content rating, can be allowed by adding them to this list. Domain – Enter host names such as www.good-site.com into this text field. Do not enter the complete URL of the site – that is, do not include "http://". All sub-domains are allowed. For example, entering "*zyxel.com" also allows "www.zyxel.com", "partner.zyxel.com", "press.zyxel.com", and so on. You can also enter just a top level domain. For example, enter *.com to allow all .com domains. Use up to 127 characters (0–9 a–z). The casing does not matter. Enter a Description of the allowed domain. The description can be up to 60 characters long. Click  to remove the entry. Click Add to create a domain name profile.
Blocked Domain	Sites that you want to block access to, regardless of their content rating, can be blocked by adding them to this list. Domain – Enter host names such as www.bad-site.com into this text field. Do not enter the complete URL of the site – that is, do not include "http://". All sub-domains are also blocked. For example, entering "*bad-site.com" also blocks "www.badsite.com", "partner.bad-site.com", "press.bad-site.com", and so on. You can also enter just a top level domain. For example, enter *.com to block all .com domains. Enter a Description of the blocked domain. The description can be up to 60 characters long. Click  to remove the entry. Click Add to create a domain name profile.
Content filter	
Test URL	You can check which category a web page belongs to. Enter a web site URL in the text box. When the content filter is active, you should see the web page's category. The query fails if the content filter is not active. Content Filter can query a category by full URL string (for example, http://www.google.com/picture/index.htm), but HTTPS Domain Filter can only query a category by domain name ('www.google.com'), so the category may be different in the query result. URL to test displays both results in the test.
Enabled	Select the checkbox to turn on the rule. Otherwise, clear the checkbox to turn off the rule.
Client	Select All or select a client to apply the rule.
Block category	Select the block category. Choices are Parental control, Productivity and Custom.
Description	Enter a description for this profile. You can use alphanumeric and ()+/:=?!*#@\$_%-characters, and it can be up to 512 characters long.
Category list	Click to display or hide the category list. These are categories of web pages based on their content. Select categories in this section to control access to specific types of Internet content.
	Click this icon to remove the entry.
Add	Click this button to create up to five application categories and set actions for specific applications within the category.

7.3.4 Firewall

By default, a LAN user can initiate a session from within the LAN and the Nebula Device allows the response. However, the Nebula Device blocks incoming traffic initiated from the WAN and destined for the LAN. Use this screen to configure firewall rules for outbound traffic.

In addition, this screen allows you to create new NAT rules and edit/delete existing NAT rules.

Note: When adding a NAT rule, based on the NAT setting NCC will automatically add the incoming security policy (firewall) rule.

Click Site-wide > Configure > Security router > Firewall to access this screen.

Note: The Nebula Device has the following hidden default firewall rules: LAN to WAN is allowed, WAN to LAN is blocked.

Figure 150 Site-wide > Configure > Security router > Firewall

The screenshot displays the Firewall configuration interface. It includes sections for Country Restriction (with Action and Direction settings), Security policy (with a table of rules including Enabled, Name, Action, Protocol, Source, and Destination), and NAT - Virtual server (with a table of rules including Enabled, Protocol, Public Port, LAN IP, Local Port, Allow Remote IP, and Description).

The following table describes the labels in this screen.

Table 98 Site-wide > Configure > Security router > Firewall

LABEL	DESCRIPTION
Country Restriction	
Action	Choose one of the following actions: • Disable: Select this to hide the Country Restriction settings. • Allow: Select this to allow packets from the selected countries IP address in the Country field. Dropping of packets from countries not in the Allow list will occur. • Block: Select this to drop packets from the selected countries IP address in the Country field.

Table 98 Site-wide > Configure > Security router > Firewall (continued)

LABEL	DESCRIPTION
Directions	Select Both to allow incoming/outgoing packets to apply the firewall rules. Select Incoming to apply the firewall rules on incoming packets. Select Outgoing to apply the firewall rules on outgoing packets.
Country	Select up to 10 countries or regions to apply the firewall rules configured in this screen.
Security policy	
	Click the icon of a rule and drag the rule up or down to change the order.
Enabled	Select the checkbox to turn on the rule. Otherwise, clear the checkbox to turn off the rule.
Name	Enter the name of the security policy.
Action	Select what the Nebula Device is to do with packets that match this rule. Select Deny to silently discard the packets without sending a TCP reset packet or an ICMP destination-unreachable message to the sender. Select Allow to permit the passage of the packets.
Protocol	Select the IP protocol to which this rule applies. Choices are: ICMP, TCP, UDP, TCP and UDP and Any.
Source	Specify the source IP addresses (LAN interface / country) to which this rule applies. You can add a CIDR, or enter a new IP address by clicking Customize IP. Enter Any to apply the rule to all IP addresses.
Destination	Specify the destination IP addresses (LAN interface / country) or subnet to which this rule applies. You can add a CIDR, or enter a new IP address by clicking Customize IP. Enter Any to apply the rule to all IP addresses.
Dst Port	Specify the destination ports to which this rule applies. By default, Any applies the rule to all ports.
Description	Enter a descriptive name of up to 60 printable ASCII characters for the rule.
	Click this icon to remove the rule.
Implicit allow rules	This shows the system generated Allow rules. - LAN interface / remote access VPN to Any - LAN interface / remote access VPN to Nebula Device
Implicit deny rule	This shows the system generated Deny rule. Any to Any
Add	Click this button to create a new rule.
NAT – Virtual server	
	Click the icon of a rule and drag the rule up or down to change the order.
Enabled	Select the checkbox to turn on the rule. Otherwise, clear the checkbox to turn off the rule.
Protocol	Select the IP protocol to which this rule applies. Choices are: TCP, UDP, and Both. Note: Select Both if you are unsure.
Public Port	Enter the translated destination port or range of translated destination ports if this NAT rule forwards the packet. The remote user will try to connect to this port.
LAN IP	Specify to which translated destination IP address this NAT rule forwards packets. This is the IP address of the internal server.
Local Port	Enter the original destination port or range of destination ports this NAT rule supports. The internal server should respond to this port.
Allow Remote IPs	Specify the remote IP addresses that are allowed to access the public IP address. You may restrict the remote users to connect from certain public IP addresses only. Select Any to allow all IP addresses.

Table 98 Site-wide > Configure > Security router > Firewall (continued)

LABEL	DESCRIPTION
Description	Enter the descriptive name of the policy of up to 255 printable ASCII characters.
	Click this icon to remove the profile.
Add	Click this button to create a new schedule profile.

7.3.5 Site-to-Site VPN

A virtual private network (VPN) provides secure communications between sites without the expense of leased site-to-site lines. Use this screen to configure VPN rules.

Note: Site-to-site VPN does not support both VPN sites behind NAT mode.

Click Site-wide > Configure > Security router > Site-to-Site VPN to access this screen.

Figure 151 Site-wide > Configure > Security router > Site-to-Site VPN

Site-to-Site VPN

Nebula VPN

Primary interface: WAN

Local networks

Name	Subnet	Use VPN
lan	192.168.0.0/24	☒

3D-VPN

Enabled: ☒

VPN mode: Default

VPN technology: Site-to-Site

ADVANCED OPTIONS

Area communication: ☐

NAT traversal: ☐ None

☒ Custom: 192.168.0.0/24

Remote VPN peer connect to this Nebula gateway using the public IP address you specify

Peer VPN networks

Network	Subnet

Configuring VPNs with multiple sites is cumbersome. Use [VPN Configuration](#) to save your time.

Auto-Link VPN

Site-wide settings

Options in this section apply to this Nebula gateway only

Enabled	Name	Public IP	Private subnet	Peer policy	Pre-shared secret	Available
☒				Default		☐

Peer VPN networks

Network	Subnet

The following table describes the labels in this screen.

Table 99 Site-wide > Configure > Security router > Site-to-Site VPN

LABEL	DESCRIPTION
Primary interface	This displays WAN as the interface to which the VPN connection is going.
Local networks	This shows the local network behind the Nebula Device.
Name	This shows the network name.
Subnet	This shows the IP address and subnet mask of the computer on the network.

Table 99 Site-wide > Configure > Security router > Site-to-Site VPN (continued)

LABEL	DESCRIPTION
Use VPN	Select ON to allow the computers on the network to use the VPN tunnel. Otherwise, select OFF. Note: Non-Nebula VPN peers use the first interface with a local policy. For example, when both 'lan1' and 'lan2' are enabled, the first interface in the list 'lan1' will be used regardless of the order they are created.
SD-VPN	
Enabled	Click this to enable or disable site-to-site VPN on the site's Nebula Device. If you disable this setting, the site will leave the VPN area.
VPN Area	Select the VPN area of the site. For details, see Section 12.4.4.2 on page 745.
VPN topology	Click this to select a topology for the VPN area. For details on topologies, see Section 12.4.4.1 on page 744. Select disable to disable VPN connections for all sites in the VPN area.
Area communication	Enable this to allow the site to communicate with sites in different VPN areas within the organization.
NAT traversal	If the Nebula Device is behind a NAT router, select Custom to enter the public IP address or Auto or the domain name that is configured and mapped to the Nebula Device on the NAT router. In the NAT traversal pop-up, select WAN and Auto to allow NCC to detect automatically the public IP of your Nebula Device. Note: To allow a site-to-site VPN connection, the NAT router must have the following ports open: UDP 500, 4500.
Peer VPN networks	This shows all sites within the VPN area.
Auto-Link VPN	Configure this section to add a non-Nebula gateway to the VPN area.
Site-wide settings	
+ Add	Click this button to add a non-Nebula gateway to the VPN area.
Enabled	Select the checkbox to enable VPN connections to the non-Nebula gateway.
Name	Enter the name of the non-Nebula gateway/VPN.
Public IP	Enter the public IPv4 address or FQDN of the non-Nebula gateway.
Private subnet	Enter the IP subnet that will be used for VPN connections. This is the other side's LAN subnet, which you want to reach from your side. The IP range must be reachable from other devices in the VPN area. Note: Use a subnet, for example 192.168.10.0/24. Do not use a gateway address, for example 192.168.10.1/24.
IPSec policy	Click to select a pre-defined policy or have a custom one. See Section 7.3.5.1 on page 471 for detailed information.
Pre-shared secret	Enter a pre-shared key (password). The Nebula Device and peer gateway use the key to identify each other when they negotiate the IKE SA.
Availability	Select which sites the non-Nebula gateway can connect to in the VPN area. Select All sites to allow the non-Nebula gateway to connect to any site in the VPN area. Select This site and the non-Nebula gateway can only connect to the Nebula Device in this site.
Address	Enter the address (physical location) of the device.

Table 99 Site-wide > Configure > Security router > Site-to-Site VPN (continued)

LABEL	DESCRIPTION
	Click this icon to remove the non-Nebula gateway.
+ Add	Click this button to create a new non-Nebula gateway.

7.3.5.1 IPsec Policy

Click the Default button in the Non-Nebula VPN peers section of the Site-wide > Configure > Security router > Site-to-Site VPN screen to access this screen.

Figure 152 Site-wide > Configure > Security router > Site-to-Site VPN: IPsec Policy



The following table describes the labels in this screen.

Table 100 Site-wide > Configure > Security router > Site-to-Site VPN: IPsec Policy

LABEL	DESCRIPTION
Preset	Select a pre-defined IPsec policy, or select Custom to configure the policy settings yourself.
Phase1	IPsec VPN consists of two phases: Phase 1 (Authentication) and Phase 2 (Key Exchange). A phase 1 exchange establishes an IKE SA (Security Association).
IKE version	Select IKEv1 or IKEv2. IKEv1 and IKEv2 applies to IPv4 traffic only. IKE (Internet Key Exchange) is a protocol used in setting up security associations that allows two parties to send data securely.

Table 100 Site-wide > Configure > Security router > Site-to-Site VPN: IPsec Policy (continued)

LABEL	DESCRIPTION
Encryption	Select which key size and encryption algorithm to use in the IKE SA. Choices are: DES – a 56-bit key with the DES encryption algorithm 3DES – a 168-bit key with the DES encryption algorithm AES128 – a 128-bit key with the AES encryption algorithm AES192 – a 192-bit key with the AES encryption algorithm AES256 – a 256-bit key with the AES encryption algorithm The Nebula Device and the remote IPsec router must use the same key size and encryption algorithm. Longer keys require more processing power, resulting in increased latency and decreased throughput.
Authentication	Select which hash algorithm to use to authenticate packet data in the IKE SA. Choices are SHA128, SHA256, SHA512 and MD5. SHA is generally considered stronger than MD5, but it is also slower. The remote IPsec router must use the same authentication algorithm.
Diffie-Hellman group	Select which Diffie-Hellman key group (DHx) you want to use for encryption keys. Choices are: DH1 – use a 768-bit random number Modular Exponential (MODP) DH group DH2 – use a 1024-bit random number MODP DH5 – use a 1536-bit random number MODP DH14 – use a 2048-bit random number MODP DH19 – use a 256-bit random number elliptic curve group DH20 – use a 384-bit random number elliptic curve group DH21 – use a 521-bit random number elliptic curve group DH28 – use a 256-bit random number elliptic curve group DH29 – use a 384-bit random number elliptic curve group DH30 – use a 512-bit random number elliptic curve group Both routers must use the same DH key group.
Lifetime (seconds)	Enter the maximum number of seconds the IKE SA can last. When this time has passed, the Nebula Device and remote IPsec router have to update the encryption and authentication keys and re-negotiate the IKE SA. This does not affect any existing IPsec SAs, however.
Advanced	Click this to display a greater or lesser number of configuration fields.
Mode	Set the negotiation mode. Main encrypts the Nebula Device's and remote IPsec router's identities but takes more time to establish the IKE SA. Aggressive is faster but does not encrypt the identities.
Local ID	Enter an identifier used to identify the Nebula Device during authentication. This can be an IP address or hostname.
Peer ID	Enter an identifier used to identify the remote IPsec router during authentication. This can be an IP address or hostname.
Phase2	Phase 2 uses the SA that was established in phase 1 to negotiate SAs for IPsec.

Table 100 Site-wide > Configure > Security router > Site-to-Site VPN: IPsec Policy (continued)

LABEL	DESCRIPTION
Encryption	Select which key size and encryption algorithm to use in the IPsec SA. Choices are: (None) – no encryption key or algorithm DES – a 56-bit key with the DES encryption algorithm 3DES – a 168-bit key with the DES encryption algorithm AES128 – a 128-bit key with the AES encryption algorithm AES192 – a 192-bit key with the AES encryption algorithm AES256 – a 256-bit key with the AES encryption algorithm The Nebula Device and the remote IPsec router must both have at least one proposal that uses the same encryption and the same key. Longer keys are more secure, but require more processing power, resulting in increased latency and decreased throughput.
PFS group	Select whether or not you want to enable Perfect Forward Secrecy (PFS) and, if you do, which Diffie-Hellman key group to use for encryption. Choices are: None – disable PFS DH1 – use a 768-bit random number Modular Exponential (MODP) DH group DH2 – use a 1024-bit random number MODP DH5 – use a 1536-bit random number MODP DH14 – use a 2048-bit random number MODP DH19 – use a 256-bit random number elliptic curve group DH20 – use a 384-bit random number elliptic curve group DH21 – use a 521-bit random number elliptic curve group DH28 – use a 256-bit random number elliptic curve group DH29 – use a 384-bit random number elliptic curve group DH30 – use a 512-bit random number elliptic curve group PFS changes the root key that is used to generate encryption keys for each IPsec SA. Both routers must use the same DH key group. PFS is ignored in initial IKEv2 authentication but is used when re-authenticating.
Lifetime (seconds)	Enter the maximum number of seconds the IPsec SA can last. Shorter life times provide better security. The Nebula Device automatically negotiates a new IPsec SA before the current one expires, if there are users who are accessing remote resources.
Close	Click this button to exit this screen without saving.
OK	Click this button to save your changes and close the screen.

7.3.6 Remote Access VPN

Use this screen to configure the VPN client settings on the Nebula Device. This allows incoming VPN clients to connect to the Nebula Device in order to access the site's network. The clients have dynamic IP addresses and are also known as dial-in users. Only the clients can initiate the VPN tunnel.

Click Site-wide > Configure > Security router > Remote access VPN to access this screen.

Figure 153 Site-wide > Configure > Security router > Remote access VPN

The following table describes the labels in this screen.

Table 101 Site-wide > Configure > Security router > Remote access VPN

LABEL	DESCRIPTION
NAT Traversal	If the Nebula Device is behind a NAT router, select + Customize IP to enter the public IP address that is configured and mapped to the Nebula Device on the NAT router. Select None to map to the WAN IP of the Nebula Device. NCC automatically updates the DNS server when the WAN IP changes. Or, select Auto to allow NCC to detect automatically the public IP of your Nebula Device. NCC automatically selects another WAN interface when the selected WAN interface is down. NCC automatically updates the DNS server when the public IP changes.
Authentication	Select how the Nebula Device authenticates a remote user before allowing access to the VPN tunnel. Click Create a cloud auth account to create a Nebula Cloud Authentication Server user account. This will automatically add the site where you create remote access VPN setup to the Organization-wide > Organization-wide manage > Cloud authentication > User screen and bypass two-factor authentication.
VPN configuration script download	Click the Windows, iOS/macOS or Android (strongSwan) icon to download a ZIP file containing the VPN remote access configuration script. After unzipping, save the certificate (.crt) and script (.bat) files to the same folder in your computer. This field is available only when the Nebula Device is online. Note: For iOS/macOS, the default authentication type is Certificate. To enter the user name and password, change the user authentication type to Username.
IPsec VPN server	Select this to enable the IPsec VPN server.
Client VPN subnet	Specify the IP addresses that the Nebula Device uses to assign to the VPN clients. The default subnet is 192.168.50.0/24.

Table 101 Site-wide > Configure > Security router > Remote access VPN (continued)

LABEL	DESCRIPTION
DNS name servers	Specify the DNS servers to assign to the remote users. Or select Specify nameserver to enter a static IP address.
Custom name servers	If you select Specify nameserver in the DNS name servers field, manually enter the DNS server IP addresses.
Upload Bandwidth Limit	Enter the maximum traffic load between VPN clients, 1 – 100 Mbps.
SecuExtender IKEv2 VPN configuration provision	Enter the email address to send new IKEv2 Remote Access VPN configuration file to VPN client. Then click Send Email. The VPN client needs to replace the IPSec VPN client configuration by importing the configuration file.
Get the SecuExtender VPN Client software	Click the Windows or macOS icon to download the SecuExtender VPN client software.

Note: It is strongly recommended to use a strong encryption (cipher), for example, AES256. Advanced Encryption Standard (AES) 256 is a symmetric encryption algorithm that uses a 256-bit key to convert plain text or data into a cipher.

How to renew a VPN certificate


- 1 Whenever a VPN certificate expires, turn off the Remote VPN Server and turn it back on again so that the Nebula Device will automatically generate a new certificate.
- 2 Download the VPN script again from NCC and install the new VPN script on each VPN client.

7.3.7 SSID Settings

This screen allows you to configure up to 8 different SSID profiles for your Nebula Devices. An SSID, or Service Set Identifier, is basically the name of the WiFi network to which a WiFi client can connect. The SSID appears as readable text to any device capable of scanning for WiFi frequencies (such as the WiFi adapter in a laptop), and is displayed as the WiFi network name when a person makes a connection to it.

Click Site-wide > Configure > Security router > SSID settings to access this screen.

Figure 154 Site-wide > Configure > Security router > SSID settings

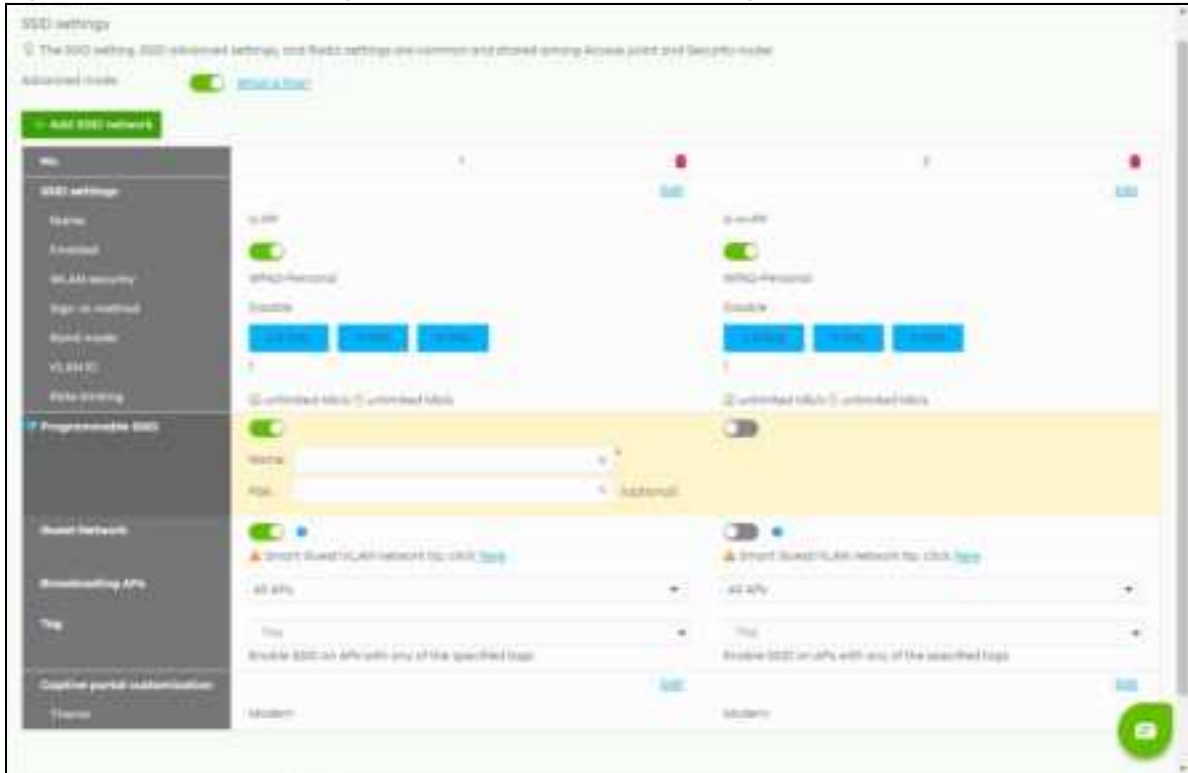

The following table describes the labels in this screen.

Table 102 Site-wide > Configure > Security router > SSID settings

LABEL	DESCRIPTION
Advanced mode	Select Off to disable Advanced mode. This allows you to create SSID profiles by only specifying an SSID name and optional password. NCC sets all other WiFi settings to default.
+ Add SSID network	Click this button to configure up to 8 different SSID profiles for your Nebula Device. To configure more than 8 SSID profiles (up to 24), enable AP grouping in Site-wide > Configure > Access points > AP & port settings. For details, see Section 5.3.7 on page 367. Note: Only 4 SSIDs are allowed on each SCR 50AXE. Note: Only 8 SSIDs are allowed on each Nebula Device Access Points and USG LITE 60AX. Use the Tag and/or Broadcasting APs fields to assign up to 8 AP groups per Nebula Device. A blank Tag / Broadcasting APs field is counted as an AP group. Note: Disabling AP grouping in Site-wide > Configure > Access points > AP & port settings will hide SSID9 to SSID24, but keep the settings.
No.	This shows the index number of this profile.
delete	Click this icon to remove the SSID profile.
SSID settings	
Edit	Click this button to go to the SSID advanced settings screen and configure WiFi security and advanced settings, such as band selection, enable assisted roaming and U-APSD (Unscheduled automatic power save delivery). See Table 55 on page 346 for more information on assisted roaming and U-APSD.

Table 102 Site-wide > Configure > Security router > SSID settings (continued)

LABEL	DESCRIPTION
Name	This shows the SSID name for this profile. Click the text box and enter a new SSID if you want to change it.
Enabled	Click to turn on or off this profile.
WLAN security	This shows the encryption method used in this profile.
Sign-in method	This shows the authentication method used in this profile or Disable.
Band mode	This shows whether the SSID use either 2.4 GHz band, 5 GHz band, or the 6 GHz band.
VLAN ID	This shows the ID number of the VLAN to which the SSID belongs.
Rate limiting	This shows the maximum incoming/outgoing transmission data rate (in Kbps) on a per-station basis.
Programmable SSID	Select On to have each Nebula Device that uses this SSID generate a unique SSID name and pre-shared key (PSK) based on the Nebula Device's model name, serial number, or MAC address. For example, a hotel can install a Nebula Device in each room and then have each Nebula Device broadcast a unique SSID based on the room number: FreeWiFi_Room1, FreeWiFi_Room2, FreeWiFi_Room3, and so on.
Name	Name: Enter a programmable SSID name in the format PREFIX+VALUE(X). This name overrides the original SSID name. - PREFIX: Optional prefix to add to the SSID, for example "FreeWiFi_". To use "\$" in the SSID name, enter "\$\$" - VALUE: Specify a Nebula Device value to use to generate the SSID name. Use one of the following: \$AP = Nebula Device device name. \$MAC = Nebula Device MAC address. \$SN = Nebula Device serial number. - X: Specify how many characters of the Nebula Device value to use in the SSID. A positive number means the first X characters, and a negative number means the last X characters. Example: <i>FreeWiFi_Room\$AP(-3)</i> generates an SSID called "FreeWiFi_Room" + the last three characters of the access point device name.
PSK	PSK: Enter an optional programmable PSK in the format GENTYPE(Y). - GENTYPE: Specify how the Nebula Device will generate a random PSK. \$GENMIX = The Nebula Device generates a mix of random letters and numbers. \$GENNUM = The Nebula Device generates a mix of random numbers only. \$AP = Nebula Device device name. \$MAC = Nebula Device MAC address. \$SN = Nebula Device serial number. - Y = Specify the length of the PSD. The minimum length is 8. Example 1: <i>\$GENNUM(10)</i> generates a unique 10-character PSK for this SSID, consisting only of numbers. Example 2: <i>\$MAC(-5)\$SN(-5)</i> uses the MAC address's last 5 characters and the serial number's last 5 characters (for example, 8E3AE02451). Example 3: <i>ZYXEL-\$GENMIX(4)</i> appends the fixed characters 'ZYXEL' and generates a unique 4-character mix of random letters and numbers (for example, ZYXEL-3c4d). Note: You can specify a fixed PSK for this SSID at Site-wide > Configure > Access points / Security router > SSID advanced settings.

Table 102 Site-wide > Configure > Security router > SSID settings (continued)

LABEL	DESCRIPTION
Guest Network	Select On to set this WiFi network as a guest network. Layer 2 isolation and intra-BSS blocking are automatically enabled on the SSID. WiFi clients connecting to this SSID can access the Internet through the Nebula Device but cannot directly connect to the LAN or the WiFi clients in the same SSID or any other SSIDs. Note: In your VLAN-enabled network, if the SSID's gateway MAC address and the Nebula Device's gateway MAC address are different and belong to different VLANs, you need to manually add the SSID's gateway MAC address to the layer 2 isolation list. See Section 5.3.2 on page 343. Note: If you have a Nebula Security Gateway installed in the site but the gateway interface with the same VLAN ID is not configured as a guest interface, Smart Guest/VLAN network tip, click here. displays after you select On. Click here to open a screen where you can directly select to use the interface as a Guest interface. 
Broadcasting APs	Select All APs or specify the AP to use this SSID profile. Note: This field only appears when you have a Security Router in your site.
Tag	Enter or select the tags you created for Nebula Devices in the Site-wide > Devices > Access points screen or Site-wide > Devices > Access points: Details screen. Only the Nebula Devices with the specified tag will broadcast this SSID. If you leave this field blank, all the Nebula Devices on the site will broadcast this SSID.
Captive portal customization	
Edit	Click this button to go to the Captive portal screen and configure the captive portal settings. See Section 5.3.3 on page 353 .
Theme	If captive portal is enabled, this shows the name of the captive portal page used in this profile.

7.3.8 SSID Advanced Settings

Use this screen to configure WiFi security, band selection, assisted roaming and U-APSD (Unscheduled automatic power save delivery) settings for the SSID profiles.

Click Site-wide > Configure > Security router > SSID advanced settings to access this screen.

Figure 155 Site-wide > Configure > Security router > SSID advanced settings

SSID advanced settings

SSID:

Basic info

SSID name:

Enabled: ☒

Network access

Security options: [?](#)

☐ Open
Users can connect without entering a password

☒ WPA Personal (WPA2) [?](#)
Users must enter this key to associate:

Wi-Fi Access QR Code: [Print](#)

Captive portal advance setting

Walled garden: ☒

Walled garden ranges:

[What do I enter here?](#)

Strict Policy:

Result time:

Traffic options

Forwarding mode:

☒ Local bridge

☐ NAT mode [? Model not](#)
Use Zyvel DHCP & NAT
Clients receive IP addresses in an isolated network.
Client cannot communicate with other clients associated with different AP

☐ [? Advanced](#)
All's access traffic passing through the Zyvel security gateway.
Supported by a specific version of the Zyvel security gateway

Rate limit:

Download: (Default: 15 - 100)
1K 2K 3K 4K 5K 6K 7K 8K 9K 10K

(Per client device traffic rate)

Upload: (Default: 15 - 100)
1K 2K 3K 4K 5K 6K 7K 8K 9K 10K

Advanced settings

VLAN ID: 1 (1-4094)

Band mode: 2.4 GHz band, 5 GHz band, 5 GHz band (5 GHz band: [How can I use 5GHz in 5GHz?](#))

MLO: **Enabled** (MLO is linked to the activation steps of the Wi-Fi 7 standard. Enabling the BSSN/v protocol on a device simultaneously activates MLO capabilities.)

Assisted Handover: Shadow BSSN/v

LAPSD: **Enabled**

SSID schedule

Enabled: **On**

Schedule: SSID-Schedule

Schedule template: Available S-S style

Local time zone: Asia - Tokyo (You can set this in [site settings](#).)

Day	Availability
Sunday	00:00 01:00 02:00 03:00 04:00 05:00 06:00 07:00 08:00 09:00 10:00 11:00 12:00 13:00 14:00 15:00 16:00 17:00 18:00 19:00 20:00 21:00 22:00 23:00 24:00
Monday	00:00 01:00 02:00 03:00 04:00 05:00 06:00 07:00 08:00 09:00 10:00 11:00 12:00 13:00 14:00 15:00 16:00 17:00 18:00 19:00 20:00 21:00 22:00 23:00 24:00
Tuesday	00:00 01:00 02:00 03:00 04:00 05:00 06:00 07:00 08:00 09:00 10:00 11:00 12:00 13:00 14:00 15:00 16:00 17:00 18:00 19:00 20:00 21:00 22:00 23:00 24:00
Wednesday	00:00 01:00 02:00 03:00 04:00 05:00 06:00 07:00 08:00 09:00 10:00 11:00 12:00 13:00 14:00 15:00 16:00 17:00 18:00 19:00 20:00 21:00 22:00 23:00 24:00
Thursday	00:00 01:00 02:00 03:00 04:00 05:00 06:00 07:00 08:00 09:00 10:00 11:00 12:00 13:00 14:00 15:00 16:00 17:00 18:00 19:00 20:00 21:00 22:00 23:00 24:00
Friday	00:00 01:00 02:00 03:00 04:00 05:00 06:00 07:00 08:00 09:00 10:00 11:00 12:00 13:00 14:00 15:00 16:00 17:00 18:00 19:00 20:00 21:00 22:00 23:00 24:00
Saturday	00:00 01:00 02:00 03:00 04:00 05:00 06:00 07:00 08:00 09:00 10:00 11:00 12:00 13:00 14:00 15:00 16:00 17:00 18:00 19:00 20:00 21:00 22:00 23:00 24:00

+ Add (Each site can have at most 8 SSID schedule.)

Delete

The following table describes the labels in this screen.

Table 103 Site-wide > Configure > Security router > SSID advanced settings

LABEL	DESCRIPTION
SSID advanced settings	
SSID	Select the SSID profile to which the settings you configure here is applied.
Basic info	
SSID name	This shows the SSID name as it appears to WiFi clients. Click the text box and enter a new SSID if you want to change it.
Enabled	Click this to enable the SSID to be discoverable by WiFi clients.

Table 103 Site-wide > Configure > Security router > SSID advanced settings (continued)

LABEL	DESCRIPTION
Hide SSID	Click this if you want to hide your SSID from WiFi clients. This tells any WiFi clients in the vicinity of the Nebula Device using this SSID profile not to display its SSID name as a potential connection. When an SSID is “hidden” and a WiFi client cannot see it, the only way you can connect to the SSID is by manually entering the SSID name in your WiFi connection setup screens. Note: This field will not appear when you have an SCR 50AXE but no Nebula Device AP(s) in your site.
Network access	Note: You cannot enable MAC authentication, 802.1X authentication and web authentication at the same time. Note: User accounts can be created and authenticated using the NCC user database. See Section on page 780.
Security options	Select Open to allow any client to associate this network without any data encryption or authentication. Select WPA Personal With (WPA1/WPA2/WPA3) and enter a pre-shared key from 8 to 63 case-sensitive keyboard characters to enable WPA1/2/3-PSK data encryption. After selecting WPA Personal With WPA3, Nebula Devices that do not support it will revert to WPA2. Click Print to display the Wi-Fi Access QR Code that includes the password for quick access. You can save the QR code as PDF. To test, use a smartphone to scan the QR code. Click to join the network. The client device should connect to WiFi directly without asking the password.

Table 103 Site-wide > Configure > Security router > SSID advanced settings (continued)

LABEL	DESCRIPTION
Sign-in method	Select Disabled to turn off web authentication. Select Click-to-continue to block network traffic until a client agrees to the policy of user agreement. Note: After enabling Click-to-continue, the Nebula Device creates a user account with user name "clicktocontinue_X_Y", where X is the radio type (1 = 2.4 GHz, 2 = 5 GHz) and Y is the SSID number (1–8) of the SSID profile. The Nebula Device uses this account to authenticate clients who agree to the terms of the click-to-continue page. Select Voucher to require that a user logs in with a voucher code. For details on vouchers, see Section 4.8.2 on page 294. Note: Vouchers cannot be enabled if Dynamic Personal Pre-Shared Key (DPPSK) or WPA Enterprise are enabled. Select Sign-on with and: - select Nebula cloud authentication to block network traffic until a client authenticates with the NCC through the specifically designated web portal page. - select My RADIUS server to block network traffic until a client authenticates with an external RADIUS server through the specifically designated web portal page. Enable MAC authentication fallback when both RADIUS-based MAC authentication and web authentication are implemented. Scenario 1: When MAC authentication fails. A WiFi client tries to connect to the WiFi network using MAC authentication (RADIUS server). If MAC authentication fails, he will fall back to web authentication. The WiFi client needs to provide a user name and password for web authentication. Scenario 2: When MAC authentication is successful. A WiFi client tries to connect to the WiFi network and passes MAC authentication. Web authentication is then skipped. Note: When MAC authentication fallback is enabled, the WiFi client can avoid network disassociations due to MAC authentication failure. - select Facebook to block network traffic until a client authenticates with the NCC using Facebook Login. Facebook Login is a secure and quick way for users to log into your app or website using their existing Facebook accounts. If you get the App ID for your app at the Facebook developers site, you can enter your Facebook app ID to obtain more information about your users using Facebook Analytics, such as user activity, age, gender, and so on. Note: Facebook Wi-Fi authentication is no longer available (grayed-out). Meta Platforms, Inc. has stopped offering the Facebook Wi-Fi service. If you have been using Facebook Wi-Fi authentication, select another authentication method to continue your WiFi service. - select Microsoft Entra ID (Azure AD) to block network traffic until a client authenticates with the NCC using Microsoft's cloud-based identity and access management service. Then click Download Metadata / Upload Metadata file that contains the configuration details. The metadata file contains all the callback URLs (where to send the successful/unsuccessful authentication responses to) as well as the certificates to use when communicating between the trusted Service Provider (SP) and Identity Provider (IdP). Note: Only one SSID can use Microsoft Entra ID authentication at a time. Since Microsoft Entra ID authentication is a Professional tier license feature, the SSID will be disabled when the organization's license has expired. Note: USG LITE 60AX only supports Nebula cloud, Entra ID authentication. The SSID will be disabled when configured with RADIUS, Facebook authentication.


Table 103 Site-wide > Configure > Security router > SSID advanced settings (continued)

LABEL	DESCRIPTION
Captive portal advance setting	
Walled garden	Select On to enable Walled garden.
Walled garden ranges	This field is not configurable if you set Sign-in method to Disable. With a walled garden, you can define one or more web site addresses that all users can access without logging in. These can be used for advertisements for example. Select to turn on or off the walled garden feature. Specify walled garden web site links, which use a (wildcard) domain name or an IP address for web sites that all users are allowed to access without logging in.
Self-registration	This field is available only when you set Sign-in method to Sign-on with Nebula Cloud authentication. Select Allow users to create accounts with auto authorized or Allow users to create accounts with manual authorized to display a link in the captive portal login page. The link directs users to a page where they can create an account before they authenticate with the NCC. For Allow users to create accounts with manual authorized, users cannot log in with the account until the account is authorized and granted access. For Allow users to create accounts with auto authorized, users can just use the registered account to log in without administrator approval. Select Don't allow users to create accounts to not display a link for account creation in the captive portal login page.
Simultaneous login limit	This field is available only when you set Sign-in method to Sign-on with My RADIUS server or Sign-on with Nebula Cloud authentication. Select Unlimited if you allow users to log in as many times as they want as long as they use different IP addresses. Select 1 to 10 if you do NOT allow users to have simultaneous logins.
Strict Policy	Select Allow HTTPS traffic without sign-on to let users use HTTPS to access a web site without authentication. Select Block all access until sign-on to block both HTTP and HTTPS traffic until users authenticate their connections. The portal page will not display automatically if users try to access a web site using HTTPS. They will see an error message in the web screen.
Reauth time	Select Follow site-wide setting or select a specific time the user can be logged in through the captive portal in one session before having to log in again.
NCAS disconnect behavior	This field is available only when: • you set Sign-in method to Sign-on with Nebula Cloud authentication • you enable MAC-based Authentication with and you select Nebula cloud authentication Select Allowed to allow any users to access the network without authentication when the NCAS (Nebula Cloud Authentication Server) is not reachable. Select Limited to allow only the currently connected users or the users in the white list to access the network.
Traffic options	
Rate-limit	Set the maximum data download and upload rates in Kbps, on a per-station basis. Click a lock icon to change the lock state. If the lock icon is locked, the limit you set applies to both download and upload traffic. If the lock is unlocked, you can set download and upload traffic to have different transmission speeds.
Advanced settings	
Band mode	Select to have the SSID use either 2.4 GHz band, 5 GHz band, or 6 GHz band only.

Table 103 Site-wide > Configure > Security router > SSID advanced settings (continued)

LABEL	DESCRIPTION
MLO	Click the switch to the right to allow a WiFi7 client to connect to the WiFi7 Nebula Device using multiple frequency bands simultaneously. This increases speed and improves reliability of the WiFi connection. MLO makes WiFi7 ideal for streaming 4K / 8K videos, using augmented reality (AR), virtual reality (VR) applications and playing online games. Note: The following are not supported when MLO is selected. • WiFi aid (see Site-wide > Clients > WiFi Aid for more details on WiFi aid) • Collaborative Detection & Response (CDR) (see Site-wide > Configure > Collaborative Detection & Response for more details on CDR) Click Model list to show the supported Nebula Devices.
Layer 2 isolation	This field is not configurable if you select NAT mode. Select to turn on or off layer-2 isolation. If a device's MAC addresses is NOT listed, it is blocked from communicating with other devices in an SSID on which layer-2 isolation is enabled. Click Add to enter the MAC address of each device that you want to allow to be accessed by other devices in the SSID on which layer-2 isolation is enabled.
Intra-BSS traffic blocking	Click this switch to the left to prevent crossover traffic from within the same SSID. Click this switch to the right to allow intra-BSS traffic.
Band select	Select to enable band steering. When enabled, the Nebula Device steers WiFi clients to the 5 GHz band.
Assisted roaming	Select to turn on or off IEEE 802.11k/v assisted roaming on the Nebula Device. When the connected clients request 802.11k neighbor lists, the Nebula Device will response with a list of neighbor Nebula Devices that can be candidates for roaming. When the 802.11v capable clients are using the 2.4 GHz band, the Nebula Device can send 802.11v messages to steer clients to the 5 GHz band.
802.11r	Select to turn on or off IEEE 802.11r fast roaming on the Nebula Device. 802.11r fast roaming reduces the delay when the clients switch from one Nebula Device to another, by allowing security keys to be stored on all Nebula Devices in a network. Information from the original association is passed to the new Nebula Device when the client roams. The client does not need to perform the whole 802.1x authentication process.
U-APSD	Select to turn on or off Automatic Power Save Delivery. This helps increase battery life for battery-powered WiFi clients connected to the Nebula Device.
SSID schedule	
Enabled	Click this switch to the right to enable and configure a schedule.
Schedule	Select a schedule to control when the SSID is enabled or disabled. You can click the edit icon to change the schedule name.
Schedule templates	Select a pre-defined schedule template or select Custom schedule and manually configure the day and time at which the SSID is enabled or disabled.
Day	This shows the day of the week.
Availability	Click this switch to the right to enable the SSID at the specified time on this day. Otherwise, click this switch to the left to disable the SSID on the day and at the specified time. Specify the hour and minute when the schedule begins and ends each day.

Table 103 Site-wide > Configure > Security router > SSID advanced settings (continued)

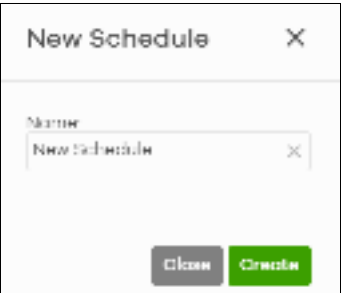LABEL	DESCRIPTION
Add	Click this button to create a new schedule. A window pops up asking you to enter a descriptive name for the schedule for identification purposes. 
Delete	Click this button to remove a schedule which is not used in any SSID profile.

7.3.9 Radio Settings

Use this screen to configure global radio settings for the Nebula Device in the site. Click Site-wide > Configure > Security router > Radio settings to access this screen.

Figure 156 Site-wide > Configure > Security router > Radio settings Part 1

Radio Settings

The SSID setting, SSID broadcast settings, and Radio settings are common and shared among Access point and Security router.

Country: Taiwan [View 6 GHz supported countries list on the Portal](#)

Deployment selection: Custom [View](#)

Maximum radio power:

2.4 GHz	20 dBm
5 GHz	20 dBm
6 GHz	30 dBm View Info

Channel width:

2.4 GHz	20 MHz
5 GHz	40 MHz Info: you should not use channel width 80MHz when in 5 GHz
6 GHz	160 MHz View Info

SSID setting

☐ SSID broadcast [View](#) ☐ SSID broadcast

☒ SSID schedule

SSID schedule

[Select all](#)

☒ Monday	☒ Tuesday
☒ Wednesday	☒ Thursday
☒ Friday	☒ Saturday
☒ Sunday	

SSID

☒ SSID client priority

☒ Broadcast SSID names in the presence of SSID

2.4 GHz channel deployment: Automatic [View](#)

Channel B [Select all](#)

☐ 1	☐ 2	☐ 3	☐ 4
☐ 5	☐ 6	☐ 7	☐ 8
☐ 9	☐ 10	☐ 11	

5 GHz channel deployment: Automatic [View](#)

Channel B [Select all](#)

☐ 36	☐ 40	☐ 44	☐ 48
☐ 52 (DFS)	☐ 56 (DFS)	☐ 60 (DFS)	☐ 64 (DFS)
☐ 68 (DFS)	☐ 72 (DFS)	☐ 76 (DFS)	☐ 80 (DFS)
☐ 84 (DFS)	☐ 88 (DFS)	☐ 92 (DFS)	☐ 96 (DFS)
☐ 100	☐ 104	☐ 108	☐ 112

6 GHz channel deployment: Manual [View](#) [Select all](#)

Figure 157 Site-wide > Configure > Security router > Radio settings Part 2

Channel ID: Select all

☐ 1 ☐ 2 ☐ 3 ☐ 4

☐ 5 ☐ 6

Allow 802.11n/11ac stations only ☒
 If turned ON, legacy clients including 802.11b/g will not be allowed to associate

Smart Hacking ☒
 Enable this function will make AP show the client to the better speed of

ADVANCED OPTIONS

2.4G setting

Discontinuous Station Threshold: -40 dBm (-20 ~ -100)

Optimization aggressiveness: Auto High Standard Low

5G setting

Discontinuous Station Threshold: -40 dBm (-20 ~ -100)

Optimization aggressiveness: Auto High Standard Low

6G setting

Discontinuous Station Threshold: -40 dBm (-20 ~ -100)

Optimization aggressiveness: Auto High Standard Low

802.11n ☒
 Enable this function will make AP advertise 802.11n capability

802.11n Rate Control Setting

2.4 GHz

Lower Density: 1 Mbps High Density 14 Mbps

5 GHz

Lower Density: 1 Mbps High Density 14 Mbps

6 GHz Auto Standard

Lower Density: 1 Mbps High Density 14 Mbps

2.4 GHz 5 GHz 6 GHz Standard Search

Access point	Radio #	Model	Radio mode	Channel	Frequency	Channel width	Smart power	Antenna	Antenna Name
☐ 0123 0123456	1	1010 1010	Auto	0123 0123	01 0100	20 MHz	Disabled		Default
☐ 0123 456789	2	1010 1010	Auto	0123 0123	01 0100	20 MHz	Disabled		Default

The following table describes the labels in this screen.

Table 104 Site-wide > Configure > Security router > Radio settings

LABEL	DESCRIPTION
Country	Select the country where the Nebula Device is located or installed. The available channels vary depending on the country you selected. Be sure to select the correct or same country for both radios on a Nebula Device and all connected Nebula Devices in order to prevent roaming failure and interference with other systems.
Deployment selection	Select High-density (More than 10 APs) for the lowest output power for 10 or more Access Points. Select Moderate-density (6-9 APs) for moderate output power for 5 to 9 Access Points. Select Low-density (2-5 APs) for higher concentration of output power for less than 5 Access Points. Select Single AP for highest concentration of output power for a single Access Point.
Maximum output power	Selecting any of the options in the Deployment selection field will automatically set the maximum output power for 2.4 / 5 / 6 GHz. But you can change the setting (1 – 30 dBm).
Channel width	Select the wireless channel bandwidth you want the Nebula Device to use. A standard 20 MHz channel offers transfer speeds of up to 144 Mbps (2.4 GHz) or 217 Mbps (5 GHz) whereas a 40 MHz channel uses two standard channels and offers speeds of up to 300 Mbps (2.4 GHz) or 450 Mbps (5 GHz). An IEEE 802.11ac-specific 80 MHz channel offers speeds of up to 1.3 Gbps. 40 MHz (channel bonding or dual channel) bonds two adjacent radio channels to increase throughput. An 80 MHz channel consists of two adjacent 40 MHz channels. The WiFi clients must also support 40 MHz or 80 MHz. It is often better to use the 20 MHz setting in a location where the environment hinders the WiFi signal. Note: It is suggested that you select 20 MHz when there is more than one 2.4 GHz Nebula Device in the network.
DCS setting	
DCS time interval	Select ON to set the DCS time interval (in minutes) to regulate how often the Nebula Device surveys the other Nebula Devices within its broadcast radius. If the channel on which it is currently broadcasting suddenly comes into use by another Nebula Device, the Nebula Device will then dynamically select the next available clean channel or a channel with lower interference.
DCS schedule	Select ON to have the Nebula Device automatically find a less-used channel within its broadcast radius at a specific time on selected days of the week. You then need to select each day of the week and specify the time of the day (in 24-hour format) to have the Nebula Device use DCS to automatically scan and find a less-used channel.
DCS client aware	Select ON to have the Nebula Device wait until all connected clients have disconnected before switching channels.
Avoid 5G DFS channel	If your Nebula Devices are operating in an area known to have RADAR devices, the Nebula Device will choose non-DFS channels to provide a stable WiFi service.
Blacklist DFS channels in the presence of radar	Select ON to blacklist a channel if RADAR is detected. After being blacklisted, the Nebula Device will not use the channel again until the Nebula Device is rebooted. However, the Nebula Device can still use other DFS channels.
2.4 GHz channel deployment	Select All available channels to allow channel-hopping to have the Nebula Device automatically select the best channel. Select Manual to select the individual channels the Nebula Device switches between.

Table 104 Site-wide > Configure > Security router > Radio settings (continued)

LABEL	DESCRIPTION
5 GHz channel deployment	Select how you want to specify the channels the Nebula Device switches between for 5 GHz operation. Select All available channels to have the Nebula Device automatically select the best channel. Select Manual to select the individual channels the Nebula Device switches between. Note: The method is automatically set to All available channels when no channel is selected or any one of the previously selected channels is not supported.
6 GHz channel deployment	Select how you want to specify the channels the Nebula Device switches between for 6 GHz operation. Select All available channels to have the Nebula Device automatically select the best channel. Select Manual to select the individual channels the Nebula Device switches between. Note: The method is automatically set to All available channels when no channel is selected or any one of the previously selected channels is not supported.
Allow 802.11ax/ac/n stations only	Select ON to have the Nebula Device allow only IEEE 802.11n/ac/ax clients to connect, and reject IEEE 802.11a/b/g clients.
Smart Steering	Select ON to enable smart client steering on the Nebula Device. Client steering helps monitor WiFi clients and drop their connections to optimize the bandwidth when the clients are idle or have a low signal. When a WiFi client is dropped they have the opportunity to steer to a Nebula Device with a strong signal. Additionally, dual band WiFi clients can also steer from one band to another. Select OFF to disable this feature on the Nebula Device.
ADVANCED OPTIONS	Click this to display a greater or lesser number of configuration fields.
2.4 GHz / 5 GHz / 6 GHz Setting	
Disassociate Station Threshold	Set a minimum kick-off signal strength. When a WiFi client's signal strength is lower than the specified threshold, the Nebula Device disconnects the WiFi client. –20 dBm is the strongest signal you can require and –105 dBm is the weakest.
Optimization aggressiveness	High, Standard and Low stand for different traffic rate threshold levels. The level you select here decides when the Nebula Device takes action to improve the Access Point's WiFi network performance. The Nebula Device will postpone the actions implemented on Access Points until your network is less busy if the threshold is exceeded. Select a suitable traffic rate threshold level for your network. High: Select this if you want the Nebula Device to postpone the action set when the Access Point network traffic is heavy. Standard: Select this if you want the Nebula Device to postpone the action set when the Access Point network traffic is medium. Low: Select this if you want the Nebula Device to postpone the action set when the Access Point network traffic is low.
802.11d	Click this to enable 802.11d on the Access Point. 802.11d is a WiFi network specification, for use in countries where 802.11 WiFi is restricted. Enabling 802.11d causes the Nebula Device to broadcast the country where it is located, which is determined by the Country setting.
WLAN Rate Control Setting	

Table 104 Site-wide > Configure > Security router > Radio settings (continued)

LABEL	DESCRIPTION
2.4 GHz / 5 GHz / 6 GHz	Sets the minimum data rate that 2.4 GHz, 5 GHz, and 6 GHz WiFi clients can connect to the Nebula Device, in Mbps. Increasing the minimum data rate can reduce network overhead and improve WiFi network performance in high density environments. However, WiFi clients that do not support the minimum data rate will not be able to connect to the Nebula Device.
Edit	Click this button to modify the channel, output power, channel width, airtime fairness (the same setting will apply to both 2.4 GHz and 5 GHz), and smart steering settings for the selected Nebula Devices. On the Nebula Device that comes with internal antennas and also has an antenna switch, you can adjust coverage depending on the orientation of the antenna for the Nebula Device radios. Select Wall if you mount the Nebula Device to a wall. Select Ceiling if the Nebula Device is mounted on a ceiling. You can switch from Wall to Ceiling if there are still WiFi dead zones, and so on. If you select Hardware Switch, you use the physical antenna switch to adjust coverage and apply the same antenna orientation settings to both radios.  Note: On this screen, you can set channel width to 160 MHz for the 5/6 GHz channel or 320 MHz for the 6 GHz channel, if the Nebula Device supports it.
DCS Now	Click this button to have the selected Nebula Devices immediately scan for and select a channel that has least interference.
List	Click this to display a list of all connected Nebula Devices.
Map	Click this to display the locations of all connected Nebula Devices on the Google map.
2.4 GHz	Click this to display the connected Nebula Devices using the 2.4 GHz frequency band.
5 GHz	Click this to display the connected Nebula Devices using the 5 GHz frequency band.
6 GHz	Click this to display the connected Nebula Devices using the 6 GHz frequency band.
BandFlex	Click this to display the connected Nebula Devices that supports BandFlex (5 GHz or 6 GHz frequency bands).
Hide transmit circles	Click this button to not show the transmission range on the Map.
Access point	This displays the descriptive name or MAC address of the connected Nebula Device.

Table 104 Site-wide > Configure > Security router > Radio settings (continued)

LABEL	DESCRIPTION
Radio #	This displays the number of the connected Nebula Device's radio.
Model	This displays the model name of the connected Nebula Device.
Radio mode	This displays the type of WiFi radio the Nebula Device is currently using, for example 802.11b/g/n.
Channel	This displays the channel ID currently being used by the connected Nebula Device's radio.
Transmit power	This displays the current transmitting power of the connected Nebula Device's radio. If the Nebula Device is offline, this shows the maximum output power you configured for the Nebula Device.
Channel width	This displays the wireless channel bandwidth the connected Nebula Device's radio is set to use.
Smart steering	This displays whether smart client steering is enabled or disabled on the connected Nebula Devices.
Antenna	This displays the antenna orientation settings for the Nebula Device that comes with internal antennas and also has an antenna switch.
Airtime fairness	This displays whether airtime fairness is enabled or disabled on the connected Nebula Device.
	Click this icon to display a greater or lesser number of configuration fields. For faster loading of data, select only the configuration fields listed that do NOT take a long time to fetch data.

7.3.10 Router Settings

Use this screen to configure DNS settings.

Click Site-wide > Configure > Security router > Router settings to access this screen.

Figure 158 Site-wide > Configure > Security router > Router settings

The screenshot shows the 'Router settings' page. The 'DNS' section has a table with columns 'FQDN', 'IP Address', and 'Description'. It contains two entries: 'q123456789.com' with IP '192.168.1.1' and 'zyxel.com.tw' with IP '192.168.1.2'. Below the table is a green '+ Add' button. The 'Dynamic DNS' section has a 'Dynamic DNS' toggle switch turned on, a description 'Dynamic DNS updates a DNS record each time the public IP address of the security appliance changes', a 'DDNS provider' dropdown set to 'DynDNS', and input fields for 'Hostname', 'Username', and 'Password'. At the bottom, there are 'General setting' options for 'LED light' and 'Smart mesh', both with 'Model: off'.

The following table describes the labels in this screen.

Table 105 Site-wide > Configure > Security router > Router settings

LABEL	DESCRIPTION
DNS	
Address Record	This record specifies the mapping of a Fully-Qualified Domain Name (FQDN) to an IP address. An FQDN consists of a host and domain name. For example, www.zyxel.com.tw is a fully qualified domain name, where "www" is the host, "zyxel" is the third-level domain, "com" is the second-level domain, and "tw" is the top level domain.
FQDN	Enter a host's fully qualified domain name. Use up to 247 characters, a-ZA-Z0-9.-. Use "." as a prefix in the FQDN for a wildcard domain name (for example, *.example.com).
IP Address	Enter the host's IP address.
Description	Enter the descriptive name of the DNS record of up to 255 printable ASCII characters.
	Click this icon to remove the entry.
Add	Click this button to create a new entry, maximum up to 20.
Dynamic DNS	
Dynamic DNS	Click On to use dynamic DNS. Otherwise, select Off to disable it.
DDNS provider	Select your Dynamic DNS service provider from the drop-down list box. If you select User customize, create your own DDNS service.
Hostname	Enter the domain name you registered.
Username	Enter the user name (email format) used when you registered your domain name. Up to 253 characters, A-Za-z0-9@.-_.

Table 105 Site-wide > Configure > Security router > Router settings (continued)

LABEL	DESCRIPTION
Password	Enter the password provided by the DDNS provider. Up to 53 characters, 0-9a-zA-Z~!@#\$%^&*()_-=+{[] \;:'<,>./
Connection type	Select Http (Hypertext Transfer Protocol) to use the standard protocol for sending data between a browser and a website. HTTP transmits data in plain text, which means that third parties can intercept and read the information. Select Https (Hypertext Transfer Protocol Secure) to use HTTP with encryption and verification. This prevents third parties from eavesdropping on communications to and from the server.
URL	Enter the URL that can be used to access the server that will host the DDNS service.
General setting	
LED lights	Click to turn on or off the LEDs on the Nebula Devices. Click Model list to see the supported Security router.
Smart mesh	Click to enable or disable the Nebula Smart Mesh feature on all Nebula Devices in the site. Click Model list to see whether your Nebula Device supports Nebula Smart Mesh. Note: Nebula Smart Mesh is a WiFi mesh solution for Nebula Devices. For details, see Section 5.1.1 on page 330. Note: You can override NCC settings and enable or disable Smart Mesh on individual Nebula Devices. For details, see Section 4.3.1.1 on page 237. Note: Disabling Nebula Device Smart Mesh automatically disables wireless bridge on all Nebula Devices in the site. For details on wireless bridge, see Section 4.3.1.1 on page 237. Note: At the time of writing, the Security Router may only act as the root AP. Note: At the time of writing, the Security Router does not support wireless bridge.

CHAPTER 8

Firewall

8.1 Overview

This chapter describes the menus used to monitor and configure the Hybrid Security Firewall devices that acts as a security gateway in the current organization.

Nebula Device (also called Security Firewall device) refers to ZyWALL ATP / USG FLEX / USG FLEX H / USG20(W)-VPN Series devices in this chapter. The Firewall menus are shown for Security Firewall devices only.

8.2 Monitor

Use the Monitor menus to check the Nebula Device information, client information, event log messages and summary report for the Nebula Device in the selected site.

8.2.1 Clients

This menu item redirects to Site-wide > Monitor > Clients, with type set to Security firewall clients. For details, see [Section 4.5 on page 277](#).


8.2.2 Event Log

Use this screen to view Nebula Device log messages. You can enter a key word, select one or multiple event types, or specify a date/time or a time range to display only the log messages that match these criteria.

Select Range to set a time range or select Before to choose a specific date/time and the number of hours/minutes to display only the log messages generated within a certain period of time (before the specified date/time). Then click Search to update the list of logs based on the search criteria. The maximum allowable time range is 30 days.

Click Site-wide > Monitor > Firewall > Event log to access this screen.

Figure 159 Site-wide > Monitor > Firewall > Event log

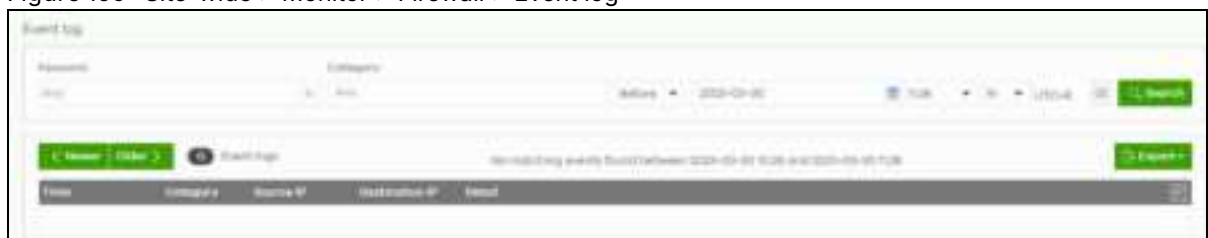

8.2.3 VPN Connections

Use this screen to view the status of site-to-site IPSec VPN connections and L2TP VPN connections.

Note: If the peer gateway is not a Nebula Device, go to the Firewall > Configure > Site-to-Site VPN screen to view and configure a VPN rule. See [Section 8.3.6 on page 542](#) for more information.

Click Site-wide > Monitor > Firewall > VPN connections to access this screen.

Figure 160 Site-wide > Monitor > Firewall > VPN connections



VPN connections

Connection status
Configuration: This security gateway is exporting 2 subnets over the VPN: 192.168.1.0/24, 192.168.2.0/24

Nebula SD-VPN

Location	VPN IP	Subnet	Status	Inbound	Outbound	Tunnel Up Time	Last Heartbeat

Auto-Link VPN

Location	VPN IP	Subnet	Status	Inbound	Outbound	Tunnel Up Time	Last Heartbeat

Remote AP VPN

Name	Status	Inbound	Outbound	Tunnel Up Time	Last Heartbeat

Client to site VPN login account:

User Name	Host Name	Assigned IP	Public IP

Figure 161 Site-wide > Monitor > Firewall > VPN connections (FLEX H Series only)



VPN connections

Connection status
Configuration: This security gateway is exporting 1 subnet over the VPN: 192.168.1.0/24

Nebula SD-VPN

Location	VPN IP	Subnet	Status	Inbound	Outbound	Tunnel Up Time	Last Heartbeat

Auto-Link VPN

Location	VPN IP	Subnet	Status	Inbound	Outbound	Tunnel Up Time	Last Heartbeat

Manual-link VPN

Name	Remote gateway	Policy route	Status	Inbound	Outbound	Tunnel Up Time	Last Heartbeat
Go HQ	192.168.100.41	0.0.0.0 - 0.0.0.0	disconnected	0 bytes	0 bytes	-	-

The following table describes the labels in this screen.

Table 106 Site-wide > Monitor > Firewall > VPN connections

LABEL	DESCRIPTION
	Click this button to reload the data on this page.
Connection status	
Configuration	This shows the number and address of the local networks behind the Nebula Device, on which the computers are allowed to use the VPN tunnel.
Nebula SD-VPN	
Location	This shows the name of the site to which the Nebula peer gateway is assigned. Click the name to view the VPN usage and connectivity status screen.
VTI IP	This shows the IP address for this connection. IPSec VPN Tunnel Interface (VTI) encrypts or decrypts IPv4 traffic from or to the interface according to the IP routing table.
Subnet	This shows the address of the local networks behind the Nebula peer gateway.
Status	This shows whether the VPN tunnel is connected or disconnected.
Inbound	This shows the amount of traffic that has gone through the VPN tunnel from the Non-Nebula peer gateway to the Nebula Device since the VPN tunnel was established.
Outbound	This shows the amount of traffic that has gone through the VPN tunnel from the Nebula Device to the Non-Nebula peer gateway since the VPN tunnel was established.
Tunnel up time	This shows how many seconds the VPN tunnel has been active.
Last heartbeat	This shows the last date and time a heartbeat packet is sent to determine if the VPN tunnel is up or down.
Auto-Link VPN	
Location	This shows the name of the site to which the Non-Nebula peer gateway (Zyxel or non-Zyxel IPSec VPN gateway and Cloud VPN (Azure VPN or AWS VPN)) is assigned. Click the name to go to the Site-wide > Configure > Firewall > Site-to-Site VPN screen, where you can modify the VPN settings.
VTI IP	This shows the IP address for this connection. IPSec VPN Tunnel Interface (VTI) encrypts or decrypts IPv4 traffic from or to the interface according to the IP routing table.
Subnet	This shows the address of the local networks behind the Non-Nebula peer gateway.
Status	This shows whether the VPN tunnel is connected or disconnected.
Inbound	This shows the amount of traffic that has gone through the VPN tunnel from the Non-Nebula peer gateway to the Nebula Device since the VPN tunnel was established.
Outbound	This shows the amount of traffic that has gone through the VPN tunnel from the Nebula Device to the Non-Nebula peer gateway since the VPN tunnel was established.
Tunnel up time	This shows how many seconds the VPN tunnel has been active.
Last heartbeat	This shows the last date and time a heartbeat packet was sent to determine if the VPN tunnel is up or down.
Remote AP VPN (not available for FLEX H Series)	
Name	This shows the name of the remote access point (AP).
Status	This shows whether the VPN tunnel is connected or disconnected.
Inbound	This shows the amount of traffic that has gone through the VPN tunnel from the remote AP to the Nebula Device since the VPN tunnel was established.
Outbound	This shows the amount of traffic that has gone through the VPN tunnel from the Nebula Device to the remote AP since the VPN tunnel was established.
Tunnel up time	This shows how many seconds the VPN tunnel has been active.
Last heartbeat	This shows the last date and time a heartbeat packet is sent to determine if the VPN tunnel is up or down.

Table 106 Site-wide > Monitor > Firewall > VPN connections (continued)


LABEL	DESCRIPTION
Client to site VPN login account (not available for FLEX H Series)	
User Name	This shows the remote user's login account name.
Hostname	This shows the name of the computer that has this L2TP VPN connection with the Nebula Device.
Assigned IP	This shows the IP address that the Nebula Device assigned for the remote user's computer to use within the L2TP VPN tunnel.
Public IP	This shows the public IP address that the remote user is using to connect to the Internet.
Manual-link VPN (FLEX H Series only)	
Name	This shows the name of the VPN tunnel.
Remote gateway	This shows the IP address of the remote gateway.
Policy route	This field displays the content of the local and remote policies for this IPsec SA. The IP addresses, not the address objects, are displayed.
Status	This shows whether the VPN tunnel is connected or disconnected.
Inbound	This shows the amount of traffic that has gone through the VPN tunnel from the remote AP to the Nebula Device since the VPN tunnel was established.
Outbound	This shows the amount of traffic that has gone through the VPN tunnel from the Nebula Device to the remote AP since the VPN tunnel was established.
Tunnel up time	This shows how many seconds the VPN tunnel has been active.
Last heartbeat	This shows the last date and time a heartbeat packet is sent to determine if the VPN tunnel is up or down.

8.2.4 SecuReporter

Click Site-wide > Monitor > Firewall > SecuReporter to open SecuReporter for the current organization and site. SecuReporter allows you to view statistics for the following Nebula Security Services (NSS): Content filter, Intrusion Detection and Prevention (IDP), application patrol, anti-virus, anti-malware, URL threat filter.

Note: For more details, see the SecuReporter User's Guide.

Figure 162 Site-wide > Monitor > Firewall > SecuReporter

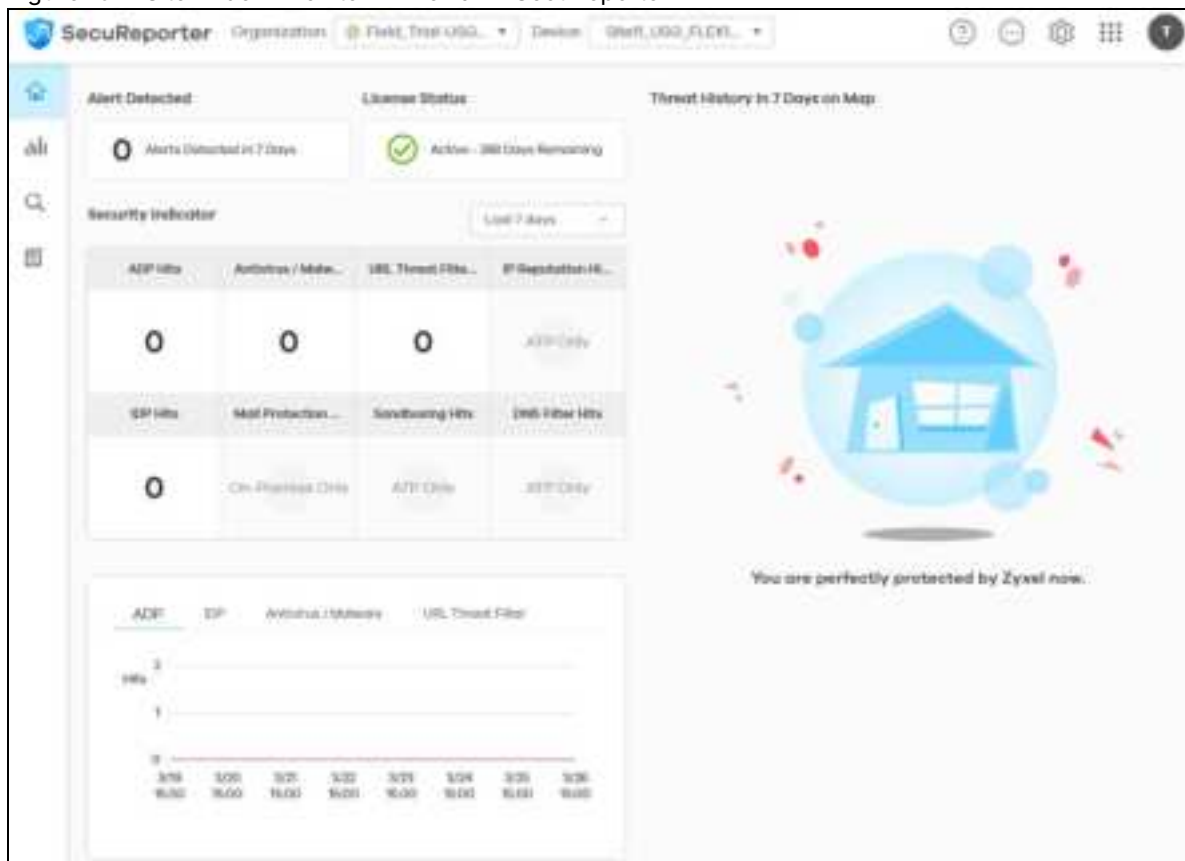



8.2.5 Summary Report

This screen displays network statistics for the Nebula Device of the selected site, such as WAN usage, top applications and/or top clients.

Click Site-wide > Monitor > Firewall > Summary report to access this screen.

Figure 163 Site wide > Monitor > Firewall > Summary report

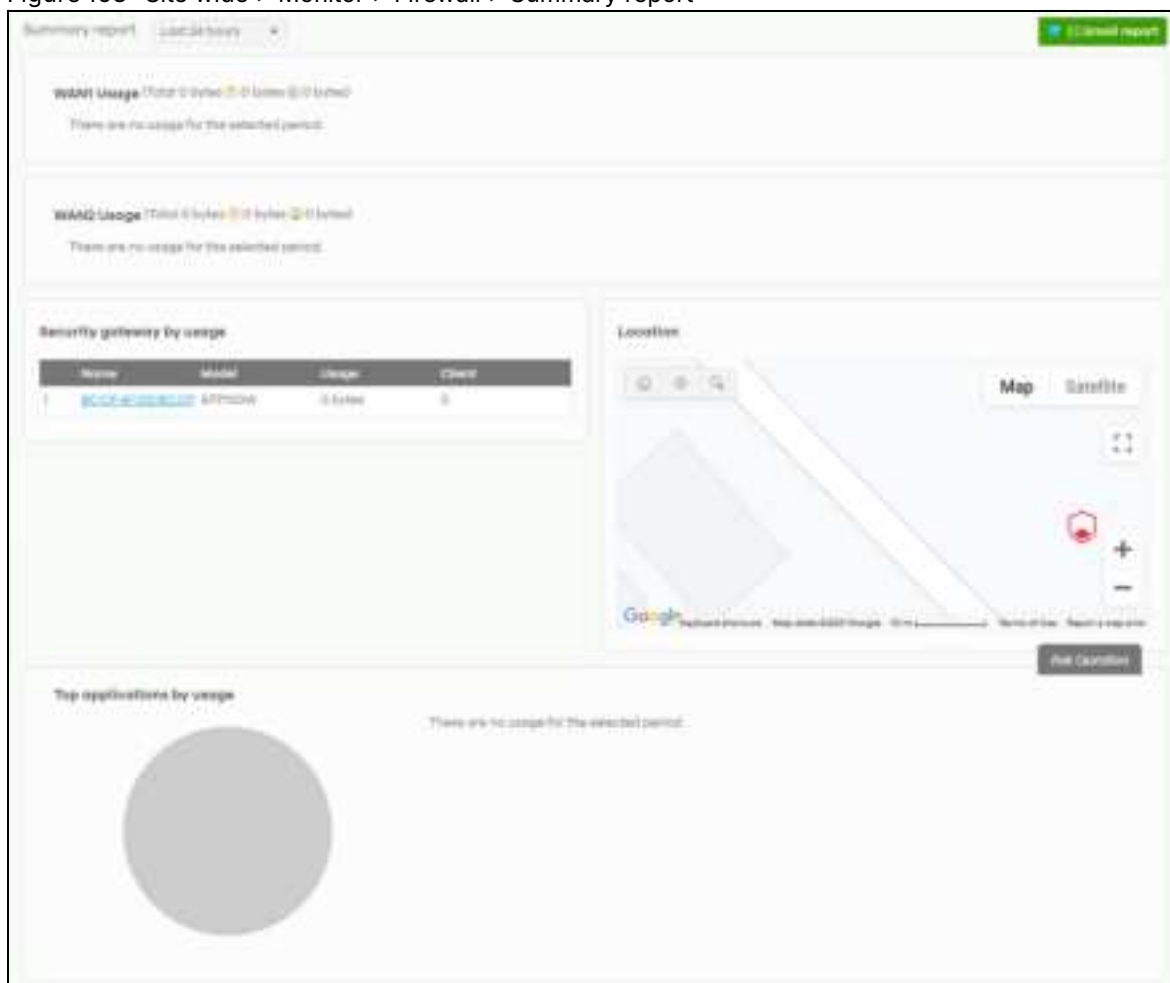

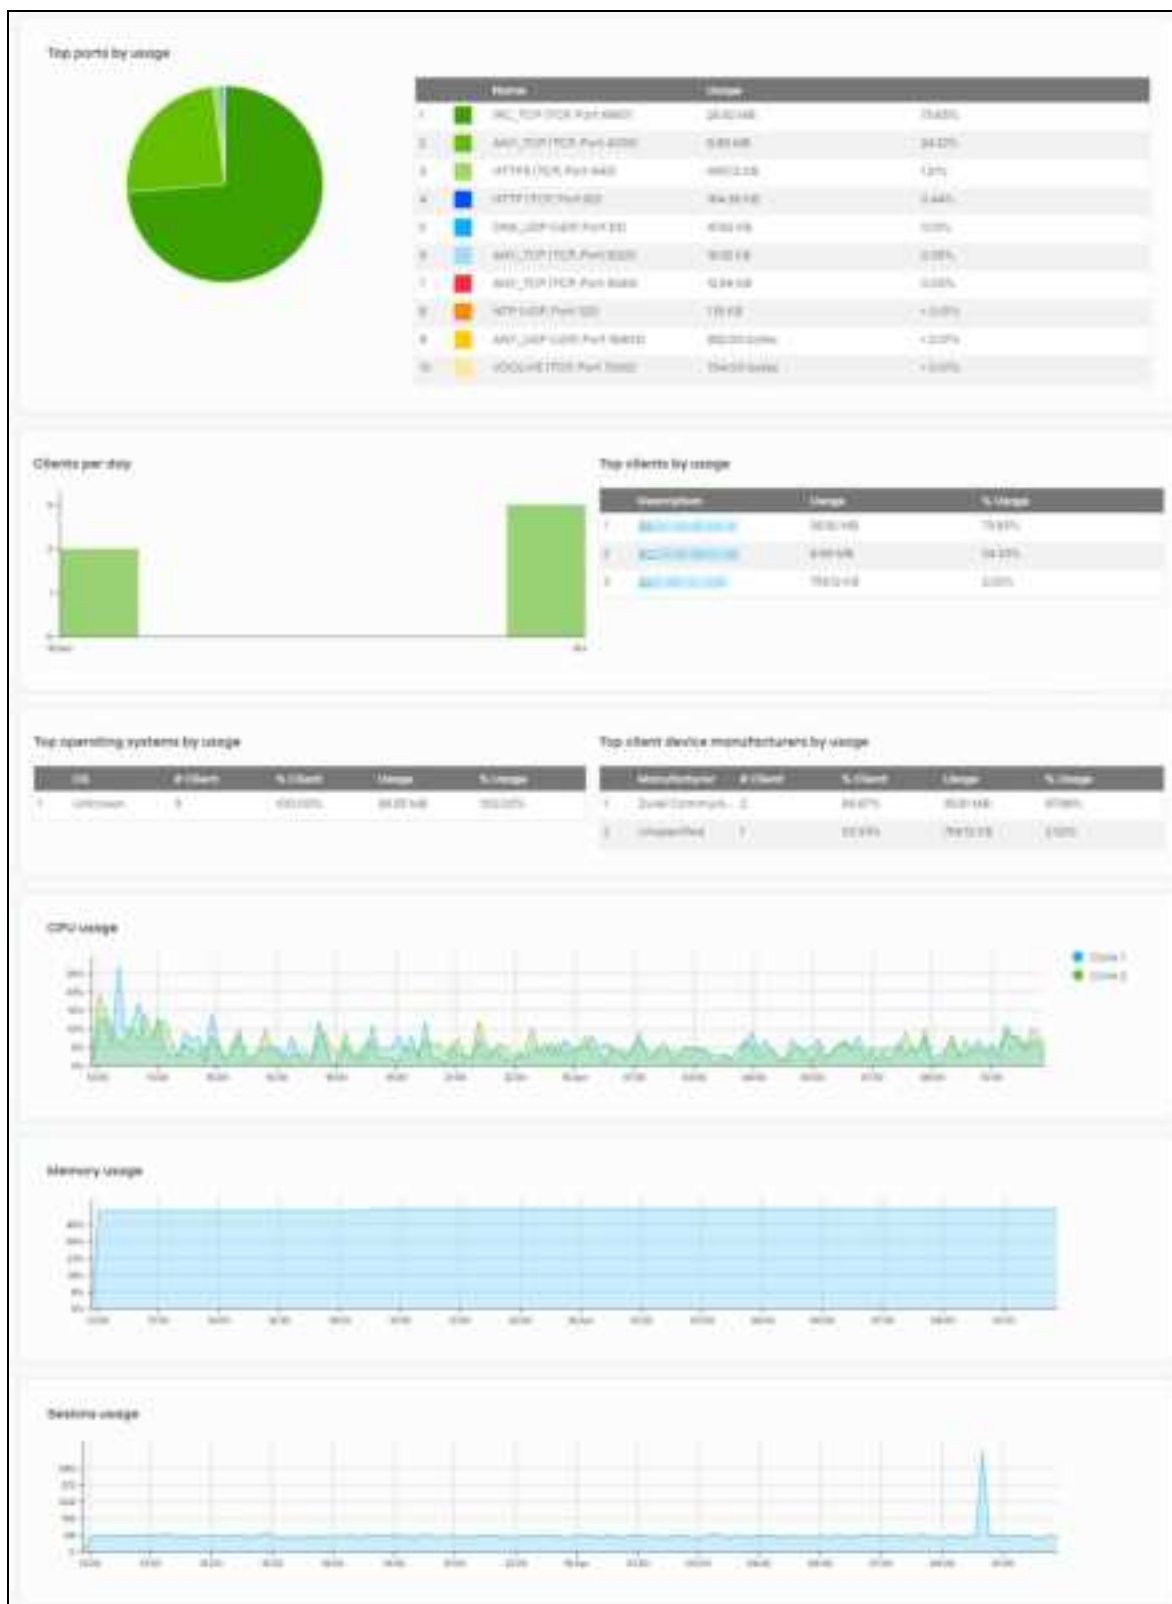

The following table describes the labels in this screen.

Table 107 Site-wide > Monitor > Firewall > Summary report

LABEL	DESCRIPTION
Security gateway – Summary report	Select to view the report for the past day, week or month. Alternatively, select Custom range... to specify a time period the report will span. You can also select the number of results you want to view in a table. 
Email report	Click this button to send summary reports by email, change the logo and set email schedules.
WAN usage	
y-axis	The y-axis shows the transmission speed of data sent or received through the WAN connection in kilobits per second (Kbps).
x-axis	The x-axis shows the time period over which the traffic flow occurred.
VPN usage	
y-axis	The y-axis shows the transmission speed of data sent or received through the VPN tunnel in kilobits per second (Kbps).
x-axis	The x-axis shows the time period over which the traffic flow occurred.
Nebula VPN usage	
y-axis	The y-axis shows the transmission speed of data sent or received through the VPN tunnels, in kilobits per second (Kbps).
x-axis	The x-axis shows the time period over which the traffic flow occurred.
Non-Nebula VPN usage	
y-axis	The y-axis shows the transmission speed of data sent or received through VPN tunnels, in kilobits per second (Kbps).
x-axis	The x-axis shows the time period over which the traffic flow occurred.
Remote AP VPN usage	
y-axis	The y-axis shows the transmission speed of data sent or received through the VPN tunnel between the Nebula Device and remote APs, in kilobits per second (Kbps).
x-axis	The x-axis shows the time period over which the traffic flow occurred.
Security gateway by usage	
	This shows the index number of the Nebula Device.
Name	This shows the descriptive name of the Nebula Device.
Model	This shows the model number of the Nebula Device.
Usage	This shows the amount of data that has been transmitted through the Nebula Device's WAN port.
Client	This shows the number of clients currently connected to the Nebula Device.
Location	
This shows the location of the Nebula Devices on the map.	
Top applications by usage	
	This shows the index number of the application.
Application	This shows the application name.

Table 107 Site-wide > Monitor > Firewall > Summary report (continued)

LABEL	DESCRIPTION
Category	This shows the name of the category to which the application belongs.
Usage	This shows the amount of data consumed by the application.
% Usage	This shows the percentage of usage for the application.
Top ports by usage	
	This shows the top ten applications/services and the ports that identify a service.
Name	This shows the service name and the associated port numbers.
Usage	This shows the amount of data consumed by the service.
% Usage	This shows the percentage of usage for the service.
Clients per day	
y-axis	The y-axis represents the number of clients.
x-axis	The x-axis represents the date.
Top clients by usage	
	This shows the index number of the client.
Description	This shows the descriptive name or MAC address of the client.
Usage	This shows the total amount of data transmitted and received by the client.
% Usage	This shows the percentage of usage for the client.
Top operating systems by usage	
	This shows the index number of the operating system.
OS	This shows the operating system of the client device.
# Client	This shows how many client devices use this operating system.
% Client	This shows the percentage of top client devices which use this operating system.
% Usage	This shows the percentage of usage for top client devices which use this operating system.
Top client device manufacturers by usage	
	This shows the index number of the client device.
Manufacturer	This shows the manufacturer name of the client device.
Client	This shows how many client devices are made by the manufacturer.
% Client	This shows the percentage of top client devices which are made by the manufacturer.
Usage	This shows the total amount of data transmitted and received by the client device.
% Usage	This shows the percentage of usage for the client device.
CPU usage	
y-axis	The y-axis shows what percentage of the Nebula Device's processing capability is currently being used.
x-axis	The x-axis shows the time period over which the traffic flow occurred.
Memory usage	
y-axis	The y-axis shows what percentage of the Nebula Device's RAM is currently being used.
x-axis	The x-axis shows the time period over which the traffic flow occurred.
Sessions usage	
y-axis	The y-axis shows how many sessions, both established and non-established, that were create from, to, or within the Nebula Device, or passed through the Nebula Device.
x-axis	The x-axis shows the time period over which the traffic flow occurred.

8.3 Configure

Use the Configure menus to configure interface addressing, firewall, site-to-site VPN, captive portal, traffic shaping, authentication server and other gateway settings for the Nebula Device of the selected site.

Note: Only one Security Appliance is allowed per site.

Note: If no Security Appliance is in a site, and you click Site-wide > Configure > Firewall. NCC will allow you to select the Security Firewall model to add, or enter its serial number or MAC address.

The following screen will appear.

Figure 164 Site-wide > Configure > Firewall (no Security Appliance in the site)

The following table describes the labels in this screen.

Table 108 Site-wide > Configure > Firewall (no Security Appliance in the site)

LABEL	DESCRIPTION
Select model	Select the model of the Security Firewall device for this site.
Add SN/MAC directly	Add a Security Firewall to the site, by entering its serial number or MAC address.
Cancel	Click Cancel to exit this screen without saving.
OK	Click OK to save your changes.

8.3.1 Port

Use this screen to configure port groups on the Nebula Device. To access this screen, click Firewall > Configure > Port.

Figure 165 Site-wide > Configure > Firewall > Port

The following table describes the labels in this screen.

Table 109 Site-wide > Configure > Firewall > Port

LABEL	DESCRIPTION
Port Group	Port groups create a hardware connection between physical ports at the layer-2 (data link, MAC address) level. The physical LAN Ethernet ports, for example P1, P2, P3, are shown at the top of the screen. The port groups are shown at the left of the screen. Use the radio buttons to select which ports are in each port group. For example, to add port P3 to LAN Group 1, select P3's radio button in the LAN Group 1 row. Note: See Table 1 on page 14 for the list of Nebula Device that do NOT have a P1 port.
Port Type	This shows whether the port is a WAN port or a LAN port. Optional means the port can be assigned as either WAN or LAN, by adding it to a WAN or LAN group.
WAN Port Group	
WAN Group 1	This shows the name of the WAN port group. Note: Each WAN port group can only contain one port.
	Click this icon to remove a WAN port group.
Add	Click this button to create a new WAN port group.
LAN Port Group	
LAN Group 1	This shows the name of the LAN port group.
	Click this icon to remove a LAN port group.
Add	Click this button to create a new LAN port group.
Close	Click Close to exit this screen without saving.
OK	Click OK to save your changes.

8.3.2 Interface

Use this screen to configure network interfaces on the Nebula Device. An interface consists of a port group, a VLAN ID, and an IP address, plus other configuration settings.

To access this screen, click Site-wide > Configure > Firewall > Interface.

Figure 166 Site-wide > Configure > Firewall > Interface



The following table describes the labels in this screen.

Table 110 Site-wide > Configure > Firewall > Interface

LABEL	DESCRIPTION
WAN Interface	
Name	This field is read-only if you are editing an existing WAN interface. Specify a name for the interface. The format of interface names is strict. Each name consists of 2 – 4 letters (interface type), followed by a number (x). For most interfaces, x is limited by the maximum number of the type of interface. For VLAN interfaces, x is defined by the number you enter in the VLAN name field. For example, VLAN interfaces are vlan0, vlan1, vlan2, and so on.
Status	Select this to activate the selected WAN interface.
IP address	This shows the IP address for this interface.
Subnet mask	This shows the subnet mask of this interface in dot decimal notation. The subnet mask indicates what part of the IP address is the same for all computers in the network.
VLAN ID	This shows the VLAN ID. This 12-bit number uniquely identifies each VLAN. Allowed values are 1 – 4094. (0 and 4095 are reserved.) Note: NCC will show an error message when the VLAN ID in the interface is configured to be the same as the WAN port's VLAN ID.
Port group	Select the name of the port group to which you want the interface (network) to belong.
	Click the edit icon to modify the interface.
	Click the remove icon to delete the interface.
Add	Click this button to create a virtual WAN interface, which associates a VLAN with a WAN port group.
LAN Interface	

Table 110 Site-wide > Configure > Firewall > Interface (continued)

LABEL	DESCRIPTION
Name	This field is read-only if you are editing an existing LAN interface. Specify a name for the interface. The format of interface names is strict. Each name consists of 2 – 4 letters (interface type), followed by a number (x). For most interfaces, x is limited by the maximum number of the type of interface. For VLAN interfaces, x is defined by the number you enter in the VLAN name field. For example, VLAN interfaces are vlan0, vlan1, vlan2, and so on.
Status	Select this to activate the LAN interface.
IP address	This is the IP address for this interface.
Subnet mask	This is the subnet mask of this interface in dot decimal notation. The subnet mask indicates what part of the IP address is the same for all computers in the network.
VLAN ID	This is the VLAN ID. This 12-bit number uniquely identifies each VLAN. Allowed values are 1 – 4094. (0 and 4095 are reserved.) Note: NCC will show an error message when the VLAN ID in the Security Firewall interface is configured to be the same as the WAN port's VLAN ID.
Port group	Select the name of the port group to which you want the interface (network) to belong.
Guest	Click the switch to the right to configure this interface as a Guest interface. Client devices connected to this Guest interface have Internet access but cannot access a non-guest interface. Alternatively, click the switch to the left to disable Internet access for client devices connected to this Guest interface.
	Click the edit icon to modify it.
	Click the remove icon to delete it.
Add	Click this button to create a virtual LAN interface, which associates a VLAN with a LAN port group.

8.3.2.1 WAN Interface Configuration

Click the Add button or click the Edit button in the WAN Interface section to open the Site-wide > Configure > Firewall > Interface > WAN interface configuration screen.

Figure 167 Site-wide > Configure > Firewall > Interface > WAN interface configuration

WAN interface configuration

Enabled ☒

Interface properties

Interface name:

Port group:

SNAT: ☒

VLAN ID:

Type:

Downstream bandwidth:

Upstream bandwidth:

MTU:

ADVANCED OPTIONS

Connectivity check: ☒ None ☐ Default gateway ☐ Check the two addresses below

The following table describes the labels in this screen.

Table 111 Site-wide > Configure > Firewall > Interface > WAN interface configuration

LABEL	DESCRIPTION
Enable	Select this to enable the WAN interface.
Interface properties	
Interface name	Specify a name for the WAN interface.
Port group	Select the name of the port group to which you want the interface (network) to belong.
SNAT	Select this to enable SNAT. When enabled, the Nebula Device rewrites the source address of packets being sent from this interface to the interface's IP address.
VLAN ID	Enter the VLAN ID. This 12-bit number uniquely identifies each VLAN. Allowed values are 1 – 4094. (0 and 4095 are reserved.)

Table 111 Site-wide > Configure > Firewall > Interface > WAN interface configuration (continued)

LABEL	DESCRIPTION
Type	Select the type of interface to create. DHCP: The interface will automatically get an IP address and other network settings from a DHCP server. Static: You must manually configure an IP address and other network settings for the interface. PPPoE: The interface will authenticate with an Internet Service Provider, and then automatically get an IP address from the ISP's DHCP server. You can use this type of interface to connect to a DSL modem. PPPoE with static IP: Assign a static IP address to the WAN interface and your WAN interface is getting an Internet connection from a PPPoE server.
IP address assignment	These fields are displayed if you select Static.
IP address	Enter the static IP address of this interface. Note: To prevent an IP address conflict, NCC will prevent input of an IP address already used by another Nebula Device in the same site.
Subnet mask	Enter the subnet mask for this interface's IP address.
Default gateway	Enter the IP address of the Nebula Device through which this interface sends traffic.
First DNS server	Enter a DNS server's IP address. The Domain Name System (DNS) maps a domain name to an IP address and vice versa. The Nebula Device uses the first and second DNS servers, in that order to resolve domain names for VPN, DDNS and the time server. Leave the field blank if you do not want to configure DNS servers.
Second DNS server	Enter the IP address of another DNS server. This field is optional.
These fields are displayed if you selected PPPoE or PPPoE with static IP.	
Authentication Type	Select an authentication protocol for outgoing connection requests. Options are: - Chap/PAP – The Nebula Device accepts either CHAP or PAP when requested by the remote node. - Chap – The Nebula Device accepts CHAP only. - PAP – The Nebula Device accepts PAP only. - MSCHAP – The Nebula Device accepts MSCHAP only. - MSCHAP-V2 – The Nebula Device accepts MSCHAP-V2 only.
Username	Enter the user name provided by your ISP. You can use up to 31 alphanumeric characters and the underscore. Spaces are not allowed.
Password	Enter the password provided by your ISP. You can use up to 64 alphanumeric characters and the underscore. Spaces are not allowed.
Retype password	Enter the password again to confirm it.
Downstream bandwidth	Enter the downstream bandwidth of the WAN connection. This value is used for WAN load balancing by algorithms such as weighed round robin.
Upstream bandwidth	Enter the upstream bandwidth of the WAN connection. This value is used for WAN load balancing by algorithms such as weighed round robin.
MTU	Maximum Transmission Unit. Enter the maximum size of each data packet, in bytes, that can move through this interface. If a larger packet arrives, the Nebula Device divides it into smaller fragments. Allowed values are 576 – 1500.
ADVANCED OPTIONS	

Table 111 Site-wide > Configure > Firewall > Interface > WAN interface configuration (continued)

LABEL	DESCRIPTION
Connectivity check	The interface can periodically check whether it can connect to its default gateway (Default gateway), or to two user-specified servers (Check the two addresses below). If the check fails, the interface's status changes to Down. You specify how often the interface checks the connection, how long to wait for a response before the attempt is a failure, and how many consecutive failures are required before the Nebula Device stops routing to the gateway.
Probe Succeeds When	This field applies when you select Check the two addresses and specify two domain names or IP addresses for the connectivity check. Select any one if you want the check to pass if at least one of the domain names or IP addresses responds. Select all if you want the check to pass only if both domain names or IP addresses respond.
Proxy ARP	Proxy ARP (RFC 1027) allows the Nebula Device to answer external interface ARP requests on behalf of a device on its internal interface. Click Add new to add the IP address or IP range of devices that the interface will answer proxy ARP requests for.
IP Address	Enter a single IPv4 address, an IPv4 CIDR (for example, 192.168.1.1/24) or an IPv4 Range (for example, 192.168.1.2–192.168.1.100). The Nebula Device answers external ARP requests if they match one of these target IP addresses. For example, if the IPv4 address is 192.168.1.5, then the Nebula Device will answer ARP requests coming from the WAN only if it contains 192.168.1.5 as the target IP address.
	Click the remove icon to delete the proxy ARP IP address.
MAC address Setting	Have the interface use either the factory-assigned default MAC address, or a manually specified MAC address.
DHCP client mode	Choices are Auto, Unicast and Broadcast.
DHCP option 60	DHCP Option 60 is used by the Security Firewall for identification to the DHCP server using the VCI (Vendor Class Identifier) on the DHCP server. The Nebula Device adds it in the initial DHCP discovery message that a DHCP client broadcasts in search of an IP address. The DHCP server can assign different IP addresses or options to clients with the specific VCI or reject the request from clients without the specific VCI. Enter a string using up to 63 of these characters [a–z A–Z 0–9 !"#%&'()*+,-./:;<=>?@\[\]\^_`{}] to identify this Nebula Device to the DHCP server. For example, Zyxel-TW.
IGMP proxy	Select this to allow the Nebula Device to act as an IGMP proxy for hosts connected on the IGMP downstream interface.
IGMP Upstream	Enable IGMP Upstream on the interface which connects to a router running IGMP that is closer to the multicast server.
IGMP Downstream	Enable IGMP Downstream on the interface which connects to the multicast hosts.
Close	Click Close to exit this screen without saving.
OK	Click OK to save your changes.

8.3.2.2 LAN Interface Configuration

Click the Add button or click the Edit button in the LAN interface section to open the Site-wide > Configure > Firewall > Interface > LAN interface configuration screen.

Figure 168 Site-wide > Configure > Firewall > Interface > LAN interface configuration

The following table describes the labels in this screen.

Table 112 Site-wide > Configure > Firewall > Interface > LAN interface configuration

LABEL	DESCRIPTION
Enable	Select this to enable the LAN interface.
Interface properties	
Interface name	Specify a name for the LAN interface.
Port group	Select the name of the port group to which you want the interface (network) to belong.
VLAN ID	Enter the VLAN ID. This 12-bit number uniquely identifies each VLAN. Allowed values are 1 – 4094. (0 and 4095 are reserved.)
IP address assignment	
IP address	Enter the IP address for this interface. Note: To prevent an IP address conflict, NCC will prevent input of an IP address already used by another Nebula Device in the same site.
Subnet mask	Enter the subnet mask of this interface in dot decimal notation. The subnet mask indicates what part of the IP address is the same for all computers in the network.

Table 112 Site-wide > Configure > Firewall > Interface > LAN interface configuration (continued)

LABEL	DESCRIPTION
DHCP setting	Select what type of DHCP service the Nebula Device provides to the network. Choices are: None – the Nebula Device does not provide any DHCP services. There is already a DHCP server on the network. DHCP Relay – the Nebula Device routes DHCP requests to one or more DHCP servers you specify. The DHCP servers may be on another network. DHCP Server – the Nebula Device assigns IP addresses and provides subnet mask, gateway, and DNS server information to the network. The Nebula Device is the DHCP server for the network.
These fields appear if the Nebula Device is a DHCP Relay.	
DHCP server 1	Enter the IP address of a DHCP server for the network.
DHCP server 2	This field is optional. Enter the IP address of another DHCP server for the network.
These fields appear if the Nebula Device is a DHCP Server.	
IP pool start address	Enter the IP address from which the Nebula Device begins allocating IP addresses. If you want to assign a static IP address to a specific computer, use the Static DHCP Table. If this field is blank, the Pool Size must also be blank. In this case, the Nebula Device can assign every IP address allowed by the interface's IP address and subnet mask, except for the first address (network address), last address (broadcast address) and the interface's IP address.
First DNS Server, Second DNS Server, Third DNS Server	Specify the IP addresses of up to three DNS servers for the DHCP clients to use. Use one of the following ways to specify these IP addresses. Custom Defined – enter a static IP address. From ISP – select the DNS server that another interface received from its DHCP server. This Gateway – the DHCP clients use the IP address of this interface and the Nebula Device works as a DNS relay.
Lease Time	Specify how long each computer can use the information (especially the IP address) before it has to request the information again. Choices are: infinite – select this if IP addresses never expire. days, hours, and minutes (Optional) – select this to enter how long IP addresses are valid.
Static DHCP table	Configure a list of static IP addresses the Nebula Device assigns to computers connected to the interface. Otherwise, the Nebula Device assigns an IP address dynamically using the interface's IP Pool Start Address and Pool Size.
IP address	Enter the IP address to assign to a device with this entry's MAC address. Note: To prevent an IP address conflict, NCC will prevent input of an IP address already used by another Nebula Device in the same site.
MAC	Enter the MAC address to which to assign this entry's IP address.
Description	Enter a description to help identify this static DHCP entry. You can use alphanumeric and ()+/:=?!*#@\$_%- characters, and it can be up to 60 characters long.
	Select an entry in this table and click this to delete it. This will also remove the client information on the Site-wide > Clients > Client list screen.
Add New	Click this to create an entry in the Static DHCP table. This will also add the client reserve IP policy on the Site-wide > Clients > Client list.

Table 112 Site-wide > Configure > Firewall > Interface > LAN interface configuration (continued)

LABEL	DESCRIPTION
MTU	Maximum Transmission Unit. Enter the maximum size of each data packet, in bytes, that can move through this interface. If a larger packet arrives, the Nebula Device divides it into smaller fragments. Allowed values are 576 – 1500. Usually, this value is 1500.
ADVANCED OPTIONS	
DHCP extended options	This table is available if you select ADVANCED OPTIONS. Configure this table if you want to send more information to DHCP clients through DHCP packets. Click Add new to create an entry in this table. See Section 7.3.2.3 on page 189 for detailed information.
First WINS server Second WINS server	Enter the IP address of the WINS (Windows Internet Naming Service) server that you want to send to the DHCP clients. The WINS server keeps a mapping table of the computer names on your network and the IP addresses that they are currently using.
PXE server	PXE (Preboot eXecution Environment) allows a client computer to use the network to boot up and install an operating system through a PXE-capable Network Interface Card (NIC). PXE is available for computers on internal interfaces to allow them to boot up using boot software on a PXE server. The Nebula Device acts as an intermediary between the PXE server and the computers that need boot software. The PXE server must have a public IPv4 address. You must enable DHCP server on the Nebula Device so that it can receive information from the PXE server.
PXE Boot loader file	A boot loader is a computer program that loads the operating system for the computer. Enter the exact file name of the boot loader software file, including filename extension, that is on the PXE server. If the wrong filename is entered, then the client computers cannot boot.
Default gateway	If you set this interface to DHCP server, you can select to use either the interface's IP address or another IP address as the default router. This default router will become the DHCP clients' default gateway.
IGMP proxy	Select this to allow the Nebula Device to act as an IGMP proxy for hosts connected on the IGMP downstream interface.
IGMP Upstream	Enable IGMP Upstream on the interface which connects to a router running IGMP that is closer to the multicast server.
IGMP Downstream	Enable IGMP Downstream on the interface which connects to the multicast hosts.
Close	Click Close to exit this screen without saving.
OK	Click OK to save your changes.

8.3.2.3 DHCP Option

Click the Add new button in the DHCP extended options section to open the Site-wide > Configure > Firewall > Interface > LAN interface configuration: DHCP option screen.

Figure 169 Site-wide > Configure > Firewall > Interface: LAN interface configuration: DHCP option

The following table describes the labels in this screen.

Table 113 Site-wide > Configure > Firewall > Interface: LAN interface configuration: DHCP option

LABEL	DESCRIPTION
Option	Select which DHCP option that you want to add in the DHCP packets sent through the interface.
Name	This field displays the name of the selected DHCP option. If you selected User defined in the Option field, enter a descriptive name to identify the DHCP option.
Code	This field displays the code number of the selected DHCP option. If you selected User defined in the Option field, enter a number for the option. This field is mandatory.
Type	This is the type of the selected DHCP option. If you selected User defined in the Option field, select an appropriate type for the value that you will enter in the next field. Misconfiguration could result in interface lockout.
Value	Enter the value for the selected DHCP option. For example, if you selected TFTP Server Name (66) and the type is TEXT, enter the DNS domain name of a TFTP server here. This field is mandatory.
First/Second/Third IP address	If you selected User defined / Time/NTP/SIP/TFTP server / CAPWAP AC in the Option field, enter up to three IP addresses.
Close	Click Close to exit this screen without saving.
OK	Click OK to save your changes.

8.3.3 Port and Interface

Use this screen to configure port groups and network interfaces on the Nebula Device. An interface consists of a port group, a VLAN ID, and an IP address, plus other configuration settings. To access this screen, click Firewall > Configure > Port and Interface.

Note: The Port and Interface feature is for Security Firewall FLEX H Series only.

Figure 170 Site-wide > Configure > Firewall > Port and Interface

Port & Interface Home

Port

1 2 3 4 5 6 7 8

Orange GigabitEthernet Green VLAN Blue 2.5Gbps Grey Downstream Light Blue PoE

Interface

External

Name	Status	IP address	Subnet mask	VLAN ID	Members	Zone	Description
ge0		192.168.100.25	255.255.254.0		ge0	WAN	
ge0					ge0	WAN	

+ Add

Internal

Name	Status	IP address	Subnet mask	VLAN ID	Members	Zone	Description
VLAN0		192.168.100.1	255.255.255.0	10	lag	None	
ge0					ge0	LAN	
ge0		192.168.100.1	255.255.255.0		ge0, ge1	LAN	
ge1		192.168.100.1	255.255.255.0		ge0, ge1	LAN	

+ Add

ADVANCED OPTIONS

General

Name	Status	IP address	Subnet mask	VLAN ID	Members	Zone	Description

+ Add

VTI

Name	Status	IP address	Subnet mask	VPN rule	Zone	Description	
vti_custom_400		192.254.12.100	255.255.255.255		IPsec_VPN	IPsec_VPN	
vti_custom_200		192.254.12.101	255.255.255.255		IPsec_VPN	VPN	

The following table describes the labels in this screen.

Table 114 Site-wide > Configure > Firewall > Port and Interface

LABEL	DESCRIPTION
Port	Move the pointer over a port to view the Nebula Device's port details, such as Name, Status and Speed. If the port is supplying power to a node using Power over Ethernet (PoE), you can click Power reset to perform a power cycle on the port. This action temporarily disables PoE and then re-enables it, in order to reboot connected PoE devices.
Interface	
External	
Name	This field displays the name of the interface.
Status	Click the switch to the right to enable this interface.
IP address	This field displays the IP address for this interface. If this field is empty, the interface does not have an IP address yet or is configured as 'Unassigned'.
Subnet mask	This field displays the subnet mask of this interface in dot decimal notation. The subnet mask indicates what part of the IP address is the same for all computers in the network.
VLAN ID	This field displays the VLAN ID which is a 12-bit number that uniquely identifies each VLAN.
Members	This field displays the port(s) the interface is using.
Zone	This field displays the zone to which this interface belongs. An interface can only be in one zone.
Description	This field displays the description of the interface.
	Select an entry and click Edit to open a screen where you can modify the entry's settings.
	To remove an interface, select it and click Remove. The Nebula Device confirms you want to remove it before doing so. Note: You can remove an interface that belongs to one Zone only. For example, interface ge4 only belongs to the LAN Zone. After selecting this interface and clicking the Remove icon, the interface ge4 will be removed from the interface table. After clicking OK, the LAN Zone will also remove the interface ge4. To avoid losing connection between the Nebula Device and NCC, there must be at least one External interface. NCC will not allow you to remove the last External interface.
Add	Click this to add a new entry.
Internal	
Name	This field displays the name of the interface.
Status	Click the switch to the right to enable this interface.
IP address	This field displays the IP address for this interface. If this field is empty, the interface does not have an IP address yet or is configured as 'Unassigned'.
Subnet mask	This field displays the subnet mask of this interface in dot decimal notation. The subnet mask indicates what part of the IP address is the same for all computers in the network.
VLAN ID	This field displays the VLAN ID which is a 12-bit number that uniquely identifies each VLAN.
Members	This field displays the port(s) the interface is using.
Zone	This field displays the zone to which this interface belongs. An interface can only be in one zone.
Description	This field displays the description of the interface.
	Select an entry and click Edit to open a screen where you can modify the entry's settings.
	To remove an interface, select it and click Remove. The Nebula Device confirms you want to remove it before doing so.
Add	Click this to add a new entry.
ADVANCED OPTIONS	Click this to display a greater or lesser number of configuration fields.

Table 114 Site-wide > Configure > Firewall > Port and Interface (continued)

LABEL	DESCRIPTION
General	
Name	This field displays the name of the interface.
Status	Click the switch to the right to enable this interface.
IP address	This field displays the IP address for this interface. If this field is empty, the interface does not have an IP address yet or is configured as 'Unassigned'.
Subnet mask	This field displays the subnet mask of this interface in dot decimal notation. The subnet mask indicates what part of the IP address is the same for all computers in the network.
VLAN ID	This field displays the VLAN ID which is a 12-bit number that uniquely identifies each VLAN.
Members	This field displays the port(s) the interface is using.
Zone	This field displays the zone to which this interface belongs. An interface can only be in one zone.
Description	This field displays the description of the interface.
	Select an entry and click Edit to open a screen where you can modify the entry's settings.
	To remove an interface, select it and click Remove. The Nebula Device confirms you want to remove it before doing so.
Add	Click this to add a new entry.
VTI	
Name	This field displays the name of the interface.
Status	Click the switch to the right to enable this interface.
IP address	This field displays the IP address for this interface. If this field is empty, the interface does not have an IP address yet or is configured as 'Unassigned'.
Subnet mask	This field displays the subnet mask of this interface in dot decimal notation. The subnet mask indicates what part of the IP address is the same for all computers in the network.
VPN rule	This field displays the scenario rule the VPN tunnel interface is using.
Zone	This field displays the zone to which this interface belongs. An interface can only be in one zone.
Description	This field displays the description of the interface.
	Select an entry and click Edit to open a screen where you can modify the entry's settings.
	To remove an interface, select it and click Remove. The Nebula Device confirms you want to remove it before doing so.

8.3.3.1 External Interface Configuration

Click the Add button or click the Edit button in the External Interface section to open the Site-wide > Configure > Firewall > Port and Interface > External interface configuration screen.

Figure 171 Site-wide > Configure > Firewall > Port and Interface > External interface configuration

External interface configuration

Enable

☒

Interface properties

Interface name

ge1

Description

Type

Ethernet

Members

g1

Zone

WAN

Address assignment

Static

IPv4 address/Network Mask

192.168.100.39

Default gateway

Secondary IP

ADVANCED OPTIONS

Connectivity check

☒ None

☐ Check the two addresses below

Probe succeeds when

Anyone

MAC address Setting

☒ Device's MAC address

☐ MAC address overwrite

DHCP option 60

MTU

1500

(Bytes)

SNAT

☒

Cancel

OK

The following table describes the labels in this screen.

Table 115 Site-wide > Configure > Firewall > Port and Interface > External interface configuration

LABEL	DESCRIPTION
Enable	Click this switch to the right to enable the interface.
Interface properties	
Interface name	Enter a name for the interface. You may use 2 to 11 single-byte characters, including 0-9a-zA-Z, underscores (_), or dashes (-), but the first character cannot be a number. This value is case-sensitive. The name is not editable after saving it. Note: The following reserved name cannot be used: lo, gre0, gretap0, ip6gre0, ip6gretap0, tunl0, sit0, ip6tnl0, dummy0, erspan0, ip6_vti0.
Description	Enter a descriptive name for the interface. You may use 1 to 512 single-byte characters, including special characters.
Type	Select the type of interface you want to configure. Select Ethernet to establish the foundation for defining other interfaces and network policies. Select VLAN to receive and send tagged frames. The Nebula Device automatically adds or removes the tags as needed. Select Bridge to create a single network between Ethernet or VLAN interfaces at the layer-2 (data link, MAC address) level. Unlike port groups, bridge interfaces can take advantage of some security features in the Nebula Device, such as Policy Control and IP Exception. You can also assign an IP address and subnet mask to the bridge. Select LAG to combine multiple ports into a single logical interface to increase bandwidth and provide redundancy.
Member type	Select the Ethernet interface on which the VLAN interface runs. This field is displayed if you select VLAN.
Members	Select the name of the port group to which you want the interface (network) to belong. When you select Bridge/LAG click +Add to add new members and select the Interface and Zone. Click the delete icon to remove an entry in this table.
Interface	Select the interface (network) to belong. This field is displayed if you select Bridge.
Mode	Mode refers to whether the LAG is acting as follows: - active-backup where only one slave in the LAG interface is active and another slave becomes active only if the active slave fails. - lacp (802.3ad) (IEEE 802.3ad Dynamic link aggregation) where Link Aggregation Control Protocol (LACP) negotiates automatic combining of links and balances the traffic load across the LAG link by sending LACP packets to the directly connected device that also implements LACP. The slaves must have the same speed and duplex settings. This field is displayed if you select LAG.
MII monitoring interval	Set the link check interval in milliseconds that the system polls the Media Independent Interface (MII) to get status. This defines how frequently the system checks if a LAG member interface is active or down. This field is displayed if you select LAG.

Table 115 Site-wide > Configure > Firewall > Port and Interface > External interface configuration

LABEL	DESCRIPTION
Transmit hash policy	Configure how outgoing traffic is distributed across the aggregated links. Select src-dst-ip-mac to distribute traffic more efficiently by considering both source-destination IP and MAC addresses. Select src-dst-mac to distribute traffic by considering the source-destination MAC addresses only. This field is displayed if you select LAG.
Primary	Configure which member interface should be preferred as the active link. This field is empty when the member interface is deleted. This field is optional and displays if you select active-backup in Mode.
Zone	Select the zone to which this interface belongs. An interface can only be in one zone.
	Click the delete icon to remove an entry in this table.
Add	Click this to add a new member.
Address assignment	These fields are displayed if you select Static.
IPv4 address/Network Mask	Enter the static IP address of this interface and the subnet mask for this interface's IP address. Note: To prevent an IP address conflict, NCC will prevent input of an IP address already used by another Nebula Device in the same site.
Default gateway	Enter the IP address of the Nebula Device through which this interface sends traffic.
Secondary IP	Enter another IP address of the Nebula Device through which this interface sends traffic. This field is optional.
These fields are displayed if you selected PPPoE or PPPoE with static IP.	
Authentication Type	Select an authentication protocol for outgoing connection requests. Options are: - Chap/PAP – The Nebula Device accepts either CHAP or PAP when requested by the remote node. - Chap – The Nebula Device accepts CHAP only. - PAP – The Nebula Device accepts PAP only. - MSCHAP – The Nebula Device accepts MSCHAP only. - MSCHAP-V2 – The Nebula Device accepts MSCHAP-V2 only.
Username	Enter the user name provided by your ISP. You can use 2 up to 64 alphanumeric characters and the underscore. '0-9a-zA-Z~`@#\$\$%^&*()_+={} :~<>.,?/' are allowed.
Password	Enter the password provided by your ISP. You can use 1 up to 63 alphanumeric characters and the underscore. 0-9a-zA-Z~`@#\$\$%^&*()_+={} :~<>.,/ are allowed. '?' is not allowed.
Retype password	Enter the password again to confirm it.
Service name	Enter the service name from your service provider. PPPoE uses a service name to identify and reach the PPPoE server. You can use up to 30 single-byte characters, including 0-9a-zA-Z._-
Compression	Select On to turn on stac compression. Select Off to turn off stac compression. Stac compression is data compression technique capable of compressing data by a factor of about four.
User Idle Timeout	Enter the idle timeout in seconds that elapses before the router automatically disconnects from the PPPoE server.
WAN IP	Enter the IP address of the WAN interface through which this connection will send traffic.
Gateway IP	Enter the IP address of the router through which this WAN connection will send traffic.
IP address	Enter the IP address for this interface.

Table 115 Site-wide > Configure > Firewall > Port and Interface > External interface configuration

LABEL	DESCRIPTION
Subnet mask	Enter the subnet mask of this interface in dot decimal notation. The subnet mask indicates what part of the IP address is the same for all computers on the network.
ADVANCED OPTIONS	
Connectivity check	The interface can periodically check whether it can connect to its default gateway (Default gateway), or to two user-specified servers (Check the two addresses below). If the check fails, the interface's status changes to Down. You specify how often the interface checks the connection, how long to wait for a response before the attempt is a failure, and how many consecutive failures are required before the Nebula Device stops routing to the gateway.
Probe succeeds when	This field applies when you select Check the two addresses and specify two domain names or IP addresses for the connectivity check. Select any one if you want the check to pass if at least one of the domain names or IP addresses responds. Select all if you want the check to pass only if both domain names or IP addresses respond.
MAC address Setting	Have the interface use either the factory-assigned default MAC address, or a manually specified MAC address.
DHCP option 60	DHCP Option 60 is used by the Security Firewall for identification to the DHCP server using the VCI (Vendor Class Identifier) on the DHCP server. The Nebula Device adds it in the initial DHCP discovery message that a DHCP client broadcasts in search of an IP address. The DHCP server can assign different IP addresses or options to clients with the specific VCI or reject the request from clients without the specific VCI. Enter a string using up to 63 of these characters [a–z A–Z 0–9 !"#%&'()*+,-./:;<=>?@[\\]^_`{ }] to identify this Nebula Device to the DHCP server. For example, Zyxel-TW.
MTU	Enter the number (Bytes) to allow the Nebula Device to act as an IGMP proxy for hosts connected on the IGMP downstream interface.
SNAT	Click this switch to the right to enable SNAT. When enabled, the Nebula Device rewrites the source address of packets being sent from this interface to the interface's IP address.
Cancel	Click Cancel to exit this screen without saving.
OK	Click OK to save your changes.

8.3.3.2 Internal Interface Configuration

Click the Add button or click the Edit button in the Internal interface section to open the Site-wide > Configure > Firewall > Port and Interface > Internal interface configuration screen.

Figure 172 Site-wide > Configure > Firewall > Port and Interface > Internal interface configuration

The following table describes the labels in this screen.

Table 116 Site-wide > Configure > Firewall > Port and Interface > Internal interface configuration

LABEL	DESCRIPTION
Enable	Select this to enable the interface.
Interface properties	
Interface name	Specify a name for the interface. You may use 2 to 30 single-byte characters, including 0-9a-zA-Z, underscores (_), or dashes (-), but the first character cannot be a number. This value is case-sensitive.
Description	Enter a descriptive name for the interface.
Type	Select the type of interface you want to configure. Select Ethernet to establish the foundation for defining other interfaces and network policies. Select VLAN to receive and send tagged frames. The Nebula Device automatically adds or removes the tags as needed. Select Bridge to create a single network between Ethernet or VLAN interfaces at the layer-2 (data link, MAC address) level. Unlike port groups, bridge interfaces can take advantage of some security features in the Nebula Device, such as Policy Control and IP Exception. You can also assign an IP address and subnet mask to the bridge. Select LAG to combine multiple ports into a single logical interface to increase bandwidth and provide redundancy.
Member type	Select the Ethernet interface on which the VLAN interface runs. This field is displayed if you select VLAN.
Members	Select the name of the port group to which you want the interface (network) to belong. When you select Bridge/LAG click +Add to add new members and select the Interface and Zone. Click the delete icon to remove an entry in this table.
Interface	Selecting members is optional. Select the interface (network) to belong. The valid members will display in the drop-down list. Members can be Ethernet and VLAN interfaces that have not joined other bridge/LAG interface. The IP address of members must be unassigned. This field is displayed if you select Bridge. Note: Maximum of 8 members for a Bridge interface. Maximum of 4 members for a LAG interface.
Mode	Mode refers to whether the LAG is acting as follows: - active-backup where only one slave in the LAG interface is active and another slave becomes active only if the active slave fails. - lacp (802.3ad) (IEEE 802.3ad Dynamic link aggregation) where Link Aggregation Control Protocol (LACP) negotiates automatic combining of links and balances the traffic load across the LAG link by sending LACP packets to the directly connected device that also implements LACP. The slaves must have the same speed and duplex settings. This field is displayed if you select LAG.
MII monitoring interval	Set the link check interval in milliseconds (1 to 1000) that the system polls the Media Independent Interface (MII) to get status. This defines how frequently the system checks if a LAG member interface is active or down. This field is displayed if you select LAG.

Table 116 Site-wide > Configure > Firewall > Port and Interface > Internal interface configuration

LABEL	DESCRIPTION
Transmit hash policy	Configure how outgoing traffic is distributed across the aggregated links. Select src-dst-ip-mac to distribute traffic more efficiently by considering both source-destination IP and MAC addresses. Select src-dst-mac to distribute traffic by considering the source-destination MAC addresses only. This field is displayed if you select LAG.
Primary	Specify which member interface should be preferred as the active link. This field is empty when the member interface is deleted. This field is optional and displays if you select active-backup in Mode.
Zone	Select the zone to which this interface belongs. An interface can only be in one zone.
	Click the delete icon to remove an entry in this table.
Add	Click this to add a new member.
Address assignment	These fields are displayed if you select Static.
IPv4 address/Network mask	Enter the IP address and the subnet mask for this interface in dot decimal notation. The subnet mask indicates what part of the IP address is the same for all computers in the network. Note: To prevent an IP address conflict, NCC will prevent input of an IP address already used by another Nebula Device in the same site.
Secondary IP	Enter another IP address for this interface. This field is optional.
DHCP server	
Enable	Click this switch to the right to enable the DHCP server.
Mode	Select what type of DHCP service the Nebula Device provides to the network. Choices are: DHCP relay – the Nebula Device routes DHCP requests to one or more DHCP servers you specify. The DHCP servers may be on another network. DHCP server – the Nebula Device assigns IP addresses and provides subnet mask, gateway, and DNS server information to the network. The Nebula Device is the DHCP server for the network.
Start IP	Enter the IP address from which the Nebula Device begins allocating IP addresses. If you want to assign a static IP address to a specific computer, use the Static DHCP Table. If this field is blank, the Pool Size must also be blank. In this case, the Nebula Device can assign every IP address allowed by the interface's IP address and subnet mask, except for the first address (network address), last address (broadcast address) and the interface's IP address.
First DNS Server, Second DNS Server, Third DNS Server	Specify the IP addresses of up to three DNS servers for the DHCP clients to use. Use one of the following ways to specify these IP addresses. Custom – enter a static IP address. ZyWALL – the DHCP clients use the IP address of this interface and the Nebula Device works as a DNS relay. Alternatively, select None.
Default gateway	If you set this interface to DHCP server, you can select to use either the interface's IP address or another IP address as the default router. This default router will become the DHCP clients' default gateway.

Table 116 Site-wide > Configure > Firewall > Port and Interface > Internal interface configuration

LABEL	DESCRIPTION
Lease Time	Specify how long each computer can use the information (especially the IP address) before it has to request the information again. days, hours, and minutes – enter how long IP addresses are valid.
Static DHCP table	Configure a list of static IP addresses the Nebula Device assigns to computers connected to the interface. Otherwise, the Nebula Device assigns an IP address dynamically using the interface's IP Pool Start Address and Pool Size. Note: The IP address must be in the same subnet as the Primary IP.
Hostname	By default, the Nebula Device's hostname is the MAC address. Enter a name to identify the Nebula Device. You can use 2 up to 255 alphanumeric characters including period (.) and hyphen (-). Spaces are not allowed. Duplicate hostnames are not allowed in the same Static DHCP table. Note: The period (.) and hyphen (-) cannot be the first character, last character, or appear consecutively on the Name. For example, -wax650, wax650-, wax650..wax650, wax650.-wax650.
IP address	This field displays the IP address currently assigned to a DHCP client or reserved for a specific MAC address. Duplicate IP addresses are not allowed in the same Static DHCP table. Note: No IP address is required for an internal interface.
MAC address	Enter the MAC address to which to assign this entry's IP address. The MAC address supports the XX:XX:XX:XX:XX:XX and XX-XX-XX-XX-XX-XX formats. Duplicate MAC addresses are not allowed in the same Static DHCP table.
Description	Enter a description to help identify this static DHCP entry. You can use up to 512 alphanumeric characters.
	Select an entry in this table and click this to delete it. This will also remove the client information on the Site-wide > Clients > Client list screen.
+Add	Click this to create an entry in the Static DHCP table. This will also add the client reserve IP policy on the Site-wide > Clients > Client list.
DHCP extended options	Configure this if you want to send more information to DHCP clients through DHCP packets.
First WINS server Second WINS server	Enter the IP address of the WINS (Windows Internet Naming Service) server that you want to send to the DHCP clients. The WINS server keeps a mapping table of the computer names on your network and the IP addresses that they are currently using. Note: Only one IP address allowed per WINS server.
PXE server	PXE (Preboot eXecution Environment) allows a client computer to use the network to boot up and install an operating system through a PXE-capable Network Interface Card (NIC). PXE is available for computers on internal interfaces to allow them to boot up using boot software on a PXE server. The Nebula Device acts as an intermediary between the PXE server and the computers that need boot software. The PXE server must have a public IPv4 address. You must enable DHCP server on the Nebula Device so that it can receive information from the PXE server.
PXE Boot loader file	A boot loader is a computer program that loads the operating system for the computer. Enter the exact file name of the boot loader software file, including filename extension, that is on the PXE server. If the wrong filename is entered, then the client computers cannot boot. You can use up to 127 single-byte characters, including a-zA-Z0-9_-..

Table 116 Site-wide > Configure > Firewall > Port and Interface > Internal interface configuration

LABEL	DESCRIPTION
Name	This field displays the name of the selected DHCP option. Enter a descriptive name to identify the DHCP option. You may use 2 to 30 single-byte characters, including 0-9a-zA-Z, underscores (_), or dashes (-), but the first character cannot be a number. This value is case-sensitive.
Code	This field displays the code number of the selected DHCP option. Enter a number for the option. This field is mandatory.
Type	This is the type of the selected DHCP option. Select an appropriate type for the value that you will enter in the next field. Misconfiguration could result in interface lockout. BOOLEAN: enter true or false. IP: only one IPv4 address is allowed. FQDN: only one FQDN is allowed. You can use up to 253 characters but the first character cannot be a space. TEXT: You can use up to 250 printable ASCII characters (except '\') but the first character cannot be a space. HEX: You can use 2 up to 254 characters (0-F, 0-f, :), for example: A0:FF:C8:12:9D.
Value	Enter the value for the selected DHCP option. For example, if you selected TFTP Server Name (66) and the type is TEXT, enter the DNS domain name of a TFTP server here. This field is mandatory.
	Select an entry and click Edit to open a screen where you can modify the entry's settings.
	Select an entry in this table and click this to delete it.
+Add	Click this to create an entry in this table.
ADVANCED OPTIONS	
Connectivity check	Select Check the two addresses below to specify one or two domain names or IP addresses for the connectivity check. You can type an IPv4 address in one field and a domain name in the other. For example, type "192.168.1.2" in the top field and "www.zyxel.com" in the bottom field. Select Probe succeeds when to specify two domain names or IP addresses for the connectivity check. Otherwise, select None.
MAC address setting	Select Device's MAC address to have the interface use the factory-assigned default MAC address. By default, the Nebula Device uses the factory-assigned MAC address to identify itself. Select MAC address overwrite to have the interface use a different MAC address. Enter a MAC address in the format 'xx:xx:xx:xx:xx:xx' or 'xx-xx-xx-xx-xx-xx'. Once it is successfully configured, the address will be copied to the configuration file. It will not change unless you change the setting or upload a different configuration file.
MTU	Maximum Transmission Unit. Enter the maximum size of each data packet, in bytes, that can move through this interface. If a larger packet arrives, the Nebula Device divides it into smaller fragments. Allowed values are 1280 – 1500. Usually, this value is 1500.
Cancel	Click Cancel to exit this screen without saving.
OK	Click OK to save your changes.

8.3.3.3 General Interface Configuration

Click the Add button or click the Edit button in the General interface section to open the Site-wide > Configure > Firewall > Port and Interface > General interface configuration screen.

Figure 173 Site-wide > Configure > Firewall > Port and Interface > General interface configuration

The following table describes the labels in this screen.

Table 117 Site-wide > Configure > Firewall > Port and Interface > General interface configuration

LABEL	DESCRIPTION
Enable	Select this to enable the interface.
Interface properties	
Interface name	Specify a name for the interface. You may use 2 to 30 single-byte characters, including 0-9a-zA-Z, underscores (_), or dashes (-), but the first character cannot be a number. This value is case-sensitive.
Description	Enter a descriptive name for the interface.
Type	Select the type of interface you want to configure. Select Ethernet to establish the foundation for defining other interfaces and network policies. Select VLAN to receive and send tagged frames. The Nebula Device automatically adds or removes the tags as needed. Select Bridge to create a single network between Ethernet or VLAN interfaces at the layer-2 (data link, MAC address) level. Unlike port groups, bridge interfaces can take advantage of some security features in the Nebula Device, such as Policy Control and IP Exception. You can also assign an IP address and subnet mask to the bridge. Select LAG to combine multiple ports into a single logical interface to increase bandwidth and provide redundancy.
Member type	Select the Ethernet interface on which the VLAN interface runs. This field is displayed if you select VLAN.
Members	Select the name of the port group to which you want the interface (network) to belong.
Interface	Select the interface (network) to belong. This field is displayed if you select Bridge.
Mode	Mode refers to whether the LAG is acting as follows: - active-backup where only one slave in the LAG interface is active and another slave becomes active only if the active slave fails. - lacp (802.3ad) (IEEE 802.3ad Dynamic link aggregation) where Link Aggregation Control Protocol (LACP) negotiates automatic combining of links and balances the traffic load across the LAG link by sending LACP packets to the directly connected device that also implements LACP. The slaves must have the same speed and duplex settings. This field is displayed if you select LAG.
MII monitoring interval	Set the link check interval in milliseconds that the system polls the Media Independent Interface (MII) to get status. This defines how frequently the system checks if a LAG member interface is active or down. This field is displayed if you select LAG.
Transmit hash policy	Configure how outgoing traffic is distributed across the aggregated links. Select src-dst-ip-mac to distribute traffic more efficiently by considering both source-destination IP and MAC addresses. Select src-dst-mac to distribute traffic by considering both source-destination MAC addresses only. This field is displayed if you select LAG.
Primary	Specify which member interface should be preferred as the active link. This field is empty when the member interface is deleted. This field is optional and displays if you select active-backup in Mode.
Zone	Select the zone to which this interface belongs. An interface can only be in one zone.

Table 117 Site-wide > Configure > Firewall > Port and Interface > General interface configuration

LABEL	DESCRIPTION
	Click the delete icon to remove an entry in this table.
Add	Click this to add a new member.
Address assignment	These fields are displayed if you select Static.
IPv4 address/Network mask	Enter the IP address and the subnet mask for this interface in dot decimal notation. The subnet mask indicates what part of the IP address is the same for all computers in the network. Note: To prevent an IP address conflict, NCC will prevent input of an IP address already used by another Nebula Device in the same site.
Default gateway	If you set this interface to DHCP server, you can select to use either the interface's IP address or another IP address as the default router. This default router will become the DHCP clients' default gateway.
Secondary IP	Enter another IP address for this interface. This field is optional.
These fields appear if the Nebula Device is a DHCP Relay.	
Server 1	Enter the IP address of a DHCP server for the network.
Upstream interface	This field is optional. Select up to two interface(s) to use for the Nebula Device to forward/receive DHCP packets to/from the DHCP server.
Server 2	This field is optional. Enter the IP address of another DHCP server for the network.
Upstream interface	This field is optional. Select up to two interface(s) to use for the Nebula Device to forward/receive DHCP packets to/from the DHCP server.
These fields appear if the Nebula Device is a DHCP Server.	
Enable	Click this switch to the right to enable the DHCP server.
Mode	Select what type of DHCP service the Nebula Device provides to the network. Choices are: DHCP relay – the Nebula Device routes DHCP requests to one or more DHCP servers you specify. The DHCP servers may be on another network. DHCP server – the Nebula Device assigns IP addresses and provides subnet mask, gateway, and DNS server information to the network. The Nebula Device is the DHCP server for the network.
Start IP	Enter the IP address from which the Nebula Device begins allocating IP addresses. If you want to assign a static IP address to a specific computer, use the Static DHCP Table.
First DNS Server, Second DNS Server, Third DNS Server	Specify the IP addresses of up to three DNS servers for the DHCP clients to use. Use one of the following ways to specify these IP addresses. Custom – enter a static IP address. ZyWALL – the DHCP clients use the IP address of this interface and the Nebula Device works as a DNS relay. Alternatively, select None.
Default gateway	If you set this interface to DHCP server, you can select to use either the interface's IP address or another IP address as the default router. This default router will become the DHCP clients' default gateway.
Lease Time	Specify how long each computer can use the information (especially the IP address) before it has to request the information again. days, hours, and minutes – enter how long IP addresses are valid.

Table 117 Site-wide > Configure > Firewall > Port and Interface > General interface configuration

LABEL	DESCRIPTION
Static DHCP table	Configure a list of static IP addresses the Nebula Device assigns to computers connected to the interface. Otherwise, the Nebula Device assigns an IP address dynamically using the interface's IP Pool Start Address and Pool Size. Note: The IP address must be in the same subnet as the Primary IP.
Hostname	By default, the Nebula Device's hostname is the MAC address. Enter a name to identify the Nebula Device. You can use 2 up to 255 alphanumeric characters including period (.) and hyphen (-). Spaces are not allowed. Duplicate hostnames are not allowed in the same Static DHCP table. Note: The period (.) and hyphen (-) cannot be the first character, last character, or appear consecutively on the Name. For example, -wax650, wax650-, wax650..wax650, wax650.-wax650.
IP address	Enter the IP address to assign to a device with this entry's MAC address. Note: To prevent an IP address conflict, NCC will prevent input of an IP address already used by another Nebula Device in the same site.
MAC address	Enter the MAC address to which to assign this entry's IP address. The MAC address supports the XX:XX:XX:XX:XX:XX and XX-XX-XX-XX-XX-XX formats. Duplicate MAC addresses are not allowed in the same Static DHCP table.
Description	Enter a description to help identify this static DHCP entry. You can use up to 512 alphanumeric characters.
	Select an entry in this table and click this to delete it. This will also remove the client information on the Site-wide > Clients > Client list screen.
+Add	Click this to create an entry in the Static DHCP table. This will also add the client reserve IP policy on the Site-wide > Clients > Client list.
DHCP extended options	Configure this if you want to send more information to DHCP clients through DHCP packets.
First WINS server Second WINS server	Enter the IP address of the WINS (Windows Internet Naming Service) server that you want to send to the DHCP clients. The WINS server keeps a mapping table of the computer names on your network and the IP addresses that they are currently using. Note: Only one IP address allowed per WINS server.
PXE server	PXE (Preboot eXecution Environment) allows a client computer to use the network to boot up and install an operating system through a PXE-capable Network Interface Card (NIC). PXE is available for computers on internal interfaces to allow them to boot up using boot software on a PXE server. The Nebula Device acts as an intermediary between the PXE server and the computers that need boot software. The PXE server must have a public IPv4 address. You must enable DHCP server on the Nebula Device so that it can receive information from the PXE server.
PXE Boot loader file	A boot loader is a computer program that loads the operating system for the computer. Enter the exact file name of the boot loader software file, including filename extension, that is on the PXE server. If the wrong filename is entered, then the client computers cannot boot. You can use up to 127 single-byte characters including a-zA-Z0-9_.-.
Name	This field displays the name of the selected DHCP option. Enter a descriptive name to identify the DHCP option. You may use 2 to 30 single-byte characters, including 0-9a-zA-Z, underscores (_), or dashes (-), but the first character cannot be a number. This value is case-sensitive.
Code	This field displays the code number of the selected DHCP option. Enter a number for the option. This field is mandatory.

Table 117 Site-wide > Configure > Firewall > Port and Interface > General interface configuration

LABEL	DESCRIPTION
Type	This is the type of the selected DHCP option. Select an appropriate type for the value that you will enter in the next field. Misconfiguration could result in interface lockout. BOOLEAN: enter true or false. IP: only one IPv4 address is allowed. FQDN: only one FQDN is allowed. You can use up to 253 characters but the first character cannot be a space. TEXT: You can use up to 250 printable ASCII characters (except '\') but the first character cannot be a space. HEX: You can use 2 up to 254 characters (0-F, 0-f, :), for example: A0:FF:C8:12:9D.
Value	Enter the value for the selected DHCP option. For example, if you selected TFTP Server Name (66) and the type is TEXT, enter the DNS domain name of a TFTP server here. This field is mandatory.
	Select an entry and click Edit to open a screen where you can modify the entry's settings.
	Select an entry in this table and click this to delete it.
+Add	Click this to create an entry in this table.
ADVANCED OPTIONS	
Connectivity check	Select Check the two addresses below to specify one or two domain names or IP addresses for the connectivity check. You can type an IPv4 address in one field and a domain name in the other. For example, type "192.168.1.2" in the top field and "www.zyxel.com" in the bottom field. Select Probe succeeds when to specify two domain names or IP addresses for the connectivity check. Otherwise, select None.
MAC address setting	Select Device's MAC address to have the interface use the factory-assigned default MAC address. By default, the Nebula Device uses the factory-assigned MAC address to identify itself. Select MAC address overwrite to have the interface use a different MAC address. Enter a MAC address in the format 'xx:xx:xx:xx:xx:xx' or 'xx-xx-xx-xx-xx-xx'. Once it is successfully configured, the address will be copied to the configuration file. It will not change unless you change the setting or upload a different configuration file.
DHCP option 60	DHCP Option 60 is used by the Nebula Device for identification to the DHCP server using the VCI (Vendor Class Identifier) on the DHCP server. The Nebula Device adds it in the initial DHCP discovery message that a DHCP client broadcasts in search of an IP address. The DHCP server can assign different IP addresses or options to clients with the specific VCI or reject the request from clients without the specific VCI. Type a string using up to 63 of these characters [a-zA-Z0-9!\\"#\$%&'()*+,-./:;<=>?@[\]^_`{ }] to identify this Nebula Device to the DHCP server. For example, Zyxel-TW.
MTU	Maximum Transmission Unit. Enter the maximum size of each data packet, in bytes, that can move through this interface. If a larger packet arrives, the Nebula Device divides it into smaller fragments. Allowed values are 1280 – 1500. Usually, this value is 1500.
SNAT	Click this switch to the right to enable SNAT. When enabled, the Nebula Device rewrites the source address of packets being sent from this interface to the interface's IP address.
Cancel	Click Cancel to exit this screen without saving.
OK	Click OK to save your changes.

8.3.4 Routing

Use policy routes and static routes to override the Nebula Device's default routing behavior in order to send packets through the appropriate next-hop gateway, interface or VPN tunnel.

A policy route defines the matching criteria and the action to take when a packet meets the criteria. The action is taken only when all the criteria are met. Use this screen to configure policy routes.

Click Site-wide > Configure > Firewall > Routing: Policy Route to access this screen.

Figure 174 Site-wide > Configure > Firewall > Routing: Policy Route



The following table describes the labels in this screen.

Table 118 Site-wide > Configure > Firewall > Routing: Policy Route

LABEL	DESCRIPTION
	Click the icon of a rule and drag the rule up or down to change the order.
Enabled	Select the checkbox to turn on the rule. Otherwise, clear the checkbox to turn off the rule.
Name	This shows the name to identify this rule.
User	This is the name of the user (group) object from which the packets are sent. Any means all users.
Schedule	This is the name of the schedule object. Any means the route is active at all times if enabled.
Incoming	This is the interface on which the packets are received.
Source	This shows the source IP addresses to which this rule applies. This could be an IP, CIDR, FQDN, or GEO IP (country) object.
Destination	This shows the destination IP addresses to which this rule applies. This could be an IP, CIDR, FQDN, or GEO IP (country) object.
DSCP Code	This is the DSCP value of incoming packets to which this policy route applies. Any means all DSCP values or no DSCP marker. Default means traffic with a DSCP value of 0. This is usually best effort traffic. The "af" entries stand for Assured Forwarding. The number following the "af" identifies one of four classes and one of three drop preferences.
Service	This is the name of the destination service object (port) or application. Any means all services.
Source Port	This is the name of the source service object. Any means all source services.
Next Hop	This is the next hop to which packets are directed. It helps forward packets to their destinations and can be a router, VPN tunnel, or outgoing interface.

Table 118 Site-wide > Configure > Firewall > Routing: Policy Route (continued)

LABEL	DESCRIPTION
DSCP Marking	This is how the Nebula Device handles the DSCP value of the outgoing packets that match this route. If this field displays a DSCP value, the Nebula Device applies that DSCP value to the route's outgoing packets. Preserve means the Nebula Device does not modify the DSCP value of the route's outgoing packets. Default means the Nebula Device sets the DSCP value of the route's outgoing packets to 0. The "af" choices stand for Assured Forwarding. The number following the "af" identifies one of four classes and one of three drop preferences.
SNAT	This shows the pre-defined address (group) as the source IP address(es) of the packets that match this route. This shows Outgoing Interface when the rule uses the IP address of the outgoing interface as the source IP address of the packets that matches this route.
Description	This is the descriptive name of the policy.
	Click this icon to change the profile settings.
	Click this icon to remove the profile.
Add	Click this button to create a new policy route. See Section 8.3.8.1 on page 563 for more information.

8.3.4.1 Add/Edit Policy Route

Click the Add button or an edit icon in the Site-wide > Configure > Firewall > Routing: Policy Route: Add/Edit screen to access this screen.

Note: After reaching the maximum number of Policy Route rules, the Add button will gray-out and Items have reached the maximum number will appear.

Figure 175 Site-wide > Configure > Firewall > Routing: Policy Route: Add/Edit

[Back to Routing](#)

Create Policy Route

Enable ☒

Name

Description

Criteria

User

Incoming

Source address

Destination address

DSCP mark

Schedule

Service

Source port

Next Hop

Type

DSCP marking

DSCP marking

Address translation

NAT address

Health Check

Disable policy route automatically when interface link down ☒

Enable Connectivity Check ☒

Check Method

Check Period

Check Timeout

Check Fail Tolerance

Check These Address

Check Successful When

The following table describes the labels in this screen.

Table 119 Site-wide > Configure > Firewall > Routing: Policy Route: Add/Edit

LABEL	DESCRIPTION
Create Policy Route	
Enable	Select this to activate the rule.
Name	Enter a name to identify this rule. You can use up to 30 single-byte characters, including [a-zA-Z_-][a-zA-Z0-9\._-]. The first character cannot be a number. Note: The Name is not editable after you save it.
Description	Enter a descriptive name for the rule consisting of 1 to 60 single-byte characters, including a-zA-Z0-9. Special characters and spaces are allowed.
Criteria	
User	Select a user name or user group from which the packets are sent.
Incoming	Select where the packets are coming from; any, an interface, a tunnel, an SSL VPN, or the Zyxel Device itself. For an interface, a tunnel, or an SSL VPN, you also need to select the individual interface, VPN tunnel, or SSL VPN connection.
Source address	Specify the source IP addresses (LAN interface / country) to which this rule applies. You can add multiple IP, CIDR, GEO IP (country) objects or FQDN in an object group by clicking + Add group, or enter a new IP address by clicking + Add address. Select Any to apply the rule to all IP addresses. Note: IP/CIDR, FQDN, and GEO IP objects cannot be used at the same time. Multiple FQDNs are not supported. The IP FQDN does NOT support wildcards.
Destination address	Specify the destination IP addresses (LAN interface / country) or subnet to which this rule applies. You can add multiple IP, CIDR, GEO IP (country) objects or a single FQDN object by clicking + Add group, or enter a new IP address by clicking + Add address. Select Any to apply the rule to all IP addresses. Note: IP/CIDR, FQND, and GEO IP objects cannot be used at the same time. Multiple FQDNs are not supported.
DSCP code	Select a DSCP code point value of incoming packets to which this policy route applies or select Custom to specify another DSCP code point. The lower the number the higher the priority with the exception of 0 which is usually given only best-effort treatment. Any means all DSCP value or no DSCP marker. Default means traffic with a DSCP value of 0. This is usually best effort traffic. The "af" choices stand for Assured Forwarding. The number following the "af" identifies one of four classes and one of three drop preferences.
Custom DSCP code	Use this field to specify a custom DSCP code point when you select Custom in the previous field.
Schedule	Select a schedule to control when the policy route is active. Always means the route is active at all times if enabled.
Service	Select a destination service or service group to identify the type of traffic to which this policy route applies. TCP, UDP, TCP & UDP, ICMP – Match packets from the specified network Protocol, going to the optional destination port. Content – Match packets for the specified custom protocol. Enter the protocol ID, 1 – 143 (1 for ICMP, 6 for TCP, 17 for UDP). Otherwise, select Any.
Source port	Select a source service or service group to identify the source port of packets to which the policy route applies.

Table 119 Site-wide > Configure > Firewall > Routing: Policy Route: Add/Edit (continued)

LABEL	DESCRIPTION
Next-Hop	
Type	Select Auto to have the Nebula Device use the routing table to find a next-hop and forward the matched packets automatically. Select Interface to route the matched packets through the specified outgoing interface to a gateway (which is connected to the interface). Select Gateway Object to route the matched IPv6 packets through a 6to4 tunnel to the packets' destination. Select Gateway IP to route the matched packets to the next-hop router or switch you specified in the Source address field. You have to set up the next-hop router or switch as a HOST address object first.
Interface	This field displays when you select Interface in the Type field. Select an interface to have the Nebula Device send traffic that matches the policy route through the specified interface.
Gateway Object	This field displays when you select Gateway Object in the Type field.
Gateway IP	This field displays when you select Gateway IP in the Type field. Enter an IPv4 address. The gateway is an immediate neighbor of your Nebula Device that will forward the packet to the destination. The gateway must be a router or switch on the same segment as your Nebula Device's interface(s).
DSCP marking	
DSCP marking	Set how the Nebula Device handles the DSCP value of the outgoing packets that match this route. Select one of the pre-defined DSCP values to apply or select Custom to specify another DSCP value. The "af" choices stand for Assured Forwarding. The number following the "af" identifies one of four classes and one of three drop preferences. Select Preserve to have the Nebula Device keep the packets' original DSCP value. Select Default to have the Nebula Device set the DSCP value of the packets to 0.
Custom DSCP marking	Use this field to specify a custom DSCP value.
Address translation	Use this section to configure NAT for the policy route. This section does not apply to policy routes that use a VPN tunnel as the next hop.
SNAT address	Select Outgoing Interface to use the IP address of the outgoing interface as the source IP address of the packets that matches this route. To use SNAT for a virtual interface that is in the same WAN trunk as the physical interface to which the virtual interface is bound, the virtual interface and physical interface must be in different subnets. Otherwise, select a pre-defined address (group) to use as the source IP address(es) of the packets that match this route.
Health Check	
Disable policy route automatically while Interface link down	Select this to allow the interface to regularly check the connection to the gateway you specified to make sure it is still available. You specify how often the interface checks the connection, how long to wait for a response before the attempt is a failure, and how many consecutive failures are required before the Nebula Device stops routing to the gateway. The Nebula Device resumes routing to the gateway the first time the gateway passes the connectivity check.
Enable Connectivity Check	Select this to turn on the connection check.

Table 119 Site-wide > Configure > Firewall > Routing: Policy Route: Add/Edit (continued)

LABEL	DESCRIPTION
Check Method	Select the method that the gateway allows. Select ICMP to have the Nebula Device regularly ping the gateway you specify to make sure it is still available. Select TCP to have the Nebula Device regularly perform a TCP handshake with the gateway you specify to make sure it is still available.
Check Period	Enter the number of seconds between connection check attempts.
Check Timeout	Enter the number of seconds to wait for a response before the attempt is a failure.
Check Fail Tolerance	Enter the number of consecutive failures before the Nebula Device stops routing through the gateway.
Check These Address	Specify one or two domain names or IP addresses for the connectivity check. You can enter an IPv4 address in one field and a domain name in the other. For example, enter "192.168.1.2" in the top field and "www.zyxel.com" in the bottom field.
Check Succeeds When	This field applies when you specify two domain names or IP addresses for the connectivity check. Select Any if you want the check to pass if at least one of the domain names or IP addresses responds. Select All if you want the check to pass only if both domain names or IP addresses respond.
Cancel	Click this button to exit this screen without saving.
Save	Click this button to save your changes and close the screen.

8.3.4.2 Static Route

Click the Add button in the Static Route section of the Site-wide > Configure > Firewall > Routing: Static Route screen to open the following screen.

Figure 176 Site-wide > Configure > Firewall > Routing: Static Route



The following table describes the labels in this screen.

Table 120 Site-wide > Configure > Firewall > Routing: Static Route

LABEL	DESCRIPTION
Name	This is the name of the static route entry. Enter a name to identify this rule. You can use up to 30 single-byte characters, including [a-zA-Z_-][a-zA-Z0-9_-]. The first character cannot be a number. Note: The Name is not editable after you save it.
Destination	This parameter specifies the IP network address of the final destination. Routing is always based on network number. If you need to specify a route to a single host, enter the specific IP address here.

Table 120 Site-wide > Configure > Firewall > Routing: Static Route (continued)

LABEL	DESCRIPTION
Next Hop Type	Select Gateway IP to enter the IP address of the next-hop gateway. The gateway is a router or switch on the same segment as your Nebula Device's interface(s). The gateway helps forward packets to their destinations. Select Interface to specify a predefined interface through which the traffic is sent. Select Gateway Object to route the matched IPv6 packets through a 6to4 tunnel to the packets' destination.
Next Hop	Enter the IP address of the next-hop gateway.
Metric (0–127)	Metric represents the “cost” of transmission for routing purposes. IP routing uses hop count as the measurement of cost, with a minimum of 1 for directly connected networks. Enter a number that approximates the cost for this link. The number need not be precise, but it must be 0 – 127. In practice, 2 or 3 is usually a good number.
Description	Enter a descriptive name for the static route. You can use up to 512 single-byte characters including special characters.
	Click this icon to remove a static route.
Add	Click this button to create a new static route.

8.3.4.3 WAN Load Balancing

Go to Site-wide > Configure > Firewall > Routing: WAN Load Balancing to configure WAN load balancing.

By default, the Nebula Device adds all WAN interfaces to a load balancing group, and balances the traffic load between interfaces based on their respective weights (upload bandwidth). An interface with a larger weight gets more chances to transmit traffic than an interface with a smaller weight.

For example, if the weight ratio of WAN 1 and WAN 2 interfaces is 2:1, the Nebula Device chooses WAN 1 for two sessions' traffic and WAN 2 for one session's traffic in each round of three new sessions.

Figure 177 Site-wide > Configure > Firewall > Routing: WAN Load Balancing



The following table describes the labels in this section.

Table 121 Site-wide > Configure > Firewall > Routing: WAN Load Balancing

LABEL	DESCRIPTION
Weight Round Robin	Displays the WAN interfaces that are in the WAN load balancing group.
Backup interface	Select this to assign one WAN interface as the backup interface. The backup interface is removed from the WAN load balancing group, and handles all traffic if all load balancing interfaces are down.


8.3.5 NAT

The NAT summary screen provides a summary of all NAT rules and their configuration. In addition, this screen allows you to create new NAT rules and edit and delete existing NAT rules.

Note: When adding/modifying/removing a NAT rule, based on the NAT setting NCC will automatically add/modify/remove the incoming security policy (firewall) rule in the Implicit allow rules list in the Site-wide > Configure > Firewall > Security policy.

To access this screen, click Site-wide > Configure > Firewall > NAT. The following screen appears, providing a summary of the existing NAT rules.

Figure 178 Site-wide > Configure > Firewall > NAT

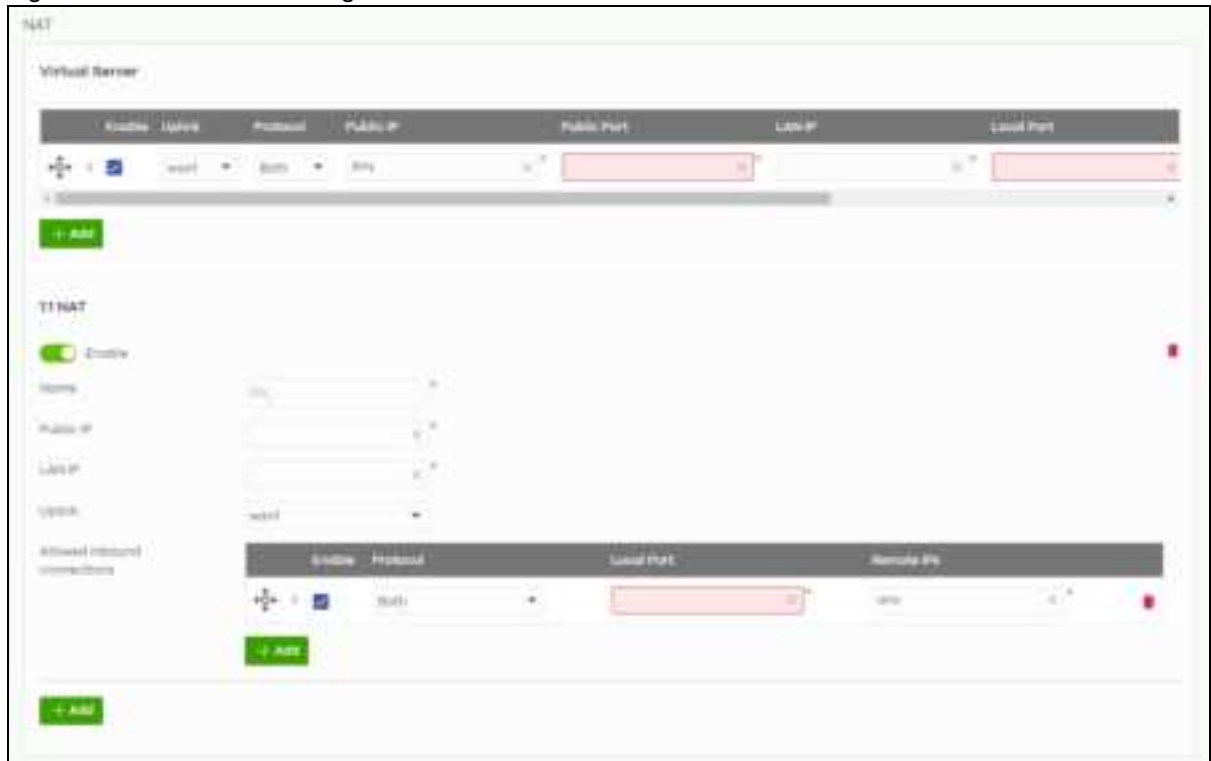

The following table describes the labels in this screen.

Table 122 Site-wide > Configure > Firewall > NAT

LABEL	DESCRIPTION
Virtual Server	
	Click the icon of a rule and drag the rule up or down to change the order.
Enable	Select the checkbox to turn on the rule. Otherwise, clear the checkbox to turn off the rule.
Uplink	Select the interface of the Nebula Device on which packets for the NAT rule must be received.
Protocol	Select the IP protocol to which this rule applies. Choices are: TCP, UDP, and Both.

Table 122 Site-wide > Configure > Firewall > NAT (continued)

LABEL	DESCRIPTION
Public IP	Enter the destination IP address of the packets received by the interface specified in this NAT rule. Note: To enable NAT loop-back, enter a specific IP address instead of Any in this field. NAT loop-back allows communications between two hosts on the LAN behind the Nebula Device through an external IP address,
Public Port	Enter the translated destination port or range of translated destination ports if this NAT rule forwards the packet.
LAN IP	Specify to which translated destination IP address this NAT rule forwards packets.
Local Port	Enter the original destination port or range of destination ports this NAT rule supports.
Allow Remote IPs	Specify the remote IP addresses that are allowed to access the public IP address. You can add multiple IP, specify a range of IP addresses (CIDR), or GEO IP (country) objects. Select Any to allow all IP addresses. Note: IP/CIDR, and GEO IP objects cannot be used at the same time.
Description	This is the descriptive name of the policy.
	Click the remove icon to delete it.
Add	Click this to create a new entry.
1:1 NAT	
Enable	Select this to turn on the rule. Otherwise, turn off the rule.
Name	Enter the name of the NAT rule. The name is used to refer to the NAT rule. You may use 1 – 31 alphanumeric characters, underscores(_), or dashes (-). This value is case-sensitive.
Public IP	Enter the destination IP address of the packets received by the interface specified in this NAT rule.
LAN IP	Specify to which translated destination IP address this NAT rule forwards packets.
Uplink	Select the interface of the Security Firewall on which packets for the NAT rule must be received.
Allowed Inbound connections	
	Click the icon of a rule and drag the rule up or down to change the order.
Enable	Select the checkbox to turn on the rule. Otherwise, clear the checkbox to turn off the rule.
Protocol	Select the IP protocol to which this rule applies. Choices are: TCP, UDP, and Both.
Local Port	Enter the original destination port or range of destination ports this NAT rule supports.
Remote IPs	Specify the remote IP addresses that are allowed to access the public IP address. You can add multiple IP, specify a range of IP addresses (CIDR), or GEO IP (country) objects. Select Any to allow all IP addresses. Note: IP/CIDR, and GEO IP objects cannot be used at the same time.
	Click the remove icon to delete it.
+Add	Click this to create a new entry.

Figure 179 Site-wide > Configure > Firewall > NAT (FLEX H Series only)



The following table describes the labels in this screen.

Table 123 Site-wide > Configure > Firewall > NAT

LABEL	DESCRIPTION
	Click the icon of a rule and drag the rule up or down to change the order.
Enabled	Click this switch to the right to turn on the rule. Otherwise, click the switch to the left to turn off the rule.
Name	Enter the name of the NAT rule. The name is used to refer to the NAT rule. You may use 1 – 31 alphanumeric characters, underscores(_), or dashes (-), but the first character cannot be a number. This value is case-sensitive.
Mapping Type	Select what kind of NAT this rule is to perform. Virtual Server – This makes computers on a private network behind the Nebula Device available to a public network outside the Nebula Device (like the Internet). 1:1 NAT – If the private network server will initiate sessions to the outside clients, select this to have the Nebula Device translate the source IP address of the server's outgoing traffic to the same public IP address that the outside clients use to access the server. Many 1:1 NAT – If you have a range of private network servers that will initiate sessions to the outside clients and a range of public IP addresses, select this to have the Nebula Device translate the source IP address of each server's outgoing traffic to the same one of the public IP addresses that the outside clients use to access the server. The private and public ranges must have the same number of IP addresses. One many 1:1 NAT rule works like multiple 1:1 NAT rules, but it eases configuration effort since you only create one rule.
Incoming interface	Select the External/Internal interface on which packets for the NAT rule must be received. It can be an Ethernet, VLAN or bridge interface.
External IP	Click Add address to specify the destination IP address of the packets received by this NAT rule's specified incoming interface. The specified IP address will be translated to the Internal IP address. Any – Select this to use all of the incoming interface's IP addresses including dynamic addresses or those of any virtual interfaces built upon the selected incoming interface. Custom – Select this to manually enter an IP address in the Custom field. For example, you could enter a static public IP assigned by the ISP without having to create a virtual interface for it. Address – Select a host address object to use the IP address it specifies. The list also includes address objects based on interface IPs. So for example you could select an address object based on a WAN interface even if it has a dynamic IP address.

Table 123 Site-wide > Configure > Firewall > NAT (continued)

LABEL	DESCRIPTION
Internal IP	Select to which translated destination IP address this NAT rule forwards packets, or click Add address to add an IPv4 address. Custom – this NAT rule supports a specific IP address, specified in the Custom field. Address – the drop-down box lists all the HOST address objects in the Nebula Device. If you select one of them, this NAT rule supports the IP address specified by the address object.
Port mapping type	Use the drop-down list box to select how many original destination ports this NAT rule supports for the selected destination IP address (Original IP). Choices are: Any – this NAT rule supports all the destination ports. Port – this NAT rule supports one destination port. Ports – this NAT rule supports a range of destination ports. You might use a range of destination ports for unknown services or when one server supports more than one service. Service – this NAT rule supports a service such as FTP. Service Group – this NAT rule supports a group of services such as all service objects related to DNS.
Protocol	This field is available if Port mapping type is Port or Ports. Select the IP protocol to which this rule applies. Choices are: TCP, UDP, and Any.
External Port	This field is available if Port mapping type is Port. Enter the external destination port this NAT rule supports.
Internal Port	This field is available if Port mapping type is Port. Enter the translated destination port if this NAT rule forwards the packet.
External Start Port	This field is available if Port mapping type is Ports. Enter the beginning of the range of original destination ports this NAT rule supports.
External End Port	This field is available if Port mapping type is Ports. Enter the end of the range of original destination ports this NAT rule supports. Note: The External End Port value must be higher than the External Start Port.
Internal Start Port	This field is available if Port mapping type is Ports. Enter the beginning of the range of translated destination ports if this NAT rule forwards the packet.
ADVANCED OPTIONS	
Enable NAT Loopback	Enable NAT loopback to allow users connected to any interface (instead of just the specified Incoming Interface) to use the NAT rule's specified External IP address to access the Internal IP device. For users connected to the same interface as the Internal IP device, the Nebula Device uses that interface's IP address as the source address for the traffic it sends from the users to the Internal IP device. For example, if you configure a NAT rule to forward traffic from the WAN to a LAN server, enabling NAT loopback allows users connected to other interfaces to also access the server. For LAN users, the Nebula Device uses the LAN interface's IP address as the source address for the traffic it sends to the LAN server. If you do not enable NAT loopback, this NAT rule only applies to packets received on the rule's specified incoming interface.
	Click the modify icon to change it.
	Click the remove icon to delete it.
+Add	Click this to create a new entry.


8.3.6 Site-to-Site VPN

A virtual private network (VPN) provides secure communications between sites without the expense of leased site-to-site lines. Use this screen to configure a VPN rule.

Note: Site-to-site VPN does not support both VPN sites behind NAT mode.

The following figure shows two routers (R1, R2) with NAT mode enabled. Site-to-site VPN between the two Firewall devices (F1, F2) is not allowed.

Figure 180 Two VPN Sites Behind NAT Example

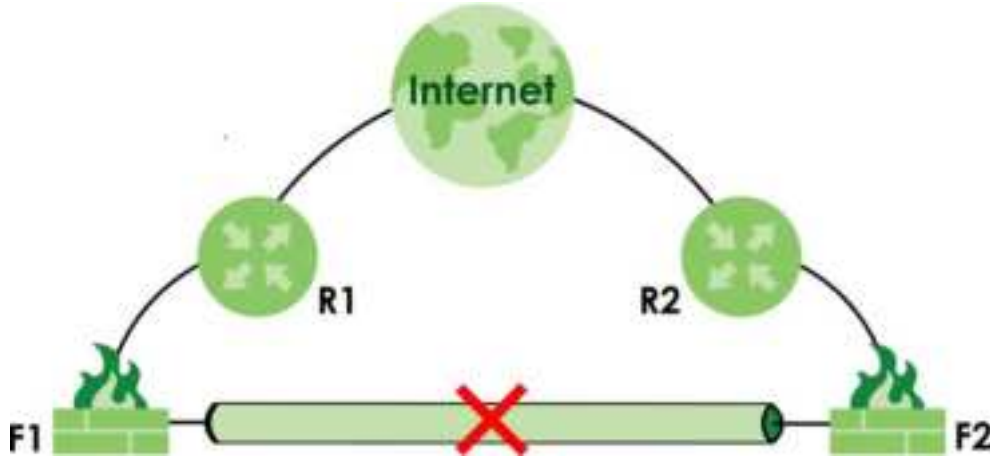

Click Site-wide > Configure > Firewall > Site-to-Site VPN to access this screen.

Figure 181 Site-wide > Configure > Firewall > Site-to-Site VPN

Site-to-Site VPN

Network VPN

Primary interface:

Secondary interface:

Local networks:

Name	Subnet	Use VPN
wan	192.168.40.0/24	☒
lan	192.168.41.0/24	☒

SD-VPN

Enabled: ☒

VPN area:

VPN topology: Soft tunnel (sent only site-to-site traffic over the VPN)

Hub-and-spoke:

Hub (peers connect to):

ADVANCED OPTIONS

Script to launch VPN: ☒

Auto communication: ☐

NAT traversal: ☐ None ☒ Custom IP

Peer VPN networks:

Network	Subnet(s)

(Configuring VPNs with multiple sites is cumbersome. Use [VPN Configuration](#) to save your time.)

Auto-Link VPN

Site-wide settings

Options in this section apply to the Network gateway only.

Enabled	Name	Public IP	Private subnet	Peer public	Pre-shared secret	Available
☒				Default		☒

Figure 182 Site-wide > Configure > Firewall > Site-to-Site VPN > Nebula SD-VPN (FLEX H Series only)

Site-to-Site VPN

Website SD-VPN Manual Site VPN **Enable**

Primary interface:

Secondary interface:

Local networks

Name	Subnet	Use VPN
lan1	192.168.1.0/24	☒
lan2	192.168.1.0/24	☒

Enabled: ☒

VPN Area:

VPN Gateway: Split tunnel (Send only site-to-site traffic over the VPN)

Hub-and-Spoke:

Make peers connect to:

ADVANCED OPTIONS

Split to specific VPN: ☒

Area communication: ☐

NAT traversal: ☐ None ☒ Custom

Peer VPN networks

Name	Subnet

Configuring VPN with multiple sites is cumbersome. Use [VPN QuickStart](#) to speed your time.

The following table describes the labels in this screen.

Table 124 Site-wide > Configure > Firewall > Site-to-Site VPN

LABEL	DESCRIPTION
Primary interface	Specify the primary WAN interface through which the Nebula Device forwards VPN traffic.
Secondary interface	Specify the secondary WAN interface through which the Nebula Device forwards VPN traffic (if any). This is the backup interface for VPN failover use.
Local networks	This shows the local networks behind the Nebula Device. Note: Non-Nebula VPN peers use the first interface with a local policy. For example, both lan1 and lan2 are enabled. The first interface in the list 'lan1' will be used. Regardless of the order they are created.
Name	This shows the network name.
Subnet	This shows the IP address and subnet mask of the computer on the network.
Use VPN	Select ON to allow the computers on the network to use the VPN tunnel. Otherwise, select OFF.
SD-VPN	Click this to enable or disable site-to-site VPN on the site's Nebula Device.
Enabled	If you disable this setting, the site will leave the VPN area.

Table 124 Site-wide > Configure > Firewall > Site-to-Site VPN (continued)

LABEL	DESCRIPTION
VPN Area	Select the VPN area of the site. For details, see Section 12.4.4.2 on page 745 .
VPN topology	Click this to select a topology for the VPN area. For details on topologies, see Section 12.4.4.1 on page 744 . Select disable to disable VPN connections for all sites in the VPN area.
Hubs (peers to connect to)	This field displays the hub sites that the current site is connected to, when Topology is set to Hub-and-Spoke. You can configure hub sites at Organization-wide > Organization-wide manage > VPN orchestrator.
ADVANCED OPTIONS	
Branch to branch VPN	Enable this to allow spoke sites to communicate with each other in the VPN area. When disabled, spoke sites can only communicate with hub sites.
Area communication	Enable this to allow the site to communicate with sites in different VPN areas within the organization.
NAT traversal	If the Nebula Device is behind a NAT router, select Custom to enter the public IP address or the domain name that is configured and mapped to the Nebula Device on the NAT router. Note: To allow a site-to-site VPN connection, the NAT router must have the following ports open: UDP 500, 4500.
Peer VPN networks	This shows all sites within the VPN area.
Auto-Link VPN peers	Configure this section to add a non-Nebula gateway to the VPN area.
Site-wide settings	
+ Add	Click this button to add a non-Nebula gateway to the VPN area.
Enabled	Select the checkbox to enable VPN connections to the non-Nebula gateway.
Name	Enter the name of the non-Nebula gateway.
Public IP	Enter the public IPv4 address or FQDN of the non-Nebula gateway.
Private subnet	Enter the IP subnet that will be used for VPN connections. The IP range must be reachable from other devices in the VPN area.
IPSec policy	Click to select a pre-defined policy or have a custom one.
Pre-shared secret	Enter a pre-shared key (password). The Nebula Device and peer gateway use the key to identify each other when they negotiate the IKE SA.
Availability	Select which sites the non-Nebula gateway can connect to in the VPN area. Select All sites to allow the non-Nebula gateway to connect to any site in the VPN area. Select This site and the non-Nebula gateway can only connect to the Nebula Device in this site.
Address (physical location)	Enter the address (physical location) of the remote device. You can find this on the VPN Topology section on this screen.
	Click the remove icon to delete a non-Nebula gateway from the VPN area.

Figure 183 Site-wide > Configure > Firewall > Site-to-Site VPN > Manual-link VPN (FLEX H Series only)

[illegible]

The following table describes the labels in this screen.

Table 125 Site-wide > Configure > Firewall > Site-to-Site VPN > Manual-link VPN (FLEX H Series only)

LABEL	DESCRIPTION
Enable	Slide the switch to the right to activate this VPN connection.
Name	Enter the name used to identify this rule. You may use 1–31 single-byte characters, including 0–9a–zA–Z, underscores (_), or dashes (-), but the first character cannot be a number. This value is case-sensitive.
IKE version	Select IKEv1 or IKEv2. IKEv1 and IKEv2 applies to IPv4 traffic only. IKE (Internet Key Exchange) is a protocol used in setting up security associations that allows two parties to send data securely.
Type	Select Policy-based to create a VPN rule that encrypts traffic based on the IPv4 addresses you set in Local ID and Remote ID. Select Route-based to create a VPN rule that encrypts traffic based on the static route settings.
My address	Select an interface (Ethernet, VLAN, PPPoE, Bridge) or enter the IPv4 address or domain name (FQDN) of the interface the VPN connection uses to transmit packets out of the Nebula Device.
Peer gateway address	Enter the WAN IPv4 address or domain name of the remote IPsec device to identify the remote IPsec router by its IP address or domain name.
Zone	Select a zone for the IPsec policy. Note: Incorrect zone selection may cause traffic to be blocked by a security feature such as firewall.
Authentication	Select Pre-shared key to have the Nebula Device and remote IPsec router use a pre-shared key (password) of 8 to 128 characters to identify each other when they negotiate the IKE SA. Enter the pre-shared key in the field to the right. The pre-shared key can be 8 to 128 single-byte characters, including [0–9][a–z][A–Z]['(){}<>^`+/:!*_#@&=\$\.%~% ;-"] The Nebula Device and remote IPsec router must use the same pre-shared key. Click the eye icon to see the pre-shared key in readable plain text. Select Certificate to use one of the Nebula Device certificates for authentication.
Advanced settings	
Local ID	Enter one of the following to identify the Nebula Device during authentication. IPv4 – the Nebula Device is identified by an IP address DNS – the Nebula Device is identified by a domain name E-mail – the Nebula Device is identified by the string specified in this field
Remote ID	Enter one of the following to identify the remote IPsec router during authentication. IPv4 – the remote IPsec router is identified by an IP address DNS – the remote IPsec router is identified by a domain name E-mail – the remote IPsec router is identified by the string specified in this field If the Nebula Device and remote IPsec router use certificates, there is one more choice. Subject Name – the remote IPsec router is identified by the subject name in the certificate
Phase 1 Settings	This establishes a secure tunnel between the Nebula Device and the peer site.
SA Life time	Set how often the Nebula Device renegotiates the IKE SA. A short SA life time increases security, but renegotiation temporarily disconnects the VPN tunnel. The value you set for the SA life time in Phase 1 Settings should be greater than or equal to the value you set for the SA life time in Phase 2 Settings.

Table 125 Site-wide > Configure > Firewall > Site-to-Site VPN > Manual-link VPN (FLEX H Series only)

LABEL	DESCRIPTION
Proposal (minimum of 1 and maximum of 5)	
Encryption	Select which key size and encryption algorithm to use in the IPSec SA. Choices are: DES – a 56-bit key with the DES encryption algorithm 3DES – a 168-bit key with the DES encryption algorithm AES128 – a 128-bit key with the AES encryption algorithm AES192 – a 192-bit key with the AES encryption algorithm AES256 – a 256-bit key with the AES encryption algorithm The Nebula Device and the remote IPSec router must both have at least one proposal that uses the same encryption and the same key. Longer keys are more secure, but require more processing power, resulting in increased latency and decreased throughput.
Authentication	Select which hash algorithm to use to authenticate packet data in the IPSec SA. Choices are MD5, SHA1, SHA256, SHA384 and SHA512. SHA is generally considered stronger than MD5, but it is also slower. The Nebula Device and the remote IPSec router must both have a proposal that uses the same authentication algorithm.
Diffie-Hellman group	Select which Diffie-Hellman key group (DHx) you want to use to create encryption keys. Choices are DH2, DH5, DH14, DH15, DH16, DH19, DH20, DH21, DH28, DH29, and DH30. The longer the key, the more secure the encryption, but also the longer it takes to encrypt and decrypt information. The Nebula Device and the remote IPSec router must use the same DH key group. Different operating systems may support different DH key groups. Check your operating system documentation. - For Windows VPN clients, Zyxel SecuExtender perpetual VPN clients versions 3.8.203.61.32 and earlier support DH1 to DH14. - For macOS VPN clients, Zyxel SecuExtender subscription VPN clients versions 1.2.0.7 and later support DH14 to DH21. For Windows VPN clients, Zyxel SecuExtender subscription VPN clients versions 5.6.80.007 and later support DH14 to DH21. - Windows versions 7, 10, 11 built-in IKEv2 VPN clients support DH2 by default. - macOS versions 14.2 and later built-in IKEv2 VPN clients support DH14 by default. - iOS versions 10.15 and later built-in IKEv2 VPN clients support DH14 by default. Note: Minimum of 1 and maximum of 5.
Advanced settings	
DPD delay	Configure this field if you want the Nebula Device to make sure the remote IPSec router is there before it transmits data through the IKE SA. The remote IPSec router must support Dead Peer Detection (DPD). Set how many seconds (0–1000) the Nebula Device will wait before sending a message to the remote IPSec router if there has been no traffic. If the remote IPSec router responds, the Nebula Device transmits the data. If the remote IPSec router does not respond, the Nebula Device shuts down the IKE SA. This field applies for IKEv1 only. DPD is always performed when you use IKEv2.
UDP encapsulation	Enable to encrypt a UDP connection.
Phase 2 Settings	This secures the actual data transmission between the Nebula Device and the peer site, based on the secure key settings established in Phase 1.

Table 125 Site-wide > Configure > Firewall > Site-to-Site VPN > Manual-link VPN (FLEX H Series only)

LABEL	DESCRIPTION
Initiation	Select how Phase 2 of the IPSec connection is established on the Nebula Device. Auto: Select this to have the Nebula Device listen for incoming traffic and automatically establish the Phase 2 of the IPSec connection when traffic is detected. Nailed-up: Select this to have the Nebula Device initiate Phase 2 of the IPSec connection. The Nebula Device automatically renegotiates the IPSec SA when the SA lifetime expires, ensuring the continuity of the connection. Responder only: Select this to have the Nebula Device wait for the peer site to initiate the Phase 2 of the IPSec connection.
Policy	
Local	Enter the address corresponding to the local network.
Remote	Enter the address corresponding to the remote network.
Protocol	Select the protocol required to use this translation. Choices are: TCP, UDP, ICMP, GRE or Any.
Edit	Select an entry and click this to edit the entry.
Remove	Select an entry and click this to remove the entry.
+Add	Click this to add an entry.
SA Life time	Set how often the Nebula Device renegotiates the IKE SA. A short SA life time increases security, but renegotiation temporarily disconnects the VPN tunnel. The value you set for the SA life time in Phase 2 Settings should be lesser than or equal to the value you set for the SA life time in Phase 1 Settings.
Proposal (minimum of 1 and maximum of 5)	
Encryption	Select which key size and encryption algorithm to use in the IPSec SA. Choices are: DES – a 56-bit key with the DES encryption algorithm 3DES – a 168-bit key with the DES encryption algorithm AES128 – a 128-bit key with the AES encryption algorithm AES192 – a 192-bit key with the AES encryption algorithm AES256 – a 256-bit key with the AES encryption algorithm The Nebula Device and the remote IPSec router must both have at least one proposal that uses the same encryption and the same key. Longer keys are more secure, but require more processing power, resulting in increased latency and decreased throughput.
Authentication	Select which hash algorithm to use to authenticate packet data in the IPSec SA. Choices are MD5, SHA1, SHA256, SHA384 and SHA512. SHA is generally considered stronger than MD5, but it is also slower. The Nebula Device and the remote IPSec router must both have a proposal that uses the same authentication algorithm.
Edit	Select an entry and click this to edit the entry.
Remove	Select an entry and click this to remove the entry.
+Add	Click this to add an entry.

Table 125 Site-wide > Configure > Firewall > Site-to-Site VPN > Manual-link VPN (FLEX H Series only)

LABEL	DESCRIPTION
Perfect forward secrecy (PFS)	Select which Perfect Forward Secrecy (PFS) you want to use to create encryption keys. Choices are DH2, DH5, DH14, DH15, DH16, DH19, DH20, DH21, DH28, DH29, and DH30. The longer the key, the more secure the encryption, but also the longer it takes to encrypt and decrypt information. The Nebula Device and the remote IPsec router must use the same DH key group. Note: Minimum of 1 and maximum of 5.
NAT rule	This is available if the VPN type is Policy-based. This table can be empty or maximum of 20 rules.
Priority	Select the priority for the entry. The smaller the number, the higher the priority.
Original IP	Select the address object that represents the originating destination address. IP address of the sender in the remote network.
Type	SNAT: Select this when there are no overlapping local and remote VPN IP addresses. 1:1 NAT: Select this to avoid overlapping local and remote VPN IP addresses. The peer IPsec router must create identical mirror configurations.
Mapped IP	When Type is SNAT: Enter an IP address in the local IP address range to map the sender's source IP address for the VPN rule. When Type is 1:1 NAT: Enter an IP address or subnet in the Local IP address range to map the sender's source IP address or subnet for the VPN rule (SNAT). The local IP address range must not conflict with the peer's local IP address range. In the peer IPsec router, the destination IP from the sender is mapped to the local IP address of the receiver (DNAT). Note: When Type is 1:1 NAT, then Original IP and Mapped IP must have the same range (same total number of IPv4 address).
Edit	Select an entry and click this to edit the entry.
Remove	Select an entry and click this to remove the entry.
+Add	Click this to add an entry.
VTI Settings (Selecting Policy-based in Type will not support the VTI settings.)	
Name	Enter a name to identify this rule. You can use up to 15 single-byte characters, including -A-Za-z0-9._@. The prefix has 4 characters so that means you can only input 11 characters.
Local IP	Enter an IPv4 address for this connection. IPsec VPN Tunnel Interface (VTI) encrypts or decrypts IPv4 traffic from or to the interface according to the IP routing table.
Subnet mask	Enter the subnet mask of the local networks behind the custom peer gateway.
Route Settings (Selecting Policy-based in Type will not support the Route settings.)	
Policy	
Remote	Specify the remote IP addresses that are allowed to access the public IP address in single CIDR format, for example 192.168.10.0/24.
Metrics	Metric represents the "cost" of transmission for routing purposes. IP routing uses hop count as the measurement of cost, with a minimum of 1 for directly connected networks. Enter a number that approximates the cost for this link. The number need not be precise, but it must be 0–127. In practice, 2 or 3 is usually a good number.
Description	Enter a description to help identify this policy. You can use alphanumeric and ()+/:=?!*#@\$_%- characters, and it can be up to 512 characters long. The default description is 'IPsec VPN: xxx' where 'xxx' is VPN rule name.
+Add	Click this to add an entry.

8.3.6.1 IPsec Policy

Click the Default button in the Non-Nebula VPN peers section of the Site-wide > Configure > Firewall > Site-to-Site VPN screen to access this screen.

Figure 184 Site-wide > Configure > Firewall > Site-to-Site VPN: IPsec Policy

Custom X

Preset: Default

Phase 1

IKE version: IKEv1

Encryption: AES256

Authentication: SHA256

Diffie-Hellman group: DH2

Lifetime (seconds): 3600

Phase 2

Set	Encryption	Authentication
Set 1	AES256	SHA256
Set 2	None	None
Set 3	None	None

PFS group: DH2

Lifetime (seconds): 28800

Connectivity check: ☐

Close OK

The following table describes the labels in this screen.

Table 126 Site-wide > Configure > Firewall > Site-to-Site VPN: IPsec Policy

LABEL	DESCRIPTION
Preset	Select a pre-defined IPsec policy, or select Custom to configure the policy settings yourself.
Phase1	IPsec VPN consists of two phases: Phase 1 (Authentication) and Phase 2 (Key Exchange). A phase 1 exchange establishes an IKE SA (Security Association).
IKE version	Select IKEv1 or IKEv2. IKEv1 and IKEv2 applies to IPv4 traffic only. IKE (Internet Key Exchange) is a protocol used in setting up security associations that allows two parties to send data securely.

Table 126 Site-wide > Configure > Firewall > Site-to-Site VPN: IPsec Policy (continued)

LABEL	DESCRIPTION
Encryption	Select which key size and encryption algorithm to use in the IKE SA. Choices are: DES – a 56-bit key with the DES encryption algorithm 3DES – a 168-bit key with the DES encryption algorithm AES128 – a 128-bit key with the AES encryption algorithm AES192 – a 192-bit key with the AES encryption algorithm AES256 – a 256-bit key with the AES encryption algorithm The Nebula Device and the remote IPSec router must use the same key size and encryption algorithm. Longer keys require more processing power, resulting in increased latency and decreased throughput.
Authentication	Select which hash algorithm to use to authenticate packet data in the IKE SA. Choices are SHA128, SHA256, SHA512 and MD5. SHA is generally considered stronger than MD5, but it is also slower. The remote IPSec router must use the same authentication algorithm.
Diffie-Hellman group	Select which Diffie-Hellman key group (DHx) you want to use for encryption keys. Choices are: DH1 – use a 768-bit random number Modular Exponential (MODP) DH group DH2 – use a 1024-bit random number MODP DH5 – use a 1536-bit random number MODP DH14 – use a 2048-bit random number MODP DH19 – use a 256-bit random number elliptic curve group DH20 – use a 384-bit random number elliptic curve group DH21 – use a 521-bit random number elliptic curve group The longer the key, the more secure the encryption, but also the longer it takes to encrypt and decrypt information. Both routers must use the same DH key group.
Lifetime (seconds)	Enter the maximum number of seconds the IKE SA can last. When this time has passed, the Nebula Device and remote IPSec router have to update the encryption and authentication keys and re-negotiate the IKE SA. This does not affect any existing IPSec SAs, however.
Advanced	Click this to display a greater or lesser number of configuration fields.
Mode	Set the negotiation mode. Main encrypts the Nebula Device's and remote IPSec router's identities but takes more time to establish the IKE SA. Aggressive is faster but does not encrypt the identities.
Local ID	Enter an identifier used to identify the Nebula Device during authentication. This can be an IP address or hostname.
Peer ID	Enter an identifier used to identify the remote IPSec router during authentication. This can be an IP address or hostname.
Phase2	Phase 2 uses the SA that was established in phase 1 to negotiate SAs for IPSec.

Table 126 Site-wide > Configure > Firewall > Site-to-Site VPN: IPsec Policy (continued)

LABEL	DESCRIPTION
Encryption	Select which key size and encryption algorithm to use in the IPsec SA. Choices are: (None) – no encryption key or algorithm DES – a 56-bit key with the DES encryption algorithm 3DES – a 168-bit key with the DES encryption algorithm AES128 – a 128-bit key with the AES encryption algorithm AES192 – a 192-bit key with the AES encryption algorithm AES256 – a 256-bit key with the AES encryption algorithm The Nebula Device and the remote IPsec router must both have at least one proposal that uses the same encryption and the same key. Longer keys are more secure, but require more processing power, resulting in increased latency and decreased throughput.
PFS group	Select whether or not you want to enable Perfect Forward Secrecy (PFS) and, if you do, which Diffie-Hellman key group to use for encryption. Choices are: None – disable PFS DH1 – enable PFS and use a 768-bit random number DH2 – enable PFS and use a 1024-bit random number DH5 – enable PFS and use a 1536-bit random number DH14 – enable PFS and use a 2048-bit random number PFS changes the root key that is used to generate encryption keys for each IPsec SA. The longer the key, the more secure the encryption, but also the longer it takes to encrypt and decrypt information. Both routers must use the same DH key group. PFS is ignored in initial IKEv2 authentication but is used when re-authenticating.
Lifetime (seconds)	Enter the maximum number of seconds (180–3000000) the IPsec SA can last. Shorter life times provide better security. The Nebula Device automatically negotiates a new IPsec SA before the current one expires, if there are users who are accessing remote resources.
Connectivity check	Enter an IP address that the Nebula Device can ping, to check whether the non-Nebula VPN peer gateway is available. Note: By default, NCC will use the private subnet IP address to do connectivity check.
Close	Click this button to exit this screen without saving.
OK	Click this button to save your changes and close the screen.

8.3.7 Remote Access VPN

Use this screen to configure the VPN client settings on the Nebula Device. This allows incoming VPN clients to connect to the Nebula Device in order to access the site's network. The clients have dynamic IP addresses and are also known as dial-in users. Only the clients can initiate the VPN tunnel.

Click Site-wide > Configure > Firewall > Remote access VPN to access this screen.

Figure 185 Site-wide > Configure > Firewall > Remote access VPN

Remote access VPN

VPN interface: Auto

Net interface: None

Common mode: pptp-to-l2tp/for-ssl-vpn-to-l2tp

VPN configuration script download: For SSL VPN with IPsec and/or L2TP, click Apply, then download the VPN client script.

IPsec VPN server: ☒

Client VPN address: 192.168.1.0/24

OS version: 4.0.0

OS name server: Specify name server

Custom name server:

Only IP address is one line to specify your network. Maximum number of 1 (comma-separated).

Example: 192.168.1.0/24, 192.168.1.1/24

Upload bandwidth limit: Kbps

Policy: Default

Authentication: NetCloud Authentication [Add account](#)

☒ Two-factor authentication with Captcha Portal

Search for SSL VPN configuration protocol: www.pptp.com.cn

Get the SecuExtender VPN Client software: [Windows](#) [macOS](#)

L2TP VPN server: ☒

Client VPN address: 192.168.1.0/24

OS name server: Specify name server

Custom name server:

Only IP address is one line to specify your network. Maximum number of 1 (comma-separated).

Example: 192.168.1.0/24, 192.168.1.1/24

Policy: Default

Secret:

Authentication: NetCloud authentication [Add account](#)

VPN connection script: www.pptp.com.cn

The following table describes the labels in this screen.

Table 127 Site-wide > Configure > Firewall > Remote access VPN

LABEL	DESCRIPTION
WAN interface	Select the WAN interface which VPN users connect to.
NAT Traversal	If the Nebula Device is behind a NAT router, select + Customize IP to enter the public IP address that is configured and mapped to the Nebula Device on the NAT router. Select None to map to the WAN IP of the Nebula Device. NCC automatically updates the DNS server when the WAN IP changes. Or, select Auto to allow NCC to detect automatically the public IP of your Nebula Device. NCC automatically selects another WAN interface when the selected WAN interface is down. NCC automatically updates the DNS server when the public IP changes.
Domain name	This displays the domain name that maps to a WAN interface IP address. Note: The mapping priority is WAN1, WAN2. This field is available only when you select AUTO in the WAN interface field.
VPN configuration script download	Click the Windows, iOS/macOS or Android (strongSwan) icon to download a ZIP file containing the VPN remote access configuration script. After unzipping, save the certificate (.crt) and script (.bat) files to the same folder in your computer. This field is available only when you enable IPsec VPN server with IKEv2 in IKE version field or L2TP VPN server and the Nebula Device is online. The Android (strongSwan) option is available only for IPsec VPN server with IKEv2 in IKE version field. Note: For iOS/macOS, the default authentication type is Certificate. To enter the user name and password, change the user authentication type to Username.
IPsec VPN server	Select this to enable the IPsec VPN server.
Client VPN subnet	Specify the IP addresses that the Nebula Device uses to assign to the VPN clients. The default subnet is 192.168.50.0/24.
IKE version	Select IKEv1 or IKEv2. IKE (Internet Key Exchange) is a protocol used in setting up security associations that allows two parties to send data securely.
DNS name servers	Specify the DNS servers to assign to the remote users. Or select Specify nameserver to enter a static IP address.
Custom name servers	If you select Specify nameserver in the DNS name servers field, manually enter the DNS server IP addresses.
Upload Bandwidth Limit	This field is available only if you select IKEv2 in IKE version. Enter the maximum traffic load between VPN clients, 1 – 100 Mbps.
Policy	Configure custom VPN tunnel settings. For details, see Section 8.3.7.1 on page 556.
Authentication	Select how the Nebula Device authenticates a remote user before allowing access to the VPN tunnel. Click Create a cloud auth account to create a Nebula Cloud Authentication Server user account. This will automatically add the site where you create remote access VPN setup to the Organization-wide > Organization-wide manage > Cloud authentication > User screen and bypass two-factor authentication.
Two-factor authentication with Captive Portal	Select this to require two-factor authentication for a user to access the Nebula Device through VPN. Note: Two-factor authentication is only supported with Zyxel SecuExtender IPsec client.

Table 127 Site-wide > Configure > Firewall > Remote access VPN (continued)

LABEL	DESCRIPTION
SecuExtender IKEv2 VPN configuration provision	Enter the email address to send new IKEv2 Remote Access VPN configuration file to VPN client. Then click Send Email. The VPN client needs to replace the IPSec VPN client configuration by importing the configuration file.
Get the SecuExtender VPN Client software	Click the Windows or macOS icon to download the SecuExtender VPN client software.
VPN configuration script download	Click the Windows, iOS/macOS or Android (strongSwan) icon to download a ZIP file containing the VPN remote access configuration script. After unzipping, save the certificate (.crt) and script (.bat) files to the same folder in your computer. This field is available only when you enable IPSec VPN server with IKEv2 in IKE version field or L2TP VPN server and the Nebula Device is online. The Android (strongSwan) option is available only for IPSec VPN server with IKEv2 in IKE version field. Note: For iOS/macOS, the default authentication type is Certificate. To enter the user name and password, change the user authentication type to Username.
L2TP VPN server	Select this to enable the L2TP over IPSec VPN server.
Client VPN subnet	Specify the IP addresses that the Nebula Device uses to assign to the VPN clients. The default L2TP VPN subnet is 192.168.51.0/24. This is the same for all the sites in your organization.
DNS name servers	Specify the DNS servers to assign to the remote users. Or select Specify nameserver to enter a static IP address.
Custom nameservers	If you select Specify nameserver in the DNS name servers field, manually enter the DNS server IP addresses.
Policy	Configure custom VPN tunnel settings. For details, see Section 8.3.7.1 on page 556.
Secret	This field is available only if you select IKEv1 in IKE version. Enter the pre-shared key (password) which is used to set up the VPN tunnel. The password should be 8 – 32 characters.
Authentication	Select how the Nebula Device authenticates a remote user before allowing access to the VPN tunnel. Click +Add account to create a Nebula Cloud Authentication Server user account. This will automatically add the site where you create remote access VPN setup to the Organization-wide > Organization-wide manage > Cloud authentication > User screen and bypass two-factor authentication.
VPN provision script	Send an email to help automatically configure VPN settings on client devices so that the devices can remotely access this Nebula Device. The email contains two scripts; one for macOS and iOS devices, and one for Windows 8 and Windows 10 devices. You can send the email to one or more email addresses. - If Authentication is set to Nebula Cloud Authentication, the default email address list contains all authorized VPN user email addresses and your email address. - If Authentication is set to AD and RADIUS Authentication, the default email address list contains your user email address. This field is available only when you select L2TP over IPSec client in the Client VPN server field.

8.3.7.1 Remote Access VPN > Custom VPN Policy

Click Default in Site-wide > Configure > Firewall > Remote access VPN > Policy to open the following screen.

Figure 186 Site-wide > Configure > Firewall > Remote access VPN: Default

Custom

Preset: Default

Phase 1

Encryption: AES256

Authentication: SHA256

Diffie-Hellman group: DH14

Lifetime (seconds): 86400

Phase 2

Set	Encryption	Authentication
Set 1	AES256	SHA256

IPSec group: None

Lifetime (seconds): 28800

Close OK

The following table describes the labels in this screen.

Table 128 Site-wide > Configure > Firewall > Remote access VPN: Default

LABEL	DESCRIPTION
Custom	
Preset	Select a pre-defined IPSec policy, or select Custom to configure the policy settings yourself.
Phase 1	
Encryption	Select which key size and encryption algorithm to use in the IPSec SA. Choices are: (None) – no encryption key or algorithm DES – a 56-bit key with the DES encryption algorithm 3DES – a 168-bit key with the DES encryption algorithm AES128 – a 128-bit key with the AES encryption algorithm AES192 – a 192-bit key with the AES encryption algorithm AES256 – a 256-bit key with the AES encryption algorithm The Nebula Device and the remote IPSec router must both have at least one proposal that use the same encryption and the same key. Longer keys are more secure, but require more processing power, resulting in increased latency and decreased throughput.

Table 128 Site-wide > Configure > Firewall > Remote access VPN: Default (continued)

LABEL	DESCRIPTION
Authentication	Select which hash algorithm to use to authenticate packet data in the IKE SA. Choices are SHA128, SHA256, SHA512 and MD5. SHA is generally considered stronger than MD5, but it is also slower. The remote IPSec router must use the same authentication algorithm.
Diffie-Hellman group	Select the Diffie-Hellman key group (DHx) you want to use for encryption keys. Choices are: DH1 – use a 768-bit random number Modular Exponential (MODP) DH group DH2 – use a 1024-bit random number MODP DH5 – use a 1536-bit random number MODP DH14 – use a 2048-bit random number MODP DH19 – use a 256-bit random number elliptic curve group DH20 – use a 384-bit random number elliptic curve group DH21 – use a 521-bit random number elliptic curve group The longer the key, the more secure the encryption, but also the longer it takes to encrypt and decrypt information. Both routers must use the same DH key group.
Lifetime (seconds)	Enter the maximum number of seconds the IPSec SA can last. Shorter life times provide better security. The Nebula Device automatically negotiates a new IPSec SA before the current one expires, if there are users who are accessing remote resources.
Phase 2	
Set	This shows the index number of the IPSec policy.
Encryption	Select which key size and encryption algorithm to use in the IPSec SA. Choices are: (None) – no encryption key or algorithm DES – a 56-bit key with the DES encryption algorithm 3DES – a 168-bit key with the DES encryption algorithm AES128 – a 128-bit key with the AES encryption algorithm AES192 – a 192-bit key with the AES encryption algorithm AES256 – a 256-bit key with the AES encryption algorithm The Nebula Device and the remote IPSec router must both have at least one proposal that use the same encryption and the same key. Longer keys are more secure, but require more processing power, resulting in increased latency and decreased throughput.
Authentication	Select which hash algorithm to use to authenticate packet data in the IKE SA. Choices are None, SHA128, SHA256, SHA512 and MD5. SHA is generally considered stronger than MD5, but it is also slower. The remote IPSec router must use the same authentication algorithm.

Table 128 Site-wide > Configure > Firewall > Remote access VPN: Default (continued)

LABEL	DESCRIPTION
PFS group	Select whether or not you want to enable Perfect Forward Secrecy (PFS) and, if you do, which Diffie-Hellman key group to use for encryption. Choices are: None – disable PFS DH1 – enable PFS and use a 768-bit random number DH2 – enable PFS and use a 1024-bit random number DH5 – enable PFS and use a 1536-bit random number DH14 – enable PFS and use a 2048 bit random number PFS changes the root key that is used to generate encryption keys for each IPSec SA. The longer the key, the more secure the encryption, but also the longer it takes to encrypt and decrypt information. Both routers must use the same DH key group. PFS is ignored in initial IKEv2 authentication but is used when re-authenticating.
Lifetime (seconds)	Enter the maximum number of seconds the IPSec SA can last. Shorter life times provide better security. The Security Firewall automatically negotiates a new IPSec SA before the current one expires, if there are users who are accessing remote resources.
Close	Click this button to exit this screen without saving.
OK	Click this button to save your changes and close the screen.

8.3.8 Security Policy

By default, a LAN user can initiate a session from within the LAN and the Nebula Device allows the response. However, the Nebula Device blocks incoming traffic initiated from the WAN and destined for the LAN. Use this screen to configure firewall rules for outbound traffic, application patrol and content filter, schedule profiles and port forwarding rules for inbound traffic.

Click Site-wide > Configure > Firewall > Security policy to access this screen.

Note: The Nebula Device has the following hidden default firewall rules: LAN to WAN is allowed, WAN to LAN is blocked.

Figure 187 Site-wide > Configure > Firewall > Security policy

The screenshot displays the 'Security policy' configuration page in the Security Center console. The 'Ingress' tab is selected, showing a table of ingress rules. The first rule is highlighted, showing its details: Name: ingress-rule-1, Action: allow, Source: 10.0.0.0/24, Destination: 10.0.0.0/24, App Port: 80, Schedule: always, and Description: Allow HTTP traffic. The 'Egress' tab is also visible, showing a single egress rule. The 'Automatic Detection and Prevention' section is partially visible below the rules table.

Figure 188 Site-wide > Configure > Firewall > Security policy (FLEX H Series only)

Security policy

Enabled	Name	Action	Application	Portals / Content Filter Policy	From	To	Source	Destination	Service
☒	LAN_Outgoing	Allow			LAN	Any (Excluding ZyWALL)	Any	Any	Any
☒	DMZ_Outgoing	Allow			DMZ	WAN	Any	Any	Any
☒	IPsec_VPN_Outgoing	Allow			IPsec_VPN	Any (Excluding ZyWALL)	Any	Any	Any
☒	LAN_In_Incoming	Allow			LAN	ZyWALL	Any	Any	Any
☒	DMZ_In_Incoming	Allow			DMZ	ZyWALL	Any	Any	Default_sbl
☒	WAN_In_Incoming	Allow			WAN	ZyWALL	Any	Any	Default_sbl
☒	IPsec_VPN_In_Incoming	Allow			IPsec_VPN	ZyWALL	Any	Any	Any
☒	SBL_VPN_Outgoing	Allow			SBL_VPN	Any (Excluding ZyWALL)	Any	Any	Any
☒	SBL_VPN_In_Incoming	Allow			SBL_VPN	ZyWALL	Any	Any	Any
☒	NEBS_VPN_Outgoing	Allow			NEBS_VPN	Any (Excluding ZyWALL)	Any	Any	Any
☒	Default	Allow			Any (Excluding ZyWALL)	Any (Excluding ZyWALL)	Any	Any	Any

Page 1 of 1 Results per page 10

DoS Prevention

Enable DoS Prevention: ☒

Session Control

Session per host: 1000 (0 - 10000, 0 is unlimited)

The following table describes the labels in this screen.

Table 129 Site-wide > Configure > Firewall > Security policy

LABEL	DESCRIPTION
Security policy	
	Click the icon of a rule and drag the rule up or down to change the order.
Enabled	Select the checkbox to turn on the rule. Otherwise, clear the checkbox to turn off the rule.
Name	Enter the name of the security policy. You can use a-zA-Z0-9\._-, up to 30 characters. Note: You cannot change the rule's Name after saving it.

Table 129 Site-wide > Configure > Firewall > Security policy (continued)

LABEL	DESCRIPTION
Action	Select what the Nebula Device is to do with packets that match this rule. Select Deny to silently discard the packets without sending a TCP reset packet or an ICMP destination-unreachable message to the sender. Select Allow to permit the passage of the packets. Select Reject to discard the packets and send a TCP reset packet or an ICMP destination-unreachable message to the sender.
Application Patrol / Content Filter Policy	Click the "+" to add an Application Patrol or Content Filter profile. The firewall takes the action set in the profile when traffic matches the profile's policy. Application Patrol manages the use of various applications on the network. It manages general protocols (for example, HTTP and FTP) and instant messenger (IM), peer-to-peer (P2P), Voice over IP (VoIP), and streaming (RSTP) applications. You can even control the use of a particular application's individual features (like text messaging, voice, video conferencing, and file transfers). See Section 8.3.8.1 on page 563 for how to create an Application Patrol profile. Content Filter controls access to specific web sites or web content. See Section 8.3.8.2 on page 565 for how to create a Content Filter profile.
Protocol	Select the IP protocol to which this rule applies. Choices are: ICMP, TCP, UDP, TCP and UDP and Any.
From To	For through-Nebula Device policies, select the direction of travel of packets to which the policy applies, or enter a new direction of travel by clicking Add zone. Any means all interfaces. ZyWALL means packets destined for the Nebula Device itself.
Source	Specify the source IP addresses (LAN interface / country) to which this rule applies. You can add multiple IP, CIDR, FQDN, GEO IP (country) objects, or a single FQDN object by pressing 'Enter', or enter a new IP address by clicking Add address / Add group. Enter Any to apply the rule to all IP addresses. Note: IP/CIDR, FQDN, and GEO IP objects cannot be used at the same time. Multiple FQDNs are not supported. The IP FQDN does NOT support wildcards.
Destination	Specify the destination IP addresses (LAN interface / country) or subnet to which this rule applies. You can add multiple IP, CIDR, GEO IP (country) objects or a single FQDN object by pressing 'Enter', or enter a new IP address by clicking Add address / Add group. Enter Any to apply the rule to all IP addresses. Note: IP/CIDR, FQDN, and GEO IP objects cannot be used at the same time. Multiple FQDNs are not supported.
Service	Select a service object or service group from the drop-down list box, or enter a new service by clicking Add service / Add group.
Dst Port	Specify the destination ports to which this rule applies. You can specify multiple ports by pressing 'Enter', or enter a new port by clicking Add. Enter Any to apply the rule to all ports.
User	This field is not available when you are configuring a to-Nebula Device policy. Select Any user to apply the policy. There is no need for user login. To apply the policy to a user name or user group, the Security Policy is activated only when the specified user logs into the system and the policy will be disabled when the user logs out. To configure, use the device's local Web Configurator. Note: If you specified a source IP address (group) instead of Any in the field below, the user's IP address should be within the IP address range.

Table 129 Site-wide > Configure > Firewall > Security policy (continued)

LABEL	DESCRIPTION
Schedule	Select the name of the schedule profile that the rule uses, or enter a new profile by clicking Add schedule / Add group. Always means the rule is active at all times if enabled.
Description	Enter a descriptive name of up to 512 printable ASCII characters for the rule.
Log	Select whether to have the Nebula Device generate a log (ON) or not (OFF) when traffic matches the profile's policy. Note: By default, Log is ON when the Action field is Deny. Log is OFF when the Action field is Allow.
	Click this icon to remove the rule.
Implicit allow rules	This shows the system generated Allow rules. • 1:1 NAT • NAT virtual server • LAN interface / remote access VPN to Any • Guest interface to WAN interface • LAN interface / remote access VPN to Nebula Device • Guest interface to Nebula Device TCP (TCP:443, 80, 53) • Guest interface to Nebula Device UDP (UDP:53)
Implicit deny rule	This shows the system generated Deny rule. • Any to Any
Add	Click this button to create a new rule.
Anomaly Detection and Prevention / DoS Prevention	
Enable Anomaly Detection and Prevention / Enable DoS Prevention	Select this to enable traffic anomaly and protocol anomaly detection and prevention.
Session Control	
UDP Session Time Out	Set how many seconds the Nebula Device will allow a UDP session to remain idle (without UDP traffic) before closing it.
Session per Host	Use this field to set a common limit to the number of concurrent NAT/Security Policy sessions each client computer can have (0 – 20000). Enter 0 to set it as unlimited. If only a few clients use peer to peer applications, you can raise this number to improve their performance. With heavy peer to peer application use, lower this number to ensure no single client uses too many of the available NAT sessions.
Schedule profiles	
Schedule name	This shows the name of the schedule profile and the number of the outbound rules that are using this schedule profile.
	Click this icon to change the profile settings.
	Click this icon to remove the profile.
Add	Click this button to create a new schedule profile. See Section 8.3.8.3 on page 567 for more information.

8.3.8.1 Add an Application Patrol Profile

Application patrol provides a convenient way to manage the use of various applications on the network. It manages general protocols (for example, HTTP and FTP) and instant messenger (IM), peer-to-peer (P2P), Voice over IP (VoIP), and streaming (RSTP) applications. You can even control the use of a particular application's individual features (like text messaging, voice, video conferencing, and file transfers).

An application patrol profile is a group of categories of application patrol signatures. For each profile, you can specify the default action the Nebula Device takes once a packet matches a signature (forward, drop, or reject a service's connections and/or create a log alert).

Click "+" in the Application Patrol/Content Filter Policy field of the Site-wide > Configure > Firewall > Security policy screen to access this screen. Use the application patrol profile screens to customize action and log settings for a group of application patrol signatures.

Figure 189 Site-wide > Configure > Firewall > Security policy > Application patrol: Add an Application Profile

The following table describes the labels in this screen.

Table 130 Site-wide > Configure > Firewall > Security policy > Application patrol: Add an Application Profile

LABEL	DESCRIPTION
Name	Enter a name for this profile for identification purposes [a-zA-Z0-9_-], up to 30 characters.
Description (Optional)	Enter a description for this profile.
Log	Select whether to have the Nebula Device generate a log (ON) or not (OFF) by default when traffic matches an application signature in this category.
Application Management	
Enabled	Select the checkbox to turn on the rule. Otherwise, clear the checkbox to turn off the rule.
Category	Select an application category.
Application	Select All or select an application within the category to apply the policy.
Action	Select the default action for the applications selected in this category. Reject – the Nebula Device drops packets that matches these application signatures and sends notification to clients. Drop – the Nebula Device silently drops packets that matches these application signatures without sending notification to clients. Forward – the Nebula Device routes packets that matches these application signatures.
	Click this icon to remove the entry.
Add	Click this button to create a new application category and set actions for specific applications within the category.

Table 130 Site-wide > Configure > Firewall > Security policy > Application patrol: Add an Application Profile (continued)

LABEL	DESCRIPTION
	Enter a name to search for relevant applications and click Add to create an entry.
Close	Click this button to exit this screen without saving.
Create	Click this button to save your changes and close the screen.

8.3.8.2 Add a Content Filter Profile

Click "+" in the Application Patrol/Content Filter Policy section of the Site-wide > Configure > Firewall > Security policy screen to access this screen.

Figure 190 Site-wide > Configure > Firewall > Security policy > Content filter: Create content filter profile

Create Content Filter profile

Add profile

Name

Description (Optional)

Log ☒

DNS Content Filter

Enabled ☒

DNS SafeSearch ☒

Restrict YouTube Access

Block Web Pages

Action for Unrated Web Pages

Action When Service is Unavailable

Block Category

Templates

Test URL

Search category

Category list

Block web site

Web Site
1 X

Allow web site

Web Site
1 X

The following table describes the labels in this screen.

Table 131 Site-wide > Configure > Firewall > Security policy > Content filter: Create Content Filter profile

LABEL	DESCRIPTION
Add profile	
Name	Enter a name for this profile for identification purposes. Use up to 127 characters (0 – 9 a – z). The casing does not matter.
Description (Optional)	Enter a description for this profile.
Log	Select whether to have the Nebula Device generate a log (ON) or not (OFF) by default when traffic matches an application signature in this category.
DNS Content Filter	
Enabled	Select whether to enable DNS content filter, in addition to web content filter. The DNS Content Filter allows the Nebula Device to block access to specific websites by inspecting DNS queries made by users on your network. Content Filter checks all DNS queries including DNS queries to remote DNS servers.
DNS SafeSearch	Select On to enable content filter on the YouTube search engine.
Restrict YouTube Access	Select Strict/Moderate to avoid explicit and inappropriate results. Note: Make sure to select a search category from the Block Category list. Otherwise, NCC automatically disables content filter and safe search. Note: To allow YouTube safe search, make sure Streaming Media is not selected in the Block Category list.
Block Web Pages	
Action for Unrated Web Pages	Select Pass to allow users to access web pages that the external web filter service has not categorized. Select Block to prevent users from accessing web pages that the external web filter service has not categorized. When the external database content filter blocks access to a web page, it displays the denied access message that you configured in the Content Filter General screen along with the category of the blocked web page. Select Warn to display a warning message before allowing users to access web pages that the external web filter service has not categorized.
Action When Service is Unavailable	Select Pass to allow users to access any requested web page if the external content filter database is unavailable. Select Block to block access to any requested web page if the external content filter database is unavailable. Select Warn to display a warning message before allowing users to access any requested web page if the external content filter database is unavailable. The following are possible causes for the external content filter server not being available: • There is no response from the external content filter server within the time period specified in the Content Filter Server Unavailable Timeout field. • The Nebula Device is not able to resolve the domain name of the external content filter database. • There is an error response from the external content filter database. This can be caused by an expired content filter registration (External content filter's license key is invalid").
Block Category	
Templates	Select the block category. Choices are Parental control, Productivity and Custom.

Table 131 Site-wide > Configure > Firewall > Security policy > Content filter: Create Content Filter profile

LABEL	DESCRIPTION
Test URL	You can check which category a web page belongs to. Enter a web site URL in the text box, then click Test. When the content filter is active, you should see the web page's category. The query fails if the content filter is not active. Content Filter can query a category by full URL string (for example, http://www.google.com/picture/index.htm), but HTTPS Domain Filter can only query a category by domain name ('www.google.com'), so the category may be different in the query result. URL to test displays both results in the test.
Search category	Click to display or hide the category list. These are categories of web pages based on their content. Select categories in this section to control access to specific types of Internet content.
Block web site	Sites that you want to block access to, regardless of their content rating, can be blocked by adding them to this list. Enter host names such as www.bad-site.com into this text field. Do not enter the complete URL of the site – that is, do not include "http://". All sub-domains are also blocked. For example, entering "*.bad-site.com" also blocks "www.badsite.com", "partner.bad-site.com", "press.bad-site.com", and so on. You can also enter just a top level domain. For example, enter *.com to block all .com domains. Use up to 127 characters (0 – 9 a – z). The casing does not matter.
Add	Click this button to create a new application category and set actions for specific applications within the category.
	Click this icon to remove the entry.
Allow web site	Sites that you want to allow access to, regardless of their content rating, can be allowed by adding them to this list. Enter host names such as www.good-site.com into this text field. Do not enter the complete URL of the site – that is, do not include "http://". All sub-domains are allowed. For example, entering "*.zyxel.com" also allows "www.zyxel.com", "partner.zyxel.com", "press.zyxel.com", and so on. You can also enter just a top level domain. For example, enter *.com to allow all .com domains. Use up to 127 characters (0 – 9 a – z). The casing does not matter.
Add	Click this button to create a new application category and set actions for specific applications within the category.
	Click this icon to remove the entry.
Cancel	Click this button to exit this screen without saving.
Create	Click this button to save your changes and close the screen.

8.3.8.3 Create a New Schedule

Click the Add button in the Schedule Profiles section of the Site-wide > Configure > Firewall > Security policy > Schedule profiles screen to access this screen.

Figure 191 Site-wide > Configure > Firewall > Security policy > Schedule profiles: Create new schedule

Create new schedule

Local time zone (You can set this on [Device settings](#))
 Name:

Template: ☐ Always on

Day	Availability
Sunday	☒ 00:00 02:00 04:00 06:00 08:00 10:00 12:00 14:00 16:00 18:00 20:00 22:00 24:00
Monday	☒ 00:00 02:00 04:00 06:00 08:00 10:00 12:00 14:00 16:00 18:00 20:00 22:00 24:00
Tuesday	☒ 00:00 02:00 04:00 06:00 08:00 10:00 12:00 14:00 16:00 18:00 20:00 22:00 24:00
Wednesday	☒ 00:00 02:00 04:00 06:00 08:00 10:00 12:00 14:00 16:00 18:00 20:00 22:00 24:00
Thursday	☒ 00:00 02:00 04:00 06:00 08:00 10:00 12:00 14:00 16:00 18:00 20:00 22:00 24:00
Friday	☒ 00:00 02:00 04:00 06:00 08:00 10:00 12:00 14:00 16:00 18:00 20:00 22:00 24:00
Saturday	☒ 00:00 02:00 04:00 06:00 08:00 10:00 12:00 14:00 16:00 18:00 20:00 22:00 24:00

The following table describes the labels in this screen.

Table 132 Site-wide > Configure > Firewall > Security policy > Schedule profiles: Create new schedule

LABEL	DESCRIPTION
Name	Enter a descriptive name for this schedule for identification purposes.
Templates	Select a pre-defined schedule template or select Custom schedule and manually configure the day and time at which the associated firewall outbound rule is enabled.
Day	This shows the day of the week.
Availability	Click On to enable the associated rule at the specified time on this day. Otherwise, select Off to turn the associated rule off at the specified time on this day. Specify the hour and minute when the schedule begins and ends each day.
Close	Click this button to exit this screen without saving.
Add	Click this button to save your changes and close the screen.

8.3.9 Security Service

Use this screen to enable or disable the features available in the security pack for your Nebula Device, such as content filter, Intrusion Detection and Prevention (IDP) and/or anti-virus. As to application patrol, go to the Firewall screen to configure it since you need to have a firewall rule for outbound traffic.

Content filter allows you to block access to specific web sites. It can also block access to specific categories of web site content. IDP can detect malicious or suspicious packets used in network-based intrusions and respond instantaneously. Anti-virus helps protect your connected network from virus/spyware infection.

Note: Packet inspection signatures examine packet content for malicious data. Packet inspection applies to OSI (Open System Interconnection) layer-4 to layer-7 contents. You need to subscribe for IDP service in order to be able to download new signatures.


Note: If Security Profile Sync (SPS) is enabled, you cannot configure security settings on this screen. For details, see [Section 12.4.5 on page 748](#).

8.3.9.1 For Security Firewall (FLEX / ATP Series)

This section describes the Security Service feature for FLEX / ATP Series. Click Site-wide > Configure > Firewall > Security service to access this screen.

Figure 192 Site-wide > Configure > Firewall > Security service

[illegible]

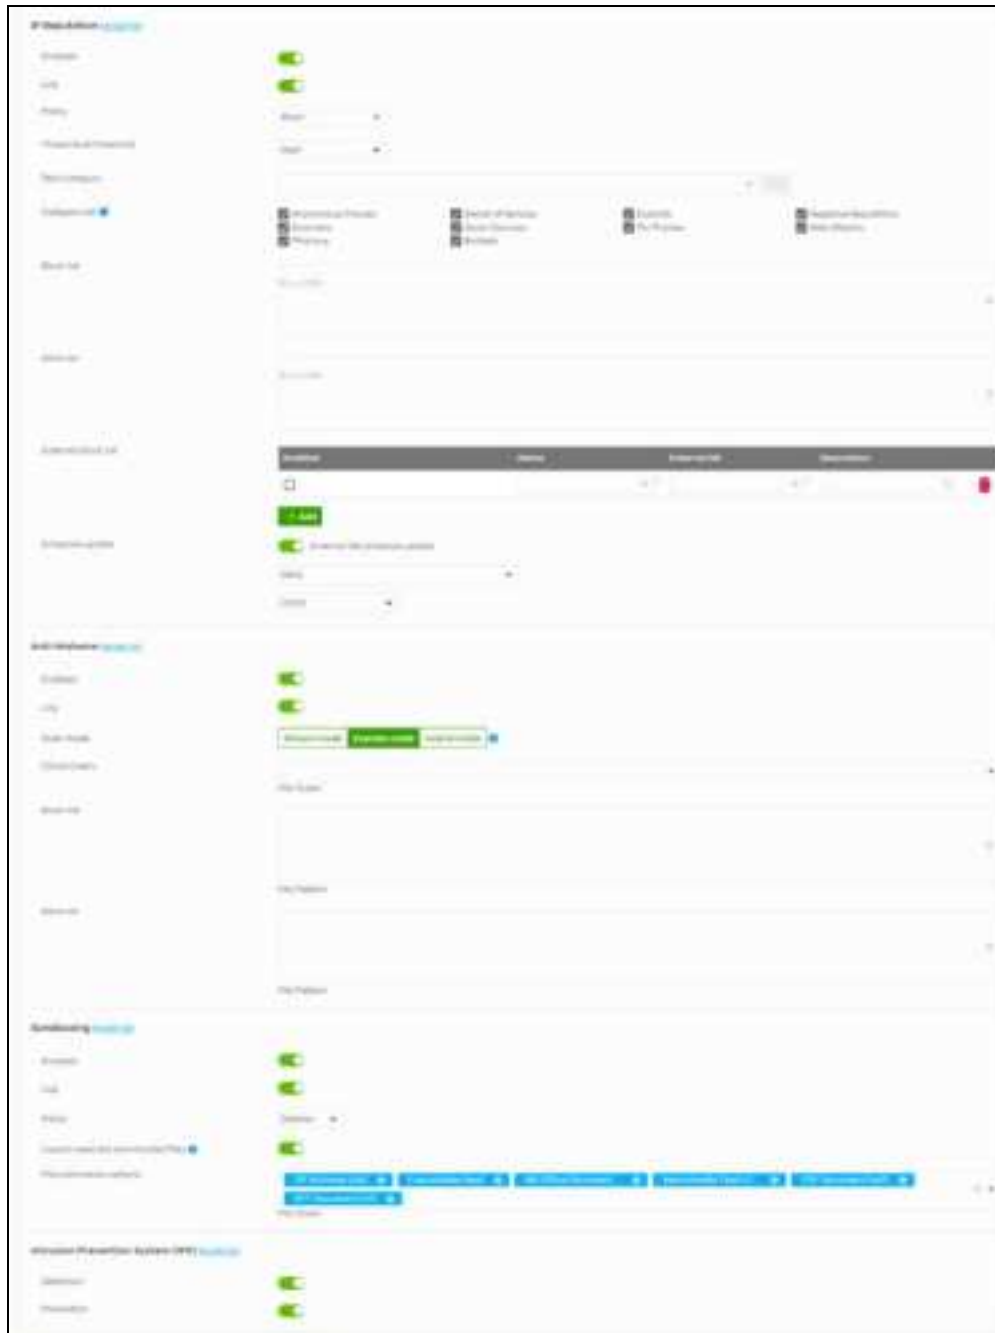

The following table describes the labels in this screen.

Table 133 Site-wide > Configure > Firewall > Security service

LABEL	DESCRIPTION
Content Filter	
Drop connection when there is an HTTPS connection with SSL V3 (or previous version)	Select On to have the Nebula Device block HTTPS web pages using SSL V3 or a previous version.

Table 133 Site-wide > Configure > Firewall > Security service (continued)

LABEL	DESCRIPTION
Denied Access Message	Enter a message to be displayed when content filter blocks access to a web page. Use up to 127 characters (0–9 a–z A–Z;/?:@&=+\$\._!~*'()% ,"). For example, "Access to this web page is not allowed. Please contact the network administrator". It is also possible to leave this field blank if you have a URL specified in the Redirect URL field. In this case if the content filter blocks access to a web page, the Nebula Device just opens the web page you specified without showing a denied access message.
Redirect URL	Enter the URL of the web page to which you want to send users when their web access is blocked by content filter. The web page you specify here opens in a new frame below the denied access message. Use "http://" or "https://" followed by up to 262 characters (0–9 a–z A–Z;/?:@&=+\$\._!~*'()% ,"). For example, http://192.168.1.17/blocked access.
Name	This shows the name of this content filter profile.
Description	This shows the description for this profile.
	Click this icon to change the profile settings.
	Click this icon to remove the profile.
Add	Click this to create a content filter profile. See Section 8.3.8.2 on page 565 for more information.
Application Patrol	
Application profiles	
Name	This shows the name of this Application Patrol profile.
Description	This shows the description for this profile.
	Click this icon to change the profile settings.
	Click this icon to remove the profile.
Add	Click this to create an Application Patrol profile. See Section on page 596 for more information.
IP Exception	
Enabled	Select the checkbox to enable IP Exception. IP addresses listed here are not checked by security services.
Source IP	This field displays the source IP address of incoming traffic. It displays any if there is no restriction on the source IP address.
Destination IP	This field displays the destination IP address of incoming traffic. It displays any if there is no restriction on the destination IP address.
Description	Enter a description for this profile.
	Click this icon to remove the entry.
Add	Click this button to create a new entry.
DNS/URL Threat Filter	DNS filtering inspects DNS queries made by clients on your network and compares the queries against a database of blocked or allowed Fully Qualified Domain Names (FQDNs). If a user attempts to connect to a suspect site, where the DNS query packet contains an FQDN with a bad reputation, then a DNS query is sent from the user's computer and detected by the DNS Filter. The Nebula Device DNS filter will either drop the DNS query or reply to the user with a fake DNS response using the default dnsft.cloud.zyxel.com IP address (where the user will see a "Web Page Blocked!" page) or a custom IP address. When you enable the URL Threat filtering service, your Nebula Device downloads signature files that contain known URL Threat domain names and IP addresses. The Nebula Device will also access an external database, Cloud Query, that has millions of web sites categorized based on content. You can have the Nebula Device allow, block, warn and/or log access to web sites or hosts based on these signatures and categories.

Table 133 Site-wide > Configure > Firewall > Security service (continued)

LABEL	DESCRIPTION
Log	Select whether to have the Nebula Device generate a log when the policy is matched to the criteria listed above.
DNS Threat Filter	Select On to turn on the rule. Otherwise, select Off to turn off the rule.
DNS Threat Filter Policy	Select Pass to have the Nebula Device allow the DNS query packet and not reply with a DNS reply packet containing a default or custom-defined IP address. Select Redirect to have the Nebula Device reply with a DNS reply packet containing a default or custom-defined IP address.
DNS Threat Filter Redirect IP	Enter the IP address to have the Nebula Device reply with a DNS reply packet containing a default or custom-defined IP address when a DNS query packet contains an FQDN with a bad reputation. The default IP is the dnsft.cloud.zyxel.com IP address. If you select a custom-defined IP, then enter a valid IPv4 address in the text box.
URL Threat Filter	Select On to turn on the rule. Otherwise, select Off to turn off the rule.
URL Threat Filter Policy	Select Pass to allow users to access web pages that the external web filtering service has not categorized. Select Block to prevent users from accessing web pages that the external web filtering service has not categorized. When the external database content filter blocks access to a web page, it displays the denied access message that you configured in the Content Filter General screen along with the category of the blocked web page. Select Warn to display a warning message before allowing users to access web pages that the external web filtering service has not categorized.
URL Threat Filter Denied Access Message	Enter a message to be displayed when content filter blocks access to a web page. Use up to 127 characters (0–9 a–z A–Z;/?:@&=+\$\._!~*'()% ,"). For example, "Access to this web page is not allowed. Please contact the network administrator". It is also possible to leave this field blank if you have a URL specified in the Redirect URL field. In this case if the content filter blocks access to a web page, the Nebula Device just opens the web page you specified without showing a denied access message.
URL Threat Filter Redirect URL	Enter the URL of the web page to which you want to send users when their web access is blocked by content filter. The web page you specify here opens in a new frame below the denied access message. Use "http://" or "https://" followed by up to 262 characters (0–9 a–z A–Z;/?:@&=+\$\._!~*'()% ,"). For example, http://192.168.1.17/blocked access.
Test Threat Category	Enter a URL using http://domain or https://domain and click the Test button to check if the domain belongs to a URL threat category.
Category List	These are categories of web pages based on their content. Select categories in this section to control access to specific types of Internet content.
Block list	Sites that you want to block access to, regardless of their content rating, can be blocked by adding them to this list. Enter host names such as www.bad-site.com into this text field. Do not enter the complete URL of the site – that is, do not include "http://". All sub-domains are also blocked. For example, entering "*.bad-site.com" also blocks "www.badsite.com", "partner.bad-site.com", "press.bad-site.com", and so on. You can also enter just a top level domain. For example, enter *.com to block all .com domains. Use up to 127 characters (0–9 a–z). The casing does not matter.

Table 133 Site-wide > Configure > Firewall > Security service (continued)

LABEL	DESCRIPTION
Allow list	Sites that you want to allow access to, regardless of their content rating, can be allowed by adding them to this list. Enter host names such as www.good-site.com into this text field. Do not enter the complete URL of the site – that is, do not include “http://”. All sub-domains are allowed. For example, entering “*.zyxel.com” also allows “www.zyxel.com”, “partner.zyxel.com”, “press.zyxel.com”, and so on. You can also enter just a top level domain. For example, enter *.com to allow all .com domains. Use up to 127 characters (0–9 a–z). The casing does not matter.
URL Threat Filter external block list	The Nebula Device uses black list entries stored in a file on a web server that supports HTTP or HTTPS. The Nebula Device blocks incoming and outgoing packets from the black list entries in this file.
Enabled	Select this to have the Nebula Device block the incoming packets that come from the listed addresses in the block list file on the server.
Name	Enter an identifying name for the block list file. You can use alphanumeric and ()+/:=?!*#@\$_%- characters, and it can be up to 60 characters long.
External DB	Enter the exact file name, path and IP address of the server containing the block list file. The file type must be ‘txt’. For example, http://172.16.107.20/blacklist-files/myip-ebl.txt The server must be reachable from the Nebula Device.
Description	Enter a description of the block list file. You can use alphanumeric and ()+/:=?!*#@\$_%- characters, and it can be up to 60 characters long.
	Click this icon to remove the entry.
Add	Click this button to create a new entry.
Schedule update	The signatures for DNS Filter and URL Threat Filter are the same. These signatures are continually updated as new malware evolves. New signatures can be downloaded to the Nebula Device periodically if you have subscribed for the URL Threat filter signatures service. You need to create an account at myZyxel, register your Nebula Device and then subscribe for URL Threat filter service in order to be able to download new signatures from myZyxel. Select Daily to set the time of the day, or Weekly to set the day of the week and the time of the day. Schedule signature updates for a day and time when your network is least busy to minimize disruption to your network.
IP Reputation	
Enabled	Select this option to turn on IP blocking on the Nebula Device.
Log	Select this option to create a log on the Nebula Device when the packet comes from an IPv4 address with bad reputation.
Policy	Select Pass to have the Nebula Device allow the packet to go through. Select Block to have the Nebula Device deny the packets and send a TCP RST to both the sender and receiver when a packet comes from an IPv4 address with bad reputation.

Table 133 Site-wide > Configure > Firewall > Security service (continued)

LABEL	DESCRIPTION
Threat level threshold	Select the threshold threat level to which the Nebula Device will take action (High, Medium and above, Low and above). The threat level is determined by the IP reputation engine. It grades IPv4 addresses. - High: an IPv4 address that scores 0 to 20 points. - Medium and above: an IPv4 address that scores 0 to 60 points. - Low and above: an IPv4 address that scores 0 to 80 points. For example, a score of "10" will cause the Nebula Device to take action whether you set the Threat level threshold at High, Medium and above, or Low and above. But a score of "61" will not cause the Nebula Device to take any action if you set the Threat level threshold at Medium and above.
Test Category	Enter an IPv4 address of a website, and click the Test button to check if the website associates with suspicious activities that could pose a security threat to users or their computers.
Category list	Select the categories of packets that come from the Internet and are known to pose a security threat to users or their computers.
Block list	Sites that you want to block access to, regardless of their content rating, can be blocked by adding them to this list. Add the IPv4 addresses that the Nebula Device will block the incoming packets.
Allow list	Sites that you want to allow access to, regardless of their content rating, can be allowed by adding them to this list. Add the IPv4 addresses that the Nebula Device will allow the incoming packets.
External block list	
Enabled	Select this checkbox to have the Nebula Device block the incoming packets that come from the listed addresses in the block list file on the server.
Name	Enter the identifying name for the block list file. You can use alphanumeric and ()+/:=?!*#@\$_%- characters, and it can be up to 60 characters long.
External DB	Enter the file name, path and IP address of the server containing the block list file. For example, http://172.16.107.20/blacklist-files/myip-ebi.txt
Description	Enter a description of the block list file. You can use alphanumeric and ()+/:=?!*#@\$_%- characters, and it can be up to 60 characters long.
	Click this icon to remove the entry.
Add	Click this button to create a new entry.
Schedule update	New IP reputation signatures can be downloaded to the Nebula Device periodically if you have subscribed for the IP reputation signatures service. You need to create an account at Zyxel, register your Nebula Device and then subscribe for IP reputation service in order to be able to download new signatures from Zyxel. Select Daily to set the time of the day, or Weekly to set the day of the week and the time of the day. Schedule signature updates for a day and time when your network is least busy to minimize disruption to your network.
Anti-Malware	
Enabled	Select On to turn on the rule. Otherwise, select Off to turn off the rule.
Log	Select whether to have the Nebula Device generate a log when the policy is matched to the criteria listed above.
Scan Mode	

Table 133 Site-wide > Configure > Firewall > Security service (continued)

LABEL	DESCRIPTION
Express Mode	In this mode you can define which types of files are scanned using the File Type For Scan fields. The Nebula Device then scans files by sending each file's hash value to a cloud database using cloud query. This is the fastest scan mode.
Stream Mode	In this mode the Nebula Device scans all files for viruses using its anti-malware signatures to detect known virus patterns. This is the deepest scan mode.
Hybrid Mode (for ATP devices only)	In this mode you can define which types of files are scanned using the File Type For Scan fields. The Nebula Device then scans files by sending each file's hash value to a cloud database using cloud query. It also scans files using anti-malware signatures, and Threat Intelligence Machine Learning. This mode combines Express Mode and Stream Mode to offer a balance of speed and security.
File decompression (ZIP and RAR)	Select this checkbox to have the Nebula Device scan a compressed file (the file does not need to have a "zip" or "rar" file extension). The Nebula Device first decompresses the file and then scans the contents for malware. Note: The Nebula Device decompresses a compressed file once. The Nebula Device does NOT decompress any files within a compressed file.
Destroy compressed files that could not be decompressed	When you select this checkbox, the Nebula Device deletes compressed files that use password encryption. Select this checkbox to have the Nebula Device delete any compressed files that it cannot decompress. The Nebula Device cannot decompress password protected files or a file within another compressed file. There are also limits to the number of compressed files that the Nebula Device can concurrently decompress. Note: The Nebula Device's firmware package cannot go through the Nebula Device with this checkbox enabled. The Nebula Device classifies the firmware package as a file that cannot be decompressed and then deletes it. Clear this checkbox when you download a firmware package from the Zyxel website. It is okay to upload a firmware package to the Nebula Device with the checkbox selected.
Cloud Query	Select the Cloud Query supported file types for the Nebula Device to scan for viruses.
Block list	This field displays the file or encryption pattern of the entry. Enter an MD5 hash or file pattern that would cause the Nebula Device to log and modify this file. File patterns: •Use up to 80 characters. Alphanumeric characters, underscores (_), dashes (-), question marks (?) and asterisks (*) are allowed. •A question mark (?) lets a single character in the file name vary. For example, use "a?.zip" (without the quotation marks) to specify aa.zip, ab.zip and so on. •Wildcards (*) let multiple files match the pattern. For example, use "*a.zip" (without the quotation marks) to specify any file that ends with "a.zip". A file named "testa.zip" would match. There could be any number (of any type) of characters in front of the "a.zip" at the end and the file name would still match. A file named "test.zipa" for example would not match. •A * in the middle of a pattern has the Nebula Device check the beginning and end of the file name and ignore the middle. For example, with "abc*.zip", any file starting with "abc" and ending in ".zip" matches, no matter how many characters are in between. •The whole file name has to match if you do not use a question mark or asterisk. •If you do not use a wildcard, the Security Firewall checks up to the first 80 characters of a file name.

Table 133 Site-wide > Configure > Firewall > Security service (continued)

LABEL	DESCRIPTION
Allow list	Enter the file or encryption pattern for this entry. Enter an MD5 hash or file pattern to identify the names of files that the Nebula Device should not scan for viruses. File patterns: •Use up to 80 characters. Alphanumeric characters, underscores (_), dashes (-), question marks (?) and asterisks (*) are allowed. •A question mark (?) lets a single character in the file name vary. For example, use "a?.zip" (without the quotation marks) to specify aa.zip, ab.zip and so on. •Wildcards (*) let multiple files match the pattern. For example, use "*a.zip" (without the quotation marks) to specify any file that ends with "a.zip". A file named "testa.zip" would match. There could be any number (of any type) of characters in front of the "a.zip" at the end and the file name would still match. A file named "test.zipa" for example would not match. •A * in the middle of a pattern has the Nebula Device check the beginning and end of the file name and ignore the middle. For example, with "abc*.zip", any file starting with "abc" and ending in ".zip" matches, no matter how many characters are in between. •The whole file name has to match if you do not use a question mark or asterisk. •If you do not use a wildcard, the Nebula Device checks up to the first 80 characters of a file name.
Sandboxing	Sandboxing provides a safe environment to separate running programs from your network and host devices. Unknown or untrusted programs/codes are uploaded to the Defend Center and executed within an isolated virtual machine (VM) to monitor and analyze the zero-day malware and advanced persistent threats (APTs) that may evade the Nebula Device's detection, such as anti-malware. Results of cloud sandboxing are sent from the server to the Nebula Device.
Enabled	Select this option to turn on sandboxing on the Nebula Device
Log	Enable this option to allow the Security Firewall to create a log when a suspicious file is detected.
Policy	Specify whether the Nebula Device deletes (Destroy) or forwards (Allow) malicious files. Malicious files are files given a high score for malware characteristics by the Defend Center.
Inspect selected downloaded files	Select this option to have the Nebula Device hold the downloaded file for up to 2 seconds if the downloaded file has never been inspected before. The Nebula Device will wait for the Defend Center's result and forward the file in 2 seconds. Sandbox detection may take longer than 2 seconds, so infected files could still possibly be forwarded to the user. Note: The Nebula Device only checks the file types you selected for sandbox inspection. The scan result will be removed from the Nebula Device cache after the Nebula Device restarts.
File submission options	Specify the type of files to be sent for sandbox inspection.
Intrusion Prevention System (IPS)	
Detection	Select On to enable Detection.
Prevention	Select On to enable Prevention.

Create a Content Filter Profile

Click the Add button in the Content Filter section of the Site-wide > Configure > Firewall > Security service screen to access this screen.

Figure 193 Site-wide > Configure > Firewall > Security service > Content Filter: Add/Edit

[illegible]

The following table describes the labels in this screen.

Table 134 Site-wide > Configure > Firewall > Security service > Content Filter: Add/Edit

LABEL	DESCRIPTION
Add profile	
Name	Enter a name for this profile for identification purposes. Use up to 127 characters (0 – 9 a – z). The casing does not matter.
Description (Optional)	Enter a description for this profile.
Log	Select whether to have the Nebula Device generate a log (ON) or not (OFF) by default when traffic matches an application signature in this category.
DNS content filter	Select this option to turn on DNS filtering on the Nebula Device. DNS filtering inspects DNS queries made by clients on your network and compares the queries against a database of blocked or allowed Fully Qualified Domain Names (FQDNs). The Nebula Device DNS content filter will either drop the DNS query or reply to the user with a fake DNS response.
DNS SafeSearch	Select whether to enable content filter on the YouTube search engine. This allows you to avoid explicit and inappropriate results by selecting Strict/Moderate in the Restrict YouTube Access.
Block Web Pages	
Action for Unrated Web Pages	Select Pass to allow users to access web pages that the external web filtering service has not categorized. Select Block to prevent users from accessing web pages that the external web filtering service has not categorized. When the external database content filter blocks access to a web page, it displays the denied access message that you configured in the Content Filter General screen along with the category of the blocked web page. Select Warn to display a warning message before allowing users to access web pages that the external web filtering service has not categorized.
Action when service is unavailable	Select Pass to allow users to access any requested web page if the external content filter database is unavailable. Select Block to block access to any requested web page if the external content filter database is unavailable. Select Warn to display a warning message before allowing users to access any requested web page if the external content filter database is unavailable. The following are possible causes for the external content filter server not being available: • There is no response from the external content filter server within the time period specified in the Content Filter Server Unavailable Timeout field. • The Nebula Device is not able to resolve the domain name of the external content filter database. • There is an error response from the external content filter database. This can be caused by an expired content filter registration (External content filter's license key is invalid").
Block Category	
The Nebula Device prevents users from accessing web pages that match the categories that you select below. When external database content filter blocks access to a web page, it displays the denied access message that you configured in the Denied access message field along with the category of the blocked web page.	
Templates	Web pages are classified into a category based on their content. You can choose a pre-defined template that has already selected certain categories. Alternatively, choose Custom and manually select categories in this section to control access to specific types of Internet content.

Table 134 Site-wide > Configure > Firewall > Security service > Content Filter: Add/Edit (continued)

LABEL	DESCRIPTION
Test URL	You can check which category a web page belongs to. Enter a web site URL in the text box, then click Test. When the content filter is active, you should see the web page's category. The query fails if the content filter is not active. Content Filter can query a category by full URL string (for example, <code>http://www.google.com/picture/index.htm</code>), but HTTPS Domain Filter can only query a category by domain name ('<code>www.google.com</code>'), so the category may be different in the query result. Test URL displays both results in the test.
Search Category	Specify your desired filter criteria to filter the list of categories.
Category List	Click to display or hide the category list. These are categories of web pages based on their content. Select categories in this section to control access to specific types of Internet content.
Block web site	Sites that you want to block access to, regardless of their content rating, can be blocked by adding them to this list. Enter host names such as <code>www.bad-site.com</code> into this text field. Do not enter the complete URL of the site – that is, do not include "<code>http://</code>". All sub-domains are also blocked. For example, entering "<code>*.bad-site.com</code>" also blocks "<code>www.badsite.com</code>", "<code>partner.bad-site.com</code>", "<code>press.bad-site.com</code>", and so on. You can also enter just a top level domain. For example, enter <code>*.com</code> to block all <code>.com</code> domains. Use up to 127 characters (0–9 a–z). The casing does not matter.
Add	Click this button to add a new entry.
Allow web site	Sites that you want to allow access to, regardless of their content rating, can be allowed by adding them to this list. Enter host names such as <code>www.good-site.com</code> into this text field. Do not enter the complete URL of the site – that is, do not include "<code>http://</code>". All sub-domains are allowed. For example, entering "<code>*.zyxel.com</code>" also allows "<code>www.zyxel.com</code>", "<code>partner.zyxel.com</code>", "<code>press.zyxel.com</code>", and so on. You can also enter just a top level domain. For example, enter <code>*.com</code> to allow all <code>.com</code> domains. Use up to 127 characters (0–9 a–z). The casing does not matter.
Add	Click this button to add a new entry.
	Click this icon to remove the entry.
Cancel	Click this button to exit this screen without saving.
Create	Click this button to save your changes and close the screen.

Add Application Patrol Profile

Click the Add button in the Application Patrol section of the Site-wide > Configure > Firewall > Security service screen to access this screen.

Figure 194 Site-wide > Configure > Firewall > Security service > Application Patrol: Add/Edit

The following table describes the labels in this screen.


Table 135 Site-wide > Configure > Firewall > Security service > Application Patrol: Add/Edit

LABEL	DESCRIPTION
Add profile	
Name	Enter the name of the application patrol profile rule; use of up to 32 upper/lowercase letters. Space not allowed.
Description (Optional)	Enter an optional description of the application patrol profile rule; use up to 255 keyboard characters.
Log	Select whether to have the Nebula Device generate a log when the policy is matched to the criteria listed above.
Application Management	
Enabled	Select the checkbox to turn on the rule. Otherwise, clear the checkbox to turn off the rule.
Category	Select an application category.
Application	Select All or select an application within the category to apply the policy.
Action	Displays the default action for the applications selected in this category. Reject – the Nebula Device drops packets that matches these application signatures and sends notification to clients.
	Click this icon to remove the entry.
Add	Click this button to create a new application category and set actions for specific applications within the category.
Search Application	Enter a name to search for relevant applications and click Add to create an entry.
Close	Click this button to exit this screen without saving.
Create	Click this button to save your changes and close the screen.

8.3.9.2 For Security Firewall (FLEX H Series only)

This section describes the Security Service feature for FLEX H Series only. Click Site-wide > Configure > Firewall > Security service to access this screen.

Figure 195 Site-wide > Configure > Firewall > Security service

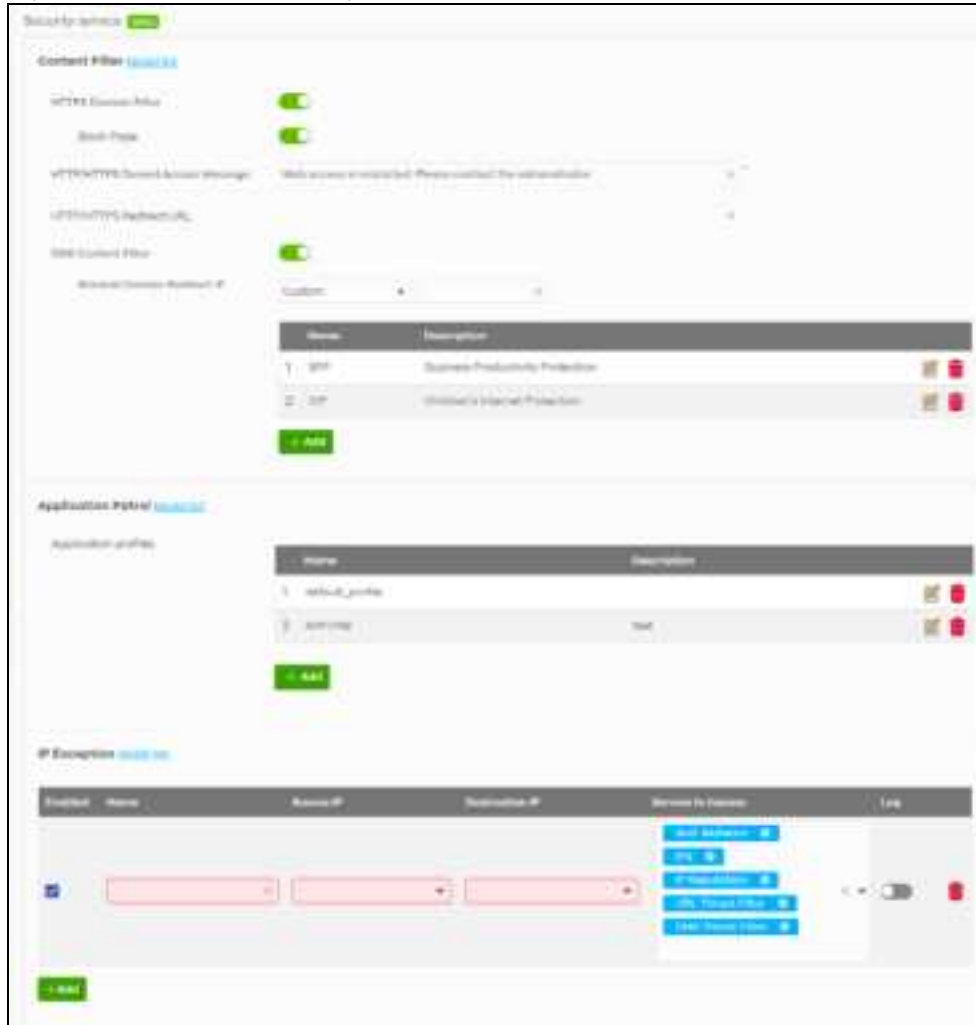

IP Reputation [Learn More](#)

Enabled ☒

Log ☒

Policy

Threat Level Threshold

Categories List

- ☒ Anonymous Proxies
- ☒ Control of Services
- ☒ Degrade
- ☒ Network Reputation
- ☒ Scamware
- ☒ System Software
- ☒ Spyware
- ☒ App Installs
- ☒ Phishing
- ☒ Scripts

Block Unwanted ☒

Log ☒

Block List

Enabled	IP Address	Description
☒	192.168.1.1	

[+ Add](#)

Allow Connections ☒

Log ☐

Allow List

Enabled	IP Address	Description
☒	192.168.1.1	

[+ Add](#)

App Malware [Learn More](#)

Enabled ☒

Log ☒

Cloud Config

[Downloadable Config](#)
[Downloadable Config](#)
[Get Config Document](#)
[Get Document Config](#)

File Types

Block Unwanted ☒

Log ☒

File List

Enabled	Value
☒	192.168.1.1

[+ Add](#)

File Name Pattern

Enabled	Value
☒	File Pattern

[+ Add](#)

Allow File Access ☒

Log ☐

File List


Enabled	Value
☒	192.168.1.1

[+ Add](#)

File Name Pattern

Enabled	Value
☒	File Pattern

[+ Add](#)

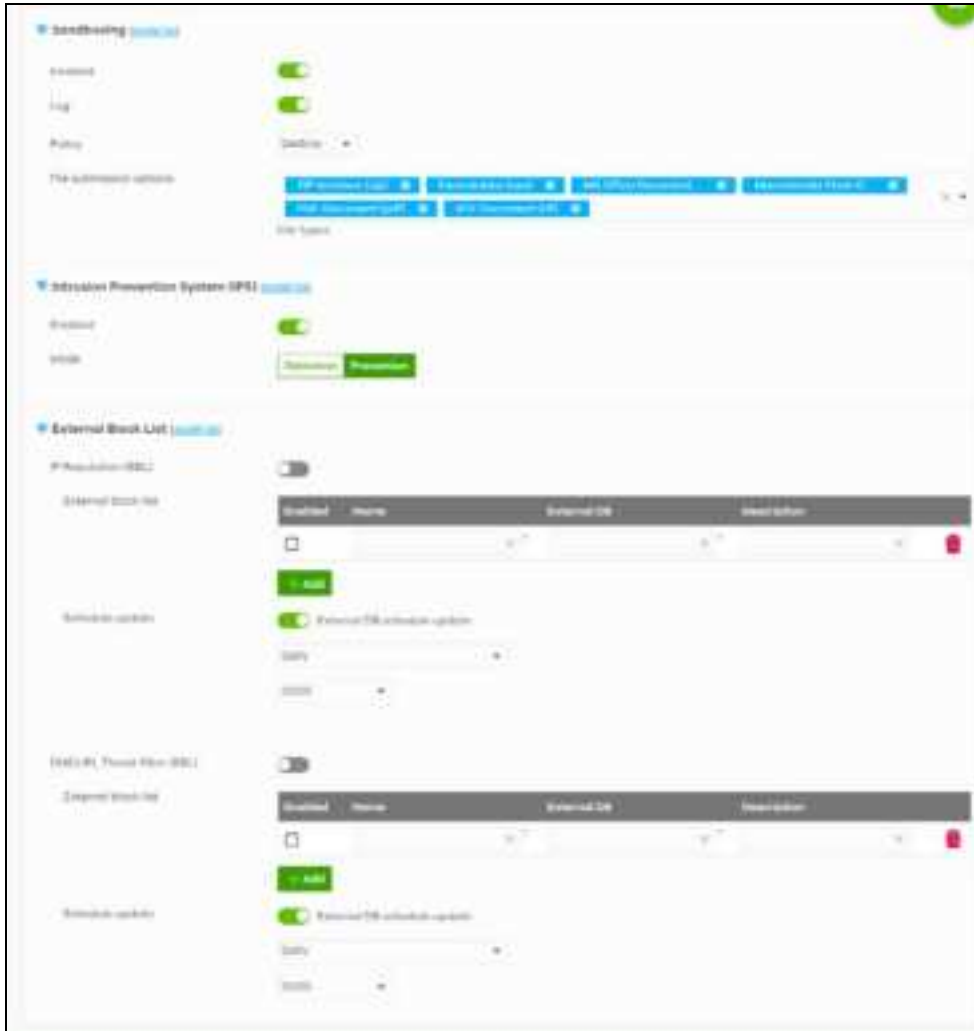

The following table describes the labels in this screen.

Table 136 Site-wide > Configure > Firewall > Security service

LABEL	DESCRIPTION
Content Filter	
HTTPS Domain Filter	Select On to have the Nebula Device filter HTTPS domains by querying a category by domain name (www.google.com).
Block Page	Select On to have the Nebula Device block HTTPS web pages using SSL V3 or a previous version.
HTTP/HTTPS Denied Access Message	Enter a message to be displayed when content filter blocks access to a web page. Use up to 127 characters (0–9 a–z A–Z;/?:@&=+\$\._!~*'()% ,"). For example, "Access to this web page is not allowed. Please contact the network administrator". It is also possible to leave this field blank if you have a URL specified in the HTTP/HTTPS Redirect URL field. In this case if the content filter blocks access to a web page, the Nebula Device just opens the web page you specified without showing a denied access message.
HTTP/HTTPS Redirect URL	Enter the URL of the web page to which you want to send users when their web access is blocked by content filter. The web page you specify here opens in a new frame below the denied access message. Use "http://" or "https://" followed by up to 262 characters (0–9 a–z A–Z;/?:@&=+\$\._!~*'()% ,"). For example, http://192.168.1.17/blocked access.

Table 136 Site-wide > Configure > Firewall > Security service (continued)

LABEL	DESCRIPTION
DNS Content Filter	Select On to have the Nebula Device inspect DNS queries made by users on your network.
Blocked Domain Redirect IP	This is the URL of the web page to which you want to send users when their web access is blocked by DNS content filtering. The web page you specify here opens in a new frame below the denied access message. Select default to send users to the default web page when their web access is blocked by DNS content filter. Select custom-defined to send users to the web page you set when their web access is blocked by DNS content filter. Use "http://" followed by up to 255 characters (0-9 a-z A-Z;/?:@&=+\$\._!~*()%) in quotes. For example, http://192.168.2.17/blocked access.
Name	This shows the name of this content filter profile.
Description	This shows the description for this profile.
	Click this icon to change the profile settings.
	Click this icon to remove the profile.
Add	Click this to create a content filter profile. See Section 8.3.8.2 on page 565 for more information.
Application Patrol	
Application profiles	
Name	This shows the name of this Application Patrol profile.
Description	This shows the description for this profile.
	Click this icon to change the profile settings.
	Click this icon to remove the profile.
Add	Click this to create an Application Patrol profile. See Section on page 596 for more information.
IP Exception	
Enabled	Select the checkbox to enable IP Exception. IP addresses listed here are not checked by security services.
Name	This shows the name of this IP Exception profile.
Source IP	This field displays the source IP address of incoming traffic. It displays any if there is no restriction on the source IP address.
Destination IP	This field displays the destination IP address of incoming traffic. It displays any if there is no restriction on the destination IP address.
Service to bypass	This field displays which services will not inspect matched packets.
Log	Select On to allow the Nebula Device to generate a log when the incoming traffic is in the exception list.
	Click this icon to remove the entry.
Add	Click this button to create a new entry.

Table 136 Site-wide > Configure > Firewall > Security service (continued)

LABEL	DESCRIPTION
DNS Threat Filter	DNS filtering inspects DNS queries made by clients on your network and compares the queries against a database of blocked or allowed Fully Qualified Domain Names (FQDNs). If a user attempts to connect to a suspect site, where the DNS query packet contains an FQDN with a bad reputation, then a DNS query is sent from the user's computer and detected by the DNS Filter. The Nebula Device DNS filter will either drop the DNS query or reply to the user with a fake DNS response using the default dnsft.cloud.zyxel.com IP address (where the user will see a "Web Page Blocked!" page) or a custom IP address. When you enable the URL Threat filtering service, your Nebula Device downloads signature files that contain known URL Threat domain names and IP addresses. The Nebula Device will also access an external database, Cloud Query, that has millions of web sites categorized based on content. You can have the Nebula Device allow, block, warn and/or log access to web sites or hosts based on these signatures and categories.
Enabled	Select On to turn on the rule. Otherwise, select Off to turn off the rule.
Log	Select whether to have the Nebula Device generate a log when the policy is matched to the criteria listed.
Policy	Select Pass to have the Nebula Device allow the DNS query packet and not reply with a DNS reply packet containing a default or custom-defined IP address. Select Redirect to have the Nebula Device reply with a DNS reply packet containing a default or custom-defined IP address.
Redirect IP	Enter the IP address to have the Nebula Device reply with a DNS reply packet containing a default or custom-defined IP address when a DNS query packet contains an FQDN with a bad reputation. The default IP is the dnsft.cloud.zyxel.com IP address. If you select a custom-defined IP, then enter a valid IPv4 address in the text box.
Malform DNS packets policy	Set what action the Nebula Device takes when there is an abnormal DNS query packet. A DNS packet is defined as malformed when: - The number of entries in the question count field in the DNS header is 0 - An error occurs when parsing the domain name in the question field - The length of the domain name exceeds 255 characters. pass: Select this action to have the Nebula Device allow the DNS query packet through the Nebula Device. drop: Select this action to have the Nebula Device discard the abnormal DNS query packet.
Log	Select whether to have the Nebula Device generate a log when there is an abnormal DNS query packet.
Test Threat Category	Enter a URL using http://domain or https://domain and click the Test button to check if the domain belongs to a URL threat category.
Category List	These are categories of web pages based on their content. Select categories in this section to control access to specific types of Internet content.
Block list enabled	Select On to have the Nebula Device block the incoming packets that come from the listed addresses in the block list.
Log	Select whether to have the Nebula Device generate a log when the policy is matched to the criteria listed.
Block list Enabled	Select On to turn on an entry.

Table 136 Site-wide > Configure > Firewall > Security service (continued)

LABEL	DESCRIPTION
Block list	Sites that you want to block access to, regardless of their content rating, can be blocked by adding them to this list. Enter host names such as www.bad-site.com into this text field. Do not enter the complete URL of the site – that is, do not include "http://". All sub-domains are also blocked. For example, entering "*bad-site.com" also blocks "www.badsite.com", "partner.bad-site.com", "press.bad-site.com", and so on. You can also enter just a top level domain. For example, enter *.com to block all .com domains. Use up to 127 characters (0–9 a–z). The casing does not matter.
Description	Enter a description of the block entry. You can use 1 to 512 single-byte characters.
	Click this icon to remove the entry.
Add	Click this button to create a new entry.
Allow list enabled	Select On to have the Nebula Device allow the incoming packets that come from the listed addresses in the allow list.
Log	Select whether to have the Nebula Device generate a log when the policy is matched to the criteria listed.
Allow list Enabled	Select On to turn on an entry.
Allow list	Sites that you want to allow access to, regardless of their content rating, can be allowed by adding them to this list. Enter host names such as www.good-site.com into this text field. Do not enter the complete URL of the site – that is, do not include "http://". All sub-domains are allowed. For example, entering "*.zyxel.com" also allows "www.zyxel.com", "partner.zyxel.com", "press.zyxel.com", and so on. You can also enter just a top level domain. For example, enter *.com to allow all .com domains. Use up to 127 characters (0–9 a–z). The casing does not matter.
Description	Enter a description of the allow entry. You can use 1 to 512 single-byte characters.
	Click this icon to remove the entry.
Add	Click this button to create a new entry.
URL Threat Filter Enabled	Select On to turn on the rule. Otherwise, select Off to turn off the rule.
Log	Select whether to have the Nebula Device generate a log when the policy is matched to the criteria listed.
Policy	Select Pass to allow users to access web pages that the external web filtering service has not categorized. Select Block to prevent users from accessing web pages that the external web filtering service has not categorized. When the external database content filter blocks access to a web page, it displays the denied access message that you configured in the Content Filter General screen along with the category of the blocked web page.
Denied Access Message	Enter a message to be displayed when content filter blocks access to a web page. Use up to 127 characters (0–9 a–z A–Z;/?:@&=+\$\._!~*'()% ,"). For example, "Access to this web page is not allowed. Please contact the network administrator". It is also possible to leave this field blank if you have a URL specified in the Redirect URL field. In this case if the content filter blocks access to a web page, the Nebula Device just opens the web page you specified without showing a denied access message.

Table 136 Site-wide > Configure > Firewall > Security service (continued)

LABEL	DESCRIPTION
Redirect URL	Enter the URL of the web page to which you want to send users when their web access is blocked by content filter. The web page you specify here opens in a new frame below the denied access message. Use "http://" or "https://" followed by up to 262 characters (0–9 a–z A–Z;/?:@&=+\$\._~*'()%). For example, http://192.168.1.17/blocked access.
Test Threat Category	Enter a URL using http://domain or https://domain and click the Test button to check if the domain belongs to a URL threat category.
Category List	These are categories of web pages based on their content. Select categories in this section to control access to specific types of Internet content.
Block list enabled	Select On to have the Nebula Device block the incoming packets that come from the listed addresses in the block list.
Log	Select whether to have the Nebula Device generate a log when the policy is matched to the criteria listed.
Block list Enabled	Select On to turn on an entry.
Block list	Sites that you want to block access to, regardless of their content rating, can be blocked by adding them to this list. Enter host names such as www.bad-site.com into this text field. Do not enter the complete URL of the site – that is, do not include "http://". All sub-domains are also blocked. For example, entering "*bad-site.com" also blocks "www.badsite.com", "partner.bad-site.com", "press.bad-site.com", and so on. You can also enter just a top level domain. For example, enter *.com to block all .com domains. Use up to 127 characters (0–9 a–z). The casing does not matter.
Description	Enter a description of the block entry. You can use 1 to 512 single-byte characters.
	Click this icon to remove the entry.
Add	Click this button to create a new entry.
Allow list enabled	Select On to have the Nebula Device allow the incoming packets that come from the listed addresses in the allow list.
Log	Select whether to have the Nebula Device generate a log when the policy is matched to the criteria listed.
Allow list Enabled	Select On to turn on an entry.
Allow list	Sites that you want to allow access to, regardless of their content rating, can be allowed by adding them to this list. Enter host names such as www.good-site.com into this text field. Do not enter the complete URL of the site – that is, do not include "http://". All sub-domains are allowed. For example, entering "*.zyxel.com" also allows "www.zyxel.com", "partner.zyxel.com", "press.zyxel.com", and so on. You can also enter just a top level domain. For example, enter *.com to allow all .com domains. Use up to 127 characters (0–9 a–z). The casing does not matter.
IP Reputation	
Enabled	Select this option to turn on IP blocking on the Nebula Device.
Log	Select this option to create a log on the Nebula Device when the packet comes from an IPv4 address with bad reputation.
Policy	Select Pass to have the Nebula Device allow the packet to go through. Select Block to have the Nebula Device deny the packets and send a TCP RST to both the sender and receiver when a packet comes from an IPv4 address with bad reputation.

Table 136 Site-wide > Configure > Firewall > Security service (continued)

LABEL	DESCRIPTION
Threat level threshold	Select the threshold threat level to which the Nebula Device will take action (High, Medium and above, Low and above). The threat level is determined by the IP reputation engine. It grades IPv4 addresses. - High: an IPv4 address that scores 0 to 20 points. - Medium and above: an IPv4 address that scores 0 to 60 points. - Low and above: an IPv4 address that scores 0 to 80 points. For example, a score of "10" will cause the Nebula Device to take action whether you set the Threat level threshold at High, Medium and above, or Low and above. But a score of "61" will not cause the Nebula Device to take any action if you set the Threat level threshold at Medium and above.
Category list	Select the categories of packets that come from the Internet and are known to pose a security threat to users or their computers.
Block list enabled	Select On to have the Nebula Device block the incoming packets that come from the listed addresses in the block list.
Log	Select whether to have the Nebula Device generate a log when the policy is matched to the criteria listed.
Block list Enabled	Select On to turn on an entry.
IPv4 address	Sites that you want to block access to, regardless of their content rating, can be blocked by adding them to this list. Add the IPv4 addresses that the Nebula Device will block the incoming packets.
Description	Enter a description of the block entry. You can use 1 to 512 single-byte characters.
	Click this icon to remove the entry.
Add	Click this button to create a new entry.
Allow list enabled	Select On to have the Nebula Device allow the incoming packets that come from the listed addresses in the allow list.
Log	Select whether to have the Nebula Device generate a log when the policy is matched to the criteria listed.
Allow list Enabled	Select On to turn on an entry.
IPv4 address	Sites that you want to allow access to, regardless of their content rating, can be allowed by adding them to this list. Add the IPv4 addresses that the Nebula Device will allow the incoming packets.
Description	Enter a description of the allow entry. You can use 1 to 512 single-byte characters.
	Click this icon to remove the entry.
Add	Click this button to create a new entry.
Anti-Malware	
Enabled	Select On to turn on the rule. Otherwise, select Off to turn off the rule.
Log	Select whether to have the Nebula Device generate a log when the policy is matched to the criteria listed.
Cloud Query	Select the Cloud Query supported file types for the Nebula Device to scan for viruses.
Block list enabled	Select On to have the Nebula Device block the incoming packets that come from the listed addresses in the block list.
Log	Select whether to have the Nebula Device generate a log when the policy is matched to the criteria listed.

Table 136 Site-wide > Configure > Firewall > Security service (continued)

LABEL	DESCRIPTION
MD5 Hash Enabled	Select On to turn on an entry.
Value	This field displays the encryption pattern of the entry. Enter an MD5 hash ([a-zA-Z0-9]* up to 32 characters maximum) that would cause the Nebula Device to log and modify this file.
	Click this icon to remove the entry.
Add	Click this button to create a new entry.
File Name Pattern Enabled	Select On to turn on an entry.
Value	This field displays the file pattern of the entry. Enter a file pattern ([a-zA-Z0-9.?*_] up to 80 characters maximum) that would cause the Nebula Device to log and modify this file. File patterns: •Use up to 80 characters. Alphanumeric characters, underscores (_), dashes (-), question marks (?) and asterisks (*) are allowed. •A question mark (?) lets a single character in the file name vary. For example, use "a?.zip" (without the quotation marks) to specify aa.zip, ab.zip and so on. •Wildcards (*) let multiple files match the pattern. For example, use "*a.zip" (without the quotation marks) to specify any file that ends with "a.zip". A file named "testa.zip" would match. There could be any number (of any type) of characters in front of the "a.zip" at the end and the file name would still match. A file named "test.zipa" for example would not match. •A * in the middle of a pattern has the Nebula Device check the beginning and end of the file name and ignore the middle. For example, with "abc*.zip", any file starting with "abc" and ending in ".zip" matches, no matter how many characters are in between. •The whole file name has to match if you do not use a question mark or asterisk. •If you do not use a wildcard, the Security Firewall checks up to the first 80 characters of a file name.
	Click this icon to remove the entry.
Add	Click this button to create a new entry.
Allow list enabled	Select On to have the Nebula Device allow the incoming packets that come from the listed addresses in the allow list.
Log	Select whether to have the Nebula Device generate a log when the policy is matched to the criteria listed.
MD5 Hash Enabled	Select On to turn on an entry.
Value	Enter the encryption pattern for this entry. Enter an MD5 hash ([a-zA-Z0-9]* up to 32 characters maximum) to identify the names of files that the Nebula Device should not scan for viruses.
	Click this icon to remove the entry.
Add	Click this button to create a new entry.
File Name Pattern Enabled	Select On to turn on an entry.

Table 136 Site-wide > Configure > Firewall > Security service (continued)

LABEL	DESCRIPTION
Value	Enter the file pattern for this entry. Enter a file pattern ([a-zA-Z0-9.*_-] up to 80 characters maximum) to identify the names of files that the Nebula Device should not scan for viruses. File patterns: • Use up to 80 characters. Alphanumeric characters, underscores (_), dashes (-), question marks (?) and asterisks (*) are allowed. • A question mark (?) lets a single character in the file name vary. For example, use "a?.zip" (without the quotation marks) to specify aa.zip, ab.zip and so on. • Wildcards (*) let multiple files match the pattern. For example, use "*a.zip" (without the quotation marks) to specify any file that ends with "a.zip". A file named "testa.zip" would match. There could be any number (of any type) of characters in front of the "a.zip" at the end and the file name would still match. A file named "test.zipa" for example would not match. • A * in the middle of a pattern has the Nebula Device check the beginning and end of the file name and ignore the middle. For example, with "abc*.zip", any file starting with "abc" and ending in ".zip" matches, no matter how many characters are in between. • The whole file name has to match if you do not use a question mark or asterisk. • If you do not use a wildcard, the Nebula Device checks up to the first 80 characters of a file name.
	Click this icon to remove the entry.
Add	Click this button to create a new entry.
Sandboxing	Sandboxing provides a safe environment to separate running programs from your network and host devices. Unknown or untrusted programs/codes are uploaded to the Defend Center and executed within an isolated virtual machine (VM) to monitor and analyze the zero-day malware and advanced persistent threats (APTs) that may evade the Nebula Device's detection, such as anti-malware. Results of cloud sandboxing are sent from the server to the Nebula Device.
Enabled	Select this option to turn on sandboxing on the Nebula Device
Log	Enable this option to allow the Security Firewall to create a log when a suspicious file is detected.
Policy	Specify whether the Nebula Device deletes (Destroy) or forwards (Allow) malicious files. Malicious files are files given a high score for malware characteristics by the Defend Center.
File submission options	Specify the type of files to be sent for sandbox inspection.
Intrusion Prevention System (IPS)	
Enabled	Select On to enable Detection or Prevention.
Mode	Select Prevention to have the Nebula Device perform a user-specified action when a stream of data matches a malicious signature. Select Detection to have the Nebula Device only create a log message when a stream of data matches a malicious signature.
External block list	
IP Reputation (EBL)	Select this to have the Nebula Device block packets that come from the listed addresses in the block list file on the server.
External block list	The Nebula Device uses black list entries stored in a file on a web server that supports HTTP or HTTPS. The Nebula Device blocks incoming and outgoing packets from the black list entries in this file.
Enabled	Select this to have the Nebula Device block the incoming packets that come from the listed addresses in the block list file on the server.

Table 136 Site-wide > Configure > Firewall > Security service (continued)

LABEL	DESCRIPTION
Name	Enter an identifying name for the block list file. You can use alphanumeric and ()+/:=?!*#@\$_%- characters, and it can be up to 60 characters long.
External DB	Enter the exact file name, path and IP address of the server containing the block list file. The file type must be 'txt'. For example, http://172.16.107.20/blacklist-files/myip-ebl.txt The server must be reachable from the Nebula Device.
Description	Enter a description of the block list file. You can use 1 to 512 single-byte characters.
	Click this icon to remove the entry.
Add	Click this button to create a new entry, up to 4 maximum.
Schedule update	The signatures for IP Reputation are continually updated as new malware evolves. New signatures can be downloaded to the Nebula Device periodically if you have subscribed for the IP Reputation signatures service. You need to create an account at myZyxel, register your Nebula Device and then subscribe for IP Reputation filter service in order to be able to download new signatures from myZyxel. Enable External DB schedule update to have the Nebula Device automatically check for new signatures regularly at the time and day specified. Select Daily to set the time of the day, or Weekly to set the day of the week and the time of the day. Schedule signature updates for a day and time when your network is least busy to minimize disruption to your network.
DNS/URL Threat Filter (EBL)	Select this to have the Nebula Device block packets that come from the listed addresses in the block list file on the server.
External block list	The Nebula Device uses black list entries stored in a file on a web server that supports HTTP or HTTPS. The Nebula Device blocks incoming and outgoing packets from the black list entries in this file.
Enabled	Select this to have the Nebula Device block the incoming packets that come from the listed addresses in the block list file on the server.
Name	Enter an identifying name for the block list file. You can use alphanumeric and ()+/:=?!*#@\$_%- characters, and it can be up to 60 characters long.
External DB	Enter the exact file name, path and IP address of the server containing the block list file. The file type must be 'txt'. For example, http://172.16.107.20/blacklist-files/myip-ebl.txt The server must be reachable from the Nebula Device.
Description	Enter a description of the block list file. You can use 1 to 512 single-byte characters.
	Click this icon to remove the entry.

Table 136 Site-wide > Configure > Firewall > Security service (continued)

LABEL	DESCRIPTION
Add	Click this button to create a new entry.
Schedule update	The signatures for DNS Filter and URL Threat Filter are the same. These signatures are continually updated as new malware evolves. New signatures can be downloaded to the Nebula Device periodically if you have subscribed for the URL Threat filter signatures service. You need to create an account at myZyxel, register your Nebula Device and then subscribe for URL Threat filter service in order to be able to download new signatures from myZyxel. Enable External DB schedule update to have the Nebula Device automatically check for new signatures regularly at the time and day specified. Select Daily to set the time of the day, or Weekly to set the day of the week and the time of the day. Schedule signature updates for a day and time when your network is least busy to minimize disruption to your network.

Create a Content Filter Profile

Click the Add button in the Content Filter section of the Site-wide > Configure > Firewall > Security service screen to access this screen.

Figure 196 Site-wide > Configure > Firewall > Security service > Content Filter: Add/Edit

Create Content Filter profile

Add profile

Name

Description (Optional)

Drop connection when there is an HTTPS connection with SSL v3(or previous version) ☒

Log ☒

Block Category

Templates

Test URL

+ Enter a url to know website category

Search category

Category list

Block web site

Web Site

1

Allow web site

Web Site

1

The following table describes the labels in this screen.

Table 137 Site-wide > Configure > Firewall > Security service > Content Filter: Add/Edit

LABEL	DESCRIPTION
Add profile	
Name	Enter a name for this profile for identification purposes. Use up to 127 characters (0 – 9 a – z). The casing does not matter.
Description (Optional)	Enter a description for this profile.
Drop connection when there is an HTTPS connection with SSL V3 (or previous version)	Select On to have the Nebula Device block HTTPS web pages using SSL V3 or a previous version.
Log	Select whether to have the Nebula Device generate a log (On) or not (Off) by default when traffic matches an application signature in this category.
Block Category	
The Nebula Device prevents users from accessing web pages that match the categories that you select below. When external database content filter blocks access to a web page, it displays the denied access message that you configured in the Denied access message field along with the category of the blocked web page.	
Templates	Web pages are classified into a category based on their content. You can choose a pre-defined template that has already selected certain categories. Alternatively, choose Custom and manually select categories in this section to control access to specific types of Internet content.
Test URL	You can check which category a web page belongs to. Enter a web site URL in the text box, then click Test. When the content filter is active, you should see the web page's category. The query fails if the content filter is not active. Content Filter can query a category by full URL string (for example, http://www.google.com/picture/index.htm), but HTTPS Domain Filter can only query a category by domain name ('www.google.com'), so the category may be different in the query result. Test URL displays both results in the test.
Search Category	Specify your desired filter criteria to filter the list of categories.
Category List	Click to display or hide the category list. These are categories of web pages based on their content. Select categories in this section to control access to specific types of Internet content.
Block web site	Sites that you want to block access to, regardless of their content rating, can be blocked by adding them to this list. Enter host names such as www.bad-site.com into this text field. Do not enter the complete URL of the site – that is, do not include "http://". All sub-domains are also blocked. For example, entering "*.bad-site.com" also blocks "www.badsite.com", "partner.bad-site.com", "press.bad-site.com", and so on. You can also enter just a top level domain. For example, enter *.com to block all .com domains. Use up to 127 characters (0–9 a–z). The casing does not matter.
Add	Click this button to add a new entry.
	Click this icon to remove the entry.


Table 137 Site-wide > Configure > Firewall > Security service > Content Filter: Add/Edit (continued)

LABEL	DESCRIPTION
Allow web site	Sites that you want to allow access to, regardless of their content rating, can be allowed by adding them to this list. Enter host names such as www.good-site.com into this text field. Do not enter the complete URL of the site – that is, do not include "http://". All sub-domains are allowed. For example, entering "*.zyxel.com" also allows "www.zyxel.com", "partner.zyxel.com", "press.zyxel.com", and so on. You can also enter just a top level domain. For example, enter *.com to allow all .com domains. Use up to 127 characters (0–9 a–z). The casing does not matter.
Add	Click this button to add a new entry.
	Click this icon to remove the entry.
Cancel	Click this button to exit this screen without saving.
Create	Click this button to save your changes and close the screen.

Add Application Patrol Profile

Click the Add button in the Application Patrol section of the Site-wide > Configure > Firewall > Security service screen to access this screen.

Figure 197 Site-wide > Configure > Firewall > Security service > Application Patrol: Add/Edit

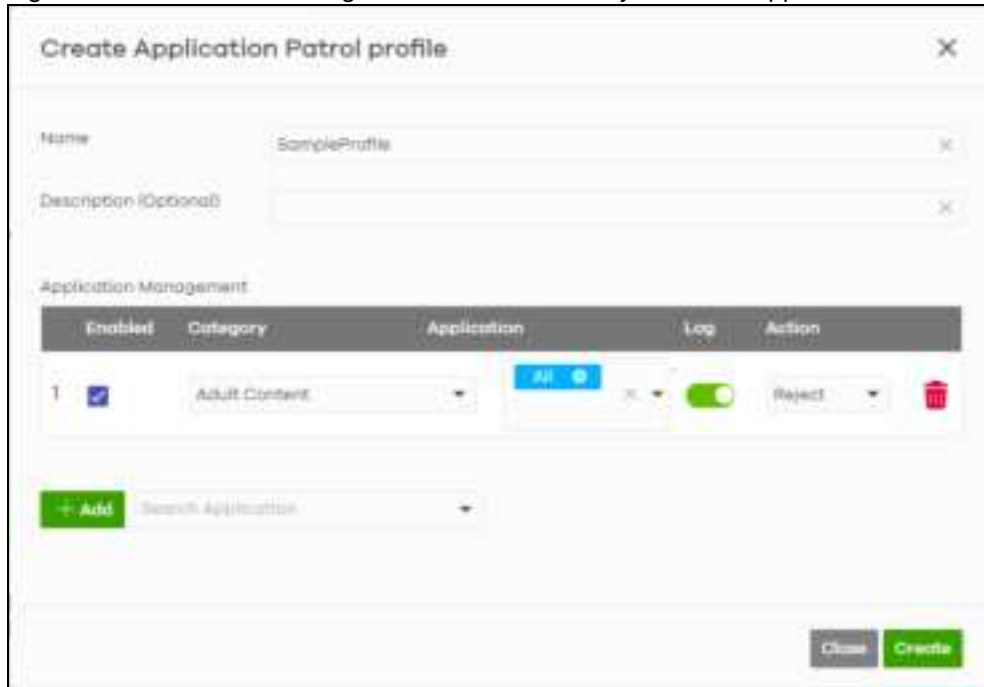

The following table describes the labels in this screen.

Table 138 Site-wide > Configure > Firewall > Security service > Application Patrol: Add/Edit

LABEL	DESCRIPTION
Create Application Patrol profile	
Name	Enter the name of the application patrol profile rule; use of up to 32 upper/lowercase letters. Space not allowed.

Table 138 Site-wide > Configure > Firewall > Security service > Application Patrol: Add/Edit

LABEL	DESCRIPTION
Description (Optional)	Enter an optional description of the application patrol profile rule; use up to 255 keyboard characters.
Application Management	
Enabled	Select the checkbox to turn on the rule. Otherwise, clear the checkbox to turn off the rule.
Category	Select an application category.
Application	Select All or select an application within the category to apply the policy.
Log	Select whether to have the Nebula Device generate a log when the policy is matched to the criteria listed above.
Action	Displays the default action for the applications selected in this category. Forward – the Nebula Device routes packets that matches these signatures. Drop – the Nebula Device silently drops packets that matches these signatures without sending a notification to both the sender and receiver. Reject – the Nebula Device drops packets that matches these application signatures and sends notification to clients.
	Click this icon to remove the entry.
Add	Click this button to create a new application category and set actions for specific applications within the category.
Search Application	Enter a name to search for relevant applications and click Add to create an entry.
Close	Click this button to exit this screen without saving.
Create	Click this button to save your changes and close the screen.

8.3.10 Object

Address objects can represent a single IP address or a range of IP addresses. Address groups are composed of address objects and other address groups. The sequence of members in the address group is not important.

Address objects and address groups are used in policy routes, security policies, application patrol, content filter, and VPN connection policies. For example, addresses are used to specify where content restrictions apply in content filter.


8.3.10.1 Zone Overview

Set up zones to configure network security and network policies in the Nebula Device. A zone is a group of interfaces and/or VPN tunnels. The Nebula Device uses zones instead of interfaces in many security and policy settings, such as Secure Policies rules, Security Service, and remote management.

Zones cannot overlap. Each Ethernet interface, VLAN interface, bridge interface, PPPoE/PPTP interface and VPN tunnel can be assigned to at most one zone. Virtual interfaces are automatically assigned to the same zone as the interface on which they run.

The Zone screen provides a summary of all zones. In addition, this screen allows you to add, edit, and remove zones. Click Site-wide > Configure > Firewall > Object > Zone to access this screen.

Figure 198 Site-wide > Configure > Firewall > Object > Zone

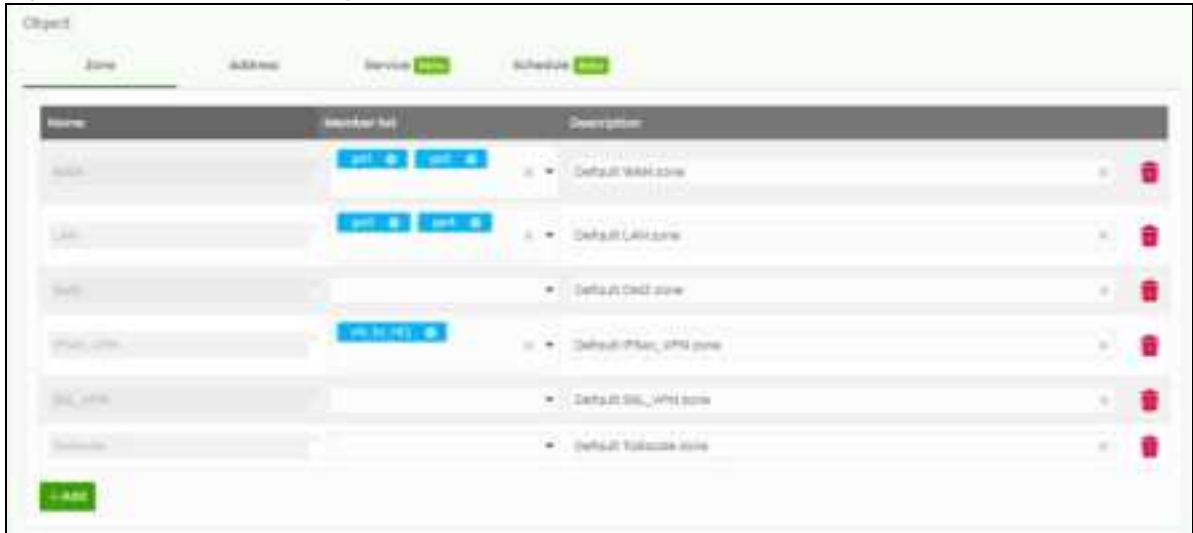

The following table describes the labels in this screen.

Table 139 Site-wide > Configure > Firewall > Object > Zone

LABEL	DESCRIPTION
Name	This field displays the name of the zone. For a system default zone, the name is read only. For a user-configured zone, enter the name used to refer to the zone. You may use 2 to 30 single-byte characters, including 0-9a-zA-Z_., but the first character cannot be a number. This value is case-sensitive.
Member list	This field displays the names of the interfaces that belong to each zone. Select the interfaces and VPN tunnels that you want to add to the zone you are editing.
Description	This field displays the description of the zone. Enter the description associated with the zone, if any. You can use 1 to 512 single-byte characters.
Add	Click this to create a new, user-configured zone.
	To remove a zone, select it and click Remove. The Nebula Device confirms you want to remove it before doing so.

8.3.10.2 IPv4 Address Overview

The Address screen is used to create, maintain, and remove addresses.

The Address screen provides a summary of all addresses and address groups in the Nebula Device. To access this screen, click Site-wide > Configure > Firewall > Object > Address.

Figure 199 Site-wide > Configure > Firewall > Object > Address

The screenshot shows the 'Object > Address' configuration page. At the top, there are tabs for 'Zone', 'Address', 'Service', and 'Schedule'. The 'Address' tab is selected. Below the tabs, there is a table of address objects. The table has four columns: 'Name', 'Type', 'Address', and 'Description'. Below the table, there is an 'Address group' section with a table for grouping addresses.

Name	Type	Address	Description
default-ipv4	IPv4	0.0.0.0/0	Default IPv4 Policy
default-ipv6	IPv6	::::/0	Default IPv6 Policy
default-ipv4-subnet	IPv4 Subnet	10.0.0.0/24	Default IPv4 Subnet Policy
default-ipv6-subnet	IPv6 Subnet	::::/64	Default IPv6 Subnet Policy
default-ipv4-subnet-2	IPv4 Subnet	10.0.0.0/24	Default IPv4 Subnet Policy
default-ipv6-subnet-2	IPv6 Subnet	::::/64	Default IPv6 Subnet Policy
default-ipv4-subnet-3	IPv4 Subnet	10.0.0.0/24	Default IPv4 Subnet Policy
default-ipv6-subnet-3	IPv6 Subnet	::::/64	Default IPv6 Subnet Policy
default-ipv4-subnet-4	IPv4 Subnet	10.0.0.0/24	Default IPv4 Subnet Policy
default-ipv6-subnet-4	IPv6 Subnet	::::/64	Default IPv6 Subnet Policy
default-ipv4-subnet-5	IPv4 Subnet	10.0.0.0/24	Default IPv4 Subnet Policy
default-ipv6-subnet-5	IPv6 Subnet	::::/64	Default IPv6 Subnet Policy
default-ipv4-subnet-6	IPv4 Subnet	10.0.0.0/24	Default IPv4 Subnet Policy
default-ipv6-subnet-6	IPv6 Subnet	::::/64	Default IPv6 Subnet Policy
default-ipv4-subnet-7	IPv4 Subnet	10.0.0.0/24	Default IPv4 Subnet Policy
default-ipv6-subnet-7	IPv6 Subnet	::::/64	Default IPv6 Subnet Policy
default-ipv4-subnet-8	IPv4 Subnet	10.0.0.0/24	Default IPv4 Subnet Policy
default-ipv6-subnet-8	IPv6 Subnet	::::/64	Default IPv6 Subnet Policy
default-ipv4-subnet-9	IPv4 Subnet	10.0.0.0/24	Default IPv4 Subnet Policy
default-ipv6-subnet-9	IPv6 Subnet	::::/64	Default IPv6 Subnet Policy
default-ipv4-subnet-10	IPv4 Subnet	10.0.0.0/24	Default IPv4 Subnet Policy
default-ipv6-subnet-10	IPv6 Subnet	::::/64	Default IPv6 Subnet Policy

Below the table, there is an 'Address group' section. It has a table with columns: 'Name', 'Address', and 'Description'. There is a red box around the 'Name' column header.

The following table describes the labels in this screen.

Table 140 Site-wide > Configure > Firewall > Object > Address

LABEL	DESCRIPTION
Address	
Name	This field displays the configured name of each address object. Enter a name used to refer to the address. You may use 2 to 30 single-byte characters, including 0-9a-zA-Z, underscores (_), or dashes (-), but the first character cannot be a number. This value is case-sensitive. Note: This is a required field and is not editable anymore after clicking Apply.

Table 140 Site-wide > Configure > Firewall > Object > Address (continued)

LABEL	DESCRIPTION
Type	This field displays the type of each address object. "INTERFACE" means the object uses the settings of one of the Nebula Device's interfaces. Select the type of address you want to create. • Host – the object uses an IPv4 address to define a host address. • Range – the object uses a range IPv4 address defined by a Starting IP address and an Ending IP address. • Subnet – the object uses a network address defined by a Network IPv4 address and Netmask subnet mask. • Interface IP – the object uses the IPv4 address of one of the Nebula Device's interfaces. • Interface subnet – the object uses the subnet mask of one of the Nebula Device's interfaces. • Interface gateway – the object uses the gateway IPv4 address of one of the Nebula Device's interfaces. • Geography – the object uses the IPv4 addresses of a country to represent a country. • FQDN – the object uses the Fully Qualified Domain Name (FQDN) to represent a website. An FQDN consists of a host and domain name. For example, 'www.zyxel.com.tw' is a fully qualified domain name, where 'www' is the host, 'zyxel' is the third-level domain, 'com' is the second-level domain, and "tw" is the top level domain. Note: The Nebula Device automatically updates address objects that are based on an interface's IPv4 address, subnet, or gateway if the interface's IPv4 address settings change. For example, if you change 1's IPv4 address, the Nebula Device automatically updates the corresponding interface-based, LAN subnet address object. Note: This field is not editable anymore after clicking Save.
Address	This field displays the IPv4 addresses represented by each address object. If the object's settings are based on one of the Nebula Device's interfaces, the name of the interface displays first followed by the object's current address settings. Note: This field cannot be blank. Enter the IPv4 address that this address object represents.
Description	This field displays the description of the address. Enter the description associated with the address, if any. You can use 1 to 512 single-byte characters.
Add	Click this to create a new address.
	To remove a user-configured address, select it and click Remove. The Nebula Device confirms you want to remove it before doing so.
Address group	
Name	This field displays the name of each address group. Enter a name used to refer to the address group. You may use 2 to 30 single-byte characters, including 0-9a-zA-Z, underscores (_), or dashes (-), but the first character cannot be a number. This value is case-sensitive. Note: This is a required field and is not editable anymore after clicking Save.
Member list	This field displays the names of the address and address group objects that have been added to the address group. The order of members is not important. Select items from this list that you want to be members. Note: This field is optional. Only objects of the same address type can be added to an address group.

Table 140 Site-wide > Configure > Firewall > Object > Address (continued)

LABEL	DESCRIPTION
Description	This field displays the description of each address group, if any. Enter the description associated with the address group, if any. You can use 1 to 512 single-byte characters.
Add	Click this to add a new entry.
	To remove an entry, select it and click Remove. The Nebula Device confirms you want to remove it before doing so.

8.3.10.3 Service Overview

Use service objects to define TCP applications, UDP applications, and ICMP messages. You can also create service groups to refer to multiple service objects in other features.

Service Objects and Service Groups

Use service objects to define IP protocols.

- TCP applications
- UDP applications
- ICMP messages
- user-defined services (for other types of IP protocols)


These objects are used in policy routes and security policies.

Use service groups when you want to create the same rule for several services, instead of creating separate rules for each service. Service groups may consist of services and other service groups. The sequence of members in the service group is not important.

The Service screen provides a summary of all services and their definitions. In addition, this screen allows you to add, edit, and remove services.

To access this screen, click Site-wide > Configure > Firewall > Object > Service.

Figure 200 Site-wide > Configure > Firewall > Object > Service

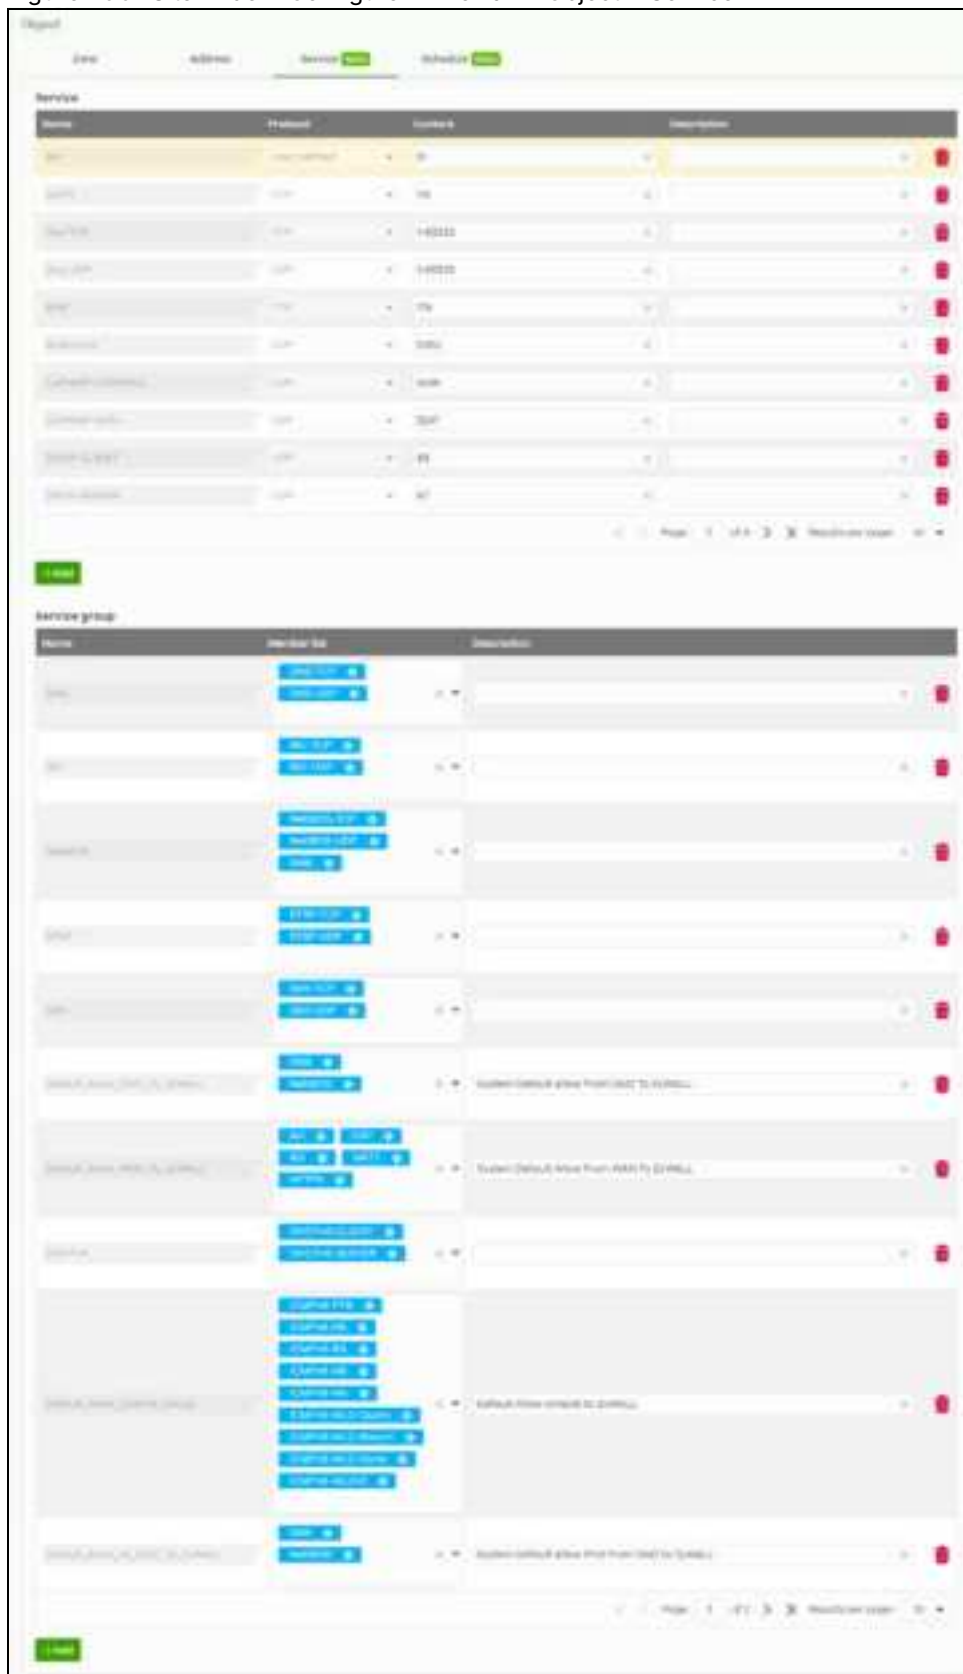

The following table describes the labels in this screen.

Table 141 Site-wide > Configure > Firewall > Object > Service

LABEL	DESCRIPTION
Service	
Name	This field displays the name of each service. Enter the name used to refer to the service. You may use 1 to 30 single-byte characters, including 0-9a-zA-Z!"#\$%&'()*+,-/;=?@_., but the first character cannot be a number. &.<>[\ }{ ^ are not allowed. This value is case-sensitive. Note: This is a required field and is not editable anymore after clicking Save.
Protocol	This field displays the protocol the service uses. Select the protocol the service uses. Choices are: TCP, UDP, ICMP, ICMPv6, and User defined. Note: This field is not editable anymore after clicking Save.
Content	This field displays the IP Protocol configuration information.
Description	This field displays a description of each service. Enter the description used to refer to the service. You can use 1 to 30 single-byte characters, including 0-9a-zA-Z!"#\$%&'()*+,-/;=?@_., but the first character cannot be a number. &.<>[\ }{ ^ are not allowed.
Add	Click this to create a new entry.
	To remove an entry, select it and click Remove. The Nebula Device confirms you want to remove it before doing so.
Service group	
Name	This field displays the name of each service group. Enter the name used to refer to the service group. You may use 1 to 30 single-byte characters, including 0-9a-zA-Z!"#\$%&'()*+,-/;=?@_., but the first character cannot be a number. &.<>[\ }{ ^ are not allowed. This value is case-sensitive.
Member list	This list displays the names of the service and service group objects that have been added to the service group. The order of members is not important. Select items from the list on the left that you want to be members and move them to the list on the right. Move any members you do not want included to the list on the left. Note: This list is optional, it can be empty.
Description	This field displays the description of each service group, if any. Enter the description used to refer to the service group. You can use 1 to 30 single-byte characters, including 0-9a-zA-Z!"#\$%&'()*+,-/;=?@_., but the first character cannot be a number. &.<>[\ }{ ^ are not allowed.
Add	Click this to create a new entry.
	To remove an entry, select it and click Remove. The Nebula Device confirms you want to remove it before doing so.

8.3.10.4 Schedule Overview

Use schedules to set up one-time and recurring schedules for policy routes, security policies, application patrol, and content filtering. The Nebula Device supports one-time and recurring schedules. One-time schedules are effective only once, while recurring schedules usually repeat. Both types of schedules are based on the current date and time in the Nebula Device.

One-time Schedules

One-time schedules begin on a specific start date and time and end on a specific stop date and time. One-time schedules are useful for long holidays and vacation periods.

Recurring Schedules

Recurring schedules begin at a specific start time and end at a specific stop time on selected days of the week (Sunday, Monday, Tuesday, Wednesday, Thursday, Friday, and Saturday). Recurring schedules always begin and end in the same day. Recurring schedules are useful for defining the workday and off-work hours.

The Schedule screen provides a summary of all schedules in the Nebula Device.

To access this screen, click Site-wide > Configure > Firewall > Object > Schedule.

Figure 201 Site-wide > Configure > Firewall > Object > Schedule

The screenshot displays the 'Schedule' configuration page. At the top, there are tabs for 'Zone', 'Address', 'Service', and 'Schedule'. The 'Schedule' tab is active. Below the tabs is a table with the following data:

Name	Type	Start Date/Time	Stop Date/Time	Description
1 Guest	One-Time	2024-10-15 00:00	2024-10-30 00:00	one-time time range
2 Working hour	Recurring	08:00 Mon	18:00 Fri	working day

Below the table is a green '+ Add' button. At the bottom, there is a 'Schedule group' section. It contains a table with the following data:

Name	Member list	Description
Group1	Guest, Working hour	schedule group

There is also a green '+ Add' button in the 'Schedule group' section.

The following table describes the labels in this screen.

Table 142 Site-wide > Configure > Firewall > Object > Schedule

LABEL	DESCRIPTION
Schedule	
Name	This field displays the name of the schedule, which is used to refer to the schedule. Note: This is a required field and is not editable anymore after clicking Apply.

Table 142 Site-wide > Configure > Firewall > Object > Schedule

LABEL	DESCRIPTION
Type	This field displays the type of schedule, One Time or Recurring. Note: This field is not editable anymore after clicking Save.
Start Day/Time	This field displays the date and time at which the schedule begins.
Stop Day/Time	This field displays the date and time at which the schedule ends.
Description	This field displays a description used to identify the one time or recurring schedule.
Add	Click this to create a new entry.
	Click the edit icon to be able to change the entry's settings.
	To remove an entry, select it and click Remove. The Nebula Device confirms you want to remove it before doing so.
Schedule group	
Name	This field displays the name of the schedule group, which is used to refer to the schedule. Enter the name used to refer to the recurring schedule. You may use 2 to 30 single-byte characters, including 0-9a-zA-Z, underscores (_), or dashes (-), but the first character cannot be a number. This value is case-sensitive.
Member list	This field lists the members in the schedule group. Each member is separated by a comma. The order of members is not important. Select items from the list that you want to be members. Remove any members you do not want included to the list by clicking 'x'.
Description	This field displays the description of the schedule group. Enter the description used to refer to the service group. You can use 1 to 30 single-byte characters, special characters and spaces are allowed.
Add	Click this to create a new entry.
	To remove an entry, select it and click Remove. The Nebula Device confirms you want to remove it before doing so.

8.3.10.5 Schedule Edit

Use this screen to define a one-time/recurring schedule or edit an existing one. To access this screen, go to the Schedule screen and click the Add icon or an Edit icon in the Schedule section.

Figure 202 Site-wide > Configure > Firewall > Object > Schedule > Add/Edit (One-time)

The following table describes the labels in this screen.

Table 143 Site-wide > Configure > Firewall > Object > Schedule > Add/Edit (One-time)

LABEL	DESCRIPTION
Configuration	
Name	Enter the name used to refer to the one-time schedule. You may use 2 to 30 single-byte characters, including 0-9a-zA-Z, underscores (_), or dashes (-), but the first character cannot be a number. This value is case-sensitive.
Description	Enter the description used to identify the one-time schedule. You can use 1 to 30 single-byte characters, including 0-9a-zA-Z'()+,./:=?;!*#@\$_%-"
Type	Select the type of schedule, One Time.
Start Day/Time	Specify the year, month, and day when the schedule begins. - Year – present year – present/future year - Month – JAN – DEC - Day – 1 – 31 (it is not possible to specify illegal dates, such as February 31.) Specify the hour and minute when the schedule begins. - Hour:Minute – 00:00 – 23:45
Stop Day/Time	Specify the year, month, and day when the schedule ends. - Year – present year – present/future year - Month – JAN – DEC - Day – 1 – 31 (it is not possible to specify illegal dates, such as February 31.) Specify the hour and minute when the schedule ends. - Hour:Minute – 00:00 – 23:45
Create	Click Create to save your customized settings and exit this screen.
Close	Click Close to return the screen to its last-saved settings.

Figure 203 Site-wide > Configure > Firewall > Object > Schedule > Add/Edit (Recurring)

The following table describes the labels in this screen.

Table 144 Site-wide > Configure > Firewall > Object > Schedule > Add/Edit (Recurring)

LABEL	DESCRIPTION
Configuration	
Name	Enter the name used to refer to the one-time schedule. You may use 2 to 30 single-byte characters, including 0-9a-zA-Z, underscores (_), or dashes (-), but the first character cannot be a number. This value is case-sensitive.
Description	Enter the description used to identify the one-time schedule. You can use 1 to 30 single-byte characters, including 0-9a-zA-Z'()+,./:=?;!*#@\$_%-"
Type	Select the type of schedule, Recurring.
Start time	Specify the hour and minute when the schedule begins each day. Then, select each day of the week the recurring schedule is effective. - Hour:Minute – 00:00–23:45 - Day – Monday–Sunday
Stop time	Specify the hour and minute when the schedule ends each day. Then, select each day of the week the recurring schedule is effective. - Hour:Minute – 00:00–23:45 - Day – Monday–Sunday
Create	Click Create to save your customized settings and exit this screen.
Close	Click Close to return the screen to its last-saved settings.

8.3.11 Captive Portal

Use this screen to configure captive portal settings for each interface. A captive portal can intercept network traffic until the user authenticates his or her connection, usually through a specifically designated login web page.

Click Site-wide > Configure > Firewall > Captive portal to access this screen.

Figure 204 Site-wide > Configure > Firewall > Captive portal

Captive portal

Interface:

Captive portal on this interface is disabled. You can't change this setting. [View](#)

Themes

 [View](#) [Edit](#)

[+ Add new](#) [Refresh](#)

Click to continue/View/Sign-in page

Layout: [Customize layout](#)

Message:

Success page

Message: [View](#)

External captive portal URL

Use URL: ☒ URL:

To use custom captive portal page, please download the psd file and edit them.
[Download](#) the customized captive portal page example

Captive portal behavior

After the captive portal page where the user should go?

☐ Stay on captive portal until network successfully setup

☒ To external URL:

The following table describes the labels in this screen.


Table 145 Site-wide > Configure > Firewall > Captive portal

LABEL	DESCRIPTION
Interface	Select the Nebula Device's interface (network) to which the settings you configure here is applied.
Themes	This section is not configurable when External captive portal URL is set to ON. - Click the Preview icon at the upper right of a theme image to display the portal page in a new frame. - Click the Copy icon to create a new custom theme (portal page). - Click the Edit icon of a custom theme to go to a screen, where you can view and configure the details of the custom portal pages. See Section 8.3.10.1 on page 597. - Click the Remove icon to delete a custom theme. Select the theme you want to use on the specified interface.
Click-to-continue/Sign-on page	
This section is not configurable when External captive portal URL is set to ON.	
Logo	This shows the logo image that you uploaded for the customized login page. Click Upload a logo and specify the location and file name of the logo graphic or click Browse to locate it. You can use the following image file formats: GIF, PNG, or JPG.
Message	Enter a note to display below the title. Use up to 1024 printable ASCII characters. Spaces are allowed.
Success page	
Message	Enter a note to display on the page that displays when a user logs in successfully. Use up to 1024 printable ASCII characters. Spaces are allowed.
External captive portal URL	
Use URL	Select On to use a custom login page from an external web portal instead of the one built into the NCC. You can configure the look and feel of the web portal page. Specify the login page's URL; for example, http://IIS server IP Address/login.asp. The Internet Information Server (IIS) is the web server on which the web portal files are installed.
Captive portal behavior	
After the captive portal page where the user should go?	Select To promotion URL and specify the URL of the web site/page to which the user is redirected after a successful login. Otherwise, select Stay on Captive portal authenticated successfully page.

8.3.11.1 Custom Theme Edit

Use this screen to check what the custom portal pages look like. You can also view and modify the CSS values of the selected HTML file. Click a custom login page's Edit button in the Site-wide > Configure > Firewall > Captive portal screen to access this screen.

Figure 205 Site-wide > Configure > Firewall > Captive portal: Edit

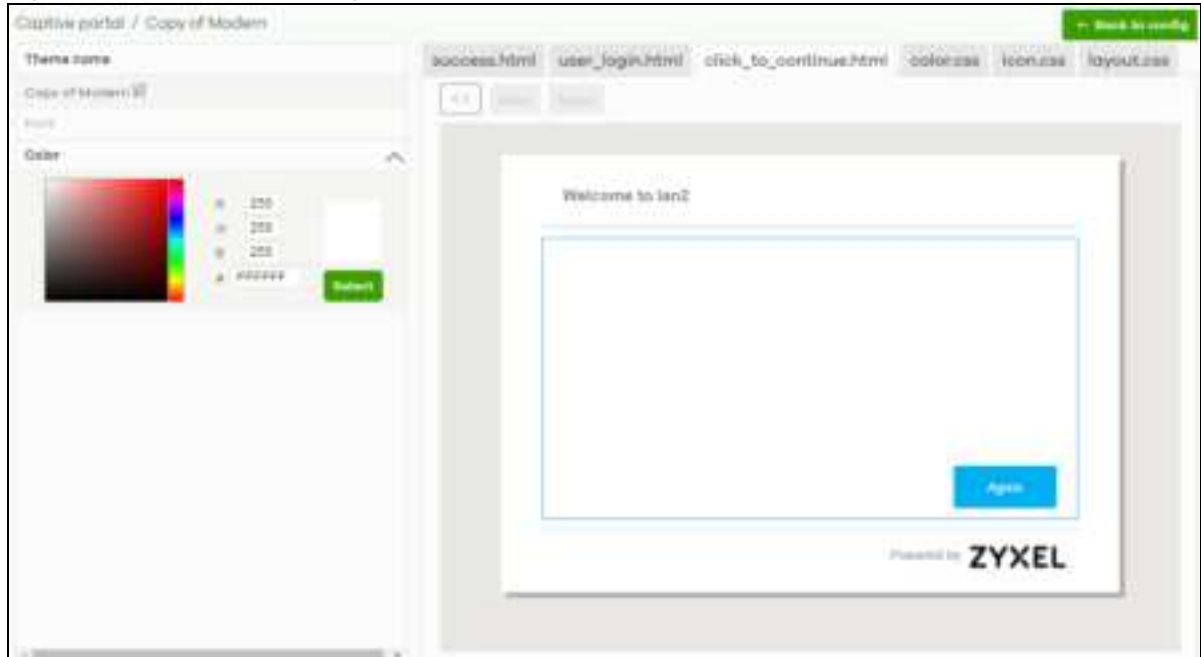

The following table describes the labels in this screen.

Table 146 Site-wide > Configure > Firewall > Captive portal: Edit

LABEL	DESCRIPTION
Back to config	Click this button to return to the Captive portal screen.
Theme name	This shows the name of the theme. Click the edit icon to change it.
Font	Click the arrow to hide or display the configuration fields. To display this section and customize the font type and/or size, click an item with text in the preview of the selected custom portal page (HTML file).
Color	Click the arrow to hide or display the configuration fields. Click an item in the preview of the selected custom portal page (HTML file) to display this section and customize its color, such as the color of the button, text, window's background, links, borders, and so on. Select a color that you want to use and click the Select button.
HTML/CSS	This shows the HTML file name of the portal page created for the selected custom theme. This also shows the name of the CSS files created for the selected custom theme. Click an HTML file to display the portal page. You can also change colors and modify the CSS values of the selected HTML file.
	Click this button to view and modify the CSS values of the selected HTML file. It is recommended that you do NOT change the script code to ensure proper operation of the portal page.
	Click this button to preview the portal page (the selected HTML file).
Save	Click this button to save your settings for the selected HTML file to the NCC.
Apply	Click this button to save your settings for the selected HTML file to the NCC and apply them to the Nebula Device in the site.

8.3.12 Authentication Method

Use this screen to enable or disable web authentication on an interface.

Click Site-wide > Configure > Firewall > Authentication method to access this screen.

Figure 206 Site-wide > Configure > Firewall > Authentication method

Authentication Method

Interface: Save

Network Access:

☐ Disable
Users can access the network directly.

☐ Click-to-connect
Users must view and agree the captive portal page then can access the network.

☒ Sign-on with:

☒ New Portal authentication ⓘ

WebUI portal ☒

WebUI portal address

[Get new portal page](#)

Captive portal access attribute

Self registration

Login on multiple client devices

NCAE disconnection behavior ⓘ

☒ Allow
Client device can access the network without logging in, except they are explicitly blocked.

☐ Limit
Only currently authorized clients and whitelisted client devices will be able to access the network.

The following table describes the labels in this screen.

Table 147 Site-wide > Configure > Firewall > Authentication method

LABEL	DESCRIPTION
Interfaces	Select the Nebula Device's interface (network) to which the settings you configure here is applied.
Network Access	Select Disable to turn off web authentication. Select Click-to-continue to block network traffic until a client agrees to the policy of user agreement. Select Sign-on with to block network traffic until a client authenticates with an external RADIUS or AD server through the specifically designated web portal page. Select Nebula Cloud Authentication or an authentication server that you have configured in the Site-wide > Configure > Firewall > Firewall settings screen (see Section 8.3.14 on page 614). Select Two-Factor Authentication to require that the user log in using both their password and a Google Authenticator code. To log in, users must have Two-Factor Authentication enabled on their account and have setup Google Authenticator on their mobile device.
Walled garden	This field is not configurable if you set Network Access to Disable. Select to turn on or off the walled garden feature. With a walled garden, you can define one or more web site addresses that all users can access without logging in. These can be used for advertisements for example.
Walled garden ranges	Specify walled garden web site links, which use a domain name or an IP address for web sites that all users are allowed to access without logging in.
Captive portal access attribute	
Self-registration	This field is available only when you select Sign-on with Nebula Cloud authentication in the Network Access field. Select Allow users to create accounts with auto authorized or Allow users to create accounts with manual authorized to display a link in the captive portal login page. The link directs users to a page where they can create an account before they authenticate with the NCC. For Allow users to create accounts with manual authorized, users cannot log in with the account until the account is authorized and granted access. For Allow users to create accounts with auto authorized, users can just use the registered account to log in without administrator approval. Select Don't allow users to create accounts to not display a link for account creation in the captive portal login page.
Login on multiple client devices	This field is available only when you select Sign-on with in the Network Access field. Select Multiple devices access simultaneously if you allow users to log in as many times as they want as long as they use different IP addresses. Select One device at a time if you do not allow users to have simultaneous logins.
NCAS disconnection behavior	This field is available only when you select Sign-on with Nebula Cloud Authentication in the Network Access field. Select Allowed to allow any users to access the network without authentication when the NCAS (Nebula Cloud Authentication Server) is not reachable. Select Limited to allow only the currently connected users or the users in the white list to access the network.

8.3.13 Wireless

This screen allows you to configure different SSID profiles for your Nebula Device. An SSID, or Service Set Identifier, is the name of the WiFi network to which a WiFi client can connect. The SSID appears as

readable text to any device capable of scanning for WiFi frequencies (such as the WiFi adapter in a laptop), and is displayed as the WiFi network name when a person makes a connection to it.

Click Site-wide > Configure > Firewall > Wireless to access this screen.

Figure 207 Site-wide > Configure > Firewall > Wireless

The screenshot shows the 'Wireless' configuration page. On the left is a sidebar with a menu containing: No., Name, Enabled, Authentication, WLAN Security, Associate Key, Band, and Outgoing Interface. The main content area is titled 'Wireless' and contains two sections. The 'SSID Settings' section has a table with four columns. The first column is 'No.' with values 1, 2, 3, and 4. The second column is 'Name' with values 'Private Network (Dynamic)', 'Guest Network (Dynamic)', 'SSID1', and 'SSID2'. The third column is 'Enabled' with toggle switches (green for 1 and 2, grey for 3 and 4). The fourth column is 'Authentication' with dropdown menus showing 'WPA2-PSK', 'Open', 'Open', and 'Open'. Below these are fields for 'Associate Key' and 'Band' (with options like 'Concurrent operation (2.4G...)', '2.4GHz', '5GHz', 'Auto'). The 'Radio Settings' section includes 'Maximum output power' (24dBm, 30dBm, 33dBm), 'Channel width' (20MHz, 40MHz, 80MHz), '2.4 GHz channel deployment' (Three-Channel Deployment), and '5 GHz channel deployment' (Auto).

The following table describes the labels in this screen.

Table 148 Site-wide > Configure > Firewall > Wireless

LABEL	DESCRIPTION
SSID Settings	
No.	This shows the SSID number.
Name	This shows the SSID name as it appears to WiFi clients.
Enabled	Click this to enable the SSID to be discoverable by WiFi clients.
Authentication	
WLAN Security	Select Open to allow any WiFi client to associate with this network without any data encryption nor authentication. Select WPA2-PSK to enable WPA2-PSK data encryption.
Associate Key	Enter a pre-shared key from 8 to 64 case-sensitive keyboard characters to enable WPA2-PSK data encryption.
Band	Select to have the SSID use either 2.4 GHz band only or the 5 GHz band only. If you select Concurrent operation (2.4 GHz and 5 GHz), the SSID uses both frequency bands.
Outgoing Interface	Select the interface for outgoing traffic from the Nebula Device to the Internet.

Table 148 Site-wide > Configure > Firewall > Wireless (continued)

LABEL	DESCRIPTION
Radio Settings	
Maximum output power	Enter the maximum output power of the radio (in dBm).
Channel width	Select the WiFi channel bandwidth you want the Nebula Device to use. A standard 20 MHz channel offers transfer speeds of up to 144 Mbps (2.4 GHz) or 217 Mbps (5 GHz) whereas a 40 MHz channel uses two standard channels and offers speeds of up to 300 Mbps (2.4 GHz) or 450 Mbps (5 GHz). An IEEE 802.11ac-specific 80 MHz channel offers speeds of up to 1.3 Gbps. 40 MHz (channel bonding or dual channel) bonds two adjacent radio channels to increase throughput. An 80 MHz channel consists of two adjacent 40 MHz channels. The WiFi clients must also support 40 MHz or 80 MHz. It is often better to use the 20 MHz setting in a location where the environment hinders the WiFi signal. Note: It is suggested that you select 20 MHz when there is more than one 2.4 GHz Nebula Device in the network.
2.4 GHz channel deployment	Select Three-Channel Deployment to limit channel switching to channels 1, 6, and 11, the three channels that are sufficiently attenuated to have almost no impact on one another. In other words, this allows you to minimize channel interference by limiting channel-hopping to these three "safe" channels. Select Four-Channel Deployment to limit channel switching to four channels. Depending on the country domain, if the only allowable channels are 1 – 11 then the Nebula Device uses channels 1, 4, 7, 11 in this configuration; otherwise, the Nebula Device uses channels 1, 5, 9, 13 in this configuration. Four-Channel Deployment expands your pool of possible channels while keeping the channel interference to a minimum. Select Manual to choose the allowable channels 1 – 11.
5 GHz channel deployment	Select how you want to specify the channels the Nebula Device switches between for 5 GHz operation. Select Auto to have the Nebula Device automatically select the best channel. Select Manual to choose from the allowable channels.

8.3.14 Firewall Settings

Use this screen to configure DNS settings and external AD (Active Directory), RADIUS, or LDAP server that the Nebula Device can use for authenticating users.

AD (Active Directory) is a directory service that is both a directory and a protocol for controlling access to a network. The directory consists of a database specialized for fast information retrieval and filtering activities. You create and store user profile and login information on the external server.

This screen also lets you configure the addresses of walled garden web sites that users can access without logging into the Nebula Device. The settings in this screen apply to all networks (interfaces) on the Nebula Device. If you want to configure walled garden web site links for a specific interface, use the Authentication method screen.

Click Site-wide > Configure > Firewall > Firewall settings to access this screen.

Figure 208 Site-wide > Configure > Firewall > Firewall settings: DNS

Firewall settings

DNS

Address Record

Hostname	IP Address

[+ Add](#)

Domain Zone Forwarder

Domain Zone	IP Address	Interface

[+ Add](#)

Figure 209 Site-wide > Configure > Firewall > Firewall settings: DNS (FLEX H Series only)

Firewall settings [Save](#)

DNS

Address Record

Hostname	Domain	IP Address

[+ Add](#)

CNAME Record

Hostname	Domain	IP Address

[+ Add](#)

A/AAAA Record

Hostname	IP/IPv6

[+ Add](#)

Domain Zone Forwarder

Domain	DNS server	Interface

[+ Add](#)

Global Zone Forwarder

Domain	Type	DNS server	Interface
Default	1	192.168.1.1 (eth0)	Auto

[+ Add](#)

The following table describes the labels in this screen.

Table 149 Site-wide > Configure > Firewall > Firewall settings: DNS

LABEL	DESCRIPTION
DNS	
Address Record	This record specifies the mapping of an IPv4 address.
FQDN	This field is only available if the Address Type is FQDN, in which case this field cannot be blank. Enter the FQDN of the website that this address object represents. You can enter a wildcard in the first position. For example, '*.zyxel.com'.
Hostname	This is the name of the host. Enter a name, up to 63 keyboard characters including '([-A-Za-z0-9]+[*])'; This field appears for FLEX H Series only.
Domain	This is the host's fully qualified domain name. Enter the Fully-Qualified Domain Name (FQDN) of a server. An FQDN starts with a host name and continues all the way up to the top-level domain name. For example, www.zyxel.com.tw is a fully qualified domain name, where "www" is the host, "zyxel" is the third-level domain, "com" is the second-level domain, and "tw" is the top level domain. Underscores are not allowed. Use "*" as a prefix in the FQDN for a wildcard domain name (for example, *.example.com). This field appears for FLEX H Series only.
IP Address	Enter the host's IPv4 address.
	Click this icon to remove the entry.
Add	Click this button to create a new entry.
CNAME Record	This record specifies an alias for a FQDN. Use this record to bind all subdomains with the same IP address as the FQDN without having to update each one individually, which increases chance for errors. These fields appear for FLEX H Series only.
Hostname	This is the name of the host.
Domain	This is the host's fully qualified domain name.
Alias Name	This displays the alias name. Enter an alias name, up to 63 single-byte characters. The format is "([-A-Za-z0-9]+[*])";
	Click this icon to remove the entry.
Add	Click this button to create a new entry.
MX Record	An MX (Mail eXchange) record identifies a mail server that handles the mail for a particular domain. These fields appear for FLEX H Series only.
Domain	This is the domain name where the mail is destined for.
FQDN	This is the Fully-Qualified Domain Name (FQDN) of a mail server that handles the mail for the domain specified in the field above.
	Click this icon to remove the entry.
Add	Click this button to create a new entry.
Domain Zone Forwarder	This specifies a DNS server's IPv4 address. The Nebula Device can query the DNS server to resolve domain zones for features like VPN, DDNS and the time server. When the Nebula Device needs to resolve a domain zone, it checks it against the domain zone forwarder entries in the order that they appear in this list.
Domain Zone	A domain is a fully qualified domain name without the host. For example, zyxel.com.tw is the domain zone for the www.zyxel.com.tw fully qualified domain name. Whenever the Nebula Device receives needs to resolve a zyxel.com.tw domain name, it can send a query to the recorded name server IP address.

Table 149 Site-wide > Configure > Firewall > Firewall settings: DNS (continued)

LABEL	DESCRIPTION
IP Address	Enter the DNS server's IP address.
DNS server	This is the IP address of a DNS server. This field displays N/A if you have the Nebula Device get a DNS server IP address from the ISP dynamically but the specified interface is not active. This field appears for FLEX H Series only.
Interface	Select the interface through which the Nebula Device sends DNS queries to the specified DNS server.
	Click this icon to remove the entry.
Add	Click this button to create a new entry.
Global Zone Forwarder	These fields appear for FLEX H Series only.
Domain	This is the host's fully qualified domain name.
Type	This shows Default when using the pre-defined settings. This shows User-defined when you want to configure your own DNS server and Interface.
DNS server	This is the IP address of a DNS server. This field displays N/A if you have the Nebula Device get a DNS server IP address from the ISP dynamically but the specified interface is not active.
Interface	The interface is fixed at Auto through which the Nebula Device sends DNS queries to the specified DNS server. Alternatively, the drop-down menu will show all External/Internal/General and VTI interface names.
	Click this icon to remove the entry.
Add	Click this button to create a new entry.

8.3.14.1 Dynamic DNS

Enable Dynamic DNS to open the Site-wide > Configure > Firewall > Firewall settings: Dynamic DNS screen.

Figure 210 Site-wide > Configure > Firewall > Firewall settings: Dynamic DNS

The screenshot displays the 'Dynamic DNS' configuration page. At the top, the 'Automatic registration' toggle is turned on, with a note stating: 'Dynamic DNS updates a DNS record each time the public IP address of the security appliance changes.' Below this, the 'Site settings' section includes dropdown menus for 'DDNS provider' and 'DDNS type', both set to 'DynDNS'. The 'DDNS account' section contains input fields for 'Username', 'Password', and 'Confirm password'. The 'DDNS settings' section is divided into 'Primary binding address' and 'Backup binding address', each with fields for 'Interface' (set to 'wan1') and 'IP address' (set to 'Custom'). At the bottom, the 'Enable wizard' toggle is on, the 'Mail exchanger' field is empty with an 'Optional' label, and the 'Backup mail exchanger' toggle is on. A green circular button with a plus sign is located in the bottom right corner.

Dynamic DNS

Automatic registration ☒

Dynamic DNS updates a DNS record each time the public IP address of the security appliance changes.

Site settings

DDNS provider:

DDNS type:

DDNS account

Username:

Password:

Confirm password:

DDNS settings

Dynamic DNS

Primary binding address

Interface:

IP address:

Backup binding address

Interface:

IP address:

Enable wizard: ☒

Mail exchanger: Optional

Backup mail exchanger: ☒

Figure 211 Site-wide > Configure > Firewall > Firewall settings: Dynamic DNS (FLEX H Series only)

The following table describes the labels in this screen.

Table 150 Site-wide > Configure > Firewall > Firewall settings: Dynamic DNS

LABEL	DESCRIPTION
Dynamic DNS	
Automatic registration / Enabled	Click On to use dynamic DNS. Otherwise, select Off to disable it.
Site settings	

Table 150 Site-wide > Configure > Firewall > Firewall settings: Dynamic DNS (continued)

LABEL	DESCRIPTION
Name	When you are adding a DDNS entry, enter a descriptive name for this DDNS entry in the Nebula Device. You may use 1–31 alphanumeric characters, underscores(_), or dashes (-), but the first character cannot be a number. This value is case-sensitive. This field is read-only when you are editing an entry. This field appears for FLEX H Series only.
DDNS provider	Select your Dynamic DNS service provider from the drop-down list box. If you select User customize, create your own DDNS service.
DDNS type	Select the type of DDNS service you are using. This will depend on your choice of the DDNS provider.
HTTPS	Enable this to encrypt traffic using SSL (port 443), including traffic with username and password, to the DDNS server. Not all DDNS providers support this option. This field appears for FLEX H Series only.
DDNS account	
Username	Enter the user name used when you registered your domain name, up to 31 characters [a-zA-Z0-9_-][a-zA-Z0-9@_].
Password	Enter the password provided by the DDNS provider, up to 63 characters [0-9a-zA-Z`~!@#\$%^&*()_\-+={} ;:<>.,/'"][\[\]\].
Confirm/Retype password	Enter the password again to confirm it.
DDNS Setting	
Domain name	Enter the domain name you registered.
Primary binding address	Use these fields to set how the Nebula Device determines the IP address that is mapped to your domain name in the DDNS server. The Nebula Device uses the Backup binding address if the interface specified by these settings is not available.
Interface	Select the interface to use for updating the IP address mapped to the domain name.
IP address	The options available in this field vary by DDNS provider. Interface – The Nebula Device uses the IP address of the specified interface. This option appears when you select a specific interface in the Primary Binding Address Interface field. Auto – If the interface has a dynamic IP address, the DDNS server checks the source IP address of the packets from the Nebula Device for the IP address to use for the domain name. You may want to use this if there are one or more NAT routers between the Nebula Device and the DDNS server. Note: The Nebula Device may not determine the proper IP address if there is an HTTP proxy server between the Nebula Device and the DDNS server. Custom – If you have a static IP address, you can select this to use it for the domain name. The Nebula Device still sends the static IP address to the DDNS server. Type the IP address in the user defined field or you can select an address object to use for the domain name. Public IP – Select this if your Nebula Device is behind a NAT router, and the NAT router has a public WAN IP address. The DDNS provider will use the public WAN IP address of the NAT router for domain name mapping of the Nebula Device.
Backup binding address	Use these fields to set an alternate interface to map the domain name to when the interface specified by the Primary binding address settings is not available.
Interface	Select the interface to use for updating the IP address mapped to the domain name. Select Any to let the domain name be used with any interface. Select None to not use a backup address.

Table 150 Site-wide > Configure > Firewall > Firewall settings: Dynamic DNS (continued)

LABEL	DESCRIPTION
IP address	Select Auto if the interface has a dynamic IP address. The DDNS server checks the source IP address of the packets from the Nebula Device for the IP address to use for the domain name. You may want to use this if there are one or more NAT routers between the Nebula Device and the DDNS server. Note: The Nebula Device may not determine the proper IP address if there is an HTTP proxy server between the gateway and the DDNS server. Select Custom if you have a static IP address. Enter the IP address to use it for the domain name. Select Interface to have the Security Firewall use the IP address of the specified interface.
Enable wildcard	This option is only available with a DynDNS account. Enable the wildcard feature to alias sub-domains to be aliased to the same IP address as your (dynamic) domain name. This feature is useful if you want to be able to use, for example, <code>www.yourhost.dyndns.org</code> and still reach your hostname.
Mail exchanger	This option is only available with a DynDNS account. DynDNS can route email for your domain name to a mail server (called a mail exchanger). For example, DynDNS routes email for <code>john-doe@yourhost.dyndns.org</code> to the host record specified as the mail exchanger. If you are using this service, type the host record of your mail server here. Otherwise, leave the field blank.
Backup mail exchanger	This option is only available with a DynDNS account. Select this option if you are using DynDNS's backup service for email. With this service, DynDNS holds onto your email if your mail server is not available. Once your mail server is available again, the DynDNS server delivers the mail to you. See www.dyndns.org for more information about this service.

Figure 212 Site-wide > Configure > Firewall > Firewall settings (Authentication Server / External User Group / Walled garden)

Authentication Server

My AD Server

Name	Server address	Backup server address	Port	AD Domain
			389	

[+ Add](#)

My LDAP Server

Name	Server address	Backup server address	Port	Base DN
			389	

[+ Add](#)

My RADIUS Server

Name	Server address	Backup server address	Port	Secret
			1812	

[+ Add](#)

External User Group

[+ Add](#) Please create authentication server before add external user group

Walled garden

Global walled garden

This is global walled garden configuration. All web authentication interface will match this policy first and the second priority is the interface walled garden policy.

If needed, only could specify interface, please go to Network access method configure

[View Walled Garden](#)

Up to 40 configurations can be set here to specify your walled garden.

Example:

```

www.dynat.com
192.168.1.100
192.168.1.101
  
```

Figure 213 Site-wide > Configure > Firewall > Firewall settings (Authentication Server / External User Group / Walled garden) (FLEX H Series only)

The screenshot shows the 'Authentication Server' configuration page. It contains three main sections: 'My AD Server', 'My LDAP Server', and 'My Walled Garden Server'. Each section has a table with columns for 'Name', 'Server address', 'Backup server address', 'Port', and 'AD domain' (for AD) or 'Backup server port' (for Walled Garden). There are 'Add' buttons and a red 'X' icon for each section.

The following table describes the labels in this screen.

Table 151 Site-wide > Configure > Firewall > Firewall settings (Authentication Server / External User / Walled garden)

LABEL	DESCRIPTION
Authentication Server	
My AD Server	
Name	Enter a descriptive name for the server. You can use up to 31 characters, including '[a-zA-Z_-][a-zA-Z0-9\._-]'. This field is read-only when you are editing an entry.
Server address	Enter the address of the AD server.
Backup server address	If the AD server has a backup server, enter its address here.
Port	Specify the port number on the AD server to which the Nebula Device sends authentication requests. Enter a number between 1 and 65535.
AD domain	Specify the Active Directory forest root domain name.
Domain admin	Enter the name of the user that is located in the container for Active Directory Users, who is a member of the Domain Admin group.
Password	Enter the password of the Domain Admin user account.
Advanced	Click to open a screen where you can select to use Default or Custom advanced settings. See Section 8.3.14.3 on page 626 .
	Click this icon to remove the server.
Add	Click this button to create a new server.
My LDAP Server	
Name	Enter the description of each server, if any. You can use up to 60 printable ASCII characters.
Server address	Enter the address of the LDAP server.
Backup server address	If the LDAP server has a backup server, enter its address here.

Table 151 Site-wide > Configure > Firewall > Firewall settings (Authentication Server / External User / Walled garden) (continued)

LABEL	DESCRIPTION
Port	Specify the port number on the LDAP server to which the Nebula Device sends authentication requests. Enter a number between 1 and 65535.
Base DN	Specify the directory (up to 127 alphanumerical characters). For example, o=Zyxel, c=US.
Bind DN	Specify the bind DN for logging into the AD or LDAP server. Enter up to 127 alphanumerical characters. For example, cn=zywallAdmin specifies zywallAdmin as the user name.
Password	If required, enter the password (up to 15 alphanumerical characters) required to bind or log in to the LDAP server.
Advanced	Click to open a screen where you can select to use Default or Custom advanced settings. See Section 8.3.14.3 on page 626 .
	Click this icon to remove the entry.
Add	Click this button to create a new server.
My RADIUS Server	
Name	Enter a descriptive name for the server.
Server address	Enter the address of the RADIUS server.
Port	Specify the port number on the RADIUS server to which the Nebula Device sends authentication requests. Enter a number between 1 and 65535.
Backup server address	If the RADIUS server has a backup server, enter its address here.
Backup server port	If the RADIUS server has a backup port, enter its number here.
Secret	Enter a password (up to 15 alphanumeric characters) as the key to be shared between the external authentication server and the Nebula Device. The key is not sent over the network. This key must be the same on the external authentication server and the Security Firewall.
Advanced	Click to open a screen where you can select to use Default or Custom advanced settings. See Section 8.3.14.3 on page 626 .
	Click this icon to remove the server.
Add	Click this button to create a new server.
External User Group	
Group Name	Enter a descriptive name for the group, up to 31 characters [0-9][a-z][A-Z][@.-_] but the first character must be an alphabet.
Authentication Server	Select the Name of the Authentication Server you added in My AD Server, My LDAP Server, or My RADIUS Server.
Group ID	Enter the name of the attribute that the Nebula Device checks to determine to which group an external user belongs. The value for this attribute is called a group identifier; it determines to which group an external user belongs.
Add	Click this button to create a new group. The maximum number of external user groups is 20.
Walled garden	
Global walled garden	With a walled garden, you can define one or more web site addresses that all users can access without logging in. These can be used for advertisements for example. Specify walled garden web site links, which use a domain name or an IP address for web sites that all users are allowed to access without logging in.

8.3.14.2 SIP ALG

Application Layer Gateway (ALG) allows the following applications to operate properly through the NCC's NAT.

SIP (Session Initiation Protocol) is an application-layer protocol that can be used to create voice and multimedia sessions over Internet.

Go to SIP ALG in the Site-wide > Configure > Firewall > Firewall settings screen to access this screen. Use this screen to turn the ALG off or on, configure the port numbers to which they apply, and configure SIP ALG time outs.

Note: If the NCC provides an ALG for a service, you must enable the ALG in order to use the application patrol on that service's traffic.

Figure 214 Site-wide > Configure > Firewall > Firewall settings: SIP ALG / Advanced Options

Figure 215 Site-wide > Configure > Firewall > Firewall settings: SIP ALG / Advanced Options (FLEX H Series only)

The following table describes the labels in this screen.

Table 152 Site-wide > Configure > Firewall > Firewall settings: SIP ALG / Advanced Options

LABEL	DESCRIPTION
SIP ALG	Turn on SIP ALG to detect SIP traffic and help build SIP sessions through the Nebula Device's NAT. Enabling the SIP ALG also allows you to use the application patrol to detect SIP traffic and manage SIP traffic bandwidth.
SIP Signaling Port	If you are using a custom UDP port number (not 5060) for SIP traffic, enter it here. Use the Add icon to add fields if you are also using SIP on additional UDP port numbers (1025 – 65535).
ADVANCED OPTIONS	Click the arrow to show the fields for setting the SIP inactivity timeout and restrict peer-to-peer connection.
SIP Inactivity Timeout	Select this to have the Nebula Device apply SIP media and signaling inactivity time out limits. These timeouts will take priority over the SIP session time out "Expires" value in a SIP registration response packet.
SIP Media Inactivity Timeout	Use this field to set how many seconds (1 – 86400) the Nebula Device will allow a SIP session to remain idle (without voice traffic) before dropping it. If no voice packets go through SIP ALG before the timeout period expires, the Nebula Device deletes the audio session. You cannot hear anything and you will need to make a new call to continue your conversation.
SIP Signaling Inactivity Timeout	Most SIP clients have an "expire" mechanism indicating the lifetime of signaling sessions. The SIP user agent sends registration packets to the SIP server periodically and keeps the session alive in the Nebula Device. If the SIP client does not have this mechanism and makes no calls during the Nebula Device SIP timeout, the Nebula Device deletes the signaling session after the timeout period. Enter the SIP signaling session timeout value (1 – 86400).
Restrict Peer to Peer Signaling Connection	A signaling connection is used to set up the SIP connection. Enable this if you want signaling connections to only arrive from the IP addresses you have already registered with. Signaling connections from other IP addresses will be dropped.
Restrict Peer to Peer Media Connection	A media connection is the audio transfer in a SIP connection. Enable this if you want media connections to only arrive from the IP addresses you registered with. Media connections from other IP addresses will be dropped.
Advanced Options	
Isolate unwanted traffic between tunnel mode APs	Select On to block broadcast and multicast traffic coming from Remote APs (RAPs).

8.3.14.3 Advanced Settings

Click the Advanced column in the Site-wide > Configure > Firewall > Firewall settings screen to access this screen.

Figure 216 Site-wide > Configure > Firewall > Firewall settings: Advanced

The following table describes the labels in this screen.

Table 153 Site-wide > Configure > Firewall > Firewall settings: Advanced

LABEL	DESCRIPTION
Preset	Select Default to use the pre-defined settings, or select Custom to configure your own settings.
Timeout	Specify the timeout period (between 1 and 300 seconds) before the Nebula Device disconnects from the server. In this case, user authentication fails. Search timeout occurs when either the user information is not in the servers or the AD or server is down.
Case-Sensitive User Name	Click ON if the server checks the case of the user name. Otherwise, click OFF to not configure your user name as case-sensitive.
Group Membership Attribute	Enter the name of the attribute that the gateway checks to determine to which group a user belongs. The value for this attribute is called a group identifier; it determines to which group a user belongs. You can add ext-group-user user objects to identify groups based on these group identifier values. For example you could have an attribute named "memberOf" with values like "sales", "RD", and "management". Then you could also create a ext-group-user user object for each group. One with "sales" as the group identifier, another for "RD" and a third for "management".
LDAP-only Fields	
Login Name Attribute	Enter the type of identifier the users are to use to log in. For example "name" or "email address".
RADIUS-only Fields	
NAS IP Address	Enter the IP address of the NAS (Network Access Server).
NAS Identifier	Enter the Network Access Server (NAS) Identifier on the Nebula Device to identify the Nebula Device to the RADIUS server, if required. This might be necessary if there are multiple Nebula Devices behind NAT using the same public WAN IP address for the RADIUS server.
Close	Click this button to exit this screen without saving.
OK	Click this button to save your changes and close the screen.

CHAPTER 9

Security Gateway

9.1 Overview

This chapter discusses the menus that you can use to monitor the Nebula managed Security Gateways in your network and configure settings even before a gateway is deployed and added to the site.

Nebula Device refers to Nebula NSG devices in this chapter. The Security gateway menus are shown for Nebula NSG devices only.

9.2 Monitor

Use the Monitor menus to check the Nebula Device information, client information, event log messages and summary report for the Nebula Device in the selected site.

9.2.1 Event Log

Use this screen to view Nebula Device log messages. You can enter a key word, select one or multiple event types, or specify a date/time or a time range to display only the log messages that match these criteria.

Select Range to set a time range or select Before to choose a specific date/time and the number of hours/minutes to display only the log messages generated within a certain period of time (before the specified date/time). Then click Search to update the list of logs based on the search criteria. The maximum allowable time range is 30 days.

Click Site-wide > Monitor > Security gateway > Event log to access this screen.

Figure 217 Site-wide > Monitor > Security gateway > Event log

[illegible]

9.2.2 VPN Connections

Use this screen to view the status of site-to-site IPsec VPN connections and L2TP VPN connections.

Note: If the peer gateway is not a Nebula Device, go to the Site-wide > Configure > Security gateway > Site-to-Site VPN screen to view and configure a VPN rule. See [Section 9.3.6 on page 662](#) for more information.

Click Site-wide > Monitor > Security gateway > VPN Connections to access this screen.

Figure 218 Site-wide > Monitor > Security gateway > VPN Connections

The screenshot displays the 'VPN connections' interface. At the top, there's a 'Connection status' section with 'Configuration' and 'NAT type' details. Below this is the 'Site connectivity' section, which contains a table with columns: Location, Subnet(s), Status, Inbound(Byte), Outbound(Byte), Tunnel up Time, and Last heartbeat. The table lists two entries: '192.168.0.0/24' and '192.168.0.0/24'. The bottom section is 'Client to site VPN login account', which includes a table with columns: User Name, Hostname, Assigned IP, and Public IP.

The following table describes the labels in this screen.

Table 154 Site-wide > Monitor > Security gateway > VPN Connections

LABEL	DESCRIPTION
	Click this button to reload the data-related frames on this page.
Connection Status	
Configuration	This shows the number and address of the local networks behind the Nebula Device, on which the computers are allowed to use the VPN tunnel.
NAT Type	This shows the public IP address or the domain name that is configured and mapped to the Nebula Device on the NAT router.
Site Connectivity	
Location	This shows the name of the site to which the peer gateway is assigned. Click the name to go to the Site-wide > Configure > Security gateway > Site-to-Site VPN screen, where you can modify the VPN settings.
Subnet(s)	This shows the address of the local networks behind the Nebula Device.
Status	This shows whether the VPN tunnel is connected or disconnected.
Inbound (Bytes)	This shows the amount of traffic that has gone through the VPN tunnel from the remote IPsec router to the Nebula Device since the VPN tunnel was established.
Outbound (Bytes)	This shows the amount of traffic that has gone through the VPN tunnel from the Nebula Device to the remote IPsec router since the VPN tunnel was established.
Tunnel up time	This shows how many seconds the VPN tunnel has been active.
Last heartbeat	This shows the last date and time a heartbeat packet is sent to determine if the VPN tunnel is up or down.
Client to site VPN login account	
User Name	This shows the remote user's login account name.
Hostname	This shows the name of the computer that has this L2TP VPN connection with the Nebula Device.

Table 154 Site-wide > Monitor > Security gateway > VPN Connections (continued)


LABEL	DESCRIPTION
Assigned IP	This shows the IP address that the Nebula Device assigned for the remote user's computer to use within the L2TP VPN tunnel.
Public IP	This shows the public IP address that the remote user is using to connect to the Internet.

9.2.3 NSS Analysis Report

Use this screen to view the statistics report for NSS (Nebula Security Service), such as content filter, Intrusion Detection and Prevention (IDP), application patrol, and anti-virus. The screen varies depending on the service type (Application, Content Filtering, or Anti-Virus) you select.

Click Site-wide > Monitor > Security gateway > NSS analysis report to access this screen.

Figure 219 Site-wide > Monitor > Security gateway > NSS Analysis Report

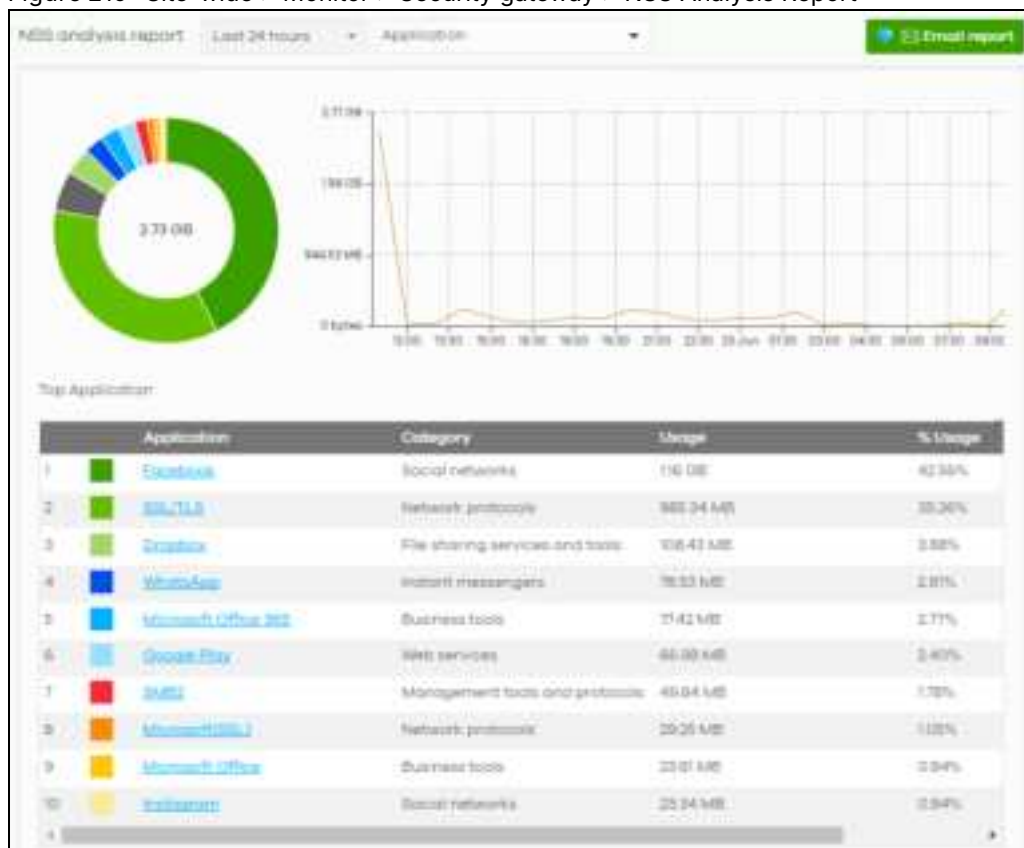

The following table describes the labels in this screen.

Table 155 Site-wide > Monitor > Security gateway > NSS Analysis Report

LABEL	DESCRIPTION
Security Appliance – NSS Analysis	Select to view the report for the past day, week or month. Alternatively, select Custom range... to specify a time period the report will span. You can also select the number of results you want to view in a table. 
	Select the type of service for which you want to view the statistics report.
Email report	Click this button to send summary reports by email, change the logo and set email schedules.
Application	The following fields displays when you select to view the application statistics. Click an application name to view information about the clients who use that application. Click Top Application under the chart to switch back to the previous screen.
y-axis	The y-axis shows the amount of the application's traffic which has been transmitted or received.
x-axis	The x-axis shows the time period over which the traffic flow occurred.
Application	This shows the name of the application. Click an application name to view the IPv4 addresses of the clients who used the application.
Description	This shows the name of the client who used the application. This field is available when you click the application name. Click the name to display the individual client statistics. See Section 9.2.1 on page 628.
IPv4 Address	This shows the IPv4 address of the client who used the application. This field is available when you click the application name.
MAC Address	This shows the MAC address of the client who used the application. This field is available when you click the application name.
Category	This shows the name of the category to which the application belongs.
Usage	This shows the total amount of data consumed by the application used by all or a specific IPv4 address.
% Usage	This shows the percentage of usage for the application used by all or a specific IPv4 address.
Content Filtering	The following fields display when you select to view the content filter statistics. Click a website URL to view information about the clients who tried to access that web page. Click Content Filtering under the chart to switch back to the previous screen.
y-axis	The y-axis shows the number of hits on web pages that the Nebula Device's content filter service has blocked.
x-axis	The x-axis shows the time period over which the web page is checked.
Website	This shows the URL of the web page to which the Nebula Device blocked access. Click a website URL to view the IPv4 addresses of the clients who tried to access the web page.

Table 155 Site-wide > Monitor > Security gateway > NSS Analysis Report (continued)

LABEL	DESCRIPTION
Description	This shows the name of the client who tried to access the web page. This field is available when you click the website URL. Click the name to display the individual client statistics. See Section 9.2.1 on page 628 .
IPv4 Address	This shows the IPv4 address of the client who tried to access the web page. This field is available when you click the website URL.
MAC Address	This shows the MAC address of the client who tried to access the web page. This field is available when you click the website URL.
Category	This shows the name of the category to which the web page belongs.
Hits	This shows the number of hits on the web page visited by all or a specific IPv4 address.
% Hits	This shows the percentage of the hit counts for the web page visited by all or a specific IPv4 address.
Anti-Virus The following fields are displayed when you select Anti-Virus. Click a virus name to view information about the clients who sent the virus. Click the number in the center of the donut chart or Anti-Virus under the chart to switch back to the previous screen.	
y-axis	The y-axis shows the total number of viruses that the gateway has detected.
x-axis	The x-axis shows the time period over which the virus is detected.
Virus Name	This shows the name of the virus that the Nebula Device has detected and blocked. Click a virus name to view the IPv4 addresses of the clients who sent the virus.
Description	This shows the name of the client who sent the virus. This field is available when you click the virus name. Click the name to display the individual client statistics. See Section 9.2.1 on page 628 .
IPv4 Address	This shows the IPv4 address of the virus sender. This field is available when you click the virus name.
MAC Address	This shows the MAC address of the virus sender. This field is available when you click the virus name.
Hits	This shows how many times the gateway has detected the virus sent by all or a specific IPv4 address.
% Hits	This shows the percentage of the hit counts for the virus sent by all or a specific IPv4 address.
Intrusion Detection / Prevention The following fields are displayed when you select Intrusion Detection / Prevention. The donut chart shows the number of potential network attacks detected by the Intrusion Detection and Prevention (IDP) service, if any. The number in the center of the donut chart indicates the number of network attacks blocked by the IDP service.	
Signature Name	The name of the IDP signature that triggered the hit. The signature name identifies the type of intrusion pattern
Hits	This shows the total number of network attacks blocked by the IDP service.
% Hits	This shows the number of network attacks blocked as a percentage of the total number of network requests scanned by the IDP service.

9.2.4 Summary Report

This screen displays network statistics for the Nebula Device of the selected site, such as WAN usage, top applications and/or top clients.

Click Site-wide > Monitor > Security gateway > Summary report to access this screen.

Figure 220 Site-wide > Monitor > Security gateway > Summary report



The following table describes the labels in this screen.

Table 156 Site-wide > Monitor > Security gateway > Summary report

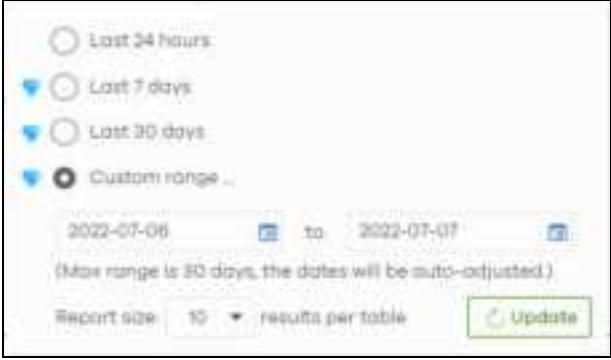
LABEL	DESCRIPTION
Security gateway – Summary report	Select to view the report for the past day, week or month. Alternatively, select Custom range... to specify a time period the report will span. You can also select the number of results you want to view in a table. 
Email report	Click this button to send summary reports by email, change the logo and set email schedules.
WAN1/WAN2 usage	
y-axis	The y-axis shows the transmission speed of data sent or received through the WAN connection in kilobits per second (Kbps).
x-axis	The x-axis shows the time period over which the traffic flow occurred.
VPN usage	
y-axis	The y-axis shows the transmission speed of data sent or received through the VPN tunnel in kilobits per second (Kbps).
x-axis	The x-axis shows the time period over which the traffic flow occurred.
Security gateway by usage	
	This shows the index number of the Nebula Device.
Name	This shows the descriptive name of the Nebula Device.
Model	This shows the model number of the Nebula Device.
Usage	This shows the amount of data that has been transmitted through the Nebula Device's WAN port.
Client	This shows the number of clients currently connected to the Nebula Device.
Location	
	This shows the location of the Nebula Devices on the map.
Top applications by usage	
	This shows the index number of the application.
Application	This shows the application name.
Category	This shows the name of the category to which the application belongs.
Usage	This shows the amount of data consumed by the application.
% Usage	This shows the percentage of usage for the application.
Top ports by usage	
	This shows the top ten applications/services and the ports that identify a service.
Name	This shows the service name and the associated port numbers.
Usage	This shows the amount of data consumed by the service.
% Usage	This shows the percentage of usage for the service.

Table 156 Site-wide > Monitor > Security gateway > Summary report (continued)

LABEL	DESCRIPTION
Clients per day	
y-axis	The y-axis represents the number of clients.
x-axis	The x-axis represents the date.
Top operating systems by usage	
	This shows the index number of the operating system.
OS	This shows the operating system of the client device.
# Client	This shows how many client devices use this operating system.
% Client	This shows the percentage of top client devices which use this operating system.
# Usage	This shows the amount of data consumed by the client device on which this operating system is running.
% Usage	This shows the percentage of usage for top client devices which use this operating system.
Top clients by usage	
	This shows the index number of the client.
Description	This shows the descriptive name or MAC address of the client.
Usage	This shows the total amount of data transmitted and received by the client.
% Usage	This shows the percentage of usage for the client.
Top client device manufacturers by usage	
	This shows the index number of the client device.
Manufacturer	This shows the manufacturer name of the client device.
Client	This shows how many client devices are made by the manufacturer.
% Client	This shows the percentage of top client devices which are made by the manufacturer.
Usage	This shows the total amount of data transmitted and received by the client device.
% Usage	This shows the percentage of usage for the client device.

9.3 Configure

Use the Configure menus to configure interface addressing, firewall, site-to-site VPN, captive portal, traffic shaping, authentication server and other Nebula Device settings for the Nebula Device of the selected site.

Note: Only one Security Appliance is allowed per site.

9.3.1 Interface Addressing

Use this screen to configure network mode, port grouping, interface address, static route and DDNS settings on the Nebula Device. To access this screen, click Site-wide > Configure > Security gateway > Interface addressing.

Note: If the gateway device of the site supports link aggregation, for example model NSG300, then the Interface addressing screen changes to allow you to configure link aggregation groups. For details, see [Section 9.3.5 on page 659](#).

Figure 221 Site-wide > Configure > Security gateway > Interface addressing

[illegible]

The following table describes the labels in this screen.

Table 157 Site-wide > Configure > Security gateway > Interface addressing

LABEL	DESCRIPTION
Network wide	
Mode	Select Network address translation (NAT) to have the Nebula Device automatically use SNAT for traffic it routes from internal interfaces to external interfaces. Select Router to have the Nebula Device forward packets according to the routing policies. The Nebula Device does not automatically convert a packet's source IP address.
Port Group Setting	Port groups create a hardware connection between physical ports at the layer-2 (data link, MAC address) level. The physical LAN Ethernet ports are shown at the top (P3, P4, and so on) and the port groups are shown at the left of the screen. Use the radio buttons to select which ports are in each port group. For example, select a port's Port Group 1 radio button to use the port as part of the first port group. The port will use the first group's IP address. Note: You cannot select ports 1 and 2, as these ports are reserved for WAN usage.
Interface	
By default, LAN1 is created on top of port group 1 and LAN2 is on top of port group 2.	
Name	This shows the name of the interface (network) on the Nebula Device.
IP address	This shows the IP address of the interface (network).
Subnet mask	This shows the subnet mask of the interface (network).
VLAN ID	This shows the ID number of the VLAN with which the interface (network) is associated. If you have associated an SSID with the VLAN ID, the Smart VLAN screen displays after you change or delete the VLAN ID and click Save. You can exit the screen without saving, or apply your changes directly. If the Smart guest/VLAN network feature is enabled in the Site-wide > Configure > Site settings screen, you can select to apply the changes and update the SSID's VLAN setting as well. 
Port group	This shows the name of the port group to which the interface (network) belongs.

Table 157 Site-wide > Configure > Security gateway > Interface addressing (continued)

LABEL	DESCRIPTION
Guest	Click the switch to the right to configure this interface as a Guest interface. Client devices connected to this Guest interface have Internet access but cannot access a non-guest interface. Alternatively, click the switch to the left to disable Internet access for client devices connected to this Guest interface. Note: If the Smart guest/VLAN network feature is enabled in the Site-wide > Configure > Site settings screen, the guest settings you configure for an interface also apply to the WiFi networks (SSIDs) associated with the same VLAN ID. For example, if you set an interface in VLAN 100 as a guest interface, the SSID that belongs to VLAN 100 will also act as a guest network.
	Click this button to modify the network settings. See Section 9.3.1.1 on page 641 for detailed information.
	Click this icon to remove a VLAN entry.
Add	Click this button to create a VLAN, which is then associated with one Ethernet interface (network). See Section 9.3.1.1 on page 641 for detailed information.
Static Route	
Name	This shows the name of the static route.
Destination	This shows the destination IP address.
Subnet mask	This shows the IP subnet mask.
Next hop IP	This shows the IP address of the next-hop gateway or the interface through which the traffic is routed. The gateway is a router or switch on the same segment as your Nebula Device's interfaces. It helps forward packets to their destinations.
	Click this button to modify the static route settings. See Section 9.3.2.4 on page 650 for detailed information.
	Click this icon to remove a static route.
Add	Click this button to create a new static route. See Section 9.3.2.4 on page 650 for detailed information.
Dynamic DNS	
Automatic registration	Click On to use dynamic DNS. Otherwise, select Off to disable it.
General Settings	
DDNS provider	Select your Dynamic DNS service provider from the drop-down list box. If you select User custom, create your own DDNS service.
DDNS type	Select the type of DDNS service you are using. Select User custom to create your own DDNS service and configure the DYNDNS Server, URL, and Additional DDNS Options fields below.
DDNS account	
Username	Enter the user name used when you registered your domain name.
Password	Enter the password provided by the DDNS provider.
Confirm password	Enter the password again to confirm it.
DDNS settings	
Domain name	Enter the domain name you registered.
Primary binding address	Use these fields to set how the Nebula Device determines the IP address that is mapped to your domain name in the DDNS server. The Nebula Device uses the Backup binding address if the interface specified by these settings is not available.
Interface	Select the interface to use for updating the IP address mapped to the domain name.

Table 157 Site-wide > Configure > Security gateway > Interface addressing (continued)

LABEL	DESCRIPTION
IP address	Select Auto if the interface has a dynamic IP address. The DDNS server checks the source IP address of the packets from the Nebula Device for the IP address to use for the domain name. You may want to use this if there are one or more NAT routers between the Nebula Device and the DDNS server. Note: The Nebula Device may not determine the proper IP address if there is an HTTP proxy server between the Nebula Device and the DDNS server. Select Custom if you have a static IP address. Enter the IP address to use it for the domain name. Select Interface to have the Nebula Device use the IP address of the specified interface.
Backup binding address	Use these fields to set an alternate interface to map the domain name to when the interface specified by the Primary binding address settings is not available.
Interface	Select the interface to use for updating the IP address mapped to the domain name.
IP address	Select Auto if the interface has a dynamic IP address. The DDNS server checks the source IP address of the packets from the Nebula Device for the IP address to use for the domain name. You may want to use this if there are one or more NAT routers between the Nebula Device and the DDNS server. Note: The Nebula Device may not determine the proper IP address if there is an HTTP proxy server between the Nebula Device and the DDNS server. Select Custom if you have a static IP address. Enter the IP address to use it for the domain name. Select Interface to have the Nebula Device use the IP address of the specified interface.
Enable wildcard	This option is only available with a DynDNS account. Enable the wildcard feature to alias sub-domains to be aliased to the same IP address as your (dynamic) domain name. This feature is useful if you want to be able to use, for example, www.yourhost.dyndns.org and still reach your hostname.
Mail exchanger	This option is only available with a DynDNS account. DynDNS can route email for your domain name to a mail server (called a mail exchanger). For example, DynDNS routes email for john-doe@yourhost.dyndns.org to the host record specified as the mail exchanger. If you are using this service, type the host record of your mail server here. Otherwise, leave the field blank.
Backup mail exchanger	This option is only available with a DynDNS account. Select this checkbox if you are using DynDNS's backup service for email. With this service, DynDNS holds onto your email if your mail server is not available. Once your mail server is available again, the DynDNS server delivers the mail to you. See www.dyndns.org for more information about this service.
DYNDNS Server	This field displays when you select User custom from the DDNS provider field above. Enter the IP address of the server that will host the DDNS service.
URL	This field displays when you select User custom from the DDNS provider field above. Enter the URL that can be used to access the server that will host the DDNS service.
Additional DDNS Options	This field displays when you select User custom from the DDNS provider field above. These are the options supported at the time of writing: • <code>dyndns_system</code> to specify the DYNDNS Server type – for example, <code>dyndns@dyndns.org</code> • <code>ip_server_name</code> which should be the URL to get the server's public IP address – for example, <code>http://myip.easylife.tw/</code>

9.3.1.1 Local LAN (Add VLAN)

Click the Add button or click the Edit button in the Interface section of the Site-wide > Configure > Security gateway > Interface addressing screen.

Figure 222 Site-wide > Configure > Security gateway > Interface addressing: Local LAN (VLAN)

Local LAN

Interface properties

Interface type: VLAN

Interface name: VLAN1

IP address assignment

IP address:

Subnet mask:

VLAN ID: 1 (1 - 4096)

Port group: LAN2

DHCP setting

DHCP: DHCP Server

IP pool start address:

Pool size: 200

First DNS server: NSG

Second DNS server: None

Third DNS server: None

First WINS server: (Optional)

Second WINS server: (Optional)

Lease time: ☐ Infinite

Close OK

The following table describes the labels in this screen.

Table 158 Site-wide > Configure > Security gateway > Interface addressing: Local LAN (VLAN)

LABEL	DESCRIPTION
Interface properties	
Interface type	Select VLAN to add a virtual interface. Note: This field only appears if the Nebula Device supports Link Aggregation Groups (LAGs). If the Nebula Device does not support LAGs, then VLAN is the default interface type.
Interface name	This field is read-only if you are editing an existing interface. Specify a name for the interface. The format of interface names is strict. Each name consists of 2 – 4 letters (interface type), followed by a number (x). For most interfaces, x is limited by the maximum number of the type of interface. For VLAN interfaces, x is defined by the number you enter in the VLAN name field. For example, VLAN interfaces are vlan0, vlan1, vlan2, and so on.
IP address assignment	
IP address	Enter the IP address for this interface.
Subnet mask	Enter the subnet mask of this interface in dot decimal notation. The subnet mask indicates what part of the IP address is the same for all computers in the network.
VLAN ID	Enter the VLAN ID. This 12-bit number uniquely identifies each VLAN. Allowed values are 1 – 4094. (0 and 4095 are reserved.) Note: NCC will show an error message when the VLAN ID in the NSG interface is configured to be the same as the WAN port's VLAN ID.
Port group	Select the name of the port group to which you want the interface (network) to belong.
DHCP setting	
DHCP	Select what type of DHCP service the Nebula Device provides to the network. Choices are: None – the Nebula Device does not provide any DHCP service. There is already a DHCP server on the network. DHCP Relay – the Nebula Device routes DHCP requests to one or more DHCP servers you specify. The DHCP servers may be on another network. DHCP Server – the Nebula Device assigns IP addresses and provides subnet mask, gateway, and DNS server information to the network. The Nebula Device is the DHCP server for the network.
These fields appear if the Nebula Device is a DHCP Relay.	
Relay server 1	Enter the IP address of a DHCP server for the network.
Relay server 2	This field is optional. Enter the IP address of another DHCP server for the network.
These fields appear if the Nebula Device is a DHCP Server.	
IP pool start address	Enter the IP address from which the Nebula Device begins allocating IP addresses. If you want to assign a static IP address to a specific computer, click Add new under Static DHCP Table.
Pool size	Enter the number of IP addresses to allocate. This number must be at least one and is limited by the interface's Subnet mask. For example, if the Subnet mask is 255.255.255.0 and IP pool start address is 10.10.10.10, the Nebula Device can allocate 10.10.10.10 to 10.10.10.254, or 245 IP addresses.

Table 158 Site-wide > Configure > Security gateway > Interface addressing: Local LAN (VLAN)

LABEL	DESCRIPTION
First DNS server Second DNS server Third DNS server	Specify the IP addresses up to three DNS servers for the DHCP clients to use. Use one of the following ways to specify these IP addresses. Custom Defined – enter a static IP address. From ISP – select the DNS server that another interface received from its DHCP server. NSG – the DHCP clients use the IP address of this interface and the Nebula Device works as a DNS relay.
First WINS server Second WINS server	Type the IP address of the WINS (Windows Internet Naming Service) server that you want to send to the DHCP clients. The WINS server keeps a mapping table of the computer names on your network and the IP addresses that they are currently using.
Lease time	Specify how long each computer can use the information (especially the IP address) before it has to request the information again. Choices are: infinite – select this if IP addresses never expire. days, hours, minutes – select this to enter how long IP addresses are valid.
Extended options	This table is available if you selected DHCP server. Configure this table if you want to send more information to DHCP clients through DHCP packets. Click Add new to create an entry in this table. See Section 9.3.2.3 on page 648 for detailed information.
Name	This is the option's name.
Code	This is the option's code number.
Type	This is the option's type.
Value	This is the option's value.
	Click the edit icon to modify it. Click the remove icon to delete it.
Static DHCP Table	Configure a list of static IP addresses the Nebula Device assigns to computers connected to the interface. Otherwise, the Nebula Device assigns an IP address dynamically using the interface's IP pool start address and Pool size. Click Add new to create an entry in this table.
IP address	Enter the IP address to assign to a device with this entry's MAC address.
MAC	Enter the MAC address to which to assign this entry's IP address.
Description	Enter a description to help identify this static DHCP entry.
Close	Click Close to exit this screen without saving.
OK	Click OK to save your changes.

9.3.2 Link Aggregation Groups

A Link Aggregation Group (LAG) combines multiple Ethernet ports into a single logical interface, in order to increase network bandwidth and/or availability.

Ports in the group can all connect to a target simultaneously, combining their bandwidth. A LAG can also offer higher network availability; if any port in the group becomes disconnected, the LAG can continue sending data using another port.

9.3.2.1 Interface Addressing with Link Aggregation Groups

If the Nebula Device of the selected site supports Link Aggregation Groups (LAGs), for example NSG300, you can create a LAG by clicking Add.

After you create a LAG, the Port Group Settings and Interface sections of the Interface addressing screen change. The new screen layout allows you to view and configure which ports are in a LAG.

Figure 223 Site-wide > Configure > Security gateway > Interface addressing (LAG Interface Type)

The following table describes the labels in this screen.

Table 159 Site-wide > Configure > Security gateway > Interface addressing (LAG Interface Type)

LABEL	DESCRIPTION
Port Group Setting	Select which port group or Link Aggregation Group (LAG) an Ethernet port belongs to. When LAGs are enabled, NCC adds each available LAN Ethernet port (port 3 and higher) to a separate port group, named LAN1, LAN2, LAN3, and so on. These default port groups cannot be modified or renamed.
Interface	
Name	This shows the name of the interface (network) on the Nebula Device.
IP address	This shows the IP address of the interface (network).
Subnet mask	This shows the subnet mask of the interface (network).

Table 159 Site-wide > Configure > Security gateway > Interface addressing (LAG Interface Type)

LABEL	DESCRIPTION
VLAN ID	This shows the ID number of the VLAN with which the interface (network) is associated. Note: If you have associated an SSID with the VLAN ID, the Smart VLAN screen displays after you change or delete the VLAN ID and click Save. You can exit the screen without saving, or apply your changes directly. If the Smart guest/VLAN network feature is enabled in the Site-wide > Configure > Site settings screen, you can select to apply the changes and update the SSID's VLAN setting as well.  The Smart VLAN dialog box shows a warning that the VLAN interfaces (G0/0/4096, G0/0/4097) are being used in the SSID settings. It asks if you want to continue with the changes. There are buttons for 'Cancel', 'Update SSID & continue', and 'Continue'.
Port group	For an Ethernet port, this shows the name of the port group to which the port belongs. For a link aggregation group, this shows its member port groups.
Guest	Select On to configure the interface as a Guest interface. Devices connected to a Guest interface will have Internet access but cannot communicate with each other directly or access network sources behind the Nebula Device. Otherwise, select Off to not use the interface as a Guest interface. Note: If the Smart guest/VLAN network feature is enabled in the Site-wide > Configure > Site settings screen, the guest settings you configure for an interface also apply to the WiFi networks (SSIDs) associated with the same VLAN ID. For example, if you set an interface in VLAN 100 as a guest interface, the SSID that belongs to VLAN 100 will also act as a guest network.
	Click this button to modify the network settings. See Section 9.3.1.1 on page 641 for detailed information. If the interface is a member of a link aggregation group, you cannot edit the interface's network settings.
	Click this icon to delete a VLAN entry or link aggregation group.
Add	Click this button to create a VLAN or link aggregation group. - For details on creating a VLAN, see Section 9.3.1.1 on page 641. - For details on creating a link aggregation group, see Section 9.3.2.2 on page 645.

9.3.2.2 Local LAN (LAG Interface Type)

Click the Add button or click the Edit button in the Interface section of the Site-wide > Configure > Security gateway > Interface addressing screen.

Figure 224 Site-wide > Configure > Security gateway > Interface addressing: Local LAN (LAG Interface Type)

Local LAN

Interface properties

Interface type: LAG

Interface name: LAG3

LAG configuration

Mode: active-backup

Link monitoring: Mii

Mii mon: 100

Updelay: 1

Downdelay: 0

IP address assignment

IP address:

Subnet mask:

Port group: LAN2

DHCP setting

DHCP: DHCP Server

IP pool start address:

First DNS server: NSG

Second DNS server:

Pool size: 200

Close OK

The following table describes the labels in this screen.

Table 160 Site-wide > Configure > Security gateway > Interface addressing: Local LAN (LAG Interface Type)

LABEL	DESCRIPTION
Interface properties	
Interface type	Select LAG to add a link aggregation group. Note: This field only appears if the Nebula Device supports Link Aggregation Groups (LAGs). If the Nebula Device does not support LAGs, a VLAN is created by default.
Interface name	Specify a name for the interface. This must be "LAG" plus a number, for example "LAG1".

Table 160 Site-wide > Configure > Security gateway > Interface addressing: Local LAN (LAG Interface Type) (continued)

LABEL	DESCRIPTION
LAG Configuration	
Mode	Select a mode for this Link Aggregation Group (LAG) interface. Choices are as follows: - active-backup: Only one port in the LAG interface is active and another port becomes active only if the active port fails. 802.3ad (IEEE 802.3ad Dynamic link aggregation): Link Aggregation Control Protocol (LACP) negotiates automatic combining of ports and balances the traffic load across the LAG link by sending LACP packets to the directly connected device that also implements LACP. The ports must have the same speed and duplex settings. - balance-alb (adaptive load balancing): Traffic is distributed according to the current load on each port by ARP negotiation. Incoming traffic is received by the current port. If the receiving port fails, another port takes over the MAC address of the failed receiving port.
Link Monitoring	Select how each link is monitored. mii (Media Independent Interface) – The Nebula Device monitors the state of the local interface only. The Nebula Device cannot tell if the link can transmit or receive packets. arp – The Nebula Device monitors the link by sending ARP queries. The Nebula Device then uses the reply to know if the link is up and that traffic is flowing through the link.
Miimom	This field displays for mii Link Monitoring. Set the interval in milliseconds that the system polls the Media Independent Interface (MII) to get the link's status.
Updelay	This field displays for mii Link Monitoring. Set the waiting time in milliseconds to confirm that a member interface link is up.
Downdelay	This field displays for mii Link Monitoring. Set the waiting time in milliseconds to confirm that a member interface link is down.
IP address assignment	
IP address	Enter the IP address for this interface.
Subnet mask	Enter the subnet mask of this interface in dot decimal notation. The subnet mask indicates what part of the IP address is the same for all computers in the network.
VLAN ID	Enter the VLAN ID. This 12-bit number uniquely identifies each VLAN. Allowed values are 1 – 4094. (0 and 4095 are reserved.) Note: NCC will show an error message when the VLAN ID in the NSG interface is configured to be the same as the WAN port's VLAN ID.
Port group	Select the name of the port group to which you want the interface (network) to belong.
DHCP setting	
DHCP	Select what type of DHCP service the Nebula Device provides to the network. Choices are: None – the Nebula Device does not provide any DHCP services. There is already a DHCP server on the network. DHCP Relay – the Nebula Device routes DHCP requests to one or more DHCP servers you specify. The DHCP servers may be on another network. DHCP Server – the Nebula Device assigns IP addresses and provides subnet mask, gateway, and DNS server information to the network. The Nebula Device is the DHCP server for the network.
These fields appear if the Nebula Device is a DHCP Relay.	
Relay server 1	Enter the IP address of a DHCP server for the network.
Relay server 2	This field is optional. Enter the IP address of another DHCP server for the network.
These fields appear if the Nebula Device is a DHCP Server.	
IP pool start address	Enter the IP address from which the Nebula Device begins allocating IP addresses. If you want to assign a static IP address to a specific computer, click Add new under Static DHCP Table.

Table 160 Site-wide > Configure > Security gateway > Interface addressing: Local LAN (LAG Interface Type) (continued)

LABEL	DESCRIPTION
Pool size	Enter the number of IP addresses to allocate. This number must be at least one and is limited by the interface's Subnet mask. For example, if the Subnet mask is 255.255.255.0 and IP pool start address is 10.10.10.10, the Nebula Device can allocate 10.10.10.10 to 10.10.10.254, or 245 IP addresses.
First DNS server Second DNS server Third DNS server	Specify the IP addresses of up to three DNS servers for the DHCP clients to use. Use one of the following ways to specify these IP addresses. Custom Defined – enter a static IP address. From ISP – select the DNS server that another interface received from its DHCP server. NSG – the DHCP clients use the IP address of this interface and the Nebula Device works as a DNS relay.
First WINS server Second WINS server	Enter the IP address of the WINS (Windows Internet Naming Service) server that you want to send to the DHCP clients. The WINS server keeps a mapping table of the computer names on your network and the IP addresses that they are currently using.
Lease time	Specify how long each computer can use the information (especially the IP address) before it has to request the information again. Choices are: infinite – select this if IP addresses never expire days, hours, minutes – select this to enter how long IP addresses are valid.
Extended options	This table is available if you selected DHCP server. Configure this table if you want to send more information to DHCP clients through DHCP packets. Click Add new to create an entry in this table. See Section 9.3.2.3 on page 648 for detailed information.
Name	This is the option's name.
Code	This is the option's code number.
Type	This is the option's type.
Value	This is the option's value.
	Click the edit icon to modify it. Click the remove icon to delete it.
Static DHCP Table	Configure a list of static IP addresses the Nebula Device assigns to computers connected to the interface. Otherwise, the Nebula Device assigns an IP address dynamically using the interface's IP pool start address and Pool size. Click Add new to create an entry in this table.
IP address	Enter the IP address to assign to a device with this entry's MAC address.
MAC	Enter the MAC address to which to assign this entry's IP address.
Description	Enter a description to help identify this static DHCP entry.
Close	Click Close to exit this screen without saving.
OK	Click OK to save your changes.

9.3.2.3 DHCP Option

Click the Add new button under Extended options in the Site-wide > Configure > Security gateway > Interface addressing: Local LAN screen.

Figure 225 Site-wide > Configure > Security gateway > Interface addressing: Local LAN: DHCP Option

The screenshot shows a configuration window titled "DHCP Option". It includes a close button (X) in the top right corner. The form contains the following fields:

- Option:** A dropdown menu currently set to "User Defined".
- Name:** A text input field containing "User_Defined".
- Code:** A text input field containing "0".
- Type:** A dropdown menu currently set to "IP".
- First IP address:** An empty text input field.
- Second IP address:** An empty text input field.
- Third IP address:** An empty text input field.

At the bottom right of the window are two buttons: "Close" and "OK".

The following table describes the labels in this screen.

Table 161 Site-wide > Configure > Security gateway > Interface addressing: Local LAN: DHCP Option

LABEL	DESCRIPTION
Option	Select which DHCP option that you want to add in the DHCP packets sent through the interface.
Name	This field displays the name of the selected DHCP option. If you selected User_Defined in the Option field, enter a descriptive name to identify the DHCP option.
Code	This field displays the code number of the selected DHCP option. If you selected User_Defined in the Option field, enter a number for the option. This field is mandatory.
Type	This is the type of the selected DHCP option. If you selected User_Defined in the Option field, select an appropriate type for the value that you will enter in the next field. Misconfiguration could result in interface lockout.
Value	Enter the value for the selected DHCP option. For example, if you selected TFTP Server Name (66) and the type is TEXT, enter the DNS domain name of a TFTP server here. This field is mandatory.
First IP address Second IP address Third IP address	If you selected Time Server (4), NTP Server (41), SIP Server (120), CAPWAP AC (138), or TFTP Server (150), you have to enter at least one IP address of the corresponding servers in these fields. The servers should be listed in order of your preference.
First enterprise ID Second enterprise ID	If you selected VIVC (124) or VIVS (125), you have to enter at least one vendor's 32-bit enterprise number in these fields. An enterprise number is a unique number that identifies a company.

Table 161 Site-wide > Configure > Security gateway > Interface addressing: Local LAN: DHCP Option

LABEL	DESCRIPTION
First class Second class	If you selected VIVC (124), enter the details of the hardware configuration of the host on which the client is running, or of industry consortium compliance.
First information Second information	If you selected VIVS (125), enter additional information for the corresponding enterprise number in these fields.
First FQDN Second FQDN Third FQDN	If the Type is FQDN, you have to enter at least one domain name of the corresponding servers in these fields. The servers should be listed in order of your preference.
Close	Click Close to exit this screen without saving.
OK	Click OK to save your changes.

9.3.2.4 Static Route

Click the Add button in the Static Route section of the Site-wide > Configure > Security gateway > Interface addressing screen.

Figure 226 Site-wide > Configure > Security gateway > Interface addressing: Static Route

The following table describes the labels in this screen.

Table 162 Site-wide > Configure > Security gateway > Interface addressing: Static Route

LABEL	DESCRIPTION
Name	Enter a descriptive name for this route.
Destination	Specifies the IP network address of the final destination. Routing is always based on network number.
Subnet mask	Enter the IP subnet mask.
Next hop IP address	Enter the IP address of the next-hop gateway.
Close	Click Close to exit this screen without saving.
OK	Click OK to save your changes.

9.3.3 Policy Route

Use policy routes and static routes to override the Nebula Device's default routing behavior in order to send packets through the appropriate next-hop gateway, interface or VPN tunnel.

A policy route defines the matching criteria and the action to take when a packet meets the criteria. The action is taken only when all the criteria are met. Use this screen to configure policy routes.

Click Site-wide > Configure > Security gateway > Policy route to access this screen.

Figure 227 Site-wide > Configure > Security gateway > Policy route



The following table describes the labels in this screen.

Table 163 Site-wide > Configure > Security gateway > Policy route

LABEL	DESCRIPTION
	Click the icon of a rule and drag the rule up or down to change the order.
Enabled	Select the checkbox to turn on the rule. Otherwise, clear the checkbox to turn off the rule.
Type	This shows whether the packets will be routed to a different gateway (INTRANET), VPN tunnel (VPN) or outgoing interface (INTERNET).
Protocol	This displays the IP protocol that defines the service used by the packets. Any means all services.
Source IP	This is the source IP addresses from which the packets are sent.
Source Port	This displays the port that the source IP addresses are using in this policy route rule. The gateway applies the policy route to the packets sent from the corresponding service port. Any means all service ports.
Destination IP	This is the destination IP addresses to which the packets are transmitted.
Destination Port	This displays the port that the destination IP addresses are using in this policy route rule. Any means all service ports.
Next-Hop	This is the next hop to which packets are directed. It helps forward packets to their destinations and can be a router, VPN tunnel or outgoing interface.
	Click this icon to change the profile settings.
	Click this icon to remove the profile.
Add	Click this button to create a new policy route. See Section 9.3.4.1 on page 657 for more information.

9.3.3.1 Add/Edit policy route

Click the Add button or an edit icon in the Site-wide > Configure > Security gateway > Policy route screen to access this screen.

Figure 228 Site-wide > Configure > Security gateway > Policy route: Add/Edit

The following table describes the labels in this screen.

Table 164 Site-wide > Configure > Security gateway > Policy Route: Add/Edit

LABEL	DESCRIPTION
Type	Select Internet Traffic to route the matched packets through the specified outgoing interface to a gateway (which is connected to the interface). Select Intranet Traffic to route the matched packets to the next-hop router or switch you specified in the Next-Hop field. Select VPN Traffic to route the matched packets through the VPN tunnel you specified in the Next-Hop field.
Protocol	Select TCP or UDP if you want to specify a protocol for the policy route. Otherwise, select Any.
Source IP	Enter a source IP address from which the packets are sent.
Source Port	Enter the port number (1 – 65535) from which the packets are sent. The Nebula Device applies the policy route to the packets sent from the corresponding service port. Any means all service ports.
Destination IP	Enter a destination IP address to which the packets go.
Destination Port	Enter the port number (1 – 65535) to which the packets go. The Nebula Device applies the policy route to the packets that go to the corresponding service port. Any means all service ports.
Next-Hop	If you select Internet Traffic in the Type field, select the WAN interface to route the matched packets through the specified outgoing interface to a Nebula Device connected to the interface. If you select Intranet Traffic in the Type field, enter the IP address of the next-hop router or switch. If you select VPN Traffic in the Type field, select the remote VPN gateway's site name.
Close	Click this button to exit this screen without saving.
Create	Click this button to save your changes and close the screen.

9.3.4 Firewall

By default, a LAN user can initiate a session from within the LAN and the Nebula Device allows the response. However, the Nebula Device blocks incoming traffic initiated from the WAN and destined for the

LAN. Use this screen to configure firewall rules for outbound traffic, application patrol, schedule profiles and port forwarding rules for inbound traffic.

Click Site-wide > Configure > Security gateway > Firewall to access this screen.

Note: The Nebula Device has the following hidden default firewall rules: LAN to WAN is allowed, WAN to LAN is blocked.

Figure 229 Site-wide > Configure > Security gateway > Firewall

Firewall

Security policy

Policy rules

Direction	Outgoing	Outgoing	Schedule	Description
Outgoing	Outgoing	Outgoing	Outgoing	Outgoing
Outgoing	Outgoing	Outgoing	Outgoing	Outgoing

[Add](#)

Security gateway services

Service	Allowed remote IP
Ping	Any
Web Server services (S configuration)	Any

[Add](#)

Schedule profiles

Reschedule? [Reschedule](#)

[Add](#)

SNP ALG

SNP ALG ☒

SNP signaling port 10000

[Advanced options](#)

SNP signaling timeout 100 seconds

SNP signaling timeout 100 seconds

NAT

[Add](#)

Enabled	Outgoing	Outgoing	Outgoing	Outgoing
Enabled	Outgoing	Outgoing	Outgoing	Outgoing

[Add](#)

Virtual server

Enabled	Outgoing	Outgoing	Outgoing	Outgoing
Enabled	Outgoing	Outgoing	Outgoing	Outgoing

[Add](#)

The following table describes the labels in this screen.

Table 165 Site-wide > Configure > Security gateway > Firewall

LABEL	DESCRIPTION
Security Policy	
Policy rules	
	Click the icon of a rule and drag the rule up or down to change the order.
Enabled	Select the checkbox to turn on the rule. Otherwise, clear the checkbox to turn off the rule.
Policy	Select what the Nebula Device is to do with packets that match this rule. Select Deny to silently discard the packets without sending a TCP reset packet or an ICMP destination-unreachable message to the sender. Select Allow to permit the passage of the packets. Select a pre-defined application patrol profile to have the Nebula Device take the action set in the profile when traffic matches the application patrol signatures. See Section 9.3.4.1 on page 657 for how to create an application patrol profile.
Protocol	Select the IP protocol to which this rule applies. Choices are: TCP, UDP, and Any.
Source	Specify the source IP addresses to which this rule applies. You can specify multiple IP addresses or subnets in the field separated by a comma (","), Enter any to apply the rule to all IP addresses.
Destination	Specify the destination IP addresses or subnet to which this rule applies. You can specify multiple IP addresses or subnets in the field separated by a comma (","), Enter any to apply the rule to all IP addresses.
Dst Port	Specify the destination ports to which this rule applies. You can specify multiple ports separated by a comma (","), Enter any to apply the rule to all ports.
Schedule	Select the name of the schedule profile that the rule uses. Always means the rule is active at all times if enabled.
Description	Enter a descriptive name of up to 60 printable ASCII characters for the rule.
	Click this icon to remove the rule.
Add	Click this button to create a new rule.
Security gateway services	
Service	This shows the name of the service.
Allowed remote IPs	Specify the IP address or a range of IP addresses (CIDR) with which the computer is allowed to access the Nebula Device using the service. Any allows all IP addresses.
Application Patrol	
Application monitor	Click On to enable traffic analysis for all applications and display information about the top 10 applications in the Site-wide > Dashboard: Traffic summary screen. Otherwise, select Off to disable traffic analysis for applications.
Application profiles	
Name	This shows the name of the application patrol profile.
Description	This shows the description of the application patrol profile.
	Click this icon to change the profile settings.
	Click this icon to remove the profile.
Add	Click this button to create a new application patrol profile. See Section 9.3.4.1 on page 657 for more information.
Schedule profiles	
	This shows the name of the schedule profile and the number of the outbound rules that are using this schedule profile.

Table 165 Site-wide > Configure > Security gateway > Firewall (continued)

LABEL	DESCRIPTION
	Click this icon to change the profile settings.
	Click this icon to remove the profile.
Add	Click this button to create a new schedule profile. See Section 9.3.4.2 on page 658 for more information.
SIP ALG	
SIP ALG	Session Initiation Protocol (SIP) is an application-layer protocol that can be used to create voice and multimedia sessions over the Internet. Application Layer Gateway (ALG) allows the following applications to operate properly through the Nebula Device's NAT. Turn on the SIP ALG to detect SIP traffic and help build SIP sessions through the Nebula Device's NAT. Enabling the SIP ALG also allows you to use the application patrol to detect SIP traffic and manage the SIP traffic's bandwidth.
SIP Signaling Port	If you are using a custom UDP port number (not 5060) for SIP traffic, enter it here.
ADVANCED OPTIONS	
SIP Inactivity Timeout	Select this option to have the Nebula Device apply SIP media and signaling inactivity time out limits.
SIP Media Inactivity Timeout	Use this field to set how many seconds (1 – 86400) the Nebula Device will allow a SIP session to remain idle (without voice traffic) before dropping it. If no voice packets go through the SIP ALG before the timeout period expires, the Nebula Device deletes the audio session. You cannot hear anything and you will need to make a new call to continue your conversation.
SIP Signaling Inactivity Timeout	Most SIP clients have an "expire" mechanism indicating the lifetime of signaling sessions. The SIP user agent sends registration packets to the SIP server periodically and keeps the session alive in the Nebula Device. If the SIP client does not have this mechanism and makes no calls during the Nebula Device SIP timeout, the Nebula Device deletes the signaling session after the timeout period. Enter the SIP signaling session timeout value (1 – 86400).
NAT	
1:1 NAT	
A 1:1 NAT rule maps a public IP address to the private IP address of a LAN server to give WAN users access. If a private network server will initiate sessions to the outside clients, 1:1 NAT lets the Nebula Device translate the source IP address of the server's outgoing traffic to the same public IP address that the outside clients use to access the server.	
	Click the icon of a rule and drag the rule up or down to change the order.
Enabled	Select the checkbox to turn on the rule. Otherwise, clear the checkbox to turn off the rule.
Uplink	Select the interface of the Nebula Device on which packets for the NAT rule must be received.
Public IP	Enter the destination IP address of the packets received by the interface specified in this NAT rule. Note: To enable NAT loop-back, enter a specific IP address instead of any in this field. NAT loop-back allows communications between two hosts on the LAN behind the Nebula Device through an external IP address.
LAN IP	Specify to which translated destination IP address this NAT rule forwards packets.
Allowed Remote IP	Specify the remote IP address with which the computer is allowed to use the public IP address to access the private network server. You can specify a range of IP addresses. any allows all IP addresses.

Table 165 Site-wide > Configure > Security gateway > Firewall (continued)

LABEL	DESCRIPTION
Description	Enter a description for the rule.
	Click this icon to remove the rule.
Add	Click this button to create a new 1:1 NAT mapping rule.
Virtual server	
	Click the icon of a rule and drag the rule up or down to change the order.
Enabled	Select the checkbox to turn on the rule. Otherwise, clear the checkbox to turn off the rule.
Uplink	Select the interface of the Nebula Device on which packets for the NAT rule must be received.
Protocol	Select the protocol (TCP, UDP, or Any) used by the service requesting the connection.
Public IP	Enter the destination IP address of the packets received by the interface specified in this NAT rule. Note: To enable NAT loop-back, enter a specific IP address instead of any in this field. NAT loop-back allows communications between two hosts on the LAN behind the Nebula Device through an external IP address.
Public port	Enter the translated destination port or range of translated destination ports if this NAT rule forwards the packet.
LAN IP	Specify to which translated destination IP address this NAT rule forwards packets.
Local port	Enter the original destination port or range of destination ports this NAT rule supports.
Allowed Remote IP	Specify the remote IP address with which the computer is allowed to use the public IP address to access the private network server. You can specify a range of IP addresses. any allows all IP addresses.
Description	Enter a description for the rule.
	Click this icon to remove the rule.
Add	Click this button to create a new virtual server mapping rule.

9.3.4.1 Add application patrol profile

Application patrol provides a convenient way to manage the use of various applications on the network. It manages general protocols (for example, HTTP and FTP) and instant messenger (IM), peer-to-peer (P2P), Voice over IP (VoIP), and streaming (RSTP) applications. You can even control the use of a particular application's individual features (like text messaging, voice, video conferencing, and file transfers).

An application patrol profile is a group of categories of application patrol signatures. For each profile, you can specify the default action the Nebula Device takes once a packet matches a signature (forward, drop, or reject a service's connections and/or create a log alert).

Click the Add button in the Application patrol section of the Site-wide > Configure > Security gateway > Firewall screen to access this screen. Use the application patrol profile screens to customize action and log settings for a group of application patrol signatures.

Figure 230 Site-wide > Configure > Security gateway > Firewall: Add an application profile

The following table describes the labels in this screen.

Table 166 Site-wide > Configure > Security gateway > Firewall: Add an application profile

LABEL	DESCRIPTION
Name	Enter a name for this profile for identification purposes.
Description	Enter a description for this profile.
Log	Select whether to have the Nebula Device generate a log (ON) or not (OFF) by default when traffic matches an application signature in this category.
Application management	
Enabled	Select the checkbox to turn on the rule. Otherwise, clear the checkbox to turn off the rule.
Category	Select an application category.
Application	Select All or select an application within the category to apply the policy.
Policy	Select the default action for the applications selected in this category. Forward – the Nebula Device routes packets that matches these application signatures. Drop – the Nebula Device silently drops packets that matches these application signatures without notification. Reject – the Nebula Device drops packets that matches these application signatures and sends notification to clients.
	Click this icon to remove the entry.
Add	Click this button to create a new application category and set actions for specific applications within the category.
	Enter a name to search for relevant applications and click Add to create an entry.
Close	Click this button to exit this screen without saving.
Create	Click this button to save your changes and close the screen.

9.3.4.2 Create new schedule

Click the Add button in the Schedule Profiles section of the Site-wide > Configure > Security gateway > Firewall screen to access this screen.

Figure 231 Site-wide > Configure > Security gateway > Firewall: Add a schedule profile

Create new schedule

Local time zone: (You can set this on: [General settings](#))

Name:

Template:

Day	Availability
Sunday	☒ 00:00 02:00 04:00 06:00 08:00 10:00 12:00 14:00 16:00 18:00 20:00 22:00 24:00
Monday	☒ 00:00 02:00 04:00 06:00 08:00 10:00 12:00 14:00 16:00 18:00 20:00 22:00 24:00
Tuesday	☒ 00:00 02:00 04:00 06:00 08:00 10:00 12:00 14:00 16:00 18:00 20:00 22:00 24:00
Wednesday	☒ 00:00 02:00 04:00 06:00 08:00 10:00 12:00 14:00 16:00 18:00 20:00 22:00 24:00
Thursday	☒ 00:00 02:00 04:00 06:00 08:00 10:00 12:00 14:00 16:00 18:00 20:00 22:00 24:00
Friday	☒ 00:00 02:00 04:00 06:00 08:00 10:00 12:00 14:00 16:00 18:00 20:00 22:00 24:00

Close

The following table describes the labels in this screen.

Table 167 Site-wide > Configure > Security gateway > Firewall: Add a schedule profile

LABEL	DESCRIPTION
Name	Enter a descriptive name for this schedule for identification purposes.
Templates	Select a pre-defined schedule template or select Custom schedule and manually configure the day and time at which the associated firewall outbound rule is enabled.
Day	This shows the day of the week.
Availability	Click On to enable the associated rule at the specified time on this day. Otherwise, select Off to turn the associated rule off at the specified time on this day. Specify the hour and minute when the schedule begins and ends each day.
Close	Click this button to exit this screen without saving.
Add	Click this button to save your changes and close the screen.

9.3.5 Security Service

Use this screen to enable or disable the features available in the security pack for your Nebula Device, such as content filter, Intrusion Detection and Prevention (IDP) and/or anti-virus. As to application patrol, go to the Firewall screen to configure it since you need to have a firewall rule for outbound traffic.

Content filter allows you to block access to specific web sites. It can also block access to specific categories of web site content. IDP can detect malicious or suspicious packets used in network-based intrusions and respond instantaneously. Anti-virus helps protect your connected network from virus/spyware infection.

Click Site-wide > Configure > Security gateway > Security service to access this screen.

Note: Packet inspection signatures examine packet content for malicious data. Packet inspection applies to OSI (Open System Interconnection) layer-4 to layer-7 contents. You need to subscribe for IDP service in order to be able to download new signatures.

Figure 232 Site-wide > Configure > Security gateway > Security service

Security Service

Content Filtering

Enabled ☒

Category	Enabled
URL	☒
URL	☒
URL	☒
URL	☒
URL	☒

Content-based blocking: This category has been blocked. Please contact the relevant editor.

Blocked URL:

Block list:

Deny list:

+PGDMS support website

+PGDMS support website

Block Category

Block list: Security

Test URL:

+Block list for known website categories

Default category:

*Category list

Anti-Virus

Signature information:

Current version	100.000000.0
Signature number	400000
Release date	2020-01-08 09:00:00 (UTC+08:00)

Enabled ☒

Block list:

File Pattern:

File Pattern:

File Pattern:

Intrusion Detection / Prevention

Signature information:

Current version	5.1.0.0
Signature number	2000
Release date	2020-01-08 09:00:00 (UTC+08:00)

Detection ☒

Prevention ☒

The following table describes the labels in this screen.

Table 168 Site-wide > Configure > Security gateway > Security service

LABEL	DESCRIPTION
Content Filtering	
Enabled	Click ON to enable the content filter feature on the Nebula Device. Otherwise, click OFF to disable it.
Interface	This shows the name of the interfaces created on the Nebula Device. Click ON to enable content filter on the interfaces.
Denied access message	Enter a message to be displayed when content filter blocks access to a web page. Use up to 127 characters (0–9a–zA–Z;/?:@&=+\$\._!~*')%,"). For example, "Access to this web page is not allowed. Please contact the network administrator". It is also possible to leave this field blank if you have a URL specified in the Redirect URL field. In this case if the content filter blocks access to a web page, the Nebula Device just opens the web page you specified without showing a denied access message.
Redirect URL	Enter the URL of the web page to which you want to send users when their web access is blocked by content filter. The web page you specify here opens in a new frame below the denied access message. Use "http://" or "https://" followed by up to 262 characters (0–9a–zA–Z;/?:@&=+\$\._!~*')%,). For example, http://192.168.1.17/blocked access.
Black list	Sites that you want to block access to, regardless of their content rating, can be blocked by adding them to this list. Enter host names such as www.bad-site.com into this text field. Do not enter the complete URL of the site – that is, do not include "http://". All sub-domains are also blocked. For example, entering "*.bad-site.com" also blocks "www.badsite.com", "partner.bad-site.com", "press.bad-site.com", and so on. You can also enter just a top level domain. For example, enter *.com to block all .com domains. Use up to 127 characters (0–9a–z–). The casing does not matter.
White list	Sites that you want to allow access to, regardless of their content rating, can be allowed by adding them to this list. Enter host names such as www.good-site.com into this text field. Do not enter the complete URL of the site – that is, do not include "http://". All sub-domains are allowed. For example, entering "*.zyxel.com" also allows "www.zyxel.com", "partner.zyxel.com", "press.zyxel.com", and so on. You can also enter just a top level domain. For example, enter *.com to allow all .com domains. Use up to 127 characters (0–9a–z–). The casing does not matter.
Block Category	
The Nebula Device prevents users from accessing web pages that match the categories that you select below. When external database content filter blocks access to a web page, it displays the denied access message that you configured in the Denied access message field along with the category of the blocked web page.	
Templates	Web pages are classified into a category based on their content. You can choose a pre-defined template that has already selected certain categories. Alternatively, choose Custom and manually select categories in this section to control access to specific types of Internet content.
Test URL	You can check which category a web page belongs to. Enter a web site URL in the text box. When the content filter is active, you should see the web page's category. The query fails if the content filter is not active. Content Filter can query a category by full URL string (for example, http://www.google.com/picture/index.htm), but HTTPS Domain Filter can only query a category by domain name ('www.google.com'), so the category may be different in the query result. Test URL displays both results in the test.
Search Category	Specify your desired filter criteria to filter the list of categories.

Table 168 Site-wide > Configure > Security gateway > Security service (continued)

LABEL	DESCRIPTION
Category List	Click to display or hide the category list. These are categories of web pages based on their content. Select categories in this section to control access to specific types of Internet content.
Anti-Virus	
Signature Information	This shows the Current Version of the anti-virus definition, its Signature Number and the Released Date.
Enabled	Click On to enable anti-virus on the Nebula Device. Otherwise, select Off to disable it.
Black/White List	Use this to set up anti-virus black (blocked) and white (allowed) lists of virus file patterns.
File Pattern	For a black list entry, specify a pattern to identify the names of files that the Nebula Device should log and delete. For a white list entry, specify a pattern to identify the names of files that the Nebula Device should not scan for viruses. • Use up to 80 characters. Alphanumeric characters, underscores (_), dashes (-), question marks (?) and asterisks (*) are allowed. • A question mark (?) lets a single character in the file name vary. For example, use "a?.zip" (without the quotation marks) to specify aa.zip, ab.zip and so on. • Wildcards (*) let multiple files match the pattern. For example, use "*a.zip" (without the quotation marks) to specify any file that ends with "a.zip". A file named "testa.zip" would match. There could be any number (of any type) of characters in front of the "a.zip" at the end and the file name would still match. A file named "test.zipa" for example would not match. • An * in the middle of a pattern has the Nebula Device check the beginning and end of the file name and ignore the middle. For example, with "abc*.zip", any file starting with "abc" and ending in ".zip" matches, no matter how many characters are in between. • The whole file name has to match if you do not use a question mark or asterisk. • If you do not use a wildcard, the Nebula Device checks up to the first 80 characters of a file name.
Intrusion Detection / Prevention System	
Signature Information	This shows the Current Version of the anti-intrusion definition, its Signature Number and the Released Date.
Detection	Click On to detect malicious or suspicious packets. Otherwise, select Off to disable it.
Prevention	Click On to identify and respond to intrusions. Otherwise, select Off to disable it.

9.3.6 Site-to-Site VPN

A virtual private network (VPN) provides secure communications between sites without the expense of leased site-to-site lines. Use this screen to configure a VPN rule.

Note: Site-to-site VPN do not support both sites behind NAT scenario.

Click Site-wide > Configure > Security gateway > Site-to-Site VPN to access this screen.

Figure 233 Site-wide > Configure > Security gateway > Site-to-Site VPN

Site-to-Site VPN

Redundant VPN

Primary interface:

Secondary interface:

Local networks:

Name	Subnet	Use VPN
LAN1	192.168.0.0/24	☒
LAN2	192.168.0.0/24	☒
LAN3	0.0.0.0/0	☐
LAN4	0.0.0.0/0	☐
LAN5	0.0.0.0/0	☐
LAN6	0.0.0.0/0	☐

SD-VPN

Enabled: ☒

VPN Area:

VPN Settings: Split tunnel (permit only site-to-site traffic over the VPN):

ADVANCED OPTIONS:

Area communication: ☐

NAT traversal: ☐ None ☒ Custom

Remote VPN peer connect to this Reduko gateway using the public IP address you specify:

Peer VPN networks:

Network	Subnet

Configuring VPN with multiple sites is cumbersome. Use [VPN Configuration](#) to save a lot of time.

Auto-Link VPN

Site-wide settings

Options in this section apply to this Reduko gateway only.

Enabled	Name	Public IP	Private subnet	Peer subnet	Pre-shared secret	Available
☒		X.X.X.X	X.X.X.X	X.X.X.X	Default	

[Add](#)

The following table describes the labels in this screen.

Table 169 Site-wide > Configure > Security gateway > Site-to-Site VPN

LABEL	DESCRIPTION
Primary Interface	Specify the primary WAN interface through which the Nebula Device forwards VPN traffic.
Secondary Interface	Specify the secondary WAN interface through which the Nebula Device forwards VPN traffic. Alternatively, select None.
Local networks	This shows the local networks behind the Nebula Device.
Name	This shows the network name.
Subnet	This shows the IP address and subnet mask of the computer on the network.
Use VPN	Click this to allow or disallow the computer connected to the LAN port to use VPN.
SD-VPN	
Enabled	Click this to enable or disable site-to-site VPN on the site's Nebula Device. If you disable this setting, the site will leave the VPN area.
VPN Area	Select the VPN area of the site. For details, see Section 12.4.4.2 on page 745 .
VPN topology	This shows the VPN mode supported by the Nebula Device. Select a VPN topology. Select Disable to not set a VPN connection. In the Site-to-Site VPN topology, the remote IPsec device has a static IP address or a domain name. This Nebula Device can initiate the VPN tunnel. In the Hub-and-Spoke VPN topology, there is a VPN connection between each spoke router and the hub router, which uses the VPN concentrator. The VPN concentrator routes VPN traffic between the spoke routers and itself. In the Server-and-Client VPN topology, incoming connections from IPsec VPN clients are allowed. The clients have dynamic IP addresses and are also known as dial-in users. Only the clients can initiate the VPN tunnel.
Hubs (peers to connect to)	This field is available when you set Topology to Hub-and-Spoke. The field is configurable only when the Nebula Device of the selected site is the hub router. You can select another site's name to have the Nebula Device of that site act as the hub router in the Hub-and-Spoke VPN topology.
Branch to branch VPN	Enable this to allow spoke sites to communicate with each other in the VPN area. When disabled, spoke sites can only communicate with hub sites.
NAT traversal	If the Nebula Device is behind a NAT router, enter the public IP address or the domain name that is configured and mapped to the Nebula Device on the NAT router.
Server (client connect to)	This field is available when you set Topology to Server-and-Client. The field is configurable only when the Nebula Device of the selected site is the VPN server. You can select another site's name to have the Nebula Device of that site act as the VPN server.
Area communication	Enable this to allow the site to communicate with sites in different VPN areas within the organization.
Client-to-Client communication	Select On to allow VPN traffic to transmit between VPN clients by going through the server. The field is configurable only when the Nebula Device of the selected site is the VPN server.
Peer VPN networks	This shows the remote (peer) Nebula Device's network name and address.
Auto-Link VPN	If the remote VPN gateway is not a Nebula Device, use this section to set up a VPN connection between it and the Nebula Device.
Site-wide settings	
+ Add	Click this button to add a non-Nebula gateway to the VPN area.
Enabled	Select the checkbox to turn on the rule. Otherwise, clear the checkbox to turn off the rule.

Table 169 Site-wide > Configure > Security gateway > Site-to-Site VPN (continued)

LABEL	DESCRIPTION
Name	Enter the name of the peer gateway.
Public IP	Enter the public IP address of the peer gateway.
Private subnet	Enter the local network address or subnet behind the peer gateway.
IPSec policy	Click to select a pre-defined policy or have a custom one. See Section 9.3.6.1 on page 665 for detailed information.
Preshared secret	Enter a pre-shared key (password). The Nebula Device and peer gateway use the key to identify each other when they negotiate the IKE SA.
Availability	Select All sites to allow the peer gateway to connect to any Nebula Device in the organization through a VPN tunnel. Select This site and the peer gateway can only connect to the Nebula Device in this site through a VPN tunnel. You can also configure any specific sites in the organization,
Address	Enter the address (physical location) of the device.
Remove	Click the remove icon to delete the entry.
Add	Click this button to add a peer VPN gateway to the list.

9.3.6.1 Custom IPSec Policy

Click an existing IPSec Policy button in the Non-Nebula VPN peers section of the Site-wide > Configure > Security gateway > Site-to-Site VPN screen to access this screen.

Figure 234 Site-wide > Configure > Security gateway > Site-to-Site VPN: Custom IPsec Policy

Custom [X]

Preset: Default

Phase 1

IKE version: IKEv1

Encryption: 3DES

Authentication: SHA256

Diffie-Hellman group: DH2

Lifetime (seconds): 86400

Advanced

Phase 2

Set	Encryption	Authentication
Set 1	3DES	SHA256
Set 2	None	None
Set 3	None	None

PFS group: None

Lifetime (seconds): 86400

Close OK

The following table describes the labels in this screen.

Table 170 Site-wide > Configure > Security gateway > Site-to-Site VPN: Custom IPsec Policy

LABEL	DESCRIPTION
Preset	Select a pre-defined IPsec policy, or select Custom to configure the policy settings yourself.
Phase 1	IPsec VPN consists of two phases: Phase 1 (Authentication) and Phase 2 (Key Exchange). A phase 1 exchange establishes an IKE SA (Security Association).

Table 170 Site-wide > Configure > Security gateway > Site-to-Site VPN: Custom IPSec Policy (continued)

LABEL	DESCRIPTION
IKE version	Select IKEv1 or IKEv2. IKEv1 applies to IPv4 traffic only. IKEv2 applies to both IPv4 and IPv6 traffic. IKE (Internet Key Exchange) is a protocol used in setting up security associations that allows two parties to send data securely.
Encryption	Select which key size and encryption algorithm to use in the IKE SA. Choices are: DES – a 56-bit key with the DES encryption algorithm 3DES – a 168-bit key with the DES encryption algorithm AES128 – a 128-bit key with the AES encryption algorithm AES192 – a 192-bit key with the AES encryption algorithm AES256 – a 256-bit key with the AES encryption algorithm The Nebula Device and the remote IPSec router must use the same key size and encryption algorithm. Longer keys require more processing power, resulting in increased latency and decreased throughput.
Authentication	Select which hash algorithm to use to authenticate packet data in the IKE SA. Choices are SHA128, SHA256, SHA512 and MD5. SHA is generally considered stronger than MD5, but it is also slower. The remote IPSec router must use the same authentication algorithm.
Diffie-Hellman group	Select which Diffie-Hellman key group (DHx) you want to use for encryption keys. Choices are: DH1 – use a 768-bit random number Modular Exponential (MODP) DH group DH2 – use a 1024-bit random number MODP DH5 – use a 1536-bit random number MODP DH14 – use a 2048-bit random number MODP The longer the key, the more secure the encryption, but also the longer it takes to encrypt and decrypt information. Both routers must use the same DH key group.
Lifetime (seconds)	Type the maximum number of seconds the IKE SA can last. When this time has passed, the Nebula Device and remote IPSec router have to update the encryption and authentication keys and re-negotiate the IKE SA. This does not affect any existing IPSec SAs, however.
Advanced	Click this to display a greater or lesser number of configuration fields.
Mode	Select the negotiation mode to use to negotiate the IKE SA. Choices are: Main – this encrypts the Nebula Device's and remote IPSec router's identities but takes more time to establish the IKE SA Aggressive – this is faster but does not encrypt the identities The Nebula Device and the remote IPSec router must use the same negotiation mode.
Local ID	Enter the identity of the Nebula Device during authentication. Any indicates that the remote IPSec router does not check the identity of the Nebula Device.
Peer ID	Enter the identity of the remote IPSec router during authentication. Any indicates that the Nebula Device does not check the identity of the remote IPSec router.
Phase 2	Phase 2 uses the SA that was established in phase 1 to negotiate SAs for IPSec.

Table 170 Site-wide > Configure > Security gateway > Site-to-Site VPN: Custom IPSec Policy (continued)

LABEL	DESCRIPTION
Encryption	Select which key size and encryption algorithm to use in the IPSec SA. Choices are: (none) – no encryption key or algorithm DES – a 56-bit key with the DES encryption algorithm 3DES – a 168-bit key with the DES encryption algorithm AES128 – a 128-bit key with the AES encryption algorithm AES192 – a 192-bit key with the AES encryption algorithm AES256 – a 256-bit key with the AES encryption algorithm The Nebula Device and the remote IPSec router must both have at least one proposal that uses the same encryption and the same key. Longer keys are more secure, but require more processing power, resulting in increased latency and decreased throughput.
Authentication	Select which hash algorithm to use to authenticate packet data in the IPSec SA. Choices are None, MD5, SHA128, SHA256, and SHA512. SHA is generally considered stronger than MD5, but it is also slower. The Nebula Device and the remote IPSec router must both have a proposal that uses the same authentication algorithm.
PFS group	Select whether or not you want to enable Perfect Forward Secrecy (PFS) and, if you do, which Diffie-Hellman key group to use for encryption. Choices are: None – disable PFS DH1 – enable PFS and use a 768-bit random number DH2 – enable PFS and use a 1024-bit random number DH5 – enable PFS and use a 1536-bit random number DH14 – enable PFS and use a 2048-bit random number PFS changes the root key that is used to generate encryption keys for each IPSec SA. The longer the key, the more secure the encryption, but also the longer it takes to encrypt and decrypt information. Both routers must use the same DH key group. PFS is ignored in initial IKEv2 authentication but is used when re-authenticating.
Lifetime (seconds)	Enter the maximum number of seconds the IPSec SA can last. Shorter life times provide better security. The Nebula Device automatically negotiates a new IPSec SA before the current one expires, if there are users who are accessing remote resources.
VPN tunnel interface (optional) IPSec VPN Tunnel Interface (VTI) encrypts or decrypts IPv4 traffic from or to the interface according to the IP routing table. VTI allows static routes to send traffic over the VPN. The IPSec tunnel endpoint is associated with an actual (virtual) interface. Therefore many interface capabilities such as Policy Route, Static Route, Trunk, and BWM can be applied to the IPSec tunnel as soon as the tunnel is active. IPSec VTI simplifies network management and load balancing. Create a trunk using VPN tunnel interfaces for load balancing. This section is available when you select IKEv2 in the IKE Version field.	
IP address	Enter the IP address of the VPN tunnel interface.
Subnet mask	Enter the subnet mask of this interface in dot decimal notation. The subnet mask indicates what part of the IP address is the same for all computers in the network
Close	Click this button to exit this screen without saving.
OK	Click this button to save your changes and close the screen.

9.3.7 Remote Access VPN

Use this screen to configure the VPN client settings.

Internet Protocol Security (IPSec) VPN connects IPSec routers or remote users using IPSec client software. This standards-based VPN offers flexible solutions for secure data communications across a public network. IPSec is built around a number of standardized cryptographic techniques to provide confidentiality, data integrity and authentication at the IP layer.

The Layer 2 Tunneling Protocol (L2TP) works at layer 2 (the data link layer) to tunnel network traffic between two peers over another network (like the Internet). In L2TP VPN, an IPSec VPN tunnel is established first and then an L2TP tunnel is built inside it.

Click Site-wide > Configure > Security gateway > Remote access VPN to access this screen.

Figure 235 Site-wide > Configure > Security gateway > Remote access VPN

Remote access VPN

IPSec VPN server: ☒

Outgoing interface: WAN1

NAT traversal: ☐ IPsec or FQDN

Client VPN subnet:

DNS name servers: Use Google Public DNS

WINS: No WINS servers

Secret: ☐

Authentication: RADIUS Cloud Authentication

L2TP over IPSec VPN server

L2TP over IPSec VPN server: ☒

Client VPNs subnet:

DNS name servers: Use Google Public DNS

WINS: No WINS servers

Secret: ☐

Authentication: RADIUS Cloud Authentication

VPN provision script: ☐

The following table describes the labels in this screen.

Table 171 Site-wide > Configure > Security gateway > Remote access VPN

LABEL	DESCRIPTION
	Click this icon to download VPN client software.
IPSec VPN server	Select to enable the IPSec client feature on the Nebula Device. Otherwise, select Disable to turn it off.
Outgoing interface	Select the WAN interface to which the IPSec VPN connection is going.
NAT traversal	Enter the IP address or domain name of the NAT router if the IPSec VPN tunnel must pass through NAT (there is a NAT router between the IPSec devices).
Client VPN subnet	Specify the IP addresses that the Nebula Device uses to assign to the IPSec VPN clients.
DNS name servers	Specify the IP addresses of DNS servers to assign to the remote users. Select Use Google Public DNS to use the DNS service offered by Google. Otherwise, select Specify nameserver to enter a static IP address.
Custom nameservers	If you select Specify nameserver in the DNS name servers field, manually enter the DNS server IP addresses.
WINS	The WINS (Windows Internet Naming Service) server keeps a mapping table of the computer names on your network and the IP addresses that they are currently using. Select No WINS Servers to not send WINS server addresses to the users. Otherwise, select Specify nameserver to enter the IP addresses of WINS servers to assign to the remote users.
Custom nameservers	If you select Specify nameserver in the WINS field, manually enter the WINS server IP addresses.
Secret	Enter the pre-shared key (password) which is used to set up the IPSec VPN tunnel.
Authentication	Select how the Nebula Device authenticates a remote user before allowing access to the IPSec VPN tunnel.
L2TP over IPSec VPN server	Select to enable the L2TP over IPSec VPN feature on the Nebula Device. Otherwise, select Disable to turn it off.
Client VPN subnet	Specify the IP addresses that the Nebula Device uses to assign to the L2TP over IPSec VPN clients.
DNS name servers	Specify the IP addresses of DNS servers to assign to the remote users. Select Use Google Public DNS to use the DNS service offered by Google. Otherwise, select Specify nameserver to enter a static IP address.
Custom nameservers	If you select Specify nameserver in the DNS name servers field, manually enter the DNS server IP addresses.
WINS	The WINS (Windows Internet Naming Service) server keeps a mapping table of the computer names on your network and the IP addresses that they are currently using. Select No WINS Servers to not send WINS server addresses to the users. Otherwise, select Specify nameserver to enter the IP addresses of WINS servers to assign to the remote users.
Custom nameservers	If you select Specify nameserver in the WINS field, manually enter the WINS server IP addresses.
Secret	Enter the pre-shared key (password) which is used to set up the L2TP over IPSec VPN tunnel.

Table 171 Site-wide > Configure > Security gateway > Remote access VPN (continued)

LABEL	DESCRIPTION
Authentication	Select how the Nebula Device authenticates a remote user before allowing access to the L2TP over IPSec VPN tunnel.
VPN provision script	Send an email to help automatically configure VPN settings on client devices so that the devices can remotely access this Nebula Device. The email contains two scripts; one for mac OS and iOS devices, and one for Windows 8 and Windows 10 devices. You can send the email to one or more email addresses. • If Authentication is set to Nebula Cloud Authentication, the default email address list contains all authorized VPN user email addresses and your email address. • If Authentication is set to AD and RADIUS Authentication, the default email address list contains your user email address.

9.3.8 Captive Portal

Use this screen to configure captive portal settings for each interface. A captive portal can intercept network traffic until the user authenticates his or her connection, usually through a specifically designated login web page.

Click Site-wide > Configure > Security gateway > Captive portal to access this screen.

Figure 236 Site-wide > Configure > Security gateway > Captive portal

Captive portal

Interface: LAN

Captive portal on this interface is direct access. You can change this setting [here](#).

Themes


☐ Modern


☐ Copy of Modern


☒ Copy of Modern

Click-to-continue/Sign-on page

Logo:  Upload a logo

Message:

Success page

Message:

External captive portal URL

Use URL: ☒ URL:

To use custom captive portal page, please download the zip file and edit them.
[Download the customized captive portal page-example](#)

Captive portal behavior

After the captive portal page where the user should go?

☒ Stay on Captive portal authenticated successfully page

☐ To promotion URL:

[Save](#) or [Cancel](#)

(Please allow 1-2 minutes for changes to take effect.)

The following table describes the labels in this screen.


Table 172 Site-wide > Configure > Security gateway > Captive portal

LABEL	DESCRIPTION
Interface	Select the Nebula Device's interface (network) to which the settings you configure here is applied.
Themes	This section is not configurable when External captive portal URL is set to ON. - Click the Preview icon at the upper right of a theme image to display the portal page in a new frame. - Click the Copy icon to create a new custom theme (portal page). - Click the Edit icon of a custom theme to go to a screen, where you can view and configure the details of the custom portal pages. See Section 9.3.8.1 on page 673. - Click the Remove icon to delete a custom theme. Select the theme you want to use on the specified interface.
Click-to-continue/Sign-on page	
This section is not configurable when External captive portal URL is set to ON.	
Logo	This shows the logo image that you uploaded for the customized login page. Click Upload a logo and specify the location and file name of the logo graphic or click Browse to locate it. You can use the following image file formats: GIF, PNG, or JPG.
Message	Enter a note to display below the title. Use up to 1024 printable ASCII characters. Spaces are allowed.
Success page	
Message	Enter a note to display on the page that displays when a user logs in successfully. Use up to 1024 printable ASCII characters. Spaces are allowed.
External captive portal URL	
Use URL	Select On to use a custom login page from an external web portal instead of the one built into the NCC. You can configure the look and feel of the web portal page. Specify the login page's URL; for example, http://IIS server IP Address/login.asp. The Internet Information Server (IIS) is the web server on which the web portal files are installed.
Captive portal behavior	
After the captive portal page where the user should go?	Select To promotion URL and specify the URL of the web site/page to which the user is redirected after a successful login. Otherwise, select Stay on Captive portal authenticated successfully page.

9.3.8.1 Custom Theme Edit

Use this screen to check what the custom portal pages look like. You can also view and modify the CSS values of the selected HTML file. Click a custom login page's Edit button in the Site-wide > Configure > Security gateway > Captive portal screen to access this screen.

Figure 237 Site-wide > Configure > Security gateway > Captive portal: Edit

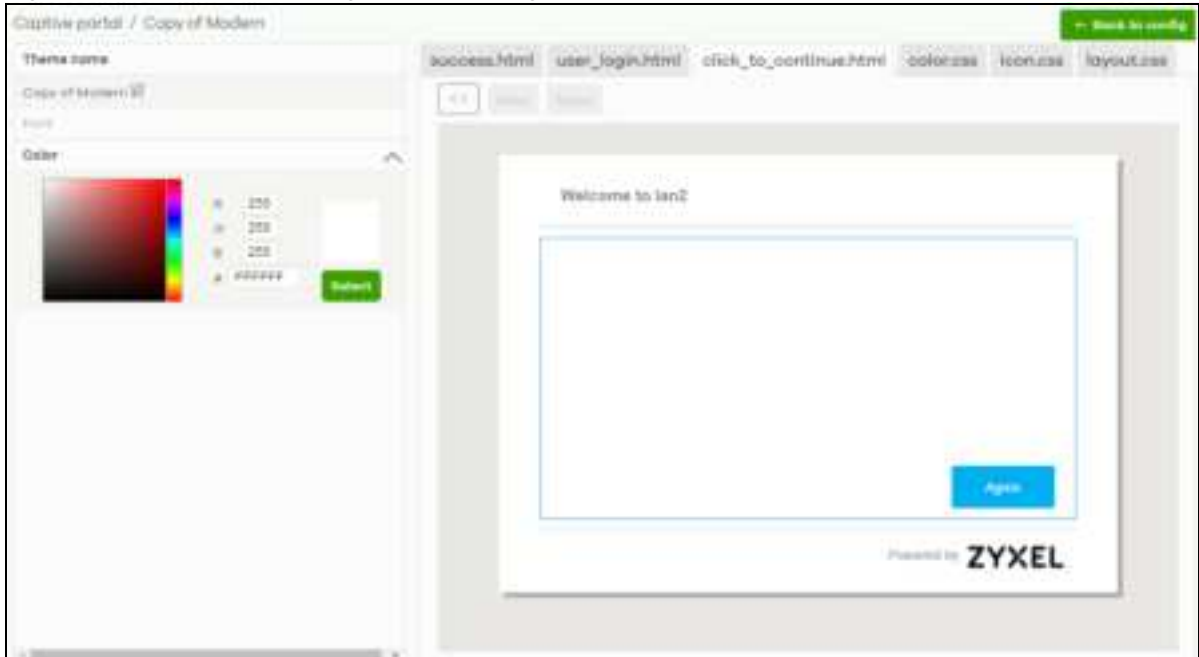

The following table describes the labels in this screen.

Table 173 Site-wide > Configure > Security gateway > Captive portal: Edit

LABEL	DESCRIPTION
Back to config	Click this button to return to the Captive portal screen.
Theme name	This shows the name of the theme. Click the edit icon to change it.
Font	Click the arrow to hide or display the configuration fields. To display this section and customize the font type and/or size, click an item with text in the preview of the selected custom portal page (HTML file).
Color	Click the arrow to hide or display the configuration fields. Click an item in the preview of the selected custom portal page (HTML file) to display this section and customize its color, such as the color of the button, text, window's background, links, borders, and so on. Select a color that you want to use and click the Select button.
HTML/CSS	This shows the HTML file name of the portal page created for the selected custom theme. This also shows the name of the CSS files created for the selected custom theme. Click an HTML file to display the portal page. You can also change colors and modify the CSS values of the selected HTML file.
	Click this button to view and modify the CSS values of the selected HTML file. It is recommended that you do NOT change the script code to ensure proper operation of the portal page.
	Click this button to preview the portal page (the selected HTML file).
Save	Click this button to save your settings for the selected HTML file to the NCC.
Apply	Click this button to save your settings for the selected HTML file to the NCC and apply them to the Nebula Device in the site.

9.3.9 Network Access Method

Use this screen to enable or disable web authentication on an interface.

Click Site-wide > Configure > Security gateway > Network access method to access this screen.

Figure 238 Site-wide > Configure > Security gateway > Network access method

Network access method

Interfaces: LAN1

Network Access

☐ Disable
Users can access the network directly.

☐ Click-to-continue
Users must view and agree the captive portal page then can access the network.

☒ Sign-on with: Netula Cloud Authentication

Walled garden

Walled garden ranges:

[What do I enter here?](#)

One IP address/domain in one line to specify your walled garden.
Example:
192.168.1.1
www.1234.com
192.168.0.24

Captive portal access attribute

Self-registration: Allow users to create accounts with auto-authorized

Login on multiple client devices: Multiple devices access simultaneously

NCAS disconnection behavior

☒ Allowed
Client devices can access the network without signing in, except they are explicitly blocked.

☐ Limited
Only currently authorized clients and whitelisted client devices will be able to access the network.

The following table describes the labels in this screen.

Table 174 Site-wide > Configure > Security gateway > Network access method

LABEL	DESCRIPTION
Interfaces	Select the Nebula Device's interface (network) to which the settings you configure here is applied.
Network Access	Select Disable to turn off web authentication. Select Click-to-continue to block network traffic until a client agrees to the policy of user agreement. Select Sign-on with to block network traffic until a client authenticates with an external RADIUS or AD server through the specifically designated web portal page. Select Nebula Cloud Authentication or an authentication server that you have configured in the Site-wide > Configure > Security gateway > Gateway settings screen (see Section 9.3.11 on page 679). Select Two-Factor Authentication to require that the user log in using both their password and a Google Authenticator code. To log in, users must have Two-Factor Authentication enabled on their account and have setup Google Authenticator on their mobile device.
Walled garden	This field is not configurable if you set Network Access to Disable. Select to turn on or off the walled garden feature. With a walled garden, you can define one or more web site addresses that all users can access without logging in. These can be used for advertisements for example.
Walled garden ranges	Specify walled garden web site links, which use a domain name or an IP address for web sites that all users are allowed to access without logging in.
Captive portal access attribute	
Self-registration	This field is available only when you select Sign-on with Nebula Cloud authentication in the Network Access field. Select Allow users to create accounts with auto authorized or Allow users to create accounts with manual authorized to display a link in the captive portal login page. The link directs users to a page where they can create an account before they authenticate with the NCC. For Allow users to create accounts with manual authorized, users cannot log in with the account until the account is authorized and granted access. For Allow users to create accounts with auto authorized, users can just use the registered account to log in without administrator approval. Select Don't allow users to create accounts to not display a link for account creation in the captive portal login page.
Login on multiple client devices	This field is available only when you select Sign-on with in the Network Access field. Select Multiple devices access simultaneously if you allow users to log in as many times as they want as long as they use different IP addresses. Select One device at a time if you do NOT allow users to have simultaneous logins.
NCAS disconnection behavior	This field is available only when you select Sign-on with Nebula Cloud Authentication in the Network Access field. Select Allowed to allow any users to access the network without authentication when the NCAS (Nebula Cloud Authentication Server) is not reachable. Select Limited to allow only the currently connected users or the users in the white list to access the network.

9.3.10 Traffic Shaping

Use this screen to configure maximum bandwidth and load balancing on the Nebula Device.

Click Site-wide > Configure > Security gateway > Traffic shaping to access this screen.

Figure 239 Site-wide > Configure > Security gateway > Traffic shaping

Traffic shaping

Uplink configuration

WAN1   4000000 (unlimited)

WAN1   4000000 (unlimited)

WAN2   unlimited (unlimited)

WAN2   unlimited (unlimited)

WAN load balancing algorithm:

Prefer WAN:

WAN Connectivity check: ☒ Check Default Gateway ☐ Check WAN address (IP Address)

Global bandwidth limits

Per-client limit:

Source First IP	Source Last IP	Destination IP	Port
192.168.100.1	192.168.100.254	any	any

[Add](#)

Session Control

UDP Session Time Out: × 60 (3600 seconds)

Default Session per Host: × 60 (60000 is unlimited)

The following table describes the labels in this screen.

Table 175 Site-wide > Configure > Security gateway > Traffic shaping

LABEL	DESCRIPTION
Uplink configuration	
WAN 1	Set the amount of upstream/downstream bandwidth for the WAN interface.
WAN 2	Click a lock icon to change the lock state. If the lock icon for a WAN interface is locked, the bandwidth limit you set applies to both inbound and outbound traffic. If the lock is unlocked, you can set inbound and outbound traffic to have different transmission speeds.
WAN load balancing algorithm	Select a load balancing method to use from the drop-down list box. - Select Least Load First to send new session traffic through the least utilized WAN interface. - Select Round Robin to balance the traffic load between interfaces based on their respective weights (bandwidth). An interface with a larger weight gets more chances to transmit traffic than an interface with a smaller weight. For example, if the weight ratio of WAN 1 and WAN 2 interfaces is 2:1, the Nebula Device chooses WAN 1 for two sessions' traffic and WAN 2 for one session's traffic in each round of three new sessions. - Select Failover to send traffic through a second WAN interface when the primary WAN interface is down or disabled.
Prefer WAN	Specify the primary WAN interface through which the Nebula Device forwards traffic. This field is available when you set WAN load balancing algorithm to Failover.
WAN Connectivity check	The interface can regularly check the connection to the gateway you specified to make sure it is still available. The Nebula Device resumes routing to the gateway the first time the gateway passes the connectivity check. If the WAN connection is down (the check fails), the Nebula Device will switch (failover) to use a redundant WAN connection. - Select Check Default Gateway to use the default gateway for the connectivity check. - Select Check this address to specify a domain name or IP address for the connectivity check. Note: If you select Check this address but the IP address you specified cannot be reached through the primary WAN interface, the Nebula Device will switch to the other one even if the primary WAN connection is still up. Make sure your Nebula Device supports multiple WAN interfaces and both WAN connections are configured properly before you select Check this address. This field is available when you set WAN load balancing algorithm to Failover.
Global bandwidth limits	
Per-client limit	You can limit a client's outbound or inbound bandwidth.
Source First IP	Enter the first IP address in a range of source IP addresses for which the Nebula Device applies the rule.
Source Last IP	Enter the last IP address in a range of source IP addresses for which the Nebula Device applies the rule.
Destination IPs	Enter the destination IP addresses for which the Nebula Device applies the rule. Enter any if the rule is effective for every destination.
Port(s)	Enter the port numbers (1 – 65535) to which the packets go. The Nebula Device applies the rule to the packets that go to the corresponding service port. any means all service ports.
Protocol	Select TCP or UDP if you want to specify a protocol for the rule. Otherwise select Any. Any means the rule is applicable to all services.

Table 175 Site-wide > Configure > Security gateway > Traffic shaping (continued)

LABEL	DESCRIPTION
Down/Up	Set the maximum upstream/downstream bandwidth for traffic from an individual source IP address. Click a lock icon to change the lock state. If the lock icon is locked, the bandwidth limit you set applies to both inbound and outbound traffic. If the lock is unlocked, you can set inbound and outbound traffic to have different transmission speeds.
Priority	Enter a number between 1 and 7 to set the priority for traffic that matches this policy. The smaller the number, the higher the priority. Traffic with a higher priority is given bandwidth before traffic with a lower priority.
	Click this icon to remove the rule.
Add	Click this button to create a new rule.
Session Control	
UDP Session Time Out	Set how many seconds the Nebula Device will allow a UDP session to remain idle (without UDP traffic) before closing it.
Default Session per Host	Set a common limit to the number of concurrent NAT/Security Policy sessions each client computer can have. If only a few clients use peer to peer applications, you can raise this number to improve their performance. With heavy peer to peer application use, lower this number to ensure no single client uses too many of the available NAT sessions.

9.3.11 Gateway Settings

Use this screen to configure DNS settings and external AD (Active Directory) server or RADIUS server that the Nebula Device can use in authenticating users.

AD (Active Directory) is a directory service that is both a directory and a protocol for controlling access to a network. The directory consists of a database specialized for fast information retrieval and filtering activities. You create and store user profile and login information on the external server.

This screen also lets you configure the addresses of walled garden web sites that users can access without logging into the Nebula Device. The settings in this screen apply to all networks (interfaces) on the Nebula Device. If you want to configure walled garden web site links for a specific interface, use the Network access method screen.

Click Site-wide > Configure > Security gateway > Gateway settings to access this screen.

Figure 240 Site-wide > Configure > Security gateway > Gateway settings

Gateway settings

DNS

Address Record

Domain	IP Address
d.nabula.zyxel.com	52.16.80.221
www.nabula.zyxel.com	52.64.248.12
s.nabula.zyxel.com	18.203.42.140

[+ Add](#)

Domain Zone Forwarder

Domain Zone	IP Address	Interface
		LAN1

[+ Add](#)

Authentication Server

My AD Server

Name	Server address	Backup server address	Port	AD domain
ADTest	192.168.8.1		389	zyxel.com

[+ Add](#)

My RADIUS Server

Name	Server address	Backup server address	Port	Secret
			1812	

[+ Add](#)

Walled garden

Global walled garden

This is global walled garden configuration. All web authentication interface will match this policy first and the second priority is the interface walled garden policy. If needed only allow specific interface, please go to Network access method configure.

[What do I enter here?](#)

The following table describes the labels in this screen.

Table 176 Site-wide > Configure > Security gateway > Gateway settings

LABEL	DESCRIPTION
DNS	
Address Record	This record specifies the mapping of a Fully-Qualified Domain Name (FQDN) to an IP address. An FQDN consists of a host and domain name. For example, www.zyxel.com.tw is a fully qualified domain name, where "www" is the host, "zyxel" is the third-level domain, "com" is the second-level domain, and "tw" is the top level domain.
FQDN	Enter a host's fully qualified domain name. Use "*" as a prefix in the FQDN for a wildcard domain name (for example, *.example.com).
IP Address	Enter the host's IP address.
	Click this icon to remove the entry.
Add	Click this button to create a new entry.
Domain Zone Forwarder	This specifies a DNS server's IP address. The Nebula Device can query the DNS server to resolve domain zones for features like VPN, DDNS and the time server. When the Nebula Device needs to resolve a domain zone, it checks it against the domain zone forwarder entries in the order that they appear in this list.
Domain Zone	A domain zone is a fully qualified domain name without the host. For example, zyxel.com.tw is the domain zone for the www.zyxel.com.tw fully qualified domain name. Whenever the Nebula Device needs to resolve a zyxel.com.tw domain name, it can send a query to the recorded name server IP address.
IP Address	Enter the DNS server's IP address.
Interface	Select the interface through which the Nebula Device sends DNS queries to the specified DNS server.
	Click this icon to remove the entry.
Add	Click this button to create a new entry.
Authentication Server	
My AD Server	
Name	Enter a descriptive name for the server.
Server address	Enter the address of the AD server.
Backup server address	If the AD server has a backup server, enter its address here.
Port	Specify the port number on the AD server to which the Nebula Device sends authentication requests. Enter a number between 1 and 65535.
AD domain	Specify the Active Directory forest root domain name.
Domain admin	Enter the name of the user that is located in the container for Active Directory Users, who is a member of the Domain Admin group.
Password	Enter the password of the Domain Admin user account.
Advanced	Click to open a screen where you can select to use Default or Custom advanced settings. See Section 9.3.11.1 on page 682 .
	Click this icon to remove the server.
Add	Click this button to create a new server.
My RADIUS server	
Name	Enter a descriptive name for the server.
Server address	Enter the address of the RADIUS server.
Backup server address	If the RADIUS server has a backup server, enter its address here.

Table 176 Site-wide > Configure > Security gateway > Gateway settings (continued)

LABEL	DESCRIPTION
Port	Specify the port number on the RADIUS server to which the Nebula Device sends authentication requests. Enter a number between 1 and 65535.
Secret	Enter a password (up to 15 alphanumeric characters) as the key to be shared between the external authentication server and the Nebula Device. The key is not sent over the network. This key must be the same on the external authentication server and the Nebula Device.
Advanced	Click to open a screen where you can select to use Default or Custom advanced settings. See Section 9.3.11.1 on page 682 .
	Click this icon to remove the server.
Add	Click this button to create a new server.
Walled garden	
Global Walled garden	With a walled garden, you can define one or more web site addresses that all users can access without logging in. These can be used for advertisements for example. Specify walled garden web site links, which use a domain name or an IP address for web sites that all users are allowed to access without logging in.

9.3.11.1 Advanced Settings

Click the Advanced column in the Site-wide > Configure > Security gateway > Gateway settings screen to access this screen.

Figure 241 Site-wide > Configure > Security gateway > Gateway settings: Advanced



The following table describes the labels in this screen.

Table 177 Site-wide > Configure > Security gateway > Gateway settings: Advanced

LABEL	DESCRIPTION
Preset	Select Default to use the pre-defined settings, or select Custom to configure your own settings.
Timeout	Specify the timeout period (between 1 and 300 seconds) before the Nebula Device disconnects from the server. In this case, user authentication fails. Search timeout occurs when either the user information is not in the servers or the AD or server is down.
Case-Sensitive User Name	Click ON if the server checks the case of the user name. Otherwise, click OFF to not configure your user name as case-sensitive.
NAS IP Address	This field is only for RADIUS. Enter the IP address of the NAS (Network Access Server).

Table 177 Site-wide > Configure > Security gateway > Gateway settings: Advanced (continued)

LABEL	DESCRIPTION
Close	Click this button to exit this screen without saving.
OK	Click this button to save your changes and close the screen.

CHAPTER 10

Mobile Router

10.1 Overview

This chapter discusses the menus that you can use to monitor the Nebula-managed Mobile Routers in your network and configure settings even before a Mobile Router is deployed and added to the site.

A Nebula Mobile Router is an LTE or NR cellular 5G indoor or outdoor router that can be managed by Nebula. It is referred to as a Nebula Device in this chapter.

10.2 Configuration

From the navigation panel, click Site-wide > Devices > Mobile router and the following screen appears. The Configuration screen allows you to view the information of your indoor or outdoor Nebula Device in a selected site. To edit the Name, MAC address, Serial number, Description, Address, and Tags of your Nebula Device, click the edit icon (✎) in the Configuration field.

Note: Only one Mobile Router is allowed per site.

Figure 242 Site-wide > Devices > Mobile router > Configuration (Indoor)



Figure 243 Site-wide > Devices > Mobile router > Configuration (Outdoor)



10.2.1 Configuration: Edit

The following screen displays after you click the edit icon. Use the Site-wide > Devices > Mobile router > Configuration: Edit screen to configure your indoor and outdoor Nebula Device information. You can also move the Nebula Device to another site.

Figure 244 Site-wide > Devices > Mobile router > Configuration: Edit

Mobile router

Configuration

Name:

MAC address:

Serial number:

Description:

Tag:

Address:

☒ Move map marker

The following table describes the labels in this screen.


Table 178 Site-wide > Devices > Mobile router > Configuration: Edit

LABEL	DESCRIPTION
Configuration	
Name	Enter a descriptive name for the Nebula Device.
MAC address	This shows the MAC address of the Nebula Device.
Serial number	This shows the serial number of the Nebula Device.
Description	Enter a user-specified description for the Nebula Device.
Tags	Enter a user-specified tag for the Nebula Device.
Address	Enter a user-specified address for the Nebula Device.
Save	Click Save to save your changes.
Cancel	Click Cancel to exit this screen without saving.

10.2.2 Home Networking

To configure the Home networking setting, click the edit icon (✎) in the Home networking field.

Figure 245 Site-wide > Devices > Mobile router > Configuration: Home networking (Indoor)

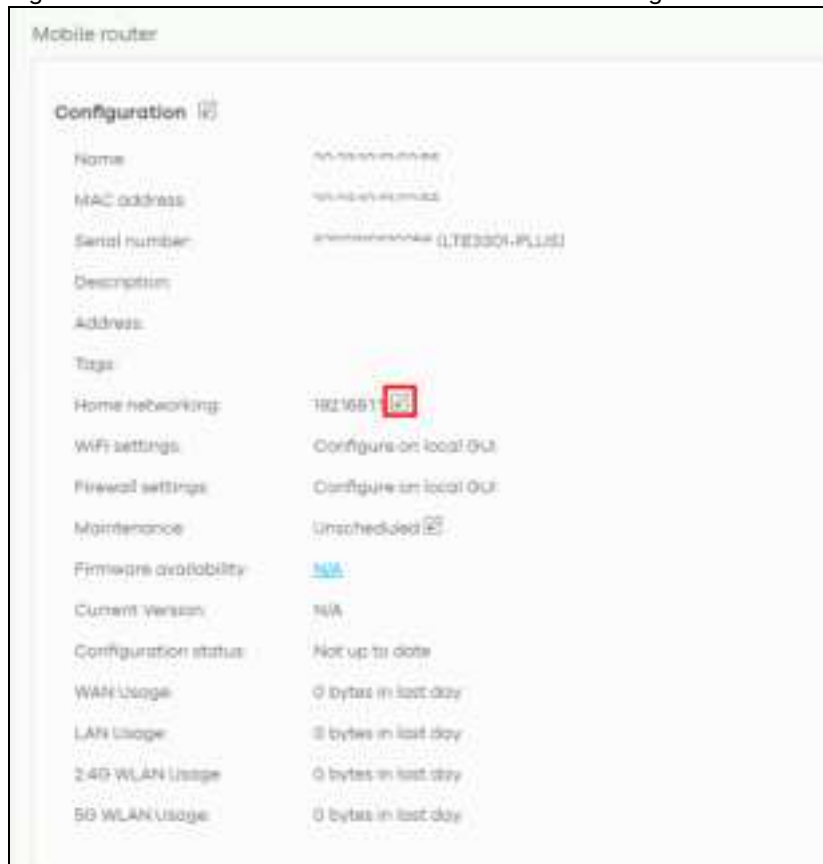

The following Site-wide > Devices > Mobile router > Configuration > Home networking: Edit screen displays. Use this screen to configure the LAN IP address and DHCP server settings of your indoor Nebula Device.

Figure 246 Site-wide > Devices > Mobile router > Configuration > Home networking: Edit

The following table describes the labels in this screen.


Table 179 Site-wide > Devices > Mobile router > Configuration > Home networking: Edit

LABEL	DESCRIPTION
IP address assignment	
IP address	Enter the IP address for this interface. Note: To prevent an IP address conflict, NCC will prevent input of an IP address already used by another Nebula Device in the same site.
Subnet mask	Enter the subnet mask of this interface in dot decimal notation. The subnet mask indicates what part of the IP address is the same for all computers in the network.
DHCP setting	
DHCP Server	Select this to disable or enable the DHCP server.
IP pool start address	Enter the IP address from which the Nebula Device begins allocating IP addresses.
Pool size	Enter the number of IP addresses to allocate. This number must be at least one and is limited by the interface's Subnet mask. For example, if the Subnet mask is 255.255.255.0 and IP pool start address is 10.10.10.10, the security gateway can allocate 10.10.10.10 to 10.10.10.254, or 245 IP addresses.
Lease time	Specify how long each computer can use the information (especially the IP address) before it has to request the information again. Choices are: Infinite – select this if IP addresses never expire; days, hours, minutes – select this to enter how long IP addresses are valid.
Close	Click Close to exit this screen without saving.
OK	Click OK to save your changes.

10.2.3 Cellular IP Passthrough


To configure the cellular IP passthrough setting, click the edit icon (✎) in the Cellular IP Passthrough field. IP passthrough allows a LAN computer on the local network of the Nebula Device to have access to web services using a public IPv4 address. When IP passthrough is configured, all traffic is forwarded to the LAN computer and will not go through NAT.

Figure 247 Site-wide > Devices > Mobile router > Configuration: Cellular IP Passthrough (Outdoor)

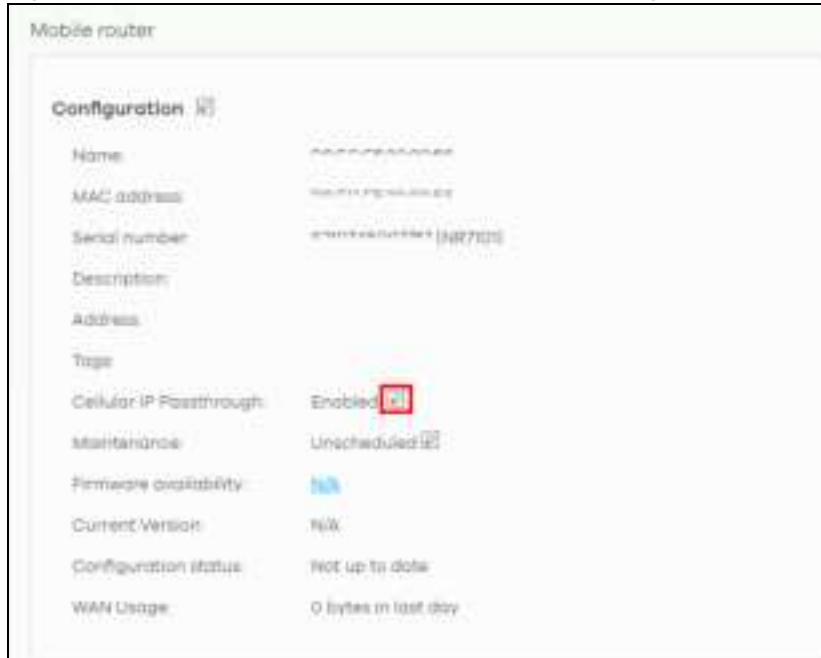

The following Site-wide > Devices > Mobile router > Configuration > Cellular IP Passthrough: Edit screen displays. Use this screen to disable or enable IP passthrough on your outdoor Nebula Device. Slide the switch to the right to enable IP passthrough.

Figure 248 Site-wide > Devices > Mobile router > Configuration > Cellular IP Passthrough: Edit

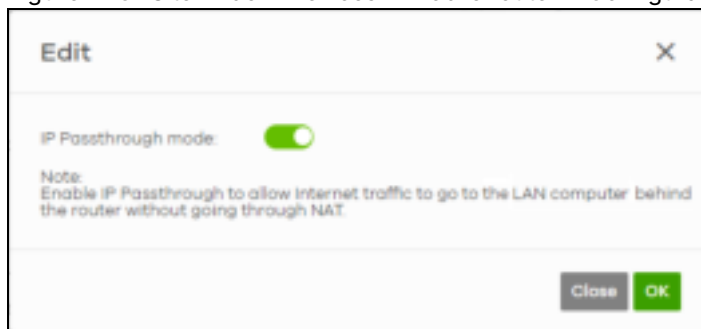

The following table describes the labels in this screen.

Table 180 Site-wide > Devices > Mobile router > Configuration > Cellular IP Passthrough: Edit


LABEL	DESCRIPTION
IP Passthrough mode	This displays if IP passthrough is enabled on the Nebula Device.
Close	Click Close to exit this screen without saving.
OK	Click OK to save your changes.

10.2.4 Firmware Status

Go back to the Site-wide > Devices > Mobile router > Configuration screen to view the firmware version and WAN/LAN/WLAN usage of your indoor or outdoor Nebula Device.

Note: LAN Usage, 2.4G WLAN Usage and 5G WLAN Usage are only available for indoor Nebula Devices.

Figure 249 Site-wide > Devices > Mobile router > Configuration > Firmware status

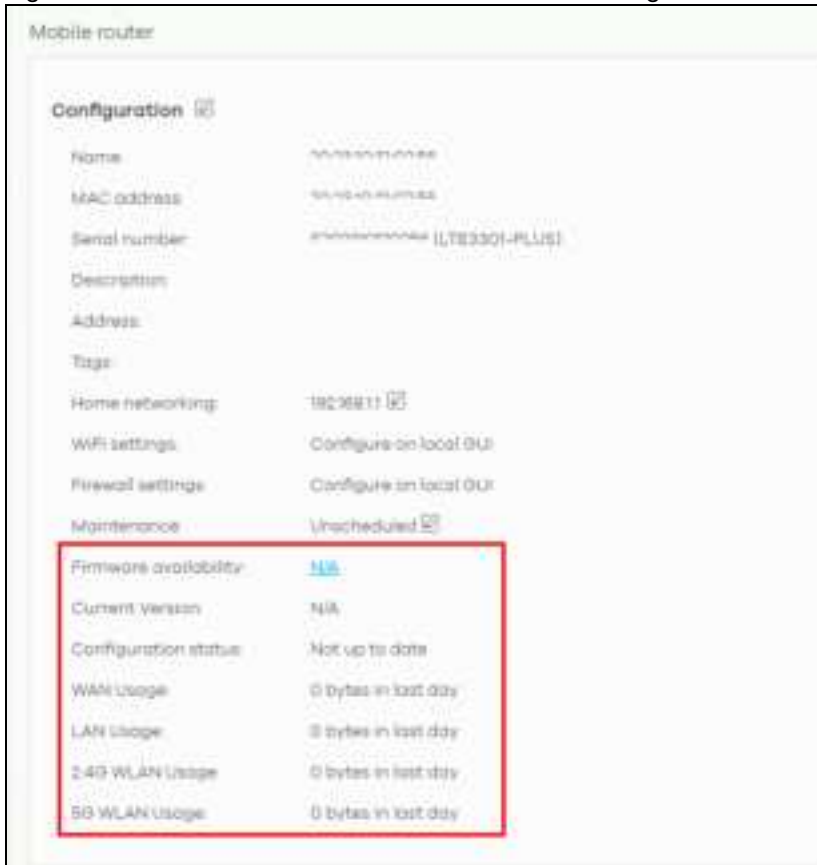


The following table describes the labels in this screen.

Table 181 Site-wide > Devices > Mobile router > Configuration > Firmware status

LABEL	DESCRIPTION
WiFi settings	Configure the Nebula Device's WiFi settings using its Web Configurator. Refer to the Nebula Device's User's Guide for more information. Note: This field is NOT configurable.
Firewall settings	Configure the Nebula Device's firewall settings using its Web Configurator. Refer to the Nebula Device's User's Guide for more information. Note: This field is NOT configurable.
Maintenance	This shows whether automatic reboot is scheduled on the Nebula Device.

Table 181 Site-wide > Devices > Mobile router > Configuration > Firmware status (continued)

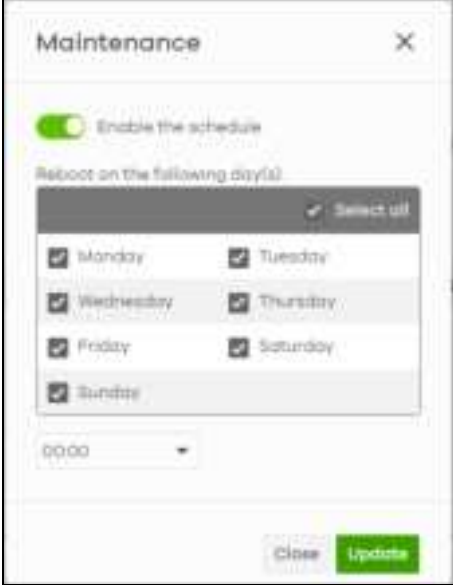LABEL	DESCRIPTION
Edit	Click the Enable the schedule switch to the right to have the Nebula Device restart at a specific time on selected days of the week. By scheduling a reboot, you can have the Nebula Device refresh the network connections at a specified time, allowing automatic reconnection with WiFi clients in case of a connection failure. Select the day(s) of the week to have the automatic restart. Specify the time of the day (in 24-hour format) to have the Nebula Device automatically restart. For example, 23:00 is 11:00 PM. 
Firmware availability	The NCC automatically detects whether the firmware is up-to-date or not. Click the value in the Firmware availability field to go to the Site-wide > Configure > Firmware management screen and configure your Firmware management settings.
Current Version	This shows the firmware version currently installed on the Nebula Device.
Configuration status	This shows whether the configuration on the Nebula Device is up-to-date.
WAN Usage	This shows the total amount of data consumed by the Nebula Device on the WAN (uplink/downlink) in the past 24 hours.
LAN Usage (indoor NCCs only)	This shows the total amount of data consumed by the Nebula Device on the LAN (uplink/downlink) in the past 24 hours.
2.4G WLAN Usage (indoor NCCs only)	This shows the total amount of data consumed by the Nebula Device on the 2.4G WiFi network (uplink/downlink) in the past 24 hours.
5G WLAN Usage (indoor NCCs only)	This shows the total amount of data consumed by the Nebula Device on the 5G WiFi network (uplink/downlink) in the past 24 hours.

10.3 Map/Photo

Click the Map tab. This shows the location of the Nebula Device on Google map. To upload a photo of the Nebula Device, select the Photo tab.

Figure 250 Site-wide > Devices > Mobile router > Map



The following table describes the labels in this screen.

Table 182 Site-wide > Devices > Mobile router > Map/Photo

LABEL	DESCRIPTION
Map	This shows the location of the Nebula Device on Google Maps (Map view or Satellite imagery view) or on a floor plan. Click Floor plan to display a list of existing floor plans. Each floor plan has a drawing that shows the rooms scaled and viewed from above. Drag-and-drop your Nebula Device directly on the Google map or click Position device to update the Nebula Device's address (physical location). What is this?'. There are three radio buttons: 'Use the device's IP address (GEO IP)' (selected), 'Get my location from web browser', and 'Use the following address or coordinates'. Below the radio buttons is a text input field with a close button. At the bottom are 'Cancel' and 'Update' buttons." data-bbox="330 229 749 438"/> • Select GEO IP to use the public IP address of the Nebula Device. • Select Get my location from web browser to use the public IP address of the computer accessing the NCC portal. • Select Use the following address or coordinates to enter the complete address or coordinates of the Nebula Device. Note: Nebula Devices that are offline cannot use GEO IP.
Photo	This shows the photo of the Nebula Device. Click Add to upload up to five photos of your Nebula Device. Click the remove icon (🗑️) to delete a photo.

10.4 Live Tools

Use live tools to view various interface information, system/security logs, perform diagnostics, reboot or establish a remote connection to the Nebula Device.

Figure 251 Site-wide > Devices > Mobile router > Live tools > Traffic (Example)



Note: In the Traffic, LAN stations, and WLAN stations screens, click the pause icon () to stop getting data for the respective screens. Alternatively, click the play icon () to continue.

The following table describes the labels in this screen.

Table 183 Site-wide > Devices > Mobile router > Live tools

LABEL	DESCRIPTION
WAN status	This shows the connection status of the Ethernet WAN interface. See Section 10.4.1 on page 693 for more information.
Cellular info	This shows the connection status of the cellular WAN interface. See Section 10.4.2 on page 694 for more information.
Traffic	This shows the Nebula Device traffic statistics. The y-axis represents the transmission rate for uplink and downlink traffic. The x-axis represents the time period over which the traffic flow occurred.
LAN stations	This shows the Nebula Device's connected LAN clients' MAC address and IPv4 Address.
WLAN stations (indoor NCCs only)	This shows the Nebula Device's connected WiFi clients' MAC address, SSID name, IPv4 address, Signal strength, Security, Channel, Tx rate, Rx rate, Tx/Rx, and Capability. See Section 10.4.4 on page 701 for more information.
Ping	Enter the hostname or IP address of a computer that you want to perform ping from the Nebula Device in order to test a connection and click Ping. This can be used to determine if the Nebula Device and the computer are able to communicate with each other.
Traceroute	Enter the domain name or IP address of a computer that you want to perform traceroute from the Nebula Device and click Run. This determines the path a packet takes to the specified computer.
DNS lookup	Enter a host domain name and click Run to resolve the IP address for the specified domain name.
Reboot device	Click this button to restart the Nebula Device.
Log	Select this to display System log and Security log entries in the past 24 hours.
Remote configurator	Click Establish to use TCP (Transmission Control Protocol) port 443 to establish a remote connection to this Nebula Device. The Nebula Device will create a reverse SSH (Secure SHell) connection. After clicking Ok, NCC will provide a remote connection IPv4 address and service port number. For example, https://63.35.218.205:31479. Use this IPv4 address and port to connect to the Nebula Device to open the Web Configurator. The remote session will be available for 30 minutes. In case the connection cannot be established, confirm that the network allows Port 443. Note: Remote configuration is only available if the Nebula Device is running the latest firmware. Otherwise, Device firmware is not up to date, please update it. will appear when you click Establish.

10.4.1 WAN Status

Go to the Site-wide > Devices > Mobile router > Live tools > WAN status screen to view the Ethernet WAN status of the Nebula Device.

Figure 252 Site-wide > Devices > Mobile router > Live tools > WAN status



The following table describes the labels in this screen.

Table 184 Site-wide > Devices > Mobile router > Live tools > WAN status

LABEL	DESCRIPTION
	Click this button to reload the data-related frames on this page.
Mode	This displays which operating mode the Nebula Device is assigned to.
Status	This displays whether the Nebula Device is online/offline.
IP Address	This shows the LAN IPv4 address of the Nebula Device.
Primary DNS server	The shows the first DNS server address assigned by the ISP.
IPv6 Address	This shows the LAN IPv6 address of the Nebula Device.
Access Technology	This displays the type of the network (such as NR, LTE, Ethernet WAN) to which the Nebula Device is connecting.
Signal Strength	This show the signal strength of the Nebula Device.

10.4.2 Cellular Info

Go to the Site-wide > Devices > Mobile router > Live tools > Cellular Info screen to view the cellular WAN status of the Nebula Device.

Figure 253 Site-wide > Devices > Mobile router > Live tools > Cellular Info

[illegible]

The following table describes the labels in this screen.

Table 185 Site-wide > Devices > Mobile router > Live tools > Cellular Info

Label	Description
Module Information	
IMEI	This shows the International Mobile Equipment Identity of the Nebula Device.

Table 185 Site-wide > Devices > Mobile router > Live tools > Cellular Info (continued)

LABEL	DESCRIPTION
Module SW Version	This shows the software version of the cellular network module.
SIM Status	
SIM Card Status	This displays the SIM card status: None – the Nebula Device does not detect that there is a SIM card inserted. Available – the SIM card could either have or does not have PIN code security. Locked – the SIM card has PIN code security, but you did not enter the PIN code yet. Blocked – you entered an incorrect PIN code too many times, so the SIM card has been locked. Call the ISP (Internet Service Provider) for a PUK (Pin Unlock Key) to unlock the SIM card. Error – the Nebula Device detected that the SIM card has errors.
IMSI	This displays the International Mobile Subscriber Identity (IMSI) of the installed SIM card. An IMSI is a unique ID used to identify a mobile subscriber in a mobile network.
ICCID	Integrated Circuit Card Identifier (ICCID). This is the serial number of the SIM card.
PIN Protection	A PIN (Personal Identification Number) code is a key to a SIM card. This field shows Enable if PIN Protection is enabled. Otherwise, this field shows Disable.
PIN Remaining Attempts	This is how many more times you can try to enter the PIN code before the ISP blocks your SIM card.
IP Passthrough Status	
IP Passthrough Enable	This displays if IP passthrough is enabled on the Nebula Device. IP passthrough allows a LAN computer on the local network of the Nebula Device to have access to web services using the public IP address. When IP passthrough is configured, all traffic is forwarded to the LAN computer and will not go through NAT.
IP Passthrough Mode	This displays the IP passthrough mode. This displays Dynamic and the Nebula Device will allow traffic to be forwarded to the first LAN computer requesting an IP address from the Nebula Device. This displays Fixed and the Nebula Device will allow traffic to be forwarded to a specific LAN computer on the local network of the Nebula Device.
Cellular Status	
Cellular Status	This displays the status of the cellular Internet connection.
Data Roaming	This displays if data roaming is enabled on the Nebula Device. 4G roaming is to use your NCC in an area which is not covered by your service provider. Enable roaming to ensure that your Nebula Device is kept connected to the Internet when you are traveling outside the geographical coverage area of the network to which you are registered.
Operator	This displays the name of the service provider.
PLMN	This displays the PLMN (Public Land Mobile Network) number.
NR-NSA Information	This displays the status of the cellular Internet connection.
MCC	This shows the Mobile Country Code (MCC). MCC is a unique code that identifies the country where a Public Land Mobile Network (PLMN) is at.
MNC	This shows the Mobile Network Code (MNC). MNC is a unique code that identifies a Public Land Mobile Network (PLMN) in a country. MCC and MNC combined together are used to identify a globally unique PLMN.
Physical Cell ID	This shows the Physical Cell ID (PCI), which are queries and replies between the Nebula Device and the mobile network it is connecting to. The normal range is 1 to 504.

Table 185 Site-wide > Devices > Mobile router > Live tools > Cellular Info (continued)

LABEL	DESCRIPTION
RFCN	This displays the Radio Frequency Channel Number of DL carrier frequency used by the mobile network to which the Nebula Device is connecting. The value depends on the type of the mobile network (such as LTE, UMTS, GSM) to which the Nebula Device is connecting: • For UMTS (3G), it is the UARFCN (UTRA Absolute Radio-Frequency Channel Number) as specified in 3GPP-TS.25.101. • For LTE/5G, it is the EARFCN (E-UTRA Absolute Radio-Frequency Channel Number) as specified in 3GPP-TS.36.101. The value is '0' (zero) or 'N/A' if there is no network connection.
Band	This displays the current cellular band of your Nebula Device.
RSRP	This displays the Reference Signal Receive Power (RSRP), which is the average received power of all Resource Element (RE) that carry cell-specific Reference Signals (RS) within the specified bandwidth. The received RSRP level of the connected E-UTRA cell, in dBm, is as specified in 3GPP-TS.36.214. The reporting range is specified in 3GPP-TS.36.133. An undetectable signal is indicated by the lower limit, example -140 dBm. This parameter is for LTE only. The normal range is -30 to -140. The value is -140 if the Current Access Technology is not LTE. The value is 'N/A' if there is no network connection.
RSRQ	This displays the Reference Signal Receive Quality (RSRQ), which is the ratio of RSRP to the E-UTRA carrier RSSI and indicates the quality of the received reference signal. The received RSRQ level of the connected E-UTRA cell, in 0.1 dB, is as specified in 3GPP-TS.36.214. An undetectable signal is indicated by the lower limit, example -240. This parameter is for LTE only. The normal range is -30 to -240. The value is -240 if the Current Access Technology is not LTE. The value is 'N/A' if there is no network connection.
SINR	This displays the Signal to Interference plus Noise Ratio (SINR) of the SCC.
Service Information	If the cellular service provider supports carrier aggregation (CA), then this section displays statistics for the connection's primary component carrier (PCC).
Access Technology	This displays the type of the network (such as NR, LTE, Ethernet WAN) to which the Nebula Device is connecting.
Band	This displays the current cellular band of your Nebula Device.
RSSI	This displays the cellular signal strength between an associated cellular station and the Nebula Device for this SCC.
Cell ID	This shows the cell ID, which is a unique number used to identify the Base Transceiver Station to which the Nebula Device is connecting. The value depends on the Current Access Technology: • For GPRS, it is the Cell Identity as specified in 3GPP-TS.25.331. • For UMTS, it is the Cell Identity as defined in SIB3 3GPP-TS.25.331, 3GPP-TS.24.008. • For LTE/5G, it is the 28-bit binary number Cell Identity as specified in SIB1 in 3GPP-TS.36.331. The value is '0' (zero) or 'N/A' if there is no network connection.
Physical Cell ID	This displays the Physical Cell ID (PCI) of the SCC.

Table 185 Site-wide > Devices > Mobile router > Live tools > Cellular Info (continued)

LABEL	DESCRIPTION
UL Bandwidth (MHz)	This shows the uplink cellular channel bandwidth from the Nebula Device to the base station. According to 3GPP specifications, the bandwidths defined by the standard are 1.4, 3, 5, 10, 15, and 20 MHz. The wider the bandwidth the higher the throughput.
DL Bandwidth (MHz)	This shows the downlink cellular channel bandwidth from the base station to the Nebula Device. According to 3GPP specifications, the bandwidths defined by the standard are 1.4, 3, 5, 10, 15, and 20 MHz. The wider the bandwidth the higher the throughput.
RFCN	This displays the Radio Frequency Channel Number of DL carrier frequency used by the mobile network to which the Nebula Device is connecting. The value depends on the type of the mobile network (such as LTE, UMTS, GSM) to which the Nebula Device is connecting: • For UMTS (3G), it is the UARFCN (UTRA Absolute Radio-Frequency Channel Number) as specified in 3GPP-TS.25.101. • For LTE/5G, it is the EARFCN (E-UTRA Absolute Radio-Frequency Channel Number) as specified in 3GPP-TS.36.101. The value is '0' (zero) or 'N/A' if there is no network connection.
RSRP	This displays the Reference Signal Receive Power (RSRP), which is the average received power of all Resource Element (RE) that carry cell-specific Reference Signals (RS) within the specified bandwidth. The received RSRP level of the connected E-UTRA cell, in dBm, is as specified in 3GPP-TS.36.214. The reporting range is specified in 3GPP-TS.36.133. An undetectable signal is indicated by the lower limit, example -140 dBm. This parameter is for LTE only. The normal range is -30 to -140. The value is -140 if the Current Access Technology is not LTE. The value is 'N/A' if there is no network connection.
RSRQ	This displays the Reference Signal Receive Quality (RSRQ), which is the ratio of RSRP to the E-UTRA carrier RSSI and indicates the quality of the received reference signal. The received RSRQ level of the connected E-UTRA cell, in 0.1 dB, is as specified in 3GPP-TS.36.214. An undetectable signal is indicated by the lower limit, example -240. This parameter is for LTE only. The normal range is -30 to -240. The value is -240 if the Current Access Technology is not LTE. The value is 'N/A' if there is no network connection.
RSCP	This displays the Received Signal Code Power, which measures the power of channel used by the Nebula Device. The received signal level, in dBm, is of the CPICH channel (Ref. 3GPP TS 25.133). An undetectable signal is indicated by the lower limit, example -120 dBm. This parameter is for UMTS only. The normal range is -30 to -120. The value is -120 if the Current Access Technology is not UMTS. The value is 'N/A' if there is no network connection.
EcNo	This displays the ratio (in dB) of the received energy per chip and the interference level. The measured EcNo is in 0.1 dB and is received in the downlink pilot channel. An undetectable signal is indicated by the lower limit, example -240 dB. This parameter is for UMTS only. The normal range is -30 to -240. The value is -240 if the Current Access Technology is not UMTS or there is no network connection.

Table 185 Site-wide > Devices > Mobile router > Live tools > Cellular Info (continued)

LABEL	DESCRIPTION
TAC	This displays the Tracking Area Code (TAC), which is used to identify the country of a mobile subscriber. The physical cell ID of the connected E-UTRAN cell, is as specified in 3GPP-TS.36.101. This parameter is for LTE only. The value is '0' (zero) or 'N/A' if the Current Access Technology is not LTE or there is no network connection.
LAC	This displays the 2-octet Location Area Code (LAC), which is used to identify a location area within a PLMN. The LAC of the connected cell is as defined in SIB 1 [3GPP-TS.25.331]. The concatenation of PLMN ID (MCC+MNC) and LAC uniquely identifies the LAI (Location Area ID) [3GPP-TS.23.003]. This parameter is for UMTS or GPRS. The value is '0' (zero) if the Current Access Technology is not UMTS or GPRS. The value is 'N/A' if there is no network connection.
RAC	This displays the RAC (Routing Area Code), which is used in mobile network "packet domain service" (PS) to identify a routing area within a location area. In a mobile network, the Nebula Device uses LAC (Location Area Code) to identify the geographical location for the old 3G voice only service, and uses RAC to identify the location of data service like HSDPA or LTE. The RAC of the connected UTRAN cell is as defined in SIB 1 [3GPP-TS.25.331]. The concatenation of PLMN ID (MCC+MNC), LAC, and RAC uniquely identifies the RAI (Routing Area ID) [3GPPTS. 23.003]. This parameter is for UMTS or GPRS. The value is '0' (zero) if the Current Access Technology is not UMTS or GPRS. The value is 'N/A' if there is no network connection.
BSIC	The Base Station Identity Code (BSIC), which is a code used in GSM to uniquely identify a base station. This parameter is for GPRS only. The value is '0' (zero) if the Current Access Technology is not GPRS. The value is 'N/A' if there is no network connection.
SINR	This displays the Signal to Interference plus Noise Ratio (SINR) in dB. This is also a measure of signal quality and used by the UE (User Equipment) to calculate the Channel Quality Indicator (CQI) that it reports to the network. A negative value means more noise than signal.
CQI	This displays the Channel Quality Indicator (CQI). It is an indicator carrying the information on how good or bad the communication channel quality is.
MCS	MCS stands for modulation coding scheme. The base station selects MCS based on current radio conditions. The higher the MCS the more bits can be transmitted per time unit.
RI	This displays the Rank Indication, one of the control information that a UE will report to eNodeB (Evolved Node-B) on either PUCCH (Physical Uplink Control Channel) or PUSCH (Physical Uplink Shared Channel) based on uplink scheduling.
PMI	This displays the Precoding Matrix Indicator (PMI). PMI is for transmission modes 4 (closed loop spatial multiplexing), 5 (multi-user MIMO), and 6 (closed loop spatial multiplexing using a single layer). PMI determines how cellular data are encoded for the antennas to improve downlink rate.
SCC Information	If the cellular service provider supports carrier aggregation (CA), then this section displays statistics for the connection's secondary component carriers (SCCs).
GNSS Information	Global Navigation Satellite System (GNSS) sends position and timing data from high orbit artificial satellites. It works with GPS navigational satellites to provide better receiver accuracy and reliability than just using GPS alone. This is necessary for 5G networks that require very accurate timing for time and frequency synchronization. With GNSS, you can easily locate the Nebula Device with accurate information.

Table 185 Site-wide > Devices > Mobile router > Live tools > Cellular Info (continued)

LABEL	DESCRIPTION
Enable	This shows if GNSS is enabled. Note: This can only be configured by a qualified service technician.
Scan OnBoot	This shows Enable if Scan OnBoot is enabled, so that GNSS runs automatically after the Nebula Device is turned on. Note: This can only be configured by a qualified service technician.
Scan Status	This shows GNSS error codes for debugging by a qualified service technician.
HDOP	Horizontal Dilution of Precision (HDOP) shows how accurate data collected by the Nebula Device is according to the current satellite configuration. A smaller value of HDOP means a higher precision.
Display Format	This shows the latitude and longitude display modes. There are three modes: 0, 1, and 2. Below are examples for these modes shown in latitude/longitude. 0 – ddmm.mmmmN/S, dddmm.mmmmE/W 1 – ddmm.mmmmmm, N/S, dddmm.mmmmmm, E/W 2 – (-)dd.ddddd, (-)ddd.ddddd N/S/E/W: North/South/East/West "–" : Negative values refer to South latitude/West longitude respectively. Positive values refer to North latitude/East longitude respectively.
Latitude	This shows the latitude coordinate of the Nebula Device. These positioning values (latitude, longitude, and altitude) help you locate the Nebula Device accurately.
Longitude	This shows the longitude coordinate of the Nebula Device.
Elevation	This shows the altitude of the Nebula Device above sea level in meters.
Positioning Mode	This shows the GNSS positioning mode. 2D ("2") GNSS positioning mode displays latitude and longitude coordinates; 3D ("3") GNSS positioning mode displays latitude and longitude coordinates, and elevation.
Course Over Ground	This shows the course of the Nebula Device based on true North. Course Over Ground (COG) is different from the direction an object is headed, but the path derived from its actual motion (considered as Track), since the motion of an object is often with respect to other factors like wind and tides.
Speed Over Ground	This shows the Speed Over Ground (SOG) of the Nebula Device. SOG is the true object speed over the surface of the Earth.
Last Fix Time	This shows the last time in UTC format that the position of the Nebula Device was updated.
Number of Satellites	This shows the number of current active satellites. GNSS requires at least four satellites to determine the position of the Nebula Device.

10.4.3 LAN Stations

Go to the Site-wide > Devices > Mobile router > Live tools > LAN stations screen to view the LAN status of the Nebula Device. Click the pause icon (||) to stop scanning for LAN stations. Alternatively, click the play icon (▶) to continue scanning.

Figure 254 Site-wide > Devices > Mobile router > Live tools > LAN stations



The following table describes the labels in this screen.

Table 186 Site-wide > Devices > Mobile router > Live tools > LAN stations

LABEL	DESCRIPTION
MAC address	This field displays the MAC address of the LAN station.
IPv4 address	This indicate the IPv4 address of the LAN station.

10.4.4 WLAN Stations

Go to the Site-wide > Devices > Mobile router > Live tools > WLAN stations screen to view the WiFi status of the Nebula Device. Click the pause icon (||) to stop scanning for WiFi stations. Alternatively, click the play icon (▶) to continue scanning.

Figure 255 Site-wide > Devices > Mobile router > Live tools > WLAN stations



The following table describes the labels in this screen.

Table 187 Site-wide > Devices > Mobile router > Live tools > WLAN stations

LABEL	DESCRIPTION
MAC address	This field displays the MAC address of an associated WiFi station.
SSID name	This is the descriptive name used to identify the Nebula Device in a WiFi network.
IPv4 address	This indicate the IPv4 address of the gateway that helps forward this route's traffic.
Capability	This shows the WiFi standard supported by the client or the supported standards currently used by the client.
Security	This displays the type of security mode the WiFi interface is using in the WiFi network.
Channel	This is the channel number currently used by the WiFi interface.
Tx rate	This shows the maximum transmission rate of the client.
Tx	This shows the amount of data transmitted by the client since it last connected.
Rx rate	This shows the maximum reception rate of the client.
Rx	This shows the amount of data received by the client since it last connected.
Signal strength	This shows the RSSI (Received Signal Strength Indicator) of the client's WiFi connection.

10.5 Client Device Heartbeat

Use the Site-wide > Devices > Mobile router > Client device heartbeat screen to monitor the network status of LAN client devices connected to the Nebula Device (mobile router), such as NAS server, printer, or IP camera.

Figure 256 Site-wide > Devices > Mobile router > Client device heartbeat



The following table describes the labels in this screen.

Table 188 Site-wide > Devices > Mobile router > Client device heartbeat

LABEL	DESCRIPTION
Client device heartbeat	
Name	This shows the name of the client device to monitor.
IP	This shows the local (LAN) IP address of the client device connected to the Nebula Device.
24hrs Connectivity	This shows the status over the past 24 hours between the Nebula Device and client device, beginning when the client device was added to the list. Hover the mouse over a colored bar to display the monitored time range. The Nebula Device monitors the link by sending 3 queries in intervals. The Nebula Device then uses the reply to know if the link is up and the transmission quality of the link. - Green (online): This shows green when the Nebula Device is able to get 3 replies to the 3 queries from the client device. - Orange (unstable): This shows orange when the Nebula Device is able to get 1 or 2 replies to the 3 queries from the client device. - Red (offline): This shows red when the Nebula Device got no reply from the monitored client device. - White (no connection between the Nebula Device and the client device). This shows white when: - Before adding the client device to monitor to the list, or - There is no link between the Nebula Device and NCC, and you reboot the client device, or - The Nebula Device license has expired, or - The client device was removed from the list and added back within 24 hours.
	Click the edit icon to change the name of the client device, then click Save.
	Click the remove icon to remove the client device from monitoring, then click Save.
+Add	Click this button to add up to 5 client devices for monitoring. - Enter a descriptive name, 1 – 64 characters including 0–9 a–z A–Z `~!@#\$%&*(_+-=){} [];'"/.<> ?) in the Name field. - Enter the IPv4 address of the client device to monitor in the IP field. - Then click Save.

10.6 Backup & Restore

Use the Site-wide > Devices > Mobile router > Backup & restore screen to back up your configuration settings to the cloud or restore your current setting to the backup configuration.

Figure 257 Site-wide > Devices > Mobile router > Backup & restore



The following table describes the labels in this screen.

Table 189 Site-wide > Devices > Mobile router > Backup & restore

LABEL	DESCRIPTION
Backup & restore	
Site time	This shows the date and time of the site, to which the change was applied, when the log was recorded.
Admin	This shows the name of the administrator who made the back up.
Backup	Click this button to create a new backup of the current configuration of the Nebula Device to the NCC. Click the Download icon (📄) to download the configuration file to your computer or laptop. Click the Delete icon (🗑️) to remove the configuration file on the Nebula Device.
Restore	Click this button to overwrite the settings of the Nebula Device with the selected configuration backup.

10.7 Network Usage and Connectivity

Go to the Site-wide > Devices > Mobile router > Network usage and connectivity screen and then move the cursor to see the transmission rate (uplink/downlink) of a specific time.

Figure 258 Site-wide > Devices > Mobile router > Network usage and connectivity



The following table describes the labels in this screen.

Table 190 Site-wide > Devices > Mobile router > Network usage and connectivity

LABEL	DESCRIPTION
	Network usage and connectivity
	Move the cursor over the chart to see the transmission rate at a specific time.
Zoom	Select a time period to view the statistics in the past 2 hours, day, week, or month.
Pan	Use this to move backward or forward by one day or a week.

CHAPTER 11

Accessory

11.1 Overview

This chapter discusses the menus that you can use to monitor the Nebula-managed Accessories in your network and configure settings even before an Accessory is deployed and added to the site.

An Accessory can be managed by Nebula. It is referred to as a Nebula Device in this chapter.

11.2 Configuration

From the navigation panel, click Site-wide > Devices > Accessory and the following screen appears.

Figure 259 Site-wide > Devices > Accessories



The following table describes the labels in this screen.

Table 191 Site-wide > Devices > Accessories

LABEL	DESCRIPTION
Accessories	Select to view device information and connection status in the past 2 hours, day, week, month.
	Click this button to reload the data-related frames on this page.
Action	Perform an action on the selected Nebula Devices.
Reboot	Select this to restart the Nebula Device.
Tag	Select one or multiple Nebula Devices and click this button to create a new tag for the Nebula Devices or delete an existing tag.
Move	Select one or multiple Nebula Devices and click this button to move the Nebula Devices to another site or remove the Nebula Devices from the current site.
Search	Specify your desired filter criteria to filter the list of Nebula Devices.
Accessories	This shows the number of Nebula Devices connected to the site network.
Export	Click this button to save the accessories list as a CSV or XML file to your computer.
*	Click this to select all the rows in this table.

Table 191 Site-wide > Devices > Accessories (continued)

LABEL	DESCRIPTION
Status	This shows the status of the Nebula Device. - Green: The Nebula Device is online and has no alerts. - Amber: The Nebula Device has alerts. Hover the mouse over the icon to find the problem. - Red: The Nebula Device is offline. - Gray: The Nebula Device has been offline for 7 days or more. Click the Nebula Device on this page to go to the Nebula Device's details screen for more information.
Name	This shows the descriptive name of the Nebula Device.
Tag	This shows the user-specified tag for the Nebula Device.
MAC address	This shows the MAC address of the Nebula Device.
LAN IP	This shows the local (LAN) IP address of the Nebula Device.
Public IP	This shows the global (WAN) IP address of the Nebula Device.
Model	This shows the model number of the Nebula Device.
Configuration status	This shows whether the configuration on the Nebula Device is up-to-date.
Product information	This shows the production information of the Nebula Device.
Connectivity	This shows the accessory connection status. The red time slot indicates the connection to the NCC is down, and the green time slot indicates the connection is up. Move the cursor over a time slot to see the actual date and time when an Nebula Device is connected or disconnected.
Serial number	This shows the serial number of the Nebula Device.
Firmware status	This shows whether the firmware installed on the Nebula Device is up-to-date.
Firmware type	This shows Stable when the installed firmware may not have the latest features but has passed Zyxel internal and external testing. This shows Latest when the installed firmware is the most recent release with the latest features, improvements, and bug fixes. This shows General Availability when the installed firmware is a release before Latest, but is still undergoing Zyxel external testing. This shows Dedicated when the installed firmware is locked and Zyxel support is monitoring. Contact Zyxel customer support if you want to unlock the firmware in order to upgrade to a later one. This shows Beta when the installed firmware is a release version for testing the latest features and is still undergoing Zyxel internal and external testing. This shows N/A when the Nebula Device is offline and its firmware status is not available.
Firmware availability	This shows whether the firmware on the Nebula Device is Up to date, there is firmware update available for the Nebula Device (Upgrade available), or a specific version of firmware has been installed by Zyxel customer support (Locked).
Current version	This shows the firmware version currently installed on the Nebula Device.
IP type	This shows whether the IP address was assigned automatically (DHCP), or manually (Static IP).
	Click this icon to display a greater or lesser number of configuration fields. For faster loading of data, select only the configuration fields listed that do NOT take a long time to fetch data.

Figure 260 Site-wide > Devices > Accessories: Details

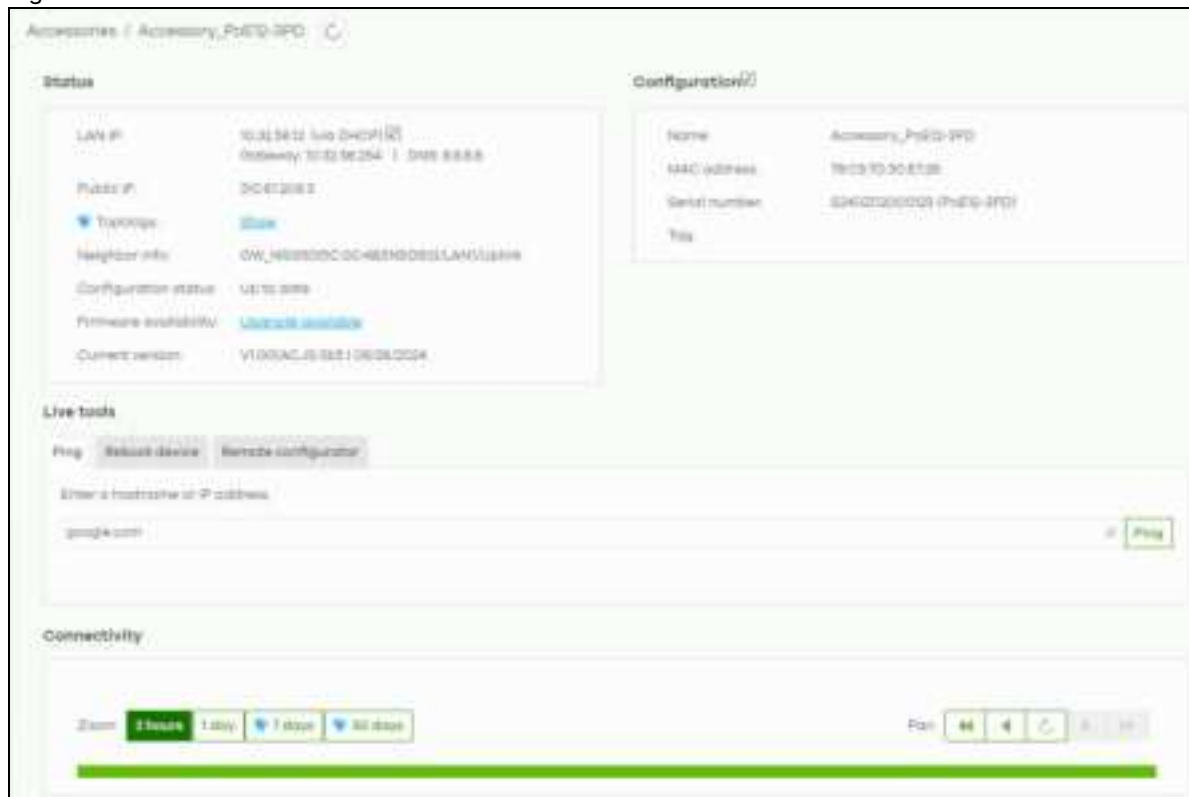


Table 192 Site-wide > Devices > Accessories: Details

LABEL	DESCRIPTION
	Click this button to reload the data-related frames on this page.
Status	

Table 192 Site-wide > Devices > Accessories: Details (continued)

LABEL	DESCRIPTION
LAN IP	This shows the local (LAN) IP address of the Nebula Device. It also shows the IP addresses of the gateway and DNS server. Click the edit icon to open a screen where you can change the IP addresses, VLAN ID number and tagging setting.  Note: To prevent an IP address conflict, NCC will prevent input of an IP address already used by another Nebula Device in the same site.
Public IP	This shows the global (WAN) IP address of the Nebula Device.
Topology	Click Show to go to the Site-wide > Topology screen. See Section 4.2 on page 226 .
Neighbor info	This shows the LLDP information received on the up-link port.
Configuration status	This shows whether the configuration on the Nebula Device is up-to-date.
Firmware availability	This shows whether the firmware on the Nebula Device is up-to-date or there is firmware update available for the Nebula Device.
Current version	This shows the firmware version currently installed on the Nebula Device.
Configuration Click the edit configuration icon to change the Nebula Device name and tags. You can also move the Nebula Device to another site or remove. By default, the Nebula Device's hostname is the MAC address. Enter a Name to identify the Nebula Device. You can use up to 64 alphanumeric characters including period (.) and hyphen (-). Spaces are not allowed. Note: The period (.) and hyphen (-) cannot be the first character, last character, or appear consecutively on the Name. For example, -wax650, wax650-, wax650..wax650, wax650.-wax650.	
Name	This shows the descriptive name of the Nebula Device.
MAC address	This shows the MAC address of the Nebula Device.
Serial number	This shows the serial number of the Nebula Device.
Change site	Select the new site from the drop-down menu or click Remove to remove the Nebula Device from the site.
Tags	This shows the user-specified tag for the Nebula Device.
Live tools	

Table 192 Site-wide > Devices > Accessories: Details (continued)

LABEL	DESCRIPTION
Ping	Enter the domain name or IP address of a computer that you want to perform ping from the Nebula Device in order to test a connection and click Ping. This can be used to determine if the Nebula Device and the computer are able to communicate with each other.
Reboot device	Click the Reboot button to restart the Nebula Device. Note: All connected clients will be temporarily disconnected during reboot.
Remote configurator	This allows you to establish a remote connection to this Nebula Device by specifying the IP address and port number. Then click Establish. This feature is available to the organization owner, organization administrators with full privileges, and site administrators with full privileges.
Connectivity	
Move the cursor over the chart to see the transmission rate at a specific time.	
Zoom	Select to view the statistics in the past 2 hours, day, week, or month.
Pan	Click to move backward or forward by one day or week.

PART III

Manage by Organization Deployment

CHAPTER 12

Organization-wide

12.1 Overview

This chapter discusses the menus that you can use to monitor your organization and manage sites, Nebula Devices, accounts, licenses, and VPN members for the organization.

12.2 License & inventory


The following section describes license management screens in NCC.

Unused licenses can be transferred from a Nebula Device in an Organization to another Nebula Device in an Organization.

12.2.1 License & Inventory Overview Screen

Use these screens to view licenses and Nebula Devices in the organization. Click Organization-wide > License & inventory > Overview to access this screen.

Figure 261 Organization-wide > License & inventory > Overview

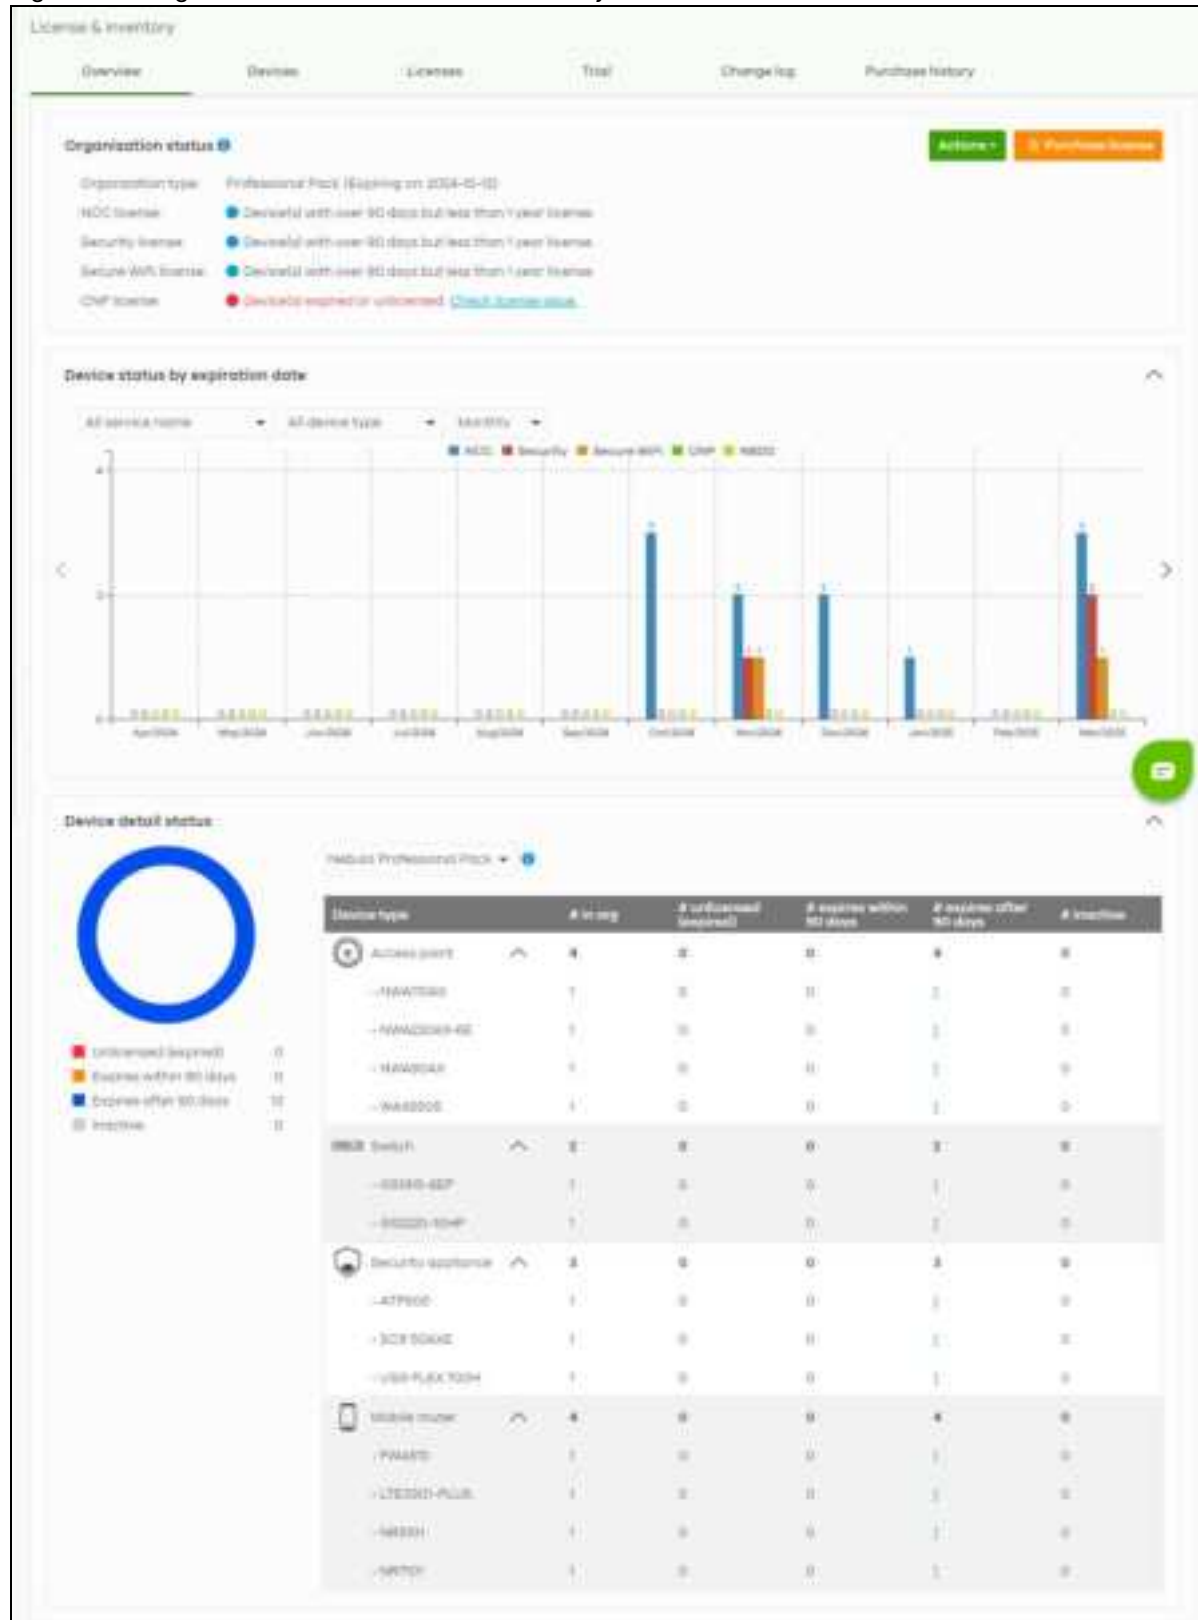

The following table describes the labels in this screen.

Table 193 Organization-wide > License & inventory > Overview

LABEL	DESCRIPTION
Organization Status	
Actions	Click this button to add licenses and/or Nebula Devices to the organization. Choose one of the following actions: - Add more devices: Add new Nebula Devices to the organization, by serial number and MAC address. For details, see Section 12.2.2 on page 714. - Add more licenses: Add new licenses to the organization, by license key. For details, see Section 12.2.4 on page 716. - Install wizard: Add Nebula Devices and licenses to the organization, assign the licenses to the Nebula Devices, and then upgrade the organization if required. For details, see Section 12.2.5 on page 716.
Purchase License	Click this button to go to a window that will ask if you wish to be redirected to the Zyxel Circle web site (if the NCC account has a Circle account). If you do not have a Circle account, you can do the following: - Select what license to purchase and set the target expiration date to keep the Pro/Plus tier features/services running. - You may export the list of required licenses to your computer. - After calculating the license to purchase, click the Zyxel license marketplace (Check out) button to complete your purchase. Purchased licenses are directly assigned to Nebula Device(s). Unused licenses assigned to your organization will not be counted as it is not yet assigned to a Nebula Device. This button is available only for the Full (Delegated) administrator privilege or Owner administrator account with a registered Nebula Device(s).
Upgrade Now	Click this button to upgrade the organization to Plus or Pro tier. The button is only available if you have a Plus or Pro license for every Nebula Device in the organization.
Downgrade Now	Click this button to downgrade the organization from Plus or Pro to Base tier, or from Pro to Plus tier. All active NCC licenses in the organization will stay active and continue to count down to their expiry time.
Organization type	This shows the licensing tier of the organization. Possible values are: Base, Plus Pack, Professional Pack, and Trial.
NCC license	This shows whether there are any Nebula Devices with near expiring licenses.
Security license	This shows whether the current site has an active NSS or UTM license.
Secure WiFi license	This shows whether the current site has an active Secure WiFi license. A Secure WiFi license unlocks the Remote AP feature. Remote AP allows users connected to an off-site (remote) AP to connect to on-site resources behind the Nebula Device through a secure IPSec VPN tunnel.
CNP/CNP+ license	This shows whether the current site has an active CNP (Connect & Protect) or CNP+ Connect & Protect Plus) license. A CNP license unlocks security services, such as threat protection using DNS and IP reputation filters. A CNP+ license unlocks security services, such as application visibility and threat protection using DNS and IP reputation filters.

Table 193 Organization-wide > License & inventory > Overview (continued)

LABEL	DESCRIPTION
Device status by expiration date	Click this button to select the data to be shown in the graph. Choose one from each of the following criteria: - All service name, Gold Security Pack, Nebula Professional Pack, Nebula Plus Pack, Nebula Security Pack, UTM Security Pack, Content Filter Pack, Elite Pack, Secure WiFi, Connect & Protect, Next Business Day Delivery Service: select the category of licenses to display. - All device type, Access point, Switch, Security appliance, or Mobile router: select the category of Nebula Device to display. - Monthly, Quarterly, or Yearly: select the period of time to display.
Device detail status	
License type	Select the license type to filter your selection (Nebula Professional Pack, Nebula Plus Pack, Gold Security Pack, Nebula Security Pack, UTM Security Pack, Content Filter Pack, Elite Pack, Secure WiFi, Connect & Protect, Access L3, Next Business Day Delivery Service).
Device type	This shows the category of Nebula Device (Access point, Switch, Security appliance, Mobile router) and Nebula Device model.
# in org	This shows the total number of Nebula Devices of the specified category and model that are in the organization.
# unlicensed (expired)	This shows the total number of Nebula Devices of the specified category and model that have: - No NCC Pro or Plus license. - An expired NCC Pro or Plus license.
# expires within 90 days	This shows the total number of Nebula Devices of the specified category and model that have an NCC Pro or Plus license that will expire within 90 days.
# expires after 90 days	This shows the total number of Nebula Devices of the specified category and model that have an NCC Pro or Plus license that have more than 90 days before expiration.
# inactive	This shows the total number of Nebula Devices of the specified category and model that have an NCC Pro or Plus license that has not been activated.

12.2.2 Add Devices Screen

Use this screen to add Nebula Devices to an organization. Click Organization-wide > License & inventory > Overview > Actions > Add more devices to access this screen.

Figure 262 Organization-wide > License & inventory > Overview: Add devices: Add devices

The screenshot shows the 'Add devices' screen. At the top, there's a title 'Add devices' and a close button. Below the title, there's a section for 'Devices' with instructions: 'Enter the serial number, MAC address and serial number' and 'If you can download the [link] here and [link] multiple records for faster registration'. There's also a link for 'What if you receive a support request?'. Below this, there's a table with columns: 'MAC address', 'Serial number', 'Name', 'Model', 'License info', 'Expiration date', and 'Assign license type'. The table is currently empty. Below the table, there's a green button labeled '+ Add another device'. At the bottom right, there are 'Cancel' and 'OK' buttons.

The following table describes the labels in this screen.


Table 194 Organization-wide > License & inventory > Overview: Add devices: Add devices

LABEL	DESCRIPTION
template	Click this to download an XLSX file that you can use as a template to import a large number of Nebula Devices at once. Follow the instructions and formatting in the template to add the Nebula Device's serial numbers and MAC addresses.
import	Click this to upload a completed template XLSX file and import all Nebula Devices in the file.
MAC address	Enter the MAC address of the new Nebula Device.
Serial number	Enter the serial number of the new Nebula Device.
Name	Enter a name for the new Nebula Device. It can consist of 1–64 characters.
Model	This shows the model number of the Nebula Device being added.
License info	This shows the type of NCC license activated on the Nebula Device, if there is one. Otherwise, it shows a '-' (dash).
Expiration date	This shows the expiration date of the NCC license activated on the Nebula Device, if there is one. Otherwise, it shows a '-' (dash).
Assign licenses from inventory	Click here to assign unassigned licenses already in the organization to the Nebula Device. Note: If the organization is a Pro or Plus tier, you must assign a Pro or Plus license to the Nebula Device within 15 days.
	Click the remove icon to delete the entry.
Add another device	Click this to add another Nebula Device to the organization.
Acknowledge	Select this to confirm that your NCC account will be the owner of the new Nebula Devices.
Next	Click this to add the Nebula Devices to the organization.
Cancel	Click this to close the screen without saving.

12.2.3 Firmware Upgrade Screen

If a newer Nebula Device firmware is available, use this screen to upgrade it. Click Organization-wide > License & inventory > Overview > Actions > Add more devices > Firmware upgrade to access this screen.

Figure 263 Organization-wide > License & inventory > Overview: Add devices: Firmware upgrade

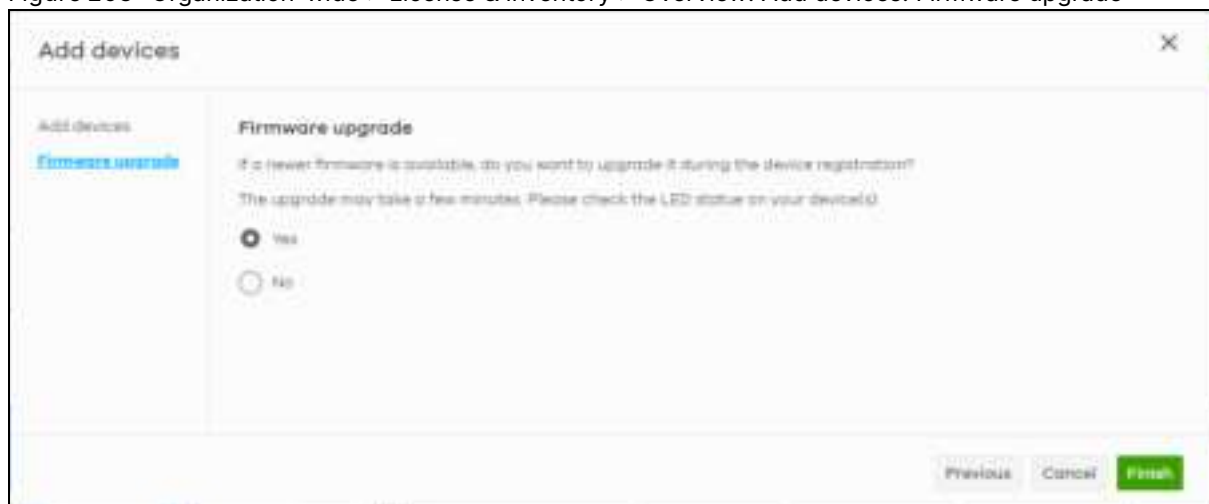

Note: If you choose not to upgrade the firmware, NCC will still perform an upgrade if the Nebula Device's firmware has security vulnerabilities, and/or lacks key performance improvements.

12.2.4 Add Licenses Screen

Use this screen to add licenses to an organization. Click Organization-wide > License & inventory > Overview > Actions > Add more licenses to access this screen.

Figure 264 Organization-wide > License & inventory > Overview: Add licenses

The following table describes the labels in this screen.

Table 195 Organization-wide > License & inventory > Overview: Add licenses

LABEL	DESCRIPTION
template	Click this to download an XLSX file that you can use as a template to import a large number of licenses at once. Follow the instructions and formatting in the template to add the license keys.
import	Click this to upload a completed template XLSX file and import all licenses in the file.
License key	Enter the license key of the new license.
License information	This shows the license type and validity period of the license being added.
	Click the remove icon to delete the entry.
Add	Click this to add another license to the organization.
Finish	Click this to add the license to the organization.
Cancel	Click this to close the screen without saving.

12.2.5 Install Wizard

Use this wizard to add licenses and Nebula Devices to an organization, assign licenses to the new Nebula Devices, and then upgrade the organization if required. Follow the steps below to use the wizard.

- 1 Click Organization-wide > License & inventory > Overview > Actions > Install wizard. After the wizard window opens, click Next.

Wizard

Before you start

- Add devices
- Firmware upgrade
- Add licenses
- Assign licenses
- Upgrade organization

Welcome install wizard

The wizard will help you to add device/license and automatically assign the license to device. It will also provide upgrade options if the organization is available to upgrade Pro/Plus Pack.

Next Cancel

- 2 Add the MAC address and serial number of one or more Nebula Devices, select Acknowledge, and then click Next. For more information on this page, see [Section 12.2.2 on page 714](#).

Wizard

Before you start

- Add devices
- Firmware upgrade
- Add licenses
- Assign licenses
- Upgrade organization

Devices

Enter one of these MAC address and serial number
(Or you can download the [template](#) here and [upload](#) multiple records for faster registration.)
[What does device support Nebula?](#)
[Where can I find these numbers?](#)

MAC address	Serial number	Name	Model	License info	Expiration date

+ Add another device

Previous Next Cancel

- 3 Click Yes (selected by default) to upgrade the Nebula Device firmware. If you select No, NCC will still perform an upgrade if the Nebula Device's firmware have security vulnerabilities, and/or lack key performance improvements. Click Next to continue.

Wizard

Before you start

- Add devices
- Firmware upgrade
- Add licenses
- Assign licenses
- Upgrade organization

Firmware upgrade

If a newer firmware is available, do you want to upgrade it during the device registration?
The upgrade may take a few minutes. Please check the LED status on your (devices)

☒ Yes
☐ No

Previous Next Cancel

- 4 Add the license keys of one or more licenses, and then click Next. For more information on this page, see [Section 12.2.4 on page 716](#).

The screenshot shows the 'Add licenses' step in a wizard. On the left, a sidebar lists steps: 'Before you start', 'Add devices', 'Remove upgrade', 'Add licenses' (highlighted in blue), 'Assign licenses', and 'Upgrade organization'. The main area is titled 'Add licenses' and contains the text: 'Enter one more license key. (If you can download the [license key](#) here and [upload](#) multiple license keys for faster registration)'. Below this is a table with two columns: 'License key' and 'License information'. The table is currently empty. A green '+ Add' button is at the bottom left of the table area. At the bottom right of the wizard, there are 'Previous', 'Next', and 'Cancel' buttons.

- 5 NCC automatically tries to assign an unused license to each matching Nebula Device. Reassign unused licenses for each Nebula Device manually by clicking Select # of license. Then click Next.

The screenshot shows the 'Assign licenses' step in the wizard. The sidebar on the left is the same as in the previous step, with 'Assign licenses' highlighted in blue. The main area is titled 'Assign licenses' and contains the text: 'There is no suitable license for selected device(s)'. At the bottom right, there are 'Previous', 'Next', and 'Cancel' buttons.


- 6 If the organization is on the base tier and you have added sufficient licenses for all Nebula Devices, you are given the option to upgrade to the Pro or Plus tier. Select Yes or No, and then click Finish.

The screenshot shows the 'Upgrade organization' step in the wizard. The sidebar on the left has 'Upgrade organization' highlighted in blue. The main area is titled 'Upgrade organization' and contains the text: 'No need to upgrade.' At the bottom right, there are 'Previous', 'Cancel', and 'Finish' buttons.

12.2.6 License & Inventory Devices Screen

Use these screen to view and manage Nebula Devices in the organization. Click Organization-wide > License & inventory > Devices to access this screen.

Figure 265 Organization-wide > License & inventory > Devices

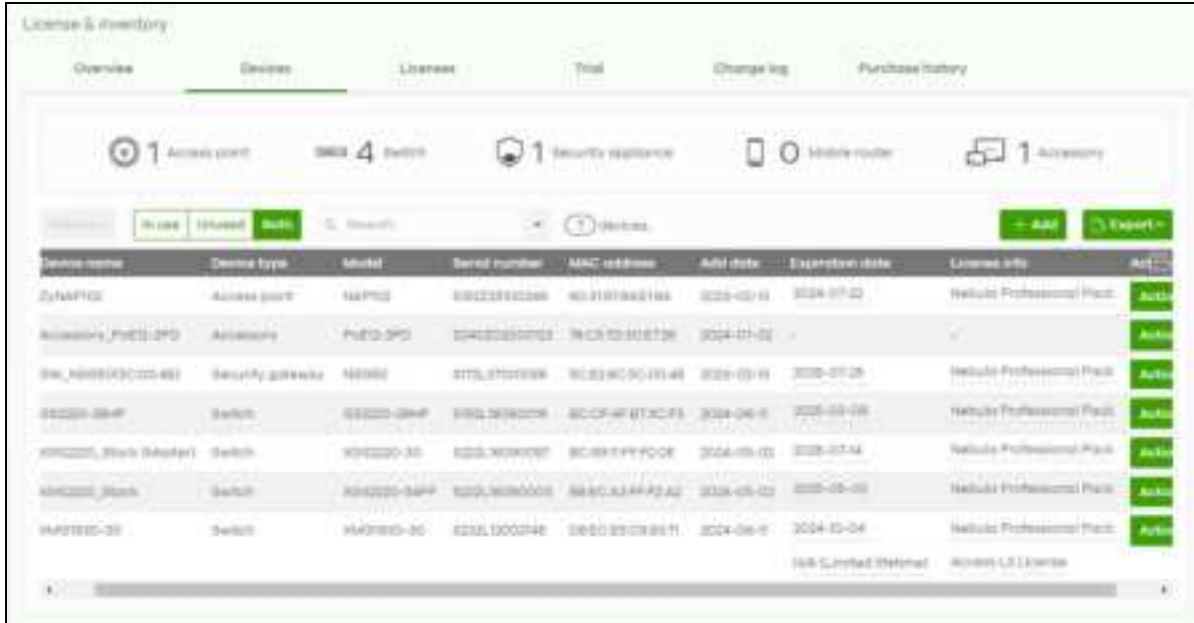

The following table describes the labels in this screen.

Table 196 Organization-wide > License & inventory > Devices

LABEL	DESCRIPTION
N Access Point	This shows the total number of access points (N) in the organization.
N Switch	This shows the total number of switches (N) in the organization.
N Security Appliance	This shows the total number of Security Gateway devices (N) in the organization.
N Mobile Router	This shows the total number of Mobile Router devices (N) in the organization.
N Accessory	This shows the total number of accessories (N) in the organization.

Table 196 Organization-wide > License & inventory > Devices (continued)

LABEL	DESCRIPTION
Actions	Select one or more Nebula Devices and then click this button to perform one of the following actions: Change organization: Moves the Nebula Device to an organization. The organizations must have the same owners. Change site assignment: Moves the selected Nebula Devices to a site, or remove them from their current site while leaving them in the organization. Note: When you change the site for a Security Firewall (see Table 1 on page 14 for information on the supported Security Firewall devices), select the deployment method for management by Nebula (see Step 8: Set up the Deployment Method on page 74 for more information), configure the WAN settings and choose the installation method. Note: Device HA (High Availability) lets a backup Security Firewall automatically take over if the master Security Firewall fails. When you change the site or organization for a Security Firewall with Device HA configured, a warning message will appear. If you decide to continue and click Ok, both Security Firewalls will restore to its factory-default settings to prevent misconfigurations in NCC. You need to re-install the Device HA. See the Security Firewall's user's guide for more information on Device HA. Remove from organization: Remove the Nebula Devices from NCC. You can manage the Nebula Devices in standalone mode, or re-add them to NCC later. Assign license: Assign licenses to the selected Nebula Devices. Undo assign: Unlink the inactive licenses from the associated Nebula Devices. After unlinking, the license will be categorized as unused in Inventory. An inactive license is a license that has been assigned to a Nebula Device but is not yet in use or queued. Transfer license: Moves the unused licenses linked to a Nebula Device to another Nebula Device. Nebula Devices can be in the same organization or in a different organization. The Nebula Devices must have the same owner. Bundled, Trial, and Promotion licenses cannot be transferred. Purchase license: Select what license to purchase and target expiration date to keep the Pro/Plus tier features/services running. You may export the list of required licenses to your computer. Then click the Zyxel license marketplace (Check out) button to complete your purchase. Unused licenses assigned to your organization will not count as it is not yet assigned to a Nebula Device. This button is available only for the Organization (Delegated) or Owner administrator account with a registered Nebula Device(s).
In use / Unused / Both	Select to display the Nebula Device currently in a site (In use), not current (Unused), or show all (Both).
Search	Enter a keyword or specify one or more filter criteria to filter the list of Nebula Devices and Security Firewall(s) in Cloud Monitoring mode.
+ Add	Add one or more new Nebula Devices to the organization, by entering the Nebula Device's MAC address and serial number. For details, see Section 12.2.2 on page 714 .
Export	Click this button to save the Nebula Device list as a CSV or XML file to your computer.
	Select an entry's checkbox to select a specific Nebula Device. Otherwise, select the checkbox in the table heading row to select all Nebula Devices.
Device name	This shows the hostname of the Nebula Device.
Device type	This shows the category of Nebula Device (Access Point, Switch, Security Router, Firewall, Gateway, Mobile Router, Accessory) and Nebula Device model.

Table 196 Organization-wide > License & inventory > Devices (continued)

LABEL	DESCRIPTION
Site	This shows the site that the Nebula Device is currently in. If the Nebula Device is not in any site, the value is blank.
Model	This shows the Nebula Device's model.
Serial Number	This shows the Nebula Device's serial number.
MAC address	This shows the MAC address of the Nebula Device's first Ethernet port.
Device tag	This shows the tag created and added to the Nebula Device.
Add date	This shows the date on which the Nebula Device was added to NCC. If the Security Firewall has NOT yet connected to NCC (see Table 1 on page 14 for the list of Security Firewalls): • Native mode. Click this button and select Nebula Native mode in the Deployment Method. Follow the instructions to connect the Security Firewall to NCC. • Waiting ZTP will be shown if Native mode is not available. Click the Waiting ZTP button and select Zero Touch Provisioning in Deployment Method to configure the ZTP settings. Note: The Deployment Method screen will not show for Security Firewall(s) in Cloud Monitoring mode.
Unused / In use	This shows Unused if the Nebula Device is not assigned to a site, or In use if the Nebula Device is currently in a site.
Country	This shows the country in which the Nebula Device is located.
Expiration date	This shows the date on which the Nebula Device's NCC license will expire.

Table 196 Organization-wide > License & inventory > Devices (continued)

LABEL	DESCRIPTION
License info	This shows the type of NCC license assigned to the Nebula Device. Note: Move the pointer over this field to see information about all licenses associated with this Nebula Device.
Action	Select one or more Nebula Devices and then click this button to perform one of the following actions: Change organization: Moves the Nebula Device to an organization. The organizations must have the same owners. Change site assignment: Moves the selected Nebula Devices to a selected site, or removes them from their current site while leaving them in the organization. Note: When you change the site for a Security Firewall (see Table 1 on page 14 for information on the supported Security Firewall devices), select the deployment method for management by Nebula (see Step 8: Set up the Deployment Method on page 74 for more information), configure the WAN settings and choose the installation method. Note: Device HA (High Availability) lets a backup Security Firewall automatically take over if the master Security Firewall fails. When you change the site or organization for a Security Firewall with Device HA configured, a warning message will appear. If you decide to continue and click Ok, both Security Firewalls will restore to its factory-default settings to prevent mis-configurations in NCC. See the Security Firewall's user's guide for more information on Device HA. Remove from organization: Remove the Nebula Devices from NCC. You can manage the Nebula Devices in standalone mode, or re-add them to NCC later. Assign license: Assign unassigned licenses to the selected Nebula Devices. Undo assign: Unlink the inactive licenses from the associated Nebula Devices. After unlinking, the license will be categorized as unused in Inventory. An inactive license is a license that has been assigned to a Nebula Device but is not yet in use or queued. Transfer license: Moves unused licenses linked from one Nebula Device to another Nebula Device. The Nebula Devices can be in the same organization or in a different organization. The Nebula Devices must have the same owner. Bundled, Trial, and Promotion licenses cannot be transferred.

12.2.7 License & Inventory Licenses Screen

Use these screen to view and manage licenses in the organization. Click Organization-wide > License & inventory > Licenses to access this screen.

Figure 266 Organization-wide > License & inventory > Licenses

License ID	License Status	Associated Device	Renewal Date	Expiration Date	Actions
12345678901234567890	Active	12345678901234567890	2024-12-31	2025-12-31	[Assign] [Unassign] [Transfer]
12345678901234567890	Active	12345678901234567890	2024-12-31	2025-12-31	[Assign] [Unassign] [Transfer]
12345678901234567890	Active	12345678901234567890	2024-12-31	2025-12-31	[Assign] [Unassign] [Transfer]
12345678901234567890	Active	12345678901234567890	2024-12-31	2025-12-31	[Assign] [Unassign] [Transfer]
12345678901234567890	Active	12345678901234567890	2024-12-31	2025-12-31	[Assign] [Unassign] [Transfer]
12345678901234567890	Active	12345678901234567890	2024-12-31	2025-12-31	[Assign] [Unassign] [Transfer]
12345678901234567890	Active	12345678901234567890	2024-12-31	2025-12-31	[Assign] [Unassign] [Transfer]
12345678901234567890	Active	12345678901234567890	2024-12-31	2025-12-31	[Assign] [Unassign] [Transfer]
12345678901234567890	Active	12345678901234567890	2024-12-31	2025-12-31	[Assign] [Unassign] [Transfer]
12345678901234567890	Active	12345678901234567890	2024-12-31	2025-12-31	[Assign] [Unassign] [Transfer]

The following table describes the labels in this screen.

Table 197 Organization-wide > License & inventory > Licenses

LABEL	DESCRIPTION
N assigned	This shows the total number of licenses (N) in the organization that are assigned to a Nebula Device and activated.
N unused (Pro Pack, 1MO/1YR/2YR/4YR/7YR) or N unused (Plus Pack, 1MO/1YR/2YR)	This shows the total number of Nebula Professional Pack or Nebula Plus Pack licenses (N) in the organization that are not assigned to a Nebula Device.
N unused (UTM Pack, 1MO/1YR/2YR)	This shows the total number of UTM Security Pack licenses (N) in the organization that are not assigned to a Nebula Device.
Actions	Select one or more Nebula Devices and then click this button to perform one of the following actions: Change organization: Moves the selected licenses to an organization. The organizations must have the same owners. Assign License: Assign the selected licenses to one or more Nebula Devices. Only the licenses applicable for the Nebula Device can be selected. Undo assign: Unlink the inactive licenses from the associated Nebula Devices. After unlinking, the license will be categorized as unused in Inventory. An inactive license is a license that has been assigned to a Nebula Device but is not yet in use or queued. Transfer license: Moves the unused licenses linked to a Nebula Device to another Nebula Device. The Nebula Devices can be in the same organization or in a different organization. The Nebula Devices must have the same owner. Bundled, Trial, and Promotion licenses cannot be transferred.
Search	Enter a keyword or specify one or more filter criteria to filter the list of licenses.
N licenses	This shows the total assigned and unassigned licenses in the organization.

Table 197 Organization-wide > License & inventory > Licenses (continued)

LABEL	DESCRIPTION
Show expired licenses	Click this to display licenses that are past their validity.
+ Add	Add one or more new licenses to the organization, by entering their license keys. For details, see Section 12.2.4 on page 716 .
Export	Click this to save the license list as a CSV or XML file to your computer.
License Key	This shows the key of license, including bundled licenses.
Service	This shows the service that license is for, for example "Nebula Professional Pack".
License states	This shows the current status of the license: - Activated: The license is assigned to a specific Nebula Device and in use. - Inactive: The license is assigned to a specific Nebula Device but not activated. - Expired: The license is past its validity. - Queued: The license is assigned to a specific Nebula Device, and the license is waiting for the currently active license to expire. - Unused: The license is not assigned to a specific Nebula Device. - Deferred: Activation of the license is intentionally delayed on a specific Nebula Device.
Expiration date	This shows the date on which the license will expire. Queued means there are multiple licenses assigned to the Nebula Device, and the license is waiting for the currently active license to expire.
Remaining days	This shows how days remain until the license expires.
Add date	This shows the date on which the license was added to NCC. If the Security Firewall has NOT yet connected to NCC: - Native mode. Click this button and select Nebula Native mode in Deployment Method. Follow the instructions to connect the Security Firewall to NCC. - Waiting ZTP will be shown if Native mode is not available. Click the Waiting ZTP button and select Zero Touch Provisioning in Deployment Method to configure the ZTP settings. Note: The Deployment Method screen will not show for Security Firewall(s) in Cloud Monitoring mode.
Activation date	This shows the date on which the license was activated.
Associated device	This shows the name and model of the Nebula Device that the license is assigned to.
Associated site	This shows the name of the site that the license is being used in. Click the site to go to its dashboard.
Action	Click this button to perform the following actions: Change organization: Moves the selected licenses to an organization. The organizations must have the same owners. Assign License: Assign the selected licenses to one or more Nebula Devices. Only the licenses applicable for the Nebula Device can be selected. Undo assign: Unlink the inactive licenses from the associated Nebula Devices. After unlinking, the license will be categorized as unused in Inventory. An inactive license is a license that has been assigned to a Nebula Device but is not yet in use or queued. Transfer license: Moves the unused licenses linked to a Nebula Device to another Nebula Device. The Nebula Devices can be in the same organization or in a different organization. The Nebula Devices must have the same owner. Bundled, Trial, and Promotion licenses cannot be transferred.

12.2.8 License & Inventory Trial Screen

A free 30-day trial license is available for each Nebula organization you create. Trial licenses are available even if you have no Nebula Devices in the organization.

Note: Make sure services are usable by the Nebula Device before activating the trial license.

All trial licenses apply to all Nebula Devices in an organization. There is no limit to the number of organizations. You will lose access to related services or advanced NCC features when trial expires. You must then buy a standard license (not a trial) for each Nebula Device.

Activating a standard license during the trial period will add the remaining trial time to the standard license time. However, activating a Nebula Professional Pack license during the trial period will cancel the trial. NCC activates inactive licenses when the associated trial has expired.

If you activate the Nebula Professional Pack Trial, you can use advanced features in Nebula Devices in all organizations.

Moving a Nebula Device to another organization will cancel its trial license. However, a trial license is still available for the Nebula Device if you did not activate a trial or standard license of the same type in the new organization.

Note: Each trial license is not available if you previously activated a trial or standard license of the same type.

At the time of writing, trial licenses are associated with the following:


Table 198 Trial Licenses Summary

TRIAL LICENSE	ASSOCIATED FEATURES OR NEBULA DEVICES
Nebula Pro Pack Trial	This is for advanced features, except open API access, within the Nebula Device's organization. See Section 4.9.6 on page 325 for more information on open API access.
MSP Pack Trial	This is for new NCC accounts or NCC accounts that have not used MSP before. This allows you to manage multiple organizations.
Gold Security Pack Trial	This is for ATP devices and USG FLEX devices except USG20-VPN / USG20W-VPN / USG FLEX 50. Note: The Gold Security Pack Trial also includes use of advanced features except open API access from the Nebula Pro Pack Trial.
Content Filter Pack Trial	This is for USG FLEX 50 / USG20-VPN / USG20W-VPN devices.
Elite Pack Trial	This unlocks security services for SCR 50AXE / USG LITE 60AX.
Connect & Protect Trial	This allows you to manage small business WiFi hotspots using an NWA1123-ACv3, WAC500, WAC500H, NWA110AX, NWA210AX, WAX510D, WAX610D, WAX630S, or WAX650S.
Secure WiFi Trial	This is for remote APs (access points) to securely connect a ZyWALL ATP / USG FLEX (except USG FLEX 50) in the office.

See [Table 3 on page 18](#) for detailed information on the licenses available in NCC.

Use this screen to view the status and activate trial licenses for Nebula Devices within the organization. Click Organization-wide > License & inventory > Trial to access this screen.

Figure 267 Organization-wide > License & inventory > Trial

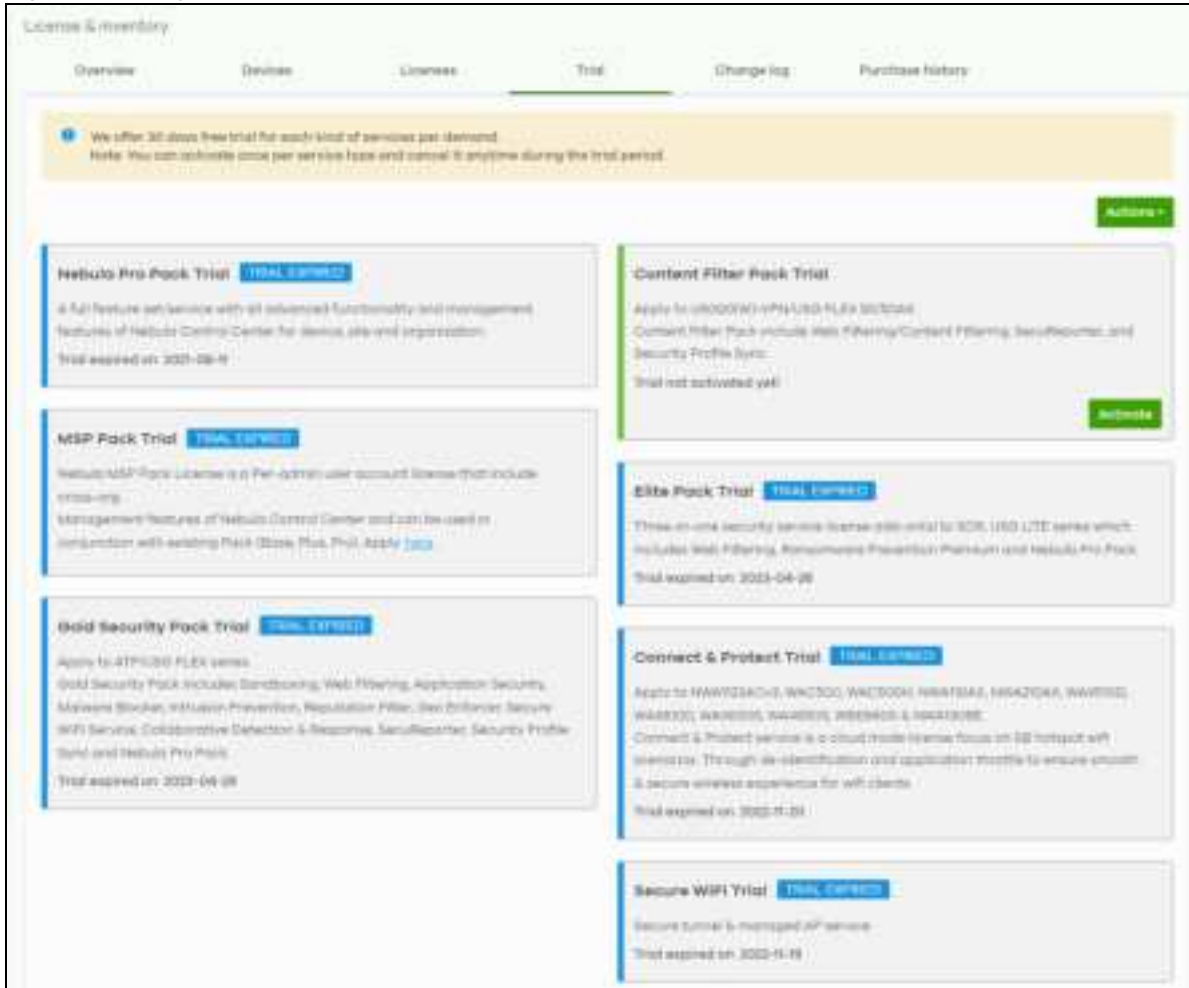

The following table describes the labels in this screen.

Table 199 Organization-wide > License & inventory > Trial

LABEL	DESCRIPTION
Actions	Click this to perform one of the following actions: - Activate trial for all: select this to start using all trial licenses available for your organization. Then click Confirm to continue. - Deactivate trial for all: select this to cancel all trial licenses currently in use in your organization. Then click Confirm to continue. Note: When you cancel any trial license, you cannot re-activate the unused portion of the trial license.
(Status)	The status displays next to the name of a trial license. If no status displays, it means you can activate the trial license. The trial license can be used on the Nebula Devices within the organization. Click Activate to start using the services of the trial license. Note: You can activate each type of 30-day trial license on each organization only once.

Table 199 Organization-wide > License & inventory > Trial (continued)

LABEL	DESCRIPTION
IN PROGRESS	The 30-day countdown for the trial license has begun. Click Deactivate if you want to cancel the trial license. Note: You can cancel the trial license anytime during the 30-day trial period, but you cannot re-activate it.
TRIAL EXPIRED	You have previously activated a trial or standard license and the license period has ended.
CANCELED	You have deactivated the trial license during the 30-day trial period.
Activate	Click this to start using the 30-day trial license. Then click Confirm to continue.
Deactivate	Click this to cancel the 30-day trial license anytime before it expires. Then click Confirm to continue.

12.2.9 License & Inventory Change Log Screen

Use this screen to view a record of Nebula Device and license actions within the organization. The log also shows the change in state of the organization, as a before and after, as a result of each action. Click Organization-wide > License & inventory > Change log to access this screen.

Figure 268 Organization-wide > License & inventory > Change log



The following table describes the labels in this screen.

Table 200 Organization-wide > License & inventory > Change log

LABEL	DESCRIPTION
Keyword	Enter a keyword or specify one or more filter criteria to filter the list of log entries.
Range / Before	Select a filtering option, set a date, and then click Search to filter log entries by date. Range: Display log entries from the first specified date to the second specified date. Before: Display log entries from the beginning of the log to the selected date.
Search	Click this to update the list of logs based on the search criteria.
Reset filters 	Click this to return the search criteria to the previously saved time setting.
Newer / Older	Click to view the list of log messages with the most recent or oldest message displayed first.
	This shows the total number of the log messages that match the search criteria. It also shows the date and time the very first log was created.
Export	Click this button to save the log list as a CSV or XML file to your computer.
Date and time	This shows the date and time in UTC+00:00 (or UTC+0) when the log was recorded. UTC is a standard time for use around the world (formerly known as Greenwich Mean Time or GMT). UTC is an international abbreviation that is neither French nor English. It means both "Temps Universel Coordonné" and "Coordinated Universal Time".

Table 200 Organization-wide > License & inventory > Change log (continued)

LABEL	DESCRIPTION
Action	This shows the action that triggered the log entry.
Before	This shows the old setting or state that was overwritten with the new value.
After	This shows the new setting or state.
Admin	This shows the name of the NCC administrator account that made the changes.
	Click this icon to display a greater or lesser number of configuration fields.

12.2.10 License & Inventory Purchase History Screen

Use this screen to view a record of Nebula Device license purchased within the organization. Click Organization-wide > License & inventory > Purchase history to access this screen.

Figure 269 Organization-wide > License & inventory > Purchase history



The following table describes the labels in this screen.

Table 201 Organization-wide > License & inventory > Purchase history

LABEL	DESCRIPTION
Keyword	Enter a keyword or specify one or more filter criteria to filter the list of purchased license entries.
Search	Click this to update the list of logs based on the search criteria.
N purchases	This displays the total purchased licenses in the organization.
Order ID	This displays a unique code that identifies the order. Clicking this link will take you to the Marketplace > Order History screen.
Purchase date	This displays the date that the order was created.
# licenses	This displays the number of licenses purchased for the specified license type.
Purchase by	This displays the email address of the NCC account that created the order.
Status	This displays the current status of the order. - Done: The order has been paid for and the license was successfully activated on the target Nebula Device. - Processing: The license activation on the target Nebula Device is still under process. - Failed: The license was not successfully activated on the target Nebula Device.
Export	Click this to download the order details as a CSV or XML file to your computer. This includes the Order ID and each license's assigned device information.

12.3 Administrators

Use this screen to view, manage and create administrator accounts for the specified organization. Click Organization-wide > Administrators to access this screen.

Figure 270 Organization-wide > Administrators

Name	Email address	Assigned privilege	Privilege	Account status	Last access time	UTC
Admin	admin@ncc.com	Owner	Owner	On	2021-04-28 23:52:25	2021-0
Thomas Manning	thomas.manning@ncc.com	Organization (Full)	Organization (Full)	On	2021-04-30 01:53:35	2021-0
Ben	ben@ncc.com	Organization (Full)	Organization (Full)	On	2021-04-28 02:52:10	2021-0
Alice	alice@ncc.com	Organization (Full)	Organization (Full)	Deactivated	2021-04-21 11:48:58	2021-0
Adam	adam@ncc.com	Organization (Full)	Organization (Full)	Deactivated	2021-04-30 04:02:04	2021-0
Steve	steve@ncc.com	Organization (Full)	Organization (Full)	Deactivated	2021-04-06 09:53:31	2021-0
John	john@ncc.com	Organization (Full)	Organization (Full)	Deactivated	2021-04-30 10:43:07	2021-0
Sarah	sarah@ncc.com	Organization (Full)	Organization (Full)	On	2021-04-30 08:53:31	2021-0
Bob	bob@ncc.com	Organization (Full)	Organization (Full)	On	2021-04-21 11:54:01	2021-0
Bob	bob@ncc.com	Organization (Full) by MFP	Organization (Full)	On	2021-07-04 04:22:10	2021-0

The following table describes the labels in this screen.

Table 202 Organization-wide > Administrators

LABEL	DESCRIPTION
Activation	Click this button to Activate/Deactivate the selected accounts. Then click Update.
Force logout	Click this button to force the selected accounts to log out of the NCC.
Delete	Click this button to remove the selected accounts.
Search	Specify your desired filter criteria to filter the list of administrator accounts.
administrators	This shows the number of administrator accounts in the list.
Change owner	This button is only available if you are the organization owner. Click this button to transfer ownership of the organization to another user account. The new owner account must be an organization full administrator. Change organization owner Please select current organization admin to become new owner Item: Thomas.Manning@ncc.com ☐ This action will cause you lose ownership rights include Nebula devices under this organization. Do you want to continue? No Yes After transferring ownership, NCC performs the following actions: - Changes your account from organization owner to organization full administrator. - Transfers all Nebula Devices and licenses in the organization to the new owner. - Sends the new owner an email, notifying them of the change.

Table 202 Organization-wide > Administrators (continued)

LABEL	DESCRIPTION
Import	Click this button to create administrator accounts in bulk by importing a complete list of all new administrators in an Excel file.  The image shows a 'Bulk Import' dialog box with a close button (X) in the top right. The text inside says: 'Bulk Import' supports for faster inputting. Please follow this template to import. Below this is a blue 'Import' button and a dashed box with the text 'Or drag file here.'. At the bottom right is a 'Close' button.
Add	Click this button to create a new administrator account. See Section 12.3.1 on page 731 .
Name	This shows the name of the administrator account.
Email address	This shows the email address of the administrator account.
Merged privilege	This shows the final privilege the account has in the organization, when organization privileges configured on different screens are combined and prioritized. Organization privileges can be configured on the following screens; the highest privilege level takes priority: • MSP cross-org manage > Admins & teams > Admins • MSP cross-org manage > Admins & teams > Teams • Group-wide manage > Administrators • Organization-wide > Administrators For more information, see Section 14.3.1 on page 800.
Privilege	This shows whether the administrator account has read-only, monitor-only, guest ambassador, or read and write (full) access to the organization and sites. Installer indicates that the administrator account can register Nebula Devices at a site. Owner indicates that the administrator account is the creator of the organization, who has full access to that organization and cannot be deleted by other administrators. Organization (Delegated) means that the administrator account has delegated owner privileges. This type of account can perform all of the same actions as the organization owner, except for the following: • Delete organization • Transfer organization ownership • Assign delegate owner privileges to an administrator account.
Account status	This shows whether the administrator account has been validated (OK). It shows Deactivated if an administrator account has been created but cannot be used. This may happen since you can only have up to five active administrator account on Nebula (free). It shows Unverified if Nebula has no record of this administrator account. It shows Expired if the administrator account has passed the expiration time and cannot access the organization.
Last access time	This shows the last date and time traffic was sent from the administrator account.
Create date	This shows the date and time the administrator account was created.
Status change date	This shows the last date and time the administrator account status was changed.
	Click this icon to display a greater or lesser number of configuration fields.

12.3.1 Create/Update Administrator

In the Organization-wide > Administrator screen, click the Add button to create a new administrator account or double-click an existing account entry to modify the account settings.

Figure 271 Organization-wide > Administrator: Create/Update administrator

The following table describes the labels in this screen.

Table 203 Organization-wide > Administrator: Create/Update administrator

LABEL	DESCRIPTION
Name	Enter a descriptive name for the administrator account.
Email	Enter the email address of the administrator account, which is used to log into NCC. This field is read-only if you are editing an existing account.
Description	Enter a description for this administrator. You can use alphanumeric and ()+/:=?!*#@\$_%- characters, and it can be up to 60 characters long.
Activated	Click the switch to the right to enable the account. Alternatively, click the switch to the left to disable the account.
Validity	Specify how long the account is valid. Choices are: Never expire – select this if the account never expire. Expire on – select this to specify the date the account can no longer access the organization. Select Delete this admin when expired to remove this account from the administrator list when the Expire on date has been reached. Otherwise, this account will remain on the administrator list with an inactivated status.

Table 203 Organization-wide > Administrator: Create/Update administrator (continued)

LABEL	DESCRIPTION
Organization access	Set the administrator account's access to the organization. When an administrator account has read and write (Full) access, the administrator can create or delete other administrator accounts, create or delete a site, and add or renew licenses for Nebula Devices in the organization. Note: The administrator account you use to create an organization is the organization creator account that has full access to that organization. The organization creator account cannot be deleted by other organization administrators. If you select Read-only, the administrator account can be the organization administrator (that has no write access to the organization) and also be a site administrator. If you select None, the administrator account can only be a site administrator.
Delegate owner's authority	This setting is only available when Organization access is set to Full. Select this setting to grant delegate owner privileges to an organization full administrator account. An account with delegate owner privileges can perform all of the same actions as the organization owner, except for the following: • Delete organization • Transfer organization ownership • Assign delegate owner privileges to an administrator account.
YES, I want to do it.	The checkbox displays only when an administrator that has full access to the organization disables the Activated switch to disable his/her own account. Note: After you select the checkbox and click Update admin, you lose administrator privileges and cannot manage the organization again. If you have other organizations created on your account, you can click and select another organization to manage in the MSP Portal screen.
Site	This field is available only when you set the account's organization access to Read-only or None. Select the site to which you want to set the account's access.
Privilege	This field is available only when you set the account's organization access to Read-only or None. Set the administrator account's access to the site. You can select from Read-only, Monitor-only, Guest Ambassador, Installer and Full (read and write). An administrator account that has Guest Ambassador access can create, remove or manage guest accounts using the Cloud authentication screen (see Section on page 780). Installer access allows an administrator to register Nebula Devices at this site.
Add	Click this button to create a new entry in order to configure the account's access to another site.
Close	Click this button to exit this screen without saving.
Create admin/ Update admin	Click this button to save your changes and close the screen.

12.4 Organization-wide Manage

Use the Organization-wide manage menus to create new sites, register or unregister a Nebula Device, change organization general settings, and manage licenses, user accounts, administrator accounts or VPN members in the organization.


12.4.1 Organization Portal

This screen shows you the site locations on a Google map and the summary of sites, site tags and connected Nebula Devices for the selected organization.

Note: The Nebula Accessories will not display on Google map.

Click Organization-wide > Organization-wide manage > Organization portal to access this screen.

Figure 272 Organization-wide > Organization-wide manage > Organization portal

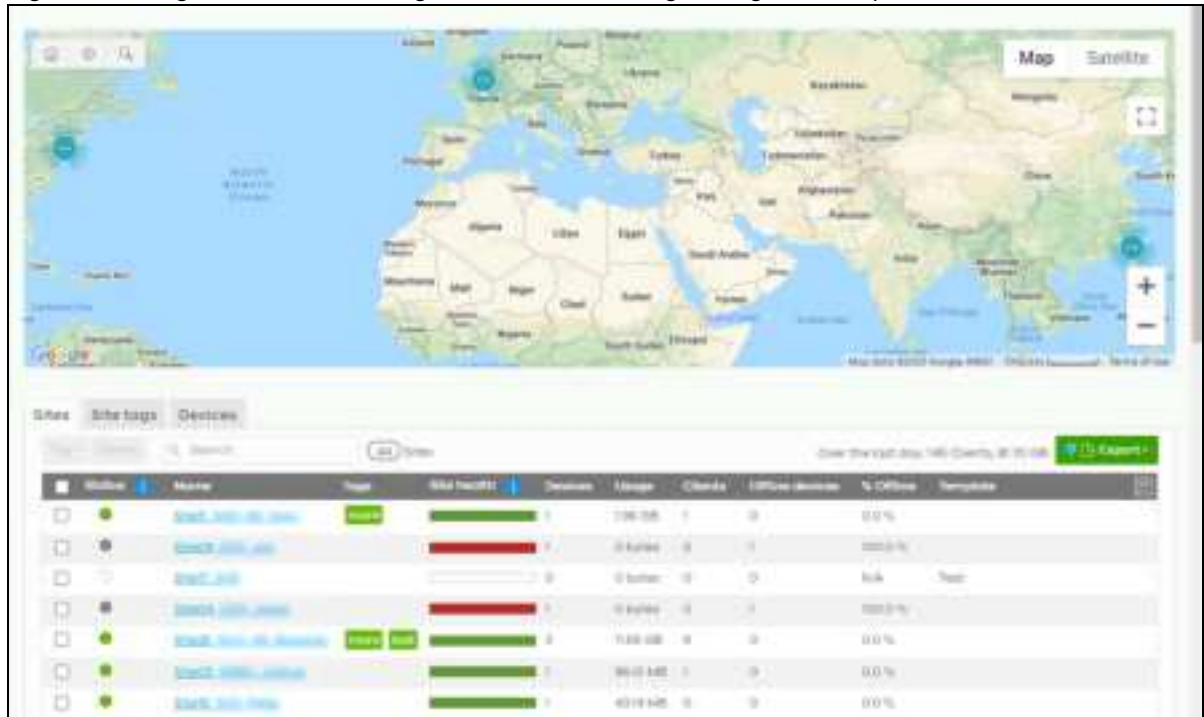

12.4.1.1 Sites

Click the Sites tab in the Overview screen to view detailed information of the sites which are associated with the selected organization.

Figure 273 Organization-wide > Organization-wide manage > Organization portal: Sites

Name	Location	Usage	Tag	Site health	Device	Clients	% Uptime
Site1: [Name]	[Location]	[Usage]	[Tag]	[Health]	[Device]	[Clients]	[Uptime]
Site2: [Name]	[Location]	[Usage]	[Tag]	[Health]	[Device]	[Clients]	[Uptime]
Site3: [Name]	[Location]	[Usage]	[Tag]	[Health]	[Device]	[Clients]	[Uptime]
Site4: [Name]	[Location]	[Usage]	[Tag]	[Health]	[Device]	[Clients]	[Uptime]
Site5: [Name]	[Location]	[Usage]	[Tag]	[Health]	[Device]	[Clients]	[Uptime]
Site6: [Name]	[Location]	[Usage]	[Tag]	[Health]	[Device]	[Clients]	[Uptime]
Site7: [Name]	[Location]	[Usage]	[Tag]	[Health]	[Device]	[Clients]	[Uptime]
Site8: [Name]	[Location]	[Usage]	[Tag]	[Health]	[Device]	[Clients]	[Uptime]
Site9: [Name]	[Location]	[Usage]	[Tag]	[Health]	[Device]	[Clients]	[Uptime]
Site10: [Name]	[Location]	[Usage]	[Tag]	[Health]	[Device]	[Clients]	[Uptime]

The following table describes the labels in this screen.

Table 204 Organization-wide > Organization-wide manage > Organization portal: Sites

LABEL	DESCRIPTION
Tag	Select one or multiple sites and click this button to create a new tag for the sites or delete an existing tag.
Delete	Select the sites and click this button to remove it.
Search	Enter a key word as the filter criteria to filter the list of sites.
Sites	This shows the number of sites in this organization.
Over the last day	This shows how many clients are associated with the sites in this organization and the total amount of data transmitted or received by the clients in the past day.
Export	Click this button to save the site list as a CSV or XML file to your computer.
Status	This shows the status of Nebula Devices in the site. - Green: All Nebula Devices are online and have no alerts. - Amber: Some Nebula Devices have alerts. - Red: Some Nebula Devices are offline. - Gray: All Nebula Devices have been offline for 7 days or more. - White: No Nebula Devices.
Name	This shows the descriptive name of the site.
Usage	This shows the amount of data consumed by the site. Note: This shows '–' for Nebula Accessories.
Clients	This shows the number of clients connected to Nebula Devices in the site. Note: This shows '–' for Nebula Accessories.
Tag	This shows the user-specified tag that is added to the site.
Site health	This shows the percentage of uptime in a given time interval to indicate the site's network availability. - Green: 95 – 100% network uptime - Dark green: 75 – 95% network uptime - Brown: 50 – 75% network uptime - Red: < 50% network uptime - Grey: No uptime data
Device	This shows the total number of Nebula Devices deployed in the site.

Table 204 Organization-wide > Organization-wide manage > Organization portal: Sites (continued)

LABEL	DESCRIPTION
Offline device	This shows the number of Nebula Devices which are added to the site but not accessible by the NCC now.
% Offline	This shows what percentage of the connected clients are currently offline.
	Click this icon to display a greater or lesser number of configuration fields.

12.4.1.2 Site tags

Click the Site tags tab in the Overview screen to view the tags created and added to the sites for monitoring or management purposes.

Figure 274 Organization-wide > Organization-wide manage > Organization portal: Site tags



The following table describes the labels in this screen.

Table 205 Organization-wide > Organization-wide manage > Organization portal: Site tags

LABEL	DESCRIPTION
Search	Enter a key word as the filter criteria to filter the list of tags.
Site tags	This shows the number of site tags created and added to the sites in this organization.
Over the last day	This shows the number of clients associated with the sites in this organization and the total amount of data transmitted or received by the clients in the past day.
Export	Click this button to save the tag list as a CSV or XML file to your computer.
Status	This shows the status of Nebula Devices in sites with the specified tag. - Green: All Nebula Devices are online and have no alerts. - Amber: Some Nebula Devices have alerts. - Red: Some Nebula Devices are offline. - Gray: All Nebula Devices have been offline for 7 days or more. - White: No Nebula Devices.
Tag	This shows the name of the specified tag.
Site	This shows the total number of sites with the specified tag.
Offline device	This shows the number of offline Nebula Devices in all sites with the specified tag.
Clients	This shows the number of clients in sites with the specified tag. Note: This shows '-' for Nebula Accessories.
Usage	This shows the total amount of data consumed in all sites with the specified tag. Note: This shows '-' for Nebula Accessories.
Device	This shows the total number of Nebula Devices deployed to all sites with the specified tag.
Offline site	This shows the number of offline sites with the specified tag.
% Offline	This shows what percentage of all sites with the specified tag are currently offline.
	Click this icon to display a greater or lesser number of configuration fields.

12.4.1.3 Devices

Click the Devices tab in the Organization portal screen to view the detailed information about Nebula Devices which are connected to the sites in the selected organization.

Figure 275 Organization-wide > Organization-wide manage > Organization portal: Devices

Client	MAC address	Model	Name	Site	Status	Tag	Usage
0	88EC.A3B4.CD9F	NS050	Staff NS050	Staff NS050	Green		0 bytes
0	88EC.A3B4.CD9F	NS050	Staff NS050	Staff NS050	Red		0 bytes
0	88EC.A3B4.CD9F	NS050	Staff NS050	Staff NS050	Red		0 bytes
0	88EC.A3B4.CD9F	NS050	Staff NS050	Staff NS050	Green		0 bytes
0	88EC.A3B4.CD9F	NSW200-28P	Office NSW200	Office NSW200	Green		0 bytes
0	88EC.A3B4.CD9F	NSW100-ESP	Home NSW100	Home NSW100	Green	Home	2.51 GB
0	88EC.A3B4.CD9F	NSW100-ESP	Home NSW100	Home NSW100	Green		2.59 GB
0	88EC.A3B4.CD9F	NS050	Staff NS050	Staff NS050	Green		0 bytes
0	88EC.A3B4.CD9F	NS050	Staff NS050	Staff NS050	Red		0 bytes

The following table describes the labels in this screen.

Table 206 Organization-wide > Organization-wide manage > Organization portal: Devices

LABEL	DESCRIPTION
Search	Enter a key word as the filter criteria to filter the list of connected Nebula Devices.
Devices	This shows the number of Nebula Devices assigned to the sites in this organization.
Over the last day	This shows the number of clients associated with the sites in this organization and the total amount of data transmitted or received by the clients in the past day.
Export	Click this button to save the Nebula Device list as a CSV or XML file to your computer.
Status	This shows the status of the Nebula Device. - Green: The Nebula Device is online. - Amber: The Nebula Device recently had alerts. - Red: The Nebula Device was recently offline. - Gray: The Nebula Device has been offline for more than 6 days.
Model	This shows the model number of the Nebula Device.
Name	This shows the descriptive name of the Nebula Device.
Site	This shows the name of the site to which the Nebula Device is connected.
MAC address	This shows the MAC address of the Nebula Device.
Tag	This shows the user-specified tag for the Nebula Device.
Clients	This shows the number of the clients which are currently connected to the Nebula Device. Note: This shows '-' for Accessories.

Table 206 Organization-wide > Organization-wide manage > Organization portal: Devices (continued)

LABEL	DESCRIPTION
Usage	This shows the amount of data consumed by the Nebula Device. Note: This shows '-' for Accessories.
Serial number	This shows the serial number of the Nebula Device.
Configuration status	This shows whether the configuration on the Nebula Device is up-to-date.
Connectivity	This shows the Nebula Device connection status. The red time slot indicates the connection to the NCC is down, and the green time slot indicates the connection is up. Move the cursor over a time slot to see the actual date and time when a Nebula Device is connected or disconnected.
Public IP	This shows the global (WAN) IP address of the Nebula Device.
	Click this icon to display a greater or lesser number of configuration fields.

12.4.2 Configuration Management

Configuration synchronization allows you to easily copy configurations from one site or Nebula Device to another. Use this screen to synchronize the configuration between sites or switch ports. You can also back up the current configurations for sites or switches to the NCC and restore the configuration at a later date.

Click Organization-wide > Organization-wide manage > Configuration management to access this screen.

Figure 276 Organization-wide > Organization-wide manage > Configuration management

Configuration management

Synchronization

From source site:

Settings:

- ☐ 802s
- ☐ Switch port profile
The MAC address associated with the port profile will also be synchronized.
- ☒ Switch Port profiles

Profile:

To device:

[What will be synchronized?](#)

When synchronizing configuration, NCC will match the selected source profile with those in the destination site based on the following criteria:

- **802 profile:** Matching by 802 index number
- **Port profile and Port schedule:** Matching by profile name

If a matching profile is found, the data in target site(s) will be overwritten by the source site profile. If no matching profile is found, the profile will be added to the target site(s).

Note:
When synchronizing an 802 profile, the associated CoS and QoS settings will also be synchronized.
When synchronizing a port profile, the associated port schedule will also be synchronized.
After synchronization, the auto status of the Port profile will be set to Open in the target site(s).

[Synchronize](#)

Switch settings replicate

From source device:

To device(s):

☐ include uplink port settings

[What will be replicated?](#)

The switch settings replicate copies the settings of each port of the source device into the same port number of the target device(s). (Note: advanced settings, STP bridge priority and port mirroring will also be copied. Source and target devices should be the same model.)

[Replicate](#)

Backup & restore

Global settings

Backup	Description	Date (UTC)	Action
1	element	2020-08-28 07:00:41	view delete
2	test	2020-08-28 07:00:46	view delete
Automatic backup		2020-08-28 07:00:46	delete

[Create](#)

Restore from backup:

Restore to device:

[What's a backup?](#)

This section allows you to create a compressed backup of all the data under the organization and store it in the NCC cloud server.

It is possible to perform a restore per site or to multiple sites at the same time. Be aware that the site settings will be totally overwritten after the restoration.

Switch settings

Backup	Switch	Description	Model	Date (UTC)	Action
No captured backup record yet!					

[Create](#)

[What's a backup?](#)

[Restore](#)

The following table describes the labels in this screen.

Table 207 Organization-wide > Organization-wide manage > Configuration management

LABEL	DESCRIPTION
Synchronization	
From source site	Select the site from which you want to copy its site configuration to other sites.
Settings	Specify whether Switch port profiles, Switch PoE schedule, or SSID settings of a site will be propagated to other sites. Click How settings are synchronized? to view detailed information.
Profile	When SSIDs is selected in Settings and before synchronizing in NCC, the SSID index number (No.) configured in Site-wide > Configure > Access points / Security router > SSID settings of the source and destination sites should match. Note: The following are not synchronized when SSIDs is selected: - The Tag configured in Site-wide > Configure > Access points / Security router > SSID setting. Note: The SSIDs option is not available when: - AP grouping in Site-wide > Configure > Access points > AP & port settings is enabled - An SCR 50AXE is registered in the site When Switch port profiles or Switch PoE schedule is selected in Settings and before synchronizing in NCC, the Profile name configured in Site-wide > Configure > Switches > Port profiles > Create of the source and destination sites should match. Note: The corresponding PoE schedule configured in Site-wide > Configure > Switches > Port profiles is also synchronized when a Switch port profile is selected. Note: After synchronization, the Auth(entication). policy of the target site(s) will be Open (no port authentication) in Site-wide > Configure > Switches > Switch ports when the Type is Access in Site-wide > Configure > Switches > Port profiles. Note: You can synchronize more than 5 PoE schedules, but you can only apply up to 5 PoE schedules to a Nebula Switch. For example, Switch A applies a PoE schedule to ports 1-5. Switch B applies a PoE schedule to ports 6-10. When a matching SSID, port profile, or PoE schedule is found, the destination site's configuration will be overwritten by the source site's configuration. Alternatively, if no matching SSID, port profile, or PoE schedule is found, the destination site's configuration will be added to the source site's configuration.
To Site(s)	Select one or more sites to which you want to import the copied site configuration. You can also select the site tags created using the Organization-wide > Organization-wide manage > Organization portal: Sites screen.
Sync	Click this button to start synchronizing configuration settings between the selected sites.
Switch settings replicate	
From source device	Select the Nebula Switch from which you want to copy its Switch port settings to other Nebula Devices.
To device(s)	Select one or more Nebula Switches to which you want to import the copied Switch port settings. Note: Only Nebula Switches of the same model can synchronize. Both Switches should be registered to a site in the organization.


Table 207 Organization-wide > Organization-wide manage > Configuration management (continued)

LABEL	DESCRIPTION
Replicate	Click this button to start replicating the Switch port settings between the selected Nebula Devices.
Backup & Restore Note: To back up or restore a previously saved configuration, your administrator account should have full access to the organization. Note: The Security Firewall(s) in Cloud Monitoring mode cannot use the back up or restore function.	
Site(s) settings	You can create up to three site configuration backups for the organization. The NCC automatically creates and saves one backup when you perform configuration restoration. The automatic backup cannot be deleted.
Backup	This shows the index number of the site configuration backup.
Description	This shows the descriptive name of the backup. Note: When you click Add to create a new backup, you need to enter a name for the backup in order to save it to the NCC.
Date (UTC)	This shows the date and time the backup was saved on the NCC server.
Admin	This shows the name of the administrator account who performed the backup.
Remove	Click the remove icon to delete the backup.
Add	Click this button to create a new configuration backup of all the sites in the organization.
Restore from backup	Select the backup you want to restore.
Restore to site(s)	Select one or more sites to which you want to restore the specified configuration backup.
Restore	Click this button to overwrite the settings of the sites with the selected configuration backup.
Switch settings	At the time of writing, only one backup is allowed per Nebula Device.
Backup	This shows the index number of the Switch configuration backup.
Switch	This shows the name of the Switch.
Description	This shows the descriptive name of the backup. Note: When you click Add to create a new backup, you need to enter a name for the backup in order to save it to the NCC.
Model	This shows the model number of the Switch.
Date (UTC)	This shows the date and time the backup was saved on the NCC server.
Admin	This shows the name of the administrator account who performed the backup.
Remove	Click the remove icon to delete the backup.
Add	Click this button to create a new configuration backup of a specific Switch. This button is selectable only when you have at least one Switch in the organization.
Restore from backup	Select the backup you want to restore.
Restore to device(s)	Select one or more Nebula Switches to which you want to restore the specified configuration backup. Note: You can restore the backup to the same Switch or Switches of the same model and registered to a site in the organization.
Restore	Click this button to overwrite the settings of the Switches with the selected configuration backup.

Synchronization Example

In the following example, SSID 3 and SSID 5 of source Site-A are selected for synchronization with destination Site-B. After synchronization, SSID 3 and SSID 5 are added to Site-B. Additionally, the gaps in SSID 2 and SSID 4 are automatically filled with the default SSID settings, but are disabled. See [Section 5.3.1 on page 340](#) for the default SSID settings.

Figure 277 New SSIDs Created to Fill the Gaps After Synchronization

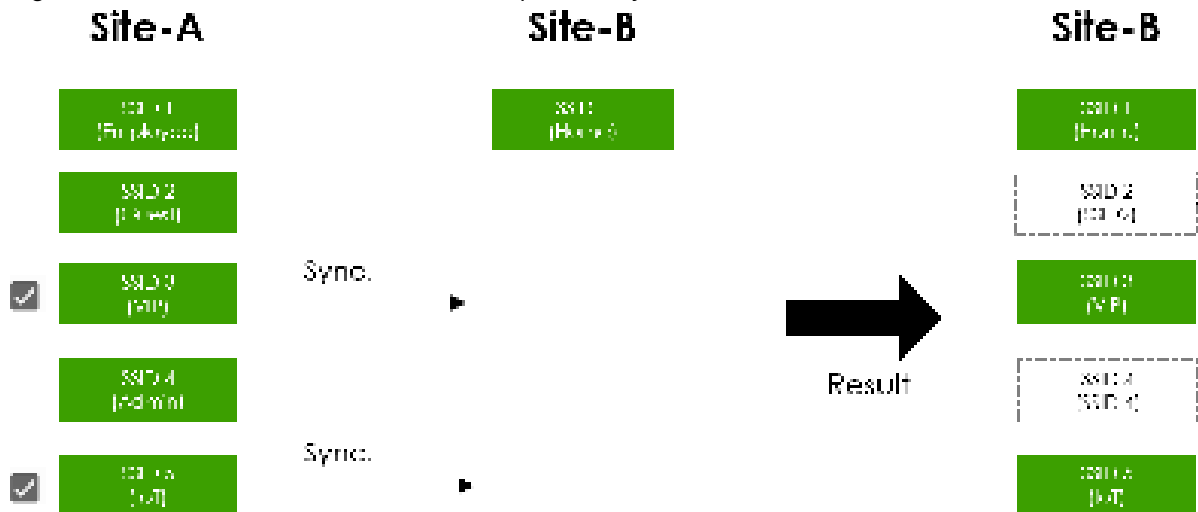

12.4.3 Configuration Templates

A configuration template is a virtual site. The settings you configured in a template will apply to the real sites which are bound to the template. If you do not want to apply any new settings from the template to a site, just unbind that site. If you want to configure some specific settings directly in a site after the site is bound to a template, turn on the local override function (see [Section 12.4.3.3 on page 744](#)).

Use this screen to create and manage configuration templates. You can then bind or unbind a site from the template (see [Section 12.4.3.1 on page 743](#)).

Note: A site can only be bound to one template. The same template can be used by multiple sites. The sites and the template should belong to the same organization for binding.

Note: If the NCC service is downgraded from Nebula Professional Pack to Nebula Base, all the sites will be unbound from the templates but retain the settings already applied from the template.

Note: The settings from the Configuration templates will not apply to Security Firewall(s) in Cloud Monitoring mode.

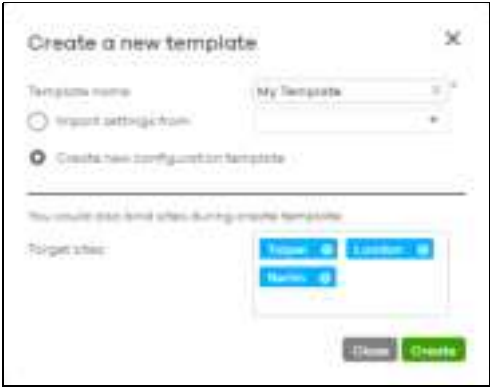
Click Organization-wide > Organization-wide manage > Configuration templates to access this screen.

Figure 278 Organization-wide > Organization-wide manage > Configuration templates



The following table describes the labels in this screen.

Table 208 Organization-wide > Organization-wide manage > Configuration templates

LABEL	DESCRIPTION
Create	Click this button to create a new configuration template. You can copy settings from an existing site or configuration template, or have a new template with default settings. It is optional to bind one or more sites to the template when you are creating a template. 
Delete	Click this button to remove the selected templates. A window pops up asking you to confirm that you want to delete the templates. If you remove a template that is being used by a site, the site will be unbound from the template automatically and retain the settings previously applied from the template. 
Search	Enter a key word as the filter criteria to filter the list of templates.
Templates	This shows how many templates match the filter criteria and how many templates are created in total.
Name	This shows the name of the template.
# Bound sites	This shows the number of the sites bound to the template.
Bound sites	This shows the name of the sites bound to the template.

12.4.3.1 Site Binding

Use this screen to bind or unbind a site from a template. Click an existing template from the list in the Organization-wide > Organization-wide manage > Configuration templates screen to access this screen. To go back to the previous screen, click the Configuration templates list link.

Figure 279 Organization-wide > Organization-wide manage > Configuration templates: Template



The following table describes the labels in this screen.

Table 209 Organization-wide > Organization-wide manage > Configuration templates: Template

LABEL	DESCRIPTION
Bind additional site	Click this button to bind more sites to the template. A window displays. Select the name of the sites in the Target sites field and click Bind. 
Unbind	Click this button to remove the selected sites from the template. The site which is unbound from the template still retains the settings applied from the template.
Search	Enter a key word as the filter criteria to filter the list of sites.
Sites	This shows how many sites match the filter criteria and how many sites are bound to the template in total.
Name	This shows the name of the site bound to the template.
Tag	This shows the tags added to the site.
Device	This shows the number of Nebula Devices which are assigned to the site.
Local override	This shows which settings in the template do not apply to the site.

12.4.3.2 Template settings

An administrator that has full access to the organization can modify the template configurations. To access a template's configuration screen, select the template name from the Site field in the NCC title bar. It also shows the number of sites that are bound to the template on each configuration screen.

Note: At the time of writing, you can use a template to configure site-wide, Switches, and access points settings.

12.4.3.3 Local Override

When a site is bound to a template, you can see the name of the template on the site's configuration screens (which are also available in a template and can be configured).

There is also an option to make the changes you made locally to a site persist. If you select the override checkbox of the site's configuration screen, all the configuration screens under the same menu tab (Site-Wide or Switches) are configurable. Settings in these screens will not be affected and modified by the template. If the override checkbox is not selected, any changes of the same configuration screen in the template apply to the site.

12.4.3.4 Switch Port Profile and Configuration

Just as a configuration template is a virtual site, so is a profile to a Switch. The settings you configured in a profile will apply to the Switches which are bound to the profile. If you do not want to apply any new settings from the profile to a Switch, just unbind that Switch. If you want to configure some specific settings directly in a Switch (for example, a port's Broadcast (pps) value) (see [Section 6.3.1.1 on page 390](#) for details) after the Switch is bound to a profile, turn on the local override function (see [Section 12.4.3.3 on page 744](#)).

12.4.4 VPN Orchestrator

VPN Orchestrator enables you to automatically create Virtual Private Network (VPN) connections between sites within an organization. This allows the Security Gateway of each site and the Nebula Devices behind it to communicate securely.


Note: You can manually create VPN connections between sites at Site-wide > Configure > Security Gateway > Site-to-Site VPN or Site-wide > Configure > Firewall > Site-to-Site VPN.

12.4.4.1 Topology Overview

There are two topologies you can use when creating a site-to-site VPN.

- Fully Meshed: In a fully-meshed VPN topology (1 in the figure below), there is a VPN connection between every two sites in the organization. Sites can communicate directly with each other, but having permanent tunnels between every site takes up more resources.
- Hub-and-spoke: In a hub-and-spoke topology (2 in the figure below), every site is either a hub or a spoke. There is a VPN connection between each spoke site (B, C, D, and E) and the hub site (A). Traffic from each spoke site must first go through the hub site. If the hub site fails, the site-to-site VPN network fails. To avoid this, you can assign more than one hub site.

Figure 280 VPN Topologies (Fully Meshed and Hub-and-Spoke)

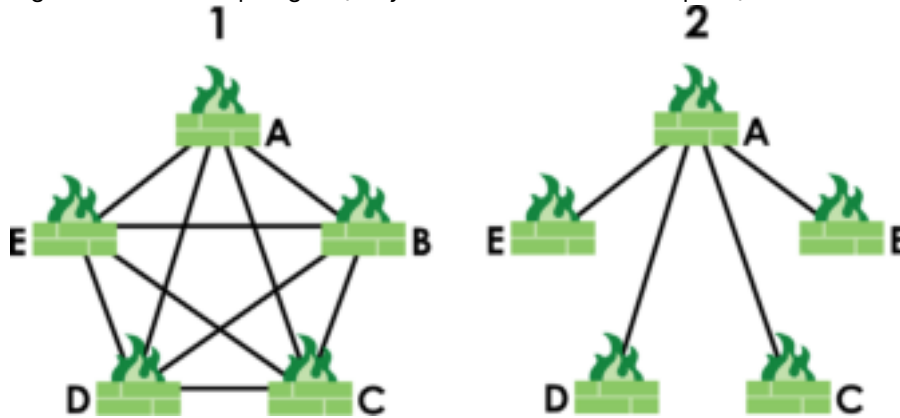

12.4.4.2 VPN Areas

An organization can contain multiple VPN areas. Each VPN area is an independent VPN with its own sites, settings, and topology. Every organization has a default VPN area called Default, which cannot be deleted. Sites in different VPN areas within the same organization can communicate if you enable the Area communication setting.

12.4.4.3 VPN Orchestrator Screen

Use this screen to manage and create site-to-site VPNs within the current organization. Click Organization-wide > Organization-wide manage > VPN orchestrator to access this screen.

Note: The Security Firewall(s) in Cloud Monitoring mode will not show on the list and map.

Figure 281 Organization-wide > Organization-wide manage > VPN orchestrator

VPN orchestrator

VPN Topology

VPN Area Overview

VPN member

VPN Area: Default

Topology: Hub-and-Spoke

Search for Branch VPN: ☒

Security gateway: security gateway

Hub site: 0

Spoke site: 4

Site	Model	VPN enable	Subnet(s)	NAT bypassed	Area communication	Gateway status	VPN state
☐ site	USD-FLX-100	☐	192.168.100.0/24 192.168.101.0/24	☐	☐	Online	Disconn
☐ site	H00000	☐		☐	☐	Offline	Disconn
☐ site	USD20-VPN	☒	192.168.100.0/24 192.168.101.0/24	want to bypass? ☐	☐	Offline	Disconn
☐ site	USD-FLX-2000	☐	192.168.100.0/24 192.168.101.0/24	☐	☐	Offline	Disconn

Auto-link VPN [Auto-link](#)

Enabled	Name	Public IP	Private subnet	Port policy	Pre-shared secret	Action
☒				Default		

[+ Add](#)

The following table describes the labels in this screen.

Table 210 Organization-wide > Organization-wide manage > VPN orchestrator

LABEL	DESCRIPTION
VPN Topology	
VPN Area	Select the name of a VPN area to view on the map. Select Overview to view all VPN areas in this organization on the map.
VPN Member	
VPN Area	Select the name of a VPN to configure. Select + Create VPN area to create a new VPN within the organization.
	Click the remove icon to delete the VPN area.
Topology	Click this to select a topology for the VPN area. For details on topologies, see Section 12.4.4.1 on page 744 . Select Disable to disable VPN connections for all sites in the VPN area.
The following settings are shown when Topology is set to Hub-and-Spoke.	
Branch to Branch VPN	Enable this to allow spoke sites to communicate with each other in the VPN area. When disabled, spoke sites can only communicate with hub sites.
Spoke	Select one or more sites and then click this to assign the sites as spokes. The sites are added to the spoke list.
Hub	Select one or more sites and then click this to assign the sites as hubs. The sites are added to the hubs list.
Security Gateway	Enter the name of a site or Nebula Device to filter the list of sites.
Hub site	This shows the number of hub site. Note: Only one hub site is supported.
Spoke site: N	This shows the number of spoke sites (N) in the spoke list.
#	This shows the priority of the hub site. If the VPN area contains multiple hub sites, then the spoke sites always send traffic through the available hub with the highest priority. You can change the priority of a site by clicking the move icon () , and then dragging the site up or down in the list.
Site	This shows the name of the site in the VPN area. Click the name to go to the site's VPN configuration page (Site-wide > Configure > Firewall > Site-to-Site VPN).
Model	This shows the model of the site's Security Appliance device.
VPN enable	Click this to enable (join) or disable (leave) site-to-site VPN on the site's Security Appliance. If you disable this setting, the site will leave the VPN area.
Subnet(s)	This shows the IP subnets of all LAN interfaces behind the site's Security Appliance.
NAT traversal	If the Security Appliance is behind a NAT router, enter the public IP address or the domain name that is configured and mapped to the Security Appliance on the NAT router.
Area communication	Enable this to allow the site to communicate with sites in different VPN areas within the organization. If Topology is set to Site-to-Site, then you must assign at least one site in each VPN area as the Area Leader. The area leaders create VPN tunnels between VPN areas.
Gateway status	This shows whether the site's Security Appliance is currently online.
VPN status	This shows whether the VPN is currently connected.
WAN status	This shows the IP address of the WAN interface and the public IP address of the site's Security Appliance.

Table 210 Organization-wide > Organization-wide manage > VPN orchestrator (continued)

LABEL	DESCRIPTION
Auto-Link VPN	Configure this section to add a non-Nebula gateway, such as an on-premise ZyWALL series device or non-Zyxel gateway, to the VPN area.
+ Add	Click this button to add a non-Nebula gateway to the VPN area.
Enabled	Select the checkbox to enable VPN connections to the non-Nebula gateway.
Name	Enter the name of the non-Nebula gateway.
Public IP	Enter the public IP address of the non-Nebula gateway. The public IP address supports both FQDN (Fully Qualified Domain Name) and IP formats.
Private Subnet	Enter the IP subnet that will be used for VPN connections. The IP range must be reachable from other Nebula Devices in the VPN area.
IPSec policy	Click to select a pre-defined policy or have a custom one. See Section 9.3.6.1 on page 665 for detailed information.
Pre-shared secret	Enter a pre-shared key (password). The Nebula Security Appliance and peer gateway use the key to identify each other when they negotiate the IKE SA.
Address (physical location)	Enter the address (physical location) of the remote device. You can find this on the VPN Topology section on this screen.
	Click the remove icon to delete the entry.

12.4.5 Security Profile Sync

Security profile sync allows you to share the same Security Firewall device security service settings with multiple sites in an organization. This replaces the Unified Threat Management (UTM) settings configured for each site at Site-wide > Configure > Firewall > Security service.

12.4.5.1 Configuring Security Profile Sync

Follow the steps below to enable security profile sync in an organization.

- 1 Go to Organization-wide > Organization-wide manage > Security profile sync. Select Enabled, and then under Sync sites add the sites that you want to share security settings.

Note: You can only add sites that have a Security Firewall device.

- 2 Configure security service settings for Content Filter, Application Patrol, DNS/URL Threat Filter, IP Reputation, Anti-Malware, Sandboxing, and Intrusion Prevention System (IPS). Then click Save. All security settings are synced to the selected sites.
- 3 If you change the settings in the Security profile sync screen, the changes will be copied to all selected sites.
- 4 If you want to modify security settings for an individual site, go to Site-wide > Configure > Firewall > Security service and select Override security profile sync.

12.4.5.2 Security Profile Sync Screen

Use this screen to enable and configure security profile sync. Click Organization-wide > Organization-wide manage > Security profile sync to access this screen.

Figure 282 Organization-wide > Organization-wide manage > Security Profile Sync

Security profile sync

Security profile sync

Enabled ☒

Sync status: Sync Now

Content Filter [\(update list\)](#)

Drop connection when there is an HTTP connection with SSL error (previous window) ☒

Default Access Message: Web access is restricted. Please contact the administrator.

Redirect URL:

Name	Description
1. BPP	Business Productivity Protection
2. COP	Children's Online Protection

+ Add

Application Patrol [\(update list\)](#)

Application profiles:

Name	Description
1. default_profile	

+ Add

DNS/URL Threat Filter [\(update list\)](#)

Log ☒

DNS Threat Filter ☒

DNS Threat Filter action: Redirect

DNS Threat Filter Redirect IP: Default

URL Threat Filter ☒

URL Threat Filter action: Block

URL Threat Filter Default Access Message: Web access is restricted. Please contact the administrator.

URL Threat Filter Redirect URL:

Real Threat Category:

Category list:

☒ Anonymous	☒ Browser Exploits	☒ Malicious Downloads
☒ Malicious Sites	☒ Phishing	☒ Spam/URLs
☒ Spyware/Adware/Keyloggers		

Block list:

Allow list:

IP Reputation [Learn More](#)

Enabled ☒

Log ☒

Policy Block

Prevent level threshold Medium and above

Test Category

Category Set

- ☒ Anonymous Proxies
- ☒ Denial of Service
- ☒ Eutrope
- ☒ Negative Reputation
- ☒ Scamware
- ☒ Spam Sources
- ☒ Tor Proxies
- ☒ Web Attacks
- ☒ Phishing
- ☒ Botnets

Block list

IP list

Allow list

IP list

Anti-Malware [Learn More](#)

Enabled ☒

Log ☒

Scan mode

Whisper mode

Express mode

Hybrid mode

Model set

Cloud Query

File Types

Block list

File Pattern

Allow list

File Pattern

File Pattern

Sandboxing [Learn More](#)

Enabled ☒

Log ☒

Policy allow

Inspect selected downloaded files ☒

File Types to Scan

ZIP Archives (.zip)

Executable Files

All IPsec Encrypted...

Microsoft Word...

PDF Documents (.pdf)

RTF Documents (.rtf)

File Types

Intrusion Prevention System (IPS) [Learn More](#)

Enabled ☒

Mode

Detection

Prevention



The following table describes the labels in this screen.

Table 211 Organization-wide > Organization-wide manage > Security profile sync

LABEL	DESCRIPTION
Security profile sync	
Enabled	Click this to enable or disable security profile sync for the organization.
Sync sites	Select one or more sites that you want to apply the following security settings configured on this screen: • Content Filter • Application Patrol • DNS/URL Threat Filter • IP Reputation • Anti-Malware • Sandboxing • Intrusion Prevention System (IPS) • External block list (for IP Reputation and DNS/URL Threat Filter) Alternatively, select All sites to apply the security settings to all sites in the organization. Note: You can only add sites that have a Security Firewall device.
Content Filter	
Drop connection when there is an HTTPS connection with SSL v3 (or previous version)	Select On to have the Nebula Security Firewall block HTTPS web pages using SSL V3 or a previous version.
Denied Access Message	Enter a message to be displayed when content filter blocks access to a web page. Use up to 127 characters (0–9a–zA–Z;/?:@&=+\$\._!~*()'%, "). For example, "Access to this web page is not allowed. Please contact the network administrator". It is also possible to leave this field blank if you have a URL specified in the Redirect URL field. In this case if the content filter blocks access to a web page, the Nebula Security Firewall just opens the web page you specified without showing a denied access message.

Table 211 Organization-wide > Organization-wide manage > Security profile sync (continued)

LABEL	DESCRIPTION
Redirect URL	Enter the URL of the web page to which you want to send users when their web access is blocked by content filter. The web page you specify here opens in a new frame below the denied access message. Use "http://" or "https://" followed by up to 262 characters (0–9a–zA–Z;/?:@&=+\$\._!~*')(%). For example, http://192.168.1.17/blocked access.
Enabled	Select the checkbox to enable the content filter profile.
Description	Enter a description for this profile.
	Click this icon to change the profile settings.
	Click this icon to remove the profile.
Add	Click this to create a content filter profile. See Section on page 594 for more information.
Application Patrol	
Application profiles	
Name	Enter a name for this profile for identification purposes.
Description	Enter a description for this profile.
	Click this icon to change the profile settings.
	Click this icon to remove the profile.
Add	Click this icon to create an application patrol profile. See Section on page 596 for more information.
DNS/URL Threat Filter	
Log	Select whether to have the Nebula Device generate a log (log), log and alert (log alert) or not (no) when the policy is matched to the criteria listed above.
DNS Threat Filter	Select On to turn on the rule. Otherwise, select Off to turn off the rule.
DNS Threat Filter policy	Select Pass to have the Nebula Device allow the DNS query packet and not reply with a DNS reply packet containing a default or custom-defined IP address. Select Redirect to have the Nebula Device reply with a DNS reply packet containing a default or custom-defined IP address.
DNS Threat Filter Redirect IP	Enter the IP address to have the Nebula Device reply with a DNS reply packet containing a default or custom-defined IP address when a DNS query packet contains an FQDN with a bad reputation. The default IP is the dnsft.cloud.zyxel.com IP address. If you select a custom-defined IP, then enter a valid IPv4 address in the text box.
URL Threat Filter	Select On to turn on the rule. Otherwise, select Off to turn off the rule.
URL Threat Filter Policy	Select Pass to allow users to access web pages that the external web filtering service has not categorized. Select Block to prevent users from accessing web pages that the external web filtering service has not categorized. When the external database content filter blocks access to a web page, it displays the denied access message that you configured in the Content Filter General screen along with the category of the blocked web page. Select Warn to display a warning message before allowing users to access web pages that the external web filtering service has not categorized.
URL Threat Filter Denied Access Message	Enter a message to be displayed when content filter blocks access to a web page. Use up to 127 characters (0–9a–zA–Z;/?:@&=+\$\._!~*')(%),"). For example, "Access to this web page is not allowed. Please contact the network administrator". It is also possible to leave this field blank if you have a URL specified in the Redirect URL field. In this case if the content filter blocks access to a web page, the Nebula Device just opens the web page you specified without showing a denied access message.

Table 211 Organization-wide > Organization-wide manage > Security profile sync (continued)

LABEL	DESCRIPTION
URL Threat Filter Redirect URL	Enter the URL of the web page to which you want to send users when their web access is blocked by content filter. The web page you specify here opens in a new frame below the denied access message. Use "http://" or "https://" followed by up to 262 characters (0–9a–zA–Z;/?:@&=+\$\._!~*')%). For example, http://192.168.1.17/blocked access.
Test Threat Category	Enter a URL using http://domain or https://domain and click the Test button to check if the domain belongs to a URL threat category.
Category List	These are categories of web pages based on their content. Select categories in this section to control access to specific types of Internet content.
Block list	Sites that you want to block access to, regardless of their content rating, can be blocked by adding them to this list. Enter host names such as www.bad-site.com into this text field. Do not enter the complete URL of the site – that is, do not include "http://". All sub-domains are also blocked. For example, entering "bad-site.com" also blocks "www.badsite.com", "partner.bad-site.com", "press.bad-site.com", and so on. You can also enter just a top level domain. For example, enter .com to block all .com domains. Use up to 127 characters (0–9 a–z). The casing does not matter.
Allow list	Sites that you want to allow access to, regardless of their content rating, can be allowed by adding them to this list. Enter host names such as www.good-site.com into this text field. Do not enter the complete URL of the site – that is, do not include "http://". All sub-domains are allowed. For example, entering "zyxel.com" also allows "www.zyxel.com", "partner.zyxel.com", "press.zyxel.com", and so on. You can also enter just a top level domain. For example, enter .com to allow all .com domains. Use up to 127 characters (0–9 a–z). The casing does not matter.
IP Reputation	
Enabled	Select this option to turn on IP blocking on the Nebula Device.
Log	Select this option to create a log on the Nebula Device when the packet comes from an IPv4 address with bad reputation.
Policy	Select Pass to have the Nebula Device allow the packet to go through. Select Block to have the Nebula Device deny the packets and send a TCP RST to both the sender and receiver when a packet comes from an IPv4 address with bad reputation.
Threat level threshold	Select the threshold threat level to which the Nebula Device will take action (High, Medium and above, Low and above). The threat level is determined by the IP reputation engine. It grades IPv4 addresses. - High: an IPv4 address that scores 0 to 20 points. - Medium and above: an IPv4 address that scores 0 to 60 points. - Low and above: an IPv4 address that scores 0 to 80 points. For example, a score of "10" will cause the Nebula Device to take action whether you set the Threat level threshold at High, Medium and above, or Low and above. But a score of "61" will not cause the Nebula Device to take any action if you set the Threat level threshold at Medium and above.
Test Category	Enter an IPv4 address of a website, and click the Test button to check if the website associates with suspicious activities that could pose a security threat to users or their computers.
Category list	Select the categories of packets that come from the Internet and are known to pose a security threat to users or their computers.

Table 211 Organization-wide > Organization-wide manage > Security profile sync (continued)

LABEL	DESCRIPTION
Block list	Sites that you want to block access to, regardless of their content rating, can be blocked by adding them to this list. Add the IPv4 addresses that the Nebula Device will block the incoming packets.
Allow list	Sites that you want to allow access to, regardless of their content rating, can be allowed by adding them to this list. Add the IPv4 addresses that the Nebula Device will allow the incoming packets.
Anti-Malware	
Enabled	Select On to turn on the rule. Otherwise, select Off to turn off the rule.
Log	Select whether to have the Nebula Device generate a log when the policy is matched to the criteria listed above.
Scan mode	
Express mode	In this mode you can define which types of files are scanned using the File Type For Scan fields. The Nebula Device then scans files by sending each file's hash value to a cloud database using cloud query. This is the fastest scan mode.
Stream mode	In this mode the Nebula Device scans all files for viruses using its anti-malware signatures to detect known virus patterns. This is the deepest scan mode.
Hybrid mode	In this mode you can define which types of files are scanned using the File Type For Scan fields. The Nebula Device then scans files by sending each file's hash value to a cloud database using cloud query. It also scans files using anti-malware signatures, and Threat Intelligence Machine Learning. This mode combines Express Mode and Stream Mode to offer a balance of speed and security.
Cloud Query	Select the Cloud Query supported file types for the Nebula Device to scan for viruses.
Block list	This field displays the file or encryption pattern of the entry. Enter a file pattern that would cause the Nebula Device to log and modify this file. • Use up to 80 characters. Alphanumeric characters, underscores (_), dashes (-), question marks (?) and asterisks (*) are allowed. • A question mark (?) lets a single character in the file name vary. For example, use "a?.zip" (without the quotation marks) to specify aa.zip, ab.zip and so on. • Wildcards (*) let multiple files match the pattern. For example, use "*a.zip" (without the quotation marks) to specify any file that ends with "a.zip". A file named "testa.zip" would match. There could be any number (of any type) of characters in front of the "a.zip" at the end and the file name would still match. A file named "test.zipa" for example would not match. • A * in the middle of a pattern has the Nebula Device check the beginning and end of the file name and ignore the middle. For example, with "abc*.zip", any file starting with "abc" and ending in ".zip" matches, no matter how many characters are in between. • The whole file name has to match if you do not use a question mark or asterisk. • If you do not use a wildcard, the Nebula Device checks up to the first 80 characters of a file name.

Table 211 Organization-wide > Organization-wide manage > Security profile sync (continued)

LABEL	DESCRIPTION
Allow list	Enter the file or encryption pattern for this entry. Specify a pattern to identify the names of files that the Nebula Device should not scan for viruses. •Use up to 80 characters. Alphanumeric characters, underscores (_), dashes (-), question marks (?) and asterisks (*) are allowed. •A question mark (?) lets a single character in the file name vary. For example, use "a?.zip" (without the quotation marks) to specify aa.zip, ab.zip and so on. •Wildcards (*) let multiple files match the pattern. For example, use "*a.zip" (without the quotation marks) to specify any file that ends with "a.zip". A file named "testa.zip" would match. There could be any number (of any type) of characters in front of the "a.zip" at the end and the file name would still match. A file named "test.zipa" for example would not match. •A * in the middle of a pattern has the Nebula Device check the beginning and end of the file name and ignore the middle. For example, with "abc*.zip", any file starting with "abc" and ending in ".zip" matches, no matter how many characters are in between. •The whole file name has to match if you do not use a question mark or asterisk. •If you do not use a wildcard, the Nebula Device checks up to the first 80 characters of a file name.
Sandboxing	Sandboxing provides a safe environment to separate running programs from your network and host devices. Unknown or untrusted programs/codes are uploaded to the Defend Center and executed within an isolated virtual machine (VM) to monitor and analyze the zero-day malware and advanced persistent threats (APTs) that may evade the Nebula Device's detection, such as anti-malware. Results of cloud sandboxing are sent from the server to the Nebula Device.
Enabled	Select this option to turn on sandboxing on the Nebula Device
Log	Enable this option to allow the Security Firewall to create a log when a suspicious file is detected.
Policy	Specify whether the Nebula Device deletes (Destroy) or forwards (Allow) malicious files. Malicious files are files given a high score for malware characteristics by the Defend Center.
Inspect selected downloaded files	Select this option to have the Nebula Device hold the downloaded file for up to 2 seconds if the downloaded file has never been inspected before. The Nebula Device will wait for the Defend Center's result and forward the file in 2 seconds. Sandbox detection may take longer than 2 seconds, so infected files could still possibly be forwarded to the user. Note: The Nebula Device only checks the file types you selected for sandbox inspection. The scan result will be removed from the Nebula Device cache after the Nebula Device restarts.
File Types to Scan	Specify the type of files to be sent for sandbox inspection.
Intrusion Prevention System (IPS)	
Enabled	Select this to activate the IPS feature which detects and prevents malicious or suspicious packets and responds instantaneously.
Mode	Select Detection to have the Nebula Device only create a log message when a stream of data matches a malicious signature. Alternatively, select Prevention to have the Nebula Device perform a user-specified action when a stream of data matches a malicious signature.
External Block List	
IP Reputation (EBL)	Select this to have the Nebula Device block the incoming packets that come from the listed addresses in the block list file on the server.
External block list	
Enabled	Select this to turn on the rule.

Table 211 Organization-wide > Organization-wide manage > Security profile sync (continued)

LABEL	DESCRIPTION
Name	Enter an identifying name for the block list file. You can use alphanumeric and ()+/:=?!*#@\$_%- characters, and it can be up to 60 characters long.
External DB	Enter the exact file name, path and IP address of the server containing the block list file. The file type must be 'txt'. For example, http://172.16.107.20/blacklist-files/myip-ebl.txt The server must be reachable from the Nebula Device.
Description	Enter a description of the block list file. You can use alphanumeric and ()+/:=?!*#@\$_%- characters, and it can be up to 60 characters long.
	Click this icon to remove the entry.
Add	Click this button to create a new IP reputation external block list profile entry.
Schedule update	The signatures for DNS Filter and URL Threat Filter are the same. These signatures are continually updated as new malware evolves. New signatures can be downloaded to the Nebula Device periodically if you have subscribed for the URL Threat filter signatures service. You need to create an account at Zyxel, register your Nebula Device and then subscribe for URL Threat filter service in order to be able to download new signatures from Zyxel. Select External DB schedule update and Daily to set the time of the day, or Weekly to set the day of the week and the time of the day. Schedule signature updates for a day and time when your network is least busy to minimize disruption to your network.
DNS/URL Threat Filter (EBL)	Select this to have the Nebula Device automatically block packets that come from the listed addresses in the block list file on the server.
External block list	
Enabled	Select this to turn on the rule.
Name	Enter the identifying name for the block list file. You can use alphanumeric and ()+/:=?!*#@\$_%- characters, and it can be up to 60 characters long.
External DB	Enter the file name, path and IP address of the server containing the block list file. For example, http://172.16.107.20/blacklist-files/myip-ebl.txt
Description	Enter a description of the block list file. You can use alphanumeric and ()+/:=?!*#@\$_%- characters, and it can be up to 60 characters long.
	Click this icon to remove the entry.
Add	Click this button to create a new DNS/URL threat filter external block list entry.
Schedule update	New IP reputation signatures can be downloaded to the Nebula Device periodically if you have subscribed for the IP reputation signatures service. You need to create an account at Zyxel, register your Nebula Device and then subscribe for IP reputation service in order to be able to download new signatures from Zyxel. Select External DB schedule update and Daily to set the time of the day, or Weekly to set the day of the week and the time of the day. Schedule signature updates for a day and time when your network is least busy to minimize disruption to your network.

12.4.6 Firmware Management

Use this screen to upgrade Nebula Device firmware, or schedule a firmware upgrade for Nebula Devices within the sites in the organization. Click Organization-wide > Organization-wide manage > Firmware management to access this screen.

12.4.6.1 Firmware Management Overview Screen

Use this screen to view and/or schedule a firmware upgrade for Nebula Devices within each site in the organization. You can make different schedules for different sites in the organization. Click Organization-wide > Organization-wide manage > Firmware management > Overview to access this screen.

Figure 283 Organization-wide > Organization-wide manage > Firmware management > Overview



You can select Nebula Devices by device type and by site, but you cannot select individual Nebula Devices. For example, you can upgrade all Switches in Site A and all APs in Site B. To upgrade individual Nebula Devices, go to Organization-wide > Organization-wide manage > Firmware management > Devices.

Note: This is a Nebula Professional Pack feature. If your Nebula Professional Pack license expires, scheduled firmware upgrades will still run.

12.4.6.2 Firmware Upgrade Priority

NCC prioritizes the different Nebula Device firmware upgrade schedules as follows, from highest to lowest as follows:

1. Individual Nebula Device upgrade schedule (set at MSP > MSP cross-org manage > Firmware upgrades > Schedule upgrades).
2. Individual Nebula Device upgrade schedule (set at Organization-wide > Organization-wide manage > Firmware management > Devices).
3. Organization-wide or site-wide upgrade schedule. If both are set, the schedule that was most recently set takes priority.
4. NCC default per-device upgrade schedule and default site-wide upgrade schedule (14 days after new firmware is released).

12.4.6.3 Firmware Management Overview Screen

The following table describes the labels in this screen.

Table 212 Organization-wide > Organization-wide manage > Firmware management > Overview

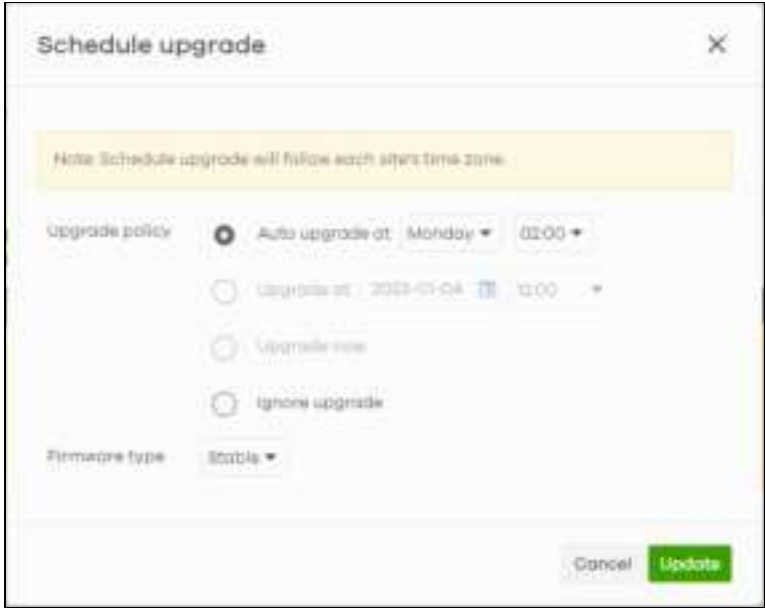
LABEL	DESCRIPTION
Site	You can set the filter to display specific Nebula Devices in a site in your organization. By default, all the sites are displayed (Any).
Device type	Select the type of Nebula Device. By default, all the Nebula Devices are displayed (Any).
Status	Select the Nebula Devices by their firmware status. By default, all Nebula Devices are displayed (Any). Select Good to display the Nebula Devices running a stable firmware and no immediate action is required. Select Warning to display the Nebula Devices with a newer firmware available and immediate action is recommended. The newer firmware may contain security enhancements, new features, and performance improvements. Select Critical to display the Nebula Devices with a newer firmware available and immediate action is required. The existing firmware may have security vulnerabilities and/or lack key performance improvements. Select N/A to display the Nebula Devices that are offline and its firmware status is not available.
Availability	Select to show the Nebula Devices with Up to date firmware, or with firmware update available for the Nebula Device (Upgrade available), or with a specific version of firmware has been installed by Zyxel customer support (Locked). By default, all available firmware is displayed (Any).
Upgrade Now	Click this to immediately upgrade the firmware on all selected sites. This button is selectable only when there is firmware update available for the Nebula Devices for the selected sites.
Schedule Upgrade	Click this to pop-up a window where you can set a specific date and time to upgrade the Nebula Devices firmware on the selected sites.  Note: Nebula Devices are upgraded according to the time zone of the site they are in.

Table 212 Organization-wide > Organization-wide manage > Firmware management > Overview


LABEL	DESCRIPTION
Reset	Select one or more Site-wide firmware upgrade Schedules, and then click Reset to restore the default site-wide settings (Every Monday at 02:00). Select one or more Per device firmware upgrade Schedules, and then click Reset to allow the Nebula Devices to follow the site-wide firmware management settings.
Site-wide/Per device /Both	Select your desired filter criteria to filter the list of firmware upgrade schedules.
Note: Drag the following column headings to change the order. Click the column heading to change the sorting, ascending or descending order.	
Status	This shows the status of the Nebula Device's firmware. - Green: All Nebula Devices are running Stable or above firmware. - Amber: One or more Nebula Devices is not running the Latest firmware. - Red: One or more Nebula Devices is running firmware that may have security vulnerabilities and/or lack key performance improvements. - Gray: No schedule is set for upgrading the Nebula Device's firmware.
Site	This shows which site the Nebula Device is in. Click the site name to go to the site's Dashboard.
Device type	This shows the type of Nebula Device.
Schedule	This shows the day and time when a new firmware upgrade is scheduled to occur. Site-wide settings means the Nebula Device is following the site-wide firmware schedule. Per device settings means a firmware schedule is set for the Nebula Device and it will not follow the site-wide firmware schedule.
# of devices	This shows the number of Nebula Devices in the site for a particular Schedule status. Click this to change the schedule (see the Schedule upgrade field in Table 213 on page 760 for more information).
Availability	This shows whether the firmware on the Nebula Device is Up to date, there is firmware update available for the Nebula Device (Upgrade available), or a specific version of firmware has been installed by Zyxel customer support (Locked).
	Click this icon to show and hide columns in the table.

12.4.6.4 Firmware Management Devices Screen

Use this screen to make different firmware upgrade schedules for the Nebula Devices in the organization. Click Organization-wide > Organization-wide manage > Firmware management > Devices to access this screen.

Note: While installing a firmware update, the Nebula Device will continue to operate normally until it reboots. The reboot will take 3 to 5 minutes, so it is best to pick an upgrade time that has minimal impact on your network.

Figure 284 Organization-wide > Organization-wide manage > Firmware management > Devices

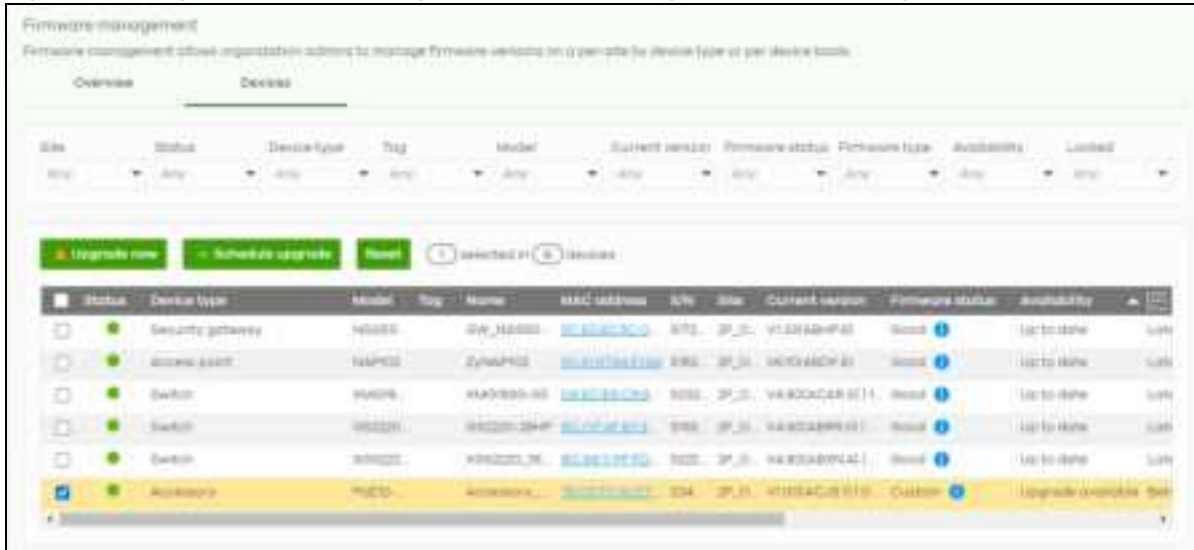

The following table describes the labels in this screen.

Table 213 Organization-wide > Organization-wide manage > Firmware management > Devices

LABEL	DESCRIPTION
Site/Status/Device type/Tag/Model/Current version/Firmware status/Firmware type/Availability/Locked	Specify your desired filter criteria to filter the list of Nebula Devices.
Upgrade Now	Click this to immediately install the firmware on the selected Nebula Devices. This button is selectable only when there is firmware update available for the selected Nebula Devices.

Table 213 Organization-wide > Organization-wide manage > Firmware management > Devices

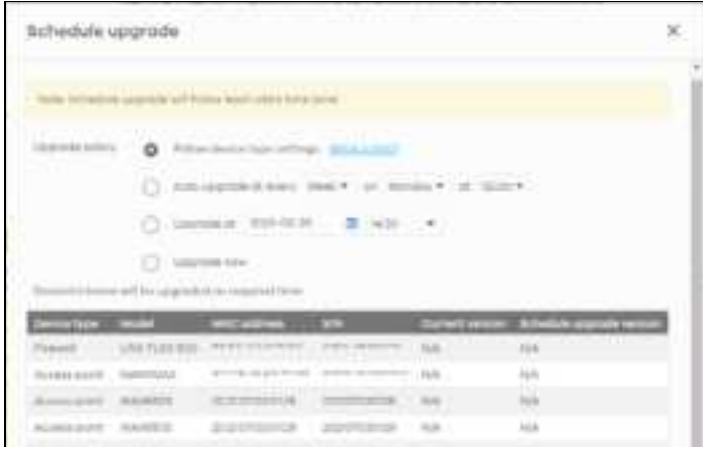
LABEL	DESCRIPTION
Schedule upgrade	Click this to pop up a window where you can create a new schedule for the selected Nebula Devices. You can select to upgrade firmware according to the organization-wide schedule configured for the Nebula Device type in the site, create a recurring schedule, edit the schedule with a specific date and time when firmware update is available for all the selected Nebula Devices, or immediately install the firmware. With a recurring schedule, the NCC will check and perform a firmware update when a new firmware release is available for any of the selected Nebula Devices. If the NCC service is downgraded from Nebula Professional Pack to Nebula Base, the Nebula Devices automatically changes to adhere to the organization-wide schedule. 
Reset	Select one or more Nebula Devices, and then click Reset to allow the Nebula Devices to follow the site-wide firmware management settings.
Status	This shows the status of the Nebula Device. - Green: The Nebula Device is online and has no alerts. - Amber: The Nebula Device has alerts. - Red: The Nebula Device is offline. - Gray: The Nebula Device has been offline for 7 days or more.
Device type	This shows the type of the Nebula Device.
Model	This shows the model number of the Nebula Device.
Tag	This shows the tag created and added to the Nebula Device.
Name	This shows the descriptive name of the Nebula Device.
MAC address	This shows the MAC address of the Nebula Device.
S/N	This shows the serial number of the Nebula Device.
Site	This shows the descriptive name of the site.
Current version	This shows the version number of the firmware the Nebula Device is currently running. It shows N/A when the Nebula Device goes offline and its firmware version is not available.

Table 213 Organization-wide > Organization-wide manage > Firmware management > Devices

LABEL	DESCRIPTION
Firmware status	The status shows Good if the Nebula Device is running a stable firmware and no immediate action is required. See the description of a stable firmware on the next field Firmware type. The status shows Warning if a newer firmware is available and immediate action is recommended. The newer firmware may contain security enhancements, new features, and performance improvements. The status shows Critical if a newer firmware is available and immediate action is required. The firmware may have security vulnerabilities and/or lack key performance improvements. The status shows Custom if the Nebula Device is running a firmware with specialized features that is not available to the general public. The status changes to Upgrading... after you click Upgrade Now to install the firmware immediately.
Firmware type	This shows Stable when the installed firmware may not have the latest features but has passed Zyxel internal and external testing. This shows Latest when the installed firmware is the most recent release with the latest features, improvements, and bug fixes. This shows General Availability when the installed firmware is a release before Latest, but is still undergoing Zyxel external testing. This shows Dedicated when the installed firmware is locked and Zyxel support is monitoring. Contact Zyxel customer support if you want to unlock the firmware in order to upgrade to a later one. This shows Beta when the installed firmware is a release version for testing the latest features and is still undergoing Zyxel internal and external testing. This shows N/A when the Nebula Device is offline and its firmware status is not available. Note: See Table 214 on page 763 for an example Firmware type version progression example scenario.
Availability	This shows whether the firmware on the Nebula Device is Up to date, or with a firmware update available for the Nebula Device (Upgrade available), or with a specific version of firmware has been installed by Zyxel customer support (Locked).
Upgrade scheduled	This shows the date and time when a new firmware upgrade is scheduled to occur. Otherwise, it shows Follow upgrade time and the Nebula Device sticks to the site-wide schedule or No when the firmware on the Nebula Device is up-to-date or the Nebula Device goes offline and its firmware status is not available. A lock icon displays if a specific schedule is created for the Nebula Device, which means the Nebula Device firmware will not be upgraded according to the schedule configured for all Nebula Devices in the site.
Last upgrade time	This shows the last date and time the firmware was upgraded on the Nebula Device.
Schedule upgrade version	This shows the version number of the firmware which is scheduled to be installed.
	Click this icon to display a greater or lesser number of configuration fields.

Firmware Type / Version Progression

The following table shows an example firmware version progression scenario.

Table 214 Firmware Type Version Progression Example

VERSION NUMBER TIMELINE	FIRMWARE TYPE	VERSION NUMBER TIMELINE	FIRMWARE TYPE
V6	Latest	V5	General Availability
V7	Latest	V6	General Availability

Note: Zyxel will select a previous version, (for example, V3) as a Stable release if no major issues have been reported by users.

There can only be one Latest and one Stable firmware.

12.4.7 Cloud Authentication

Use this screen to view and manage the user accounts which are authenticated using the NCC user database, rather than an external RADIUS server. Click Organization-wide > Organization-wide manage > Cloud authentication to access this screen.

Note: The changes you made in this screen apply to all sites in the organization. To change the cloud authentication settings for a specific site, go to Site-wide > Configure > Cloud authentication (see [Section 4.9 on page 299](#)).

Note: The settings in this screen will not apply to Security Firewall(s) in Cloud Monitoring mode.

12.4.7.1 User Account Types

NCC has the following types of user accounts. For details on using these accounts for WiFi and network authentication, see [Section 5.3.2 on page 343](#).


Table 215 Cloud Authentication: User Account Types

ACCOUNT TYPE	DESCRIPTION	AUTHENTICATION METHODS
User	The user account can gain access to the networks by authenticating using a pre-created user name and password, or their email address. This type of user account also supports DPPSK and two-factor authentication.	- WiFi authentication (WPA-Enterprise) - Network access through captive portal - VPN Access - WiFi authentication + network authentication through DPPSK
MAC	The Nebula Device account that can gain access to the networks by authenticating using its MAC address.	MAC-based Nebula Device authentication (combined with DPPSK)
DPPSK	A user that can gain access to the network using a unique dynamic Personal Pre-Shared key that is linked to their user account.	WiFi authentication + network authentication through DPPSK

12.4.7.2 Cloud Authentication User Screen

Use this screen to view and manage regular NCC network user accounts. Click Organization-wide > Organization-wide manage > Cloud authentication > User to access this screen.

Figure 285 Organization-wide > Organization-wide manage > Cloud authentication > User

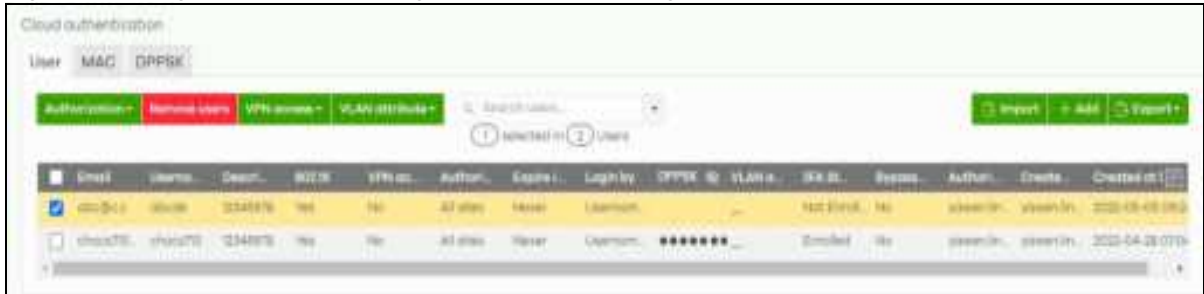

The following table describes the labels in this screen.

Note: Some of the actions on this screen are only available if your administrator account has full access to the organization.

Table 216 Organization-wide > Organization-wide manage > Cloud authentication > User

LABEL	DESCRIPTION
Authorization	Select one or more than one user account and click this button to configure the authorization settings for the selected user accounts. 
Remove users	Select one or more than one user account and click this button to remove the selected user accounts.
VPN access	Select one or more than one user account and click this button to configure whether the accounts can be used to connect to the organization's networks through VPN.
VLAN attribute	Select one or more than one user account and click this button to assign the users to a specific VLAN ID, or clear the VLAN ID. Then click Update. 
Print	Click this button to print information about each selected user account, such as their user name and password.
Search users	Enter a key word as the filter criteria to filter the list of user accounts.
N User	This shows how many user accounts (N) match the filter criteria and how many user accounts of the selected type are created in total.

Table 216 Organization-wide > Organization-wide manage > Cloud authentication > User (continued)

LABEL	DESCRIPTION
Import	Click this button to create user accounts in bulk by importing a complete list of all new users in an Excel file.  The image shows a 'Bulk Import' dialog box with a close button (X) in the top right. The text inside says: 'Bulk Import' supports for faster inputting. Please follow this template to import. There is a 'Browse' button in the center and 'Or drag file here...' text below it. A 'Close' button is in the bottom right.
Add	Click this button to create a new user account. See Section 12.4.7.3 on page 766 .
Export	Click this button to save the account list as a CSV or XML file to your computer.
Email	This shows the email address of the user account.
Username	This shows the user name of the user account.
Description	This shows the descriptive name of the user account.
802.1X	This shows whether 802.1X (WPA-Enterprise) authentication is enabled on the account.
VPN access	This shows whether the accounts can be used to connect to the organization's networks through VPN.
Authorized	This shows whether the user has been authorized or not (No). If the user is authorized, it shows All sites or the name of the site to which the user is allowed access.
Expire in (UTC)	This shows the date and time that the account expires. This shows -- if authentication is disabled for this account. This shows Never if the account never expires. This shows Multiple value if the account has different Expire in values across different sites.
Login by	This shows whether the user needs to log in with the email address and/or user name.
DPPSK	This shows the account's dynamic personal pre-shared key (DPPSK), if one is set.
VLAN assignment	This field is available only when the account type is set to User. This shows the VLAN assigned to the user.
2FA Status	This shows whether the account has set up two-factor authentication yet.
Bypass 2FA	This shows whether the account is allowed to bypass two-factor authentication, if two-factor authentication is enabled on a captive portal or VPN gateway.
Authorized by	This shows the email address of the administrator account that authorized the user. If the account has been authorized by different admins across different sites, it shows Multiple value.
Created by	This shows the email address of the administrator account that created the user.
Created at	This shows the date and time that the account was created.
	Click this icon to display a greater or lesser number of configuration fields.

12.4.7.3 Create/Update User Account

In the Site-wide or Organization-wide > Organization-wide manage > Cloud authentication > User screen, click the Add button to create a new user account or double-click an existing account entry to modify the account settings.

Figure 286 Organization-wide > Organization-wide manage > Cloud authentication > User: Create/Update user

The following table describes the labels in this screen.

Table 217 Organization-wide > Organization-wide manage > Cloud authentication > User: Create/Update user

LABEL	DESCRIPTION
Account type	This shows the type of the user account.
Email	Enter the email address of the user account, which is used to log into the networks.
Username	Enter a user name for this account. Note: This field is optional if Login by is set to Email.
Description	Enter a descriptive name for the account.
Password	Enter the password of this user account. It can consist of 4 – 31 alphanumeric characters. You can click Generate to have NCC create a password for the account automatically.

Table 217 Organization-wide > Organization-wide manage > Cloud authentication > User: Create/Update user (continued)

LABEL	DESCRIPTION
DPPSK	Enter a dynamic personal pre-shared key (DPPSK) for this DPPSK user account, if you want to be able to authenticate using DPPSK in addition to a user name and password. It can consist of 8 – 31 alphanumeric characters. You can click Generate to have the NCC create a DPPSK for the account automatically.
802.1X	Select this to allow the account to be used for single sign-on (SSO) network and WiFi authentication using 802.1X (WPA-Enterprise).
VPN Access	Select this to allow the account to be used to connect to the organization's networks through VPN.
Authorized	Set whether you want to authorize the user of this account. You can select to authorize the user's access to All Sites or Specified Sites in the organization. If you select Specified Sites, a field displays allowing you to specify the sites to which the user access is authorized.
Expire in	This field is available only when the user is authorized. Click Change to specify the number of minutes/hours/days/weeks the user can be logged into the network in one session before the user of this account has to log in again. Note: If the account has been set with different Expire in values across different sites, it will show Multiple value and the Change link. Otherwise, select Never and the user of this account will never be logged out.
Login by	Select whether the user needs to log in with the email address and/or user name.
VLAN assignment	This allows you to assign a user to a specific VLAN based on the user credentials instead of using a RADIUS server.
Bypass two-factor authentication	This shows whether the account is allowed to bypass two-factor authentication, if two-factor authentication is enabled on a captive portal or VPN gateway.
Email account information to user	Select this to send a copy of the information on this screen to the account email address, after the account has been created.
Close	Click this button to exit this screen without saving.
Print	Click this button to print the account information.
Create user	Click this button to save your changes and close the screen.

12.4.7.4 Cloud Authentication MAC Screen

Use this screen to view and manage NCC Nebula Device user accounts, used for MAC-based authorization. Click Organization-wide > Organization-wide manage > Cloud authentication > MAC to access this screen.

Figure 287 Organization-wide > Organization-wide manage > Cloud authentication > MAC



The following table describes the labels in this screen.

Note: Some of the actions on this screen are only available if your administrator account has full access to the organization.

Table 218 Organization-wide > Organization-wide manage > Cloud authentication > MAC

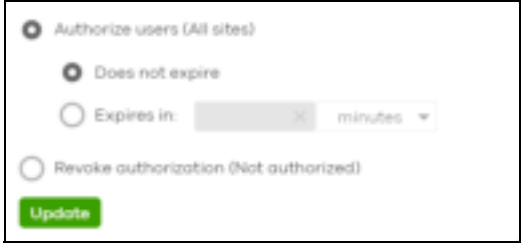
LABEL	DESCRIPTION
Authorization	Select one or more than one account and click this button to configure the authorization settings for the selected user accounts. 
Remove users	Select one or more than one user account and click this button to remove the selected user accounts.
Search users	Enter a key word as the filter criteria to filter the list of user accounts.
N User	This shows how many user accounts (N) match the filter criteria and how many user accounts of the selected type are created in total.
Import	Click this button to create user accounts in bulk by importing a complete list of all new users in an Excel file. 
Add	Click this button to create a new user account. See Section 12.4.7.5 on page 769 .
Export	Click this button to save the account list as a CSV or XML file to your computer.
Email	This shows the email address of the user account.

Table 218 Organization-wide > Organization-wide manage > Cloud authentication > MAC (continued)

LABEL	DESCRIPTION
MAC address	This shows the MAC address of the user account.
Description	This shows the descriptive name of the user account.
Account type	This shows the type of user account: USER, MAC, or DPPSK.
Authorized	This shows whether the user has been authorized or not (No). If the user is authorized, it shows All sites or the name of the site to which the user is allowed access.
Authorized by	This shows the email address of the administrator account that authorized the user. If the account has been authorized by different admins across different sites, it shows Multiple value.
Expire in (UTC)	This shows the date and time that the account expires. This shows -- if authentication is disabled for this account. This shows Never if the account never expires. This shows Multiple value if the account has different Expire in values across different sites.
Created at	This shows the date and time that the account was created.
	Click this icon to display a greater or lesser number of configuration fields.

12.4.7.5 Create/Update MAC Account

In the Site-wide or Organization-wide > Organization-wide manage > Cloud authentication > MAC screen, click the Add button to create a new user account or double-click an existing account entry to modify the account settings.

Figure 288 Organization-wide > Organization-wide manage > Cloud authentication > MAC: Create/Update user



Create user [X]

Account type: MAC

Description: [Text field]

MAC address: 20:22:09:09:20:01

Authorized: All sites

Expires:

☐ Does not expire

☒ Expires in: 60 minutes

Close Print **Create user**

The following table describes the labels in this screen.

Table 219 Organization-wide > Organization-wide manage > Cloud authentication > MAC: Create/Update user

LABEL	DESCRIPTION
Account type	This shows the type of the user account.
Description	Enter a descriptive name for the account.
MAC address	Enter a MAC address for this account.
Authorized	Set whether you want to allow the user of this account access to sites. Select All Sites or Specified sites to allow the user access to all or some sites in the organization. If you select Specified sites, a field displays allowing you to specify the sites to which the user access is authorized. Select Not authorized to prevent the user access to all the sites in the organization.
Expires	Specify the number of minutes/hours/days/weeks the user has access to site(s) in the organization.
Close	Click this button to exit this screen without saving.
Print	Click this button to print the account information.
Create user	Click this button to save your changes and close the screen.

12.4.7.6 Cloud Authentication DPPSK Screen

Use this screen to view and manage DPPSK network user accounts. Click Organization-wide > Organization-wide manage > Cloud authentication > DPPSK to access this screen.

Figure 289 Organization-wide > Organization-wide manage > Cloud authentication > DPPSK



The screenshot shows the 'Cloud authentication' interface with the 'DPPSK' tab selected. It displays a table of user accounts with the following columns: Email, Username, Account type, (PPTK ID), (User ID), Authorized, Expires in SITE, Created by, and Created at (UTC). The table lists several accounts, including 'dppsk-admin@100' and 'dppsk-admin@101', all of which are 'Authorized' and have an expiration of '000'. The interface also includes search filters, a 'Selected 0' indicator, and buttons for 'Export', 'Add', and 'Cancel'.

Email	Username	Account type	(PPTK ID)	(User ID)	Authorized	Expires in SITE	Created by	Created at (UTC)
dppsk-admin@100	100-admin	DPPSK	*****	---	Yes	---	admin@100	2020-04-07 07:40:11
dppsk-admin@101	101-admin	DPPSK	*****	---	Yes	---	admin@101	2020-04-07 07:40:11
dppsk-admin@102	102-admin	DPPSK	*****	102	Yes	---	admin@102	2020-04-07 07:40:11
dppsk-admin@103	103-admin	DPPSK	*****	103	Yes	---	admin@103	2020-04-07 07:40:11
dppsk-admin@104	104-admin	DPPSK	*****	104	Yes	---	admin@104	2020-04-07 07:40:11
dppsk-admin@105	105-admin	DPPSK	*****	105	Yes	---	admin@105	2020-04-07 07:40:11
dppsk-admin@106	106-admin	DPPSK	*****	---	Yes	---	admin@106	2020-04-07 07:40:11
dppsk-admin@107	107-admin	DPPSK	*****	---	Yes	---	admin@107	2020-04-07 07:40:11
dppsk-admin@108	108-admin	DPPSK	*****	---	Yes	---	admin@108	2020-04-07 07:40:11
dppsk-admin@109	109-admin	DPPSK	*****	---	Yes	---	admin@109	2020-04-07 07:40:11
dppsk-admin@110	110-admin	DPPSK	*****	---	Yes	---	admin@110	2020-04-07 07:40:11

The following table describes the labels in this screen.

Table 220 Organization-wide > Organization-wide manage > Cloud authentication > DPPSK

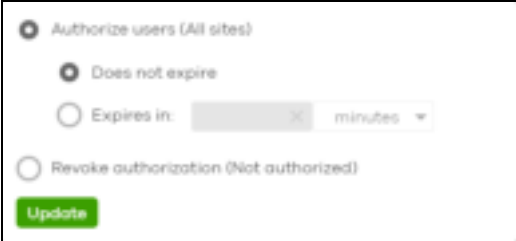
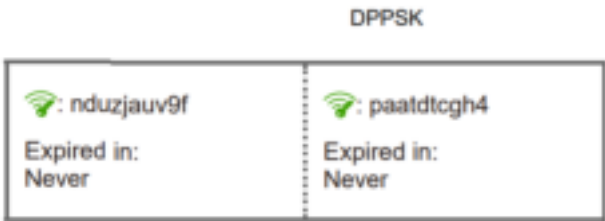
LABEL	DESCRIPTION
Authorization	Select one or more than one user account and click this button to configure the authorization settings for the selected user accounts. 
Remove users	Select one or more than one user account and click this button to remove the selected user accounts.
Print	Click this button to print the unique dynamic personal pre-shared key (DPPSK) and expiry time of each selected user account. The account details can be cut into cards, and then given to users in order to grant them WiFi network access. 
Search users	Enter a key word as the filter criteria to filter the list of user accounts.
N Users	This shows how many user accounts (N) match the filter criteria and how many user accounts of the selected type are created in total.
Import	Click this button to create user accounts in bulk by importing a complete list of all new users in an Excel file. 
Add	Click this button to create a single new account, or a batch of accounts. - Single DPPSK: See Section 12.4.7.7 on page 772. - Batch create DPPSK: See Section 12.4.7.8 on page 773.
Export	Click this button to save the account list as a CSV or XML file to your computer.
Email	This shows the email address of the user account.
Username	This shows the user name of the user account.

Table 220 Organization-wide > Organization-wide manage > Cloud authentication > DPPSK (continued)

LABEL	DESCRIPTION
Account type	This shows the type of user account: USER, MAC, or DPPSK.
DPPSK	This shows the account's dynamic personal pre-shared key (DPPSK).
VLAN ID	This shows the VLAN assigned to the account.
Description	This shows the descriptive name of the user account.
Authorized	This shows whether the user has been authorized or not (No). If the user is authorized, it shows All sites or the name of the site to which the user is allowed access.
Expire in (UTC)	This shows the date and time that the account expires. This shows -- if authentication is disabled for this account. This shows Never if the account never expires. This shows Multiple value if the account has different Expire in values across different sites.
Created by	This shows the email address of the administrator account that created the user.
Created at	This shows the date and time that the account was created.
	Click this icon to display a greater or lesser number of configuration fields.

12.4.7.7 Add/Edit DPPSK Account

In the Site-wide or Organization-wide > Organization-wide manage > Cloud authentication > DPPSK screen, click Add > Single DPPSK to create a new user account or double-click an existing account entry to modify the account settings.

Figure 290 Organization-wide > Organization-wide manage > Cloud authentication > DPPSK: Create/Update DPPSK user



Create single DPPSK user

Account type: DPPSK

Email: test2@xyvel.com.tw

Username:

DPPSK: [masked] [Generate](#)

VLAN id:

Authorized: All sites

Expire in: Never [Change](#)

Email to user: ☒ Email account information to user

[Close](#) [Print](#) [Create user](#)

The following table describes the labels in this screen.

Table 221 Organization-wide > Organization-wide manage > Cloud authentication > DPPSK: Create/Update DPPSK user

LABEL	DESCRIPTION
Account type	This shows the type of the user account.
Email	Enter the email address of the user account, which is used to log into the networks.
Username	Enter a user name for this account.
Description	Enter a descriptive name for the account.
DPPSK	Enter a dynamic personal pre-shared key (DPPSK) for this DPPSK user account. It can consist of 8 – 31 alphanumeric characters. You can click Generate to have the NCC create a DPPSK for the account automatically.
VLAN id	Enter the ID of a VLAN to assign a user to a specific VLAN.
Authorized	Set whether you want to authorize the user of this account. You can select to authorize the user's access to All Sites or Specified Sites in the organization. If you select Specified Sites, a field displays allowing you to specify the sites to which the user access is authorized.
Expire in	This field is available only when the user is authorized. Click Change to specify the number of minutes/hours/days/weeks the user can be logged into the network in one session before the user of this account has to log in again. Note: If the account has been set with different Expire in values across different sites, it will show Multiple value and the Change link. Otherwise, select Never and the user of this account will never be logged out.
Email account information to user	Select this to send a copy of the information on this screen to the account email address, after the account has been created.
Close	Click this button to exit this screen without saving.
Print	Click this button to print the account information.
Create user	Click this button to save your changes and close the screen.

12.4.7.8 Batch Create DPPSK Accounts

To have NCC create multiple DPPSK user accounts, each with a unique dynamic personal pre-shared key (DPPSK), go to the Site-wide or Organization-wide > Organization-wide manage > Cloud authentication > DPPSK screen, click Add, and then select Batch Create DPPSK.

Figure 291 Organization-wide > Organization-wide manage > Cloud authentication: Batch Create DPPSK

The following table describes the labels in this screen.

Table 222 Organization-wide > Organization-wide manage > Cloud authentication: Batch Create DPPSK

LABEL	DESCRIPTION
Number of accounts	Enter how many DPPSK user accounts you want to create.
VLAN id	Assign the users to a specific VLAN based on the user's dynamic personal pre-shared key (DPPSK).
E-mail account info to	Send a copy of each user account's dynamic personal pre-shared key (DPPSK) and expiry date to the specified email address. This information is in a printable format. The expiry date includes a time and date in UTC format.
Authorized	Set whether you want to authorize the user of this account. You can select to authorize the user's access to All Sites or Specified Sites in the organization. If you select Specified Sites, a field displays allowing you to specify the sites to which the user access is authorized.
Expire in	This field is available only when the user is authorized. Click Change to specify the number of minutes/hours/days/weeks the user can be logged into the network in one session before the user of this account has to log in again. Note: If the account has been set with different Expire in values across different sites, it will show Multiple value and the Change link. Otherwise, select Never and the user of this account will never be logged out.
Close	Click this button to exit this screen without saving.
Create user	Click this button to save your changes and close the screen.

12.4.8 Change Log

Use this screen to view logged messages for changes in the specified organization. Click Organization-wide > Organization-wide manage > Change log to access this screen.

When the log is full, it deletes older entries one by one to make room for new ones.

Figure 292 Organization-wide > Organization-wide manage > Change log

Time (UTC)	Site time	Admin	Site	SSID	Page	Label	Old	N
2019-10-25 13:25:38	2019-10-25 13:25:38 UTC +8:00	NCC_HK_Admin	Site01		Config	ADD		Site01
2019-10-25 13:25:38	2019-10-25 13:25:38 UTC +8:00	NCC_HK_Admin	Site01		Config	ADD		Site01
2019-10-25 13:25:38	2019-10-25 13:25:38 UTC +8:00	NCC_HK_Admin	Site01		Auth	CHGN	SWR	CHGN
2019-10-25 13:25:40	2019-10-25 13:25:40 UTC +8:00	NCC_HK_Admin	Site01		Free	CHGN	SWR	CHGN
2019-10-25 13:25:40	2019-10-25 13:25:40 UTC +8:00	NCC_HK_Admin	Site01		Free	REMO	HUB	
2019-10-25 13:25:40	2019-10-25 13:25:40 UTC +8:00	NCC_HK_Admin	Site01		Free	REMO	WARR	
2019-10-25 13:25:40	2019-10-25 13:25:40 UTC +8:00	NCC_HK_Admin	Site01		Free	REMO	TYPE	
2019-10-25 13:25:40	2019-10-25 13:25:40 UTC +8:00	NCC_HK_Admin	Site01		Free	REMO	ROLE	
2019-10-25 13:25:40	2019-10-25 13:25:40 UTC +8:00	NCC_HK_Admin	Site01		Free	REMO	SSID	
2019-10-25 13:25:40	2019-10-25 13:25:40 UTC +8:00	NCC_HK_Admin	Site01		Free	REMO	NAME	

The following table describes the labels in this screen.

Table 223 Organization-wide > Organization-wide manage > Change log

LABEL	DESCRIPTION
Search	Click to enter one or more key words as the search criteria to filter the list of logs.
Range/Before	Select Range to set a time range or select Before to choose a specific date/time and the number of hours/minutes to display only the log messages generated within a certain period of time (before the specified date/time). The maximum allowable time range is 30 days.
Search	Click this to update the list of logs based on the search criteria.
Reset filters 	Click this to return the search criteria to the previously saved time setting.
Newer/Older	Click to view a list of log messages with the most recent or oldest message displayed first.
	This shows the total number of the log messages that match the search criteria. It also shows the date and time the very first log was created.
Export	Click this button to save the log list as a CSV or XML file to your computer.
Time (UTC)	This shows the date and time in UTC+00:00 (or UTC+0) when the log was recorded. UTC is a standard time for use around the world (formerly known as Greenwich Mean Time or GMT). UTC is an international abbreviation that is neither French nor English. It means both "Temps Universel Coordonné" and "Coordinated Universal Time".
Site Time	This shows the date and time of the site, to which the change was applied, when the log was recorded.
Admin	This shows the name of the administrator who made the changes.
Site	This shows the name of the site to which the change was applied.
SSID	This shows the SSID name to which the change was applied.
Page	This shows the name of the NCC menu in which the change was made.
Label	This shows the reason for the log.
Old value	This shows the old setting that was discarded and overwritten with the new attribute value.

Table 223 Organization-wide > Organization-wide manage > Change log (continued)

LABEL	DESCRIPTION
New value	This shows the new setting that was adopted.
	Click this icon to display a greater or lesser number of configuration fields.

12.4.9 Organization Settings

Use this screen to change your general organization settings, such as the organization name and security. Click Organization-wide > Organization-wide manage > Organization settings to access this screen.

Figure 293 Organization-wide > Organization-wide manage > Organization settings

Organization settings

Organization information

Name:

Country:

API ID:

Address:

Organization ID:

Cloud monitoring mode ID: [View details](#)

Organization Administration

Admin managed by MDM: [View details](#)

Company name	Company ID	Status	Actions
XXXXXXXXXXXX	XXXXXXXXXXXX	Search	View details

Security

Idle Timeout [View details](#) ☐ 30 minutes of inactivity will log out user. [View details](#)

Two-factor authentication [View details](#) ☐ Force admin to set up and use two-factor authentication.

Login IP ranges [View details](#) ☐ Only allow access to this organization from IP addresses in the specified ranges.

This computer is using IP address: 192.168.1.100

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

[View details](#)

The following table describes the labels in this screen.

Table 224 Organization-wide > Organization-wide manage > Organization settings

LABEL	DESCRIPTION
Organization information	
Name	Enter a descriptive name for the organization.
Country	Select the country where the organization is located. Note: This field is only for reference. It does not affect any other fields or features in NCC.
MSP ID	Enter the customer ID used by the administrator of the organization on another system. For example, CRM (Customer Relationship Management) and ERP (Enterprise Resource Planning) systems. Note: You can use alphanumeric and ()+/:=?!*#@\$_%- characters, and it can be up to 64 characters.
Notes	Enter the user-specified description of the MSP ID. Note: You can use alphanumeric and ()+/:=?!*#@\$_%- characters, and it can be up to 256 characters.
Organization ID	This shows the 24-digit organization ID generated automatically by NCC and is not editable. You can copy the ID by clicking the copy icon beside the ID.
Cloud Monitoring Mode ID	To allow NCC to monitor your on premise Security Firewall, select Cloud Monitoring Mode on the Web Configurator of the Security Firewall. See the Security Firewall's User's Guide for more information. Click the copy icon to copy and paste the Cloud Monitoring mode ID into the Configuration > Mgmt. & Analytics > Nebula > Cloud Monitoring Mode.
Generate	The Cloud Monitoring mode ID is composed of 24 random alphanumeric characters. Click this button to have NCC create a new Cloud Monitoring mode ID.
Organization administration	
Allow managed by MSP	Enter the MSP ID or MSP master/backup's email to filter the list of organizations to bind to an MSP account, and then click Search. See Section 14.2 on page 796 for more information on MSP ID. Note: This field is disabled (grayed out) when the organization is bound to an MSP account.
Company name	By default, this shows the email address of the MSP account's owner.
Company ID	This shows the 24-digit MSP ID generated automatically by NCC.
Status	This shows Bound if the organization administrator accepts the invitation to bind the non-MSP organization to the MSP account. This shows Pending Acceptance if the invitation to bind the non-MSP organization to the MSP account has been sent to the organization administrator. The invitation is valid for 24 hours only. This shows Expired if the invitation to bind the non-MSP organization to the MSP account has exceeded the 24-hour threshold. The row will be blank if the non-MSP organization is not bound to the MSP account.

Table 224 Organization-wide > Organization-wide manage > Organization settings (continued)

LABEL	DESCRIPTION
Actions	Click Bind to allow the non-MSP organization to be managed by an MSP account. Click Unbind to release the non-MSP organization from being managed by the MSP account. Click Cancel bind request to cancel the invitation sent to the organization administrator to bind the organization to the MSP account. Click Resend to resend the email invitation to the organization administrator to bind the organization to the MSP account. Note: The organization created by an MSP account owner is automatically bound. The organization will automatically bind to a new MSP account owner. For example, an MSP backup takes on the role of the MSP master (account owner) when the MSP master's MSP Pack license expires. Note: All MSP administrators (MSP master, MSP backup, and MSP sub-admin) of an MSP organization cannot be removed or modified by the organization owner when the MSP organization is bound. All MSP administrators (MSP master, MSP backup, and MSP sub-admin) of an MSP organization will automatically be removed from the administrator list when the organization unbinds from the MSP organization. Note: When the MSP Pack license of the administrator of a non-MSP organization bound to an MSP account expires, the administrator will lose the MSP privileges, but will not be removed from the administrator list. You need to unbind the organization for NCC to automatically remove the administrator from the administrator list.
Security	
Idle timeout	Select ON and enter the number of minutes each user can be logged in and idle before the NCC automatically logs out the user. Select OFF if you do not want the NCC to log out idle users.
Two-factor authentication	Select ON to enable two-factor authentication login for all administrators of this organization. Note: If this option is unavailable, you must enable Two-factor authentication in Account > Manage account, log out of NCC, and then log in again before you can enable organization-wide two-factor authentication in this screen. The following administrators will be forcibly log out and prevented from logging in after enabling this option: - administrators using Google/Apple Accounts to login, and - administrators who did not enable Two-factor authentication in the Account > Manage account. Note: Two-factor authentication is mandatory but unavailable for administrators using Google/Apple Accounts for login. Administrators using Google/Apple Account for login must contact customer support to change their login email address.
Login IP ranges	Select ON and specify the IP address range of the computers from which an administrator is allowed to log into the NCC. Select OFF to allow any IP address of the computer from which an administrator can log into the NCC.
Import certificate	
Use my certificate	Select ON to import a certificate that can be used by connected Nebula Access Points in WPA2 authentication.
Name	Enter a name for the certificate (up to 64 letters).

Table 224 Organization-wide > Organization-wide manage > Organization settings (continued)

LABEL	DESCRIPTION
File Path	Click to find the certificate file you want to upload.
Import	Click this button to save a new certificate to the NCC.
Password	Enter the certificate file's password.
Device ownership takeover	By default, your Nebula Device can transfer to another administrator's organization by using the Nebula Mobile app to scan the QR code. Click this switch to the right to prohibit Nebula Device transfer between administrators.
Paid features indicator	Select ON to show the diamond indicator for NCC features that require a license to unlock.
Delete this organization	Click the Delete organization button to remove the organization when it does not have any sites, Nebula Devices or users. Note: You will be redirected to the Choose organization page after this organization is deleted. Note: You cannot delete a non-MSP organization bound to an MSP account. You need to release the non-MSP organization from being managed by the MSP account first.

PART IV

Manage by Group Deployment

CHAPTER 13

Group-wide

13.1 Introduction


This chapter discusses the menus that you can use to monitor and manage your groups settings.

A group is a collection of two or more organizations. Groups allow you to view and manage multiple organizations, and create VPN links between groups in the organization.


13.1.1 Creating a Group

Follow the steps below to create a group.

- 1 Ensure that you are the owner of two or more Pro Pack organizations that are not currently in a group.
- 2 Click the Organization list, and then select Create Group.

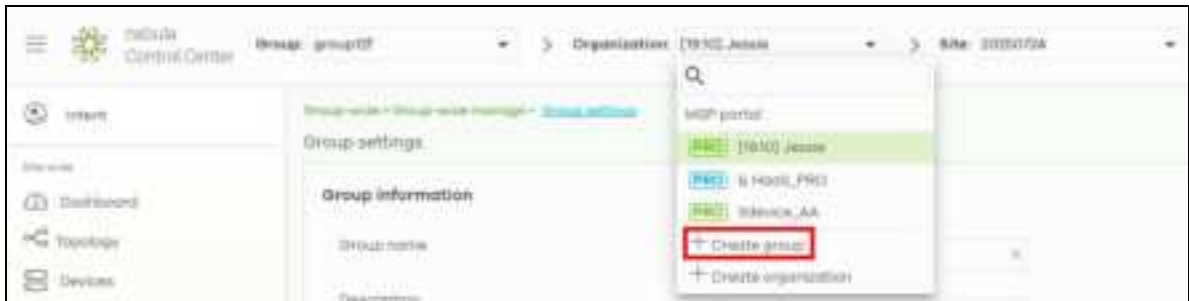

- 3 In the Create group window, enter a group name and then select two or more organizations to add to the group. You must be the group owner, and each group must have a Pro Pack license. Then click OK.

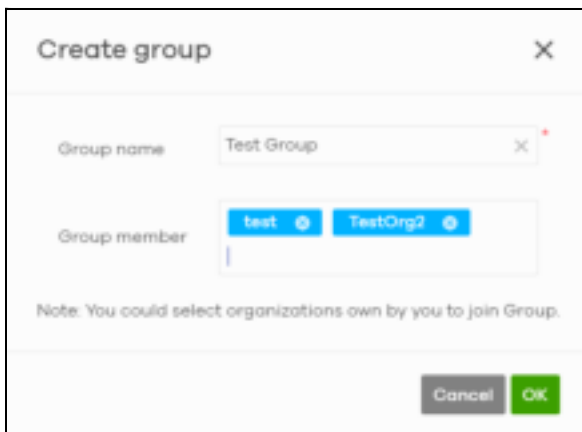

13.1.2 Group-Wide Menu

The Group-wide menu and the Group list appear when you create at least one group. You can select a group to manage by selecting it in the Group list.


Figure 294 Group-wide > Group-wide manage > Overview: Group



13.2 Group Portal

The overview screen allows you to view the status of organizations in a group. Click Group-wide > Group-wide manage > Group portal to access this screen.

Figure 295 Group-wide > Group-wide manage > Group portal

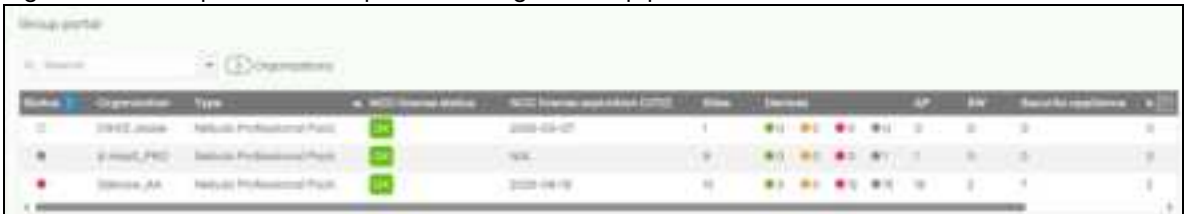

The following table describes the labels in this screen.

Table 225 Group-wide > Group-wide manage > Group portal

LABEL	DESCRIPTION
Search	Specify your desired filter criteria to filter the list of organizations.
N Organizations	This shows the number of organizations (N) in the group.
Status	This shows the status of Nebula Devices in the organization. - Green: All Nebula Devices are online and have no alerts. - Amber: One or more Nebula Devices have alerts. - Red: One or more Nebula Devices are offline. - Gray: All Nebula Devices have been offline for 7 days or more. - White: No Nebula Devices.
Organization	This shows the descriptive name of the organization.
Type	This shows the NCC license type of the organization.
NCC License Status	This shows whether the license is valid (OK), the license has expired and the organization downgraded from NCC Pro or Plus Pack to the base tier (Expired), or this is a free organization and an NCC license is not required (N/A).
NCC License expiration (UTC)	This shows the date when the license will expire, or N/A when there are no Nebula Devices in the organization or if this is a free organization and an NCC license is not required.
Sites	This shows the number of sites belonging to this organization.

Table 225 Group-wide > Group-wide manage > Group portal (continued)

LABEL	DESCRIPTION
Devices	This shows the number of Nebula Devices in the organization that have one of the following status: - Green: The Nebula Device is online and has no alerts. - Amber: The Nebula Device has alerts. - Red: The Nebula Device has been offline for less than 7 days. - Gray: The Nebula Device has been offline for 7 days or more.
AP	This shows the number of Nebula Access Points in the organization.
SW	This shows the number of Nebula Switches in the organization.
Security appliance	This shows the number of Nebula NSG, USG FLEX and USG FLEX H, ATP series, and USG20(W)-VPN, and SR (Security Routers) Security Appliances connected to the sites in this organization.
MR	This shows the number of Nebula Mobile Routers in the organization.
Pay As You Go	This shows the payment plan if the organization is using PAYG (Pay As You Go). In the Zyxel Circle website (if the NCC account has a Circle account) select the Gold Pack plan (Pro, GSP) or the Pro Pack plan (PRO). See the Circle User's Guide for more information on Pay As You Go. Otherwise, the value will be blank.

13.3 Org-to-Org VPN

Org-to-Org VPN allows Nebula Devices in different organizations in a group to access each other's services, such as a website, database, or ERP server, through VPN tunnels.

Note: The Security Firewall(s) in Cloud Monitoring mode will not show on the list.

13.3.1 Configure Org-to-Org VPN

Follow the steps below to configure Org-to-Org VPN in the group.


- 1 Configure Smart VPN for each organization you want included in the Org-to-Org VPN.
 - 1a In the Organization list, select the organization.
 - 1b Go to Organization-wide > Organization-wide manage > VPN orchestrator.
 - 1c Configure a VPN area with hub-and-spoke topology, and then assign at least one site as a hub. If a site contains a server that you want to share between organizations, then ensure the server is in a hub site or that Branch to Branch VPN is enabled.
- 2 Go to Group-wide > Group-wide manage > Org-to-Org VPN, and then enable Hub to Hub VPN.
- 3 Click + Hub. In the Select Hubs window, add at least one hub site from each organization to the Within Org-to-Org list.
- 4 Click + Org-to-Org Service, and add a server's fully qualified domain name (FQDN) and IP address.

- 5 Devices in the organizations included in the Org-to-Org VPN are now able to access the server by IP address or FQDN.

13.3.2 Org-to-Org VPN Example

Figure 296 shows organization O1 with two VPN areas and hubs H1 and H2. Area communication and Branch to Branch VPN are both enabled. It shows another organization O2 with its own set of sites and a hub. H1 and H3 belong to the Org-to-Org VPN. The server behind S9 is listed as an org-to-org service. If a Nebula Device behind S5 wants to access the server behind S9, traffic will pass through its hub H2 and then to H1 and H3.

Figure 296 Org-to-Org VPN Example

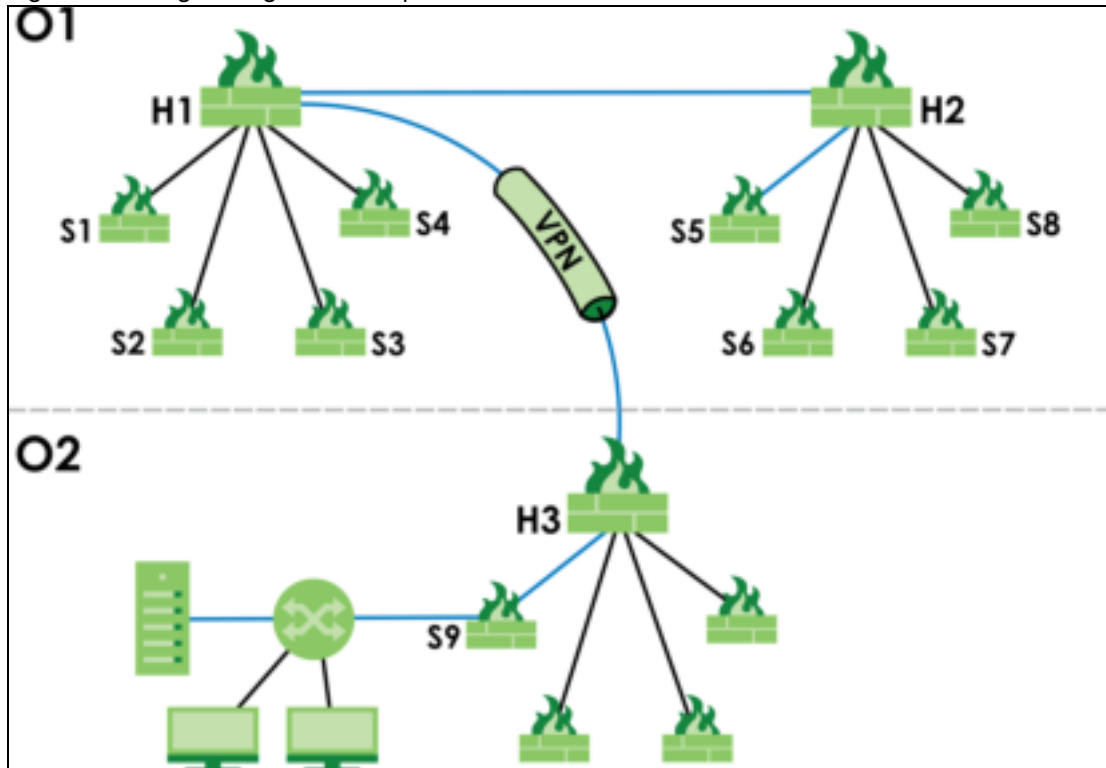

13.3.3 Org-to-Org VPN Screen

Click Group-wide > Group-wide manage > Org-to-Org VPN to access this screen.

Figure 297 Group-wide > Group-wide manage > Org-to-Org VPN

The following table describes the labels in this screen.


Table 226 Group-wide > Group-wide manage > Org-to-Org VPN

LABEL	DESCRIPTION
Reserved IP Address Pool	Specify the IP addresses that Nebula Devices use to create the VPN tunnels between the gateway devices in the org-to-org VPN network. You can select a set or custom range. This IP address range must not overlap with any IP address ranges already in use within any sites in the org-to-org VPN.
AutoVPN	
Hub to Hub VPN	Turn the switch to On to enable create VPN tunnels between the hubs in the list. This is required to enable Org-to-Org VPN. When this setting is disabled, Org-to-Org VPN will not work and can only be configured.
Organization	This column lists down the organization to which the hub site belongs.
Hub	This column lists down the names of the hub sites included in the Org-to-Org VPN.
+Hub	Click this to set up which hub site you want to add to the Org-to-Org VPN.
Service	
Organization	This displays the organization to which the network service belongs.
FQDN	This displays the Fully-Qualified Domain Name (FQDN) associated with the network service which Security Gateway devices and Nebula Devices behind them are given access.
IP Address	This displays the IP address of the network service which Security Gateway devices and Nebula Devices behind them are given access.
+Org-to-Org Service	Click this to add a service that can be accessed within the org-to-org VPN.
Save	Click this button to save your changes and close the screen.
Cancel	Click Cancel to exit this screen without saving.

13.3.4 Add Hub

Click the +Hub button on the Group-wide > Group-wide manage > Org-to-Org VPN screen to access the following screen. If Hub to Hub VPN is enabled, use this screen to select which hubs you want to include in the Org-to-Org VPN.

Figure 298 Group-wide > Group-wide manage > Org-to-Org VPN: SD-WAN Hubs

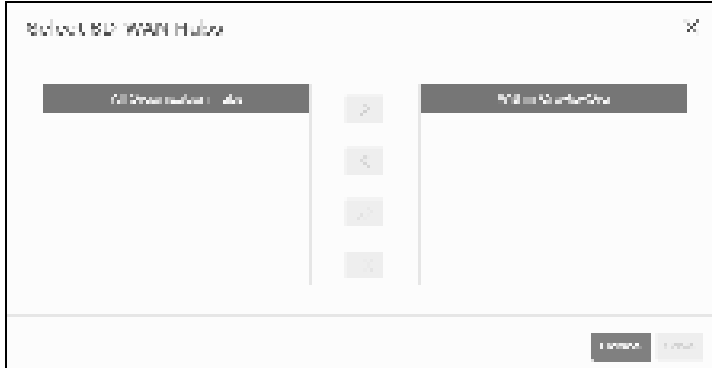

Hubs are listed in this screen and you may choose whether to include them in the org-to-org network or not by clicking the "<" and ">" buttons. The "<<" and ">>" buttons move all hubs at once. Details about this screen are described in the table below.

The following table describes the labels in this screen.

Table 227 Group-wide > Group-wide manage > Org-to-Org VPN: SD-WAN Hubs

LABEL	DESCRIPTION
All Organization Hubs	This box lists all hub sites in the group that are outside the org-to-org network. It shows the name of the hub followed by the Organization it belongs to in parentheses.
Within Org-to-Org	This box lists all hub sites inside the org-to-org network. It shows the name of the hub followed by the Organization it belongs to in parentheses.
Cancel	Click Cancel to exit this screen without saving.
Save	Click Save to add the hubs to the org-to-org network.

13.3.5 Service

Use this screen to add a service accessible through the org-to-org VPN. Note that you can choose to add only the FQDN or only the IP address. Click +Org-to-Org Service and then the following screen appears.

Figure 299 Group-wide > Group-wide manage > Org-to-Org VPN: Service

The following table describes the labels in this screen.

Table 228 Group-wide > Group-wide manage > Org-to-Org VPN: Service

LABEL	DESCRIPTION
Organization	Select the organization to which the service you want to add is linked to.
FQDN	Enter the Fully-Qualified Domain Name (FQDN) associated with the service. An FQDN starts with a host name and continues all the way up to the top-level domain name. For example, www.zyxel.com.tw is a fully qualified domain name, where "www" is the host, "zyxel" is the third-level domain, "com" is the second-level domain, and "tw" is the top level domain. Underscores are not allowed. Use "*" as a prefix in the FQDN for a wildcard domain name (for example, *.example.com).
IP Address	Enter the IP address of the service you want to add to the org-to-org VPN.
Save	Click Save to allow access to the service through the org-to-org VPN.
Cancel	Click Cancel to exit this screen without saving.

13.4 Inventory

Use this screen to view all Nebula Devices in the organizations of the selected group. Click Group-wide > Group-wide manage > Inventory to access this screen.

Figure 300 Group-wide > Group-wide manage > Inventory

[illegible]

The following table describes the labels in this screen.

Table 229 Group-wide > Group-wide manage > Inventory

LABEL	DESCRIPTION
Unused	Click this button to show the Nebula Devices which are not assigned to a site yet.
Used	Click this button to show the Nebula Devices which are assigned to a site.
Both	Click this button to show all Nebula Devices which are registered for the organizations in the group.
Search	Enter a key word as the filter criteria to filter the list of connected Nebula Devices. Open the search box drop-down list to filter the search results by site, model, and country.
Devices	This shows the number of the Nebula Devices in the list.

Table 229 Group-wide > Group-wide manage > Inventory (continued)

LABEL	DESCRIPTION
Export	Click this button to save the Nebula Device list as a CSV or XML file to your computer.
MAC address	This shows the MAC address of the Nebula Device. Click on the MAC address to view the Nebula Device details page.
Serial number	This shows the serial number of the Nebula Device.
Organization	This shows the organization of the Nebula Device.
Site	This shows the name of the site to which the Nebula Device is connected.
Model	This shows the model number of the Nebula Device.
Registered on (UTC)	This shows the date and time that the Nebula Device was registered at the NCC.
Country	This shows the country where the Nebula Device is located.
Device type	This shows the type of the Nebula Device.

13.5 Administrators

Group Administrator accounts can be added, modified, or deleted through this screen. A group administrator has administrator privileges in all organizations in the group. Group administrators are registered using their NCC account email address.

Click Group-wide > Group-wide manage > Administrators to access this screen.

Figure 301 Group-wide > Group-wide manage > Administrators

Name	Email address	Privilege	Account status	Last access time (UTC)	Create time (UTC)	Status
admin@ncc.com	admin@ncc.com	Organization Delegation	OK	2021-03-25 14:48:06	2021-03-25 14:48:06	2021-03-25
admin@ncc.com	admin@ncc.com	Organization Delegation	OK	2021-03-25 14:48:06	2021-03-25 14:48:06	2021-03-25
admin@ncc.com	admin@ncc.com	Organization Delegation	OK	2021-03-25 14:48:06	2021-03-25 14:48:06	2021-03-25
admin@ncc.com	admin@ncc.com	Organization Delegation	OK	2021-03-25 14:48:06	2021-03-25 14:48:06	2021-03-25
admin@ncc.com	admin@ncc.com	Organization Delegation	OK	2021-03-25 14:48:06	2021-03-25 14:48:06	2021-03-25

The following table describes the labels in this screen.

Table 230 Group-wide > Group-wide manage > Administrators

LABEL	DESCRIPTION
Activation	Click this button to Activate/Deactivate the selected accounts. Then, click Update.
Force logout	Click this button to force the selected accounts to log out of NCC.
Delete	Click this button to remove group administrator privileges for the selected accounts.
Search	Specify your desired filter criteria to filter the list of administrator accounts.

Table 230 Group-wide > Group-wide manage > Administrators (continued)

LABEL	DESCRIPTION
selected in administrators	This shows the number of administrator accounts selected from the total number in the list.
Import	Click this button to create administrator accounts in bulk by importing a complete list of all new administrators in an Excel file.  The image shows a 'Bulk Import' dialog box with a close button (X) in the top right. The text inside says: 'Bulk Import' supports for faster inputting. Please follow this tutorial to import. There is a green 'Browse' button and a grey 'Close' button. Below the buttons, it says 'Or drag file here...'.
Add	Click this button to create a new group administrator account. See Section 13.5.1 on page 791 .
Name	This shows the name of the administrator account.
Email address	This shows the email address of the administrator account.
Privilege	This shows the privileges the administrator has within all organizations in the group. Owner: the administrator account is the creator of the organization, who has full access to that organization and cannot be deleted by other administrators. The administrator account can delete an organization, transfer ownership of an organization, including ownership of the Nebula Devices. Full: the administrator can edit settings, create or delete other administrator accounts, create or delete a site, and add or renew licenses for Nebula Devices in the organization. Read: the administrator account has no write access to the organization, but can be a site administrator. Delegated: The administrator account has delegated owner privileges. This type of account can perform all of the same actions as the organization owner, except for the following: • Delete organization • Transfer organization ownership • Assign delegate owner privileges to an administrator account.
Account status	This shows whether the administrator account has been validated (OK). It shows Deactivated if an administrator account has been created but cannot be used. This may happen since you can only have up to five active administrator accounts in the NCC base tier.
Last access time (UTC)	This shows the last date and time traffic was sent from the administrator account.
Create date (UTC)	This shows the date and time the administrator account was created.
Status change date (UTC)	This shows the last date and time the administrator account status was changed.
	Click this icon to display a greater or lesser number of configuration fields.

13.5.1 Create/Update Administrator

In the Group-wide > Group-wide manage > Administrators screen, click the Add button to add a new group administrator account or double-click an existing account entry to modify the account settings.

Figure 302 Group-wide > Group-wide manage > Administrators: Create/Update administrator

The screenshot shows a 'Create administrator' dialog box. It has a title bar with the text 'Create administrator' and a close button (X). The dialog contains the following fields and controls:

- Name:** A text input field with a clear button (X) and a red error indicator.
- Email:** A text input field with a clear button (X) and a red error indicator.
- Organization access:** A dropdown menu currently showing 'Full'.
- Delegate owner's authority:** A checkbox that is currently unchecked, with an information icon (i) to its right.
- Activate:** A dropdown menu currently showing 'No'.
- Buttons:** At the bottom right, there are two buttons: 'Close' and 'Create admin'.

The following table describes the labels in this screen.

Table 231 Group-wide > Group-wide manage > Administrators: Create/Update administrator

LABEL	DESCRIPTION
Name	Enter a descriptive name for the administrator account.
Email	Enter the email address of the administrator account, which is used to log into the NCC. This field is read-only if you are editing an existing account.
Organization access	This shows the privileges the administrator has within all organizations in the group. Full: the administrator can edit settings, create or delete other administrator accounts, create or delete a site, and add or renew licenses for Nebula Devices in the organization. Read Only: the administrator account has no write access to the organization, but can be a site administrator.
Delegate owner's authority	This setting is only available when Organization access is set to Full. Select this setting to grant delegate owner privileges to an organization full administrator account. An account with delegate owner privileges can perform all of the same actions as the organization owner, except for the following: - Delete organization - Transfer organization ownership - Assign delegate owner privileges to an administrator account.
Activate	Select Yes to enable the account or No to temporarily disable the account.
Close	Click this button to exit this screen without saving.
Create admin/Update admin	Click this button to save your changes and close the screen.

13.6 Change Log

Use this screen to view logged messages for changes in all organizations in the group. Click Group-wide > Group-wide manage > Change log to access this screen.

When the log is full, it deletes older entries one by one to make room for newer ones.

Figure 303 Group-wide > Group-wide manage > Change log

The following table describes the labels in this screen.

Table 232 Group-wide > Group-wide manage > Change log

LABEL	DESCRIPTION
Keyword	Enter a keyword or specify one or more filter criteria to filter the list of log entries.
Range/Before	Select a filtering option, set a date, and then click Search to filter log entries by date. Range: Display log entries from the first specified date to the second specified date. Before: Display log entries from the beginning of the log to the selected date.
Search	Click this to update the list of logs based on the search criteria.
Reset filters 	Click this to return the search criteria to the previously saved time setting.
Newer/Older	Click to sort the log messages by most recent or oldest.
N change logs within the time filtered.	This shows the total number of the log messages that match the search criteria. It also shows the date and time the very first log was created.
Export	Click this button to download the log list as a CSV or XML file to your computer.
Time (UTC)	This shows the date and time in UTC+00:00 (or UTC+0) when the log was recorded. UTC is a standard time for use around the world (formerly known as Greenwich Mean Time or GMT). UTC is an international abbreviation that is neither French nor English. It means both "Temps Universel Coordonné" and "Coordinated Universal Time".
Admin	This shows the name of the NCC administrator account that made the changes.
Page	This shows the name of the NCC menu in which the change was made.
Label	This shows the action that triggered the log entry
Old value	This shows the old setting or state that was overwritten with the new value.


Table 232 Group-wide > Group-wide manage > Change log (continued)

LABEL	DESCRIPTION
New value	This shows the new setting or state.
	Click this icon to display a greater or lesser number of configuration fields.

13.7 Group Settings

Use this screen to change your general group settings, such as the group name and members. Click Group-wide > Group-wide manage > Group settings to access this screen.

Figure 304 Group-wide > Group-wide manage > Group settings

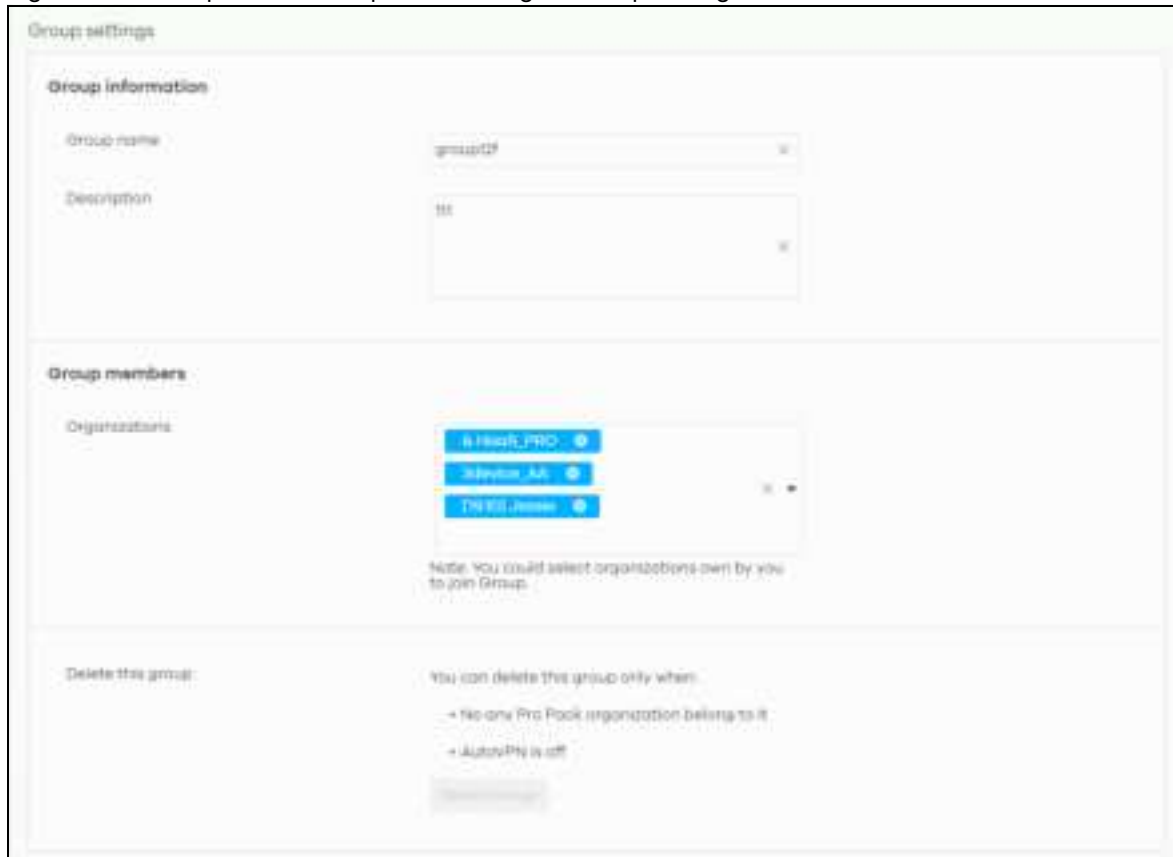

The following table describes the labels in this screen.

Table 233 Group-wide > Group-wide manage > Group settings

LABEL	DESCRIPTION
Group information	
Group name	Enter a descriptive name for the group.
Description	Enter a description for the group.
Group members	

Table 233 Group-wide > Group-wide manage > Group settings (continued)

LABEL	DESCRIPTION
Organizations	Click in the box to add an organization to the group. Click X to remove an organization from the group. Note: You must be the group owner, and each group must have a Pro license.
Delete this group	Click this to delete the group. Note: You can only delete a group if it contains no organizations, and Hub to Hub VPN is disabled at Group-wide > Group-wide manage > Org-to-Org VPN.

PART V

MSP

CHAPTER 14

MSP

14.1 Overview

The MSP (Managed Services Provider) menus allow you to view the summary of organizations and change the branding on NCC.

An MSP license that expires will keep the previous settings in MSP but disable the MSP features.

An MSP license can be transferred to another MSP administrator. Click the More icon at the top right-hand corner of the Dashboard screen and click the My devices & services > Services tab to view the Status of MSP licenses. To transfer an MSP license, select the MSP license and click Actions > Transfer license. Alternatively, click Transfer license under Actions.

Figure 305 Transfer an MSP License




Note: To see these menus, assign an MSP license to your NCC login account.

14.2 MSP Portal

This screen lists every organization to which your account has at least read-only access.

To access this screen, select MSP portal from the Organization drop-down list box in the title bar, or click MSP > MSP cross-org manage > MSP portal in the navigation panel.

Figure 306 MSP > MSP cross-org manage > MSP portal

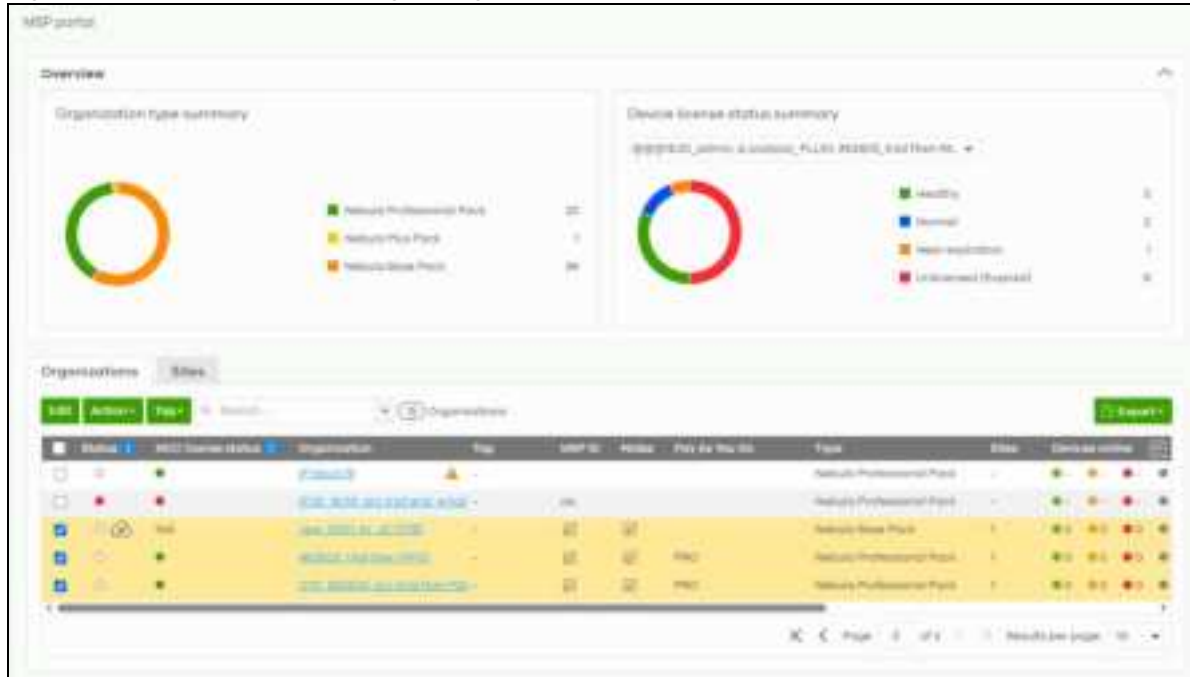

The following table describes the labels in this screen.

Table 234 MSP > MSP cross-org manage > MSP portal

LABEL	DESCRIPTION
Organization type summary	This pie chart shows the total number of the organization mode (for example, x PRO, x Plus, x Base organizations).
Device license status summary	This pie chart shows the total number of Nebula managed devices with NCC and ATP licenses only. You can select the organization to display in the drop-down list. Click a particular color in the pie chart to show the details of the licenses of the selected organizations.
Organizations	
Edit	Click the Edit button to open a screen where you can change the MSP ID and Notes of the Organization. See Table 224 on page 778 for more information on MSP ID and Notes criteria. The 'MSP ID & Notes Update' dialog box shows the 'Organization name' as 'Nebula_Org'. It has a text input field for 'MSP ID' containing 'Sample MSP ID' and a text area for 'Notes'. There are 'Cancel' and 'Update' buttons at the bottom.

Table 234 MSP > MSP cross-org manage > MSP portal (continued)

LABEL	DESCRIPTION
Action	Perform an action on the selected Nebula organization. - Deactivate CSM. Select the organization(s) and click this button to disable CSM (Cloud-Saving Mode). See Section 1.7 on page 67 for more information on Cloud-saving mode. - Restrict/allow device ownership takeover. Select this to open a screen where you can allow/prohibit the transfer of Nebula Device to another administrator's organization by using the Nebula Mobile app. Click this switch to the right to prohibit Nebula Device transfer between administrators.
Tag	Assign a name to an organization or to a group of organizations. - Select the organizations. The Tag button will be enabled. - Click Tag. - In the Add field, enter a tag (up to 32 alphanumeric characters and spaces are allowed). - Click +Add new. Then Add to confirm. To remove the tag assigned to an organization or to a group of organizations. - Select the organization with an assigned tag. - Click Tag. - Enter the name of the tag. As you type along, NCC will automatically show the names of tags that matches. - Select the tag. Then click Remove.
Search	Specify your desired filter criteria to filter the list of organizations and organization status.
matches in	This shows the number of organizations that match your filter criteria after you perform a search.
Organizations	This shows the number of organizations that you can manage.
*	Click this to select all rows. Alternatively, click a row to go to the Sites tab that will show the sites belonging to the organization.
Status	This shows the status of Nebula Devices in the organization. - Green: All Nebula Devices are online and have no alerts. - Orange: Some Nebula Devices have alerts. - Red: Some Nebula Devices are offline. - Gray: All Nebula Devices have been offline for 7 days or more. - White: No Nebula Devices in this organization.  : This organization is in Cloud-saving mode.
NCC license status	This shows the license status of Nebula Devices in the organization. - Green: All Nebula Devices with over 1 year licenses. - Blue: Any Nebula Device with over 90 days but less than 1 year license together with another Nebula Device with over 1 year license. - Orange: Any Nebula Device with license that will expire in 90 days together with another Nebula Device with over 90 days license. - Red: Any Nebula Device with an expired license or is unlicensed. - Gray: No Nebula Devices in this organization.
Organization	This shows the descriptive name of the organization. Click an Organization to go to the Organization-wide > Organization-wide manage > Organization portal screen. Hover the mouse over the name of the Organization to display the site information window. Clicking a Site name will go to the Site-wide > Dashboard screen.

Table 234 MSP > MSP cross-org manage > MSP portal (continued)

LABEL	DESCRIPTION
Tag	This shows the tag name assigned to this organization. Otherwise, the organization does not have a tag.
MSP ID	This shows the customer ID used by the administrator of the organization on another system. For example, CRM (Customer Relationship Management) and ERP (Enterprise Resource Planning) systems.
Notes	This shows the user-specified description of the MSP ID.
Pay As You Go	This shows the payment plan if the organization is using PAYG (Pay As You Go). In the Zyxel Circle website (if the NCC account has a Circle account) select the Gold Pack plan (Pro, GSP) or the Pro Pack plan (PRO). See the Circle User's Guide for more information on Pay As You Go. Otherwise, the value will be blank.
Type	This shows your NCC version type.
Sites	This shows the number of sites belonging to this organization.
Devices online	This shows the number of Nebula Devices in this organization which are online (green), have recently had alerts (orange), recently went offline (red), or have been offline for more than 6 days (gray).
AP	This shows the number of Nebula access points connected to the sites in this organization.
SW	This shows the number of Nebula switches connected to the sites in this organization.
Security appliance	This shows the number of Nebula security appliances connected to the sites in this organization.
MR	This shows the number of Nebula mobile routers connected to the sites in this organization.
Device ownership takeover	This shows Allow if the Nebula Device can transfer to another administrator's organization using the Nebula Mobile app. This shows Restrict if the Nebula Device cannot transfer to another administrator's organization using the Nebula Mobile app.
Next NCC license expiration date	This shows the date when the license will expire, or N/A when there is no Nebula-managed device in the organization. For example, if you have two Nebula Devices in the organization: - Nebula Device 1 is with NCC license expiration date on 2022/10/1 - Nebula Device 2 is with NCC license expiration date on 2022/11/1 This field will show the nearest expiration date '2022/10/1'.
# devices will expire in 90 days	This shows the number of Nebula-managed devices with licenses that will expire in 90 days or less in this organization.
# unused NCC license	This shows the number of unused NCC (Nebula Control Center) licenses in this organization.
	Click this icon to display a greater or lesser number of configuration fields.
Export	Click this button to save the MSP Portal list as a CSV or XML file to your computer.
Sites	
Search	Specify your desired filter criteria to filter the list of sites.
matches in	This shows the number of sites that match your filter criteria after you perform a search.
sites	This shows the number of sites that you can manage.
*	Click this to select all rows.

Table 234 MSP > MSP cross-org manage > MSP portal (continued)

LABEL	DESCRIPTION
Status	This shows the status of Nebula Devices in the site. - Green: All Nebula Devices are online and have no alerts. - Orange: Some Nebula Devices have alerts. - Red: Some Nebula Devices are offline. - Gray: All Nebula Devices have been offline for 7 days or more. - White: No Nebula Devices in this site.
Organization	This shows the descriptive name of the organization.
Site	This shows the descriptive name of the site. Clicking a site name will go to the Site-wide > Dashboard screen.
Tags	This shows the tag name assigned to this site. Otherwise, the site does not have a tag.
Devices	This shows the number of Nebula Devices connected to the site.
Offline devices	This shows the number of Nebula Devices in this site which are offline.
% Offline	This shows the percentage of Nebula Devices in this site which are offline.
Template	This shows the name of the template that is bound to a site.
	Click this icon to display a greater or lesser number of configuration fields.
Export	Click this button to save the MSP Portal list as a CSV or XML file to your computer.

14.3 Admins & Teams

The Admins & teams enables you to assign an administrator or a group of administrators (a team) to multiple organizations at the same time. This is faster than configuring administrators for each organization at Organization-wide > Administrators, especially if you have a large number of organizations.

14.3.1 Administrator Privilege Priority

You can configure organization administrator privileges on the following screens:

- MSP > MSP cross-org manage > Admins & teams > MSP admins & teams
- MSP > MSP cross-org manage > Admins & teams > Org. administrators
- Group-wide > Group-wide manage > Administrators
- Organization-wide > Administrators

If an NCC account has different administrator privileges configured on different screens, then the highest privilege level takes priority.

Example, account User1 has four different privilege levels configured for organization Org1 on the four screens above: None, Read-Only, Full, Full (Delegate). User1's final privilege level for Org1 is Full (Delegate).

14.3.2 MSP admins & teams Screen

In the MSP, a team is a collection of MSP administrator accounts. A group is a collection of two or more organizations.

- An MSP administrator can be assigned to multiple MSP teams.
- The role of an MSP administrator is the union of their individual role assigned at the organization-wide level and the roles granted using the MSP teams they belong to.

The admins and teams screen allows you to assign an administrator account to multiple organizations, and assign administrator privileges to a group of administrator accounts (a team). To access this screen, click MSP > MSP cross-org manage > Admins & teams > MSP admins & teams.

Note: Some of the actions on this screen are only available if your administrator account has full access to the organization.

Figure 307 MSP > MSP cross-org manage > Admins & teams > MSP admins & teams



The following table describes the labels in this screen.

Table 235 MSP > MSP cross-org manage > Admins & teams > MSP admins & teams

LABEL	DESCRIPTION
Actions	Click this button to assign MSP administrators: • Assign to teams: select the MSP team(s) to assign the administrator(s) to. • Add to organizations: select the MSP organization(s) to assign the administrator(s) and MSP team(s) to. • Add to sites: create an MSP team to contain the sites to add the administrator(s) and MSP account(s) to it, then select the site(s) in the organization(s). A team is a collection of MSP accounts. A group is a collection of organizations. • Add to group: select the MSP team(s) to assign the administrator(s) and MSP team(s) to. • Assign MSP Pack license: select or enter the License key to assign an MSP Pack license to the MSP administrator.
Delete	Click this button to remove administrator(s) or MSP team(s).
All / Admins / Teams	You can set the filter to display the administrator account(s) or MSP team(s) only. By default, all administrator account(s) and MSP team(s) are displayed (All).
Search	Specify your desired filter criteria to filter the list of administrator accounts.
N selected in T item(s)	This shows the number of administrator accounts (N) selected in the total number of entries (T) in the list.
Export	Click this button to save the MSP administrators and MSP teams list as a CSV or XML file to your computer.
*	Click this to select all rows. Alternatively, click a row to go to the Update MSP admin screen that allows you to change the MSP administrator's profile, assign the MSP role, assign the organization/site's privilege, and assign an MSP Pack license. Then click OK.
Name	This shows the name of the administrator account.
Description	This shows the user-specified description for the administrator account.

Table 235 MSP > MSP cross-org manage > Admins & teams > MSP admins & teams (continued)

LABEL	DESCRIPTION
Email address	This shows the email address of the administrator account.
Expires	This shows how long the account is valid. Never expire – this account never expires. Expire on – this specifies the date the account is valid.
Account status	This shows OK when the administrator account has accepted the MSP role invitation. This shows Deactivated if an administrator account has been created but cannot be used. This shows Pending if an administrator account has been assigned an MSP role but has yet to accept it.
Teams	This shows the name of the team(s) the MSP account belongs to.
MSP Role	This shows the role the administrator has within the specified site. Master: the owner of the MSP. Each MSP can only have one MSP master. Backup: the MSP master can assign administrators as the MSP backup. A backup administrator belongs to only one MSP master. An MSP backup can take on the role of the MSP master when the MSP master's MSP Pack license expires. Note: An MSP backup cannot assign another MSP backup. Note: The organization bound to the MSP will automatically have its MSP master and MSP backup assigned to it. Sub-admin: The MSP master or MSP backup can assign additional administrators, referred to as MSP sub-admins. An MSP sub-admin belongs to only one MSP master and/or MSP backup. The MSP master automatically becomes co-administrator of organization(s) created by the MSP sub-admin (an MSP Pack license is optional). For example, Bob was added as an MSP sub-admin. Bob creates a new 'ORG B'. Then the MSP master will be the owner of 'ORG B'. 3rd-party admin: Administrator(s) who do not belong to the MSP but are assigned the Installer or Guest Ambassador privileges.
Org/Site privilege	This shows the privileges the administrator has within the specified organization or site. Owner: the administrator account is the creator of the organization, who has full access to that organization and cannot be deleted by other administrators. The administrator account can delete an organization, transfer ownership of an organization, including ownership of the Nebula Devices. Full: the administrator can edit settings, create or delete other administrator accounts, create or delete a site, and add or renew licenses for Nebula Devices in the organization. Read: the administrator account has no write access to the organization, but can be a site administrator. Delegated: The administrator account has delegated owner privileges. This type of account can perform all of the same actions as the organization owner, except for the following: • Delete organization • Transfer organization ownership • Assign delegate owner privileges to an administrator account
Customer groups	This shows the name of the collection of organizations owned by a customer that is bound to an MSP account.
	Click this icon to display a greater or lesser number of configuration fields.

14.3.3 Create/Update MSP Administrator

In the MSP > MSP cross-org manage > Admins & teams > MSP admins & teams screen, click the + Create MSP admin button to add a new administrator account, or click an existing account entry to modify the account settings.

Note: NCC does not count the administrators created in MSP admin & teams to the Base tier and Nebula Plus Pack number of administrator account limit.

An NCC account with an MSP license can add administrators (with/without an MSP Pack license) to the Base tier and Nebula Plus Pack organizations without limit.

Figure 308 MSP > MSP cross-org manage > Admins & teams > MSP admins & teams: Create/Update MSP admin

The following table describes the labels in this screen.

Table 236 MSP > MSP cross-org manage > Admins & teams > MSP admins & teams: Create/Update MSP admin

LABEL	DESCRIPTION
Name	Enter a descriptive name for the administrator account. Enter up to 100 characters in this field including special characters inside the square quotes [~!@#\$%^&*()_+{} :"<>?-=[]\;',./]. The name is not editable after saving it.
Email	Enter the email address of the administrator account, which is used to log into the NCC. This field is read-only if you are editing an existing account.

Table 236 MSP > MSP cross-org manage > Admins & teams > MSP admins & teams: Create/Update MSP admin (continued)

LABEL	DESCRIPTION
Description	Enter a description for this administrator. You can use alphanumeric and ()+/:=?!*#@\$_%- characters, and it can be up to 60 characters long.
Activated	Click the switch to the right to enable the account. Alternatively, click the switch to the left to temporarily disable the account.
Validity	Specify how long the account is valid. Choices are: Never – select this if the account never expire. Expire on – select this to specify the date the account can no longer access the organization. Select Delete this admin when expired to remove this account from the administrator list when the Expire on date has been reached. Otherwise, this account will remain on the administrator list with an inactivated status.
Backup role	Click the switch to the right to assign the role of MSP backup to the administrator.
MSP roles	Select the MSP role the administrator has within the selected organizations. Sub-admin: The MSP master or MSP backup can assign additional administrators, referred to as MSP sub-admins. An MSP sub-admin belongs to only one MSP master and/or MSP backup. The MSP master automatically becomes co-administrator of organization(s) created by the MSP sub-admin (an MSP Pack license is optional). 3rd-party admin: Administrator(s) who do not belong to the MSP but are assigned the Installer or Guest Ambassador privileges.
Org/Site privilege	Select the privileges the administrator has within the selected sites. Full: the administrator can edit settings, create or delete other administrator accounts, create or delete a site, and add or renew licenses for Nebula Devices in the site. Read: the administrator account has no write access to the site, but can be a site administrator. Installer: the administrator can register Nebula Devices at this site. Guest Ambassador: the administrator can only access the Site-wide > Configure > Vouchers and Site-wide > Configure > Cloud authentication pages to create, remove, or manage WiFi vouchers and captive portal user accounts in a site.
Cancel	Click this button to exit this screen without saving.
Ok	Click this button to save your changes and close the screen.

14.3.4 Create/Update Team

In the MSP > MSP cross-org manage > Admins & teams > MSP admins & Teams screen, click the + Create MSP team button to add a new administrator team, or click an existing team entry to modify its settings.

Figure 309 MSP > MSP cross-org manage > Admins & teams > MSP admins & Teams: Create/Update MSP teams

The following table describes the labels in this screen.

Table 237 MSP > MSP cross-org manage > Admins & teams > MSP admins & teams: Create/Update MSP teams


LABEL	DESCRIPTION
Team name	Enter a descriptive name for the team. Enter up to 15 characters in this field including special characters inside the square quotes [~!@#\$\$%^&*()_+{}].:"<>?-= []\;',./]. The name is not editable after saving it.
Description	Enter a description of the team, for example their role or membership. Enter up to 64 characters for this field including special characters inside the square quotes [~!@#\$\$%^&*()_+{}].:"<>?-= []\;',./].
Team members	Select the administrators to add as members of the MSP team.
Org/Site privilege	Select the privileges the team members have within the selected organizations. Full: the administrator can edit settings, create or delete other administrator accounts, create or delete a site, and add or renew licenses for Nebula Devices in the site. Read: the administrator account has no write access to the site, but can be a site administrator. Installer: the administrator can register Nebula Devices at this site. Guest Ambassador: the administrator can only access the Site-wide > Configure > Vouchers and Site-wide > Configure > Cloud authentication pages to create, remove, or manage WiFi vouchers and captive portal user accounts in a site.
Cancel	Click this button to exit this screen without saving.
OK	Click this button to save your changes and close the screen.

14.3.5 Customer orgs & groups Screen

The customer organizations and groups screen allows you to add an organization or a collection of organizations owned by a customer that is bound to an MSP account. To access this screen, click MSP > MSP cross-org manage > Admins & teams > Customer orgs & groups.

Note: Some of the actions on this screen are only available if your administrator account has full access to the organization.

Figure 310 MSP > MSP cross-org manage > Admins & teams > Customer orgs & groups

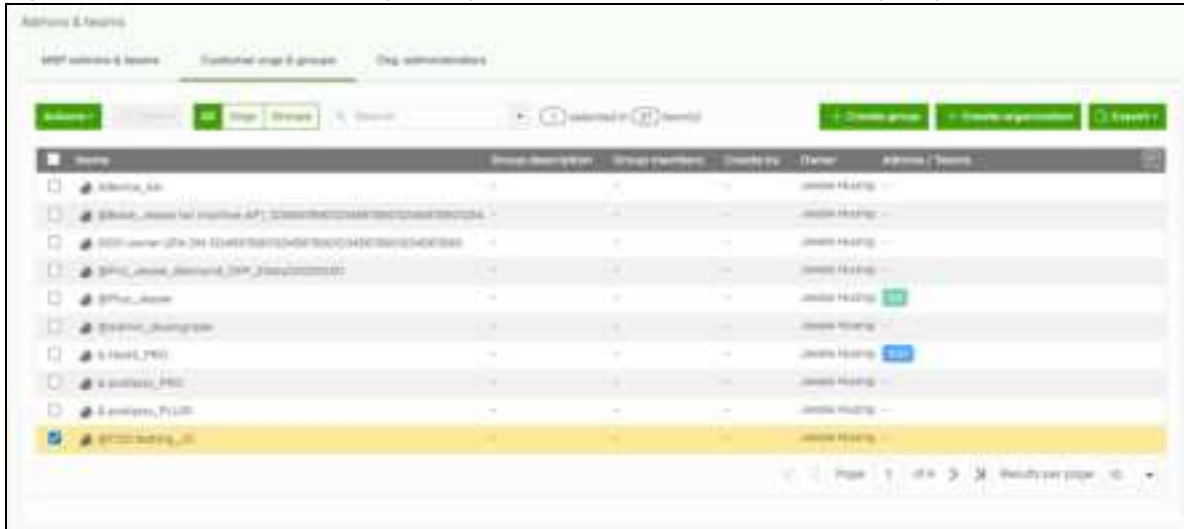

The following table describes the labels in this screen.

Table 238 MSP > MSP cross-org manage > Admins & teams > Customer orgs & groups

LABEL	DESCRIPTION
Actions	Click this button to assign the customer organizations or customer groups: - Add org(s) to group: select the customer group(s) to assign the organization(s) owned by the customers to. - Add MSP admins to orgs/groups: select the administrator(s) and team(s) to assign the organization(s) owned by the customers to.
Delete	Click this button to remove the customer organizations or customer groups.
All / Orgs / Groups	You can set the filter to display the customer organization(s) or customer group(s) only. By default, all customer organization(s) and customer group(s) are displayed (All).
Search	Specify your desired filter criteria to filter the list of customer organization(s) and customer group(s).
N selected in T item(s)	This shows the number of customer organizations and customer groups (N) selected in the total number (T) of entries in the list.
Export	Click this button to save the customer organization(s) and customer group(s) list as a CSV or XML file to your computer.
*	Click this to select all rows. Alternatively, click a row to go to the Update organization screen that allows you to add/remove the customer administrators and add/remove the customer groups. Then click OK.
Name	This shows the name of the customer organization(s) and customer group(s).
Group Description	This shows the user-specified description for the customer organization(s) and customer group(s).
Group members	This shows the name of the organizations or sites that these members belong to, the number of members in the customer group and the organization privilege assigned to it.
Create by	This shows the name of the administrator account that created the customer groups. It will show '-' (dash) for organizations.
Owner	This shows the name of the owner of the organization.
Admins / Teams	This shows the name of the MSP accounts and MSP teams that the administrator account belongs to.
	Click this icon to display a greater or lesser number of configuration fields.

14.3.6 Create Group

In the MSP > MSP cross-org manage > Admins & teams > Customer orgs & groups screen, click the + Create group button to select the organizations/sites and administrators/MSP teams to include in a customer group.

Figure 311 MSP > MSP cross-org manage > Admins & teams > Customer orgs & groups: Create group

The following table describes the labels in this screen.

Table 239 MSP > MSP cross-org manage > Admins & teams > Customer orgs & groups: Create group

LABEL	DESCRIPTION
Group name	Enter a descriptive name for the customer group. Enter up to 100 characters in this field including special characters inside the square quotes [~!@#%\$^&*()_+{} :"<>?=-[]\;',./]. The name is not editable after saving it.
Description	Enter a description for this customer group. You can use alphanumeric and ()+/:=?!*#@\$_%- characters, and it can be up to 256 characters long.
Group members	Click Organizations only to select the organizations, or click Sites of an organization and then click +Add to select the sites to include in the customer group.
MSP admins	Select the MSP administrators to include in the customer group.
MSP teams	Select the MSP teams to include in the customer group.
Cancel	Click this button to exit this screen without saving.
Ok	Click this button to save your changes and close the screen.

14.3.7 Update Organization

In the MSP > MSP cross-org manage > Admins & teams > Customer orgs & groups screen, click an existing customer group entry to update the administrators, MSP teams and groups.

Figure 312 MSP > MSP cross-org manage > Admins & teams > Customer orgs & groups: Update organization

The following table describes the labels in this screen.


Table 240 MSP > MSP cross-org manage > Admins & teams > Customer orgs & groups: Update organization

LABEL	DESCRIPTION
Organization name	This field displays the name of the MSP organization. This field is read-only.
MSP admins	Select the MSP administrators to include in the organization.
MSP teams	Select the MSP teams to include in the organization.
Groups	Select the customer group(s) to include in the organization.
Cancel	Click this button to exit this screen without saving.
Ok	Click this button to save your changes and close the screen.

14.3.8 Create Organization


In the MSP > MSP cross-org manage > Admins & teams > Customer orgs & groups screen, click the + Create organization button to add a new MSP organization administrator, or click an existing MSP organization/group entry to modify its settings.

Figure 313 MSP > MSP cross-org manage > Admins & teams > Customer orgs & groups: Create organization / Update group

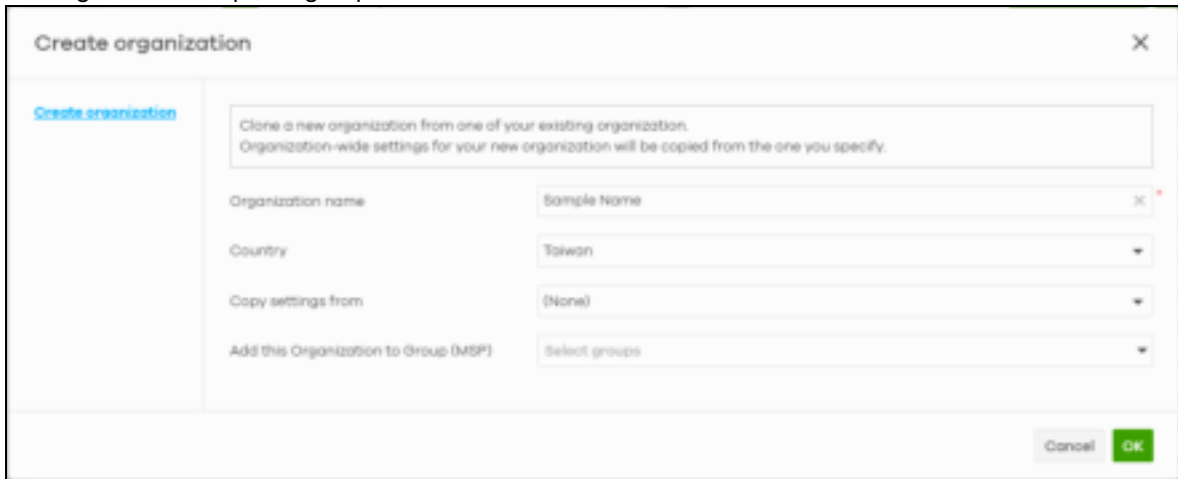

The 'Create organization' dialog box features a sidebar with a 'Create organization' link. The main area contains a text box with instructions: 'Clone a new organization from one of your existing organization. Organization-wide settings for your new organization will be copied from the one you specify.' Below this are four form fields: 'Organization name' (text input with 'Sample Name'), 'Country' (dropdown menu with 'Taiwan'), 'Copy settings from' (dropdown menu with '(None)'), and 'Add this Organization to Group (MSP)' (dropdown menu with 'Select groups'). At the bottom right are 'Cancel' and 'OK' buttons.

Figure 314 MSP > MSP cross-org manage > Admins & teams > Customer orgs & groups: Update organization

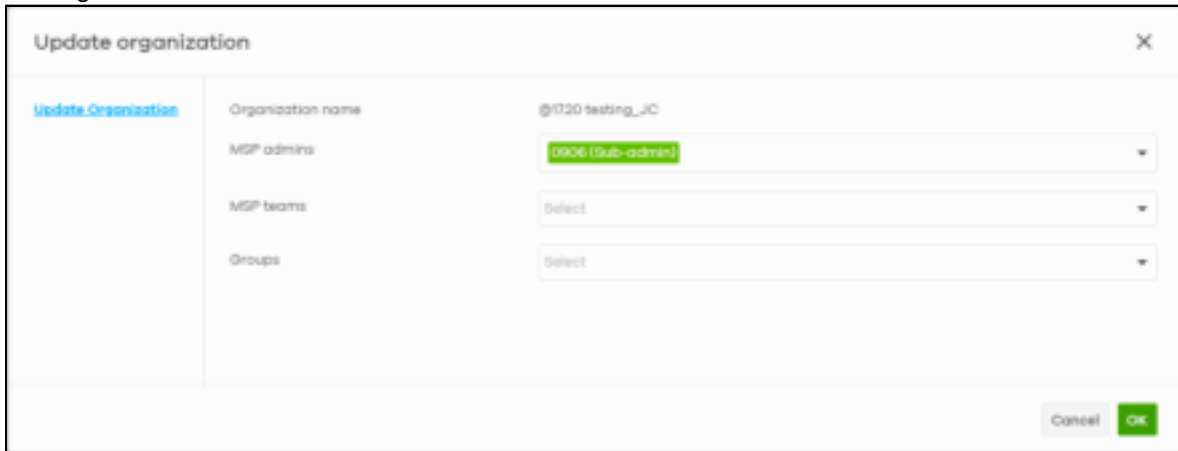

The 'Update organization' dialog box has a sidebar with an 'Update Organization' link. The main area displays four form fields: 'Organization name' (text input with '@1720 testing_JC'), 'MSP admins' (dropdown menu with '0906 (Sub-admin)'), 'MSP teams' (dropdown menu with 'Select'), and 'Groups' (dropdown menu with 'Select'). At the bottom right are 'Cancel' and 'OK' buttons.

Figure 315 MSP > MSP cross-org manage > Admins & teams > Customer orgs & groups: Update group

The following table describes the labels in this screen.

Table 241 MSP > MSP cross-org manage > Admins & teams > Customer orgs & groups: Create/Update organization / Update group

LABEL	DESCRIPTION
Organization name	This field shows the name of the organization. This field is read-only.
Country	Select where you are located.
Copy settings from	Clone the new organization from an existing organization by selecting the organization to copy settings from.
Add this Organization to Group (MSP) / Groups	Select the customer group(s) to add this organization to.
Group name	This field shows the name of the customer group. This field is read-only.
Description	Enter a description of the customer group, for example their role or membership. Enter up to 256 characters for this field including special characters inside the square quotes [~!@#\$%^&*()_+{} :"<>?-=[]\;',./].
Group members	Click Organizations only to select the organizations, or click Sites of an organization and then click +Add to select the sites to include in the customer group.
MSP admins	Select the administrators to include in the customer group.
MSP teams	Select the MSP teams to include in the customer group.
Cancel	Click this button to exit this screen without saving.
OK	Click this button to save your changes and close the screen.

14.3.9 Org. administrators Screen

The organization-wide administrators screen allows you to manage (add/modify/remove) the organization-wide administrator account from the MSP menu. You do not need to go to each organization's administrator account page to do so. To access this screen, click MSP > MSP cross-org manage > Admins & teams > Org. administrators.

Note: Some of the actions on this screen are only available if your administrator account has full access to the organization.

Figure 316 MSP > MSP cross-org manage > Admins & teams > Org. administrators



The following table describes the labels in this screen.

Table 242 MSP > MSP cross-org manage > Admins & teams > Org. administrators

LABEL	DESCRIPTION
Activation	Click this button to Activate/Deactivate the selected accounts. When you select Activate, specify how long the account is valid. Choices are: - Never expire: select this if the account never expire. - Expire on: select this to specify the date the account can no longer access the organization. Then click Apply.
Delete	Click this button to remove the selected administrator(s), revoking their access to all assigned organization(s).
Search	Specify your desired filter criteria to filter the list of administrator accounts.
N selected in T item(s)	This shows the number of administrator accounts (N) selected in the total number of entries (T) in the list.
+ Add	Click this button to create a new entry in order to configure the account's access to another organization.
Export	Click this button to save the organization-wide administrators list as a CSV or XML file to your computer.
*	Click this to select all rows. Alternatively, click a row to go to the Update Org-wide administrator screen that allows you to change the organization-wide administrator's profile and change the account's access to another organization. Then click Update admin.
Email address	This shows the email address of the administrator account.
Name	This shows the name of the administrator account.

Table 242 MSP > MSP cross-org manage > Admins & teams > Org. administrators (continued)

LABEL	DESCRIPTION
Organization	This shows the name of the organization of the administrator account.
Org. privilege	This shows the privileges the administrator has within the specified organization. Owner: the administrator account is the creator of the organization, who has full access to that organization and cannot be deleted by other administrators. The administrator account can delete an organization, transfer ownership of an organization, including ownership of the Nebula Devices. Full: the administrator can edit settings, create or delete other administrator accounts, create or delete a site, and add or renew licenses for Nebula Devices in the organization. Read: the administrator account has no write access to the organization, but can be a site administrator. Delegated: the administrator account has delegated owner privileges. This type of account can perform all of the same actions as the organization owner, except for the following: • Delete organization • Transfer organization ownership • Assign delegate owner privileges to an administrator account None: the administrator account can only be a site administrator.
Site privilege	This shows the privileges the administrator has within the specified site. Owner: the administrator account is the creator of the organization, who has full access to that organization and cannot be deleted by other administrators. The administrator account can delete an organization, transfer ownership of an organization, including ownership of the Nebula Devices. Full: the administrator can edit settings, create or delete other administrator accounts, create or delete a site, and add or renew licenses for Nebula Devices in the organization. Read: the administrator account has no write access to the organization, but can be a site administrator. Monitor-only: the administrator can view the site's monitor pages for Nebula Access Points, Ethernet Switches, and Security Appliances only. The configuration pages are hidden from view. Installer: the administrator can register Nebula Devices at this site. Guest Ambassador: the administrator can only access the Site-wide > Configure > Vouchers and Site-wide > Configure > Cloud authentication pages to create, remove, or manage WiFi vouchers and captive portal user accounts in a site.
Account status	This shows whether the administrator account has been validated (OK). It shows Deactivated if an administrator account has been created but cannot be used. It shows Pending if an administrator account has been assigned an MSP role but has yet to accept it.
Expires	This shows how long the account is valid. Never expire – this account never expires. Expire on – this specifies the date the account is valid.
Created by	This shows the name of the MSP administrator who created the MSP organization-wide account.
	Click this icon to display a greater or lesser number of configuration fields.

14.3.10 Create Organization-wide Administrator

In the MSP > MSP cross-org manage > Admins & teams > Org. administrators screen, click the + Add button to add a new organization-wide administrator account, or click an existing account entry to modify the account settings.

Note: An NCC account with an MSP license can add organization-wide administrators (with/without an MSP Pack license) to the Base tier and Nebula Plus Pack organizations without limit.

Figure 317 MSP > MSP cross-org manage > Admins & teams > Org. administrators: Add

The following table describes the labels in this screen.

Table 243 MSP > MSP cross-org manage > Admins & teams > Org. administrators: Add

LABEL	DESCRIPTION
Organization	Select an organization for the organization-wide administrator account.
Name	Enter a descriptive name for the organization-wide administrator account. Enter up to 100 characters in this field including special characters inside the square quotes [~!@#\$\$%^&*()_+{} :~<>?-=[]\;',./]. The name is not editable after saving it.
Email	Enter the email address of the organization-wide administrator account, which is used to log into the NCC. This field is read-only if you are editing an existing account.
Description	Enter a description for this administrator. You can use alphanumeric and ()+/:=?!*#@\$_%- characters, and it can be up to 60 characters long.
Activated	Click the switch to the right to enable the organization-wide administrator account. Alternatively, click the switch to the left to temporarily disable the account.

Table 243 MSP > MSP cross-org manage > Admins & teams > Org. administrators: Add (continued)

LABEL	DESCRIPTION
Validity	Specify how long the account is valid. Choices are: Never expire – select this if the organization-wide administrator account never expire. Expire on – select this to specify the date the account can no longer access the organization. Select Delete this admin when expired to remove this account from the administrator list when the Expire on date has been reached. Otherwise, this account will remain on the administrator list with an inactivated status.
Organization access	This shows the privileges the organization-wide administrator has within the specified organization. Full: the organization-wide administrator can edit settings, create or delete other administrator accounts, create or delete a site, and add or renew licenses for Nebula Devices in the organization. Read-only: the organization-wide administrator account has no write access to the organization, but can be a site administrator. None: the organization-wide administrator account can only be a site administrator.
Delegate owner's authority	This setting is only available when Organization access is set to Full. Select this to delegate owner privileges to an organization's administrator account with full privileges. An account with delegated owner privileges can perform all of the same actions as the organization owner, except for the following: • Delete organization • Transfer organization ownership • Assign delegate owner privileges to an administrator account.
Site access	All sites will inherit full permission when Organization access is Full. To set specific privilege for specific sites, please select Read-only or None in Organization access.
Site	Select the sites the organization-wide administrator has access to.
Privilege	Select the privileges the organization-wide administrator has within the selected sites. Full: the organization-wide administrator can edit settings, create or delete other administrator accounts, create or delete a site, and add or renew licenses for Nebula Devices in the site. Read-only: the organization-wide administrator account has no write access to the site, but can be a site administrator. Monitor-only: the organization-wide administrator can view the site's monitor pages for Nebula Access Points, Ethernet Switches, and Security Appliances only. The configuration pages are hidden from view. Installer: the organization-wide administrator can register Nebula Devices at this site. Guest Ambassador: the organization-wide administrator can only access the Site-wide > Configure > Vouchers and Site-wide > Configure > Cloud authentication pages to create, remove, or manage WiFi vouchers and captive portal user accounts in a site.
	Click the remove icon to delete the entry.
+ Add	Click this button to create a new entry in order to configure the account's access to another organization.
Cancel	Click this button to exit this screen without saving.
Create admin	Click this button to save your changes and close the screen.

14.4 Cross-org synchronization

The Cross-org synchronization screen allows you to copy settings or a site from one organization to another. You can also move Nebula Devices with its settings to another organization.

14.4.1 Cross-Org setting sync

Cross-org sync copies the following items from one organization to another organization:

- Organization-wide settings
- Administrators
- Cloud Authentication accounts (Users and MAC)
- Configuration templates

Your account must have owner or organization-full privileges in both source and destination organizations. When copying organization-wide settings, the following settings will not be overwritten if they are already configured in the destination organization:

- Organization-wide > Organization-wide manage > Organization settings > Country
- Organization-wide > Organization-wide manage > Organization settings > Login IP ranges
- Administrators privileges (when source and destination organizations have the same admin account)
- Cloud Authentication account privileges (when source and destination organizations have the same Cloud Authentication account)

When copying configuration templates:

- No sites are bound to the new template site.
- If the destination organization has a template with the same name, then the new template will have a number appended to the end of its name.

14.4.2 Cross-Org site clone

Cross-org site clone copies a site and all of its settings from one organization to another. Your account must have owner or organization-full privileges in both source and destination organizations.

If the destination organization has a site with the same name, then the new site will have a number appended to the end of its name.

The following table describes the Nebula Device (Access Point, Switch, Security Firewall) during cross-org site clone.

Table 244 Nebula Device Cross-org Site Clone

NEBULA DEVICE	CROSS-ORG SITE CLONE	MOVE NEBULA DEVICE TO CLONED SITE – ENABLED	KEEP MANAGEMENT/ WAN INTERFACE – ENABLED
Access Point (AP)	When enabled: - AP site-wide configuration is cloned - Individual AP configuration is NOT cloned (for example, radio settings)	When enabled: AP site-wide configuration and individual AP configuration are cloned (for example, radio settings)	When enabled: AP site-wide configuration and individual AP configuration are cloned (for example, radio settings)
Switch	When enabled: - Switch site-wide configuration is cloned - Individual Switch configuration is NOT cloned (for example, IGMP) - Switch port configuration is NOT cloned	When enabled: - Switch site-wide configuration is cloned - Individual Switch configuration is cloned (for example, IGMP) - Switch port configuration is cloned	When enabled: - Switch site-wide configuration is cloned - Individual Switch configuration is cloned (for example, IGMP) - Switch port configuration is cloned
Security Firewall	When enabled, the site-to-site VPN settings are reset.	When enabled, the site-to-site VPN settings are reset.	When enabled, the site-to-site VPN settings are reset.

14.4.3 Cross-org synchronization Screen

Use this screen to configure cross-org synchronization and cross site clones.

Figure 318 MSP > MSP cross-org manage > Cross-org synchronization

The following table describes the labels in this screen.

Table 245 MSP > MSP cross-org manage > Cross-org synchronization

LABEL	DESCRIPTION
Cross-Org setting sync	
From source organization	Select the organization to copy settings from.
Org. setting	Select the settings that you want to copy from the source to the destination organization. Select All org-wide settings to copy everything.
To dest. organization	Select the organization to copy settings to.
Sync	Click this to copy the selected settings from the source to the destination organization.
Cross-Org site replicate & site move	
Site replicate	Select this to allow the site settings to be copied to the destination organization and any future changes applied to the source organization. The following site-wide settings will be replicated and cannot be reversed: - All site-wide settings, including the site settings and alert settings - Device-related settings, for example, AP & port settings, SSID settings, Switch settings, Port profiles, Security Appliance settings including the VPN-related settings. Note: The Nebula Device specific settings will not be replicated (for example, Nebula Device name, Switch port name, and AP Role).

Table 245 MSP > MSP cross-org manage > Cross-org synchronization (continued)

LABEL	DESCRIPTION
From source organization	Select the organization to copy settings from. Then select one or more sites. Select All sites to copy all sites from the source to the destination organization. Select Move site devices to cloned site in destination organization to include the Nebula Devices. Enable Keep Management/WAN interface to copy the WAN connection settings for the Nebula Devices to the destination organization.
To dest. organization	Select the organization to copy the selected sites to.
Site move with devices	Select this to include the Nebula Devices to the destination organization. You may need to configure the WAN interface, management VLAN, and IPv4 settings when your networking environment is different.
From source organization	Select the organization to copy settings from. Then select one or more sites. Select All sites to copy all sites from the source to the destination organization. Select Include summary reports, IPTV report, alert email recipients and custom logo to sync these information with the source site email recipients. Enable Keep Management/WAN interface to copy the WAN connection settings for the Nebula Devices to the destination organization.
To dest. organization	Select the organization to copy the selected sites to.
Process	Click this to copy the selected sites including the Nebula Devices from the source to the destination organization.

14.5 Backup and Restore

Use these screens to back up your current Nebula Device's configurations to NCC, or restore a previously saved configuration. Click MSP > MSP cross-org manage > Backup & restore to access these screens.

Note: At the time of writing, you can do the following:

- In Cloud mode, back up a Security Firewall's running configuration to NCC and restore a running configuration from NCC to a Security Firewall
- In Cloud Monitoring mode, back up a Security Firewall's local Web Configurator settings to NCC and restore a local Web Configurator settings from NCC to a Security Firewall
- In Cloud mode, back up a Security Router's running configuration to NCC and restore a running configuration from NCC to a Security Router.

You cannot use the local Web Configurator settings in Cloud Monitoring mode to restore the running configuration of the Nebula Device in Cloud mode. Likewise, you cannot use the running configuration in Cloud mode to restore the local Web Configurator settings of the Nebula Device in Cloud Monitoring mode.

Note: A maximum of 10 backups are allowed per site. This includes the backups done in the MSP > MSP cross-org manage > Backup & restore and Site-wide > Devices > Firewall: Live tools: Backup & Restore screens. NCC will automatically remove the oldest backup after exceeding 10 backups.

Note: A backup done in the MSP > MSP cross-org manage > Backup & restore screen is also added to the Site-wide > Devices > Firewall: Live tools: Backup & Restore screen. A manual or scheduled back up done in the Site-wide > Devices > Firewall: Live tools: Backup & Restore screen is also added to the MSP > MSP cross-org manage > Backup & restore screen.

Note: The backups will be removed from NCC when the site it belongs to is deleted.

14.5.1 Backup and Restore Overview Screen

Use this screen to perform a backup or view a list of previous backups and the details. Click MSP > MSP cross-org manage > Backup & restore > Overview to access this screen.

Figure 319 MSP > MSP cross-org manage > Backup & restore > Overview



The following table describes the labels in this screen.

Table 246 MSP > MSP cross-org manage > Backup & restore > Overview

LABEL	DESCRIPTION
Backup	Click this button to create a new backup of the current configuration of the Nebula Device to the NCC.
Search	Select the filter criteria to filter the list of Nebula Devices.
N devices	This shows how many Nebula Devices (N) match the filter criteria and how many Nebula Devices of the selected type are created in total.
	Select an entry's checkbox to select a specific entry. Otherwise, select the checkbox in the table heading row to select all entries.
Organization	This shows the descriptive name of organization.
Site	This shows the descriptive name of site.
Device type	This shows the type of Nebula Device.
Model	This shows the model name of the Nebula Device.
Last backup	This shows the date and time the backup was saved on the NCC server.
Backups	Click Detail to go to the Backups screen. See the next section for details.

14.5.2 Backup and Restore Backups Screen

Use this screen to restore a backup to your Nebula Device. Click MSP > MSP cross-org manage > Backup & restore > Backups to access this screen.

Figure 320 MSP > MSP cross-org manage > Backup & restore > Backups

Backup	Organization	Site	Description	Device type	Model	Backup time	Actions
New York, The Home of Business, 2024-07-01	New York	New York	NCC Rugged configuration backup v1 2024-07-01	Security Appliance	NCC Rugged	2024-07-01 10:28:17 (-04)	[Edit] [Restore] [Download] [Delete]
New York, NCC Rugged configuration backup v1 2024-07-01	New York	New York	NCC Rugged configuration backup v1 2024-07-01	Security Appliance	NCC Rugged	2024-07-01 10:28:17 (-04)	[Edit] [Restore] [Download] [Delete]

The following table describes the labels in this screen.

Table 247 MSP > MSP cross-org manage > Backup & restore > Backups

LABEL	DESCRIPTION
Search	Select the filter criteria to filter the list of backups.
N files	This shows how many backups (N) match the filter criteria and how many Nebula Devices of the selected type are created in total.
Backups	This shows the automatically generated filename of the backup. The format is "Organization name_Site name_Nebula Device model_backup date and time". Note: NCC hides the backup when all compatible Nebula Device(s) are removed from the site. Note: A hidden Security Appliance backup is displayed again when any model of a Security Appliance is added to the site.
Organization	This shows the descriptive name of the organization.
Site	This shows the descriptive name of the site.
Description	This shows the user-specified description entered during the backup.
Device type	This shows the type of Nebula Device.
Model	This shows the model name of the Nebula Device.
Backup time	This shows the date and time of the site, and when the backup was done.
Actions	Click the Edit icon to change the description. You can use alphanumeric and ()+/:=?!*#@\$_%-characters, up to 512 characters. Click the Restore icon to restore a previously saved local GUI or Cloud configurations from NCC to the Nebula Device. Note: To restore Cloud configurations, the Nebula Device can be online or offline. To restore local GUI settings, the Nebula Device must be online. Click the Download icon to download the configuration file to your computer or laptop. Click the Delete icon to remove a previously saved local GUI or Cloud settings from NCC.

14.6 MSP Alert Templates

The MSP administrator can configure MSP alert template to monitor Nebula Devices for unexpected events (for example, online / offline events). This screen will list the alert templates you have created. See [Section 14.6.1 on page 821](#) for details on creating an alert template.

To access this screen, click MSP > MSP cross-org manage > Alert templates in the navigation panel.

Figure 321 MSP > MSP cross-org manage > Alert templates



The following table describes the labels in this screen.

Table 248 MSP > MSP cross-org manage > Alert templates

LABEL	DESCRIPTION
+ Create	Click this button to add a new alert template (see Section 14.6.1 on page 821).
Delete	Click this button to remove alert templates already created.
Search	Specify your desired search criteria to filter the list of alerts.
selected in	This shows the number of alerts that match your filter criteria after you perform a search.
Template	This shows the number of alert templates you have created.
Name	This shows a descriptive name of the alert template.
Description	This shows more details on the alert template.
Creator	This shows your email address.
Bound organizations	This shows All organizations or a list of the selected organizations to send alerts to.
Exclude sites	This shows the sites that will not receive any alerts.
Enable	Click this to activate the alert template.
Note: To edit the Name, Description, Creator, Bound organizations, and Exclude sites fields, just click the field and the Update alert screen will appear.	

14.6.1 Alert Settings

Use this screen to set which alerts are created and emailed, and set the email addresses to which an alert is sent. Click MSP > MSP cross-org manage > Alert templates > Create to access this screen.

Note: NCC's Smart Alert Engine uses knowledge of network topology and cross-device functionality to only generate alerts for unexpected events. This helps avoid unnecessary emails and notifications.

For example, an AP is receiving power from a PoE switch. If the AP loses power because its Ethernet cable is disconnected, NCC generates an alert. If the AP loses power because the switch has a PoE schedule that disables power to the AP, NCC does not generate an alert.

Figure 322 MSP > MSP cross-org manage > Alert templates > Create/Update alert

Create alert template

General

Template name

Sample template name

Description

Email recipient

E.g. nebula@cyval.com

Apply to

☒ All organizations
 ☐ Select organizations

Exclude sites

Select organizations

Select sites

+ Add to exclude list

Enable

☒

System alerts

Wireless

Disable

5

minutes after AP goes offline

Show additional recipients

WiFi Aut

20 minutes

Set the alert interval when any of the following items has been reached.

Disable

20

or more total failure clients

Disable

20

or more wireless connection failure clients

Disable

10

or more DHCP failure clients

Disable

10

or more DNS failure clients

Show additional recipients

Switches

Disable

5

minutes after Switches goes offline

Show additional recipients

Disable

notification after stacking member goes offline

Show additional recipients

Disable

5

minutes

Any switch port

goes down

Show additional recipients

Disable

5

minutes after switches hardware abnormal is detected

Show additional recipients

Port advisor

Email

15

minutes when any of the following reason has been reach.

Show additional recipients

☒ Storm guard

☒ Cable health

☒ POE detection

☒ Bandwidth pulse - Port bandwidth has exceeded

85%

☒ Loop and BPDU watch

Security appliance

Disable

5

minutes after the gateway goes offline

Show additional recipients

Disable

Any DHCP lease pool is exhausted

Show additional recipients

Disable

A Nebula SD-WAN connection is established or disconnected

Show additional recipients

Disable

WAN connectivity status changed

Show additional recipients

Mobile router

Disable

5

minutes after the mobile router goes offline

Show additional recipients

Accessory

Disable

5

minutes after the accessory goes offline

Show additional recipients

Other

Disable

Configuration settings are changed

Show additional recipients

Security alerts

Disable

Email to receive containment alerts

Show additional recipients

CDR containment

SecurReporter

Notification mode

Disable

Email to receive security alerts by SecurReporter

Show additional recipients

Email subject

x: (Optional, maximum character is 64)

Email description

x: (Optional, maximum character is 255)

Notification interval

1 hour

Select notification interval if events were triggered

Event severity

High

Select severity level for email information

Event threshold

Category	Event Type	Severity	Alert Criteria
Network Security	Attack counts	High	1 times of highest severity attacks within 5 minutes.
Network Security	Attack counts	High	10 times attacks within 5 minutes.

Close

Create

The following table describes the labels in this screen.

Table 249 MSP > MSP cross-org manage > Alert templates > Create/Update alert

LABEL	DESCRIPTION
General	
Template name	Enter a descriptive name for the alert template (up to 64 alphanumeric characters including spaces).

Table 249 MSP > MSP cross-org manage > Alert templates > Create/Update alert (continued)

LABEL	DESCRIPTION
Description	Enter more details of the alert template (up to 64 alphanumeric characters including spaces).
Email recipient	Enter the email addresses to which you want to send alerts.
Apply to	Select All organizations or specify the selected organizations to send alerts to.
Exclude sites	Select the sites in organizations that will not receive any alerts.
Enable	Click this to activate the alert template.
System alerts	
Notification Type	For each alert, you can set how to receive alert notifications: • Email: Alert notifications are sent by email to configured recipients. • In-app Push: Alert notifications are sent to site administrators who are logged into the Nebula Mobile app. This type of notification is not available for some features. • Both: Alert notifications are sent by email and app notification. • Disable: No alerts are sent.
Show additional recipients	Add additional user accounts who will receive email and in-app notifications for the alert.
Hide additional recipients	Do not show the additional user accounts who will receive email and/or in-app notifications for the alert.
System alerts	
Wireless	Specify how long in minutes the NCC waits before generating and sending an alert when an access point goes offline.
WiFi Aid	Specify how long (15/30 minutes / 1 hour) the NCC waits before generating and sending an alert. Select the items to have the NCC generate and send an alert by email when the following events has reached the threshold (maximum 999): • WiFi clients with failed connection attempts (WiFi connection / DHCP failures / DNS failures). • WiFi clients with failed WiFi connection attempts. • WiFi clients with DHCP failures. • WiFi clients with DNS failures.
Switches	Specify how long in minutes (5/10/15/30/60) the NCC waits before generating and sending an alert when a port or a Switch or a stacking member goes offline, when the Switch temperature rises above the threshold, or the fan is functioning above the normal speed.

Table 249 MSP > MSP cross-org manage > Alert templates > Create/Update alert (continued)

LABEL	DESCRIPTION
Port advisor	Specify how long (15/30 minutes / 1 hour) the NCC waits before generating and sending an alert when the following events occur: - Storm guard: A broadcast/multicast-storm event occurs when the number of broadcast / multicast packets per second that the Nebula Device accepts on the ports exceeds the threshold set in Site-wide > Configure > Switches > Port: Broadcast Limit (pps) and Site-wide > Configure > Switches > Port: Multicast Limit (pps). - Cable health: A Poor cable quality hit is triggered when Port advisor detects that the network cable is damaged. - PoE detection: A PoE event occurs when any of the following conditions are met: PoE short-circuit – There is a short circuit detected between the port and the PD (powered device). PoE overload – The PD requested more PoE power than the port allows. PoE power management – The PD is unable to get PoE power based on its PoE priority setting in Site-wide > Configure > Switches > Switch ports. - Bandwidth pulse – Port bandwidth has exceeded N percentage: A bandwidth pulse event occurs when any of the following conditions are met: RX bandwidth usage exceeded the specified threshold that you set in Site-wide > Configure > Alert settings: Port advisor: Bandwidth pulse. TX bandwidth usage exceeded the specified threshold that you set in Site-wide > Configure > Alert settings: Port advisor: Bandwidth pulse. - Loop and BPDU (Bridge Protocol Data Units) watch: A loop event occurs when packets sent out on a port loop back to the Nebula Device. A BPDU watch event occurs when an STP-aware (Spanning Tree Protocol) Switch connects to an existing network and causes STP topology changes in the network. Note: This feature requires the port's loop guard, BPDU guard, and err-disable recovery to be enabled.
Security appliance	Specify how long in minutes the NCC waits before generating and sending an alert when the following events occur: - A security firewall, security gateway, or security router goes offline. - Any DHCP pool on the security firewall, security gateway, or security router runs out of IP addresses to assign. - A VPN connection to or from the security firewall, security gateway, or security router is created or terminated. - The WAN connectivity goes offline.
Mobile router / Accessory	Specify how long in minutes the NCC waits before generating and sending an alert when a mobile router or accessory goes offline.
Other	Specify whether to send an alert each time configuration settings are changed.
Security alerts	
CDR containment	Specify whether to send an alert each time a CDR block or containment action is triggered.
Show additional recipients	Add additional user accounts who will receive email and in-app notifications for the alert.
SecuReporter	
Notification mode	Select whether to receive email security reports from SecuReporter.
Show additional recipients	Add additional user accounts who will receive email and in-app notifications for the alert.
Email subject	Enter an email title here.
Email description	Enter a description of the emails to be sent here. For example, maybe these emails are just for high severity events.
Notification interval	Specify how often to receive a SecuReporter report. If no security events were triggered, SecuReporter will not send a report.

Table 249 MSP > MSP cross-org manage > Alert templates > Create/Update alert (continued)

LABEL	DESCRIPTION
Event severity	Select the severity level of events that will be included in each report.
Event threshold	This table lists the events that trigger SecuReporter security alerts. You can set the alert threshold. For example, X count(s) of malware/virus attack within 5 minutes means SecuReporter includes a report in the email if the total number of combined malware and virus detection events exceed X within a 5 minute time period.


14.7 Firmware Upgrades

Use these screens to upgrade the firmware or schedule firmware upgrades for Nebula Devices in different organizations and different sites. Click MSP > MSP cross-org manage > Firmware upgrades to access the screens.

14.7.1 Schedule Upgrades Screen

Use this screen to view or schedule firmware upgrade for Nebula Devices within each organization and site. You can set different schedules for each Nebula Device models. Click MSP > MSP cross-org manage > Firmware upgrades > Schedule upgrades to access this screen.

Figure 323 MSP > MSP cross-org manage > Firmware upgrades > Schedule upgrades

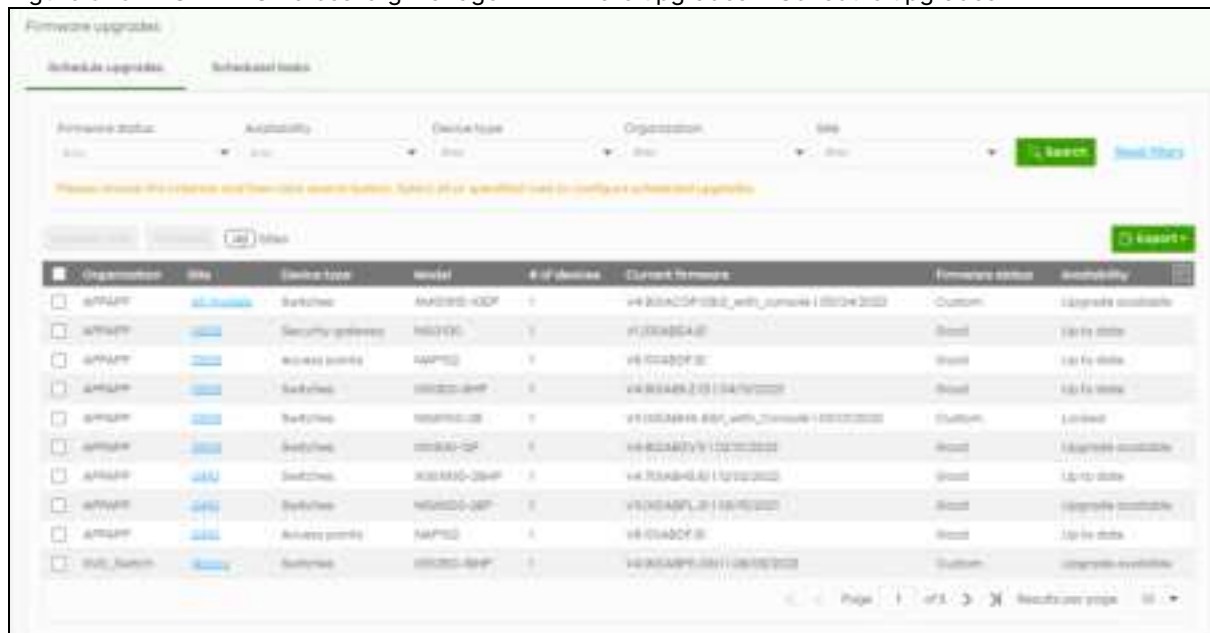

You can select Nebula Devices by firmware status and availability, device type, by organization and by site. For example, you can upgrade all model C Switches in Organization A and all model D APs in Organization B with Critical firmware status. Select Critical in Firmware status, Switches + Access points in Device type, A + B in Organization, then click Search.

Click the Site to view the Site-wide > Configure > Firmware management screen.

Note: This is a MSP Pack feature. If your MSP Pack license expires, scheduled firmware upgrades will still run.

14.7.2 Firmware Upgrade Priority

NCC prioritizes the different Nebula Device firmware upgrade schedules from highest to lowest as follows:

1. Individual Nebula Device upgrade schedule (set at MSP > MSP cross-org manage > Firmware upgrades > Schedule upgrades).
2. Individual Nebula Device upgrade schedule (set at Organization-wide > Organization-wide manage > Firmware management > Devices).
3. MSP, organization-wide or site-wide upgrade schedule. If you set all 3, the most recently set takes priority.
4. NCC default per-device upgrade schedule and default site-wide upgrade schedule. The default upgrade schedule is 14 days after new firmware is released.

The following table describes the labels in this screen.

Table 250 MSP > MSP cross-org manage > Firmware upgrades > Schedule upgrades

LABEL	DESCRIPTION
Firmware status	You can filter to display specific Nebula Devices by their firmware status. By default, only the Nebula Devices with the Critical firmware status are displayed. Select Good to display the Nebula Devices running a stable firmware and no immediate action is required. Select Warning to display the Nebula Devices with a newer firmware available and immediate action is recommended. The newer firmware may contain security enhancements, features, and performance improvements. Select Critical to display the Nebula Devices with a newer firmware available and immediate action is required. The existing firmware may have security vulnerabilities or lack key performance improvements. Select Custom to display the Nebula Devices running a firmware with specialized features unavailable to the general public.
Availability	Select to show the Nebula Devices with Up to date firmware, or with firmware update available for the Nebula Device (Upgrade available), or with a specific version of firmware installed by Zyxel customer support (Locked). By default, all available firmware is displayed (Any).
Device type	Select the type of Nebula Device. By default, all the Nebula Devices are displayed (Any).
Organization	Select an organization(s) managed by the MSP account. By default, all the organizations are displayed (Any).
Site	Select a site(s) in your organization. By default, all the sites are displayed (Any).
Search	Click this button after specifying your filter criteria in the Firmware status, Availability, Device type, Organization and Site fields.
Upgrade Now	Click this to upgrade the firmware on all selected organizations immediately. This button is selectable only when firmware update is available for the Nebula Devices for the selected organizations.
Schedule	Click this to run the wizard to set a specific date and time to upgrade the Nebula Devices firmware on the selected organizations. After running the wizard, the Scheduled tasks screen appears with the schedule you set. Nebula Devices are upgraded according to the time zone of the site they are in.

Table 250 MSP > MSP cross-org manage > Firmware upgrades > Schedule upgrades (continued)

LABEL	DESCRIPTION
Export	Click this button to save the firmware schedule upgrade list as a CSV or XML file to your computer.
Note: Drag the following column headings to change the order. Click the column heading to change the sorting, ascending or descending order.	
*	Click this to select all the rows in this table.
Organization	This shows which organization the Nebula Device is in.
Site	This shows which site the Nebula Device is in. Click the site name to go to the site's Firmware management: Overview.
Device type	This shows the type of Nebula Device.
Model	This shows the model name of the Nebula Device.
# of devices	This shows the number of aggregated Nebula Device models in the organization for a particular upgrade schedule. For example, 10 NWA50AX in organization A will display as '10' in this field.
Current firmware	This shows the version number of the firmware the Nebula Device is currently running. It shows N/A when the Nebula Device goes offline and its firmware version is unavailable.
Firmware status	This shows the status of the Nebula Device's firmware. • Good: The Nebula Device is running a stable firmware and no immediate action required. • Warning: A newer firmware is available for the Nebula Device, and immediate action is recommended. The newer firmware may contain security enhancements, features, and performance improvements. • Critical: A newer firmware is available for the Nebula Device, and immediate action is required. The existing firmware may have security vulnerabilities or lack key performance improvements. • Custom: The Nebula Device is running a firmware with specialized features unavailable to the general public.
Availability	This shows whether the firmware on the Nebula Device is Up to date, there is firmware update available for the Nebula Device (Upgrade available), or Zyxel customer support has installed a specific version of firmware (Locked).
	Click this icon to show and hide columns in the table.

14.7.3 Bulk Firmware Upgrade Wizard

Use this wizard to set a specific date and time to upgrade firmware to the selected Nebula Devices. Follow the steps below to use the wizard.

- 1 Click MSP > MSP cross-org manage > Firmware upgrades > Schedule. Select the Target firmware version, then click Next.



Bulk firmware upgrades wizard

Upgrade version

Schedule

Summary

Organization	Site	Device type	Model	Current firmware version	Target firmware version
APPAIR	All models	Switches	MSR980-32P	V480ACGP0303_with_console (06/04/2023) (Default)	V480ACGP0303 (06/01/2023) (Latest)

Next Cancel

- You can set a time to upgrade firmware for your Nebula Devices to overwrite the site-wide settings by selecting Upgrade now to upgrade immediately. If you do not want to upgrade the firmware immediately, you can choose Upgrade at to set up a specific date and time for a one time upgrade. The date and time are based on the site's local time zone. Then, click Next.



Bulk firmware upgrades wizard

Upgrade version

Schedule

Summary

When should this firmware be installed?

☒ Upgrade now

The schedule will be executed immediately.
While installing a firmware update, your device will continue to operate normally until they reboot as the final step in the upgrade process.
The reboot takes 5-10 minutes, so it is best to pick an upgrade time with minimal expected network usage.

☐ Upgrade at: 2023-10-11 11:30 (Site local time)

Scheduled upgrades tasks will be automatically removed once executed.

Previous Next Cancel

- The Summary screen appears. Click Finish to exit the wizard.



Bulk firmware upgrades wizard

Upgrade version

Schedule

Summary

Organization	Site	Device type	Model	# of devices	Change	When
APPAIR	All models	Switches	MSR980-32P	1	V480ACGP0303_with_console (05/04/2023) (Default) → V480ACGP0303 (06/01/2023) (Latest)	2023-10-11 01:05 (UTC+8)

Note: The # devices will automatically update if there is other site-wide schedule upgrade or action process upgrade now.

Previous Cancel Finish

14.7.4 Scheduled Tasks Screen

Use this screen to change/reset to default the firmware upgrade schedule for the Nebula Devices. Click MSP > MSP cross-org manage > Firmware upgrades > Scheduled tasks to access this screen.

Note: You can change a scheduled task anytime before execution. After execution scheduled task(s) are removed.

Note: Changes to the Site-wide > Configure > Firmware management settings will be applied automatically to the Scheduled tasks screens. For example, when you upgrade a Nebula Device firmware to the latest version using the site-wide Firmware management screen, this Nebula Device will be removed automatically from the count for # of devices.

Figure 324 MSP > MSP cross-org manage > Firmware upgrades > Scheduled tasks



The following table describes the labels in this screen.

Table 251 MSP > MSP cross-org manage > Firmware upgrades > Scheduled tasks

LABEL	DESCRIPTION
Schedule	Click this to run the wizard to set a specific date and time to upgrade firmware to Nebula Devices in the selected organizations and sites. Note: Nebula Devices are upgraded according to the time zone of the site they are in.
Reset	Select one or more Nebula Devices, and then click Reset to remove the Nebula Devices from the scheduled task list. The Nebula Devices will follow the site-wide firmware management settings.
Organization/Site/Device type/Model/Target version/Firmware status/Availability	Specify your desired filter criteria to filter the list of Nebula Devices.
Export	Click this button to save the firmware upgrade scheduled tasks list as a CSV or XML file to your computer.
Note: Drag the following column headings to change the order. Click the column heading to change the sorting, ascending or descending order.	
*	Click this to select all the rows in this table.
Organization	This shows which organization the Nebula Device is in.
Site	This shows which site the Nebula Device is in. Click the site name to go to the site's Firmware management: Overview.
Device type	This shows the type of Nebula Device.
Model	This shows the model name of the Nebula Device.

Table 251 MSP > MSP cross-org manage > Firmware upgrades > Scheduled tasks (continued)

LABEL	DESCRIPTION
# of devices	This shows the number of Nebula Devices in the organization for a particular Schedule status. Click this to change the schedule.
Current firmware	This shows the version number of the firmware the Nebula Device is currently running. It shows N/A when the Nebula Device goes offline and its firmware version is not available.
Target version	This shows the version number of the new firmware for the Nebula Device.
Firmware status	The status shows Good if the Nebula Device is running a stable firmware and no immediate action is required. The status shows Warning if a newer firmware is available and immediate action is recommended. The newer firmware may contain security enhancements, new features, and performance improvements. The status shows Critical if a newer firmware is available and immediate action is required. The firmware may have security vulnerabilities or lack key performance improvements. The status shows Custom if the Nebula Device is running a firmware with specialized features unavailable to the general public. The status changes to Upgrading... after you click Upgrade Now to install the firmware immediately.
Availability	This shows whether the firmware on the Nebula Device is Up to date, there is firmware update available for the Nebula Device (Upgrade available), or a specific version of firmware installed by Zyxel customer support (Locked).
Schedule	This shows the date and time when a new firmware upgrade will occur. If there is no date nor time, it shows: - Follow upgrade time and the Nebula Device sticks to the site-wide schedule, or - No when the firmware on the Nebula Device is up-to-date, or - The Nebula Device goes offline and its firmware status is unavailable. A lock icon displays for a specific schedule created for the Nebula Device, which means upgrade of the Nebula Device firmware will not follow the time configured for all Nebula Devices in the site.
	Click this icon to display a greater or lesser number of configuration fields.

14.8 Change Log

Use this screen to view logged messages for changes in the Admins & teams and Cross-org synchronization screens. Click MSP > MSP cross-org manage > Change log to access this screen.

When the log is full, it deletes older entries one by one to make room for newer ones.

Figure 325 MSP > MSP cross-org manage > Change log



The following table describes the labels in this screen.

Table 252 MSP > MSP cross-org manage > Change log

LABEL	DESCRIPTION
Keyword	Enter a keyword or specify one or more filter criteria to filter the list of log entries.
Range/Before	Select a filtering option, set a date, and then click Search to filter log entries by date. Range: Display log entries from the first specified date to the second specified date. Before: Display log entries from the beginning of the log to the selected date.
Search	Click this to update the list of logs based on the search criteria.
Reset filters 	Click this to return the search criteria to the previously saved time setting.
Newer/Older	Click to sort the log messages by most recent or oldest.
N change logs within the time filtered.	This shows the total number of the log messages that match the search criteria. It also shows the date and time the very first log was created.
Export	Click this button to download the log list as a CSV or XML file to your computer.
Admin	This shows the name of the administrator account.
Time (UTC)	This shows the date and time in UTC+00:00 (or UTC+0) when the log was recorded. UTC is a standard time for use around the world (formerly known as Greenwich Mean Time or GMT). UTC is an international abbreviation that is neither French nor English. It means both "Temps Universel Coordonné" and "Coordinated Universal Time".
Page	This shows the name of the NCC menu in which the change was made.
Label	This shows the action that triggered the log entry
Old value	This shows the old setting or state that was overwritten with the new value.
New value	This shows the new setting or state.
	Click this icon to display a greater or lesser number of configuration fields.

14.9 MSP Branding

The Dashboard logo section of this screen allows organization owners to replace the Nebula Control Center logo with a new MSP logo. The Support contact section allows addition of a customized message or MSP contact information in the Help > Support request page. To access this screen, click MSP > MSP cross-org manage > MSP branding.

Figure 326 MSP > MSP cross-org manage > MSP branding

The following table describes the labels in this screen.

Table 253 MSP > MSP cross-org manage > MSP branding

LABEL	DESCRIPTION
Dashboard logo	
Upload new logo	Click this to browse for the location of the image file to be used as your dashboard logo. - Allowed image file formats: JPG/JPEG, PNG, GIF. - Maximum image file size: 200 KB. - NCC converts the image file to a 160 x 44 pixel logo after uploading.
Replace this logo	Click this to browse for the location of the image file to replace your current dashboard logo.
Remove this logo	Click this to remove your current dashboard logo.
Apply to	Select All current and new PRO organizations to apply the logo to all Nebula Professional Pack organization dashboards. Select Custom to choose which Nebula Professional Pack organization to apply the logo. Select None if you only wish to upload the image file but will not apply it yet.
Support contact	
Support request page	
Show default Zyxel support cases	Select ON to display the standard Zyxel support contact information in the Help > Support request screen. Organization owners can choose to hide the default Help > Support screen section to only show their information to clients. But the organization owner and administrators with full privilege will still see the hidden default screen section.

Table 253 MSP > MSP cross-org manage > MSP branding (continued)

LABEL	DESCRIPTION
Customized MSP support contact information	Create your own support contact information. Enter up to 1000 characters in this field including special characters inside the square quotes [~!@#\$\$%^&*()_+{} :~<>?-=[]\;',./].
Apply to	Select All current and new PRO organizations to apply the support contact information to all Nebula Professional Pack organization Help > Support request screens. Select Custom to choose which Nebula Professional Pack organization to apply the support contact information. Select None if you only wish to save the settings but will not apply it yet.

14.10 MSP Settings

Use this screen to change your general MSP settings, such as the MSP name and enable access from Zyxel CSO (customer support). Click MSP > MSP cross-org manage > MSP settings to access this screen.

Figure 327 MSP > MSP cross-org manage > MSP settings



The following table describes the labels in this screen.

Table 254 MSP > MSP cross-org manage > MSP settings

LABEL	DESCRIPTION
Your MSP account	This shows the email address of the MSP account's administrator, which is used to log into the NCC. This field is read-only. The MSP information field confirms that your MSP account has been set up and is ready for use.
MSP company name	By default, this shows the email address of the MSP account's administrator. Enter a descriptive name for the MSP. Enter up to 100 characters in this field including special characters inside the square quotes [~!@#\$\$%^&*()_+{} :~<>?-=[]\;',./].
MSP company ID	This shows the 24-digit MSP ID generated automatically by NCC and is not editable. You can copy the ID by clicking the copy icon beside the ID.

Table 254 MSP > MSP cross-org manage > MSP settings (continued)

LABEL	DESCRIPTION
Zyxel CSO support	Click the switch to the right to allow the Zyxel customer support account to access your MSP settings, so that they can help check your configurations and log messages for troubleshooting.
Validity of the CSO support	When you enable Zyxel CSO support, specify how long Zyxel customer support access is valid. Choices are: • Never: select this if Zyxel customer support access never expires. • Expire on: select this to specify the date the Zyxel customer support account can no longer access the MSP settings. Then click Save.

PART VI

Troubleshooting and Appendices

CHAPTER 15

Help

15.1 Online documents

Click Help > Online documents to view the online help for NCC and NCC-compatible devices. For example, to view the Security Firewall Series configuration and hardware information, locate the online help under Firewall.

Figure 328 Help > Online documents



The following summarizes how to navigate the Online documents screen. The Online documents screen is divided into these parts:

Figure 329 Online Documents Overview



- A – Hide/Show the Contents Menu/Index
- B – Contents Menu
- C – Index
- D – Search Bar
- E – Navigation Buttons
- F – Google Translate Button
- G – Download Content PDF Button
- H – Content Page

The following table shows the description of the online documents parts.

Table 255 Online Documents Overview

LABEL	DESCRIPTION
A	Click to hide or show the contents menu and Index.
B	This shows a menu of the content topics. Click a topic heading to display its content in the main screen.
C	Click this to show the Index panel. Click an index entry to view its description.
D	Enter a keyword to search and display the related section(s) in the online document.
E	These are the navigation buttons. • Click the Previous button to display the previous chapter in the online document. • Click the Next button to display the next chapter in the online document. • Click the Home button to display the first chapter in the online document.
F	Click this to view the translated content page. You can click Google Translate anywhere in a content page, but you must be at the top of the content page to choose a language. The bottom right of the content page has a 'Back to top' arrow to get there.

Table 255 Online Documents Overview (continued)

LABEL	DESCRIPTION
G	Click this to download content in a PDF file. You must be at the top of the content page to click the PDF icon.
H	The content of the online document is displayed here.

15.2 Troubleshooting Tips

To find suggestions to solve problems you might encounter with NCC and Nebula Devices, go to [Chapter 16 on page 843](#) for more information.

15.2.1 Firewall Information

Click Help > Support tools > Firewall information to view information required for firewall rules to allow management traffic between NCC and Nebula Devices on your sites. Click Export to export the information to a CSV or XML file.

Note: The Firewall Information page for a Security Gateway will show its FQDN (fully qualified domain name) and service ports. The FQDN is the complete domain name of Nebula Cloud Management on the Internet.

The following table shows the sample information required for firewall rules at the time of writing.

Table 256 Sample Information Required for Firewall Rules

SERVICE	FQDN	IP ADDRESS	PORT	PROTOCOL
Nebula Cloud Management (NETCONF)	d.nebula.zyxel.com	34.247.112.130, 52.210.12.1, 52.48.115.44, 54.73.103.137, 63.32.141.172, 63.35.107.114	4335 / 6667	TCP
Nebula Cloud Management	s.nebula.zyxel.com	Dynamic	443	TCP
Network Time Protocol	*.pool.ntp.org	Dynamic	123	UDP
Nebula Cloud Management (Zero Touch Provisioning)	d-a.nebula.zyxel.com	Dynamic	443	TCP
Nebula Cloud Management (Configure related service for USG FLEX series)	d-cp.nebula.zyxel.com	34.254.181.105, 52.212.114.133	4335	TCP
Nebula Cloud Management (Monitor related service for USG FLEX series)	d-mp.nebula.zyxel.com	52.18.204.70, 54.220.154.85, 63.34.155.16	443	TCP

15.2.2 Data Policy

Click Help > Support tools > Data Policy to view and download NCC GDPR data policy, privacy policy, and terms of use.

Figure 330 Help > Support tools > Data Policy



15.3 Device Function Table

Click Help > Support tools > Device function table to view a list of NCC-compatible Access Points, Switches, Security Gateway, and Security Firewall devices at the time of writing. The table also includes which features each Nebula Device supports.

Figure 331 Help > Support tools > Device function table

Feature		Model	FW4000-4E	SW4000-4E	SG4000-4E	SG4000	FW4000E	SW4000E	SG4000E
Wireless security	Open		Y	Y	Y	Y	Y	Y	Y
	Enhanced Open		Y	Y	Y	Y	Y	Y	Y
	WPA2		Y	Y	Y	Y	Y	Y	Y
	WPA2-PSK		Y	Y	Y	Y	Y	Y	Y
	WPA3		Y	Y	Y	Y	Y	Y	Y
	Dynamic personal pre-shared key (DPP)		Y	Y	Y	Y	Y	Y	Y
	MAC authentication		Y	Y	Y	Y	Y	Y	Y
Switch	Smart mesh		Y	Y	Y	Y	Y	Y	Y
	Smart mesh manual setup		Y	Y	Y	Y	Y	Y	Y
	Smart mesh dedicated mesh		Y	Y	Y	Y	Y	Y	Y
	Wireless bridge		Y	Y	Y	Y	Y	Y	Y
Nebula AP (SFP)	Nebula AP (SFP) wireless security feature		Y	Y	Y	Y	Y	Y	Y
	Nebula AP (SFP) ethernet security feature		Y	Y	Y	Y	Y	Y	Y

15.4 Support Forum

Click Help > Still need help? > Support community to go to Zyxel Nebula Community, where you can get the latest Nebula information and have conversations with other people by posting your messages.

15.5 Support Request

If you need Zyxel customer support to help you find answers and/or solve problems, you can submit a ticket through the NCC.

Note: It is suggested that you check this user's guide first to seek help and then go to the Zyxel Nebula Community before you use this screen to send a ticket.

Click Help > Still need help? > Support request to access this screen. The screen varies depending on whether you select to view the ticket details or create a new ticket.

Note: Direct Support for opening a ticket to get direct assistance from the Nebula technical support team is only available for Nebula Pro Pack license.

Figure 332 Help > Still need help?: Support request

Support request

Zyxel Support Center

☒ **Enable Zyxel support as administrator**

Enabling this will grant temporary access (2 hours by default) to Zyxel support as administrator of your Organization. By this you help check your configuration & logs. This will automatically be switched off after specified time, or you could turn it off right after your issue is solved.

Enable of the CEO account: ☒ Express on 2023-06-06 ☐ UTC+0

☐ Disable support

Direct Support

You're able to open a ticket to get direct assistance from the Nebula technical support team. Alternatively, you can contact your local regional Zyxel office for support.

- ▶ Contact the Zyxel technical office (ZTEC), click [here](#)
- ▶ North and Central America, click [here](#)

New Case

Subject*

Case ID (Case ID)

Email*

Issue Description*

Priority [Definition of priority](#)

Upload your topology to speed up the process.

Total file upload limit: 10MB (The maximum length of a filename is 50 characters)

The following table describes the labels in this screen.

Table 257 Help > Still need help?: Support Request

LABEL	DESCRIPTION
Zyxel Support Access	Select ON to allow the Zyxel customer support account to access your organization temporarily, so that they can help check your configurations and log messages. At the time of writing, the support account will be deactivated automatically after 21 days. You can set the number of days, or select Never.
Invite Zyxel support as administrator	If you select ON, you are granting organization-wide and MSP backup Delegated administrator privilege to the Zyxel customer support. See Table 235 on page 801 for more information on organization/site privilege.
My Cases	
	Click this button to reload the data-related frames for this section on the page.
Open/Closed	Select to view the details about the tickets that are still open or closed.
Case Number	This shows the number of the eITS ticket.
Created	This shows the first date and time the ticket was created.
Last Updated	This shows the last date and time the ticket was updated.
Creator	This shows the account name of the administrator that created this ticket.
Subject	This shows the subject of the ticket.
Priority	This shows the severity level of the ticket.
Status	This shows whether the ticket is open or closed.
Engineer	This shows the name of the support person who handles the ticket.
New Case	Click this button if you want to issue a new ticket. The following fields then appear allowing you to provide the necessary information and describe the issue encountered.
Subject	Enter the subject of the ticket.
Carbon Copy (CC)	Enter the email address of the person you would like to receive a copy of the case.
Device	Select the NCC or the name of the Nebula Device that cannot work properly.
Issue Description	Enter a complete and detailed description of your issue.
Priority	Select the severity level of the ticket. Click the Definition of priority link to see how to correctly identify a ticket's severity level. This can help to get your problem solved quickly.
Add Another File	Click this button to upload another file.
Choose File/Browse...	Click this button to locate the file you want to upload for reference.
Delete	Click this button to remove the file you just uploaded before submitting the ticket.
Cancel	Click this button to close the New Case section without saving.
Submit	Click this button to send your ticket to the Zyxel customer support.

CHAPTER 16

Troubleshooting

This chapter offers some suggestions to solve problems you might encounter with NCC and Nebula Devices.

- To see how to do things in NCC, go to the [Tutorials](#) section.
- To know how to manage Mobile Routers in NCC, go to [Section 10.2 on page 684](#) for more information.
- To know how to monitor Security Appliances in NCC, go to [Section 8.2 on page 494](#) (Security Firewalls) or [Section 9.2 on page 628](#) (Security Gateways) for more information.
- To know how to configure Security Appliances in NCC, go to [Section 8.3 on page 503](#) (Security Firewalls) or [Section 9.3 on page 636](#) (Security Gateways) for more information.
- To know how to monitor Switches in NCC, go to [Section 6.2 on page 372](#) for more information.
- To know how to configure Switches in NCC, go to [Section 6.3 on page 387](#) for more information.
- To know how to monitor Access Points in NCC, go to [Section 5.2 on page 332](#) for more information.
- To know how to configure Access Points in NCC, go to [Section 5.3 on page 340](#) for more information.

[I cannot register the Zyxel Device in NCC.](#)

Check if your Zyxel Device supports Nebula by locating the Nebula QR code on the Zyxel Device label or package box.

[I cannot access the NCC portal.](#)

- Check that you are using the correct URL:
 - NCC: <https://nebula.zyxel.com/>
- Make sure your computer's Ethernet card is installed and functioning properly.
- Check that you have Internet access. In your computer, click Start, (All) Programs, Accessories and then Command Prompt. In the Command Prompt window, type 'ping' followed by a website such as 'zyxel.com'. If you get a reply, try to ping 'nebula.zyxel.com'.
- Make sure you are using the correct web browser that supports HTML5. View the browser in full screen mode to display the NCC portal properly. Browsers supported are:
 - Google Chrome
 - Microsoft Edge
 - Mozilla Firefox

I cannot log into the NCC portal.

Open your web browser and go to <https://nebula.zyxel.com>. Sign in with the correct email and password. Click Sign Up if you do not have a Zyxel Account and create an account.

I cannot access a Nebula Device that I have registered in NCC or the Nebula Device appears offline in NCC.

- Check if the TCP/UDP port is blocked by your network's firewall rule or ISP. Click Help > Support tools > Firewall information to view information required for firewall rules to allow management traffic between NCC and Nebula Devices on your sites.
- Check the Nebula Device's hardware connections, and make sure the LEDs are behaving as expected. See the Quick Start Guide.
- If the LEDs still do not turn on, you may have a hardware problem. In this case, you should contact your local customer support.
- Make sure the Nebula Device is connected to the Internet.
- For Mobile Routers, make sure a valid SIM card is inserted in the SIM card slot.
- Make sure the Mobile Router is located where the cellular signal is strong.
- For ZyWALL USG FLEX / ATP / USG20(W)-VPN Series devices with Nebula native mode as the deployment method, make sure you perform the steps for Nebula native mode on the Nebula Device; see [Section 2.1.8.1 on page 74](#) for information.
If you select Zero Touch Provision mode as the deployment method. Make sure you perform the steps for Zero Touch Provision mode on the Nebula Device, see [Section 2.1.8.2 on page 74](#) for information.
- Check if the WAN IP address is configured on the Nebula Device.
- Check if the Nebula Device can access the NCC server's domain through SSH/Console and enter 'nslookup d.nebula.zyxel.com'. If the Nebula Device shows 'unknown host', check your DNS server setting or use '8.8.8.8' as the DNS server on the Nebula Device.
- The Nebula Devices will apply the site-wide password after getting online on NCC. Check the login credential by going to Site-wide > Configure > Site settings: Local credentials.
- Specify the Port number and click Establish using Remote Access in the following screens to obtain real-time logs and data from the Nebula Device.
 - Site-wide > Devices > Access points
 - Site-wide > Devices > Security router
 - Site-wide > Devices > Firewall
 - Site-wide > Devices > Security gateway

Note: Remote Access to Nebula Access Points is available to the organization owner, organization administrators with full privileges, and site administrators with full privileges in Nebula Pro Pack license only.
Remote Access to Nebula Security Firewalls and Security Gateways is available to the organization owner in Nebula Pro Pack license only.

- Make sure that your Nebula Device can connect to the NCC by checking your network's firewall/security settings. The following ports must be allowed:

- TCP: 22, 443, 4335 and 6667

Note: Go to Help > Support tools > Firewall information to find the latest port information.

- Make sure that your Nebula Device can synchronize with NTP (Network Time Protocol) through the following port:
 - UDP: 123
- Make sure that your Nebula Device can resolve the Nebula Cloud Management (NETCONF) domain name d.nebula.zyxel.com.
- Changing the MTU (Maximum Transmission Unit) size in Site-wide > Configure > Firewall > Interface > WAN/LAN interface configuration may cause the Nebula Switches to appear offline. Make sure that the MTU size is not smaller than 1500 bytes.

[I cannot see my Nebula Devices in the NCC Dashboard or the corresponding Nebula Device monitor page.](#)

- Check the Nebula Device's local Web Configurator's Dashboard. The Cloud Control Status displays the status of the Nebula Device's Internet and NCC connection and registration status. Make sure that the Nebula Device has NCC Discovery enabled.
- If the Nebula Device cannot connect to the Internet or NCC, hover the mouse over the Internet circle to check the error message. Check your local network settings.



- Make sure that your Nebula Device can connect to the NCC by checking your network's firewall/security settings. The following ports must be allowed:
 - TCP: 22, 443, 4335 and 6667
 - UDP: 123

Note: Go to Help > Support tools > Firewall information to find the latest port information.

- Make sure that you have registered your Nebula Devices with the NCC. See [Section 12.2.1 on page 711](#).
- Make sure that you have created an organization and site and added the Nebula Devices to the site. See [Create Organization on page 62](#).
- When the Nebula Device is online in NCC, all circles are green.



I made the mistake of assigning a license to a Nebula Device and the license is in Active/Queued status. Can I Undo assign?

No, Undo assign can only apply to an Inactive license. Select Transfer license to transfer the license to the correct Nebula Device.

I have already transferred a license to a Nebula Device. Why is the organization still in the grace period or Base tier?

Not all Nebula Devices in the organization have been assigned a license. Check if you have assigned a valid Plus or Professional license to all unlicensed Nebula Devices in the organization.

- In Organization-wide > License & inventory > Overview, click Upgrade Now to upgrade the organization to Plus or Professional tier.
- Alternatively, remove the unlicensed Nebula Device(s) from the organization.

My organization is now in Cloud-saving mode; how can I disable it?

There are two ways to disable Cloud-saving mode.

- Click the Cloud-saving mode switch in the Welcome back pop-up window. Then click Close to turn off Cloud-saving mode for the organization.
- A banner displays when NCC is in Cloud-saving mode. Click the You could change mode [here](#) link in the NCC banner. Click the Cloud-saving mode switch in the Cloud-saving mode pop-up window. Then click Close to turn off Cloud-saving mode for the organization.

I want to place my Nebula Device on the right location on Google maps.

If your Nebula Device has a public IPv4 address, Google Maps can use Geo IP to approximatively locate your Nebula Device. If your Nebula Device has an IPv6 address or a private IPv4 address or you want locate the Nebula Device more exactly, use one of the following methods.

- Select Use the following address or coordinates to enter the complete address or coordinates of the Nebula Device in Site-wide > Devices > Firewall / Security gateway / Switches / Access points: details: Map: Position device.
- Select Get my location from web browser to use the public IP address of the computer accessing the NCC portal.
- Drag-and-drop your Nebula Device directly on the Google map.

I cannot set up Secure WiFi in NCC.

- Make sure the Nebula Security Firewall and Nebula Access points are in the same NCC site.
- Make sure a Secure WiFi license is assigned to the Nebula Security Firewall.
- Make sure to configure the Remote AP Setting of each Remote Access Point before booting up the Remote Access Point in the remote site. See [Table 20 on page 239](#).
- The maximum number of Remote Access points depends on the Nebula Security Firewall.

Table 258 Maximum Remote Access Points (at the time of writing)

CAPACITY	USG FLEX 50 / USG20-VPN / USG20W-VPN	USG FLEX 100 / USG FLEX 100W / ATP100 / ATP100W	USG FLEX 200 / ATP200	USG FLEX 500 / ATP500	ATP700	USG FLEX 700 / ATP800
Maximum IPSec Tunnel	10	40	90	250	450	450
Maximum Remote AP	No support	6	10	18	66	130

The mesh extender does not appear online on Status in Site-wide > Devices > Access points.

- Click Reconnect in Site-wide > Devices > Access points: Uplink AP to re-establish connection.
- Make sure your Nebula Device supports smart mesh. To view the list of Nebula Devices that support smart mesh, go to Help > Device function table.

After adding a mesh extender to a site, the mesh extender cannot connect to a mesh controller.

- Make sure you enable AP Smart Mesh in Site-wide > Configure > Access points > AP & port settings. See [Section 5.3.7 on page 367](#) for more information.

Note: For more information about smart mesh, see [Section 5.1.1 on page 330](#).

The mesh extender does not broadcast the mesh controller SSID.

- Make sure you enable Downlink in Site-wide > Devices > Access points: Details. See [Section 4.3.1.1 on page 237](#) for more information.
- To enhance your mesh extender's connectivity, maintain an Uplink signal strength above -65 dBm. You can check this in Site-wide > Devices > Access points.

None of the Nebula Device LEDs turn on.

- Make sure that you have the power cord connected to the Nebula Device and plugged in to an appropriate power source. Make sure you have the Nebula Device turned on.
- Check all cable connections. See the related Quick Start Guide.
- If the LEDs still do not turn on, you may have a hardware problem. In this case, you should contact your local customer support.

The Nebula Device PWR LED is red.

- The Nebula Device has a power-related error. Disconnect and reconnect the power cord. Make sure that you are using the included power cord for the Nebula Device and it is plugged into an appropriate power source. See the related Quick Start Guide.
- If the LED is still red, you may have a hardware problem. In this case, you should contact your local customer support.

I need to replace a defective Nebula Device on my stacking system. I want to keep the NCC configurations.

- Contact your vendor about the faulty Nebula Device.
- Do NOT remove or swap the faulty Nebula Device in NCC.
- Contact Zyxel Customer Support to keep the faulty Nebula Device's port configuration and apply it to the new Nebula Device.

When I click Upgrade now in the Site-wide > Configure > Firmware management or Organization-wide > Organization-wide manage > Firmware management screens, I get an Upgrade system firmware failed.

- Make sure the DNS server used by your Nebula Device can resolve the domain name 'firmware.nebula.zyxel.com'.
- Make sure there are no firewall policies restricting access to 'firmware.nebula.zyxel.com' and that the firewall allows connection to TCP port 443.
- If there is no firewall policy restricting access, log in to the Nebula Device Web Configurator to get the technical support log from the following location:
 - For an Access Point, go to MAINTENANCE > Diagnostics > Diagnostic > Collect now.
 - For a Switch, go to MAINTENANCE > Tech-Support > All.
 - For a Security Router, there is no technical support log.
 - For a Security Firewall, go to MAINTENANCE > Diagnostics Info > Collect now.
 - For a Security Gateway, go to MAINTENANCE > Diagnostics > Collect > Collect now > Files.

- For a Mobile Router, there is no technical support log.
- Contact Zyxel Customer Support for help.

Note: The Upgrade now option is available only when the selected Nebula Devices have a new firmware available.

The smartphone app cannot find and communicate with the IoT (Internet of Thing) device over WiFi.

- Go to Site-wide > Configure > WiFi SSID settings to configure a separate WiFi network for the IoT device(s).
- Go to Site-wide > Configure > Access points > SSID advanced settings and select the separate WiFi network in the previous step. Select WPA Personal With WPA2 in Security options.
- Select the 2.4GHz band in Band mode. The smartphone with IoT app and IoT device must connect to an SSID on the 2.4 GHz band. This enhances the connectivity and performance of IoT devices.
- Disable 802.11k/v/r in Assisted roaming and 802.11r. This prevents the Nebula Device from steering IoT devices to the 5 GHz band.
- Disable Layer 2 isolation in Advanced settings. An IoT device's MAC address that is not in the Layer 2 isolation table will not be able to communicate with other devices in the same WiFi network when layer-2 isolation is enabled.

Note: When layer-2 isolation is enabled, click Add to enter a MAC address of a IoT device you want to allow access to other devices in the same WiFi network.

- Disable Intra-BSS traffic blocking in Advanced settings. This allows direct communication between IoT devices from within the same WiFi network.
- Go to Site-wide > Configure > WiFi SSID settings. Configure the same Tagging for the same WiFi network and the Tag for the Nebula Device in Site-wide > Devices > Access points. For example, tagging Nebula Device A with "Lobby" in Site-wide > Devices > Access points and assigning the "Lobby" tag to "SSID_lobby" in Site-wide > Configure > WiFi SSID settings means that Nebula Device A will broadcast "SSID_lobby."
- Go to Site-wide > Configure > Radio settings and disable Allow 802.11ax/ac/n stations only. This allows the IEEE 802.11a/b/g IoT devices to connect.

A WiFi client device cannot connect to a Nebula Device WiFi.

- Check the WiFi LED status to make sure the Nebula Device WiFi is on.
- Make sure the WiFi client is within transmission range of a Nebula Device.
- Make sure the WiFi client entered the correct SSID (Service Set Identifier) and pre-shared key (PSK). Go to Site-wide > Configure > WiFi SSID settings for the correct SSID and PSK.
- Make sure your WiFi client is using the same WiFi security type (PSK or open) as the Nebula Device.
- Make sure the WiFi adapter on your WiFi client is working. Right-click your WiFi client computer's network adapter and then select Properties to check the network adapter status.
- Make sure the WiFi adapter on your WiFi client is IEEE 802.11-compatible. Make sure it supports the same WiFi standard as the Nebula Device 2.4G/5G radio.

- Select MAC authentication fallback in Site-wide > Configure > Access points > SSID advanced settings: Sign-in method. If MAC authentication fails, the WiFi client will use web authentication with a user name and password.

Example Scenario: When MAC authentication fails.

A WiFi client tries to connect to a WiFi network using MAC authentication (RADIUS server). If MAC authentication fails, the WiFi client will fall back to web authentication. The WiFi client must provide a user name and password for web authentication.

A client device's WiFi connection is slow and intermittent.

The following factors may cause interference:

- Obstacles: walls, ceilings, furniture, and so on.
- Building Materials: metal doors, aluminum studs.
- Electrical devices: microwaves, monitors, electric motors, cordless phones, and other WiFi devices.

To optimize the speed and quality of a WiFi connection, you can:

- Move the client WiFi device closer to a Nebula Device if the signal strength is low.
- Reduce WiFi interference caused by other WiFi networks or surrounding wireless electronics such as cordless phones.
- Reduce the number of WiFi clients connecting to the same Nebula Device simultaneously, or add additional Nebula Devices if necessary.
- Try closing some programs that use the Internet on the WiFi client, especially peer-to-peer applications. If a WiFi client is sending or receiving a lot of information, it may have too many programs open that use the Internet.
- Place a Nebula Device where there are minimum obstacles (such as walls and ceilings) between a Nebula Device and a WiFi client. Avoid placing a Nebula Device inside any box that might block WiFi signals. See [How to Position Multiple Nebula Devices \(for Nebula Access Points only\)](#) for more tips on selecting the best position to minimize signal interference for multiple Nebula Devices (access points).
- Go to Site-wide > Configure > Access points > SSID advanced settings: Advanced settings and turn on IEEE 802.11r fast roaming on the Nebula Device. 802.11r fast roaming reduces the delay when the clients switch from one Nebula Device to another by storing the security keys on all Nebula Devices in a network. Information from an original association is passed to the new Nebula Device when the clients roam. The clients do not need to perform the 802.1x authentication process again.

I enabled AP traffic log in Site-wide > Configure > Site settings: Reporting, and I want to restrict the type of logs from my Nebula Device (for example, no debug logs).

- At the time of writing, Nebula Devices will log all events. You will not be able to restrict the type of logs written.
- You can choose the type of logs to generate only in Standalone mode by doing the following:
 - Log in to the Nebula Access Point's Web Configurator.

Note: If NCC is managing or has managed a Nebula Device, check Local credentials in Site-wide > Configure > Site settings for the Nebula Device's current password.

- Go to Configuration > Log & Report > Log Setting > Active Log Summary.
- Select what information to include in the system log.

My Mac OS computer will not display the captive portal page for logging in.

- Enter "http://neverssl.com" in the Location or Address field of your browser. This allows you to access the NCC login page by bypassing SSL (Secure Sockets Layer). SSL creates an encrypted link between a web server and a web browser.

I am unable to access a Nebula Device in Standalone mode after removing (unregistering) the Nebula Device from NCC.

- Make sure the Nebula Device has been removed from your organization. Go to Organization-wide > License & inventory > Devices. Select the Nebula Device, click Actions, then click Remove from organization. Click Yes to confirm, or click the delete icon to remove the Nebula Device.
- Make sure to reset the Zyxel Device to its factory-default settings. This will remove the current configuration.


You should now be able to access the Zyxel Device's Web Configurator in Standalone mode.

16.1 Getting More Troubleshooting Help

Go to support.zyxel.com at the Zyxel website for other technical information on the NCC.

16.2 NCC Live Chat

Clicking the Ask Question button at the bottom of NCC window prompts you to search for a solution on the Zyxel forum, and then connects you to a Zyxel technical support agent. If a technical support agent is not available, you can fill in a form to send your question to Zyxel by email.

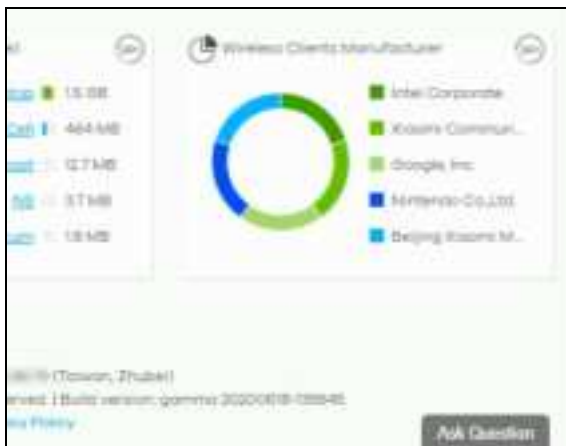

Note: This is an NCC Professional Pack feature.

Live chat might be limited to a certain number of hours per day. The time that live chat is available varies depending on your country.

APPENDIX A

Customer Support

In the event of problems that cannot be solved by using this manual, you should contact your vendor. If you cannot contact your vendor, then contact a Zyxel office for the region in which you bought the device.

For Zyxel Communication offices, see <https://service-provider.zyxel.com/global/en/contact-us> for the latest information.

For Zyxel Network offices, see <https://www.zyxel.com/index.shtml> for the latest information.

Please have the following information ready when you contact an office.

Required Information

- Product model and serial number.
- Warranty Information.
- Date that you received your device.
- Brief description of the problem and the steps you took to solve it.

Corporate Headquarters (Worldwide)

Taiwan

- Zyxel Communications (Taiwan) Co., Ltd.
- <https://www.zyxel.com>

Asia

China

- Zyxel Communications Corporation–China Office
- <https://www.zyxel.com/cn/sc>

India

- Zyxel Communications Corporation–India Office
- <https://www.zyxel.com/in/en-in>

Kazakhstan

- Zyxel Kazakhstan
- <https://www.zyxel.com/ru/ru>

Korea

- Zyxel Korea Co., Ltd.
- <http://www.zyxel.kr/>

Malaysia

- Zyxel Communications Corp.
- <https://www.zyxel.com/global/en>

Philippines

- Zyxel Communications Corp.
- <https://www.zyxel.com/global/en>

Singapore

- Zyxel Communications Corp.
- <https://www.zyxel.com/global/en>

Taiwan

- Zyxel Communications (Taiwan) Co., Ltd.
- <https://www.zyxel.com/tw/zh>

Thailand

- Zyxel Thailand Co., Ltd.
- <https://www.zyxel.com/th/th>

Vietnam

- Zyxel Communications Corporation–Vietnam Office
- <https://www.zyxel.com/vn/vi>

Europe

Belarus

- Zyxel Communications Corp.
- <https://www.zyxel.com/ru/ru>

Belgium (Netherlands)

- Zyxel Benelux
- <https://www.zyxel.com/nl/nl>
- <https://www.zyxel.com/fr/fr>

Bulgaria

- Zyxel Bulgaria

- <https://www.zyxel.com/bg/bg>

Czech Republic

- Zyxel Communications Czech s.r.o.
- <https://www.zyxel.com/cz/cs>

Denmark

- Zyxel Communications A/S
- <https://www.zyxel.com/dk/da>

Finland

- Zyxel Communications
- <https://www.zyxel.com/fi/fi>

France

- Zyxel France
- <https://www.zyxel.com/fr/fr>

Germany

- Zyxel Deutschland GmbH.
- <https://www.zyxel.com/de/de>

Hungary

- Zyxel Hungary & SEE
- <https://www.zyxel.com/hu/hu>

Italy

- Zyxel Communications Italy S.r.l.
- <https://www.zyxel.com/it/it>

Norway

- Zyxel Communications A/S
- <https://www.zyxel.com/no/no>

Poland

- Zyxel Communications Poland
- <https://www.zyxel.com/pl/pl>

Romania

- Zyxel Romania
- <https://www.zyxel.com/ro/ro>

Russian Federation

- Zyxel Communications Corp.
- <https://www.zyxel.com/ru/ru>

Slovakia

- Zyxel Slovakia
- <https://www.zyxel.com/sk/sk>

Spain

- Zyxel Iberia
- <https://www.zyxel.com/es/es>

Sweden

- Zyxel Communications A/S
- <https://www.zyxel.com/se/sv>

Switzerland

- Studerus AG
- <https://www.zyxel.com/ch/de-ch>
- <https://www.zyxel.com/fr/fr>

Turkey

- Zyxel Turkey A.S.
- <https://www.zyxel.com/tr/tr>

UK

- Zyxel Communications UK Ltd.
- <https://www.zyxel.com/uk/en-gb>

Ukraine

- Zyxel Ukraine
- <https://www.zyxel.com/ua/uk-ua>

South America

Argentina

- Zyxel Communications Corp.
- <https://www.zyxel.com/co/es-co>

Brazil

- Zyxel Communications Brasil Ltda.

- <https://www.zyxel.com/br/pt>

Colombia

- Zyxel Communications Corp.
- <https://www.zyxel.com/co/es-co>

Ecuador

- Zyxel Communications Corp.
- <https://www.zyxel.com/co/es-co>

South America

- Zyxel Communications Corp.
- <https://www.zyxel.com/co/es-co>

Middle East

Israel

- Zyxel Communications Corp.
- <https://il.zyxel.com>

North America

USA

- Zyxel Communications, Inc. – North America Headquarters
- <https://www.zyxel.com/us/en-us>

APPENDIX B

Legal Information

Copyright

Copyright © 2025 by Zyxel and/or its affiliates.

The contents of this publication may not be reproduced in any part or as a whole, transcribed, stored in a retrieval system, translated into any language, or transmitted in any form or by any means, electronic, mechanical, magnetic, optical, chemical, photocopying, manual, or otherwise, without the prior written permission of Zyxel and/or its affiliates.

Published by Zyxel and/or its affiliates. All rights reserved.

Disclaimer

Zyxel does not assume any liability arising out of the application or use of any products, or software described herein. Neither does it convey any license under its patent rights nor the patent rights of others. Zyxel further reserves the right to make changes in any products described herein without notice. This publication is subject to change without notice.

Viewing Certifications

Go to <http://www.zyxel.com> to view this product's documentation and certifications.

Zyxel Limited Warranty

Zyxel warrants to the original end user (purchaser) that this product is free from any defects in material or workmanship for a specific period (the Warranty Period) from the date of purchase. The Warranty Period varies by region. Check with your vendor and/or the authorized Zyxel local distributor for details about the Warranty Period of this product. During the warranty period, and upon proof of purchase, should the product have indications of failure due to faulty workmanship and/or materials, Zyxel will, at its discretion, repair or replace the defective products or components without charge for either parts or labor, and to whatever extent it shall deem necessary to restore the product or components to proper operating condition. Any replacement will consist of a new or re-manufactured functionally equivalent product of equal or higher value, and will be solely at the discretion of Zyxel. This warranty shall not apply if the product has been modified, misused, tampered with, damaged by an act of God, or subjected to abnormal working conditions.

Note

Repair or replacement, as provided under this warranty, is the exclusive remedy of the purchaser. This warranty is in lieu of all other warranties, express or implied, including any implied warranty of merchantability or fitness for a particular use or purpose. Zyxel shall in no event be held liable for indirect or consequential damages of any kind to the purchaser.

To obtain the services of this warranty, contact your vendor. You may also refer to the warranty policy for the region in which you bought the device at http://www.zyxel.com/web/support_warranty_info.php.

Registration

Register your product online at www.zyxel.com to receive email notices of firmware upgrades and related information.

Index

Symbols

- + Swap/Add button [413](#)
- +Hub button [786](#)
- +Org-to-Org Service [787](#)

Numbers

- 2FA [29](#)
 - enable [128](#)
 - set up [134](#)
- 3GPP specifications [698](#)
- 802.11k neighbor lists [352, 484](#)
- 802.11v capable client [352, 484](#)
- 802.1X (WPA-Enterprise) authentication [315, 765](#)
- 802.1X authentication [347](#)

A

- access point
 - connection status [235](#)
- Access point application usage
 - Dashboard [224](#)
- Access point clients
 - Dashboard [225](#)
- Access point clients by OS
 - Dashboard [224](#)
- Access point clients by usage
 - Dashboard [224](#)
- access point list
 - export [234, 705](#)
- Access points by usage
 - Dashboard [224](#)
- Access points Google Map
 - Dashboard [225](#)
- Access points screen [233](#)
- Access points status

- Dashboard [225](#)
- access port [394, 400](#)
- accessories
 - connection status [706](#)
- Accessories screen [275](#)
- account
 - disable [791](#)
 - expire [769, 772](#)
- account list
 - export [314, 318, 320, 765, 768, 771](#)
- account status [730, 790, 802, 812](#)
- ACL rule
 - configure [418](#)
- ACL screen [419](#)
- Active
 - license state [724](#)
- Active Directory [614, 679](#)
- AD server [614, 679](#)
- add a device
 - tutorial [80](#)
- Add devices screen [714, 715](#)
- Add licenses screen [716](#)
- add member to stack [413](#)
- Add more devices
 - action [713](#)
- Add more licenses
 - action [713](#)
- address
 - gateway [273](#)
- administrator
 - delete [123](#)
 - privilege [800](#)
 - update [803, 812](#)
- administrator account password [204](#)
- administrator accounts [728](#)
- Administrator screen [731, 791](#)
- Administrators screen [728](#)
- Admins & teams [800](#)
- advanced [755](#)
- AES encryption algorithm [557](#)

AES256 cipher [475](#)
Alert Settings screen [299](#)
ALG [625](#)
allow list [577](#), [591](#), [592](#), [753](#), [755](#)
antenna orientation [242](#)
antenna switch [242](#)
anti-malware [754](#)
Anti-Malware signature [321](#)
AP [363](#), [491](#)
AP & Port Settings screen [367](#)
AP photo [245](#)
AP Smart Mesh [330](#)
AP/switch setting
 overwrite [115](#)
API token
 generate [329](#)
App ID [348](#), [482](#)
Appliance Clients (by Usage)
 Dashboard [224](#)
Appliance Network Applications
 Dashboard [225](#)
Application Layer Gateway, see ALG
application management profile
 add [462](#)
application patrol [562](#), [752](#)
application patrol profile [657](#)
 add [563](#)
Applications screen [287](#)
ARP packet [191](#)
Ask Question
 button [851](#)
assign administrator
 tutorial [102](#)
Assign License
 action [720](#), [722](#), [723](#), [724](#)
assisted roaming [352](#), [478](#), [484](#)
ATP device
 license [19](#)
 trial license [725](#)
Authentication Method screen [611](#)
Authentication screen [432](#)
Automatic Power Save Delivery [352](#), [484](#)
auto-negotiation [389](#)
Azure AD [348](#), [482](#)

B

Backup & restore screen [703](#), [818](#)
Backups screen [819](#)
band selection
 WiFi [478](#)
bandwidth utilization [260](#)
Base Station Identity Code (BSIC) [699](#)
Base tier [19](#)
base transceiver station [697](#)
Batch Create DPPSK [773](#)
battery life [352](#), [484](#)
Beta
 firmware type [236](#), [247](#), [312](#), [706](#), [762](#)
binding table [192](#)
block list [576](#), [591](#), [753](#), [754](#)
blocked client
 release [293](#)
Branch to Branch VPN
 enable [784](#)
bridge priority [438](#)
 set [438](#)
browser
 supported [843](#)
browser support [26](#)
BSIC [699](#)
bulk firmware upgrade wizard [828](#)
bundled license [26](#)

C

callback URL [348](#), [482](#)
captive portal [607](#), [671](#)
Captive portal customization screen [354](#)
Captive portal screen [607](#), [671](#)
captive portal setting
 SSID profile [353](#)
carrier aggregation (CA) [697](#), [699](#)
CDR
 configure [201](#)
 tutorial [201](#)
CDR (Collaborative Detection & Response) [19](#)
CDR containment [203](#)

- CDR security service [293](#)
- cell ID [697](#)
- Cell Identity [697](#)
- cellular band [697](#)
- Cellular Info screen [694](#)
- cellular IP passthrough
 - setting [688](#)
- certificate
 - generate new [475](#)
 - import [779](#)
 - update [780](#)
- certifications
 - viewing [858](#)
- chain topology [404](#)
- Change log screen [727, 774, 792, 831](#)
- Change organization
 - action [720, 722, 723, 724](#)
- change owner [729](#)
- Change site assignment
 - action [720, 722](#)
- channel bandwidth [336](#)
- channel ID [264, 269](#)
- channel list [189](#)
- channel profile and naming
 - configure [188](#)
- Channel Quality Indicator (CQI) [699](#)
- channel width [360, 488](#)
- Classification mode [258](#)
- Client device heartbeat screen [702](#)
- client IP traffic
 - block [201](#)
- client statistics
 - display [280](#)
- client steering [361, 489](#)
- Clients list screen [280](#)
- Clients screen [277](#)
- Cloud Authentication account
 - privilege [815](#)
- Cloud authentication screen [126, 313, 763](#)
- Cloud mode [204](#)
- cloud sandboxing [755](#)
- Cloud Stacking mode [401, 404](#)
- Cloud-Saving mode [67](#)
- CNP security service
 - enable [118](#)
- Collaborative Detection & Response (CDR) [24, 321](#)
- Collaborative detection & response screen [202](#)
- configuration
 - backup [100](#)
 - configuration backup [737](#)
 - configuration management [780](#)
 - configuration synchronization [737](#)
 - configuration template [741](#)
 - manage [104](#)
 - tutorial [104](#)
- Configuration templates screen [741](#)
- Configure menu [299, 340](#)
- Connect & Protect (CNP) license [19](#)
- Connect & Protect (CNP) trial license [725](#)
- Connect & Protect Plus (CNP+) [19](#)
- connected device
 - summary [733](#)
- connection speed
 - port [273](#)
- connection status
 - port [273](#)
- Connection Test button [205](#)
- connectivity [737](#)
- Consumption mode [258](#)
- contact information [853](#)
- containment action [323](#)
- Containment List screen [293](#)
- Content Filter Pack license [19](#)
- Content Filter Pack trial license [725](#)
- content filtering [562, 568, 659, 751](#)
- content filtering profile
 - add [565](#)
- controller mesh [331](#)
- Coordinated Universal Time (UTC) [70](#)
- copyright [858](#)
- CPU usage [268, 274](#)
- CQI [699](#)
- CRC (Cyclic Redundant Check) error [374, 375](#)
- CRC error [261](#)
- create
 - user account [315, 769, 772](#)
- Create Group window [782](#)
- Create organization screen [62](#)
- create user account [766](#)

Critical

- firmware status [312, 758, 762, 827, 828, 831](#)
- cross-org site clone [815](#)
- cross-org sync [815](#)
- Cross-org synchronization screen [817](#)
- CSS value [609, 673](#)
- Custom
 - firmware status [312, 762, 828, 831](#)
 - firmware type [827](#)
- custom portal page [356, 673](#)
- custom theme [355, 673](#)
- Customer orgs & groups screen [805](#)
- customer support [842, 853](#)
 - privilege [842](#)
- Cyclic Redundant Check [261](#)

D

- dark mode [45](#)
- dark web blocking [460](#)
- Dashboard logo [832](#)
 - specs [833](#)
- dashboard logo
 - upload/replace/remove [15](#)
- Dashboard screen [37, 222](#)
 - change default view [85](#)
- Data Policy screen [839](#)
- data roaming [696](#)
- DCS
 - time interval [360, 488](#)
- DCS (Dynamic Channel Selection) [336](#)
- DDMI [262](#)
- Dedicated
 - firmware type [236, 247, 312, 706, 762](#)
- Defend Center [755](#)
- Delegate owner's authority
 - privilege [790](#)
- delete icon [270, 703, 820](#)
- Deployment Method
 - Setup Wizard [206](#)
- deployment method [720, 721, 722, 724](#)
 - set up [74](#)
- DES encryption algorithm [557](#)
- description
 - gateway [273](#)
- destination lookup failure (DLF) [241](#)
- device
 - add to site [70](#)
 - view [41](#)
- Device function table [14, 330, 372](#)
- Device function table screen [840](#)
- device list
 - export [720, 736, 789](#)
- Devices menu [233](#)
- Devices screen [309, 719, 759](#)
- Devices tab [736](#)
- DH key [667](#)
- DHCP relay [642, 647](#)
- DHCP server [642, 647](#)
- DHCP server guard [440](#)
- DHCP service [642, 647](#)
- Differentiated Services Code Point (DSCP) value [439](#)
- Diffie-Hellman key group [667](#)
- Diffie-Hellman key group (DHx) [472, 552, 558](#)
- Digital Diagnostics Monitoring Interface [262](#)
- disable account [731, 791](#)
- disable MSP admin account [804, 813](#)
- disclaimer [858](#)
- DNS content filtering
 - enable [566](#)
- DNS lookup [693](#)
- DNS setting [491, 614, 679](#)
- DNS/URL threat filter [752](#)
- domain allow or block list [461, 464](#)
- domain name [693](#)
- domain zone [616, 681](#)
- download icon [270, 703, 820](#)
- DPPSK account
 - add/edit [772](#)
 - batch creation [773](#)
- DPPSK screen [319, 770](#)
- DPPSK third-party integration [329](#)
- Dynamic Personal Pre-Shared Key (DPPSK) [22, 296, 315, 316, 320, 348, 482, 765, 767, 772, 773, 774](#)
 - print [320, 771](#)
- DynDNS account [640](#)

E

EARFCN (E-UTRA Absolute Radio-Frequency Channel Number) [697](#), [698](#)
EcNo [698](#)
Edit floor plans tab [276](#)
edit icon [820](#)
eITS ticket [842](#)
Elite Pack license [19](#)
Elite Pack trial license [725](#)
email
 alert notification [303](#), [304](#), [305](#)
email address
 user account [320](#)
email recipient
 MSP alerts [824](#)
email report [292](#), [378](#), [386](#), [444](#), [445](#), [501](#), [632](#), [635](#)
Email Verification [31](#)
encryption algorithm [473](#), [553](#), [557](#)
encryption method
 SSID network [292](#)
eNodeB (Evolved Node-B) [699](#)
Entry Defense Pack license [19](#)
Ethernet WAN status [693](#)
E-UTRA Absolute Radio-Frequency Channel Number [697](#), [698](#)
event log [332](#), [372](#), [441](#), [494](#), [628](#)
Event Log screen [332](#), [372](#), [441](#), [494](#), [628](#)
Expired
 license state [724](#)
expired license
 renew [87](#)
extender mesh [331](#)
External interface configuration screen [516](#)

F

Facebook app ID [348](#), [482](#)
Facebook login [348](#), [482](#)
factory-default setting
 reset to [204](#)
factory-default settings [412](#), [413](#)
firewall information
 export [839](#)

 port information [845](#)
Firewall information screen [839](#)
firewall rule [653](#)
 default [465](#), [559](#)
Firewall screen [265](#), [466](#), [559](#), [657](#)
Firewall settings
 Dynamic DNS screen [617](#)
Firewall settings screen [614](#)
Firewall status
 Dashboard [225](#)
firmware
 maintain [98](#)
 upgrade [71](#)
Firmware management screen [306](#), [756](#)
firmware upgrade
 priority [757](#), [827](#)
 schedule [306](#), [757](#), [759](#), [827](#)
Firmware upgrade screen [715](#), [826](#)
firmware version
 view [689](#)
floor plan [275](#)
force logout [729](#), [789](#)
FQDN [492](#), [681](#), [786](#)
FQDN (Fully-Qualified Domain Name) [839](#)
Full (read and write)
 access [732](#)
full access [730](#)
Full privilege [790](#), [791](#)
Fully-Qualified Domain Name [492](#), [681](#)
Fully-Qualified Domain Name (FQDN) [784](#)

G

gateway
 log message [628](#)
Gateway settings screen [679](#), [682](#)
GDPR Statement [35](#)
General Availability
 firmware type [236](#), [247](#), [312](#), [706](#), [762](#)
general interface configuration screen [525](#)
get started [26](#)
Gold Security Pack license [19](#)
Gold Security Pack trial license [725](#)
Good

- firmware status [312, 758, 762, 827, 828, 831](#)
- Google Authenticator app [30](#)
 - install [135](#)
- Google authenticator passcode [128](#)
- Google map [273, 690](#)
 - client location [282](#)
 - site location [733](#)
- grace period
 - organization license [25](#)
- group
 - create [782, 807](#)
 - definition [782](#)
- Group Administrator account [789](#)
- Group list [783](#)
- Group-wide
 - overview [783](#)
- Group-wide menu [783](#)
- guest ambassador
 - access [730, 732](#)
- Guest interface [645](#)
- guest VLAN [433](#)
- guest WiFi network [73](#)

H

- hash algorithm [558](#)
- Hit for AP Network IP Reputation Filter
 - Dashboard [225](#)
- Hit for Collaborative Detect & Response
 - Dashboard [225](#)
- Home networking
 - setting [686](#)
- hub [744](#)
 - add [786](#)
- hub to hub VPN [784, 786](#)
- hub-and-spoke topology [744, 784](#)
- Hub-and-Spoke VPN [664](#)

I

- ICCID [696](#)
- icon
 - delete [270, 703, 820](#)

- download [270, 703, 820](#)
- edit [820](#)
- More [41](#)
- pause [693](#)
- photo remove [692](#)
- play [693](#)
- restore [270, 820](#)
- Identity Provider (IdP) [348, 482](#)
- idle timeout [779](#)
- IDP [568, 659](#)
- IEEE 802.11k/v [352, 484](#)
- IEEE 802.3af Power over Ethernet standard [396](#)
- IEEE 802.3at High Power over Ethernet standard [396](#)
- IGMP filtering profile [398](#)
- IGMP Group-Specific Query (GSQ) message [397, 431](#)
- IGMP multicast groups [378](#)
- IGMP query port [398](#)
- IGMP snooping [427](#)
- IGMP status [253](#)
- IKE (Internet Key Exchange) [555, 667](#)
- IKE SA [470, 545](#)
- IKE SA (Security Association) [666](#)
- IKE version [127, 471, 551](#)
- image
 - maximum file size [298](#)
 - upload/replace/remove [298](#)
- IMEI [695](#)
- import certificate [779](#)
- IMSI [696](#)
- Inactive
 - license state [724](#)
- in-app push
 - alert notification [303, 304, 305](#)
- Install wizard
 - action [713](#)
- installation wizard [716](#)
- Installer
 - access [732](#)
- installer privilege [730](#)
- instant messenger (IM) [563, 657](#)
- Insufficient Licenses status [25](#)
- Integrated Circuit Card Identifier (ICCID) [696](#)
- Interface addressing screen [636](#)
- Interface screen [446, 505](#)
- Interfaces addressing

- Local LAN screen [648](#)
- Interfaces addressing screen [650](#)
- internal antenna [242](#)
- Internal interface configuration screen [520](#)
- International Mobile Equipment Identity (IMEI) [695](#)
- International Mobile Subscriber Identity (IMSI) [696](#)
- Internet access
 - voucher [294](#)
- Internet Information Server (IIS) [356](#)
- Internet Protocol Security [669](#)
- Internet Service Provider [696](#)
- intra-BSS traffic blocking [343](#), [352](#)
- Intrusion Detection and Prevention [568](#), [659](#)
- Intrusion Detection and Prevention (IDP) [497](#), [631](#), [633](#)
- intrusion detection/prevention [755](#)
- Inventory screen [788](#)
- IP & Routing screen [420](#)
- IP address
 - add [784](#)
 - client [284](#)
- IP passthrough [696](#)
- IP source guard
 - setup [191](#)
- IPS (IDP) signature [321](#)
- IPS (Intrusion Prevention System) [19](#)
- IPSec [669](#)
- IPSec SA [473](#), [553](#), [557](#)
- IPSec tunnel
 - maximum [847](#)
- IPSec VPN [666](#)
- IPSec VPN client
 - enable remote access VPN rule [127](#)
- IPSec VPN tunnel [713](#)
- IPTV
 - manage [185](#)
 - set up VLAN [185](#)
- IPTV advanced VLAN 1 [456](#), [458](#)
- IPTV Bridge [455](#)
- IPTV channel [56](#), [188](#), [378](#)
- IPTV client [378](#)
- IPTV Direct [455](#)
- IPTV report [56](#)
- IPTV report screen [376](#)
- IPTV scenario

- configuration [455](#)
- IPTV scenarios [454](#)
- IPTV topology setup [186](#)
- IPTV traffic [378](#)
- IPTV Triple Play [455](#)
- IPTV with VLAN tag [455](#)
- IPv4 address
 - gateway [701](#)
 - LAN station [701](#)
- ISP (Internet Service Provider) [696](#)

K

- key size [557](#)

L

- L2 isolation [343](#)
- L2TP [669](#)
- L2TP VPN [669](#)
- LAC [699](#)
- LAI (Location Area ID) [699](#)
- LAN interface configuration
 - DHCP option screen [512](#)
- LAN interface configuration screen [451](#), [509](#)
- LAN stations screen [700](#)
- LAN usage
 - view [689](#)
- language
 - select [45](#)
- Latest
 - firmware type [236](#), [247](#), [312](#), [706](#), [762](#)
- Layer 2 Tunneling Protocol [669](#)
- layer-2 isolation [352](#)
- leave mode
 - fast [397](#)
 - normal [397](#)
- LED
 - STACK ID [411](#), [413](#), [417](#)
 - SYS [411](#)
- license
 - activate/assign [81](#)
 - activation [82](#)

- assign to Nebula Device in new organization [90](#)
- Circle [713](#)
- feature difference [20](#)
- general information [26](#)
- monitor expiration [86](#)
- purchase [713](#)
- states [82](#)
- transfer [88](#), [122](#)
- transfer to a different organization [89](#)
- transfer to a Nebula Device in same/new organization [92](#)
- undo assign [89](#)
- validity [26](#)
- license concept [17](#)
- License Expired status [25](#)
- license list
 - export [724](#)
- License screen [26](#), [722](#)
- license summary table [18](#)
- license tier [86](#)
 - organization [19](#)
- License transfer
 - action [722](#), [723](#), [724](#)
- license types [81](#)
- licenses purchase
 - export [713](#), [720](#)
- Link Aggregation Control Protocol (LACP) [647](#)
- Link Aggregation Group (LAG) [643](#)
- Link Layer Discovery Protocol [260](#)
- Link Layer Discovery Protocol (LLDP) [389](#)
- live tools [692](#)
- LLDP [260](#)
- LLDP (Link Layer Discovery Protocol) [280](#), [284](#)
- LLDP-MED protocol [439](#)
- load balancing [240](#), [369](#)
- load balancing method [678](#)
- Local credentials password [201](#)
- local override [741](#), [744](#)
 - enable [113](#)
 - switch [744](#)
- Location Area Code (LAC) [699](#)
- Location Area ID [699](#)
- locator LED [256](#)
- log
 - full [792](#), [831](#)
- log list

- export [299](#), [727](#), [775](#), [792](#), [832](#)
- log message [332](#), [372](#)
- login account
 - menu [41](#)
- login information [129](#)
- login page [355](#)
- login password [201](#)
- logo
 - remove [833](#)
 - replace [833](#)
 - upload [833](#)
- loop guard [390](#)

M

- MAC account
 - create/update [769](#)
- MAC address
 - client [284](#)
 - gateway [273](#)
 - LAN station [701](#)
 - port [273](#)
 - user account [318](#)
 - WiFi station [701](#)
- MAC authentication [347](#)
- MAC screen [317](#), [767](#), [769](#)
- Managed Service Provider (MSP) [15](#), [796](#)
- management control
 - enable [390](#)
- management port [394](#), [400](#)
- management VLAN [438](#)
- map [275](#)
 - pin a device [275](#)
- Map & floor plans screen [275](#)
- master election priority
 - stack system [405](#)
- Max Power (mW) [258](#)
- MCC [696](#)
- MCS [699](#)
- Media Independent Interface (MII) [647](#)
- media type
 - stacking port [407](#)
- Memory usage [268](#), [274](#)
- merged privilege [730](#)

- metadata file
 - download [348, 482](#)
 - upload [348, 482](#)
- Microsoft Entra ID [348, 482](#)
- mii (Media Independent Interface) [647](#)
- MLO [353](#)
- MNC [696](#)
- Mobile Country Code (MCC) [696](#)
- Mobile Network Code (MNC) [696](#)
- mobile router
 - restart [693](#)
- Mobile router screen [275](#)
- Mobile router status
 - Dashboard [225](#)
- modulation coding scheme [699](#)
- Monitor menu [293, 332, 372, 441, 494, 628](#)
- Monitor-only
 - access [730, 732](#)
- More icon [41](#)
- MSP
 - introduction [15](#)
- MSP admin account
 - disable [804, 813](#)
- MSP admin privilege
 - assign [805](#)
- MSP administrator [820](#)
 - create [803](#)
- MSP admins & teams screen [801, 811](#)
- MSP alerts
 - create [822](#)
 - notification type [824](#)
 - update [822](#)
- MSP alerts screen [820](#)
- MSP branding [832](#)
- MSP license [17, 18, 796](#)
 - activate [118](#)
- MSP organization
 - create [808](#)
- MSP Pack trial license [725](#)
- MSP portal [796](#)
- MSP settings [834](#)
- MSP Trial license [18](#)
- My RADIUS server [348, 482](#)
- myZyxel portal [97](#)

N

- N/A
 - firmware type [236, 247, 312, 706, 758, 762](#)
- name
 - port [273](#)
 - user account [318, 320](#)
- NAS [627, 682](#)
- NAS identifier [176, 349, 627](#)
- NAS IP address [627, 682](#)
- NAT rule [538](#)
- NAT screen [538](#)
- Native mode [721, 724](#)
- NCAS [350, 483](#)
- NCAS (Nebula Cloud Authentication Server) [612](#)
- NCC
 - access [26](#)
 - alert [44](#)
 - change device owner [62](#)
 - create organization [62](#)
 - dark mode [45](#)
 - Dashboard [222](#)
 - display language [45](#)
 - example network [16](#)
 - features [14](#)
 - license expiration [783, 799](#)
 - license status [783](#)
 - live chat [851](#)
 - log message view [44](#)
 - login [27, 34](#)
 - menu [53](#)
 - notification [44](#)
 - organization [16](#)
 - overview [14, 79](#)
 - portal website [26](#)
 - sample network topology [17](#)
 - settings icon [44](#)
 - site [16](#)
 - two-factor authentication [29](#)
- NCC license [713](#)
 - category [17](#)
 - status [798](#)
- NCC logo
 - replace [832](#)
- NCC menu summary [55](#)
- NCC OpenAPI Key [43](#)
- NCC portal

- access [26](#)
- no access [843](#)
- overview [37](#)
- parts [37](#)
- title bar [39](#)
- NCC, Nebula Control Center [14, 79](#)
- Near Expiring status [25](#)
- Nebula account
 - login [32](#)
- Nebula cloud authentication
 - select [348, 482](#)
- Nebula Cloud Authentication Server [350, 483](#)
- Nebula configuration [206](#)
- Nebula Device
 - location [690](#)
 - power consumption [257](#)
 - remove [121](#)
 - status [87](#)
- Nebula Device list
 - export [246](#)
- Nebula Device port list
 - export [388](#)
- Nebula managed device
 - connect [26](#)
- Nebula management mode
 - select [204](#)
- Nebula Mode
 - select [204](#)
- Nebula native mode [206](#)
 - deploy [203](#)
 - deployment method [74](#)
- Nebula portal [206](#)
- Nebula SD-WAN portal
 - access [33](#)
- Nebula Security Service [56, 497, 631](#)
- Nebula Security Service (NSS) license [18](#)
- Nebula Smart Mesh [330, 369, 493](#)
- NETCONF [14](#)
- NETCONF over TLS [14](#)
- Network Access Server [627, 682](#)
- Network address translation (NAT) [638](#)
- Network Configuration Protocol (NETCONF) [14](#)
- network connection
 - check [201](#)
- Network Interface Card (NIC)
 - PXE-capable [512, 524, 529](#)

- network topology [227](#)
 - fully-meshed [744](#)
- Network usage and connectivity screen [703](#)
- next hop [531, 651](#)
- Non-Stacking
 - Device mode [247](#)
- NSG device
 - license [18](#)
- NSS [56, 497, 631](#)
- NSS Analysis Report screen [631](#)

O

- Object screen [597](#)
- online document
 - parts [837](#)
- Online documents screen [837](#)
- ONVIF (Open Network Video Interface Forum) [425](#)
- ONVIF discovery
 - configure [426](#)
- ONVIF discovery screen [426](#)
- Orchestrator Management [33](#)
- organization
 - choose [63](#)
 - create [62, 69, 206, 808](#)
 - create new [28](#)
 - delete [121, 124](#)
 - summary view [40](#)
 - update [807](#)
- organization (delegated) privilege [730](#)
- organization access [732, 791](#)
- organization administrator [14, 16](#)
- organization license [17](#)
 - grace period [25](#)
- organization name
 - change [93](#)
- Organization Trial license [18](#)
- organization-wide administrator
 - create [812](#)
- organization-wide schedule
 - firmware upgrade [761](#)
- Org-to-Org Service [784](#)
- Org-to-Org VPN [786, 794](#)
 - configure [784](#)

- example [785](#)
- Org-to-Org VPN screen [785](#)
- OSI (Open System Interconnection) [569](#), [660](#)
- OUI (Organizationally Unique Identifier) [439](#)
- output power
 - radio [359](#), [488](#)
- override site-wide configuration
 - enable [113](#)
- Overview screen [306](#), [711](#), [733](#), [757](#), [819](#)
- owner
 - change [729](#)
- Owner privilege [790](#)
- owner privilege [730](#)

P

- passcode
 - 2FA [136](#)
- password
 - administration account [204](#)
 - cloud authentication user [316](#)
 - login [325](#)
 - reset [94](#)
- pause icon [693](#)
- PCC [697](#)
- PCI [696](#), [697](#)
- PD priority [395](#)
- peer-to-peer (P2P) [563](#), [657](#)
- Perfect Forward Secrecy [668](#)
- Perfect Forward Secrecy (PFS) [473](#), [553](#), [559](#)
- Personal Identification Number [696](#)
- PFS [668](#)
- photo
 - upload [690](#)
- photo remove icon [692](#)
- Physical Cell ID (PCI) [696](#), [697](#)
- PIN (Personal Identification Number) [696](#)
- PIN code [696](#)
- Pin Unlock Key [696](#)
- ping
 - perform [693](#)
- play icon [693](#)
- PLMN (Public Land Mobile Network) [696](#)
- Plus Pack license [18](#)
- Plus tier [19](#)
- PMI [699](#)
- PoE [434](#)
- PoE mode [258](#)
- PoE Power
 - Dashboard [224](#)
- PoE schedule [395](#)
- PoE schedules screen [434](#)
- PoE status [253](#)
- policy route [531](#), [651](#)
- Policy Route screen [651](#)
- port
 - disabled [439](#)
 - gateway [273](#)
- Port advisor screen [382](#)
- Port and Interface screen [513](#)
- port density
 - increase [402](#)
- port group [504](#), [638](#)
- port isolation [393](#), [400](#)
- port mirroring [260](#), [439](#)
- Port screen [503](#)
- port security [433](#)
- port setting
 - Nebula AP [367](#)
- port VLAN ID [390](#), [395](#), [401](#)
- power consumption
 - Nebula Device [257](#)
 - port [261](#), [387](#)
- power management mode [253](#), [258](#)
- Power over Ethernet [434](#)
- Power over Ethernet (PoE) [231](#)
- power-up mode [396](#)
- Precoding Matrix Indicator (PMI) [699](#)
- pre-shared key [470](#), [545](#), [665](#), [748](#)
- pre-shared key (PSK) [342](#), [347](#), [477](#)
- primary component carrier (PCC) [697](#)
- privilege [730](#)
 - admin in organization [790](#)
 - administrator [800](#)
 - merged [730](#)
 - organization [802](#), [812](#), [814](#)
 - site [812](#)
- privilege priority [800](#)

Pro Pack license [18](#)
Pro Pack trial license [725](#)
Pro tier [19](#)
problems [843](#)
product registration [859](#)
profile
 switch [744](#)
protocol ID [534](#)
Provision
 button [410, 415](#)
provisioning
 stacking [406](#)
Public Land Mobile Network [696](#)
PUCCH (Physical Uplink Control Channel) [699](#)
PUK (Pin Unlock Key) [696](#)
purchase history
 export [728](#)
Purchase History screen [728](#)
Purchase license
 action [720](#)
PUSCH (Physical Uplink Shared Channel) [699](#)
PVID [241, 395, 401](#)
PXE (Preboot eXecution Environment) [512, 524, 529](#)

Q

QR code [30, 135](#)
QSG (Quick Start Guide)
 Nebula Device [201](#)
Quality of Service (QoS) [438](#)
Quarantine screen [324](#)
quarantine VLAN [324](#)
Queued
 license state [724](#)

R

RAC (Routing Area Code) [699](#)
radio
 output power [359, 488](#)
Radio Frequency Channel Number [697, 698](#)
radio setting

 AP [358, 485](#)
Radio settings screen [358, 485](#)
RADIUS accounting [349](#)
RADIUS server [679](#)
RAI (Routing Area ID) [699](#)
Rank Indication [699](#)
rate limiting [342, 477](#)
read and write (Full)
 access [732](#)
read and write access [730](#)
read-only access [730, 732](#)
Read-only privilege [790, 791](#)
reboot
 automatic [244, 689](#)
 mobile router [693](#)
Received Signal Code Power [698](#)
recurring schedule
 firmware upgrade [311, 761](#)
Reference Signal Receive Power (RSRP) [697, 698](#)
Reference Signal Receive Quality (RSRQ) [697, 698](#)
Reference Signals (RS) [697, 698](#)
register a device [55](#)
registration
 product [859](#)
remote access VPN
 setup [125](#)
Remote access VPN screen [127, 473, 553](#)
remote AP
 maximum number of [847](#)
remote AP feature
 enable [240](#)
remote configurator
 mobile router [693](#)
Remote VPN Server [475](#)
remove
 stack member [412](#)
Remove from organization
 action [720, 722](#)
renewal license [26](#)
repeater AP [331](#)
RESET button [204](#)
Resource Element (RE) [697, 698](#)
RESTORE button [412, 413](#)
restore configuration [740](#)
restore icon [270, 820](#)

RFCN [697, 698](#)
ring topology [404](#)
 example [411](#)
roaming
 mobile router [696](#)
root AP [331](#)
root bridge [253](#)
RouterI settings screen [491](#)
Routing
 Policy Routes/Traffic Shaping screen [531](#)
 Static Route screen [536](#)
Routing Area Code [699](#)
Routing Area ID [699](#)
RSCP [698](#)
RSRP [697, 698](#)
RSRQ [697, 698](#)
RSSI [697](#)
RSSI (Received Signal Strength Indicator) [701](#)
RSTP status [253](#)

S

sandboxing [755](#)
schedule firmware upgrade [60, 61, 306, 756, 826](#)
schedule profile
 add [659](#)
schedule template [352, 435, 484](#)
Schedule upgrades screen [826](#)
Scheduled tasks screen [830](#)
SCR 50AXE
 trial license [725](#)
SD-WAN (Orchestrator) [33](#)
SD-WAN license [33](#)
search
 for NCC-managed device [40](#)
SecuExtender license key
 activate [129](#)
SecuExtender software
 install [129](#)
Secure WiFi license [19, 713](#)
Secure WiFi trial license [725](#)
SecuReporter screen [497](#)
Security Alert

 Dashboard [225](#)
Security Gateway screen [271](#)
Security gateway status
 Dashboard [225](#)
Security license [713](#)
security log
 display [693](#)
security policy [467, 561](#)
security profile sync [751](#)
 configure [748](#)
Security Profile Sync (SPS) [569](#)
Security profile sync screen [748](#)
Security router clients by OS
 Dashboard [225](#)
Security router screen [262](#)
Security router status
 Dashboard [225](#)
Security Service license [17](#)
Security service screen [364](#)
 for USG FLEX H Series [581](#)
 for USG FLEX/ATP Series [569](#)
security services [274](#)
serial number [247](#)
 gateway [273](#)
Server-and-Client VPN [664](#)
service provider [696](#)
Service Provider (SP) [348, 482](#)
Service Set Identifier [340, 475](#)
Settings screen [776, 793, 834](#)
Setup Wizard [200, 206](#)
setup wizard [32, 68](#)
 steps [68](#)
Setup Wizard screen [204](#)
severity level [842](#)
SFP (Small Form Factor Pluggable) port [262](#)
SFP+ module [407](#)
signal strength
 mobile router [694](#)
Signal to Interference plus Noise Ratio (SINR) [697, 699](#)
SIM card
 install [201](#)
 status [696](#)
single sign-on (SSO) [767](#)
SINR [697, 699](#)
SIP

- ALG [625](#)
 - site [744](#)
 - create [69, 206](#)
 - delete [122](#)
 - summary [733](#)
 - site administrator [14, 16](#)
 - site binding [743](#)
 - Site features logs screen [298](#)
 - site list
 - export [734](#)
 - site name
 - change [93](#)
 - Site settings screen [325](#)
 - site tag
 - summary [733](#)
 - Site tags tab [735](#)
 - Sites tab [733](#)
 - Site-to-Site VPN screen [468, 542, 662, 665](#)
 - site-wide schedule
 - firmware upgrade [311](#)
 - slot ID sequence
 - stacking [408](#)
 - Slot management screen [412](#)
 - Smart Alert Engine [300, 821](#)
 - smart client steering [363, 491](#)
 - Smart Mesh [242, 330](#)
 - network topology [331](#)
 - wireless hops [331](#)
 - Smart VPN [784](#)
 - spanning tree [253](#)
 - SSID [72, 340, 475](#)
 - mobile router [701](#)
 - SSID network
 - encryption method [292](#)
 - SSID overview screen [340, 475](#)
 - SSID profile [340, 475](#)
 - settings [343, 478](#)
 - SSID settings screen [344](#)
 - SSIDs (by Usage)
 - Dashboard [224](#)
 - Stable
 - firmware type [236, 247, 312, 706, 762](#)
 - STACK ID LED [411, 413, 417](#)
 - Stacking
 - Device mode [247](#)
 - stacking
 - concept [403](#)
 - configure [405](#)
 - Switches [402](#)
 - Stacking management screen [405](#)
 - stacking port [402](#)
 - static route [531, 651](#)
 - status
 - stack system [406](#)
 - voucher [295](#)
 - submit ticket [840](#)
 - Summary Report screen [291, 337, 385, 498, 634](#)
 - support
 - contact detail [15](#)
 - Support contact [832](#)
 - Support forum [840](#)
 - Support Request screen [841](#)
 - supported browsers [843](#)
 - supported Nebula Devices [14, 330, 372](#)
 - Surveillance screen [373](#)
 - swap
 - stack member [416](#)
 - Swap/Add Slot screen [413](#)
 - switch
 - define role [186](#)
 - switch connection status [247](#)
 - Switch ports screen [390](#)
 - Switch settings screen [435](#)
 - Switch Status
 - Dashboard [225](#)
 - Switches screen [246](#)
 - SYS LED [411](#)
 - Syslog server [328](#)
 - system log
 - display [693](#)
- ## T
- TAC [699](#)
 - tag
 - gateway [273](#)
 - tag list
 - export [735](#)
 - team

- create [804](#)
- name [802](#)
- update [804](#)
- template
 - configuration [741](#)
 - setting [743](#)
- template setting
 - duplicate/import to a site [108](#)
- template site/setting
 - create/bind [105](#)
- Threat detected by category
 - Dashboard [225](#)
- Threat detected by client
 - Dashboard [225](#)
- Threat management
 - Dashboard [225](#)
- Threat management screen [460](#)
- ticket
 - support request [840](#)
- ticket details [841](#)
- time zone
 - set [70](#)
 - site location [327](#)
- topology overview [744](#)
- Topology screen [226](#)
- traceroute
 - perform [245](#), [693](#)
- traceroute function [265](#), [269](#)
- Tracking Area Code (TAC) [699](#)
- traffic log
 - AP [328](#)
- traffic shaping [363](#), [676](#)
- Traffic shaping screen [363](#), [676](#)
- transfer license
 - action [720](#)
 - tutorial [88](#)
- transfer license to another organization
 - tutorial [89](#)
- transferable license
 - select [88](#)
- transmitting power [363](#), [491](#)
- trial license
 - activate [71](#)
 - expiration date [62](#)
- trial license summary table [725](#)
- Trial screen [725](#)

- troubleshooting [843](#)
 - more help [851](#)
- trunk group [388](#)
- trunk port [394](#), [400](#)
- TV pixelation [378](#)
- Two factor authentication screen [134](#)
- two-factor authentication
 - bypass [315](#), [765](#)
 - enable [29](#), [128](#)
- type
 - user account [320](#)

U

- U/TM Security Pack license [18](#)
- U-APSD [352](#), [484](#)
- U-APSD (Unscheduled automatic power save delivery) [478](#)
- UARFCN (UTRA Absolute Radio-Frequency Channel Number) [697](#), [698](#)
- UE (User Equipment) [699](#)
- Undo assign
 - action [720](#), [722](#), [723](#), [724](#)
- Unused
 - license state [724](#)
- Upgrading
 - firmware status [312](#), [762](#), [831](#)
- uplink AP [236](#)
- uplink Ethernet port [411](#)
- uplink port [194](#), [394](#), [400](#), [438](#)
- UPnP
 - conflict with ONVIF [425](#)
- user
 - remove [124](#)
- user account
 - add/edit [315](#)
 - bind [134](#)
 - create [766](#)
 - remove [764](#), [768](#)
 - type [763](#)
- User screen [313](#), [763](#), [766](#)
- USG FLEX device
 - license [19](#)
 - trial license [725](#)
- USG FLEX H device

- license [19](#)
- USG LITE 60AX
 - trial license [725](#)
- USG VPN device
 - license [19](#)
 - trial license [725](#)
- UTRA Absolute Radio-Frequency Channel Number [697](#), [698](#)

V

- virtual chassis [402](#)
- virtual machine (VM) [755](#)
- virtual private network [468](#), [542](#), [662](#)
- Virtual Private Network (VPN)
 - create automatically [744](#)
- VLAN attribute [314](#), [764](#)
- VLAN for IPTV [185](#)
- VLAN ID [72](#)
 - client [284](#)
- VLAN settings
 - guest [73](#)
- Voice over IP (VoIP) [563](#), [657](#)
- voice VLAN [439](#)
 - configure [182](#)
- voucher [294](#)
 - create [295](#)
 - status [295](#)
- voucher code
 - login [348](#), [482](#)
- Voucher Settings screen [297](#)
- voucher table
 - export [295](#)
- voucher-based WiFi access [294](#)
- Vouchers screen [294](#)
- VPN [468](#), [542](#), [662](#)
- VPN access [314](#), [764](#)
- VPN area [470](#), [545](#), [745](#)
- VPN client
 - setup [129](#)
- VPN client setting [473](#), [553](#)
- VPN client software
 - download [670](#)
- VPN configuration file [129](#)

- import steps [129](#)
- VPN connections screen [136](#), [442](#), [495](#), [629](#)
- VPN Orchestrator screen [745](#), [784](#)
- VPN rule
 - enable [127](#)
- VPN script [475](#)
- VPN setup
 - by user [129](#)
- VPN tunnel [630](#)
 - open steps [132](#)
- VPN Tunnel Interface (VTI) [668](#)
- VPN user
 - create [126](#)

W

- walled garden [343](#), [349](#), [483](#), [612](#), [614](#), [679](#)
- WAN interface configuration screen [449](#), [506](#)
- WAN load balancing
 - configure [537](#)
- WAN settings [204](#)
 - configure [204](#)
- WAN status screen [693](#)
- WAN Throughput
 - Dashboard [225](#)
- WAN usage
 - view [689](#)
- Warning
 - firmware status [312](#), [758](#), [762](#), [827](#), [828](#), [831](#)
- warranty [858](#)
 - note [858](#)
- web authentication [611](#), [675](#)
- Web Filtering signature [321](#)
- widget
 - rearrange [222](#)
- WiFi
 - guest [73](#)
- WiFi aid [286](#)
- WiFi Aid screen [285](#)
- WiFi frequency band [264](#), [269](#)
- WiFi mesh solution [330](#)
- WiFi network name
 - enter [72](#)
- WiFi password

enter [72](#)

WiFi security

- configure [478](#)

WiFi settings [72](#)

WiFi status

- mobile router [701](#)

wildcard domain name [349, 483](#)

WINS (Windows Internet Naming Service) server [643, 648](#)

wired clients [277](#)

wireless bridge

- use [332](#)

wireless channel bandwidth [360, 488](#)

Wireless client by band

- Dashboard [224](#)

Wireless Clients [277](#)

Wireless Clients Manufacturer

- Dashboard [224](#)

Wireless Health screen [333](#)

Wireless screen [613](#)

wizard

- bulk firmware upgrade [828](#)
- create new stacking [406](#)
- installation [716](#)

WLAN stations screen [701](#)

WLAN usage

- view [689](#)

world map [275](#)

WPA Enterprise [348, 482](#)

WPA2-PSK data encryption [613](#)

Z

Zero Touch Provision [203](#)

Zero Touch Provisioning [74](#)

Zone screen [597](#)

ZTP (Zero Touch Provision) [74, 203](#)

ZTP deployment method [207](#)

ZyWALL VPN device [33](#)

Zyxel

- account settings [46](#)

Zyxel Account [14, 16, 27, 34](#)

- email address [31, 95](#)

Zyxel Device [227](#)