

Use and Care Manual

Installation: Easily attach the plastic loops or hooks to the frame, hang the screen mesh on the frame, and secure it to the canopy legs with straps.

Usage: Enter and exit the gazebo through the double-sided zippers on the four sides. When zipping up, please operate slowly to avoid the zippers getting stuck or damaged.

Cleaning: Regularly use a soft-bristled brush or a vacuum cleaner to clean the dust and debris on the surface of the mosquito netting. Avoid using sharp tools that may damage the mesh.

Inspection: Regularly check whether the mosquito netting is damaged, whether the zippers slide smoothly, and whether the hooks and loops are secure. If there are small holes or damage on the mesh, you can use special repair tape to fix it. If the zippers are damaged, please replace them with new ones in a timely manner. If the hooks and loops are loose or damaged, reinforce or replace them promptly to ensure the normal use of the mosquito netting.

Storage: Store the folded mosquito netting in a dry and well-ventilated indoor environment, avoiding direct sunlight and humid conditions. You can use the original packaging or a breathable cloth bag for storage.