 
 


无线便携式扩音器  
使用手册

产品介绍

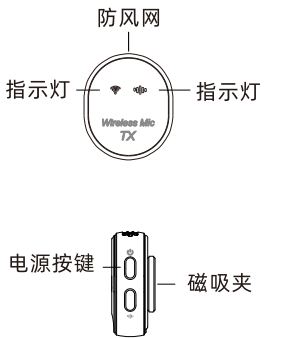

① 麦克风取出或电源按键短按1S即开机，指示灯红绿灯闪烁，自动连接后，绿灯常亮，即可使用

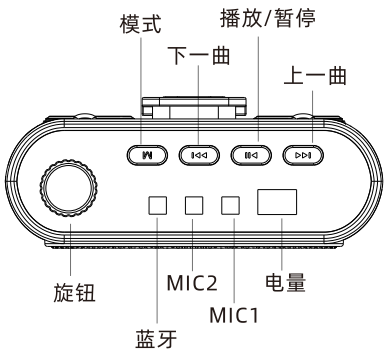

- ② 顺时针旋转旋钮即可开机，单击模式键，即可搜索蓝牙" J98 "并连接；
- ③ 蓝牙模式下，单击模式键，插入U盘，即可播放U盘内的歌曲（开机情况下，默认U盘模式）

UI功能

发射端

| 功能              | 操作            | 指示灯         | 备注     |
|-----------------|---------------|-------------|--------|
| 开机              | 短按1S按键        | 红绿灯闪烁       | 取出自动开机 |
| 关机              | 长按3秒按键        | 灯灭          |        |
| 配对成功            |               | 绿灯常亮        | 自动配对   |
| 静音              | 录音状态下单击按键     | 绿灯闪烁        |        |
| 退出静音            | 静音状态下单击按键     | 绿灯常亮        |        |
| 低电              |               | 红灯慢闪        |        |
| 充电              | 将麦克风置于扩音器充电槽位 | 充电红灯常亮，充满灭灯 |        |
| 在无连接状态下，3分钟自动关机 |               |             |        |

扩音器主体

| 功能      | 操作方式               | 指示灯状态              | 提示音   | 备注                              |
|---------|--------------------|--------------------|-------|---------------------------------|
| 开机      | 顺时针旋转旋钮            | 连接1, 连接2以及电量数显亮灯   | 开机    |                                 |
| 关机      | 逆时针旋转旋钮            | 灯灭                 |       |                                 |
| 连接一个发射器 | /                  | 连接1常亮，连接2灭灯        |       |                                 |
| 连接两个发射器 | /                  | 连接1, 连接2常亮         |       |                                 |
| 发射器未连接  | /                  | 连接1, 连接2闪烁         |       |                                 |
| 音量+     | 顺时针旋转旋钮            | /                  | /     |                                 |
| 音量-     | 逆时针旋转旋钮            | /                  | /     |                                 |
| 蓝牙模式    | 单击模式键              | 蓝牙灯闪烁              | 蓝牙模式  | 开机默认U盘模式                        |
| 蓝牙连接设备  | 搜索蓝牙"J98"并连接       | 蓝牙灯常亮              | 蓝牙已连接 |                                 |
| U盘模式    | 蓝牙模式下单击模式键         | 蓝牙灯灭               | U盘模式  | 开机默认U盘模式                        |
| U盘播放    | 将U盘插入USB口          | /                  | /     | 自动播放U盘内新音乐，支持MP3/WAV/FLAC/M4A格式 |
| 上一曲     | 单击上一曲按键            | /                  | /     | U盘或蓝牙模式下有效                      |
| 下一曲     | 单击下一曲按键            | /                  | /     | U盘或蓝牙模式下有效                      |
| 暂停/播放   | 单击暂停/播放键           | /                  | /     | U盘或蓝牙模式下有效                      |
| 单曲循环    | 双击暂停/播放按键，循环切换模式   | /                  | 单曲循环  | U盘播放下有效，带记忆                     |
| 循环模式    |                    | /                  | 循环模式  | U盘播放下有效，带记忆                     |
| 随机播放    |                    | /                  | 随机播放  | U盘播放下有效，带记忆                     |
| 开机充电    | 将适配器充电线插入Type-C充电口 | 电量数显最后一位跳动，充满100常亮 | /     |                                 |
| 关机充电    | 将适配器充电线插入Type-C充电口 | 电量数显最后一位跳动，充满100常亮 | /     | 拔出充电线6S后数显灭灯                    |

 
注意事项

- 1.清洁机器前请断开充电器，并且关机。
- 2.非专业人员请勿自行拆开设备，避免造成机器故障，并丧失保修权益。
- 3.请勿将设备放置在阳光直接照射的地方，以避免电子零件提早老化。
- 4.避免在灰尘飞扬或环境脏乱的场所使用（灰尘容易引起设备故障）
- 5.请勿将设备放置在过冷或过热的环境中，会导致设备无法正常运行。
- 6.建议使用设置环境温度勿超-10℃-40℃,相对湿度10%-95%
- 7.请勿将任何物品塞入设备内，以避免引起机件短路或电路损毁，请勿泼洒任何液体到本产品上。
- 8.避免本机与硬物摩擦撞击，以免造成表面刮花、脱落或其他硬件损坏。
- 9.产品不得暴露在诸如日照、火烤或类似过热环境中。
- 10.该说明书含重要信息,请给予保留。


Wireless portable  
Loudspeaker

User Manual

Product Introduction

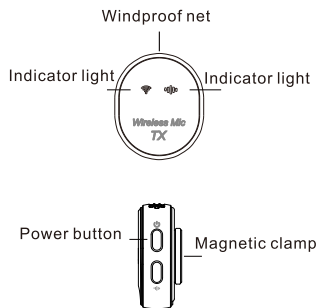

 ① Take out the microphone or press the power button briefly for 1 second to turn on the device. The indicator lights will flash red and green. After automatic connection, the green light will remain on, indicating that the device is ready for use

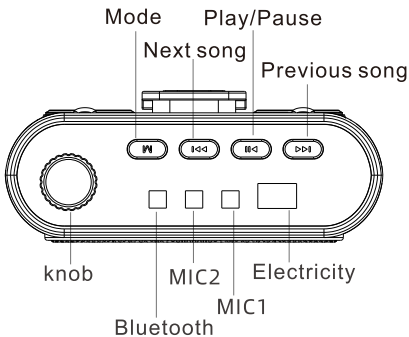

- ② Rotate the knob clockwise to turn on the device, click the mode button to search for Bluetooth "J98" and connect it
- ③ In Bluetooth mode, click the mode button and insert a USB flash drive to play the songs on the drive (default USB mode when turned on)

UI

Transmitter

| Function                                                | Operation                                           | LED                                                                     |
|---------------------------------------------------------|-----------------------------------------------------|-------------------------------------------------------------------------|
| Power on                                                | Short press the 1S button                           | Traffic lights flashing                                                 |
| Shut down                                               | Long press the 3S button                            | The light is off                                                        |
| Connected                                               |                                                     | Green light always on                                                   |
| Mute                                                    | Click the button while recording                    | Green light flashing                                                    |
| Exit mute                                               | Click the button in silent mode                     | Green light always on                                                   |
| Low electricity                                         |                                                     | Red slow flashing                                                       |
| Charge                                                  | Place the microphone in the amplifier charging slot | The charging red light is always on, and the fully charged light is off |
| Automatically shut down in 3 minutes without connection |                                                     |                                                                         |

Loudspeaker

| Function                | Operation                               | LED                                               | Prompt/ Notes                                           |
|-------------------------|-----------------------------------------|---------------------------------------------------|---------------------------------------------------------|
| Power on                | Rotate the knob clockwise               | Connect 1, connect 2, and the battery light is on | Power on                                                |
| Shut down               | Rotate the knob counterclockwise        | All lights off                                    |                                                         |
| Connect one             |                                         | Connection 1 is always on, connection 2 is off    |                                                         |
| Connect two             |                                         | Connection 1 and Connection 2 are always on       |                                                         |
| Not connected           |                                         | Connection 1, connection 2 flashing               |                                                         |
| Volume+                 | Rotate the knob clockwise               | /                                                 | /                                                       |
| Vlume-                  | Rotate the knob counterclockwise        | /                                                 | /                                                       |
| Bluetooth mode          | Click mode                              | Bluetooth light flashing                          | Bluetooth mode                                          |
| Bluetooth connectivity  | Search for Bluetooth J98 and connect it | Bluetooth light is always on                      | Bluetooth is already connected                          |
| USB mode                | Click the mode button in Bluetooth mode | Bluetooth light off                               | Default USB mode upon startup                           |
| USB playback            | Insert the USB flash drive into the USB | /                                                 | Supports MP3/WAV/FLAC/M4A formats mode                  |
| Previous song           | Click the next button                   | /                                                 | Valid in USB and Bluetooth                              |
| Next song               | Click on the previous song button       | /                                                 | Valid in USB and Bluetooth mode                         |
| Pause/Play              | Click the pause/play button             | /                                                 | Valid in USB and Bluetooth                              |
| Single tune circulation | Double click the pause/play button      | /                                                 | Single take loop                                        |
| Loop mode               |                                         | /                                                 | Loop mode                                               |
| Randomly play           |                                         | /                                                 | Random mode                                             |
| Power on charging       | Charging with TYPE-C                    | The light stays on after being fully charged      |                                                         |
| Shut down charge        | Charging with TYPE-C                    | The light stays on after being fully charged      | After disconnecting the charging, the 6S light goes out |

Note

1. Please disconnect the charger and turn off the machine before cleaning.
2. Non professionals are not allowed to disassemble the equipment on their own to avoid machine malfunctions and loss of warranty rights.
3. Do not place the device in direct sunlight to avoid premature aging of electronic components.
4. Avoid using in dusty or dirty environments (dust can easily cause equipment failure)
5. Do not place the device in an environment that is too cold or too hot, as it may cause the device to malfunction.
6. It is recommended to use the device in an environment with a temperature not exceeding -10 ° C-40 ° C and a relative humidity of 10% -95%
7. Do not insert any items into the device to avoid short circuits or circuit damage to the components. Do not spill any liquids onto this product.
8. Avoid friction and impact between the device and hard objects to prevent surface scratches, detachment, or other hardware damage.
9. The product must not be exposed to environments such as sunlight, fire, or similar overheating conditions.
10. The instruction manual contains important information, please keep it.