












Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first. Replacements for missing or damaged parts will be shipped ASAP!



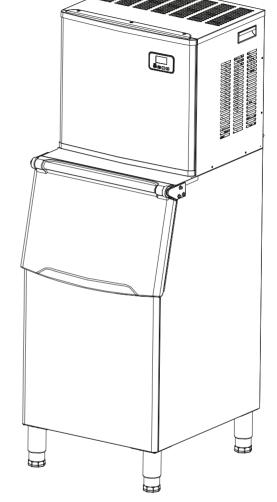

USER'S MANUAL

Automatic Ice Maker FP10036US

Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.







Before You Start

⚠ Please read all instructions carefully.

riangle Retain instructions for future reference.

riangle Separate and count all parts and hardware.

riangle Read through each step carefully and follow the proper order.

We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.

Always place the product on a flat, steady and stable surface.

Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	4
SPECIFICATIONS	6
DIMENSIONS	6
RATING	6
GENERAL INFORMATION	7
MAIN UNIT CONSTRUCTION	7
ICE-MAKING AND ITS WATER TANK PARTS	8
OPERATION PANEL	9
OPERATING PROCEDURE AND MAINTENANCE	10
UNPACKING YOUR ICE MAKER	10
MAIN MACHINE ASSEMBLY	10
INSTALLATION LOCATION REQUIREMENT	11
ELECTRICAL REQUIREMENT & CONNECTIONS	12
CLEANING YOUR ICE MAKER BEFORE FIRST USING	12
WATER CONNECTIONS FOR YOUR ICE-MAKER	13
OPERATING YOUR UNIT	15
OPERATION OF THE ICE MAKING PROCESS	15
AUTOMATIC SELF-CLEANING PROGRAM	17
WIRING DIAGRAM	18
NORMAL SOUNDS	19
PREPARING ICE MAKER FOR LONG STORAGE	19
CLEANING AND MAINTENANCE	20
EXTERIOR CLEANING	20
INTERIOR CLEANING	21
ICE MAKING PARTS CLEANING	21
ICE MAKING ASSEMBLY SYSTEM CLEANING BY USING NU-CALGON NICKLE SAFE	
ICE-MACHINE CLEANER	24
CLEANING SUGGESTION	
NORMAL TROUBLE SHOOTING	26
CORRECT DISPOSAL OF THIS PRODUCT	27

To ensure proper use of this appliance and your safety, please read the following instructions carefully before operating this appliance.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed to reduce the risk of fire, electric shock, and injury to persons or property. Read all instructions before using any appliance.

Use this appliance only for its intended purpose as described in this owner's manual.

This ice-maker must be properly installed in accordance with the installation instructions before it is used.

This unit must be positioned so that the plug is accessible. Do not run cord over carpeting or other heat insulators. Do not cover the cord. Keep cord away from traffic areas, and do not submerge in water. No other appliance should be plugged into the same outlet, and be sure that the plug is fully inserted into the receptacle.

We do not recommend the use of extension cord as it may overheat and cause a risk of fire. If you must use an extension cord, use 14AWG minimum size and rated no less than 1875 watts.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Disconnect the mains plug from the supply socket when not in use for a long term, where supply connection is via mains plug.

Remove power plug or disconnect from the mains before cleaning or servicing the appliance. **NOTE:** If for any reason this product requires service, we strongly recommend that a certified technician perform the service.

Never unplug the unit by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.

Do not use your unit outdoors. Keep the unit away from direct sunlight and make sure that there is at least 6 inches of space between the back of your unit and wall and keep the front free. Keep ventilation opening in the appliance enclosure or in the built-in structure, clear of obstruction.

Do not tip over the unit, which will cause abnormal noise and make the ice-cube size abnormal. And seriously, it may cause water leakage from the unit.

If the unit is brought in from outside in the winter season, give it a few hours to warm up to room temperature before plugging it in.

Do not use other liquid to make the ice-cube other than water.

Do not clean your ice maker with flammable fluids. The fumes can create a fire hazard or explosion.

- **-WARNING:** Do not damage the refrigerant circuit.
- **-WARNING:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- **-WARNING:** Children should be supervised to ensure that they do not play with the appliance.
- **-WARNING:** This appliance must be earthed. And use the 110-120V/60Hz earthed power supply.
- **-WARNING:**Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- **-WARNING:** This appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses and by clients in hotels, motels and other residential type environments; bed and breakfast type environments; catering and similar non-retail applications.



-DANGER – Risk Of Fire or Explosion. Flammable Refrigerant Used. Do Not Use Mechanical Devices To Defrost Ice Maker. Do Not Puncture Refrigerant Tubing.



- **DANGER** Risk Of Fire Or Explosion. Flammable Refrigerant Used. To Be Repaired Only By Trained Service Personnel. Do Not Puncture Refrigerant Tubing.
- **CAUTION** Risk Of Fire Or Explosion. Flammable Refrigerant Used. Consult Repair Manual/Owner's Guide Before Attempting To Install or Service This Product. All Safety Precautions Must be Followed.
- **CAUTION -** Risk Of Fire Or Explosion. Dispose Of Property In Accordance With Federal Or Local Regulations. Flammable Refrigerant Used.
- **-CAUTION** Risk Of Fire Or Explosion Due To Puncture Of Refrigerant Tubing; Follow Handling Instructions Carefully. Flammable Refrigerant Used. The ice maker should be installed in accordance with the safety standard for Refrigeration Systems, ASHRAE15. The ice maker shall not be installed in corridors or hallways of public buildings.

If the device is faulty, maintenance is required. Replace the same parts and have them repaired by factory authorized maintenance personnel to reduce the risk of deviation due to incorrect parts or incorrect maintenance.

IMPORTANT:


The wires in this mains lead are colored in accordance with the following code:

Green with or without yellow strip: Grounding

White: Neutral Black: Live

To avoid a hazard due to instability of the appliance, it must be placed at an even or flat surface.

SPECIFICATIONS

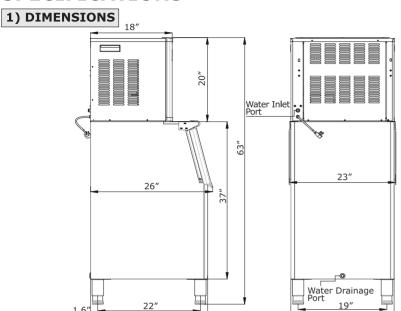


2) RATING

POWER SUPPLY VOLTAGE	1Phase, 110-120/60Hz	
MODEL	FP10036US	
CLIMATE CLASS	50°F -104°F (10 °C -40 °C)	
ELECTRICAL PROTECTION CLASS	I	
ICE MAKING RATING (Amps)	8.8Amp	
ICE MAKING CAPACITY (lbs/24H)	353 lbs (160 kg)/24Hour *	
REFRIGERANT CHARGE	R290 3.70z / 105g	
NET WEIGHT(lbs)	ICE MAKER 82 lbs ICE BIN 62 lbs	
VESICANT	C_5H_{10}	
UNIT DIMENSIONS(W X D X H)	26 x 23 x 63inch (668 x 580 x 1610mm)	
CONNECTION	POWER CORD16AWG	
	WATER SUPPLY9.52mm in diameter	
	DRAINΦ16 SYLPHON BELLOWSS(REAR)	
WATER CONSUMPTION(gallon/24H)	33 gallon (150 L)	
MAX ICE STORAGE CAPACITY	198 lbs (90 kg)	
ACCESSORIES	SHOVEL, INSTALLATION KITS, Adjustable feet	
RUNNING CONDITIONS	ROOM TEMP 50-110 Fahrenheit	
	WATER SUPPLY TEMP 41-95 Fahrenheit	
	WATER SUPPLY PRESSURE 0.04-0.6 MPa	

NOTE *: TESTED AT 70 Fahrenheit ROOM TEMPERATURE AND 50 Fahrenheit WATER TEMPERATURE.

GENERAL INFORMATION

1) Main Unit Construction

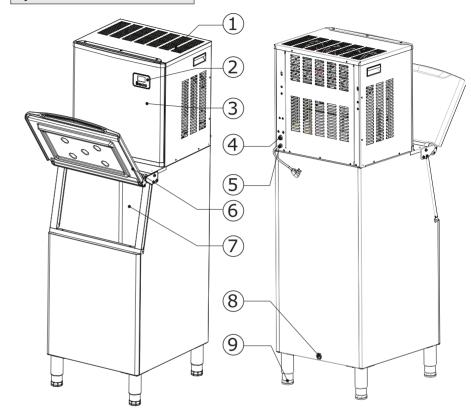


- 1. Vents on the top: Ensure smooth air flow. Hot air can be taken out when making ice
- 2. The operation part
- 3. The front panel
- 4. Outlet tube connection: water inlet
- 5. The power cord
- 6. Ice gate
- 7. Ice machine liner
- 8. Drain: Take out the white drain pipe from the package bag.
- 9. Adjustable feet

Accessory: 10 ft long and white color water drain pipe,
water quick connector of the water faucet,

¢9.52mm diameter and white color water supply pipe(16 ft long)
Adjustable feet.

2) Ice-making and its water tank parts

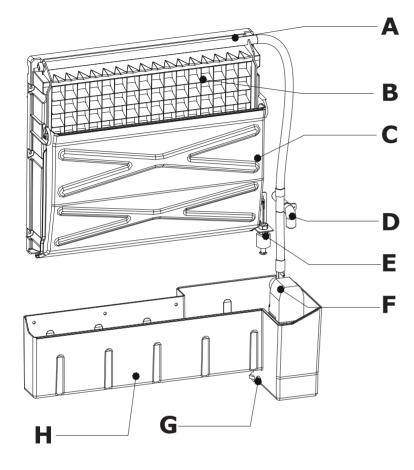

A.Water dividing pipe: With seventeen little holes, water will flow out from these little holes. And if no water flows out, it can be disassembled and cleaned

B.Evaporator (ice-making module)

C. Ice full detecting board: Used to detect whether the inner cabinet is full of ice or not, and to check whether the ice-harvest process is over or not

- D. Water supply part
- E. Water level detecting switch
- F. Water pump
- G. Water drainage cap
- H. Water tank

3) Operation panel

A. "TIMER CLEAN"button:

Quickly press this button once to enter the Timer setting program; And press this button for more than 5 seconds to enter the Cleaning program.

B. "ON/OFF"button:

When the unit is off, press this button to turn on the unit; And during the Self-cleaning program, or normal ice-making state, press this button to turn off the unit at once; And also if the unit is set with the Timer, press this button to cancel the Timer setting. When the unit is making the ice cube, press this button for more than 5 seconds, the unit will switch to ice harvest process by force.

When the machine automatically enters the cleaning status after it is turned on, press the "timed cleaning" button to stop the cleaning status and start ice making

A B C D E 1 2 3 4 1 2 3 4 1 2 3 4 1 2 3 4 1 2 3 4 1 2 3 4 1 2 3 4 1 2 3 5 5

C. LCD display window

- 1.Environmental temperature display and ice-making time countdown display. Display the reciprocal of ice making time in unit M, and display the ambient temperature in unit F.
- 2. Making ice and deice symbol display, the machine is making ice when the symbol rotates, and the machine is deicing when the symbol flashes.
- 3. Automatic self-cleaning symbol display
- 4. On/Off symbol display
- 5. Error code display. E1 means the temperature sensor is damaged.E2 means ice making anomaly or the refrigerant leakage.
- 6. Water flow in and water shortage display. The arrow flashing indicates that there is water in the machine; the whole symbol is bright to indicate that the machine is short of water.
- 7. Ice full alarm, the machine will make ice again when you take out the ice.
- 8. Setting display. Display timing switch machine with H unit; Display ice making time setting with M unit.

D&E. "-""+"button:

Used to adjust the duration of the ice-making process. The default value is zero. You can add or subtract one minute each time you press the "+" or "-" button. You can also adjust the delay time of the timer. The default value is zero. Press "+" or "-" every time to increase or decrease the delay time by one hour.

OPERATING PROCEDURES & MAINTENANCE


UNPACKING YOUR ICE MAKER

- 1.Remove the exterior and interior packaging. Check if all the accessories, including instruction manual, ice scoop, white water inlet pipe, L-type 3-way quick connection to 3-way plug-in, adjustable feet 4pcs, 4 ways to 3 ways water quick connector and the water draining pipe, etc., are inside or not. If any parts are missing, please contact our customer service.
- 2.Remove the tapes for fixing the door and inner cabinet, ice scoop, etc.. Roughly clean the inner cabinet & ice scoop with wet cloth.
- 3.Put the ice maker on a level & flat floor, without direct sunlight and other sources of heat (i.e.: stove, furnace, radiator). Make sure that there is at least 8 inch gap between the air outlet and the obstacles, and at least 2 inch between Left/Right side and the wall.
- 4.Allow 4 hours for the refrigerant fluid to settle before plugging the ice maker in if the unit maybe fall upside down during shipping or transportation.
- 5. The appliance must be positioned so that the plug is accessible.

WARNING: Connect to the potable water supplying only. Only use drinking water.

Main machine assembly

- 1. Screw the four adjustable feet of the attachment into the ice bin. (Notes: The feet should not be loose.)
- 2. Put the ice cabinet on the floor and the ice-maker on the ice bin. (Notes: No shaking after finishing the installation.)

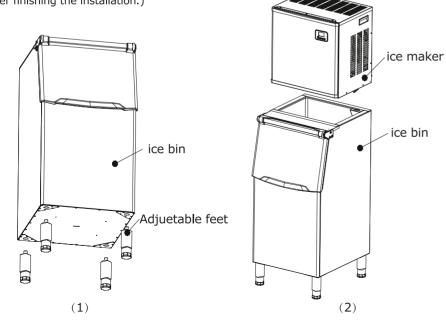


INSTALLATION LOCATION REQUIREMENT

- a) This unit is not for outdoor use. Keep the proper room temperature and inlet water temperature according to above specification table. Otherwise it will affect the ice making performance.
- b) This unit should not be located near any heat resource.
- c) The unit should be located on a firm & level foundation at normal counter top height.
- d) There must be at least 2 inch clearance at rear side for connection and 13 inch clearance in

front to open the door and keep good air circulation.

e) Do not put anything on the top of the ice maker.

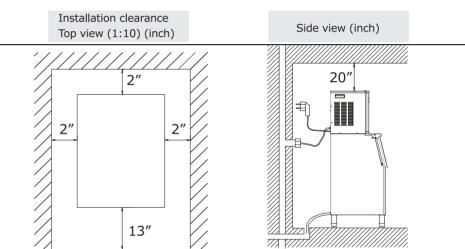

To ensure proper ventilation for your ice maker, the top of the unit must be completely unobstructed (at least 20 inch free space). Allow at least 2 inch clearance at rear, and 2 inch at sides for proper air circulation. The installation should allow the ice maker to be pulled forward for servicing if necessary.

When installing the ice maker, follow the recommended spacing dimensions shown above. Place electrical and water supplies and drain fixtures in the recommended locations as shown.

Choose a well-ventilated area with temperatures above 50 Fahrenheit and below 90 Fahrenheit. This unit MUST be installed in an area protected from the elements, such as wind, rain, water spray or drips.

The ice maker requires a continuous water supply with pressure 1-8 Bar as required in above specification table. The temperature of the water feeding into the ice maker should be between 41Fahrenheit and 77Fahrenheit for proper operation.

ELECTRICAL REQUIREMENT & CONNECTIONS

WARNING: THIS UNIT MUST BE EARTHED.

Electrical Shock Hazard

Plug into a grounding wall outlet.

Never remove the ground prong.

Use separate power supply or receptacle.

Never use an adapter.

Never use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

Before you move your ice maker into its final location, it is important to make sure you have the proper electrical connection.

It is recommended that a separate circuit, serving only your ice maker, be provided. Use receptacles that cannot be turned off by a switch or pull chain. If the supply cord or plug to be replaced, it should be done by a qualified service engineer.

This appliance requires a standard 110-120Volt, 60Hz electrical outlet with good grounding means.

Recommended grounding method

For your personal safety, this appliance must be properly grounded. This appliance is equipped with a power supply cord having a grounding plug. To minimize possible shock hazard, the cord must be plugged into a mating grounding-type wall receptacle, grounded in accordance with the National Electrical Code and local codes and ordinances. If a mating wall receptacle is not available, it is the personal responsibility of the customer to have a properly grounding wall receptacle installed by a qualified electrician.

CLEANING YOUR ICE MAKER BEFORE FIRST USING

Before using your ice maker, it is strongly recommended to clean it thoroughly.

- 1. Open the ice getting door.
- 2.Clean with diluted detergent, warm water and a soft cloth.
- 3.Do repeatedly cleaning of the inner tank of the ice bin until the inner tank is clean. And suggest that you should discard the ice-cube made by the first ice making cycle after cleaning.
- 4.The outside of the ice maker should be cleaned regularly with a mild detergent solution and warm water.
- 5. Dry the interior and exterior with a clean soft cloth.


WATER CONNECTIONS FOR YOUR ICE MAKER

Important: Be sure to use the new hose-sets supplied with the appliance to connect to water mains and that old hose-sets should not be reused.

1. Connect the water supplying hose to the unit


Step 1: First remove the tape on the water inlet port for water supply (indicated in the following illustration "A") located at unit back, then use your other hand's finger to press the outer circle.

Step 2: Insert the one end of the white water hose into the water inlet port, and push inward completely, and install back the clipper, then water hose connection is completed.

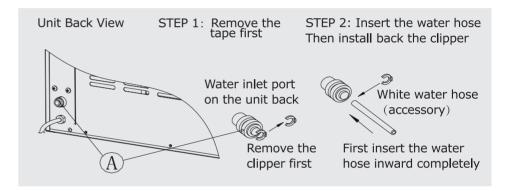


2. Connecting the water drain pipe


Screw the white drain pipe assembly in the attachment into the drain of the ice bin, and connect the other end of the white drain pipe assembly to the sewer pipe.

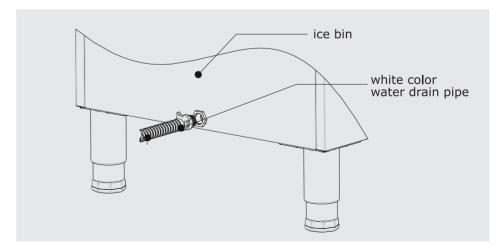

3. The ice maker is connected to the drain of the ice bin

When the host is placed on the cabinet, the drain (position A shown below) of the host needs to be connected with the hole of the drain baffle on the cabinet (position B shown below).

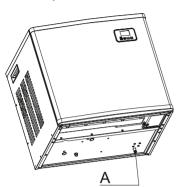


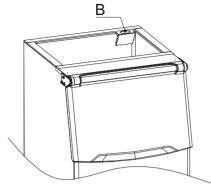

4. Connect the water hose to the water faucet of the water main supply system


First, install the supplied water quick-connector to the water faucet by screw thread; Second, remove the clipper from the water quick-connector, insert another end of the water hose into this quick-connector port completely, then install back the clipper, also this step is completed. Note: The water faucet should be supplied by the customer himself.

Important: The water pressure of main water supply system must be 0.04-0.6 MPa at least.

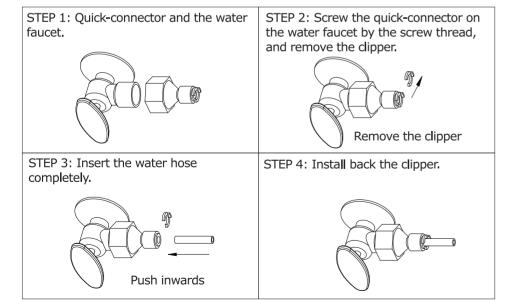

OPERATING YOUR UNIT

Operation button and display area diagram

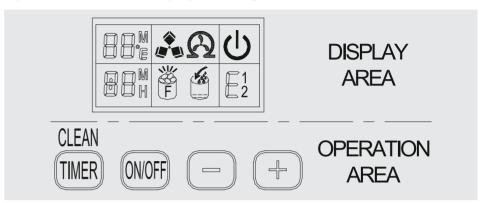

Operation of the ice-making process

1.Turn on the ice machine: Plug the power the symbol of power b will flash, press "ON"/"OFF", the outer tube can input the water from water tank through magnetic valve. The machine will start self-cleaning when the water is enough. The symbol a will revolve on the LCD. It will drain the water after 50s cleaning, add water after 50s draining, and clean again after enough water. Press "Timing/Cleaning", it will be canceled if during the cleaning.

After cleaning and then start to make ice, the symbol will be in the LCD and symbol rotates; The ambient temperature will be displayed in the upper left of the display window, "80°F" means the ambient temperature is 80°F. Several minutes later, the flashing numbers will be displayed in the ambient temperature display area, the flashing number "10M" means it still needs 10 minutes to finish this ice making cycle.

2.When every ice making cycle is finished,enter deicing process,the symbol flashes, the external pipe can add water to the water tank through the electromagnetic valve,and the arrow on the symbol will flash until the water reach the standard level,then the symbol extinguishes, the unit enters the next ice making cycle; When the water can not reach the standard level,the symbol is always bright,the unit stops working. After water shortage,the unit needs to be restarted,otherwise it will start up automatically after 15 minutes.

Note: Each ice making cycle is around 11-20 minutes, the ice making time will be changed according to the changes of ambient temperature and the water temperature. Especially the first ice making cycle, the ice making cycle will be longer because of the high water temperature in the water tank, .But the ice making cycle will not be over 35minutes.

3.Adjust the ice thickness; Press the "+""-"button on the control panel to adjust the ice thickness; The number in the bottom left of the display window is the setting of the ice making time, default is "0",press"+"button one time the ice making time will add one minute, the ice will be thicker; Press"-"button one time the ice making time will reduce one minute, the ice will be thinner.Restart the machine it will go back to default"0". Note:The time currently set only changes the next and subsequent ice making cycle.

4. When the symbol lights up, the machine stops working, it will work again after you take out the ice.

5.Shut down the unit: When the unit is making ice, press the "ON/OFF" button on the control panel, the unit shuts down and be into standby mode. If you press "ON/OFF" longer than 5S during ice making, then the unit enters the deicing process directly, this function can help remove the ice on the ice plate. Press "ON/OFF" to shut down the machine.

6.Timing setting: Setting range: 1-24 hours

Time shutdown: When the unit is running, it can set up the timing shutdown.

Time on: When the unit is on standby, you can set the unit with ON-TIMER.

How to set up the timing

Press the TIMER button, the default timing time is"1H"in display window, then press"+"button to adjust the timing time you need, every time you press the"+"button, the time adds 1 hour; Press"-"button can reduce the timing time. During the process of time adjustment, The "H" in the lower corner of the number will flash, then after 5 seconds flashing without pressing, the "H" letter will change from flashing to always displaying, which means the timer program has been completed.

In standby condition display 5H,it means the unit will start automatically after 5 hours;In ice making condition display 5H,it means the machine will shut down automatically after 5 hours, the "H" in the display screen indicates that the machine currently has timing function, and the number in front will be smaller and smaller. Until it becomes zero, the timing ends, and the machine enters the mode you need.

How to cancel timing

When the unit has a timing (the display window will display XX H). Press"TIMER" button, the timing is canceled after the number on the screen and "H" are extinguished.

When the unit has a timing, the display area in the lower left corner will display the timing time and the ice making setting time, and the display content will be switched every 5S.

Automatic self-cleaning program

Turn on the ice machine: Plug the power the symbol of power will flash, press "ON"/"OFF", the outer tube can input the water from water tank through magnetic valve. The machine will start self-cleaning when the water is enough. The symbol will revolve on the LCD. It will drain the water after 50s cleaning, add water after 50s draining, and clean again after enough water.

When the machine works for the first time or the machine is shut down for more than 24 hours, it will enter the automatic cleaning program after starting up, or after ice making for more than 20 times, it will enter the automatic cleaning program.

Press "Timing/Cleaning", it will be canceled if during the cleaning.

WIRING DIAGRAM ELECTRICAL DIAGRAM 0 0 . C 0 Power Supply 0 0 О ٹھ 0 COMPRESSOR FAN. ••• • JSF 0 DC Water Inlet Valve WATER LEVEL Solenoid Vale T-WATER T-ROOM DC drain valve SENSOR FOR ICE FULL DETECTING AC Water Pump SWITCH ਰੂੰ Note: Some equipment does not have the part inside the dotted line

Normal Sounds

Your new ice maker may make sounds that are not familiar to you. Most of the new sounds are normal. Hard surfaces like the floor, walls and cabinets can make the sounds seem louder than they actually are. The following describes the kinds of sounds that might be new to you and what may be making them.

- * You will hear a swooshing sound when the water valve opens to fill the water tank for each cycle.
- * Rattling noises may come from the flow of the refrigerant or the water line. Items stored on top of the ice maker can also make noises.
- * The high-efficiency compressor may make a pulsating or high-pitched sound.
- * Water running from the water tank to the evaporator plate may make a splashing sound.
- * Water running from the evaporator to the water tank may make a splashing sound.
- * As each cycle ends, you may hear a gurgling sound due to the refrigerant flowing in your ice-maker.
- * You may hear air being forced over the condenser by the condenser fan. During the harvest cycle, you may hear the sound of ice cubes falling into the ice storage bin.
- * When you first start the ice maker, you may hear water running continuously. The ice maker is programmed to run a rinse cycle before it begins to make ice.

Preparing Ice Maker for Long Storage

If the ice maker will not be used for a long time, or is to be moved to another place, it will be necessary to drain out all of the water in the system.

- 1. Allow all of the ice cubes to be ejected from the evaporator of ice maker.
- 2. Turn off the unit, and unplug the power cord.
- 3. Shut off the water supply at the main water supply.
- 4. Disconnect the water supply hose from the water inlet valve.
- 5.Pull out the Water drainage cap of the water tank indicating "G" in above illustration to drain out the water in the water tank. When all of the water have been drained out, to reinstall back the Water drainage cap of the water tank.
- 6. Then drain out all of the water from the water drain port located at unit back indicating "8" in above illustration.
- 7. Disconnect the water drain pipe to the main drain pipeline or floor drain.
- 8. Drop the door open to allow for circulation and prevent mold and mildew.
- 9.Leave water supply hose and power cord disconnected until ready to reuse.
- 10.Dry the interior & wipe the outside of the unit.
- 11. Put a plastic bag on the unit to resist out dust & dirt.

CLEANING & MAINTENANCE

WARNING: Before carrying out any cleaning or maintenance operations, unplug the ice maker from the main power supply electricity. (EXCEPTION: Ice maker self-cleaning program). Do not use any alcohol or fume for cleaning/sanitization of the ice maker. It may cause cracks on the plastic parts.

Ask a trained service person to check and clean the condenser at least once a year, in order to let the unit work properly.

This appliance must be cleaned by use of a water jet.

CAUTION

If the ice maker has been left unused for a long time, before the next use it must be thoroughly cleaned. Follow carefully any instructions provided for cleaning or use of sanitizing solution. Do not leave any solution inside the ice maker after cleaning.

Periodic cleaning and proper maintenance will ensure efficiency, top performance, hygienic, and long life. The maintenance intervals listed are based on normal conditions. You may want to shorten the intervals if you have pets, or the unit is used outdoors, or there are other special considerations.

What shouldn't be done

Never keep anything in the ice storage bin that is not ice: objects like wine and beer bottles are unsanitary, and also its labels may slip off and obstruct the drain pipe.

Exterior Cleaning

The door and cabinet may be cleaned with a mild detergent and warm water solution such as 28g/ 0.9 ounce of dish washing liquid mixed with 7.5L/ 1.6 gallon of warm water. Do not use solvent-based or abrasive cleaners. Use a soft sponge and rinse with clean water. Wipe with a soft clean towel to prevent water spotting.

Stainless steel models can discolor when exposed to chlorine gas and should be cleaned. Clean stainless steel models with a mild detergent and warm water solution and a damp cloth. Never use abrasive cleaning agents.

NOTICE: Stainless steel models exposed to chlorine gas and moisture, such as in areas with spas or swimming pools, may have some discoloration of stainless steel. Discoloration from chlorine gas is normal.

Interior Cleaning

For Ice Storage Bin

The ice storage bin should be sanitized occasionally. Clean the bin before the ice maker is used for the first time and reused after stopping for an extended period of time. It is usually convenient to sanitize the bin after the ice making system has been cleaned, and the storage bin is empty.

- 1. Disconnect power to the unit.
- 2. Open the door and with a clean cloth, wipe down the interior with a sanitizing solution made of 28g/ 0.9 ounce of household bleach or chlorine and 7.5L/ 1.6 gallon of hot water(95° F to 115° F).
- 3. Rinse thoroughly with clear water. The waste water will be drained out through the drain pipe.
- 4. Reconnect power to the unit.

The ice scoop should be washed regularly. Wash it just like any other food container.


MARNING


DO NOT use solvent cleaning agents or abrasives on the interior. These cleaners may transmit odour to the ice cubes, damage or discolor the interior.

Ice Making Parts Cleaning

During the using, periodically to clean these main system of your ice-maker.

- 1. Repeat above step to clean the water tank and other inner parts of the unit.
- 2. Especially for the water dividing pipe on the evaporator. When the compressor and the water pump run normally, but if there is no water flowing out from the water dividing pipe or the water flowing is very small, please discharge this water dividing pipe to clean it carefully. Clean each little hole on the water dividing pipe displayed in the following illustration. Make sure that each hole is not clogged by something, then install back to the original location (Power off before cleaning, and then remove the front panel).

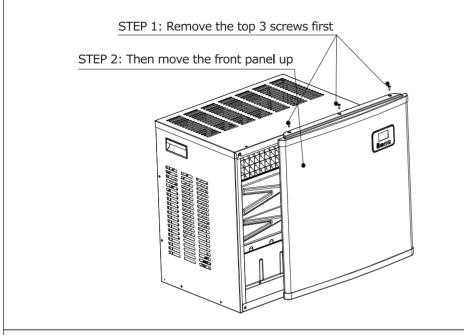


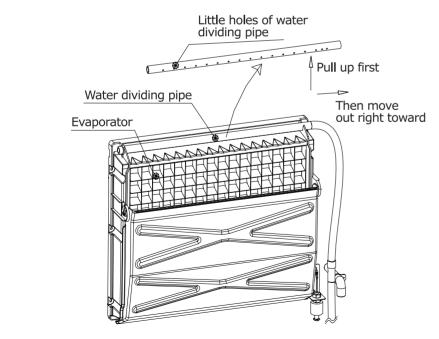

3. When there are ice cubes on the surface of the evaporator, but they can't fall down easily, do not use the mechanical substance to remove the ice cubes by force; Only press the "ON/OFF" button for more than 5 seconds, the unit will enter the ice melting process, after a while, the big ice cubes will fall down, then turn off the unit and unplug the power cord to clean the surface of the evaporator.

4. For the water tank and ice-full detecting plate

Also the water tank and the ice-full detecting plate is very important to keep your ice cube hygienic. Put mixture of neutral cleaner & water into a clean water jet, then spray to all the inner surface of tank & the ice detecting plate. Wipe these surfaces as far as possible with a clean cloth. And then, spray the surfaces with clean water, wipe it with a dry clean cloth. Then drain out the cleaned water in the water tank by pulling out the Water drainage cap of the water tank indicating "G" in above illustration. When all of the cleaned water have been drained out, reinstall back the Water drainage cap of the water tank.

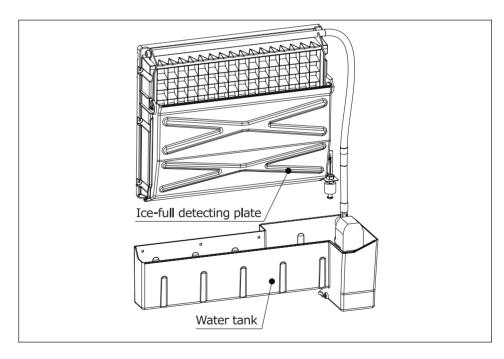

Suggestion: After cleaning the interior parts and install back to its respective position, and machine returns to work, discard first batch of ice.

Ice Making Assembly System Cleaning by Using Nu-Calgon Nickle Safe Ice-machine Cleaner

* Minerals that are removed from water during the freezing cycle will eventually form a hard scaly deposit in the water system. Cleaning the system regularly helps remove the mineral scale buildup. How often you need to clean the system depends upon how hard your water is. With hard water of 0.87 to 1 gallon (4 to 5 liter), you may need to clean the system as often as every 6 months.

- 1.Turn off the ice maker. Keep the ice maker connected to the water supply and drainpipe.
- 2.Open the door and scoop out all of the ice cubes. Either discard them or save them in an ice chest or cooler.
- 3. Remove the front panel of the ice maker
- 4. Making the cleaning solution. Please mix the Nu-Calgon Nickle Safe Ice Machine Cleaner with water to make the cleaning solution.


MARNING

Wear rubber gloves and safety goggles (and/or face shield) when handing Ice Machine Cleaner or sanitizer.

5.Use a plastic or stainless container with more than 1 gallon (5 liter) capacity, mix 14oz

(400ml) Nu-Calgon Nickle Safe Ice-machine Cleaner with 0.83 gallon (3.8 liters) warm water about 120°F-140°F, Then divide them for 2 shares equally in 2 cups. It is better to keep the temperature of each cup of the cleaning solution.

6.Check to be sure that the Water drainage cap of the water tank has been installed properly in the slot of the tank wall. Then Pour one cup of Nickel-Safe Ice Maker Cleaning Solution into the water tank.

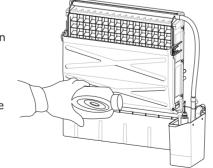

7.Turn on the power to the ice maker, then press "TIMER CLEAN" button on control panel for more than 5 seconds, to enter the self-Cleaning program. The machine will start self-cleaning when the water is enough, The symbol will revolve on The LCD , display The "90" countdown time. Stop working after 90 minutes.

Press"TIMER CLEAN", it will be canceled if during the cleaning.

8.After a self-cleaning procedure is completed, pull out the Water drainage cap of the water tank, and drain the cleaning solution down to the lower ice storage bin. Drain out all of the cleaning solution completely. Then install back the Water drainage cap to the slot of the water tank.

9. Repeat steps 6--8 to clean the ice making assembly system again.

MARNING

The ice machine cleaner contains acids.

DO NOT use or mix with any other solvent-based cleaner products.

Use rubber gloves to protect hands. Carefully read the material safety instructions on the container of the ice machine cleaner.

DISCARD the first batch of ice after cleaning.

10. Then open the water faucet of the main water supply. Let the water flow in the unit. Again press the "TIMER CLEAN" button on control panel for more than 5 seconds, to enter the self-Cleaning program. The machine will start self-cleaning after the water is enough, The symbol will revolve on the LCD, display The "90" countdown time. Stop working after 90 minutes. Press "TIMER CLEAN", it will be canceled if during the cleaning

Through this process, it will rinse the water dividing pipe, evaporator, water pump, silicone pipe, and water tank, etc.

- 11. After one self-cleaning program is completed, then pull out the Water drainage cap of the water tank, drain the cleaning solution down to the lower ice storage bin, slightly drain out all of the water completely. Then install back the Water drainage cap to the water tank slot tightly.
- 12.Repeat steps 10-11 again for 2 times.
- 13. Follow the above program to clean the ice storage bin .
- 14. After this special cleaning program finishes, you can return to the regular ice making mode. And suggest to discard the first batch of ice cube.

Cleaning Suggestion

1) DAILY CLEANING

The ice shovel, door and water dividing pipe should be cleaned by yourself per day. At the end of every day, rinse the ice shovel and wipe the both sides of the door with a clean cloth.

2) SEMI-MONTHLY CLEANING

The ice shovel, ice bin, water tank, the ice-full detecting plate and the surface of the evaporator are to be cleaned by yourself semi-monthly according to interior cleaning program.

3) SEMI-ANNUAL CLEANING

All the components & surfaces exposed to water or ice cubes, like ice storage bin, water tank, door, evaporator, water pump, silicone tube, water dividing pipe, etc. should be cleaned by Using Nu-Calgon Nickle Safe Ice-machine Cleaner every 6 months. They should be cleaned by the serviceman according to ice making assembly system cleaning program.

NORMAL TROUBLE SHOOTING

Problem	Possible Cause	Solution
The whole "" symbol is always on.	No water supply	Check the main water supply pressure or check the water supply hose is blocked or not, adding the water pressure or cleaning the hose if necessary.
	Floating ball of the water level detecting switch is blocked, can't be raised up.	Clean the water tank and the water level detecting switch.
	Water flows out from the water tank.	Place the unit on the level position, not on the slope.
	Water flows out from the water drainage cap of the water tank.	Pull out the Water drainage cap and install back to the slot of the water tank properly.
The unit starts to enter the ice making process, but no water flow in the unit, and the whole " symbol is on.	Water supplying hose breakdown, or water flows in very slowly.	Check the main water supply pressure or check the water supply hose is blocked or not, adding the water pressure or cleaning the hose if necessary.
Water pump is working, but no water flow out from the water dividing pipe	The little holes on the water dividing pipe is blocked.	Clean these little holes.

The transparency of the ice cube is not very good	Water quality is bad	Change the water supply, or use the water filter to soften or filter the water.
Ice cube shape is	Water quality is not good or the water tank is very dirty	Clean the water tank, and change with new water.
irregular	The little holes on the water dividing pipe is some blocked	Clean the water dividing pipe, make sure all nine holes are unclogged.
Ice cube is very thin	Ambient temperature is too high	Move the unit to low temperature space, or lengthen the time of each ice making cycle.
	Air circulation around the unit is not good	Make sure there is more than 8 inch/20 cm space between the unit back & front and the obstacle.
Ice cube is too thick	Ambient temperature is too low	Reduce the time of each ice making cycle.
" indicator is on	The ice storage bin is full of the ice cube.	Take out some ice cube.
Ice making cycle is normal, but there is no ice cube produced	The temperature of Ambient, or water in water tank is too high	Move to the place with temperature lower than 90 Fahrenheit and change to the low temperature water.
	Refrigerant leakage	Need the technical serviceman to maintain.
	Cooling system tube is clogged	Need the technical service person to maintain.

ERROR INDICATOR

- a) Temp sensor breakdown----- Display E1 in digital window.
- b) The machine not make ice or the gas leak ---- Display E2 in digital window.
- c) Magnetic control switch cutoff----" | " light will be on when plugging on or just turning on the unit. And it will delete the breakdown display if this switch is electric shorted.
- d) During the ice making process, press the "ON/OFF" button for more than 5 seconds, the unit starts to enter the ice harvest program. And after the ice harvest program, it continues to enter the ice making process.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.