



Original	Replacement	Original	Replacement
	Power		Power
	Eject		Eject
	HDD		Media
	DVD		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Audio		Dual
	Clear		Exit
	Prog+		Ch +
	Prog-		Ch -
	Input		AV
	TV/DVD		TV/R
	Subtitle		Subt
	Angle		Format
	Text		Text
	Menu		Menu
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	System Menu		D. Menu
	Title List/ Top Menu		Shift + Menu
	Guide		Guide
	Timer		Sleep
	Info		Info
	Up		Up





Original	Replacement
	Left
	Enter
	Right
	Down
	Exit / Return
	Display
	I<< / Page -
	← •
	• →
	>>I / Page +
	<</Day-
	Play
	>>/Day+
	Tv Pause
	Pause
	Stop
	Rec

Original	Replacement
	Rec Stop
	HUB HDD/DVD
	Rec mode
	Zoom
	Play Mode
	Vol+ TV
	Vol- TV
	Prog+ TV
	Prog- TV
	Power TV
	Source TV

