


INSTALLATION INSTRUCTIONS

INSTALLATION MANUAL

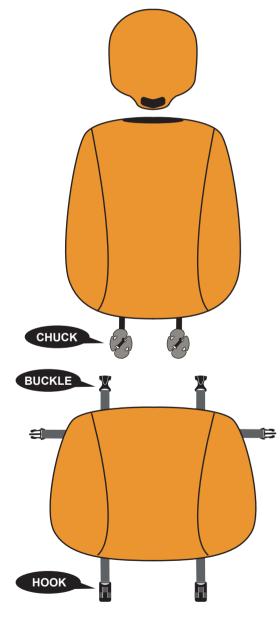

PRODUCT PORTFOLIO

armrest(s). Push the CHUCK though the seat gap;

1. Slide the seat cover


over the front seat; For

side airbag stitching


part, pull with caution.

Unzipper the side for

FRONT SEAT COVER

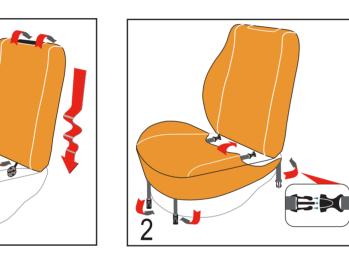


2. Slide the bottom cover over the bottom seat: Connect the Buckles together to fix the cover. Insert the HOOKS into hole or iron wire underneath.

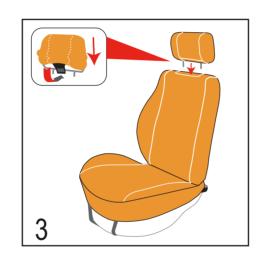

3. Slide headrest cover and secure it to hold the right position.

INSTALLATION MANUAL


FOR FULL SET PRODUCT OPTION

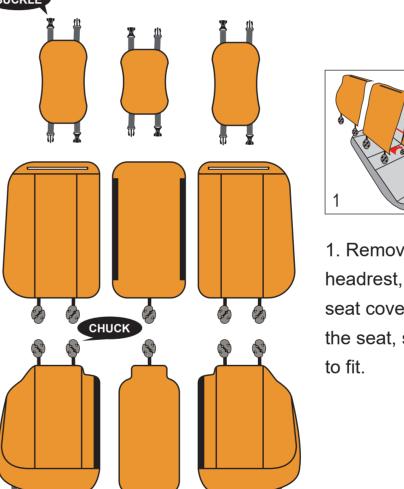


PRODUCT PORTFOLIO



BACK COVER

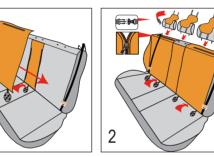

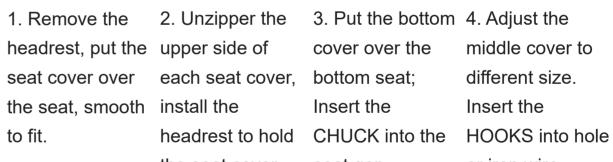

the seat cover. Adjust the middle cover to different CHUCK into the seat gap.



3. Put the bottom 4. Adjust the cover over the bottom seat: Insert the seat gap.



middle cover to different size. Insert the or iron wire

underneath.

