

1. On/Off

① Unplug the charger to automatically turn on, or in the off state, press and hold the left and right temples at the same time for 4 seconds to turn on the touch area, the prompt sound "Power on" and prompt "Pairing".

② Plug in the charger to automatically shut down, or in the power-on state, press and hold the left or right temple touch area for 4 seconds to shut down, and the prompt sound "Power off"

2. Bluetooth pairing connection

The glasses are turned on, the left and right temples are automatically paired, the red and blue lights flash alternately, the pairing is completed, the lights are off, and the prompt sound "duludu".

Turn on the Bluetooth of the device to be connected (such as a mobile phone, MP3 player, computer, etc.), you can search

Go to the device name: eyewear, click connect, and the bluetooth pairing window will pop up automatically, click: pair, the bluetooth connection is successful, and the prompt sound "ding ding ding".

① If there is no pairing record, it will automatically enter the pairing state; if there is a pairing record, it will automatically reconnect to the last used mobile phone when it is turned on;

② When connecting back to the mobile phone, after the connection is successful, the prompt sound "ding ding ding"; when the connection with the mobile phone is disconnected, the prompt sound "dong ding".

hint

① Please read the manual carefully before using this product, and keep this manual. ② When using it for the first time, please fully charge the product first.

③ If the product is not charged for a long time (more than two weeks), please charge it before use.

④ Do not wipe the dirty lenses directly. Wet the lenses first, and then dry them with a glasses cloth. as much as possible

Use a suede-faced and highly absorbent glasses cloth to gently wipe clean, being careful not to apply too much force.

When wiping, the glasses cloth should be wiped in the same direction, not back and forth, nor in Wipe around the lens.

⑤ When the battery temperature exceeds -10°C to 50°C , the product will stop working.

Precautions

① Do not dismantle or repair or modify this product for any reason, otherwise it may cause fire, electronic breakdown or even complete damage to the product.

② Do not place the device in an environment where the temperature is too low or too high (below -10°C or above 50°C).

③ Do not wet the product in contact with liquid, or immerse it in liquid.

④ Do not expose the glasses to the sun for a long time, otherwise they will be easily deformed, aged and broken.

⑤ Do not place the magnetic end of the charging cable close to metal objects to prevent the danger of short circuit caused by magnetically attracting metal objects.

3. Play music

① Music play/pause, double-click the touch area of the right temple. ② For the next song, double-click the touch area of the left temple.

4. Voice Assistant

Triple-tap the touch button on the left temple to activate voice assistants, such as Siri, Xiaoyi, Xiaoai, etc.

5. Make a phone call

① Answer the call, double-click any temple touch area.

② Hang up the phone and double-click any temple touch area.

6. Charge

① Low power alarm, prompt "Battery LOW" every 5 minutes; ② Low power shutdown, prompt "Power off";

③ When charging, the indicator light is always on red; when charging is completed, the red and blue lights flash alternately for 10 seconds and then go out.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

FCC ID: 2A43V-VR3001-01