

## Operating Instructions – Dishwasher Neff SL15J1F



### Control Panel


- 1 – Main Switch
- 2 – Door Handle
- 3 – Programme END indicator
- 4 – Low salt indicator
- 5 – Low rinse aid indicator
- 6 – Programme buttons

### Appliance Interior

- 20 – Top basket
- 21 – Additional cutlery basket
- 22 – Top spray arm
- 23 – Additional cup rack
- 24 – Bottom spray arm
- 25 – Float
- 26 – Bottom basket
- 27 – Dispenser for salt with refill indicator
- 28 – Filters
- 29 – Cutlery basket
- 30 – Dispenser for rinse aid with refill indicator
- 31 – Detergent dispenser

- Your dishwasher will be prepared with rinse aid and dishwasher salt

## Programme overview

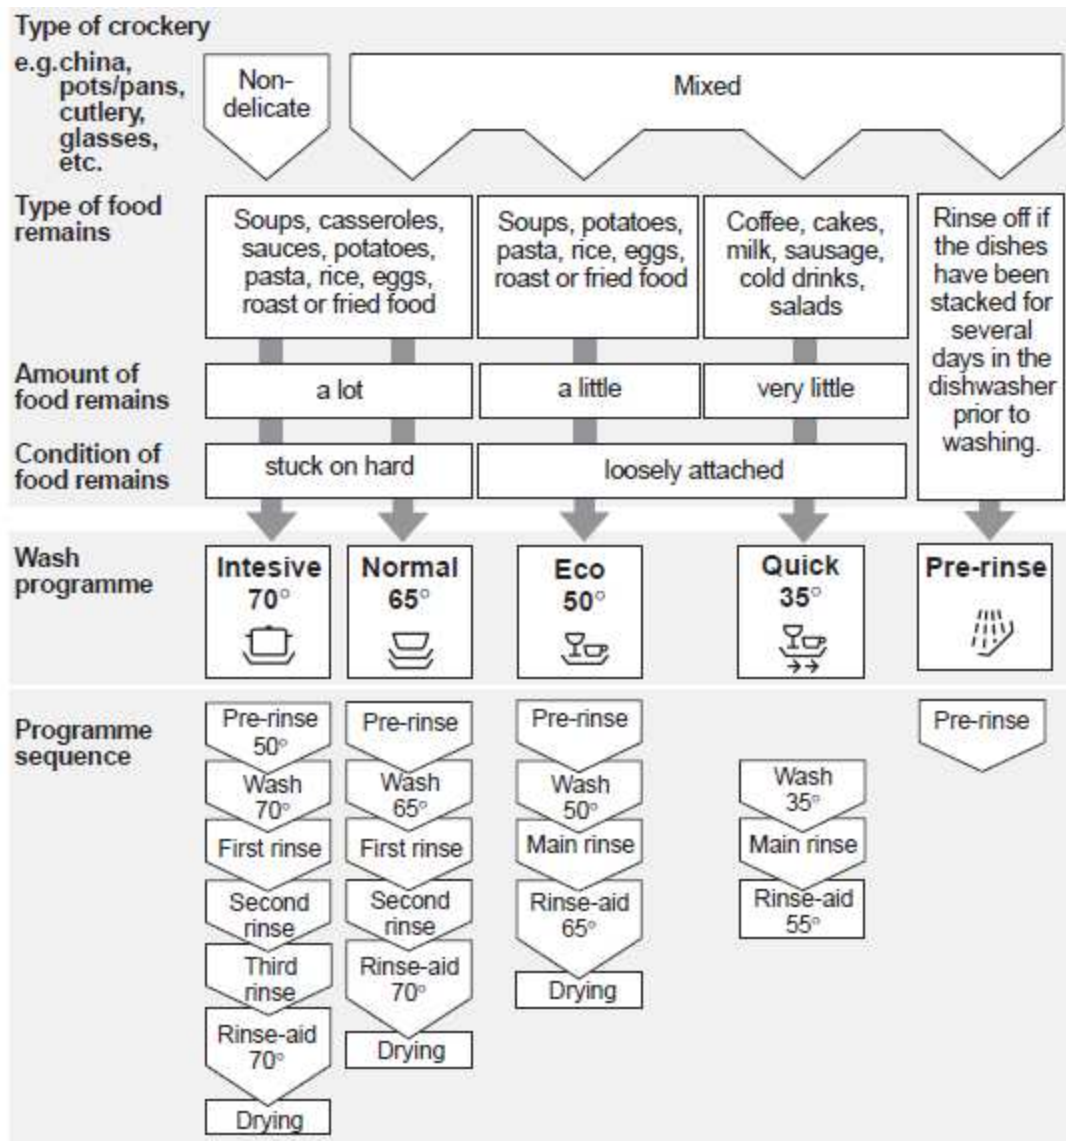

## Switching on the appliance

- Switch on the main switch **1**. The selection of the most recently selected programme will light up. This programme will be performed unless another programme button **6** is pressed
- Close the door & the programme will start automatically

## End of programme

- The programme has come to an end when the PROGRAMME END indicator **3** and the indicator for the selected programme are both lit up.
- The end of the programme is also indicated by a buzzer

### Switching the dishwasher off

Several minutes after the programme has ended:

- Open the door when the programme has ended
- Set the main switch **1** to OFF
- Remove dishes etc when they have cooled down

### Programme interruption

- Carefully open the door, and only open completely when the spray arm is no longer turning. If the programme is already in 'drying' mode, a noise will signal to remind you to close the appliance door or to abort the programme
- Switch OFF the main switch **1**
- Indicator light will go out and the programme will remain stored
- In order to continue with the programme, switch the main switch ON again and close the door

### Cancel Programme (Reset)

- Only when the master is ON. Press the **A** and **C** programme buttons at the same time and hold them down for approximately 3 seconds
- The programme continues for approximately 1 minute. The PROGRAMME END indicator for the programme that has just been terminated light up
- Set the main switch **1** to OFF

### Changing the programme

- It is possible to change the programme selection after you have switched the dishwasher on, provided that you have not yet closed the door. If it is necessary to change the programme after this, the programme cycle that has already begun will still carry on to the end.