











Quick Installation Guide x 1

48V 2.5GE PoE Adapter x 1






Power Cord x 1

1.Packing Content




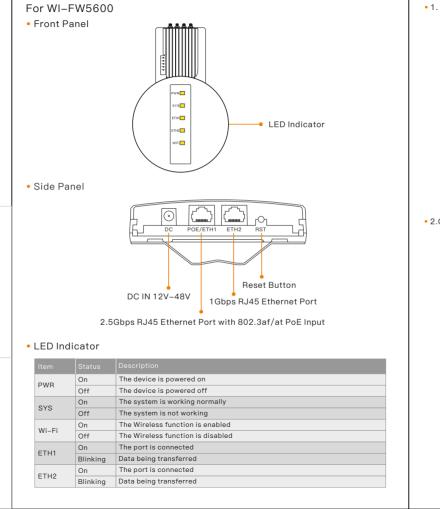

2. Appearance Overview

1. Mount the radio to a pole with provided Metal Strap. • 2.Connect the device to antenna with 4 RF cables.

3. Device Installation

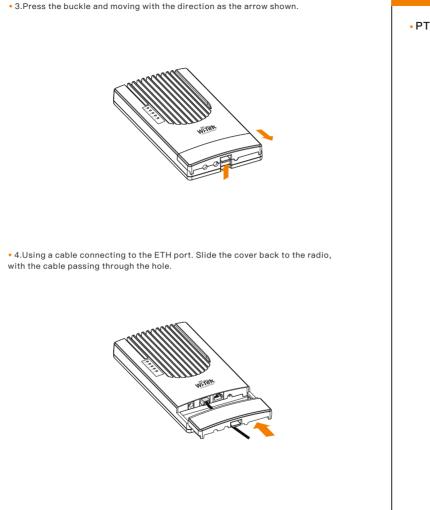

4. Application • PTMP Access Point WI-FW5600

(3) Open a browser such as Chrome or Firefox and launch the login page with default IP 192.168.1.2, then type the password admin to enter the Management UL.

A) Boot Up Device

(1) Power on the device.

WI-FW5625

Client

WI-FW5619

WI-FW5620-H

(2) Connect the PC to the PoE adapter using Ethernet cable

5.Web Management

Ethernet Cable

(1) Please finish LAN Settings, and then click Next. Setup Wizard IP 192.168.1.2

B) Configure the Access Point

Netmask 255.255.255.0 Gateway 192.168.1.1 DNS 8.8.8.8 (2) Wireless Settings: Choose Access Point Mode and create a new SSID (Network name) for your wireless network. And then select Encryption Mode and create a PSK Key to

protect the device. Setup Wizard Mode Access Point SSID Wireless-bridge Encrypt Mode WPA3-SAE Key 12345678 Channel 45(6175 Mhz) Password admin Use Wi-Fi password as router management password ▶Neteork

(3) Verify your settings and click Finish to complete the configuration.

	192.168.1.2	
	255.255.255.0	
	192.168.1.1	
	8.8.8.8	
	Access Point	
	wireless-bridge	
	WPA3-SAE	
	12345678	
	45	
	admin	
Back	Finish	

C) Configure the Client

(1) Make sure the clients are powered on and repeat step A) (2) and (3). (2) Please finish LAN Settings and make sure the subnet is the same as the Access Point, and then click Next.

Next.		
	Setup Wizard	
▶Lan		
IP	192.168.1.3	
Netmask	255.255.255.0	
Gateway	192.168.1.1	
DNS	8.8.8.8	
Hor	me page Next	

Setup Wizard SSID wireless-bridge Encrypt Mode WPA3-SAE

(3) Wireless Settings: Choose Client Mode and enter the same SSID and PSK Key and

select the same Encryption Mode as Access Point.

System

Neteork

Encrypt Mode

(4) Verify your settings and click Finish to complete the configuration.

wireless-bridge

Key 12345678 Channel 45(6175 Mhz) Password admin Use Wi-Fi password as router management password

Technical Support

Company Website Cloud Management

Wireless-Tek Technology Limited Address: Building 3, Units 1801-1807, 1812,

services guaranteed as part of the limited warranty.

Huaqiang Era Plaza, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.

Website: www.wireless-tek.com

Tel: 86-0755-32811290 Email: sales@wireless-tek.com

Technical Support: tech@wireless-tek.com

maintenance service.

Warranty Card

• If the product defects within the warranty period, we will provide professional

• Proof of purchase and a complete product serial number are required to receive any

• Any other defects that are not caused by workmanship or product quality, such as

damaged, warranty card loss will disqualify the product from limited warranty.

natural disasters, water damage, extreme thermal or environmental conditions, sticker

