


# Quick Installation Guide

6GHz AX4800 Fixed Access Point

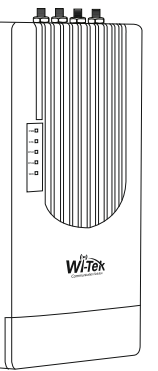


WI-FW5600


## 1.Packing Content



Radio x 1

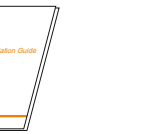

Quick Installation Guide x 1

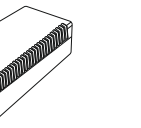

48V 2.5GE PoE Adapter x 1



Metal Strap x 2




Power Cord x 1

## 2. Appearance Overview


For WI-FW5600

• Front Panel

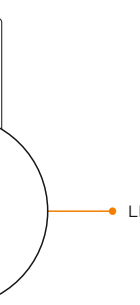

LED Indicator

 • Side Panel



DC IN 12V-48V

1Gbps RJ45 Ethernet Port

Reset Button


2.5Gbps RJ45 Ethernet Port with 802.3af/at PoE Input

• LED Indicator

Item	Status	Description
PWR	On	The device is powered on
	Off	The device is powered off
SYS	On	The system is working normally
	Off	The system is not working
Wi-Fi	On	The Wireless function is enabled
	Off	The Wireless function is disabled
ETH1	On	The port is connected
	Blinking	Data being transferred
ETH2	On	The port is connected
	Blinking	Data being transferred

## 3. Device Installation


• 1. Mount the radio to a pole with provided Metal Strap.

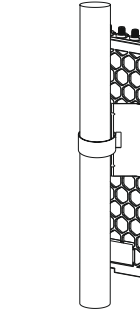


• 2.Connect the device to antenna with 4 RF cables.



• 3.Press the buckle and moving with the direction as the arrow shown.

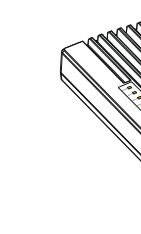


• 4.Using a cable connecting to the ETH port. Slide the cover back to the radio, with the cable passing through the hole.

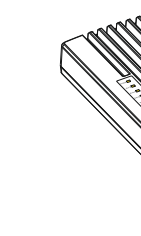

## 4. Application

• PTMP

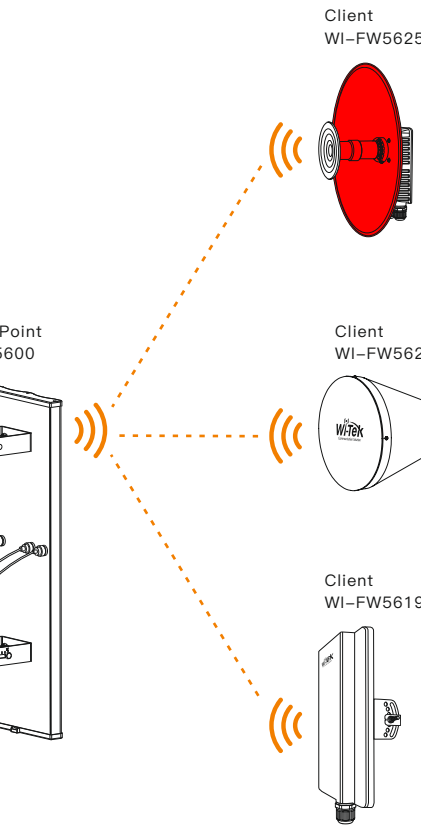


## 5.Web Management


• A) Boot Up Device

(1) Power on the device.

(2) Connect the PC to the PoE adapter using Ethernet cable

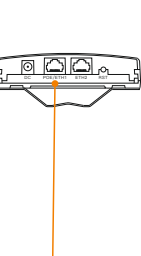

(3) Open a browser such as Chrome or Firefox and launch the login page with default IP 192.168.1.2, then type the password admin to enter the Management UI.

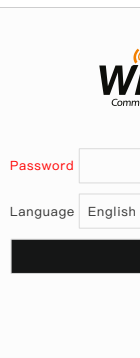


• B) Configure the Access Point

(1) Please finish LAN Settings, and then click Next.



 
(2) Wireless Settings: Choose Access Point Mode and create a new SSID (Network name) for your wireless network. And then select Encryption Mode and create a PSK Key to protect the device.




• C) Configure the Client

(1) Make sure the clients are powered on and repeat step A) (2) and (3).

(2) Please finish LAN Settings and make sure the subnet is the same as the Access Point, and then click Next.

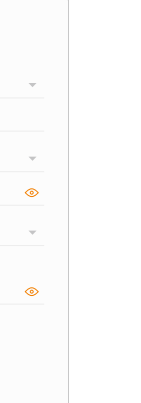


(3) Verify your settings and click Finish to complete the configuration.

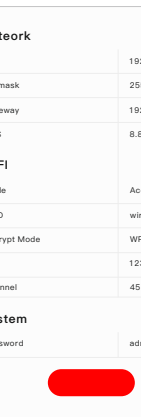

(3) Wireless Settings: Choose Client Mode and enter the same SSID and PSK Key and select the same Encryption Mode as Access Point.



(4) Verify your settings and click Finish to complete the configuration.

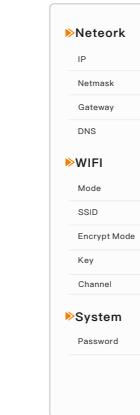

## Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within the warranty period, we will provide professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.



Technical Support



Company Website



Cloud Management

Wireless-Tek Technology Limited

Address: Building 3, Units 1801-1807, 1812,

Huaqiang Era Plaza, Tangwei Community,

Fuhai Street, Bao'an District, Shenzhen City,

Guangdong Province, China.

Website: www.wireless-tek.com

Tel: 86-0755-32811290

Email: sales@wireless-tek.com

Technical Support: tech@wireless-tek.com

