

# Washing Machine

## User manual

WW9\* T\*\*\*\*\*/WW8\* T\*\*\*\*\*/WW7\* T\*\*\*\*\*

## Contents

### Safety information

What you need to know about the safety instructions  
Important safety symbol  
Important safety precautions  
Critical installation warnings  
Installation cautions  
Critical usage warnings  
Usage cautions  
Critical cleaning warnings  
Instructions about the WEEE  
Installation

### What's included

Installation requirements  
Step-by-step installation  
Before you start

### Initial setup

Laundry guidelines  
Emergency drain cleaning  
Detergent drawer guidelines  
Operations

### Control panel

Operating a cycle  
Cycle overview  
Additional functions  
System functions  
Special features

### SmartThings

### Open Source Announcement

### Maintenance

### Drum cleaning

### Emergency drain cleaning

### Defrosting your washing machine

### Car against an extended time of disuse

### Troubleshooting

### Checkpoints

### Information codes

### Specifications


### Fabric care chart

### Protecting the environment

### Specification sheet

### Terms of Warranty

Warranty not applicable in any of the following cases

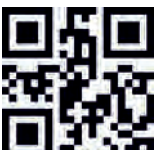

DC68-04384A-08

SAMSUNG

2 English

### Flooring

For best performance, the washing machine must be installed on a solid floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces do not resist vibration well and may cause the washing machine to move slightly during the spin cycle.

### Water temperature

Do not install the washing machine on a platform or a poorly supported structure.

Do not install the washing machine in areas where water may freeze as the washing machine always states some water in its water valves, pumps, and hoses. Freezing water in the connection parts may cause damage to both the pump, and other components of the washing machine.

### Acove or closet installation

Minimum clearance for installable operation

Sides	25 mm
Top	25 mm
Rear	50 mm
Front	550 mm

If both the washing machine and a dryer are installed in the same location, the front of the acove or closet must be at least a 550 mm unobstructed air opening. Your washing machine alone does not require a specific air opening.

### Water temperature

Do not install the washing machine in areas where water may freeze as the washing machine always states some water in its water valves, pumps, and hoses. Freezing water in the connection parts may cause damage to both the pump, and other components of the washing machine.

### Water temperature

Do not install the washing machine in areas where water may freeze as the washing machine always states some water in its water valves, pumps, and hoses. Freezing water in the connection parts may cause damage to both the pump, and other components of the washing machine.

### Water temperature

Do not install the washing machine in areas where water may freeze as the washing machine always states some water in its water valves, pumps, and hoses. Freezing water in the connection parts may cause damage to both the pump, and other components of the washing machine.

### Water temperature

Do not install the washing machine in areas where water may freeze as the washing machine always states some water in its water valves, pumps, and hoses. Freezing water in the connection parts may cause damage to both the pump, and other components of the washing machine.

### Water temperature

Do not install the washing machine in areas where water may freeze as the washing machine always states some water in its water valves, pumps, and hoses. Freezing water in the connection parts may cause damage to both the pump, and other components of the washing machine.

### Water temperature

Do not install the washing machine in areas where water may freeze as the washing machine always states some water in its water valves, pumps, and hoses. Freezing water in the connection parts may cause damage to both the pump, and other components of the washing machine.

### Water temperature

Do not install the washing machine in areas where water may freeze as the washing machine always states some water in its water valves, pumps, and hoses. Freezing water in the connection parts may cause damage to both the pump, and other components of the washing machine.

### Water temperature

Do not install the washing machine in areas where water may freeze as the washing machine always states some water in its water valves, pumps, and hoses. Freezing water in the connection parts may cause damage to both the pump, and other components of the washing machine.

### Water temperature

Do not install the washing machine in areas where water may freeze as the washing machine always states some water in its water valves, pumps, and hoses. Freezing water in the connection parts may cause damage to both the pump, and other components of the washing machine.

### Water temperature

Do not install the washing machine in areas where water may freeze as the washing machine always states some water in its water valves, pumps, and hoses. Freezing water in the connection parts may cause damage to both the pump, and other components of the washing machine.

### Water temperature

Do not install the washing machine in areas where water may freeze as the washing machine always states some water in its water valves, pumps, and hoses. Freezing water in the connection parts may cause damage to both the pump, and other components of the washing machine.

### Water temperature

Do not install the washing machine in areas where water may freeze as the washing machine always states some water in its water valves, pumps, and hoses. Freezing water in the connection parts may cause damage to both the pump, and other components of the washing machine.

### Water temperature

Do not install the washing machine in areas where water may freeze as the washing machine always states some water in its water valves, pumps, and hoses. Freezing water in the connection parts may cause damage to both the pump, and other components of the washing machine.

### Water temperature

Do not install the washing machine in areas where water may freeze as the washing machine always states some water in its water valves, pumps, and hoses. Freezing water in the connection parts may cause damage to both the pump, and other components of the washing machine.

### Water temperature

Do not install the washing machine in areas where water may freeze as the washing machine always states some water in its water valves, pumps, and hoses. Freezing water in the connection parts may cause damage to both the pump, and other components of the washing machine.

### Water temperature

Do not install the washing machine in areas where water may freeze as the washing machine always states some water in its water valves, pumps, and hoses. Freezing water in the connection parts may cause damage to both the pump, and other components of the washing machine.

### Water temperature

Do not install the washing machine in areas where water may freeze as the washing machine always states some water in its water valves, pumps, and hoses. Freezing water in the connection parts may cause damage to both the pump, and other components of the washing machine.

## Safety information

Congratulations on your new Samsung washing machine. This manual contains important information on the installation, use and care of your appliance. Please take some time to read this manual to take full advantage of your washing machine's many features.

### What you need to know about the safety instructions

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance. Please store the manual in a safe location close to the appliance for future reference. Use this appliance only for its intended purpose as described in this instruction manual.

### Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense and caution when installing, maintaining and operating your washing machine.

Because the following operating instructions cover various models, the characteristics of your washing machine may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at [www.samsung.com](http://www.samsung.com).

### Important safety symbols

What the icons and signs in this user manual mean:

⚠ **WARNING**  
Hazards or unsafe practices that may result in severe personal injury, death and/or property damage.

⚠ **CAUTION**  
Hazards or unsafe practices that may result in personal injury and/or property damage.

ⓘ **NOTE**  
Indicates that a risk of personal injury or material damage exists.

ⓘ **These warning signs are here to prevent injury to yourself and others.**

ⓘ **Please follow them explicitly.**

ⓘ **After reading this manual, store it in a safe place for future reference.**

Read all instructions before using the appliance and always read the instructions. As with any equipment that uses electricity and moving parts, potential hazards exist. To safely operate this appliance, familiarize yourself with the operation and exercise care when using it.

English 3

## Safety information

### Important safety precautions

#### ⚠ WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2. For use in Europe: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience

English 5

## Safety information

Do not insert your hand or a metal object under the washing machine while it is operating.

Water drained during a long period of non-use, water supply failure, or when reconnecting the water supply hose(s) or the water pipe may damage a part of the appliance or result in a water leak.

If a draining error occurs during an operation, check if there is a draining problem.

Do not wash, spin or dry laundry in the washing machine if it is not working properly.

Do not attempt to repair, disassemble, or modify the appliance yourself.

Do not use a fuse (such as copper, steel wire, etc.) other than a standard fuse.

When the appliance needs to be repaired or installed, contact your nearest service centre.

Failure to do so may result in electric shock, fire, problems with the appliance, or injury.

If the water supply hose comes loose from the water tap and floods the appliance, unplug the power cord.

Failure to do so may result in electric shock or fire.

Do not let children (or pets) play in or on the rear/water supply hose. The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

English 11

Do not insert your hand or a metal object under the washing machine while it is operating.

Water drained during a long period of non-use, water supply failure, or when reconnecting the water supply hose(s) or the water pipe may damage a part of the appliance or result in a water leak.

If a draining error occurs during an operation, check if there is a draining problem.

Do not wash, spin or dry laundry in the washing machine if it is not working properly.

Do not attempt to repair, disassemble, or modify the appliance yourself.

Do not use a fuse (such as copper, steel wire, etc.) other than a standard fuse.

When the appliance needs to be repaired or installed, contact your nearest service centre.

Failure to do so may result in electric shock, fire, problems with the appliance, or injury.

If the water supply hose comes loose from the water tap and floods the appliance, unplug the power cord.

Failure to do so may result in electric shock or fire.

Do not let children (or pets) play in or on the rear/water supply hose. The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

English 11

Do not insert your hand or a metal object under the washing machine while it is operating.

Water drained during a long period of non-use, water supply failure, or when reconnecting the water supply hose(s) or the water pipe may damage a part of the appliance or result in a water leak.

If a draining error occurs during an operation, check if there is a draining problem.

Do not wash, spin or dry laundry in the washing machine if it is not working properly.

Do not attempt to repair, disassemble, or modify the appliance yourself.

Do not use a fuse (such as copper, steel wire, etc.) other than a standard fuse.

When the appliance needs to be repaired or installed, contact your nearest service centre.

Failure to do so may result in electric shock, fire, problems with the appliance, or injury.

If the water supply hose comes loose from the water tap and floods the appliance, unplug the power cord.

Failure to do so may result in electric shock or fire.

Do not let children (or pets) play in or on the rear/water supply hose. The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

English 11

Do not insert your hand or a metal object under the washing machine while it is operating.

Water drained during a long period of non-use, water supply failure, or when reconnecting the water supply hose(s) or the water pipe may damage a part of the appliance or result in a water leak.

If a draining error occurs during an operation, check if there is a draining problem.

Do not wash, spin or dry laundry in the washing machine if it is not working properly.

Do not attempt to repair, disassemble, or modify the appliance yourself.

Do not use a fuse (such as copper, steel wire, etc.) other than a standard fuse.

When the appliance needs to be repaired or installed, contact your nearest service centre.

Failure to do so may result in electric shock, fire, problems with the appliance, or injury.

If the water supply hose comes loose from the water tap and floods the appliance, unplug the power cord.

Failure to do so may result in electric shock or fire.

Do not let children (or pets) play in or on the rear/water supply hose. The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

English 11

Do not insert your hand or a metal object under the washing machine while it is operating.

Water drained during a long period of non-use, water supply failure, or when reconnecting the water supply hose(s) or the water pipe may damage a part of the appliance or result in a water leak.

If a draining error occurs during an operation, check if there is a draining problem.

Do not wash, spin or dry laundry in the washing machine if it is not working properly.

Do not attempt to repair, disassemble, or modify the appliance yourself.

Do not use a fuse (such as copper, steel wire, etc.) other than a standard fuse.

When the appliance needs to be repaired or installed, contact your nearest service centre.

Failure to do so may result in electric shock, fire, problems with the appliance, or injury.

If the water supply hose comes loose from the water tap and floods the appliance, unplug the power cord.

Failure to do so may result in electric shock or fire.

Do not let children (or pets) play in or on the rear/water supply hose. The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

English 11

Do not insert your hand or a metal object under the washing machine while it is operating.

Water drained during a long period of non-use, water supply failure, or when reconnecting the water supply hose(s) or the water pipe may damage a part of the appliance or result in a water leak.

If a draining error occurs during an operation, check if there is a draining problem.

Do not wash, spin or dry laundry in the washing machine if it is not working properly.

Do not attempt to repair, disassemble, or modify the appliance yourself.

Do not use a fuse (such as copper, steel wire, etc.) other than a standard fuse.

When the appliance needs to be repaired or installed, contact your nearest service centre.

Failure to do so may result in electric shock, fire, problems with the appliance, or injury.

If the water supply hose comes loose from the water tap and floods the appliance, unplug the power cord.

Failure to do so may result in electric shock or fire.

Do not let children (or pets) play in or on the rear/water supply hose. The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

English 11

and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

3. Children should be supervised to ensure that they do not play with the appliance.

4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

5. The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

English 5

6. For washing machines having ventilation openings in the base, the installation instructions shall state that the openings must not be obstructed by a carpet.

7. For use in Europe: Children of less than 3 years should be kept away unless continuously supervised.

8. CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

9. This appliance is intended to be used in household only and it is not intended to be used such as:

English 5

Do not insert your hand or a metal object under the washing machine while it is operating.

Water drained during a long period of non-use, water supply failure, or when reconnecting the water supply hose(s) or the water pipe may damage a part of the appliance or result in a water leak.

If a draining error occurs during an operation, check if there is a draining problem.

Do not wash, spin or dry laundry in the washing machine if it is not working properly.

Do not attempt to repair, disassemble, or modify the appliance yourself.

Do not use a fuse (such as copper, steel wire, etc.) other than a standard fuse.

When the appliance needs to be repaired or installed, contact your nearest service centre.

Failure to do so may result in electric shock, fire, problems with the appliance, or injury.

If the water supply hose comes loose from the water tap and floods the appliance, unplug the power cord.

Failure to do so may result in electric shock or fire.

Do not let children (or pets) play in or on the rear/water supply hose. The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

English 11

Do not insert your hand or a metal object under the washing machine while it is operating.

Water drained during a long period of non-use, water supply failure, or when reconnecting the water supply hose(s) or the water pipe may damage a part of the appliance or result in a water leak.

If a draining error occurs during an operation, check if there is a draining problem.

Do not wash, spin or dry laundry in the washing machine if it is not working properly.

Do not attempt to repair, disassemble, or modify the appliance yourself.

Do not use a fuse (such as copper, steel wire, etc.) other than a standard fuse.

When the appliance needs to be repaired or installed, contact your nearest service centre.

Failure to do so may result in electric shock, fire, problems with the appliance, or injury.

If the water supply hose comes loose from the water tap and floods the appliance, unplug the power cord.

Failure to do so may result in electric shock or fire.

Do not let children (or pets) play in or on the rear/water supply hose. The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

English 11

Do not insert your hand or a metal object under the washing machine while it is operating.

Water drained during a long period of non-use, water supply failure, or when reconnecting the water supply hose(s) or the water pipe may damage a part of the appliance or result in a water leak.

If a draining error occurs during an operation, check if there is a draining problem.

Do not wash, spin or dry laundry in the washing machine if it is not working properly.

Do not attempt to repair, disassemble, or modify the appliance yourself.

Do not use a fuse (such as copper, steel wire, etc.) other than a standard fuse.

When the appliance needs to be repaired or installed, contact your nearest service centre.

Failure to do so may result in electric shock, fire, problems with the appliance, or injury.

If the water supply hose comes loose from the water tap and floods the appliance, unplug the power cord.

Failure to do so may result in electric shock or fire.

Do not let children (or pets) play in or on the rear/water supply hose. The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

English 11

Do not insert your hand or a metal object under the washing machine while it is operating.

Water drained during a long period of non-use, water supply failure, or when reconnecting the water supply hose(s) or the water pipe may damage a part of the appliance or result in a water leak.

If a draining error occurs during an operation, check if there is a draining problem.

Do not wash, spin or dry laundry in the washing machine if it is not working properly.

Do not attempt to repair, disassemble, or modify the appliance yourself.

Do not use a fuse (such as copper, steel wire, etc.) other than a standard fuse.

When the appliance needs to be repaired or installed, contact your nearest service centre.

Failure to do so may result in electric shock, fire, problems with the appliance, or injury.

If the water supply hose comes loose from the water tap and floods the appliance, unplug the power cord.

Failure to do so may result in electric shock or fire.

Do not let children (or pets) play in or on the rear/water supply hose. The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

English 11

Do not insert your hand or a metal object under the washing machine while it is operating.

Water drained during a long period of non-use, water supply failure, or when reconnecting the water supply hose(s) or the water pipe may damage a part of the appliance or result in a water leak.

If a draining error occurs during an operation, check if there is a draining problem.

Do not wash, spin or dry laundry in the washing machine if it is not working properly.



