 
 
 
 
 
 




| Original                                                                                              | Replacement                                                                                                   | Original                                                                                                | Replacement                                                                                                   |
|-------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|
|  On / Standby        |  Power                       |  SP A/B              |  Yellow / YouTube / Repeat |
|  Display             |  Display / Media             |  Up                  |  Up                        |
|  DVD                 |  Shift + 2                   |  Menu                |  Menu / Home               |
|  VCR / DVR           |  D.Menu / Top                |  Left                |  Left                      |
|  CBL / SAT           |  AV / Input / RDS            |  Enter               |  OK                        |
|  GAME / TV           |  Shift + 1                   |  Right               |  Right                     |
|  MULTI CH            |  TV/Radio /                  |  Setup               |  Setup / OPT /             |
|  AUX                 |  Shift + 7                   |  Down                |  Down                      |
|  TAPE                |  Shift + 5                   |  Return              |  Back / Return             |
|  TUNER              |  Shift + 6                  |  Audio              |  Audio / Lang I/II        |
|  CD                |  Shift + 3                 |  I<<               |  I<< / Preset-           |
|  PHONO             |  Shift + Audio / Lang I/II |  >>I               |  >>I / Preset+           |
|  Muting            |  Mute / Dimmer             |  <<                |  << / Tune-              |
|  CH/Disc+ /        |  CH+ / Page+               |  Play              |  Play / Slow             |
|  Vol+              |  Vol+                      |  >>                |  >> / Tune+              |
|  CH/Disc- / Album- |  CH- / Page-               |  Pause / Play Rev. |  Pause / Step / Freeze   |
|  Vol-              |  Vol-                      |  Stop              |  Stop / Hold             |



