

SPROUT

IMMERSE 2 SPEAKER



PRODUCT MANUAL

WE PUT MORE INTO OUR TECH, SO YOU CAN GET MORE OUT OF LIFE.

At Sprout, our purpose is to help you unlock the potential of your technology. We're an Australian brand, and we design all of our products locally to ensure they are uniquely suited to your lifestyle.



CONTENTS

01. What's in the box?	2
02. Product overview	3
03. Quick start guide	4
04. Operating controls	6
05. Specifications	10
06. Important safety info	11
07. Consumer guarantee	12



Scan the QR code
to access an online
version of this manual

01. WHAT'S IN THE BOX?

Thank you for choosing the **Immerse 2 Speaker** by Sprout.

For optimum performance and safety, please read instructions carefully before usage.

Please keep this manual for future reference.

 
 
1x Immerse 2 Speaker

1x Australian standard charging cable

1x Product manual

02. PRODUCT OVERVIEW

- | | |
|------------------------------|--------------------------|
| 1. Qi2 wireless charging pad | 8. Volume down |
| 2. Power | 9. Play/pause/answer |
| 3. Bluetooth | 10. Volume up |
| 4. UNISYNC™ | 11. USB-C output port |
| 5. LED indicator | 12. 3.5mm aux input port |
| 6. Battery LED indicator | 13. Power cable input |
| 7. Microphone for calls | |

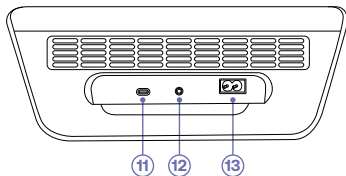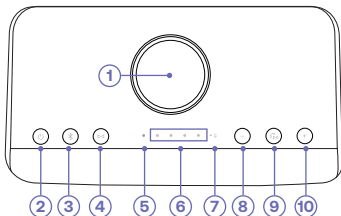

CHARGING YOUR IMMERSE 2

1. Connect the speaker using the supplied power cable.
2. The LED battery indicator will flash from one to four LEDs to indicate Immerse 2 is charging. A full charge will take approximately 2 hours.

CONNECTING VIA 3.5MM AUX CABLE

To play audio using the aux cable, connect the cable from Immerse 2 to your device.

Please note: Using 3.5mm aux input will override a Bluetooth source input.

CONNECTING VIA BLUETOOTH

1. Press the power button for approximately three seconds. Immerse 2 will announce 'power on'. If setting up for the first time, please follow step 2, otherwise skip to step 3.
2. Press the Bluetooth button for approximately two seconds to enter Bluetooth pairing mode. The LED indicator light will flash blue and red to indicate Immerse 2 is ready for pairing.
3. Connect to 'Immerse 2' in your devices' Bluetooth settings. The speaker will announce 'Bluetooth connected' and the LED indicator light will change to a solid blue once paired*.

*Immerse 2 will always remember the last device paired, and will automatically reconnect when the speaker is turned back on.

MULTIPOINT CONNECTION

Multipoint is a feature that allows Immerse 2 to connect to two Bluetooth devices at once. This means that you can listen to music from one device, whilst still hearing notifications and receiving calls from another device.

TO SETUP MULTIPOINT:

1. Connect your first Bluetooth device.
2. Long press the Bluetooth button for 3 seconds to disconnect the current Bluetooth device, and initiate Bluetooth pairing mode again.
3. Connect your second Bluetooth device.
4. Long press the power button for 3 seconds and turn off Immerse 2.
5. Long press the power button for 3 seconds and turn on Immerse 2. Immerse 2 will announce "Bluetooth connected" twice. Immerse 2 will play audio from the last device it receives a command from, but it will treat the device with calls and notifications as priority.

To forget Bluetooth devices and reset to factory settings, long press the UNISYNC button for approximately 5 seconds.

04. OPERATING CONTROLS

POWER

Long press the power button for 3 seconds to turn on/off. Short press when not connected to power, to activate powerbank mode (Qi2 and USB-C Output).

PLAY/PAUSE/ANSWER

Short press the play/pause/answer button to play/pause, and answer incoming calls.

Long press the play/pause/answer button to reject an incoming phone call.

Double tap the play/pause/answer button to activate/deactivate the assistant on your device such as Apple Siri.

VOLUME CONTROL

Short press '-' button to decrease volume.

Short press '+' button to increase volume.

TRACK CONTROL

Long press '-' button to select previous song.

Long press '+' button to select next song.

BLUETOOTH

Long press the Bluetooth button to turn on/off the Immerse 2 Bluetooth function.

UNYSYNC

Short press to cycle through unisync settings

Long 5 second press to forget all bluetooth devices, and reset to factory settings.

04. OPERATING CONTROLS

WIRELESS CHARGING

The 15W charging pad conveniently recharges your Qi-compatible devices.

Optimised for Qi2 wireless charging, and compatible with Qi wireless charging.

WARNING: Do not place or leave metallic objects on the wireless charging pad.

WIRED CHARGING

A USB-C port is provided for 10W output.

LED INDICATOR

- Blue – Power on
- Flashing blue/red – Bluetooth pairing mode
- Solid blue – Bluetooth connected

LED BATTERY INDICATOR

4 white lights on: Battery 76-100% ○ ○ ○ ○

3 white lights on: Battery 51-75% ○ ○ ○ ●

2 white lights on: Battery 26-50% ○ ○ ● ●

1 white light on: Battery 0-25% ○ ● ● ●

The battery LED indicator will flash from one to four LEDs to indicate Immerse 2 is charging. The lights will stop flashing once Immerse 2 is fully charged. To preserve battery health, maximum operating volume will reduce to 75% when the battery is below 25%.

04. OPERATING CONTROLS

CONNECTING MULTIPLE SPEAKERS VIA UNISYNC™

Our UNISYNC technology allows you to share audio with multiple UNISYNC compatible speakers at the same time. Follow the below steps to setup UNISYNC, using your Immerse 2 as the primary speaker.

Speaker 1 (primary)



1. On Speaker 1 (primary), hold the power button for 3 seconds to turn on Speaker mode and connect device via Bluetooth. See page 4 for instructions on how to connect device via Bluetooth.



2. Press once for UNISYNC mode. The primary speaker will announce it is in UNISYNC mode.



3. On Speaker 2 (replica), hold the Power button for 3 seconds to turn on Speaker mode.



 
4. Press the UNISYNC button once to enter UNISYNC mode. The replica speaker will announce it is in UNISYNC mode.




5. Press the UNISYNC button one more. The replica speaker will announce it is using UNISYNC AUDIO.

04. OPERATING CONTROLS

Speaker 1 (primary)

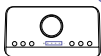

Speaker 2 (replica)

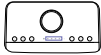 

6. Both speakers will beep confirming UNISYNC setup is complete. The primary speaker's LED indicator will show a solid blue light while the replica will flash red and blue.
7. Complete steps 3-6 to connect up to 50 UNISYNC speakers (replicas).

To exit UNISYNC mode: Press UNISYNC button again to disable UNISYNC. If UNISYNC is disabled, Immerse 2 will disconnect from but remember the replicas connected to it.

To reset UNISYNC: Hold UNISYNC button for 6 seconds. Resetting UNISYNC will also reset the Bluetooth connection and will enable Immerse 2 to 'forget' all replicas and Bluetooth devices.

Scan the QR code for a video tutorial and more information on our UNISYNC technology.



05. SPECIFICATIONS

- Weight: 2.6kg
- Output power: RMS 50W
- Drivers: 2x 70mm, 2x 25mm
- Passive Radiators: 2x 72mm
- Frequency range: 67Hz - 20kHz
- Battery type: Lithium polymer 37.185Wh, equivalent to 3 x 3.7V=3350mAh
- Playtime: Up to 8 hours from full charge at 50% volume*
- Charging time: Approximately 2 hours
- Function: Bluetooth/UNISYNC/Aux-in/Microphone
- USB-C Output: 5V=2A (10W)
- Qi2 Output: Up to 15W**
- Bluetooth version: 5.4

*Battery life varies based on usage type, settings and controls. All playback tests conducted at 50% volume with no devices charging.

** As part of the temperature control system, Qi2 output will operate between 5W and 8W whilst Bluetooth is in use.

06. IMPORTANT SAFETY INFO

1. Immerse 2 Speaker is designed for indoor use
2. Do not use Immerse 2 in conditions that expose it to liquid
3. Do not put metal objects or magnets between the mobile device and the wireless charging surface
4. Ensure all ventilation openings remain clear and dust free
5. Do not attempt to charge Immerse 2 when it is wet, or you suspect water has seeped into Immerse
6. Do not use Immerse 2 near any open fire, heat source or excessive heat
7. Do not open to modify, repair or remove any original component of Immerse 2. A qualified technician must carry out repair work. Do not remove the built-in battery or the grill cover. Doing so could cause damage to Immerse 2
8. Sound levels should be appropriate to your environment and comply with all local regulations. Ensure that you can hear and are aware of any potential hazards around you when you are enjoying your Immerse 2

All Sprout products go through thorough quality assurance inspections. If you find that your device is excessively hot, is emitting odour, is deformed, abraded, cut or is experiencing or demonstrating an abnormal phenomenon, immediately stop all product use and contact Sprout.

07. CONSUMER GUARANTEE

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If you have any questions about your rights in relation to this product, please return it to point of sale or contact us at enquiries@sproutinc.com.au. This warranty does not affect your legal statutory rights under the Australian Consumer Law. For more information about your rights under Australia Consumer Law go to www.accc.gov.au.

Your Immerse 2 Speaker is warranted to the original owner for 24 months from the date of purchase against defects in material and workmanship under normal use and service.

The warranty does not cover misuse of this product and liability will not exceed the purchase price of the product.

If you have any problems while using the product, please do not hesitate to contact our customer support team.

For warranty and technical support please visit sproutinc.com.au or email enquiries@sproutinc.com.au.

Thank you for choosing a Sprout product.





Sprout Accessories Pty Ltd

W: Sproutinc.com.au | E: enquiries@sproutinc.com.au