


SERVICE MANUAL

STEREO CASSETTE TAPE DECK

SANSUI SC-2100/2110 3100/3110

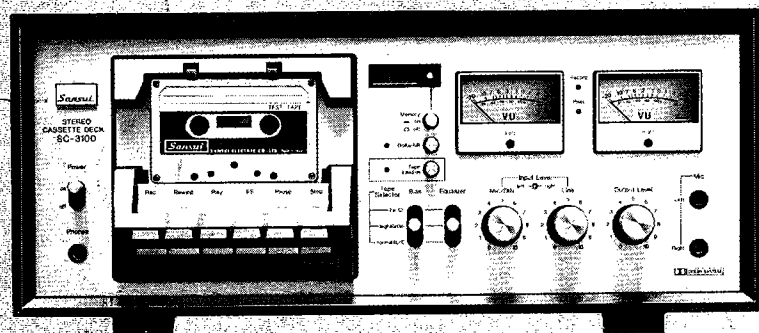

Sansui

SANSUI ELECTRIC CO., LTD.

SPECIFICATIONS

*SC-2100/2110	
TRACK	4-Track (2-Channel Stereo)
TAPE SPEED	4.8 cm/sec. (1-7/8 ips)
HEADS	Record/Playback: Hard Permalloy Head Erase: Ferrite Head
MOTOR	Electronically Controlled DC Motor
WOW AND FLUTTER	within 0.08% WRMS
FAST WIND TIME	approximately 75 sec. (C-60)
FREQUENCY RESPONSE (Record/Playback)	
Normal Tape (LH)	25 to 14,000Hz (30 to 13,000Hz ±3dB)
Ferrichrome Tape	25 to 16,000Hz (30 to 14,000Hz ±3dB)
SIGNAL TO NOISE RATIO (Record/Playback)	
Ferrichrome Tape (without Dolby Noise Reduction Effect)	better than 57dB (weighted)
With Dolby Noise Reduction	better than 67dB (above 5kHz)
ERASURE FACTOR	more than 60dB at 1,000Hz
INPUT SENSITIVITY & IMPEDANCE (0 VU, 1,000Hz)	
MIC	0.2mV 200Ω ~ 10kΩ
LINE	70mV 100kΩ
DIN Connector Socket	0.2mV 4.7kΩ
OUTPUT LEVEL (0 VU, 1,000Hz)	
LINE	400mV
DIN Connector Socket	400mV
HEADPHONE IMPEDANCE	8Ω
BIAS FREQUENCY	85kHz
POWER REQUIREMENTS	
Voltage	100, 120, 220, 240V 50/60Hz 120V (Usable 110 ~ 130V) 60Hz (For USA & Canada only)
Consumption	14.5W (rated)
DIMENSIONS	
SC-2100	456mm (18")W, 198mm (7-7/8")H, 322mm (12-3/4")D
SC-2110	430mm (17")W, 171mm (6-3/4")H, 322mm (12-3/4")D
WEIGHT	8.3kg (18.3 lbs.) net 10.2kg (22.5 lbs.) packed
*SC-3100/3110	
TRACK	4-Track (2-Channel Stereo)
TAPE SPEED	4.8 cm/sec. (1-7/8 ips)
HEADS	Record/Playback: Hard Permalloy Head Erase: Ferrite Head
MOTOR	FG Servo DC motor
WOW AND FLUTTER	within 0.06% WRMS
FAST WIND TIME	within 75 sec. (C-60)
FREQUENCY RESPONSE (Record/Playback)	
Normal Tape (LH)	25 to 14,000Hz (30 to 13,000Hz ±3dB)
Ferrichrome Tape	25 to 16,000Hz (30 to 14,000Hz ±3dB)
SIGNAL TO NOISE RATIO (Record/Playback)	
Ferrichrome Tape (without Dolby Noise Reduction Effect)	better than 57dB (weighted)
With Dolby Noise Reduction	better than 67dB (above 5kHz)
ERASURE FACTOR	more than 60dB at 1,000Hz
INPUT SENSITIVITY & IMPEDANCE (0 VU, 1,000Hz)	
MIC	0.2mV 200Ω ~ 10kΩ
LINE	70mV 100kΩ
DIN Connector Socket	0.2mV 4.7kΩ
OUTPUT LEVEL (0 VU, 1,000Hz)	
LINE	400mV
DIN Connector Socket	400mV
HEADPHONE IMPEDANCE	8Ω
BIAS FREQUENCY	85kHz
POWER REQUIREMENTS	
Voltage	100, 120, 220, 240V 50/60Hz 120V (Usable 110 ~ 130V) 60Hz (For USA & Canada only)
Consumption	14.5W (rated)
DIMENSIONS	
SC-3100	456mm (18")W, 198mm (7-7/8")H, 322mm (12-3/4")D
SC-3110	430mm (17")W, 171mm (6-3/4")H, 322mm (12-3/4")D
WEIGHT	8.3kg (18.3 lbs.) net 10.2kg (22.5 lbs.) packed


* Designed and specifications subject to change without notice for improvements.

†Dolby is a trademark of Dolby Laboratories, Inc.


1. BLOCK DIAGRAM

1) SC-2100/2110

◇Recording Operation Block Diagram

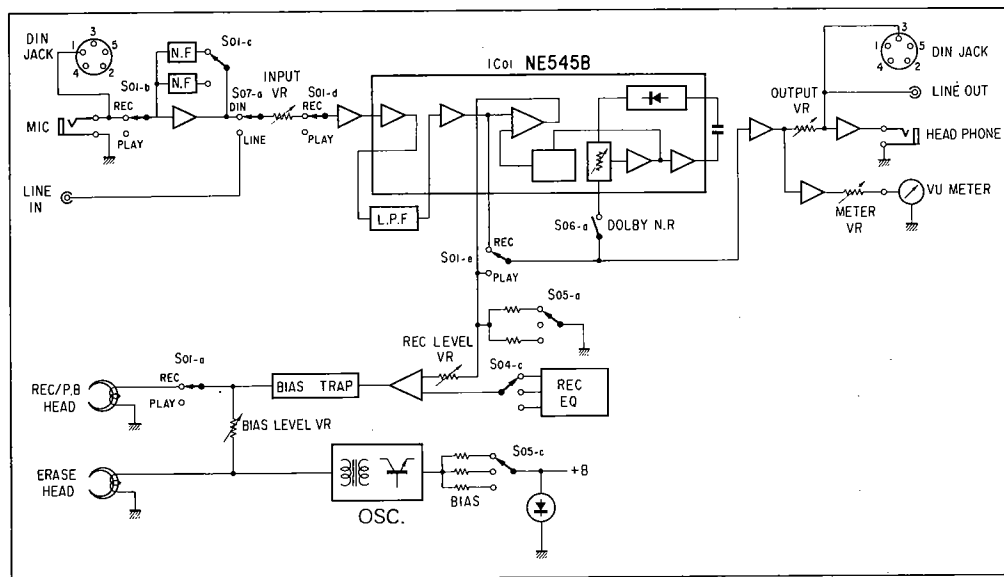


◇Playback Operation Block Diagram


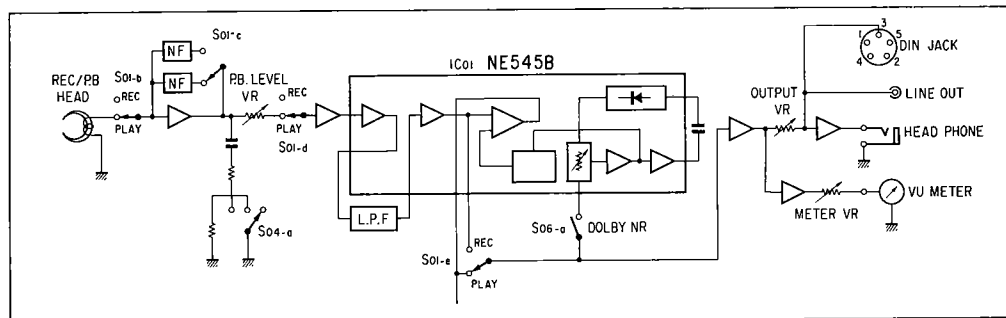


2) SC-3100/3110

◇Recording Operation Block Diagram

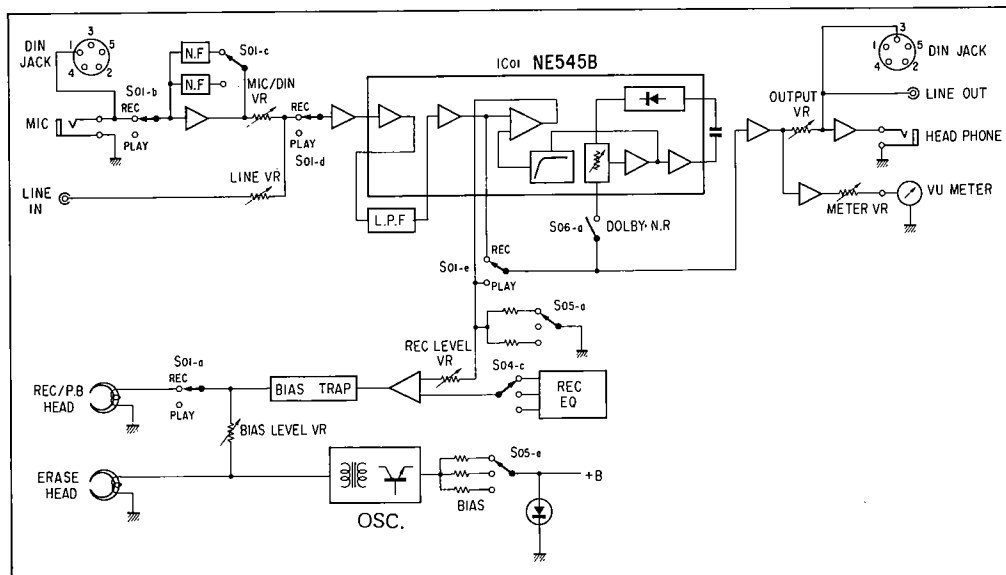


3. OPERATION OF MECHANISM

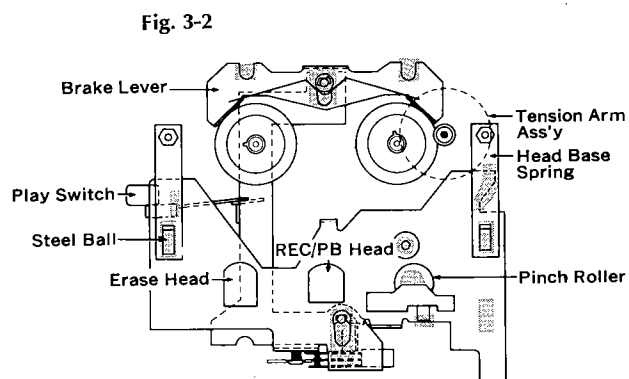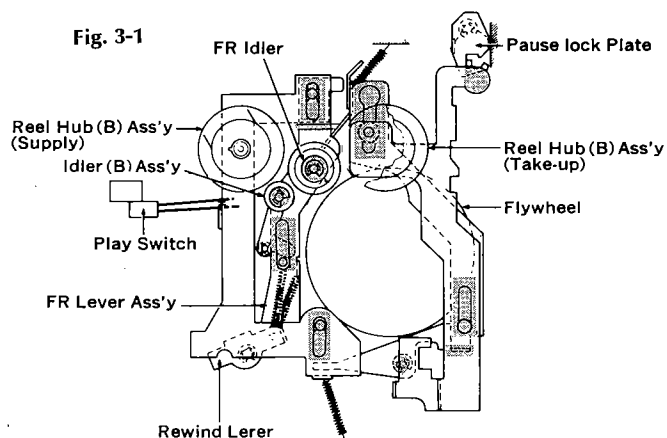


1) Driving Mechanism (See Fig. 3-3)

Motor begins to rotate by pushing the REWIND, PLAY and FF button. The Driving Motor is electronically controlled DC Motor. Driving Torque is transmitted to Take-up Pulley by Motor Pulley and Capstan Belt through Flywheel. They are always rotating when the cassette tape is running.

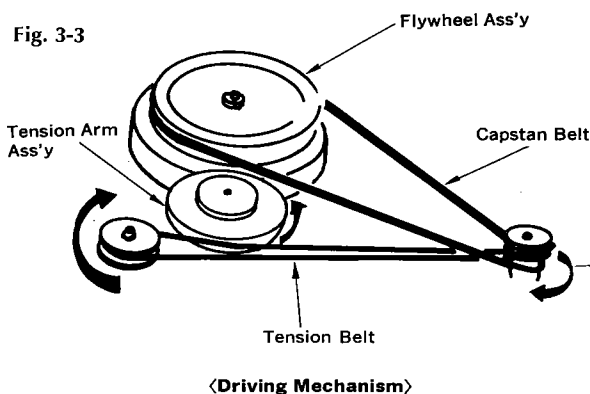

2) Forward Mode (See Fig. 3-4, 3-5, & 3-6)

When the PLAY Button is pushed, the head base moves toward the Reel Hub. It makes the Take-up Pulley Shaft bear against the Reel Hub. At the same time, the Brake is released by Brake Lever and Pinch Roller bears against the Capstan Pulley through tape. In accordance with the above, cassette tape gets constant speed running.

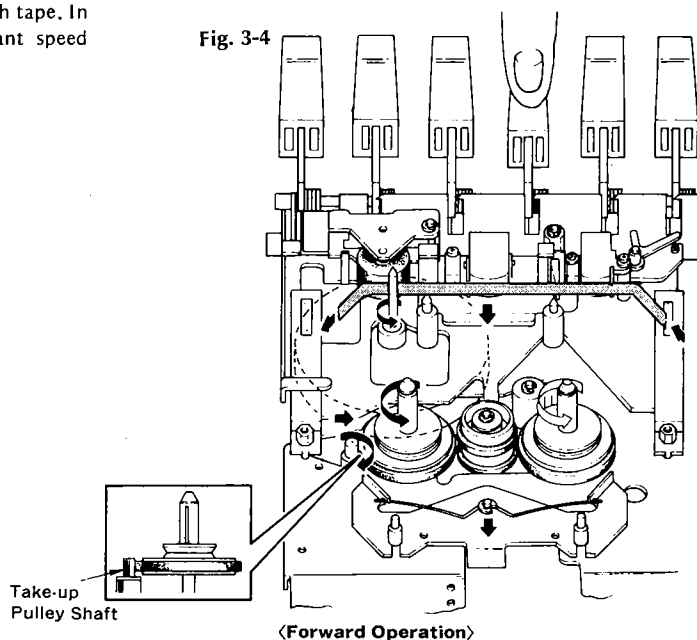

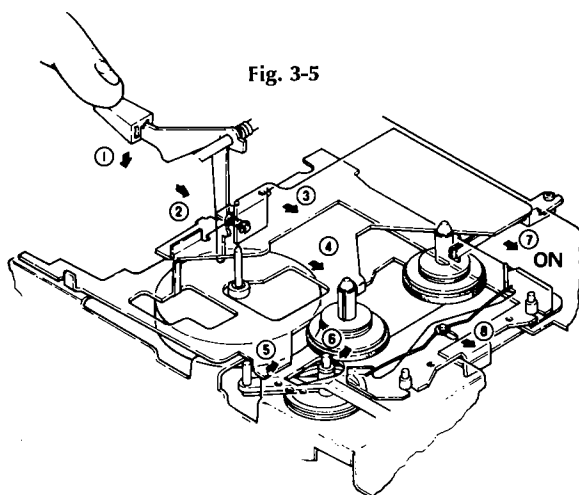


Fig. 3-5

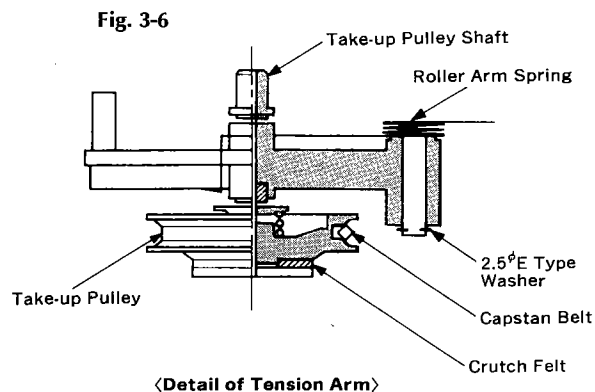


Fig. 3-6

<Detail of Tension Arm>

3) Fast Forward & Rewind Operation (See Fig. 3-7, 3-8, 3-9, 3-10 & 3-11)

When the FF Button is pushed, the FR Idler bears against the Flywheel and Reel hub. When the REWIND button is pushed, the above Mechanism is operated through REWIND Idler between FR Idler and Reel hub. The take-up torque in FF MODE is transmitted from Flywheel next FR Idler to Reel hub and REWIND torque is transmitted from Flywheel next FR Idler and REWIND Idler to Reel hub. Abnormal torque occurred by tape starting, tape stopping or other causes is absorbed by slipping of felt around FR Idler.

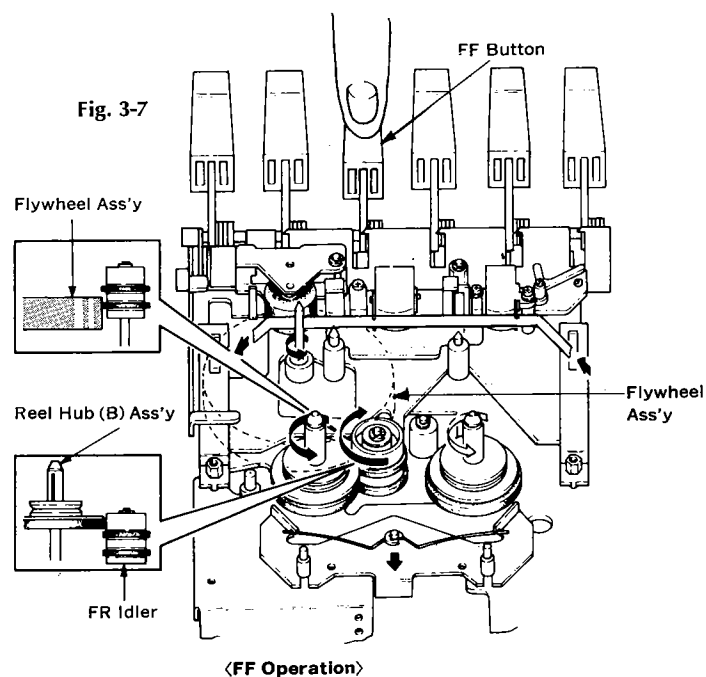


Fig. 3-7

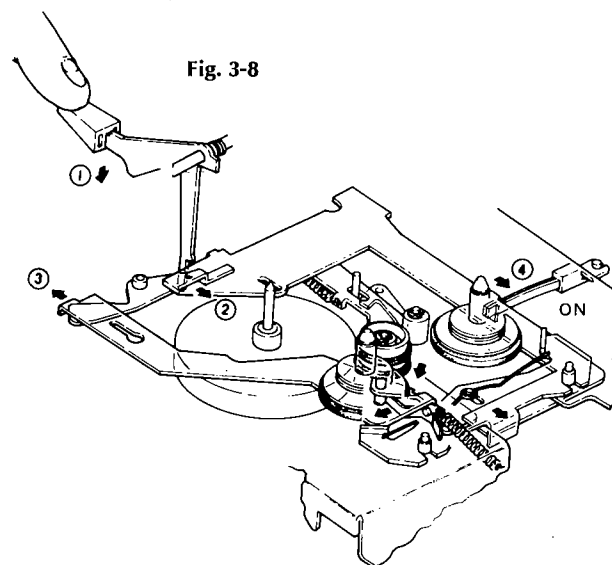


Fig. 3-8

Fig. 3-9

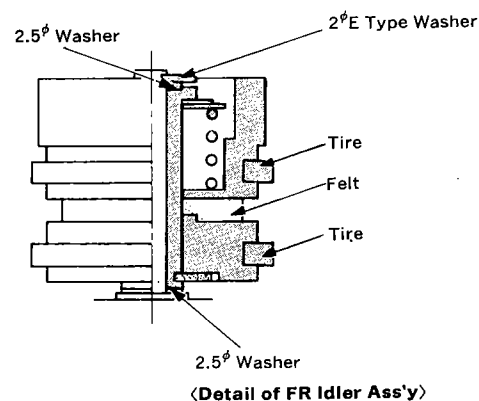


Fig. 3-10


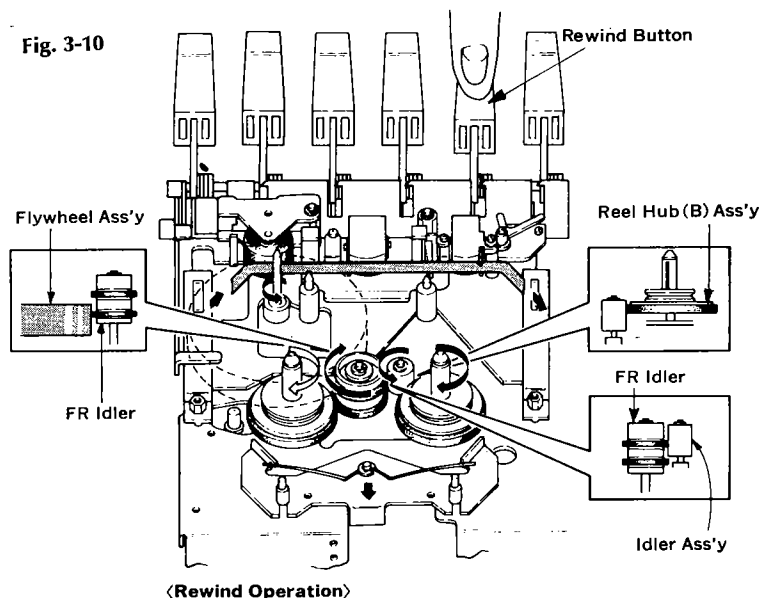



Fig. 3-11

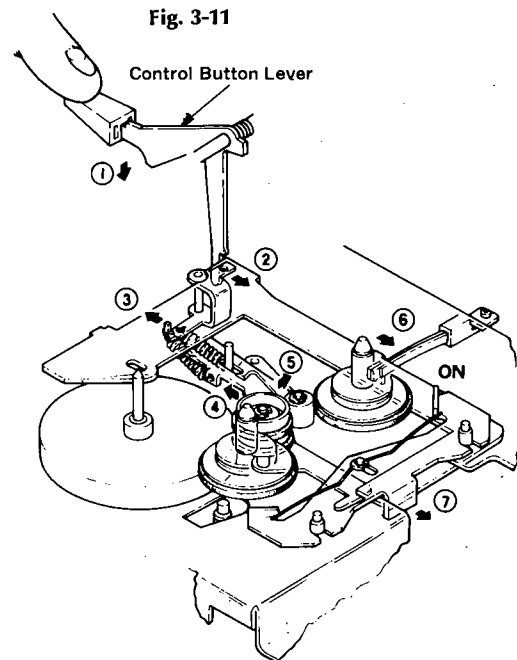

4) Pause Mode (See Fig. 3-12)

PAUSE Button is only operated in PLAY or REC MODE. When the PAUSE Button is pushed, the Pinch Roller is disengaged from Capstan shaft and Take-up Pulley shaft is disengaged from the Reel hub. It stops tape running.

Fig. 3-12

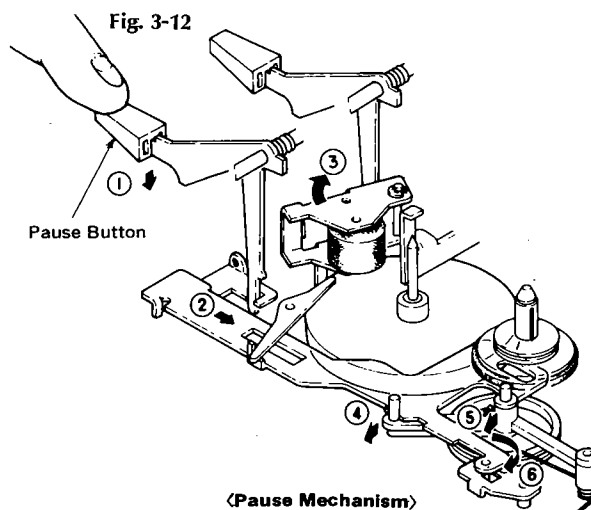



5) REC Mode

Tape transport mechanism is same as that of PLAY MODE operation. A cassette has "tabs" on the side opposite to that exposing the bare tape. If they are broken off, the cassette will prevent the depression of RECORD Button. When the Record Button and the PLAY Button are pushed, the slide switch on G-1217 main circuit board is changed from PLAY MODE to REC MODE.

3. ADJUSTMENTS

1) Tape Speed Adjustment



- Note: (1) Use Sansui Test Tape, SCT-S3K (3 kHz signals are recorded on the tape).
(2) Connections are shown below.

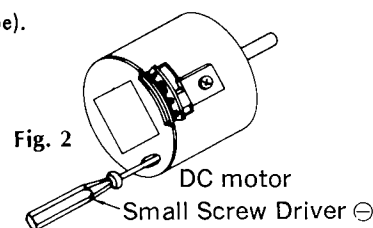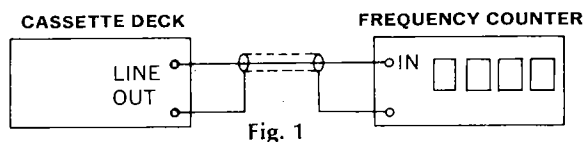

SUBJECT	INPUT SIGNAL	CHECK POINT	SETTING	ADJUST FOR	ADJUST	REMARKS
TAPE SPEED ADJ.	Test Tape SCT-S3K	LINE OUT	Depress the PLAY button and playback the Test Tape, SCT-S3K	3000 Hz $\pm 1.5\%$	If not, turn semi-variable resistor as Fig. 2 until 3000 Hz $\pm 1.5\%$ is obtained.	Use small screw driver.

2) Playback Adjustment

- Note: (1) Before this adjustment, clean REC/P.B head surface.
(2) Demagnetize the head by demagnetizer, if necessary.
(3) For this adjustment, use Sansui Test Tape, SCT-F10KN, SCT-L400N and SCT-F1K.
(4) Set the Dolby switch to be OFF.
(5) Connections are shown below.

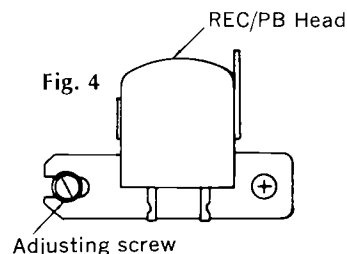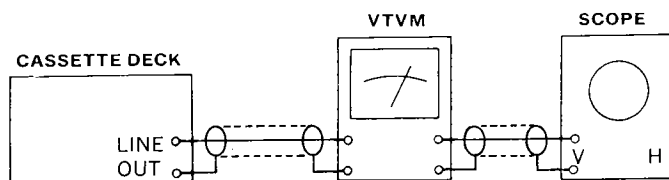

SUBJECT	INPUT SIGNAL	CHECK POINT	SETTING	ADJUST FOR	REMARKS
REC/PB Head Adj.	SCT-F10KN	LINE OUT	Depress the PLAY button and playback the test Tape, SCT-F10KN	Adjust the azimuth adjusting screw in Fig. 4 and tape guide for the maximum reading on the VTVM on both channels.	After this adjustment, lock the screw with paint.
Playback Level Adj.	SCT-L400N	LINE OUT	Set EQ SELECTOR to NORMAL (LH) position	Adjust VR1 (20 k Ω) for L-CH and VR2 (20 k Ω) for R-CH for the reading of 560 mV ± 2 dB on VTVM (See Fig. 5).	Set same level (560 mV) ± 2 dB on both channels.
VU meter Level Adj.			Depress the PLAY button and playback the Test Tape, SCT-L400N	Adjust VR3 (10 k Ω) for L-CH and VR4 (10 k Ω) for R-CH for the reading of +3VU ± 1 VU on VU meter (See Fig. 5).	
High frequency Equalization Check	SCT-F1K and SCT-F10KN	LINE OUT	Set EQ SELECTOR to NORMAL (LH) position. Depress the PLAY button and playback the Test Tape, SCT-F1K and SCT-F10KN	Confirm that the difference of output levels from SCT-F1K and SCT-F10KN is within ± 3 dB.	In playback of SCT-F10KN, set the EQ SELECTOR to HIGH (CrO ₂) position, then confirm the indication on VTVM dropping down approximately 4 dB $\sim$ 5 dB.

3) Recording Adjustment

(1) Connection.

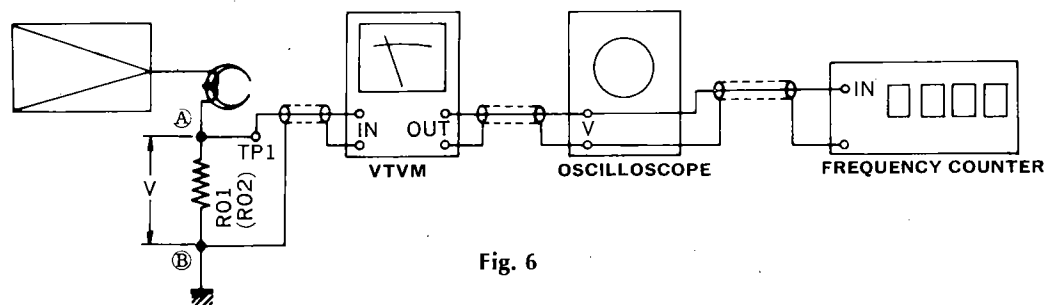


Fig. 6

SUBJECT	INPUT SIGNAL	CHECK POINT	SETTING	ADJUST	REMARKS
Recording bias Adj.		Voltage value between A and B of R01 & R02 (See Fig. 6)	Depress REC and PLAY buttons. Set BIAS SELECTOR to HIGH (CrO ₂) position. Set BIAS SELECTOR to NORMAL (LH) position. Set BIAS SELECTOR to Fe-Cr position.	Adjust VR7 (100 k Ω) for L-CH and VR8 (100 k Ω) for R-CH for the reading of 7.0 mV (700 μ A) between A and B in Fig. 6 on both channel. Confirm the indication on VTVM shows 4.2 mV (420 μ A). Confirm the indication on VTVM shows 5.3 mV (530 μ A).	
Bias Frequency		Same as above	Set BIAS SELECTOR to NORMAL position.	Confirm that frequency counter shows 85 kHz $\pm$ 5 kHz.	

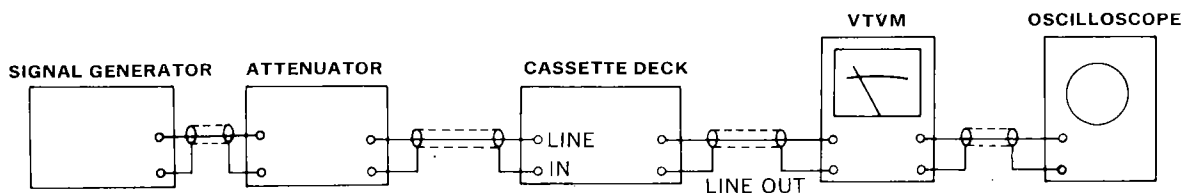


Fig. 7

SUBJECT	INPUT SIGNAL	CHECK POINT	SETTING	ADJUST FOR	REMARKS
REC Level Adj. HIGH (CrO ₂)	Use recording HIGH (CrO ₂) tape SCT-SA Feed 1 kHz, 70 mV (0 dB) from S.G. into LINE IN.	LINE OUT	Set BIAS & EQ SELECTOR to HIGH (CrO ₂) position. 1. Depress PAUSE, PLAY and REC button. 2. Adjust the MIC/LINE volume for obtaining 0 dB on the VU meters. 3. Push off the PAUSE button, then record the 1 kHz signal. 4. Play back the 1 kHz signal. 5. Confirm that the output levels on both channels are 400 mV $\pm$ 2 dB on VTVM	1. If not, turn VR5 (10 k Ω) for L-CH and VR6 (10 k Ω) for R-CH until output Level. 400 mV $\pm$ 2 dB on both channel are obtained. 2. Repeat this REC Level adj. until the indication on VTVM will be 400 mV $\pm$ 2 dB. (See Fig. 5)	
Frequency Response Adj. HIGH (CrO ₂)	Feed 1 kHz, 7 mV (-20 dB) and 10 kHz; 7 mV (-20 dB) from S.G. into LINE IN.	LINE OUT	Set BIAS & EQ SELECTOR to HIGH (CrO ₂) position. 1. Record the 1 kHz and 10 kHz signals from S.G. 2. Play back the 1 kHz and 10 kHz signals, then confirm that the difference of output levels between 1 kHz and 10 kHz are within 0 dB against that of 1 kHz.	1. If not, adjust VR7 (100 k Ω) for L-CH and VR8 (100 k Ω) for R-CH slightly until difference of output levels between 1 kHz and 10 kHz recorded are within 0 dB against that of 1 kHz (See Fig. 5).	As VR7 and VR8 are previously adjusted in step of Bias Adjustment, turn them slightly, if necessary. (See Fig. 5)

* Adjusting Points

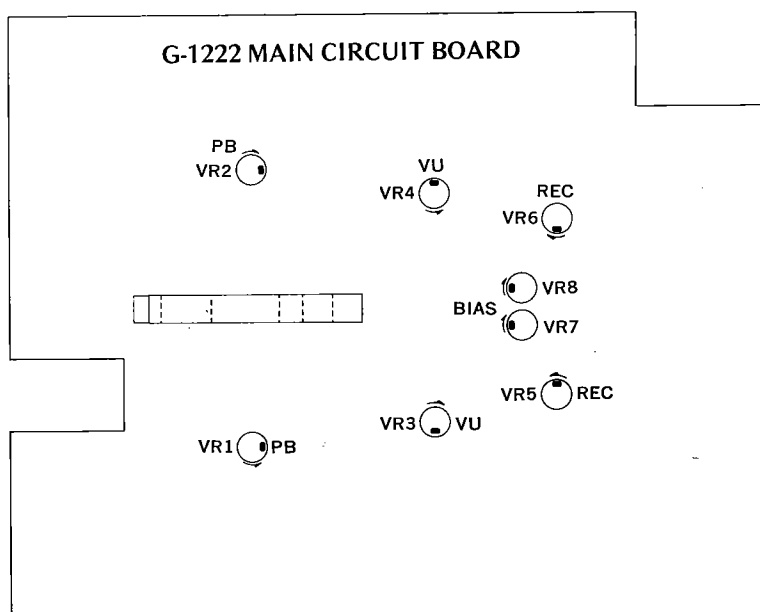


Fig. 5

By turning each adjustment VR accordingly to arrow, the levels of REC, PLAY METER, and BIAS CURRENT are increased.

* List of Sansui Test Tapes

Name of test tape	Recorded Frequency	Description
SCT-S3K	3 kHz	Speed Check, Wow & Flutter Check
SCT-L400N	400 Hz	Playback level and VU meter level adjustment
SCT-F1K	1 kHz	High frequency equalization check
SCT-F10KN	10 kHz	REC/PB head adjustment
SCT-SA [HIGH (CrO ₂)]		Recording bias adjustment
SCT-LH [NORMAL (LH)]		REC/PB level adjustment
SCT-CS (Fe-Cr)		Frequency response check
SCT-F40	40 Hz	Playback frequency response check

※TAPE SELECTOR
position

TAPE BANDE TONBAND	MODE	REC	PLAY
	TAPE SELECTOR	BIAS, EQUALIZER	EQUALIZER
AGFA	Hifi-Low-Noise SUPER	normal (LH)	normal (LH)
BASF	LN		
	LH		
	LH super		
FUJI FILM	FL		
	FX FX Duo		
MAXELL	LN		
	UD-XLI		
SCOTCH	LD		
	LH		
SONY	LOW-NOISE HF		
TDK	D		
	SD		
	ED		

TAPE BANDE TONBAND	MODE	REC	PLAY
	TAPE SELECTOR	BIAS, EQUALIZER	EQUALIZER
AGFA	STEREOCHROM	high (CrO ₂)	high (CrO ₂)
BASF	chromdioxid		
MAXELL	UD-XLI		
SONY	CR		
TDK	SA	Fe-Cr	Fe-Cr
BASF	ferrochrom		
SCOTCH	CLASSIC		
SONY	DUAD		
SCOTCH	Master	normal (LH)	high (CrO ₂)
TDK	AD	normal (LH)	normal (LH)
FUJI FILM	FX Jr		
MAXELL	UD		


4. PARTS LOCATION & PARTS LIST

1) G-1222 Main Circuit Board

(Stock No. 7620100) (SC-3100/3110)
(Stock No. 7620120) (SC-2100/2110)

Conductor Side

Since some of capacitors and resistors are omitted from parts lists in this Service Manual, refer to the common parts list for capacitors & resistors which was appended previously to each Sansui Manual.

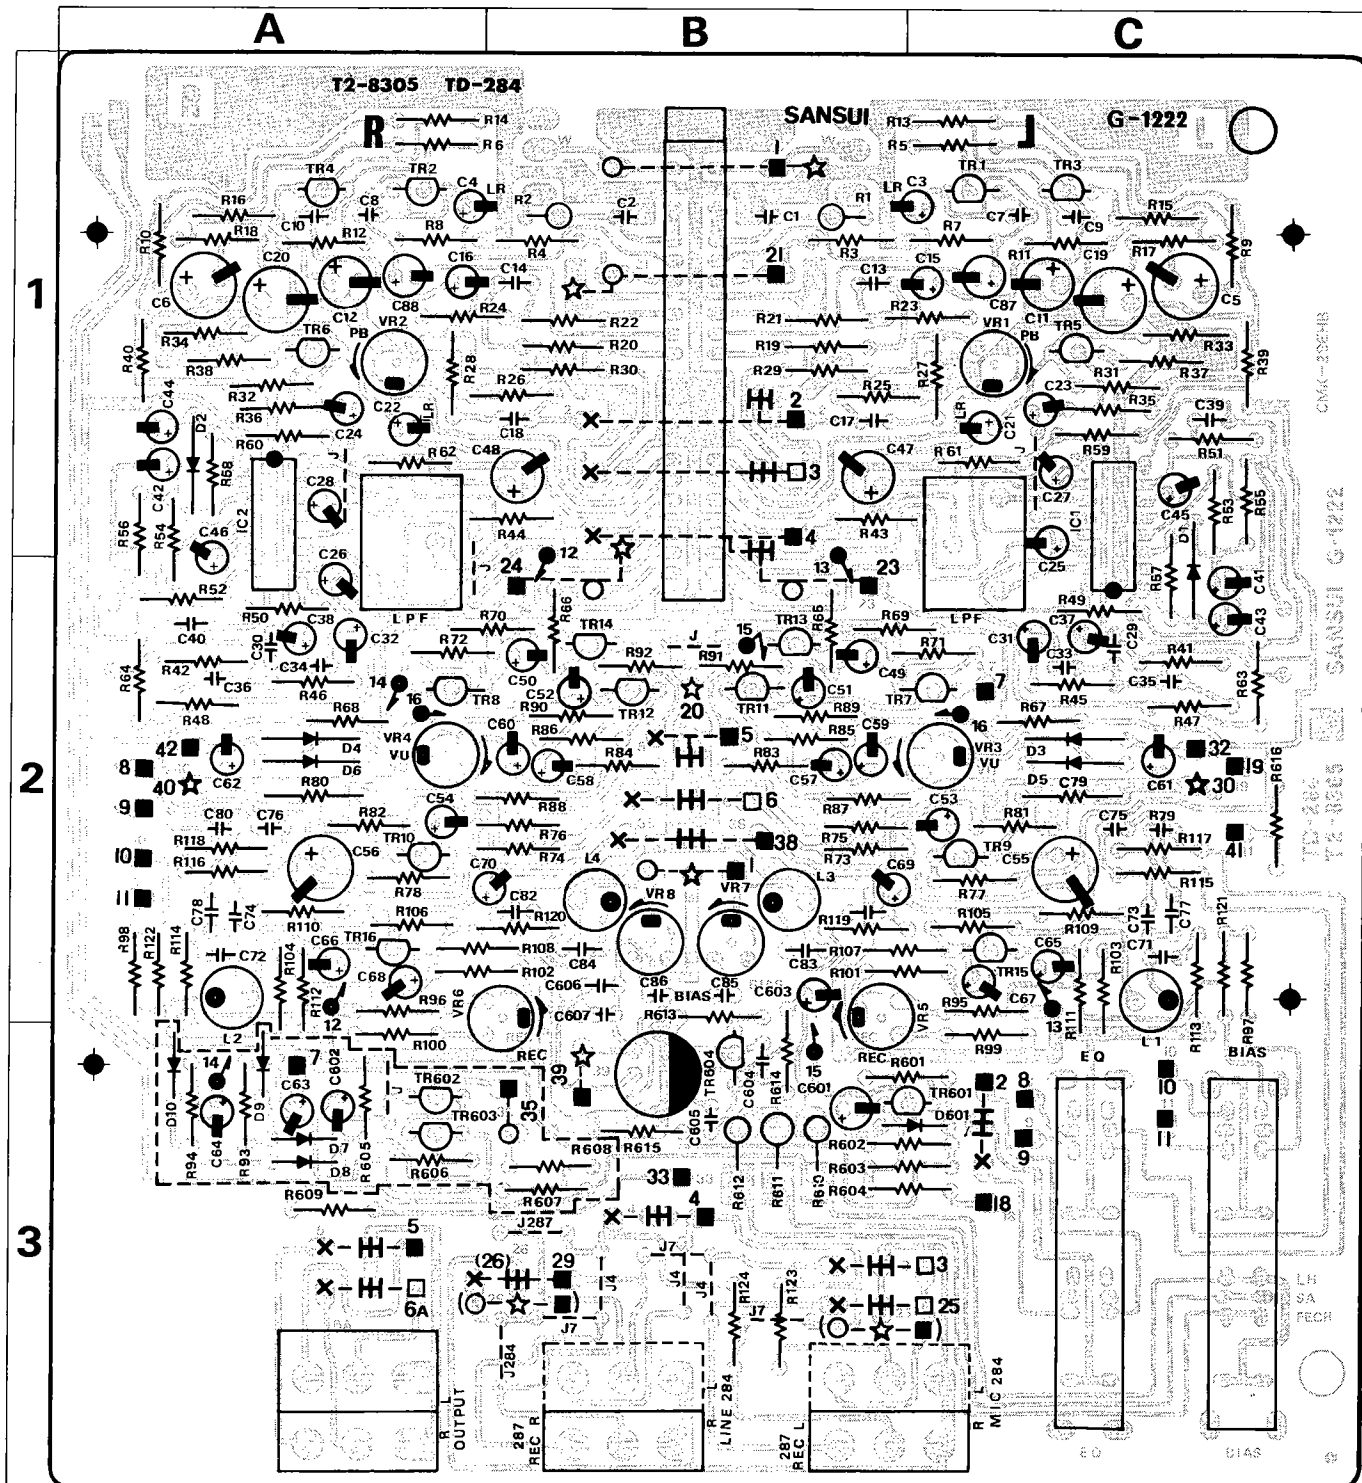

Abbreviations

C.R. : Carbon Resistor
S.R. : Solid Resistor
Ce.R. : Cement Resistor
M.R. : Metallized Film Resistor
F.R. : Fusing Resistor

N.I.R. : Non-Inflammable Resistor
M.C. : Mylar Capacitor
E.C. : Electrolytic Capacitor
BP.E.C. : Bi-Polar Electrolytic Capacitor

C.C. : Ceramic Capacitor
Mi.C. : Mica Capacitor
O.C. : Oil Capacitor
P.C. : Polystyrene Capacitor
T.C. : Tantalum Capacitor

Parts List <G-1222>


Parts No.	Stock No.	Description	Position
TR01~06	0360340	2SC1327 S, T	1A,C
TR07~16	0305156	2SC536 G	2B
	0306500	2SC828 R	
	0300272	2SA659 E	
TR601	0300810	2SA564	3C
	0305156	2SC536 G	
TR602, 603	0306500	2SC828 R	3A
	(SC-3100/3110)		
TR604	0305952, 3	2SC945 P, K	3B
IC 01, 02	0360340	NE545 B dolby I.C	1C, 1A
D 01~06	0311480	1S188AM	3A
D 01~06	0311490	0A90	
	0311160	1S2473	
	0311580	WG-713	
	(SC-3100/3110)		
D 601	0311160	1S2473	3C
	0311580	WG-713	
C 01, 02	0620331	330pF 50V P.C	1B
C 03, 04	0519008	47 μ F 25V	1C, 1A
C 21, 22	0519010	10 μ F 10V	1C, 1A
C 41, 42	0519113	0.1 μ F 50V	2C, 1A
C 43, 44	0519112	0.33 μ F 50V	2C, 1A
C 63, 64	0515478	0.47 μ F 50V	3A
C 65, 66	0519114	0.15 μ F 50V	2C, 2A
	0649003	150pF 50V	
C 87, 88	0510330	33 μ F 6.3V M.C.	2B

Parts No.	Stock No.	Description	Position
C 601	0512220	22 F 50V E.C	3B
C 604	0600336	0.0033 F 50V M.C	3B
R 69, 70	0107225	2.2M $\frac{1}{4}$ W	2B
R 79, 80	0103561	560 $\frac{1}{4}$ W	2C, 2A
R 117, 118	0107122	1.2k $\frac{1}{4}$ W	2C, 2A
R 610	0109006	470 $\frac{1}{4}$ W	3B
R 611	0109005	56 $\frac{1}{4}$ W	3B
R 612	0109007	560 $\frac{1}{4}$ W	3B
L 01, 02	4290700	Inductor 4.7mH, Peaking	2C, 2A
L 03, 04	4290320	Inductor 22mH, Bias Trap	2B
	4290260	Inductor 22mH, Bias Trap	
	4220680	OSC, Coil	
	0910351	Low Pass Filter	
VR01, 02	1035150	22k (B) Playback VR	1C, 1B
VR03, 04	1035130	10k (B) Meter VR	2C, 2A
VR05, 06	1035130	10k (B) Recording VR	2B
VR07, 08	1035190	100k (B) Bias VR	2B
VR09, 10	1000350	Volume 10k (A), Input	
	(SC-2100/2110)		
VR11, 12	1011140	Volume 10k (A) x 2, Output	
VR13, 14	1020290	Volume 20k (A) x 2, Line, Mic (SC-3100 only)	
S 01, 02	1131500	PB-REC Switch	
S 03	1190540	REC Leaf Switch	
S 04, 06	1171240	Lever Switch, Equalizer, Bias	


5) G-1223 Power Supply Circuit Board

(Stock No. 7502560 XX, UL, CSA) (SC-3100/3110)
7502564 BS, EU
(Stock No. 7502580 XX, UL, CSA) (SC-2100/2110)
7502584 BS, EU


Conductor Side

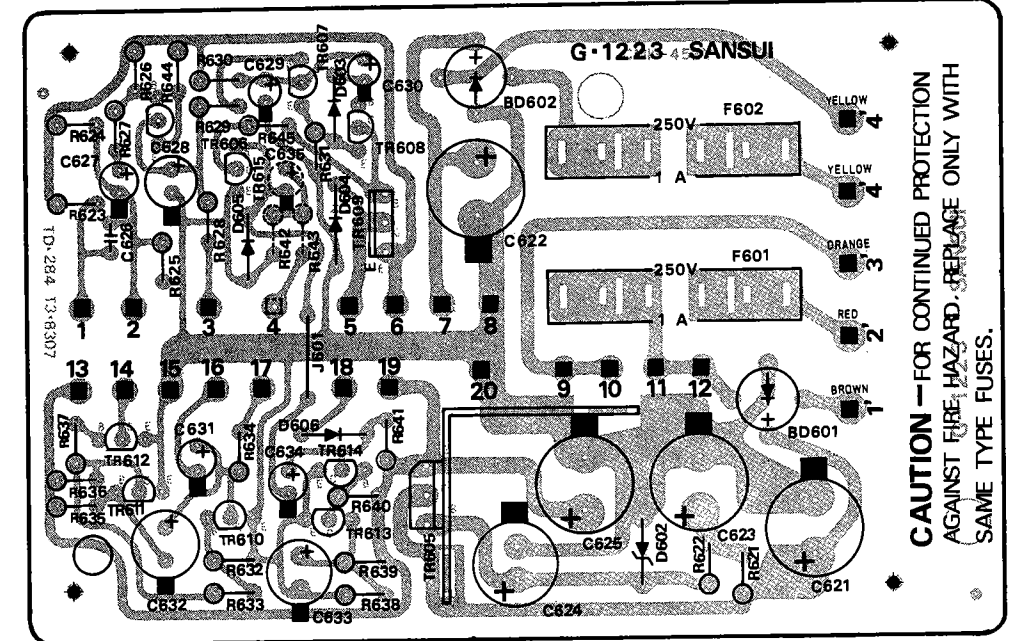


SCHEMATIC DIAGRAM

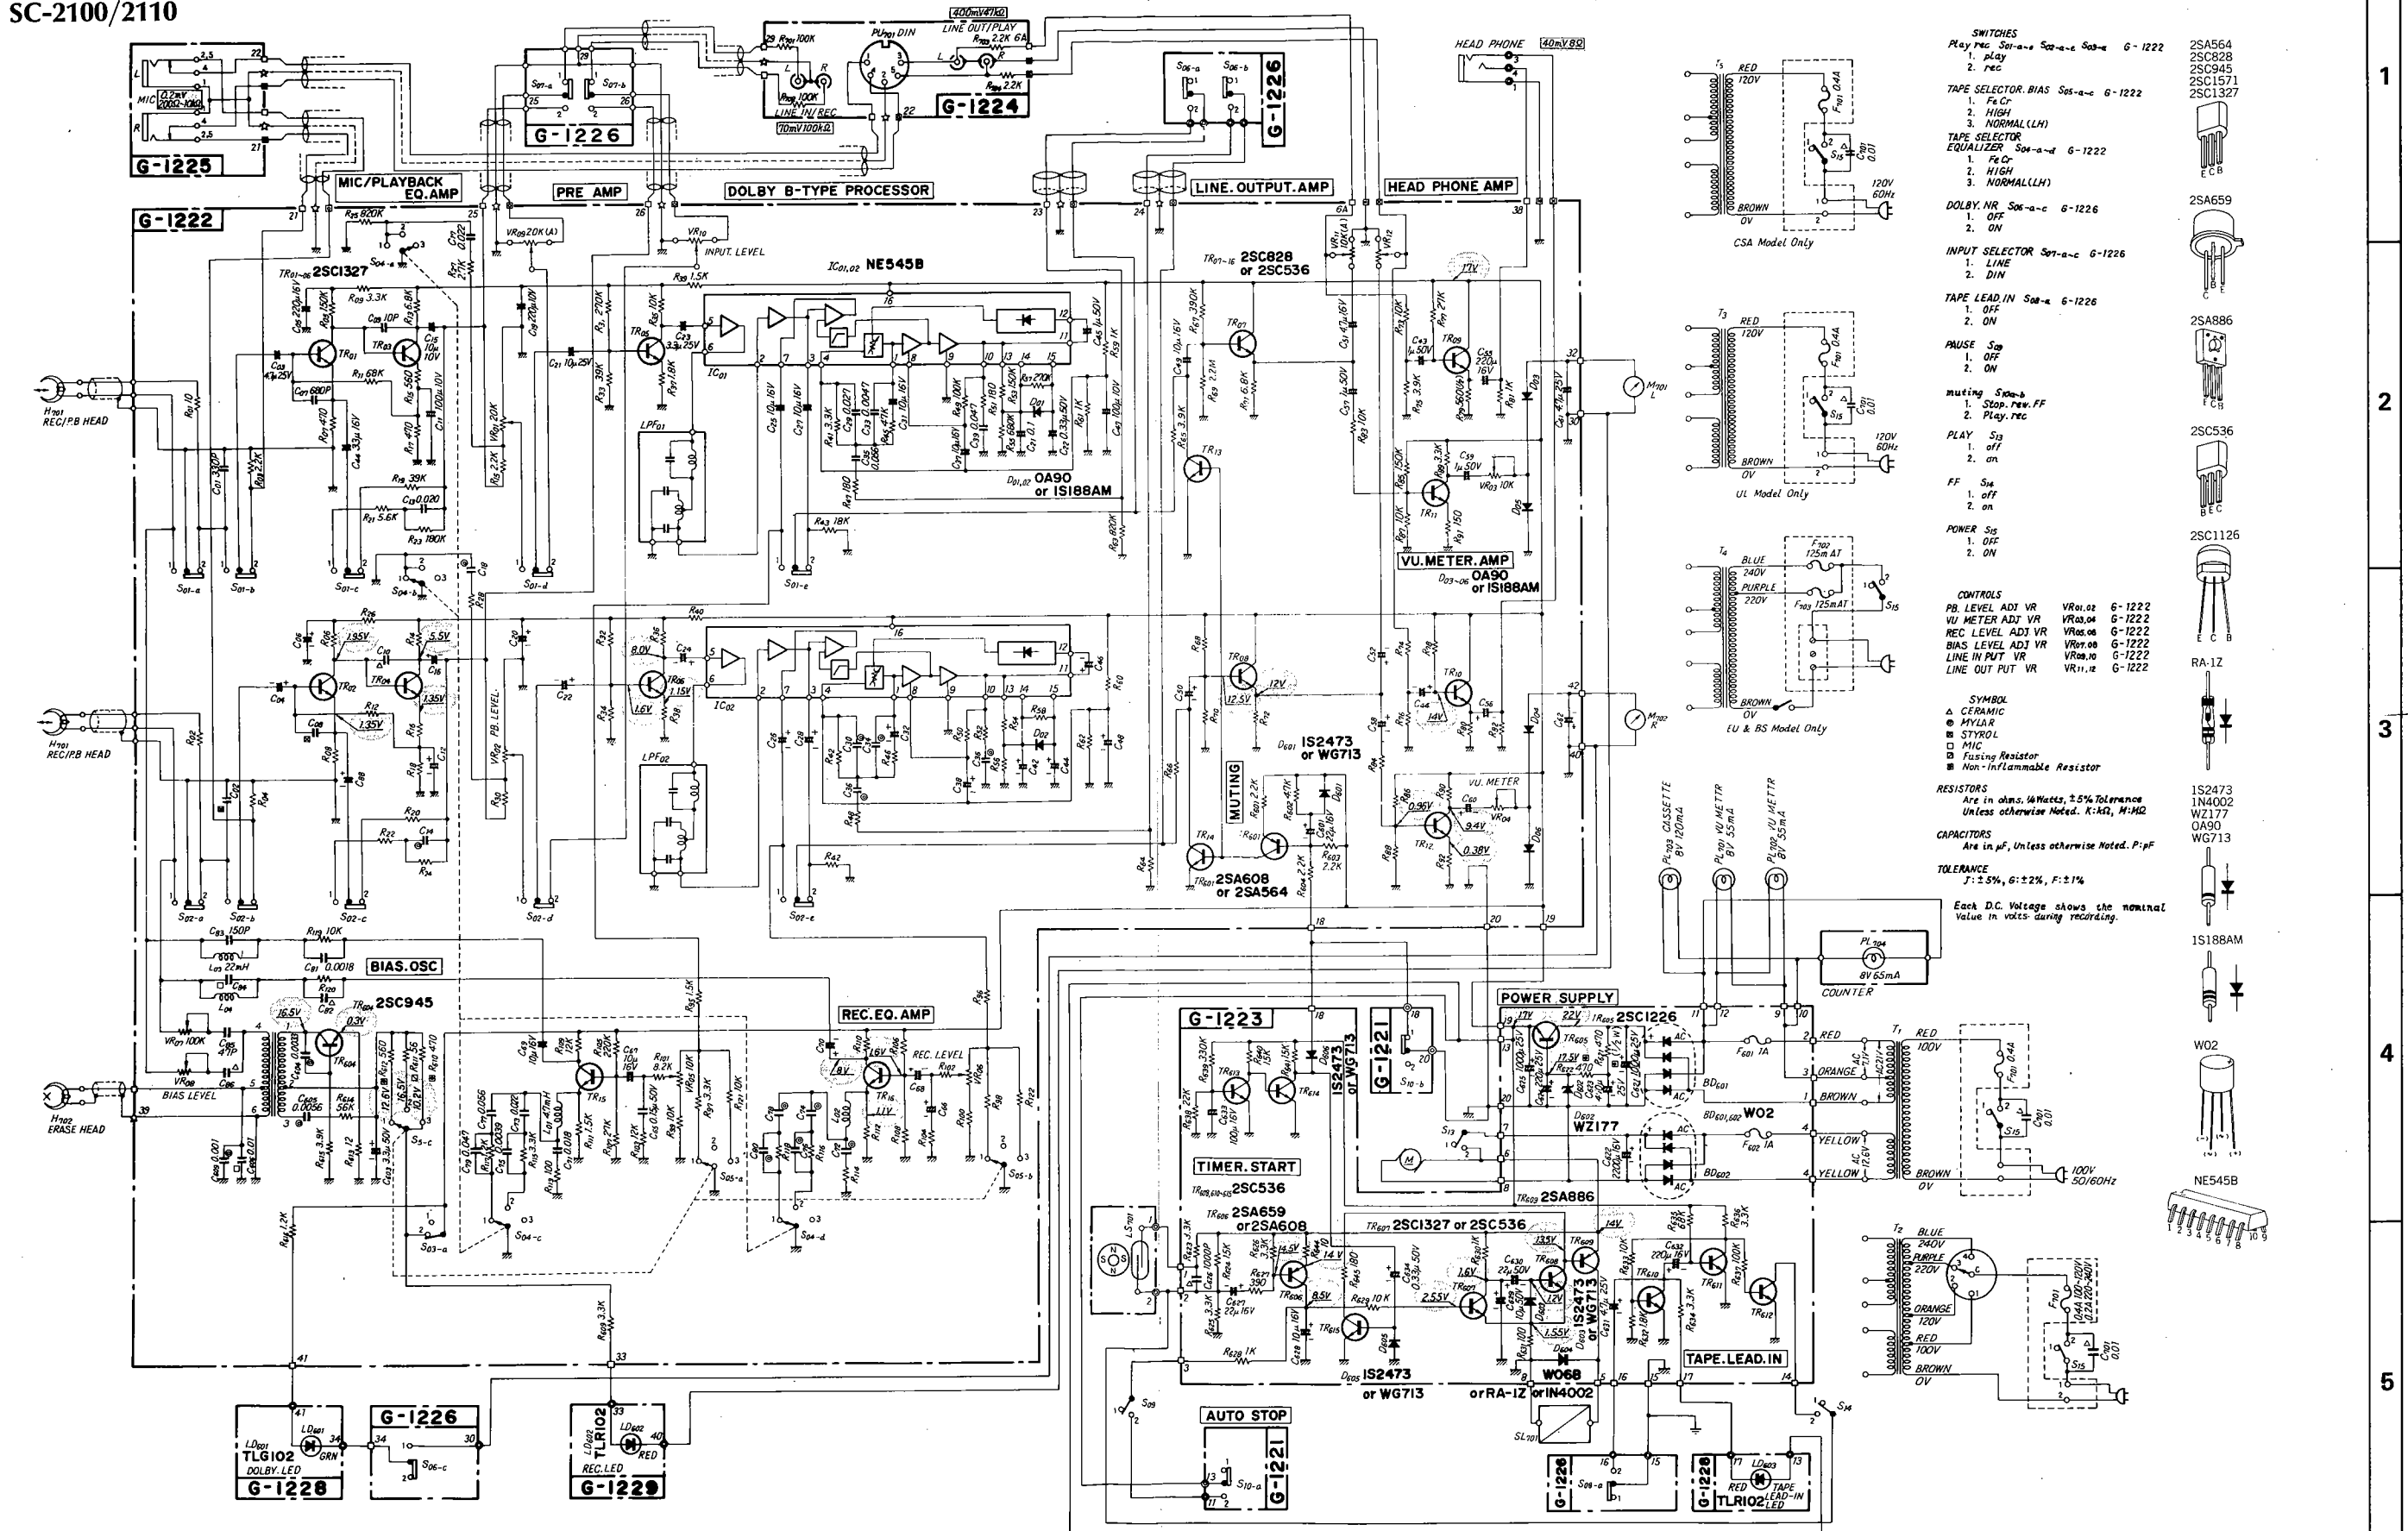

2) SC-3100/3110

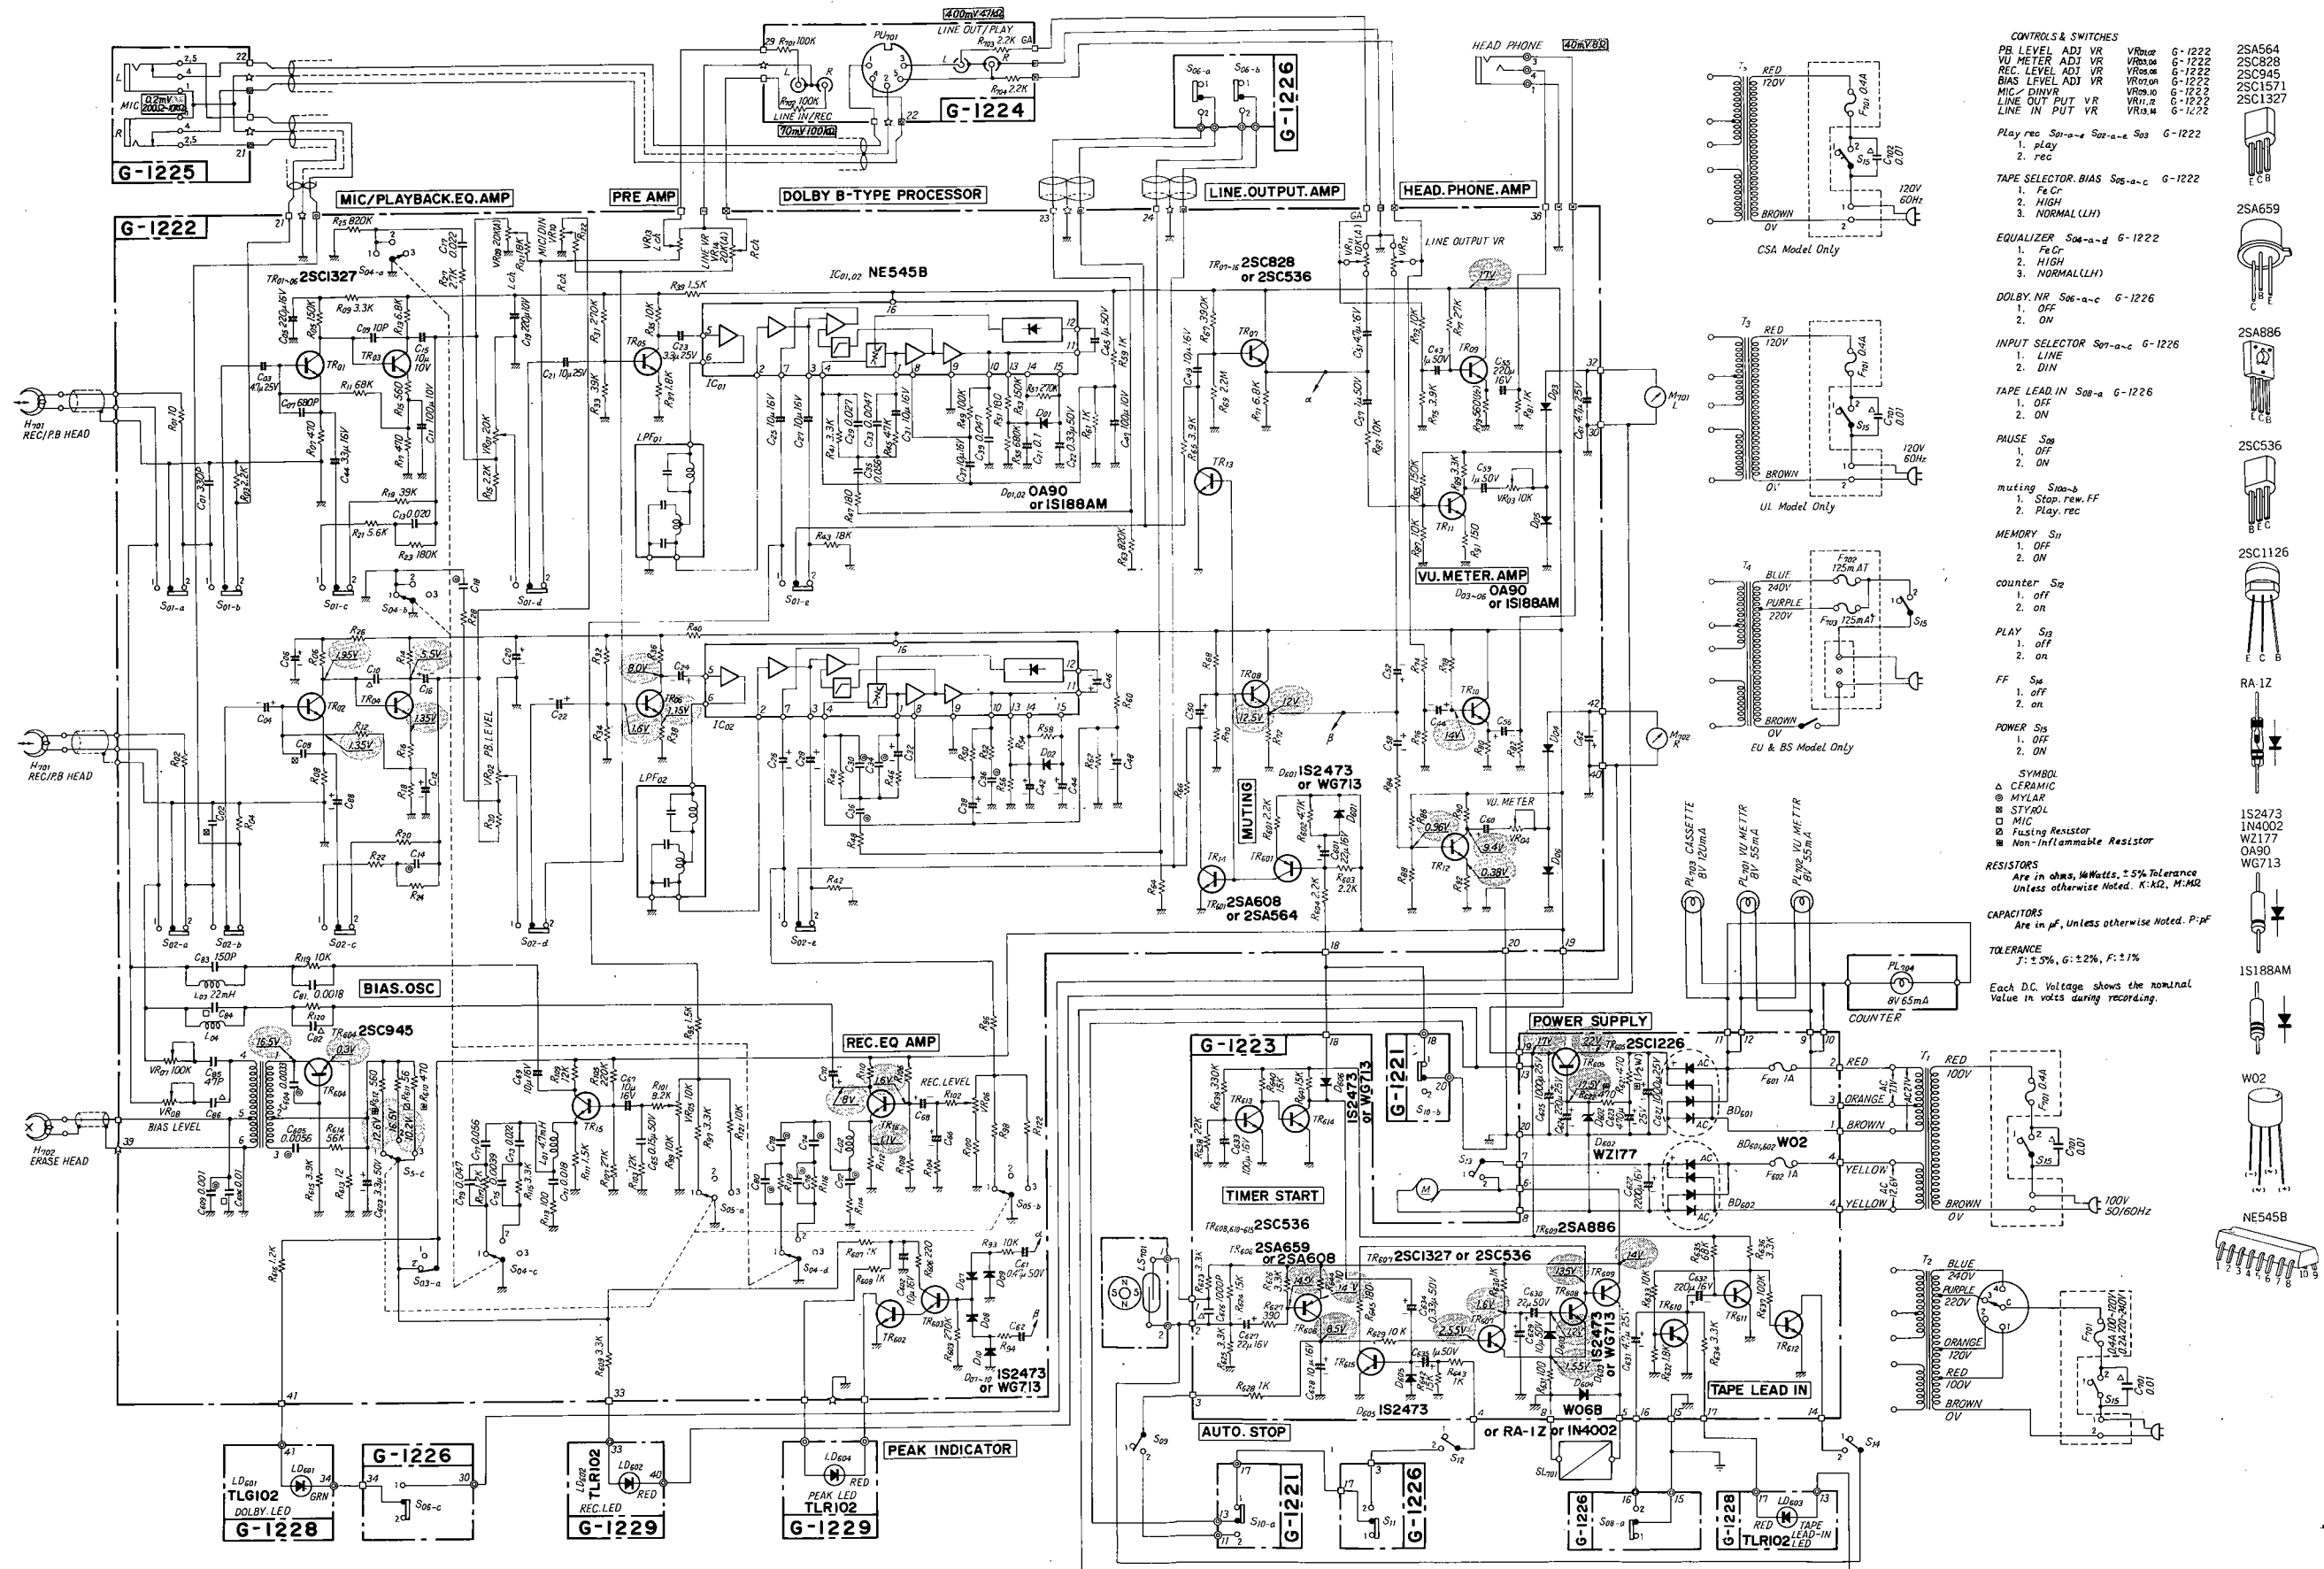

OTHER PARTS/Disassembly of the Mechanism Ass'y

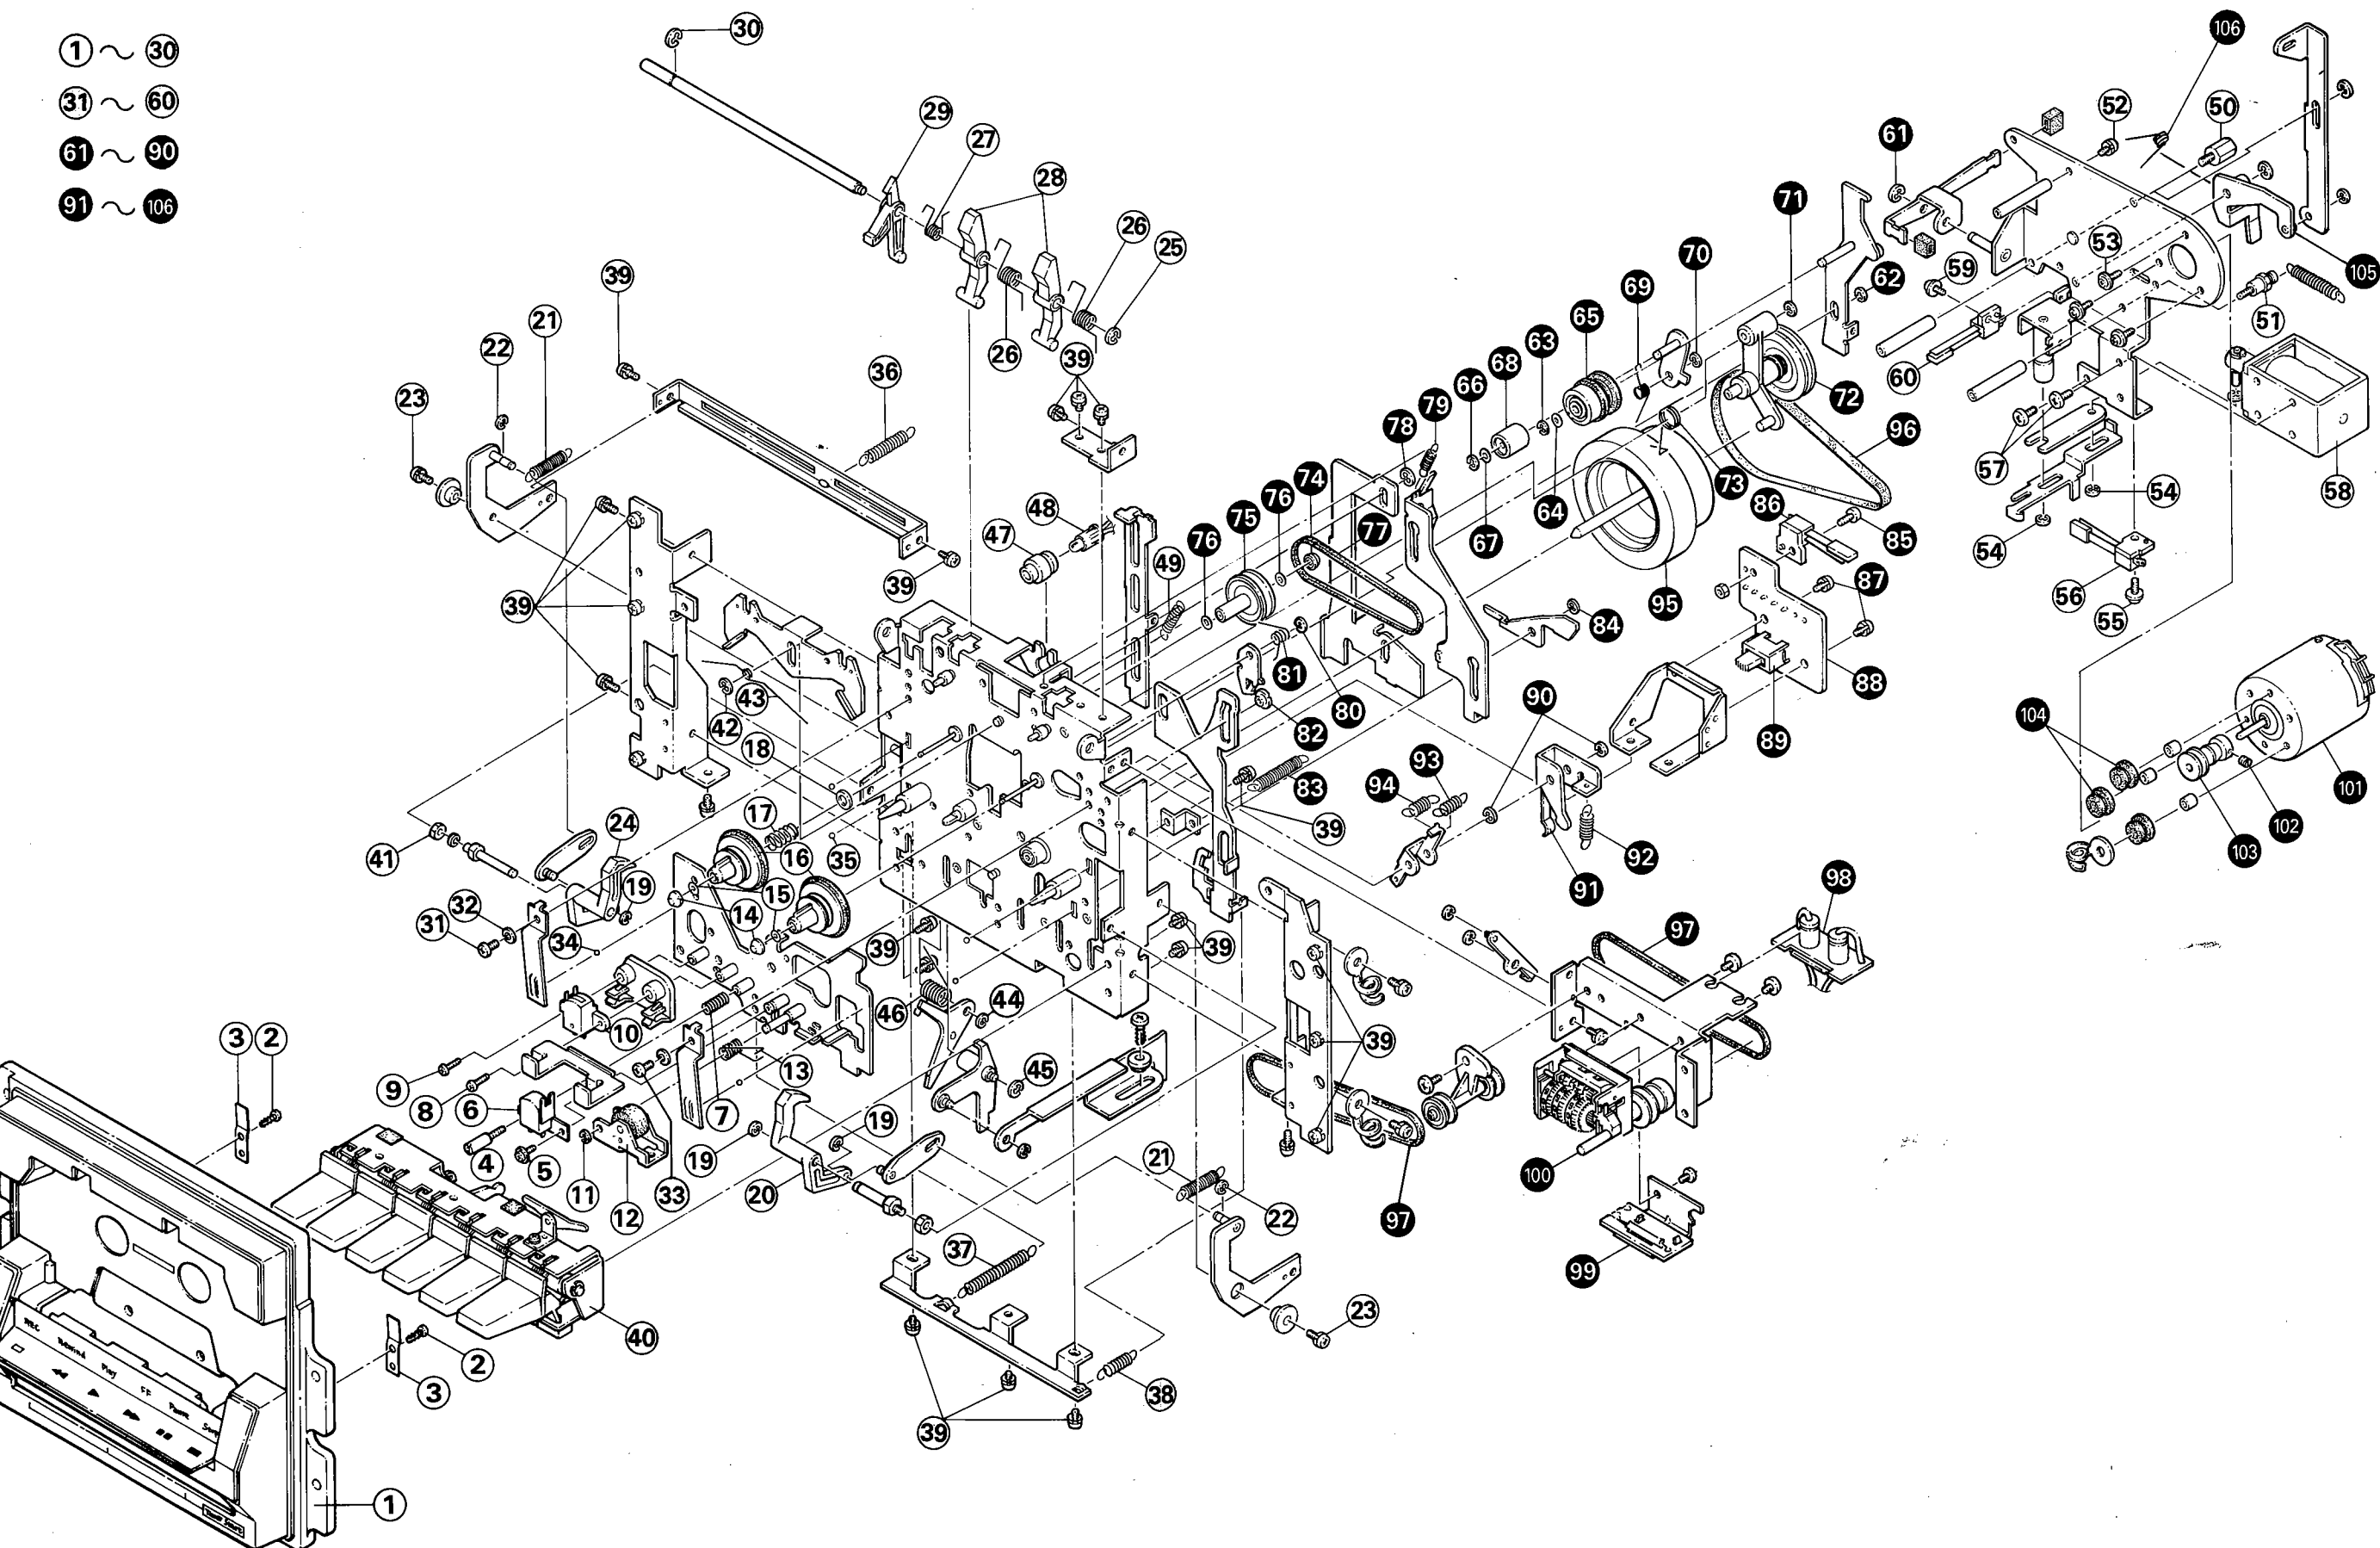

MECHANISM Ass'y (Stock No. 7160130 (SC-3100) (Stock No. 7160150 (SC-2100) (Stock No. 7160160 (SC-3110) (Stock No. 7160170 (SC-2110)

Parts List


Parts No.	Stock No.	Description	Parts No.	Stock No.	Description
1	7010170	Mechanism Cover Ass'y	54	5151011	E Type Washer, 2.5φ
2	5103502	P Type Screw, M2 x 6	55	5109920	W Type Screw, M2.6 x 5
3	6400150	Plate Spring	56	1190560	Leaf Switch, pause
4	5160350	SS Type Screw(brass), head adjustment	57	5103042	B Type Screw, M3 x 5
5	5103004	P Type Screw, M2 x 6	58	4340160	Plunger Solenoid
6	4536020	REC/P.B Head (SC-2100/2110)	59	5109920	W Type Screw, M2.6 x 5
7	4536030	REC/P.B Head (SC-3100/3110)	60	1190560	Leaf Switch, FF
8	6901100	Spring, head adjustment	61	5151005	E Type Washer, 3.2φ
9	5103044	P Type Screw, M2 x 8	62	5151011	E Type Washer, 2.5φ
10	5103004	P Type Screw, M2 x 6	63	5151002	E Type Washer, 2φ
11	4526010	Erase Head	64	5180410	P Type Washer, 2.5φ
12	4526020	Erase Head	65	7060170	Idler (A) Ass'y
13	5151002	E Type Washer, 2φ	66	5151001	E Type Washer, 1.5φ
14	7060160	Pinch Roller Arm Ass'y	67	5180430	P Type Washer, 2.1φ
15	6901180	Spring, pinch roller	68	7060180	Idler (B) Ass'y
16	5370090	Cap	69	6901200	Spring, idler (B) arm
17	5180380	P Type Washer, 1.8φ	70	5151002	E Type Washer, 2φ
18	7150080	Reel Hub (B) Ass'y	71	5151011	E Type Washer, 2.5φ
19	6901340	Spring, back tension	72	7060240	Tension Arm Ass'y
20	5180490	P Type Washer, 6.2φ	73	6901350	Spring, roller arm
21	5151011	E Type Washer, 2.5φ	74	5370090	Cap
22	5260390	Right Nail, cassette holder	75	7060200	Idler Ass'y
23	6901440	Spring, nail	76	5180420	P Type Washer, 1.6φ
24	5151002	E Type Washer, 2φ	77	6030140	Tension Belt
25	5107812	BSA Type Screw, M2.6 x 6	78	5151011	E Type Washer, 2.5φ
26	5260400	Left Nail, cassette holder	79	6901130	Spring, FF Lever
27	5151011	E Type Washer, 2.5φ	80	5151011	E Type Washer, 2.5φ
28	6901420	Spring, upper nail	81	6901160	Spring, pause rock plate
29	6901430	Spring, rec nail	82	5160300	Nut, M2.6
30	6500800	Upper Nail, cassette holder	83	6901370	Spring, plunger extraction
31	6500810	Rec Prevention Nail	84	5151011	E Type Washer, 2.5φ
32	5151004	E Type Washer, 3φ	85	5103025	P Type Screw, M2.6 x 8
33	5103022	P Type Screw, M2.6 x 4	86	1190550	Leaf Switch, motor
34	5121320	S Type Washer, 2.6φ	87	5107812	BSA Type Screw, M2.6 x 6
35	5103023	P Type Screw, M2.6 x 5	88	7595641	Muting Circuit Board Ass'y
36	6540040	Steel Ball 2.5φ	89	1110350	Slide Switch, muting
37	6540030	Steel Ball 2φ	90	5151002	E Type Washer, 2φ
38	6901450	Spring, arm bar	91	6500790	Plate Spring Lever, mute
39	6901120	Spring, brake lever rod	92	6901460	Spring, mute
40	6901190	Spring, pause lever rod	93	6901500	Spring, REWIND lever
41	5107811	BSA Type Screw, M2.6 x 4	94	6901170	Spring, FR lever
42	7050110	Control Button Ass'y (SC-2100/3100)	95	7040200	Flywheel Ass'y
43	7050130	Control Button Ass'y (SC-2110/3110)	96	6030130	Capstan Belt
44	5110241	Hex. Nut, M3	97	6030160	Counter Belt
45	5151011	E Type Washer, 2.5φ	98	7690500	Leaf Switch Ass'y
46	6901090	Spring, brake lever	99	0400610	Lamp, counter 8V 65mA
47	5151004	E Type Washer, 3φ	100	5430100	Tape Counter (SC-2100/2110)
48	5151011	E Type Washer, 2.5φ	101	5430090	Tape Counter (SC-3100/3110)
49	6901470	Spring, rec arm	102	4320520	FG Servo Motor (SC-3100/3110)
50	5600010	Lamp Tube	103	4320530	Electronically Controlled DC Motor (SC-2100/2110)
51	0400580	Lamp, 8V 120mA cassette half	104	5105502	SCT Type Screw, motor pulley
52	6901080	Spring, rec lever rod	105	6140120	Motor Pulley
53	5160310	Hex. Screw, M2.6	106	5500540	Flowting Rubber, motor
	5160330	Hex. Screw		7050150	Pause lock release arm Ass'y
	5107812	BSA Type Screw, M2.6 x 6		6901060	Spring, Paus lock release arm Ass'y
	5107911	P Type Screw, M2.6 x 7			
	5120121	P Type Washer, 2.6φ			

Abbreviations


1. Pan Head Tapping ScrewPT Type	5. Pan Head SEMS B ScrewPSB Type	9. Flat Counter Sunk Wood ScrewFC Type	13. Binding Head SEMS B ScrewBSB Type	17. Toothed Lock Washer (External)TLE Washer
2. Washer Head Tapping ScrewWT Type	6. Binding Head SEMS F ScrewBSF Type	10. Round Head Wood ScrewRH Type	14. Spring WasherS Type	18. Wave Washer
3. Pan Head ScrewP Type	7. Binding Head ScrewB TYPE	11. Hex. Socket SetscrewSC Type	15. Plain WasherP Type	19. Hexagon Nut H Type Nut
4. Pan Head SEMS A ScrewPSA Type	8. Flat Counter Sunk Head ScrewF Type	12. Slot Type SetscrewSS Type	16. Retaining Ring (E Washer).....E Type	

2) Front View

• SC-3100

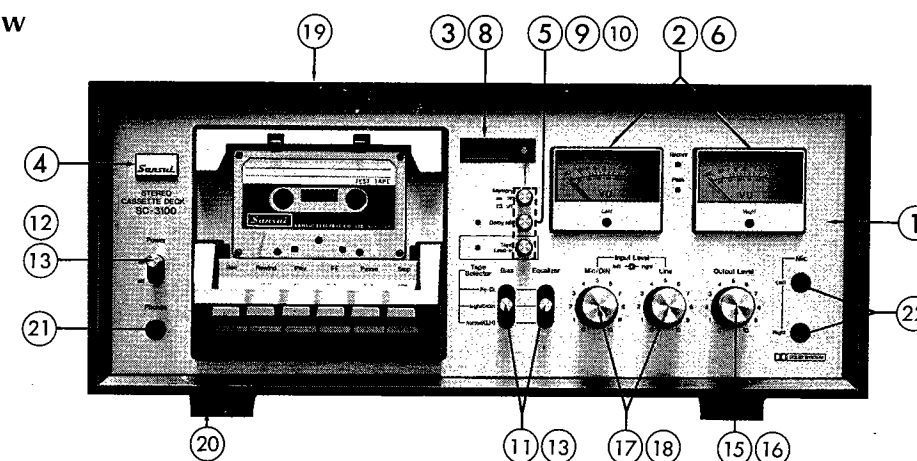

• SC2100

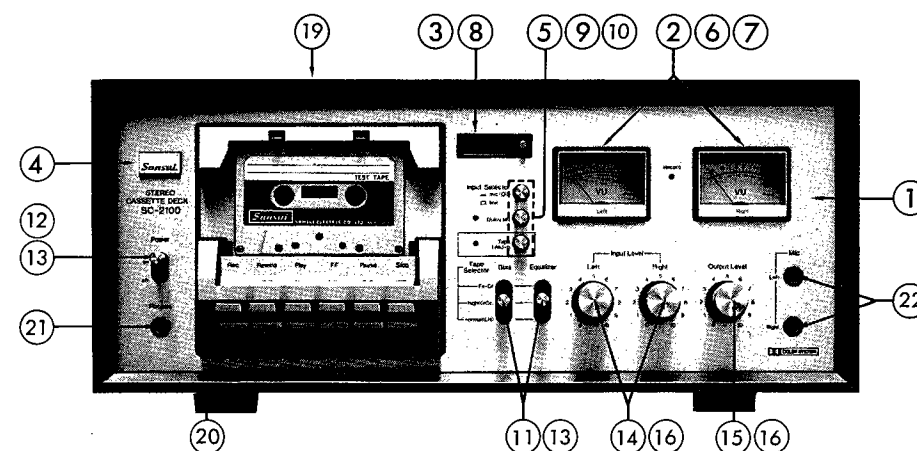


Parts List

Parts No.	Stock No.	Description	Parts No.	Stock No.	Description
1	7000170	Front Panel Ass'y (SC-3100)	13	7100010	Knob, Lever Switch (SC-2100/3100)
	7000200	Front Panel Ass'y (SC-3110)		5320520	Knob, Lever Switch (SC-2110/3110)
	7000180	Front Panel Ass'y (SC-2100)			
	7000210	Front Panel Ass'y (SC-2110)			
	5300780	Front Panel (SC-3100)	14	VR09, 10	Volume 10kΩ (A) Input Level (SC-2100/2110)
	5301140	Front Panel (SC-3110)			
	5300800	Front Panel (SC-2100)	15	VR11, 12	Volume 10kΩ (A) x 2 Output Level (SC-2100/2110)
	5301150	Front Panel (SC-2110)			
2	5060330	Meter Frame	16	5310290	Knob, Input-Output Volume (SC-2100/3100)
3	5060280	Counter Frame		5310380	Knob, Input-Output Volume (SC-2110/3110)
4	5332080	Sansui Mark			
5	6906410	Push Button Guide	17	VR09, 10, VR13, 14	Volume, 20kΩ (A) x 2 Line, Mic, (SC-3100/3110)
6	4301220	VU Meter (SC-2100/2110)			
	4301210	VU Meter (with Lamp) (SC-3100/3110)	18	5318300	Knob, Line Mic Volume (outer) (SC-3100)
7	0400590	Lamp 8V 120mA, VU Meter (SC-2100/2110)		5310390	Knob, Line Mic Volume (outer) (SC-3110)
8	4330090	Tape Counter Ass'y (SC-3100/3110)		5310310	Knob, Line Mic Volume (inner) (SC-3100)
	5430100	Tape Counter Ass'y (SC-2100/2110)		5310400	Knob, Line Mic Volume (inner) (SC-3110)
9	5320450	Push Button Ass'y (SC-2100/3100)			
	5320530	Push Button Ass'y (SC-2110/3110)	19	5740230	Wood Case (SC-2100/3100)
10	6906410	Spring, Push Button		5000050	Bonnet (SC-2110/3110)
11	1171240	Lever Switch, Equalizer, Bias	20	5510120	Leg
12	1171670	Lever Switch, Power XX		5140424	RW Type Screw 3.1 x 14, Leg
	1171680	Lever Switch, Power UL, CSA	21	2430290	Head Phone Jack
	1171660	Lever Switch, Power BS, EU	22	2430330	Mic Jack

Parts No.	Stock No.	Description
	{ 1171670	Power Switch XX
	{ 1171680	Power Switch UL, CSA
	{ 1171660	Power Switch BS, EU
	0400580	Lamp, 8V 120mA cassette half
	6901490	REC Plate Spring
	5300750	Rear Panel XX, UL, CSA
	5300790	Rear Panel BS, EU
	2230150	Ground Terminal
	7595650	Input-Output Jack Ass'y
	2430330	Mic Jack
	6901480	Spring, REC lever rod
F03	{ 0431331	Fuse 0.4A 250V (AC100V ~ 120V) XX, UL, CSA
	{ 0431241	Fuse 0.2A 250V (AC200V ~ 240V) XX
	0430950	Fuse 125mA 250V EU, BS

No.	Parts No.	Stock No.	Description
10		3800010	AC Cord XX, UL, CSA
		3800121	AC Cord EU, BS
11		3910600	Strain releaf
12	PT01	4002710	Power Transformer XX
		4002712	Power Transformer UL, CSA
		4002714	Power Transformer EU, BS
13		2410820	Voltage Selector Plug XX
		2411250	Voltage Selector Socket XX
		2411240	Voltage Selector EU, BS
14	C701	0659801	Line bypass capacitor XX, UL
		5616220	Capacitor cover, C707 XX, UL
	C702	0635107	Line bypass capacitor CSA
		5616340	Capacitor cover C702 CSA

Parts No.	Stock No.	Description
1	9010110	Dust Cover Case
2	9110100	Polyethylene Bag
3	{ 9020020	Stylofoam Packing (SC-2100/3100)
	{ 9020040	Stylofoam Packing (SC-2110/3110)
4	{ 9000420	Carton Case (SC-2100)
	{ 9000450	Carton Case (SC-2110)
	{ 9000410	Carton Case (SC-3100)
	{ 9000440	Carton Case (SC-3110)
5	5996080	Curl Stopper

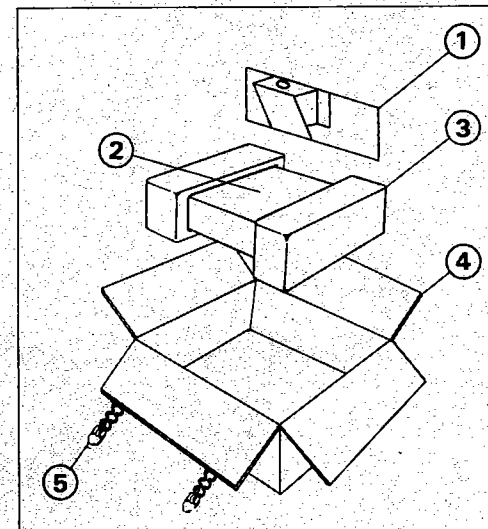

Parts No.	Stock No.	Description
	9202850	Operating Instructions (SC-3100)
	9202860	Operating Instructions (SC-3110)
	9202820	Operating Instructions (SC-2100)
	9202830	Operating Instructions (SC-2110)
	9230180	Schematic Diagram (SC-3100/3110)
	9230190	Schematic Diagram (SC-2100/2110)
	9430031	Head Cleaning Pen
	5010070	Dust Cover
	3810280	PJP Cord

Sansui

SANSUI ELECTRIC COMPANY LTD.: 14-1, Izumi 2-chome, Suginamiku, Tokyo 168 Japan PHONE: (03) 323-1111/TELEX:232-2076

Printed in Japan (876230M)