




QUICK START GUIDE

FEATURE OVERVIEW

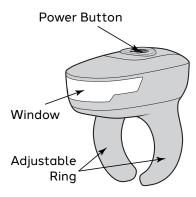

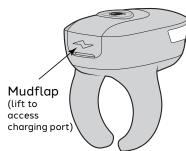

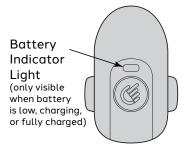

HOW TO CHARGE

Locate the mudflap.




Open the mudflap to expose the charging port.




Insert USB-C charging cable, ensuring it is plugged into a power source.

BATTERY INDICATORS

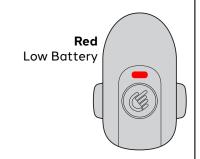




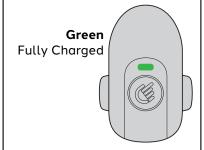


EXPANDING THE RING

Grip each prong with your thumb and index finger.

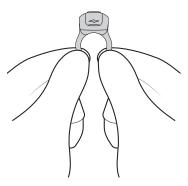

Gently pull outward, expanding the ring to your desired size.

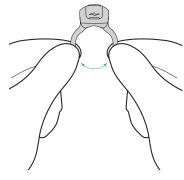

CONTRACTING THE RING

Brace the top of DEX with one hand while holding the prongs with the other.




Copyright © 2024, Wild M Brands, LLC All Rights Reserved



QUICK START GUIDE

FITTING AND WEARING


After finding your desired ring size, slide ring over any finger or thumb.

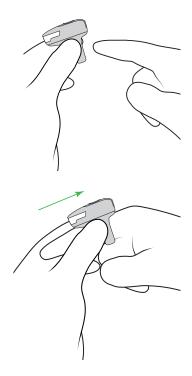

NOTE: DEX FINGERLIGHT™ can be worn on any finger or thumb in any position.


TIGHTENING THE FIT

To tighten the fit of the ring, press the tips of the prongs into your finger or thumb.

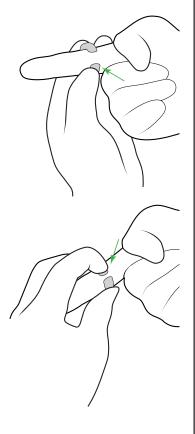

FOR SMALL FINGERS

If you are having difficulty fitting the ring over your finger, overlap the prongs to create a tighter fit.

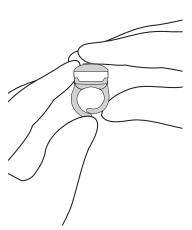


NOTE: Avoid creasing or kinking the prongs when overlapping.

ONE-HANDED USE

For one-handed use, position the DEX FINGERLIGHT™ on the side of your index finger toward your thumb. Use your thumb to operate

the button.

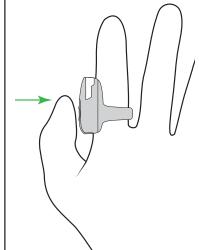

NOTE: One-handed use can also be achieved if worn on the top of the thumb, the inside of the thumb, or the underside of any finger, making DEX FINGERLIGHT™ a versatile tool for all of your needs.

MODE MEMORY

Select your preferred light mode.

Wait 3 seconds...

The next button press will turn the light off, without the need to cycle through the other modes.

The next button press after that will turn the light back on to the same setting.

Copyright © 2024, Wild M Brands, LLC

All Rights Reserved