


# TOSHIBA

## MICROWAVE OVEN INSTRUCTION MANUAL

ML2-EC09SAIT(BS)

Please review this instruction manual before operating.

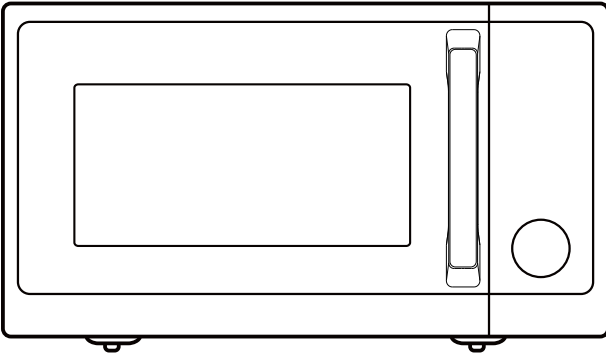

# CONTENTS

## PRODUCT SAFETY

Precautions to avoid possible exposure to excessive microwave energy .....	EN-01
Important safety instructions .....	EN-03
Grounding instructions.....	EN-07
Radio interference .....	EN-09
Utensils.....	EN-10
Materials you can use in microwave oven .....	EN-11
Materials can not be used in microwave oven .....	EN-13

## PRODUCT SETTING

Setting up your oven .....	EN-14
----------------------------	-------

## INSTRUCTION FOR USE

Before using for the first time .....	EN-17
Operation .....	EN-18
1. Clock setting.....	EN-19
2. Microwave cooking .....	EN-19
3. Kitchen timer setting .....	EN-20
4. Child lock function .....	EN-21
5. Eco function .....	EN-21
6. Broil cooking .....	EN-21

7. Combination cooking .....	EN-22
8. One-step microwave .....	EN-23
9. Convection without preheat.....	EN-23
10. Convection with preheat .....	EN-24
11. Auto menu .....	EN-24
12. Air fry.....	EN-25
13. Pro defrost.....	EN-26

<b>CLEANING</b> .....	EN-29
-----------------------	-------

## **MAINTENANCE**

Trouble shooting.....	EN-31
One year limited warranty .....	EN-33



### **NOTE**

**BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. BE SURE TO SAVE THIS BOOKLIST FOR FUTURE REFERENCE.**

# PRODUCT SAFETY


## PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

---

- (a). Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy.

It is important not to defeat or tamper with the safety interlocks.

- (b). Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

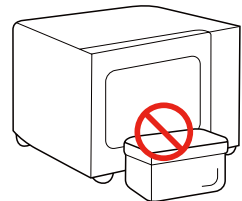

- (c). Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the:

- (1). DOOR (bent)
- (2). HINGES AND LATCHES (broken or loosened)
- (3). DOOR SEALS AND SEALING SURFACES

- (d). The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

## SPECIFICATIONS

---

MODEL	ML2-EC09SAIT(BS)
RATED VOLTAGE	120V~ 60Hz
RATED INPUT POWER(MICROWAVE)	1400W
RATED OUTPUT POWER(MICROWAVE)	900W
RATED INPUT POWER (BROIL)	1000W
RATED INPUT POWER (CONVECTION)	1800W
PRODUCT SIZE	19.47 x 17.60 x 11.47 inch
NET WEIGHT	28.66 lbs

---



### NOTE

All pictures in this manual are for illustrative purposes only; these may be slightly different from the purchased equipment, please refer to the actual product.

# IMPORTANT SAFETY INSTRUCTIONS



## WARNING

When using electrical appliances basic safety precautions should be followed, including the following. To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy.



Read all instructions before using the appliance.



Read and follow the specific:

**"PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY"** found on page 1.



This appliance must be grounded. Connect only to properly grounded outlet. See **"GROUNDING INSTRUCTIONS"** found on page 7.




Install or locate this appliance only in accordance with the provided installation instructions.



As with any appliance, close supervision is necessary when used by children.




When cleaning surfaces of door and oven that comes together on closing the door, use only mild, nonabrasive soaps, or detergent applied with a sponge or soft cloth.

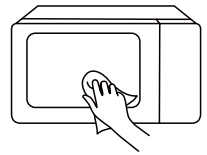

Keep cord away from heated surface.

# IMPORTANT SAFETY INSTRUCTIONS


 Liquids, such as water, coffee, or tea are able to overheat beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present.

**THIS COULD RESULT IN VERY HOT LIQUID SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A UTENSIL IS INSERTED INTO THE LIQUID.** To reduce the risk of injury to persons:


1. Do not overheat the liquid.
2. Stir the liquid both before and halfway through heating it.
3. Do not use straight-sided containers with narrow necks.
4. After heating, allow the container to stand in the microwave oven for a short time before


removing the container.

5. Use extreme care when inserting a spoon or other utensil into the container.

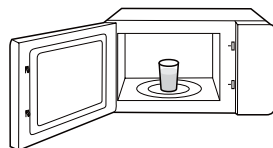


---


 Oversized food or oversized metal utensils should not be inserted in a microwave/toaster oven as they may create a fire or risk of electric shock.

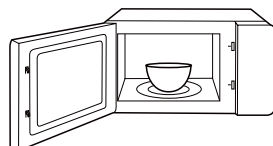


---


 This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair, or adjustment.


# IMPORTANT SAFETY INSTRUCTIONS


 To reduce the risk of fire in the oven cavity:


1. Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
2. Remove wire twist-ties from paper or plastic bag before placing bag in oven.
3. If material inside of the oven ignites, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
4. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.

 Some products such as whole eggs and sealed containers, for example, closed glass jars are able to explode and should not be heated in this oven.

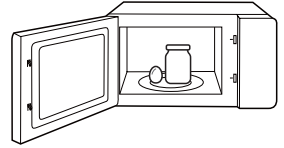

 Do not store this appliance outdoors. Do not use this product near water - for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar location.

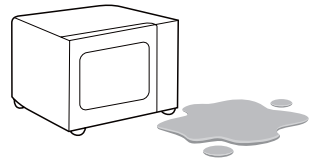

 Do not immerse cord or plug in water or any other liquid.




 



# IMPORTANT SAFETY INSTRUCTIONS

 Do not let cord hang over edge of table or counter.


---

 Do not use paper products when appliance is operated in the toaster mode.





 Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.

---


 Do not cover or block any openings on the appliance.

---


 Do not clean with metal scouring pads. Pieces can burn off the pad and touch electrical parts involving a risk of electric shock.


 Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.

---

 Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.

---

 Do not cover racks or any other part of the oven with metal foil. This will cause over-heating of the oven.

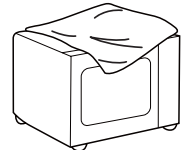

## SAVE THESE INSTRUCTIONS

# GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

**WARNING** - Improper use of the grounding can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounded plug, and 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.



**DANGER**

Electric Shock Hazard:

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

# GROUNDING INSTRUCTIONS



## WARNING

### Electric Shock Hazard:


Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
3. If a long cord or extension cord is used:
  - (1). The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
  - (2). The extension cord must be a grounding-type 3-wire cord.
  - (3). The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

# RADIO INTERFERENCE

1. Operation of the microwave oven may cause interference to your radio, TV or similar equipment.
2. When there is interference, it may be reduced or eliminated by taking the following measures:
  - (1).Clean door and sealing surface of the oven.
  - (2).Reorient the receiving antenna of radio or television.
  - (3).Relocate the microwave oven with respect to the receiver.
  - (4).Move the microwave oven away from the receiver.
  - (5).Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

**This device complies  
with part 18 of the FCC  
Rules.**

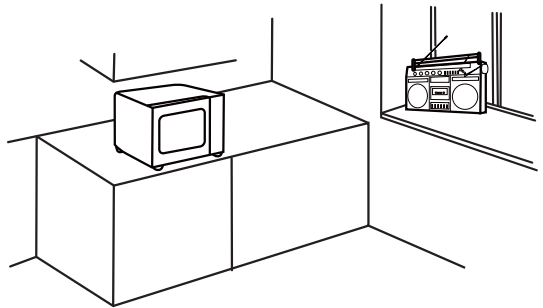

# UTENSILS



## CAUTION

### Personal Injury Hazard:


Tightly-closed utensils could explode. Closed containers should be opened and plastic pouches should be pierced before cooking.

See the instructions on "**Materials you can use in microwave oven or to be avoided in microwave oven.**"

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.


### Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (8.5 oz) along with the utensil in question.
2. Cook on maximum power for 1 min.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 min cooking time.

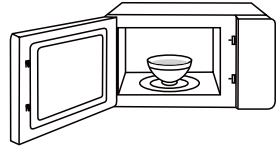





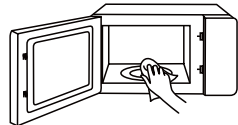





 

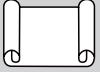





## NOTE







KEEP THE CAVITY CLEAN








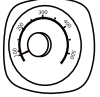


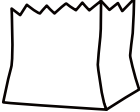


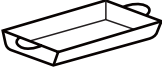


# MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
 Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break. 
 Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes. 
 Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break. 
 Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes. 
 Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape. 
 Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking. 
 Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only. 
 Parchment paper	Use as a cover to prevent splattering or a wrap for steaming. 
 Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package. 

# MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
 <p data-bbox="136 443 278 470">Plastic wrap</p>	<p data-bbox="349 363 900 446">Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.</p> 
 <p data-bbox="125 593 278 619">Thermometers</p>	<p data-bbox="349 539 889 566">Microwave-safe only (meat and candy thermometers).</p> 
 <p data-bbox="147 734 267 761">Wax paper</p>	<p data-bbox="349 667 824 721">Use as a cover to prevent splattering and retain moisture.</p> 

# MATERIALS CAN NOT BE USED IN MICROWAVE OVEN

UTENSILS	REMARKS
 Aluminum tray	May cause arcing. Transfer food into microwave-safe dish. 
 Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish. 
 Metal or metal trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing. 
 Metal twist ties	May cause arcing and could cause a fire in the oven. 
 Paper bags	May cause a fire in the oven. 
 Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature. 
 Wood	Wood will dry out when used in the microwave oven and may split or crack. 




# PRODUCT SETTING


## SETTING UP YOUR OVEN

### NAMES OF MICROWAVE OVEN PARTS AND ACCESSORIES


Remove the oven and all materials from the carton and oven cavity.

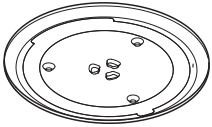


**Glass Turntable**

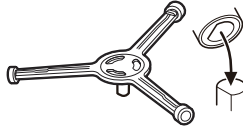


**Turntable Ring Assembly**

 


**Cookbook**

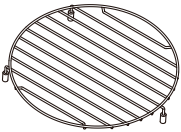

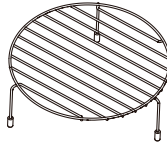

**Lower Wire Rack**  
( Can not be used in microwave function and must be placed on the glass turntable )

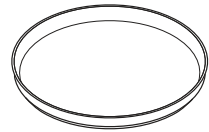


**Higher Wire Rack**  
( Can not be used in microwave function and must be placed on the glass turntable )



**Air Fry Tray**  
( Cannot be used in microwave function and can be placed on the wire rack )

		Air Fry Tray	Wire Rack
Mode			
Microwave		NO	NO
Broil		YES	YES
Air fry		YES	YES
Convection		YES	YES
Combi.	C-1 (Convection+Microwave)	YES	YES
	C-2 (Broil+Microwave)	YES	YES

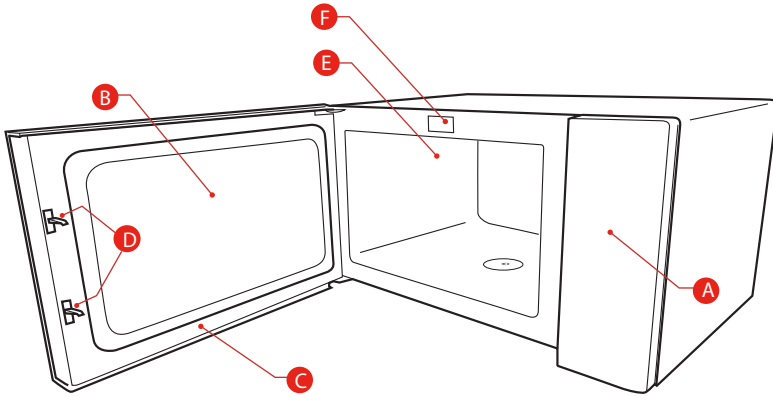

- A. Control panel
- B. Observation window
- C. Door assembly

- D. Safety interlock system
- E. Oven cavity
- F. Preset menu stickers

# SETTING UP YOUR OVEN

## TURNTABLE INSTALLATION


Cleaning the cooking compartment and putting the turntable in place.

For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft.


Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly. You must clean the cooking compartment and accessories.

How to put the turntable in place:

1. Place the turntable ring assembly ② into the recess in the cooking compartment.
2. Place the glass tray ① on the turntable ring assemblies ②.

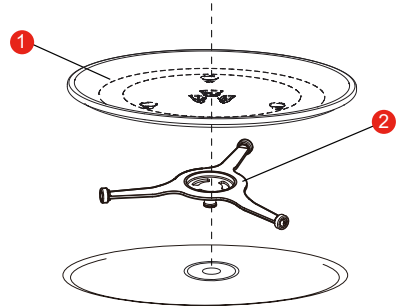

- 1) Glass Tray  
2) Turntable Ring Assembly

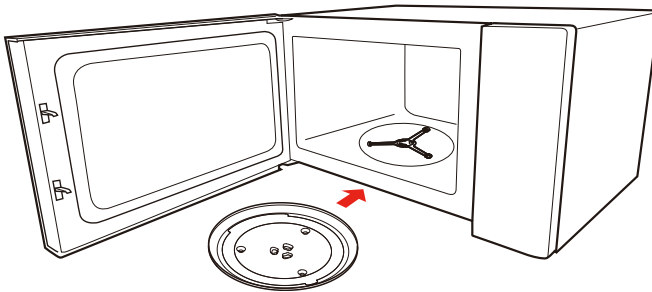

### NOTE

- Never use the appliance without the turntable. Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.
- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- Never restrict the movement of the turntable.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.


## COUNTERTOP INSTALLATION

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

## INSTALLATION


1. Select a level surface that provide enough open space for the intake and/or outlet vents.
  - a. The minimum installation height is 3.0 ft.
  - b. Leave a minimum clearance of 3.0 inches on each side, 3.0 inches on top and 1.0 inch in the rear.
  - c. Do not remove the legs from the bottom of the oven.
  - d. Blocking the intake and/or outlet openings can damage the oven.
  - e. Operation of microwave oven may cause interference to your radio or TV reception.  
Please place the oven as far away from radios and TV as possible.

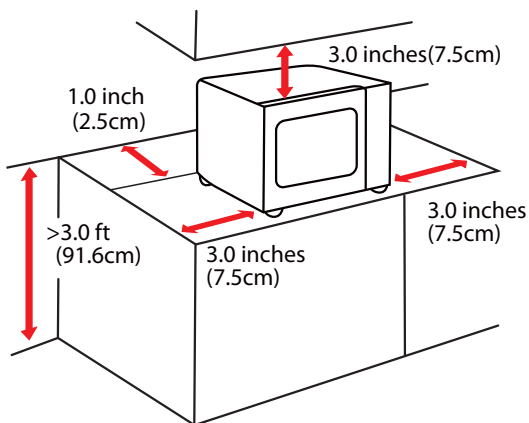

2. Plug microwave oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.



- Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be avoid.

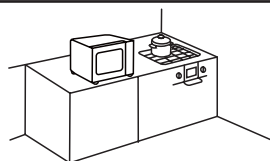

The accessible surface may be hot during operation



# INSTRUCTION FOR USE

## BEFORE USING FOR THE FIRST TIME

The appliance may produce unpleasant odors when it is used for the first time.

This section tells you what you need to do before using your microwave to prepare food for the first time. Read the section entitled "**IMPORTANT SAFETY INSTRUCTIONS**" beforehand on page 3.

Before you can use your new appliance, you will need to put the turntable in place correctly. You must also clean the cooking compartment and accessories.




**NOTE**

- Never use the appliance without the turntable.
- Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.
- Fan may continue to operate after cook cycle completes.

# OPERATION

## CONTROL PANEL AND FEATURES

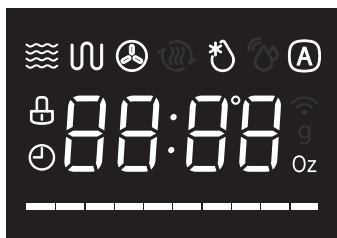

 Microwave

 Broil

 Convection


 Pro Defrost

 Auto Menu

 Child Lock

 Clock

  
Temperature Strip

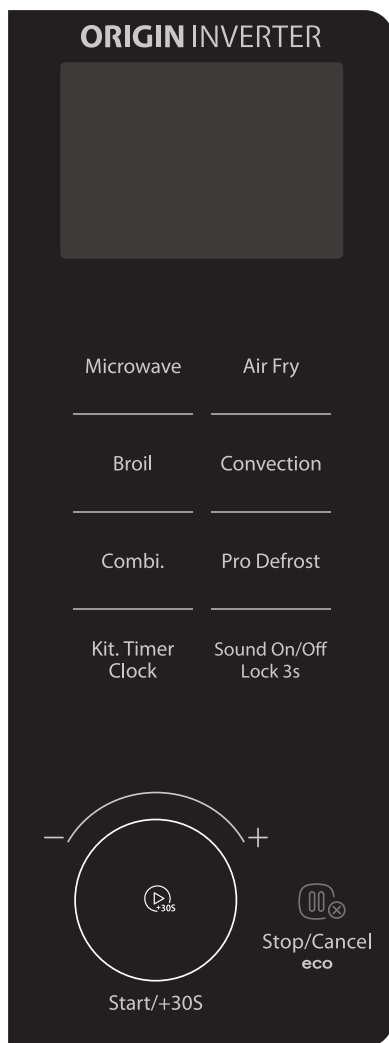


This microwave oven uses modern electronic control to adjust cooking parameters to meet your needs better for cooking.

## 1. CLOCK SETTING

 - a In waiting state, press "**Kit.Timer/Clock**" twice, The hour figures will flash.

Kit. Timer  
Clock


- b Turn parameter knob to set the hour figures. The time should be within 1-12.



- c Press "**Kit.Timer/Clock**" to confirm, The minute figures will flash.

Kit. Timer  
Clock

 - d Turn parameter knob to set the minute figures. The time should be within 0-59.



- e Press "**Kit.Timer/Clock**" to confirm.

Kit. Timer  
Clock



### NOTE

- If the entered number is not within the range of 1:00-12:59, the setting is invalid.
- To reset the clock, please repeat step a to step e.

 
## 2. MICROWAVE COOKING

### Microwave Power Chart


LEVEL	POWER	DISPLAY
10	100%	P100
9	90%	P90
8	80%	P80
7	70%	P70
6	60%	P60
5	50%	P50

LEVEL	POWER	DISPLAY
4	40%	P40
3	30%	P30
2	20%	P20
1	10%	P10


a Press the "**Microwave**" key once, "P100" displays.



 b Turn parameter knob or press "**Microwave**" key repeatedly to set the power level .The 10 power levels are available.




or

 


c Press "

d Turn parameter knob to set the cook time.



e Press "




• Each one more press on "

b Turn parameter knob to set the desired time. The maximum time value is "95:00 min"





- c Press " " to confirm. The timer starts counting down.



**NOTE**

- During kitchen timer, any program cannot be set.

## 4. LOCK FUNCTION

In waiting state, You can use this function to prevent children from accidentally turning the oven on.


- a To activate the lock:  
In waiting state, press and hold "**Sound On/Off/Lock 3s**" for 3 seconds. Any other keys will be invalid.

Sound On/Off  
Lock 3s

- b To deactivate the lock:  
In locked state, press and hold "**Sound On/Off/Lock 3s**" for 3 seconds.

Sound On/Off  
Lock 3s

## 5. ECO FUNCTION

- a To enter ECO mode: In waiting state, press "". The screen will turn off.

  
Stop/Cancel  
eco

- b To cancel ECO mode:  
In ECO mode, press any key or open and close the oven door to wake up the screen.

  
Stop/Cancel  
eco

## 6. BROIL COOKING

 
- a In waiting state, press "**Broil**" once, "G-1" will display.


Broil

b Press " " to confirm.



c Turn parameter knob to set the cook time. The time should be within 0:05-95:00 min.



d Press " " to start cooking.




• If half of the time pass on, the buzzer will sound twice to remind of turning over the food, if there is no any operation, it will keep on work.

## 7. COMBINATION COOKING

 a In waiting state, press "**Combi.**" once, "C-1" will display.



b Press "**Combi.**" repeatedly or turn parameter knob to select the mode. "C-1" and "C-2" are available.



or




c Press " " to confirm.



d Turn parameter knob to set the cook time. The time should be within 0:05-95:00 min.




e Press " " to start cooking.




Combi.mode	Microwave	Broil	Convection
C-1	•		•
C-2	•	•	

## 8. SPEEDY COOKING

 In waiting state, press " " to cook food with 100% power level for 30 seconds. Each press on the same key can increase 30 seconds and the maximum time value is "95:00 min".

or

- a In waiting state, turn parameter knob left to set the cook with 100% power level for 5 seconds directly, turn the knob to set the cook time.

Press " " to start cooking.




## 9. CONVECTION WITHOUT PREHEAT

- a In waiting state, press "**Convection**" once, "350°F" will display.

Convection

 
- b Turn parameter knob to set the temperature, " 100°F, 150°F, 250°F, 275°F, 300°F, 325°F, 350°F, 375°F, 400°F, 425°F " will display in turn.




- c Press " " once to confirm.



- d Turn parameter knob to set the cook time. The time should be within 0:05-95:00 min.



- e Press " " to start cooking.



## 10. CONVECTION WITH PREHEAT


---

- a In waiting state, press " **Convection** " once, "350°F" will display.

Convection

- b Turn parameter knob to set the temperature, " 100°F, 150°F, 250°F, 275°F, 300°F, 325°F, 350°F, 375°F, 400°F, 425°F " will display in turn.




- c Press "  " twice to start preheating. When preheating is completed, the oven will beep twice. Open the door and place food in the oven and close the door.



- d Turn parameter knob to set the cook time. The time should be within 0:05-95:00 min.



- e Press "  " to start cooking.




## 11. AUTO MENU

---

(A01-A07 and A10-A11)

- a Turn parameter knob right and then " A01 " will display. Turn parameter knob repeatedly to select the menu.



- b Press "  " to confirm the menu.



c Turn parameter knob to set the weight of the food.



d Press "▶+30S" to start cooking.



### A08-A09

a In waiting state, turn parameter knob right for 8 times, and then "A08" will display



b Press "▶+30S" to confirm.



c Turn parameter knob to set the weight of the food.



d Press "▶+30S" to start preheating.

d When the preheat temperature arrived ,the buzzer will sound twice, open and close the door.



e Press "▶+30S" again to start cooking.



### The chart of the auto menu:

DISPLAY	MENU	WEIGHT	POWER
A01	Beverage	4 Oz	100%
		8 Oz	
		12 Oz	
A02	Dinner Plate	5 Oz	100%
		8 Oz	
		12 Oz	
		15 Oz	
		21 Oz	

 
DISPLAY	MENU	WEIGHT	POWER
A03	Soup	8 Oz	100%
		16 Oz	
		24 Oz	
A04	Potato	8Oz	100%
		16 Oz	
		24 Oz	
A05	Vegetables	4 Oz	100%
		8 Oz	
		16 Oz	
A06	Oatmeal	28 Oz	100%+30%
A07	Pizza	10 Oz	Conv.400°F
		14 Oz	
A08	Cake	16 Oz	Conv.325°F
A09	Cookie	7.5 Oz	Conv.375°F
A10	Chicken	16 Oz	100% Micro/Conv.400°F
		24 Oz	
		32 Oz	
		40 Oz	
		48 Oz	
A11	Popcorn	2.75 Oz	100%
		3.2 Oz	
		3.5 Oz	


## 12. AIR FRY

- a In waiting state, press " Air Fry ", "H01" will display



- b Turn parameter knob to set the menu, "H01~H10" are available.



c Press " " to start cooking.



## The chart of the air fry:

DISPLAY	MENU	PREHEAT	TEMPERATURE
H01	Frozen French Fries	No	425°F
H02	Frozen onion Rings	No	425°F
H03	Frozen chicken nuggets	No	425°F
H04	Fresh chicken wings	No	425°F
H05	Frozen chicken legs	No	425°F
H06	Escalope	No	425°F
H07	Frozen Shrimps	No	425°F
H08	Fish Sticks	No	425°F
H09	Spring Rolls	No	425°F
H10	Mozzarella Sticks	No	425°F

 
## 13. PRO DEFROST

### DEFROST BY WEIGHT

a In waiting state, press "**Pro Defrost**", "dEF1" will display.




b Turn parameter knob to set the menu, "dEF1-DEF6" are available.




c Press " " to confirm.



 d Turn parameter knob to set the weight.



e Press " " to start cooking.



## DEFROST BY TIME

a In waiting state, press " **Pro Defrost** ", "dEF1" will display.

Pro Defrost

b Turn parameter knob to select "dEF7".




c Press "  " to confirm.



d Turn parameter knob to set the time. The time should be within 0:05-95:00 min.



e Press "  " to start cooking.



## The chart of the defrost by weight:

DISPLAY	MENU	WEIGHT
dEF1	Vegetables	4-100 Oz
dEF2	Fruit	4-100 Oz
dEF3	Chicken	4-100 Oz
dEF4	Fish	4-100 Oz
dEF5	Meat	4-100 Oz
dEF6	Broth	4-100 Oz



# CLEANING

With good care and cleaning, your appliance will retain its appearance and remain fully functioning for a long time to come. We will explain here how you should correctly care for and clean your appliance.



- Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.
- The surface of the appliance may become damaged if it is not cleaned properly. Microwave energy may escape. Clean the appliance on a regular basis, and remove any food remnants immediately.
- Do not immerse the appliance in water or clean under a jet of water.

## Cleaning agent

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, observe the information below. Wash new sponge cloths thoroughly before use.

### Do not use:



Harsh or abrasive cleaning agents



Metal or glass scrapers to clean the door panels



Metal or glass scrapers to clean the door seal



Hard scouring pads or sponges




Cleaning agents with a high alcohol content

## APPLIANCE FRONT

### Hot soapy water:

Clean using a dish cloth and then dry with a soft cloth. Do not use metal or glass scrapers for cleaning.

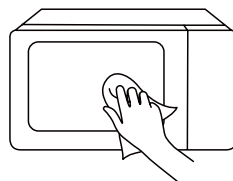


## APPLIANCE FRONT PLATE

---

### Hot soapy water:

Clean using a dish cloth and then dry with a soft cloth. Remove splashes and patches of limescale, grease, starch and albumin immediately. Corrosion can form under these patches or splashes. Do not use glass cleaners or metal or glass scrapers for cleaning.

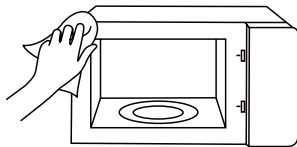


## APPLIANCE CAVITY

---

### Hot soapy water or vinegar solution:

Clean using a dish cloth and then dry with a soft cloth. Do not use oven spray or any other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These items scratch the surface. Allow the interior surfaces to dry completely.

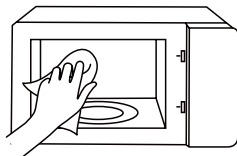


## TURNTABLE AND ROLLER RING

---

### Hot soapy water:

When placing the turntable back into its recess, it must engage properly.

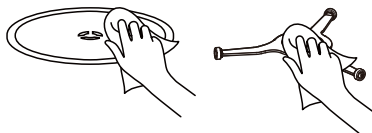

## DOOR PANEL

---

### Glass cleaner:

Clean with a dish cloth. Do not use glass scrapers.

# MAINTENANCE

## TROUBLE SHOOTING

Check your problem by using the chart below and try the solutions for each problem.  
If the microwave oven still does not work properly, contact the nearest authorized service center.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Oven will not start	<ul style="list-style-type: none"><li>a. Electrical cord for oven is not plugged in.</li><li>b. Door is open.</li><li>c. Wrong operation is set.</li></ul>	<ul style="list-style-type: none"><li>a. Plug into the outlet.</li><li>b. Close the door and try again.</li><li>c. Check instructions</li></ul>
Arcing or sparking	<ul style="list-style-type: none"><li>a. Materials to be avoided in microwave oven were used.</li><li>b. The oven is operated when empty.</li><li>c. Spilled food remains in the cavity.</li></ul>	<ul style="list-style-type: none"><li>a. Use microwave-safe cookware only.</li><li>b. Do not operate with oven empty.</li><li>c. Clean cavity with wet towel.</li></ul>
Unevenly cooked foods	<ul style="list-style-type: none"><li>a. Materials to be avoided in microwave oven were used.</li><li>b. Food is not defrosted completely.</li><li>c. Cooking time, power level is not suitable.</li><li>d. Food is not turned or stirred.</li></ul>	<ul style="list-style-type: none"><li>a. Use microwave-safe cookware only.</li><li>b. Completely defrost food.</li><li>c. Use correct cooking time, power level.</li><li>d. Turn or stir food.</li></ul>
Overcooked foods	Cooking time, power level is not suitable.	Use correct cooking time, power level.
Undercooked foods	<ul style="list-style-type: none"><li>a. Materials to be avoided in microwave oven were used.</li><li>b. Food is not defrosted completely.</li><li>c. Oven ventilation ports are restricted.</li><li>d. Cooking time, power level is not suitable.</li></ul>	<ul style="list-style-type: none"><li>a. Use microwave-safe cookware only.</li><li>b. Completely defrost food.</li><li>c. Check to see that oven ventilation ports are not restricted.</li><li>d. Use correct cooking time, power level</li></ul>
Improper defrosting	<ul style="list-style-type: none"><li>a. Materials to be avoided in microwave oven were used.</li><li>b. Cooking time, power level is not suitable.</li><li>c. Food is not turned or stirred.</li></ul>	<ul style="list-style-type: none"><li>a. Use microwave-safe cookware only.</li><li>b. Use correct cooking time, power level.</li><li>c. Turn or stir food.</li></ul>

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Sensor cooked foods not properly cooked	<ul style="list-style-type: none"><li>a. Cover or lid on food not vented.</li><li>b. Door opened before sensor-detected cooking time appears in display.</li></ul>	<ul style="list-style-type: none"><li>a. Cover or lid over food must contain vent hole for escaping steam.</li><li>b. Do not open door to stir or turn food before sensor-detected cooking time appears in display.</li></ul>

---

# ONE YEAR LIMITED WARRANTY

This product carries a warranty stating that it will be free from defects in material and workmanship for a period of one year from the date of purchase. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep your original sales receipt.

## IMPORTANT:

1. This warranty does not cover damages resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachments not provided with the product, loss of parts, or subjecting the appliance to any but the specified voltage. ( Read directions carefully. )
2. This warranty is void if this product is ever used for other than private household purposes.
3. This warranty is void if this product is ever used outside of United State.

If service is required during the warranty period, properly pack your unit. We recommend using the original carton and packing materials.

If additional assistance is needed, please contact customer assistance at:

customercare@us.toshiba-lifestyle.com  
855-204-5313

**Midea America Corp.** expressly disclaims all responsibility for consequential damages or incidental losses caused by use of the appliance. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

The serial number can be found on the back cabinet. We suggest that you record the serial number of your unit in the space below for future reference

Model Number : \_\_\_\_\_

Serial Number : \_\_\_\_\_

Product registration is not mandatory. Failure to complete and return the card or form does not diminish the consumer' s warranty rights.

## SAVE THIS FOR YOUR RECORDS

MADE IN CHINA





**#DetailsMatter**

Customercare@us.toshiba-lifestyle.com  
855-204-5313