

2500107.1



Please read all instructions carefully before use and retain for future reference.



ATTENTION This appliance has a thermal cut out switch. The thermal cut out will activate and shut down the appliance should the appliance overheat. Unplug from the mains and or battery and allow to cool for 30 minutes before re-use.



CAUTION Do not immerse in water.



CAUTION hot surfaces



Do not cover.



Do not use outdoors.

THIS PRODUCT IS ONLY SUITABLE FOR WELL INSULATED SPACES OR OCCASIONAL USE.

WARNING

PLEASE READ THESE INSTRUCTIONS CAREFULLY AND KEEP FOR FUTURE REFERENCE

INTENDED USE.

This 800W 6 Fin Mini Radiator is designed for light domestic use only. It is not intended for heavy duty, commercial or industrial use, and is not suitable for use outdoors.

WARNING! Do not use this appliance to dry clothes.

This appliance cannot be used by children or persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have not been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

WARNING! This product is not suitable to be used on long pile carpets.

Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.

PRIOR TO USE.

Remove the packaging and make sure that the appliance is intact. If in doubt, do not use the appliance and contact DOMU Brands Customer Services.

Do not leave packaging materials such as bags and staples within reach of children. Dispose of packaging carefully and with consideration for the environment.

It is recommended that you retain the appliance box for seasonal storage. For your convenience, record the date you received the appliance on the 'Warranty' page of these instructions and attach your proof of purchase. Retain this information in the event that a warranty service is required.

SAFETY INFORMATION.

When using any electrically-powered appliance, basic safety precautions should always be followed to reduce the risk of

fire, electrical shock, or injury to persons or property.

CABLES AND PLUGS.

Check to ensure your electricity supply matches that shown on the rating label of the appliance. The appliance must only be used as rated.

Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Take to a qualified electrical person for service and repair.

Do not connect the appliance to the mains voltage until completely assembled and adjusted.

Unroll the cord before operating.

Operating with a coiled cord may cause overheating and risk of fire.

The use of an extension cord with this appliance is not recommended.

Do not allow the cord to come into contact with the appliance surface during operation.

Do not run the cord under carpeting, mats or rugs etc. Arrange the cord away from traffic areas so that it will not be tripped over.

Do not twist, kink or wrap the cord around the appliance as this may cause the insulation to weaken and split.

Always unplug the appliance when not in use. Do not leave unattended.

Always switch off the appliance before unplugging from the power socket.

Always hold the plug when removing it from the wall, do not pull the cord.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off.

WARNING

PLEASE READ THESE INSTRUCTIONS CAREFULLY AND KEEP FOR FUTURE REFERENCE

RISK OF PERSONAL INJURY.

Use this appliance only as described in this manual.

Do not use this appliance with any type of external timer.

Always operate upright, on a flat surface only.

This appliance heats up when in use. To avoid burns, do not touch the front of the appliance or any of the grilles or vents.

WARNING! DO NOT COVER.

Do not cover in any manner as the appliance may overheat and become a fire risk.

Keep all objects at least 1 metre from the front, side and rear of the appliance.

Do not operate the appliance with wet hands.

Do not immerse in liquid or use the appliance near water as this could create an electrical shock hazard.

If the appliance accidentally comes into contact with water, switch off the power supply and do not touch the appliance.

Never attempt to remove the cover of the appliance. Repairs requiring opening the appliance or access to internal parts must be carried out by a qualified electrician or repair service professional. There are no user-serviceable parts of this appliance (excluding the plug fuse).

Before moving the appliance, switch it

off by unplugging it from the wall and allowing it to cool.

POSITIONING YOUR RADIATOR.

This appliance is designed to be placed on a hard, level surface. When positioning, please keep the following points in mind:

Do not locate in areas of high foot traffic.

To avoid accidents, always ensure that the power cord and appliance are in full view.

Do not fit the appliance in confined spaces such as cupboards or wardrobes.

Do not operate the appliance in areas where gasoline, paint or other flammable liquids are used or stored.

Do not operate the appliance in bathrooms, laundry areas or similar moist indoor locations. Do not use in the immediate surroundings of a bath, shower or swimming pool.

The appliance must not be located immediately below or in front of a socket outlet.

The socket must always be accessible in order to disconnect the appliance from the electrical supply for maintenance. Store the Radiator carefully in a dust-free area during the off season.

It is ideal to store the Radiator in the box in which it was supplied.

Neatly wind the cord of the Radiator to prevent damage.

SAFETY SYMBOLS

Please ensure you understand their meanings before operating this product in order to prevent personal injury and avoid damage to the appliance.



WARNING!

Pay attention to all safety and guidance



Read manual
before use



WARNING!

Do not cover

SPECIFICATION

VOLTAGE

V


220-240V ~50Hz

HEAT SETTINGS

W

800

1. Carry Handle
2. Thermostat Knob
3. Feet
4. Radiant Fins

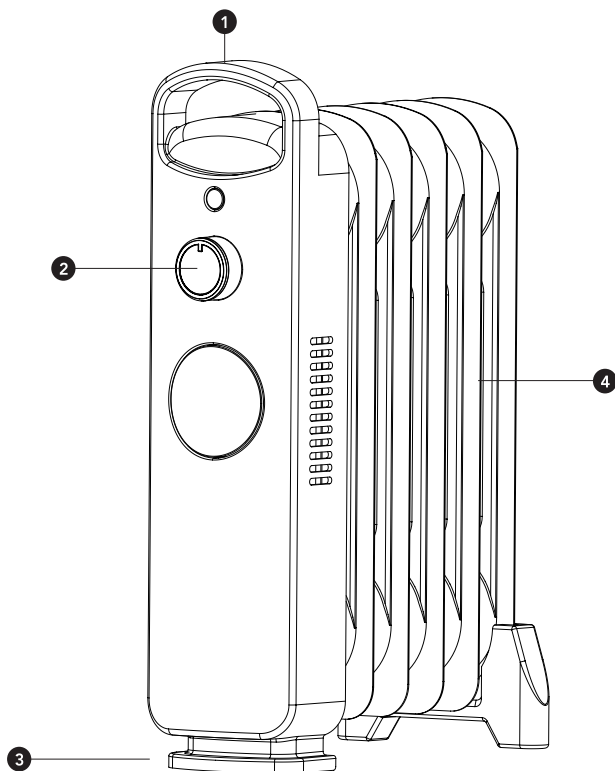


INFORMATION REQUIREMENTS FOR ELECTRIC LOCAL SPACE HEATER

Model		2500107.1	
Item	Symbol	Value	Unit
Heat Output			
Nominal Heat Output	P _{nom}	0.3846	kW
Minimum Heat Output (indicative)	P _{min}	0	kW
Maximum Continuous Heat Output	P _{max}	0.3846	kW
Auxiliary electricity consumption			
At nominal heat output	EL _{max}	n/a	kW
At minimum heat output	EL _{min}	n/a	kW
In standby mode	EL _{sb}	n/a	kW
Type of heat input for Electrical Storage Heaters only (select one)			
Manual heat charge control with integrated thermostat.		n/a	
Manual heat charge control with room and/or outdoor temperature feedback.		n/a	
Electronic heat charge control with room and/or outdoor temperature feedback		n/a	
Fan assisted heat output		n/a	
Type of heat output/room temperature control (select one)			
Single stage heat output and no room Temperature control		no	
Two or more manual stages, no room Temperature control		no	
With mechanical thermostat room temperature control		yes	
With electronic room temperature control		no	
Electronic room temperature control plus day timer		no	
Electronic room temperature control plus week timer		no	
Other control options (multiple selections possible)			
room temperature control with presence detection		no	
room temperature control with open window detection		no	
with distance control option		no	
with adaptive start control		no	
with working time limitation		no	
with black bulb sensor		no	
Contact Details		DOMU Brands Ltd, 4th & 5th Floor, The Tower, Deva City Office Park, Salford, M3 7BF	

FEET ASSEMBLY

The rear Feet slot onto the Radiant Fins (4), align the slot the back-most Fin and push into place.

IMPORTANT: Before first use, stand the Radiator Upright for **1 hour** before switching on. This will allow The oil to settle into the correct position.

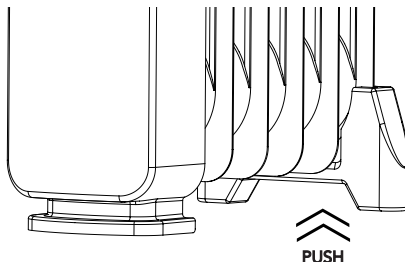

OPERATION


Choose a suitable location for the Radiator, taking into account the safety instructions.

NOTE: When the Heater is switched on you will hear a crackling/popping sound, this is completely normal and not a fault, it is the oil settling.

Insert the plug of the Radiator into a suitable socket.

Turn the Thermostat Knob (2) fully in a clockwise direction to the maximum setting.

Once the desired room temperature has been reached, the Thermostat Knob should be turned slowly anticlockwise until the Thermostat is heard to click off and the light on the power switch is seen to go out. After this, the Radiator will maintain the air temperature in the room at the set temperature by switching on and off automatically. **This is not a fault with the appliance.**

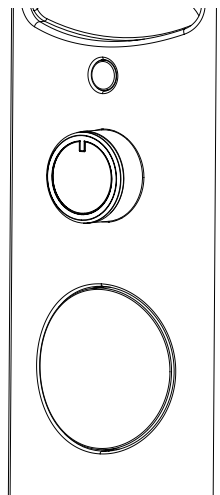

SAFETY FEATURES

This Radiator is protected with an **overheat protection cut-out facility** that will switch the appliance off automatically should it overheat.

Overheating can be caused by obstruction to the Vents **(4)**.

If this occurs, please disconnect the Radiator from the power socket and allow it to cool for 30 minutes.

Remove any obstruction and turn the Radiator back on. The Radiator should operate normally.

Should the problem persist, contact DOMU Brands Customer Services.

CLEANING & CARE

CAUTION: Switch off the Radiator and disconnect the plug from the power socket. Wait for the Radiator to cool completely before cleaning.

Vacuum-clean the Vents **(4)** to remove dust from these areas.

To remove dust on external surfaces, wipe the Radiator with a damp (not wet) lint-free cloth rinsed in hot soapy water only.

CAUTION: Do not use any harsh detergent or abrasive cleaners.

WARNING! Do not spray with liquids or submerge in any liquid or water.

WARNING! Do not attempt to clean the inside of the Radiator. Do not attempt to open the casing at any time. There are no user-serviceable parts.

TROUBLESHOOTING

PROBLEM	SOLUTION
THE RADIATOR WILL NOT POWER ON	Ensure the Radiator is switched on and connected to mains power. Activate the Thermostat Knob. Check the fuse by replacement.
THE RADIATOR IS NOT HEATING UP	Check that the Radiator is plugged in and switched on at the mains outlet. Make sure that the Radiator has not gone into overheat protection mode (see ' Safety Features '). The Vents may require cleaning.
THE RADIATOR BECOMES DAMAGED	Do not use and contact DOMU Brands Customer Services.



EN

DISPOSAL INFORMATION Please recycle where facilities exist. Check with your local authority for recycling advice.

CUSTOMER SERVICE If you are having difficulty using this product and require support, please contact **support@domu.co.uk**

WARRANTY To register your product and find out if you qualify for a free extended warranty please go to **www.vonhaus.com/warranty**. Please retain a proof of purchase receipt or statement as proof of the purchase date. The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately. Any abuse of the product or the manner in which it is used will invalidate the warranty. Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights. No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

COPYRIGHT All material in this instruction manual are copyrighted by DOMU Brands. Any unauthorised use may violate worldwide copyright, trademark, and other laws.

THANK YOU

Thank you for purchasing your product/appliance.

Should you require further assistance with your

purchase, you can contact us at

support@domu.co.uk

VonHaus is a registered trademark of DOMU Brands Ltd. Made in China for DOMU Brands.

Unit 30, Stakehill Industrial Estate,
Middleton, Manchester M24 2RW.

Authorised Representative:

Authorised Representative Service,
77 Camden Street Lower, Dublin,
D02 XE80, Ireland.