

 
SBX-412210

QFX

WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL



TWS CONNECTION

True Wireless Stereo (TWS) require that you have 2 SBX-412210 Speakers


1. Enable Bluetooth mode on both speakers.
2. Press and hold the **TWS (MODE)** button on one of the speakers to sync both units for 3 seconds
3. On your mobile device under the Bluetooth menu, search for SBX-412210 and connect.
4. Open your favorite music app and enjoy True Wireless Stereo (TWS) sound.
5. To Exit TWS press and hold the **TWS** button.




CONEXIÓN TWS

True Wireless Stereo (TWS) requiere que tenga 2 altavoces SBX-412210


1. Habilite el modo Bluetooth en ambos altavoces.
2. Mantenga presionado el botón TWS (MODE) en uno de los altavoces para sincronizar ambas unidades durante 3 segundos
3. En su dispositivo móvil, en el menú de Bluetooth, busque SBX-412210 y conéctese.
4. Abre tu aplicación de música favorita y disfruta del sonido True Wireless Stereo (TWS).
5. Para salir de TWS, mantenga presionado el botón TWS.

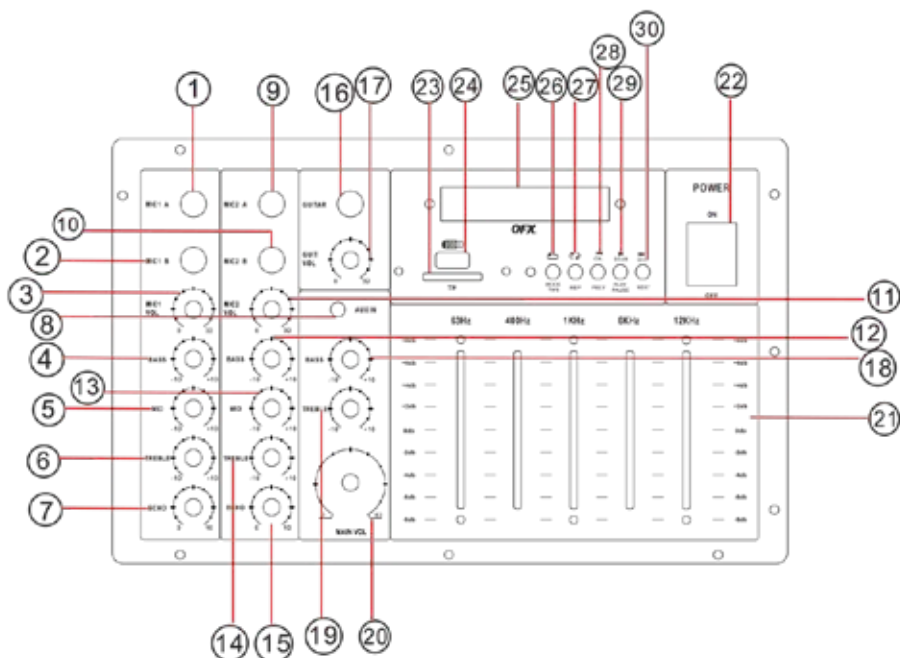

1. Mic1 A input jack
2. Mic1 B input jack
3. Mic1 control
4. Mic1 bass control
5. Mic1 mid control
6. Mic1 treble control
7. Mic1 echo control
8. Aux in
9. Mic2 A input jack
10. Mic2 B input jack
11. Mic2 control
12. Mic2 bass control
13. Mic2 mid control
14. Mic2 treble control
15. Mic2 echo control
16. Guitar input jack
17. Guitar control
18. Bass control
19. Treble control
20. Main volume control
21. Master equalization
22. Power switch
23. TF input jack
24. USB input jack
25. Led display
26. Mode/TWS key
27. Repeat key
28. Prev key/volume down
29. Play/Pause key
30. Next key/volume up
31. FM antenna
32. AC input
33. Audio in/out
34. LED light
35. 110V/220V power switch

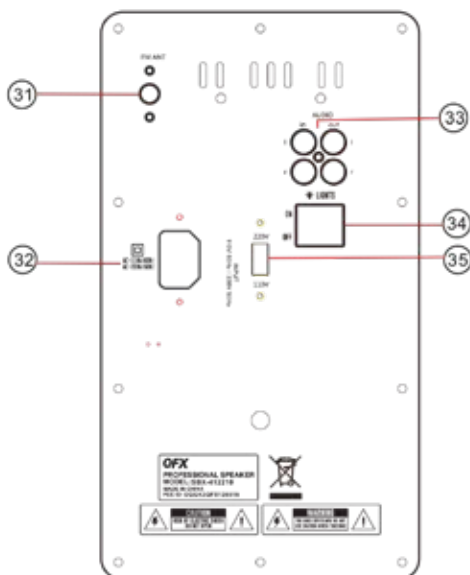

1. Conector de entrada Mic1 A
2. Conector de entrada Mic1 B
3. Control Mic1
4. Control de graves Mic1
5. Control de medios Mic1
6. Control de agudos Mic1
7. Control de eco Mic1
8. Entrada auxiliar
9. Conector de entrada Mic2 A
10. Conector de entrada Mic2 B
11. Control Mic2
12. Control de graves Mic2
13. Control de medios Mic2
14. Control de agudos Mic2
15. Control de eco Mic2
16. Toma de entrada de guitarra
17. Control de guitarra
18. Control de graves
19. Control de agudos
20. Control de volumen principal
21. Ecualización maestra
22. Interruptor de encendido

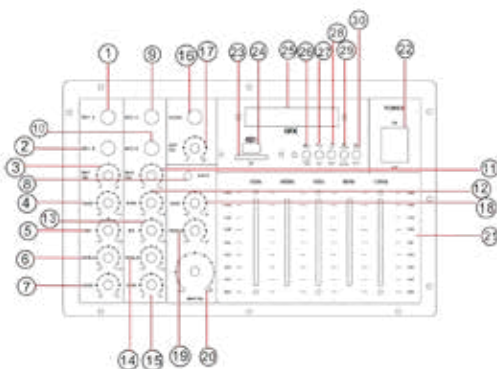

23. Conector de entrada TF
24. Toma de entrada USB
25. Pantalla LED
26. Tecla Modo/TWS
27. Tecla de repetición
28. Tecla anterior/bajar volumen
29. Tecla Reproducir/Pausar
30. Siguiente tecla/subir volumen
31. Antena FM
32. Entrada de CA
33. Entrada/salida de audio
34. luz LED
35. Interruptor de alimentación de 110 V/220 V

OPERATION

USB/SD Operation Operación USB/SD	Insert USB/SD, open the resource manager, and select play content Inserte USB/SD, abra el administrador de recursos y seleccione reproducir contenido
APK software installation Instalación del programa APK	WIFI Download the installation or USB/SD installation WIFI Descarga la instalación o instalación USB/SD
Language Option Opción de idioma	Setting - language and input method - multinational language selection Configuración - idioma y método de entrada - selección de idioma multinacional
Virtual Key Clave virtual	 Volume - Previous page Home key Working APP + Volumen - Página anterior Tecla de inicio APLICACIÓN de trabajo n +
Wifi Connecting conexión wifi	Setting - wifi - choose the corresponding internet equipment - enter password - connected Configuración - wifi - elija el equipo de internet correspondiente - ingrese la contraseña - conectado
Time & Date Hora Fecha	Setting - select time zone, open Automatic date time & Automatic date zone Configuración: seleccione la zona horaria, abra la hora de fecha automática y la zona de fecha automática
Karaoke Operation Operación Karaoke	Online and offline karaoke songs can be selected for original accompaniment Se pueden seleccionar canciones de karaoke en línea y fuera de línea para un acompañamiento original
APK Remove Eliminar APK	Find the APP which u need to delete, long press it until there is remove on the top of screen, drag it to the remove Encuentre la aplicación que necesita eliminar, manténgala presionada hasta que se elimine en la parte superior de la pantalla, arrástrela hasta eliminar
Music or Video Download Descarga de música o video	Download music APP - find the music which u need to download or download music from browser Descargue la aplicación de música: encuentre la música que necesita para descargar o descargue música desde el navegador
Sleep Mod Modo de sueño	Setting - display - sleep - choose duration Configuración - pantalla - dormir - elegir duración

KARAOKE OPERATION

Online and off line karaoke songs can be selected for original accompaniment. Online broadcast supports four ways to choose songs:

1. Popular recommendation, which belongs to pop songs.
2. In search, you can input the first letter of the singer or song name in the search bar to search for the song.
3. Singers light up songs and choose their favorite singers.
4. Classify songs and choose multinational songs.

OPERACIÓN DE KARAOKE

Des chansons de karaoké en ligne et hors ligne peuvent être sélectionnées pour un accompagnement original. La diffusion en ligne prend en charge quatre façons de choisir des chansons :

Recommandation populaire, qui appartient aux chansons pop.

Dans la recherche, vous pouvez saisir la première lettre du nom du chanteur ou de la chanson dans la barre de recherche pour rechercher la chanson.

Les chanteurs allument des chansons et choisissent leurs chanteurs préférés.

Classer les chansons et choisir des chansons multinationales.

1. Volume down
2. Previous page
3. Home screen button
4. Working APP
5. Volume up
6. HDMI
7. TF Jack
8. USB Jack
9. Tablet power switch


1. Bajar n
2. Pagina anterior
3. Botón de la pantalla de inicio
4. Aplicación de trabajo
5. Sube el n
6. HDMI
7. Conector TF
8. Conector USB
9. Interruptor de encendido de la tableta



- ① ② ③ ④ ⑤

FEATURES

- Plays MP3 Files from SD Cards, USB Drives, or External audio devices
- FM Radio
- Bluetooth Function
- Line in
- MicJack
- Guitar Jack
- Infrared Remote Control
- RGB LED Party Lights

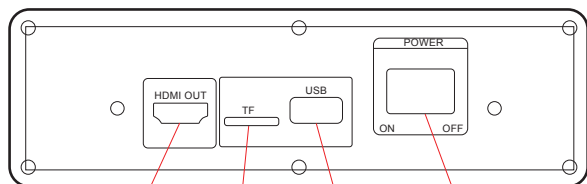

- ⑥ ⑦ ⑧ ⑨

CARACTERÍSTICAS

- Reproduce archivos MP3 desde tarjetas SD, unidades USB o dispositivos de audio externos
- Radio FM
- Función Bluetooth

- En línea
- Micrófono
- toma de guitarra
- Mando a distancia por infrarrojos
- Luces de fiesta LED RGB

CONNECTING UNIT

- Connect one end to the unit and the plug end to socket
- Switch"on" power switch, backside of unit.

UNIDAD DE CONEXIÓN


- Conecte un extremo a la unidad y el extremo del enchufe al enchufe.
- Encienda el interruptor de encendido, parte trasera de la unidad.

VOLUME CONTROL

- Volume can be controlled from Unit or remote control.
- Maximum on remote control will be to the level set on unit through rotary control.
- From the remote press Vol- for Down or Vol+ for up.
- When connected to your smartphone wirelessly, can be controlled from unit and your smartphone both.
- The sound output quality off the speakers will depend on the quality of the MP3 files. from remote will be maximum to the level set manually through unit Knob

CONTROL DEL VOLUMEN

- El n se puede controlar desde la unidad o el control remoto.
- El n máximo en el control remoto será el nivel establecido en la unidad a través del control de n giratorio.
- Desde el control remoto, presione Vol- para bajar o Vol+ para subir.
- Cuando se conecta a su teléfono inteligente de forma inalámbrica, el n se puede controlar tanto desde la unidad como desde su teléfono inteligente.
- La calidad de salida del sonido de los altavoces dependerá de la calidad de los archivos MP3. El n del control remoto será máximo al nivel establecido manualmente a través de la perilla de n de la unidad

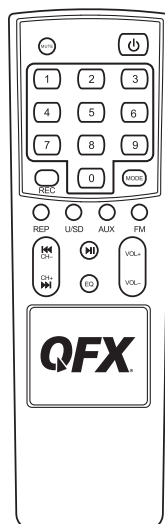

USING LINE-IN

- Use "MODE" button on unit main panel to select line in.
- Use supplied cable to connect your audio device, one end to audio device earphone jack and other end to unit LINE INPUT.

USO DE ENTRADA DE LÍNEA

- Use el botón "MODE" en el panel principal de la unidad para seleccionar la entrada de línea.
- Utilice el cable suministrado para conectar su dispositivo de audio, un extremo a la toma de auriculares del dispositivo de audio y el otro extremo a la unidad ENTRADA DE LÍNEA

PLAYING MP3 FILES ON SD CARD OR USB STICK

Use "MODE" Button on unit to switch among USB/SD/AUX function On Unit, USB or SD whichever is plugged later will play, plug in your USB Disk and/or SD Card in the slot provided. Please make sure you use the correct file format in your media devices-MP3 FILES ONLY. If your media files does not play, press the ►11 (play/pause). Please ensure that your media is properly connected and that your files are Mp3 format.or that the MODE button is on the correct source Press ◀ to listen to the previous track and to skip ►►I to the next track from unit control panel or remote control. To Pause a track, press the ►II button from the control panel or remote control. To remove pause, press button again. Please remember to turn off the power of the Speaker before removing the USB Drive or SD Card

REPRODUCCIÓN DE ARCHIVOS MP3 EN TARJETA SD O MEMORIA USB

Use el botón "MODE" en la unidad para cambiar entre la función USB/SD/AUX En la unidad, se reproducirá el USB o SD que se conecte más tarde, conecte su disco USB y/o tarjeta SD en la ranura provista. Asegúrese de utilizar el formato de archivo correcto en sus dispositivos multimedia: SOLO ARCHIVOS MP3. Si sus archivos multimedia no se reproducen, presione ►11 (reproducir/pausar). Asegúrese de que sus medios estén correctamente conectados y que sus archivos tengan formato Mp3 o que el botón MODE esté en la fuente correcta Presione ◀ para escuchar la pista anterior y para saltar ►►I a la siguiente pista desde el panel de control de la unidad o desde el control remoto control. Para pausar una pista, presione el botón ►II desde el panel de control o el control remoto. Para eliminar la pausa, presione el botón nuevamente. Recuerde apagar el altavoz antes de retirar la unidad USB o la tarjeta SD.

LISTENING TO THE FM RADIO FROM THE SPEAKER

- Use "MODE" button on unit main panel to select FM.
 - From the unit control panel or from remote control, press I◀◀/ ►►I to manually access the stations up or down.
 - "Antenna" to be used for better reception of FM stations
-

ESCUCHAR LA RADIO FM DESDE EL ALTAVOZ

- Use el botón "MODE" en el panel principal de la unidad para seleccionar FM.
 - Desde el panel de control de la unidad o desde el control remoto, presione I◀◀/ ►►I para acceder manualmente a las estaciones hacia arriba o hacia abajo.
 - "Antena" que se utilizará para una mejor recepción de las estaciones de FM
-

USING BLUETOOTH FUNCTION

- Use "MODE" button to select Bluetooth function, when Bluetooth function is on, there is a Di-Di sound u can hear.
 - From your external device scan for " QFXSBX-412210", select this option and start pairing.
 - Use your smartphone to change track.
 - Volume can be controlled from your smartphone, main unit or unit remote control.
-

USO DE LA FUNCIÓN BLUETOOTH

- Use el botón "MODE" para seleccionar la función Bluetooth, cuando la función Bluetooth está activada, hay un sonido Di-Di que puede escuchar.
- Desde su dispositivo externo, busque "QFXSBX-412210", seleccione esta opción y

comience a emparejar.

- Utilice su teléfono inteligente para cambiar de pista.
- El n se puede controlar desde su teléfono inteligente, unidad principal o control remoto de la unidad.

USING RECORDING FUNCTION


- Longpress "MODE"key on the unit. then start to record by microphone.
- press"▶||"key to play recording.

USO DE LA FUNCIÓN DE GRABACIÓN

- Mantenga presionada la tecla "MODE" en la unidad. luego comience a grabar por micrófono.
- presione la tecla "▶||" para reproducir la grabación.

USING MICROPHONE

- When using Microphone - plug your microphone into the microphone jack on unit main control panel.
- Use the MIC VOL knob to control the voice level of the microphone.
- Use the "ECHO" knob to control microphone echo

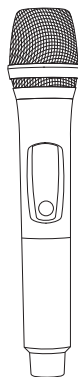

USANDO EL MICRÓFONO

- Cuando use el micrófono, conecte su micrófono en el conector del micrófono en el panel de control principal de la unidad.
- Use la perilla MIC VOL para controlar el nivel de voz del micrófono.
- Use la perilla "ECHO" para controlar el eco del micrófono

USING GUITAR JACK

- When using Guitar- plug your Guitar into the Guitar jack on unit main control panel.
- Use the Guitar VOL knob to control the level of the Guitar.

USO DE JACK DE GUITARRA

- Cuando use la guitarra, conecte su guitarra al conector de guitarra en el panel de control principal de la unidad.
- Use la perilla Guitar VOL para controlar el nivel de n de la guitarra.

LED LIGHT

- Switch on the back panel to turn on/ off led light

LUZ LED

- Enciende el panel trasero para encender/apagar la luz LED.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA® , Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2023 ©



www.qfxusa.com



1-800-864-CLUB (2582)
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)

THANK YOU.

Enjoy your speaker and make many memories with it because
QFX is Where the Party Begins!

We would love to hear about your SBX-412210 Journey!
Tag us **@QFXUSA** to share your stories.