




EZMAX+ - Instruction manual

English

Thank you very much for purchasing **EZMAX+** product. Please read this manual carefully before use.

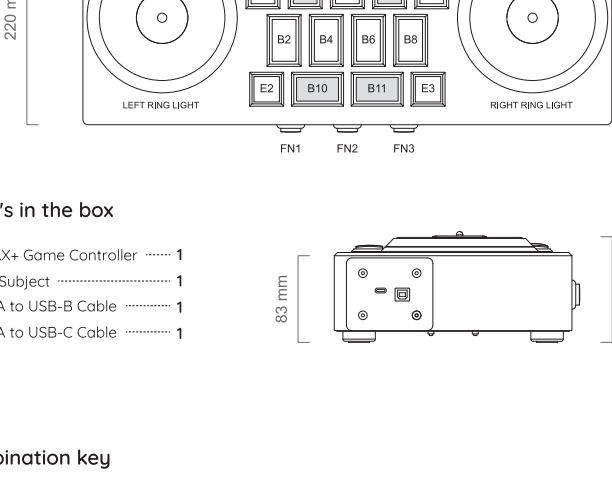

What's in the box

- EZMAX+ Game Controller 1
- Main Subject 1
- USB-A to USB-B Cable 1
- USB-A to USB-C Cable 1



Combination key

Press and hold the combination keys at the same time for 1 second, the corresponding key light flashes, indicating that the switch is successful.

Combination key	Game Mode
FN2 + B1	PS4 Beginner Mode
FN2 + B3	PS4 Conflict-free Mode
FN2 + B7	Project DIVA XHD Mode
FN2 + B9	Project DIVA FT Mode
FN2 + B2	INFINITAS 1P Mode
FN2 + B4	INFINITAS 2P Mode
FN2 + B6	BMS Mode
FN2 + B8	SDVX Mode
FN2 + E1	Switch Beginner Mode
FN2 + E4	Switch Conflict-free Mode
FN2 + E2	Steam Beginner Mode
FN2 + E3	Steam Conflict-free Mode
FN2 + B10	Keyboard Mode
FN2 + B11	Keyboard + Mouse Mode
Double click FN2	Switch the click / double click functions of E2 and E3. (This function is only valid in the PS4 Beginner Mode, other modes are invalid)
Long press FN2	Hold for more than 1 second to display the key light of current mode.

Combination key	Function
FN1 + B3	Switch LEFT RING LIGHT mode
FN1 + B5	Switch LIGHT-BAR mode
FN1 + B7	Switch RIGHT RING LIGHT mode
FN1 + B2 + Left turntable	Adjust LEFT RING LIGHT color
FN1 + B4 + Left turntable	Adjust LEFT RING LIGHT brightness
FN1 + B6 + Right turntable	Adjust RIGHT RING LIGHT color
FN1 + B8 + Right turntable	Adjust RIGHT RING LIGHT brightness
FN1 + B10 + Left turntable	Adjust LIGHT-BAR color
FN1 + B11 + Left turntable	Adjust LIGHT-BAR brightness
FN1 + E1	Reduce the dead zone for rotary table (improve the turntable sensitivity)
FN1 + E4	Increase the dead zone for rotary table (reduce the turntable sensitivity)
FN1 + E2 + E3	Light switch, All lights on / RGB light off / Key lights off / All lights off

More functions may be added in the future, please follow on [Twitter @GamoTwo](#).

In the following key layout, if there is no key value marked on the key, the key value is null.

PS4 Beginner Mode

Suitable for music games on **PS4**, such as **DJMAX**, **MUSYNX**, **Taiko Drum Master**, etc. The key layout of this mode refers to the gamepad, which is suitable for beginning players. Due to the platform mechanism, the up and down buttons and the left and right buttons can not be triggered at the same time.

PS4 Conflict-free Mode

Suitable for music games on **PS4**, such as **DJMAX**, **MUSYNX**, **Taiko Drum Master**, etc. This mode is suitable for advanced players who need to customize key value. It optimizes the key layout without key conflicts.

PS4 Project DIVA XHD Mode

Suitable for **Project DIVA XHD** on **PS4**.

PS4 Project DIVA FT Mode

Suitable for **Project DIVA Future Tone** on **PS4**.

INFINITAS 1P Mode

Suitable for **beatmania IIDX INFINITAS 1P**.

INFINITAS 2P Mode

Suitable for **beatmania IIDX INFINITAS 2P**.

BMS Mode

Suitable for **BMS** players (such as **LR2/ beatoraja, etc.**), emulator (such as **MAME/ PCSX2, etc.**) **DJ** music game with two-key turntable (such as **Ez-Muse II, etc.**), and any simulation software that supports controllers.

Sound Voltex PC mode

Suitable for **SoundVoltex** Konaste version.

SWITCH Beginner Mode

Suitable for **SWITCH** games, such as **DEEMO**, **Hatsune Miku**, **Taiko Drum Master**, **tetris**, etc. The key layout of this mode refers to the gamepad, which is suitable for beginning players. Due to the platform mechanism, the up and down buttons and the left and right buttons can not be triggered at the same time.

SWITCH Conflict-free Mode

Suitable for **SWITCH** games, such as **DEEMO**, **Hatsune Miku**, **Taiko Drum Master**, **tetris**, etc. This mode is suitable for advanced players who need to customize key config. It optimizes the key layout without key conflicts. This mode is suitable for the Hatsune Miku game on **steam**.

Steam Beginner Mode

Suitable for any game on **Steam**. Caution! This mode is recognized as a **PS4 controller** on **Steam**, which is suitable for any games that support **PS4** controller on **Steam**.