

NO WiFi Camera Charger

★ Plug-and-Play ★



* Before using this product, please read this manual carefully.


* Declare: Please strictly abide by the relevant laws and regulations, do not use it for any illegal purpose!

1 Product Details

Package List:

Hidden Camera *1
Reset Pin *1
Card Reader *1
Cleaning Cloth *1
3-in-1 USB C Cable *1
Hollow-out Cover *1

Use which front cover?	Black cover (Original)	Hollow-out Cover
Daytime Clarity	★★★★ 4-star	★★★★★ 5-star
Night Vision Clarity	★★★ 3-star	★★★★★ 5-star
Hidden Performance	★★★★★ 5-star	★★★ 3-star

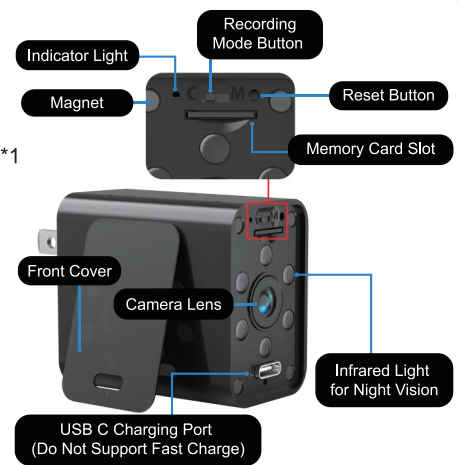

2 How to use it?

1 Open the cover, insert a memory card (Chip Side Up).



★ The micro SD card must be C10 or above, max 128GB.

★ You need to "format" it before inserting it into the card slot.

2 Select a recording mode. C - Loop Recording M - Motion Detection



"C" mode - Camera continues to work, keeps recording video and storage.
- Video Storages in the "LoopRecording" folder, 5 minutes per file.

"M" mode - Camera standby. It starts recording when motion or sound is detected.
- Video Storage in the "MotionDetection" folder, 1 minute per file.

3 Plug it in a socket, it will auto start recording.

(* Keep the cover and lens clean)

Keep USB Side Down



★ Please take out the memory card after recording for at least 10 minutes to ensure the formation of video files.

4 Take out the memory card, watch the video.

(Connect to the computer with card reader - Included)



★ If the memory card is full, the newly recorded video will replace the oldest video.

★ Unplug the camera, remove the cover, and press the memory card with your fingernail or card pin. It will pop up when you hear a "click".

About the Indicator Light

Red Light ON	→	Camera Start Up / Restart
Blue Light Flash, Then Goes Off	→	"M" - Motion Detection Mode
Red Light Flash, Then Goes Off	→	"C" - Loop Recording Mode

* There will be no light on during use.

* If red and blue lights flashing alternately and never stop, it means that the memory card is not recognized. It could be the reasons below:

- There is no memory card inserted.
- The memory card is not C10, or above or it is over 128GB.
- If not for the above reasons, please "format" the memory card and try again.

RESET!

Many problems can be solved by "Reset."

For example, if it do not functioning normally or cannot work, please try reset to default factory settings.

- After the device fully starts, using the reset card pin provided, press and hold the reset button for about 6s.
- The camera is reset when the indicator goes off and shows Red Light on again.

Hold the reset button for 5-8s after the camera starts up



3 Warranty & Service

We are very grateful for your support of KINGDANS. We guarantee that anyone who buys from KINGDANS can get a 1-Year warranty and professional lifetime after-sales service.

Any problems, please contact us **FIRST!!!**

* We will respond within 24 hours. If you do not receive a reply email, please check your spam box or trash.

* Use Environment:

- This product is not waterproof, only for indoor use;
- Please use it away from humid and high-temperature environments;
- It is normal to heat up slightly while using. With built-in overheating protection, it will auto power off over a certain temperature.

Need support?

Contact our lovely Cathie through Amazon Messages!!!



4 Time Setting

While playing the video, you may find that the time display is not correct. This is because the camera cannot connect to the internet, so it cannot auto-sync accurate time.


If you have requirements for the accuracy of the recording time, you only need to modify the time format file -- "TimeSetting.txt" before using:

- Open the time format file named "TimeSetting.txt";
- Manually modify the original time format to set time.

2021-01-01 00:59:59 (YYYY-MM-DD HH:MM:SS)

After you set the right time, make sure to "SAVE". Then when it work again, the time will be calculated from what time you set.

Reminder: After the camera is unplugged, the time will stay at that time, and you need to modify the time when you need to use it again.

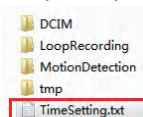

How to set the accurate local time?

