

尺寸:280*110mm
材质:300克双铜过哑胶 双面印刷

MCHOSE GX87 Handy Guide

Status Indicator





USB Receiver

Type-C port

Mode switch:
1. [B] indicates wireless mode
2. [OFF] indicates USB wired mode
3. [2.4G] indicates 2.4G mode

MCHOSE

•System mode switch

Fn

+

A

MAC system

S

Win system

•Backlight setting

Fn

+

=+

Switch
backlight mode

-

Switch
backlight color

↑

Backlight
brightness +

↓

Backlight
brightness -

←

Backlight
speed +

→

Backlight
speed-

•Status indicator light setting

Fn

+

/?

Status indicator
color switching

,<

Status indicator
light brightness +

>

Status indicator
light brightness -

↑ Shift

Status indicator light
effect switch (right Shift)

↑ Shift

Switch back to
charging mode (light Shift)

* For more other functions, please refer to the User Guide.

* Switch replacement tutorial, please visit : https://youtu.be/1cp30_THpHM



MCHOSE.STORE

•Wireless connection



① Switch to [B] mode.

Note:The connection methods of wireless 2 and wireless 3 are the same as wireless 1.
For wireless 2, you can press the key combination [Fn+E] .
For wireless 3, you can press the key combination [Fn+R] .

Fn

+

W

② Press the combination key to switch to wireless 1, press and hold for about 3 seconds until the indicator light at the bottom of the W key flashes quickly, and then enter pairing.

Wireless

My equipment

GX87 5.0


Connected

③ Search for the pairing name [GX87 3.0] or [GX87 5.0] , and the indicator light returns to normal mode after the connection is successful.

•2.4G connection



① Switch to [2.4G] mode.

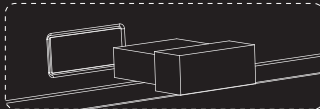

② Take out the [USB] receiver from the upper right slot of the keyboard.



③ Plug the USB receiver into the computer's USB port to use it.

•Wired connection



① Switch to [OFF] mode.



② Plug the type-c port into the computer and keyboard USB port.

PDF
Adobe