 
 
 
 
 
 
 
 
 
 
 
 
 
 




Original	Recharge	Original	Recharge
 Standby / On	 Power	 Band	 Smart / List
 Line 1/2	 Shift + 5	 CD Disp	 Display / Media
 Open / Close	 Eject / Surround	 Dimmer	 Shift + Mute / Dimmer
 Net Standby	 Shift + Power	 Bass	 Audio / Language
 Timer	 Shift + Sleep / Timer	 Top Menu	 D. Menu / Top
 Sleep	 Sleep / Timer	 Up / Tune+	 Up
 iPod	 Shift + 1	 Up / Tune+	 Shift + Right / Next
 USB	 Shift + 8	 iPod Control	 Menu / Home
 CD	 Shift + 3	 Volume+	 Vol +
 Sound	 Sound / Title	 Left / Preset	 Left
 Network	 Shift + 2	 Left / Preset	 Shift + Left / Preset-
 Tuner	 Shift + 6	 Enter	 OK
 Audio In	 Shift + 7	 Right / Preset	 Right
 P. Bass	 Subtitle / EQ	 Right / Preset	 Shift + Right / Preset+
 BT Audio	 Shift + 9	 Down / Tune-	 Down
 +Favorite	 Fav / Marker / PC	 Down / Tune-	 Shift + Left / Previous
 Treble	 Zoom / Size	 Volume-	 Vol -





Original	Recharge	Original	Recharge
 Set up	 Set up / OPT /	 6	 6
 Ret ur n	 Back / Ret ur n	 Repeat	 Green / APP / Repeat
 Pause	 Pause / Step / Freeze	 7	 7
 Stop / PTY	 St op / Hol d	 8	 8
 Pl ay / RDS Di s	 Pl ay / Sl ow	 9	 9
 Pl ay / RDS Di s	 AV / Input / RDS	 Shuf fl e	 Bl ue / Pri ne Vi deo / Random
 Mut e	 Mut e / Di mmer	 +10	 Gui de / EPG / - / -
 I <<	 I << / Preset -	 0	 0
 >>I	 >>I / Preset +	 +100	 Shi ft + Gui de / EPG / - / -
 <<	 << / Tune-	 Pl ay Mde	 Yel l ow / YouTube / Repeat
 >>	 >> / Tune+	 Ent er	 Shi ft + OK
 1	 1	 Cl ear	 Exi t / Cancel / Cl ear
 2	 2	 Fol der -	 CH- / Page-
 3	 3	 Fol der +	 CH+ / Page+
 Tuner Edi t	 Red / Netflix / Search		
 4	 4		
 5	 5		

