

Nunchuk Usage Instructions:



Connection:

The Nunchuk connects to the bottom extension port of the Wii Remote. Ensure the correct orientation of the Nunchuk plug, then insert it into the bottom port of the Wii Remote. Once connected, the Nunchuk and Wii Remote function as a single unit for game control.

Operation Button:

The Nunchuk features a handle-shaped operation button, often referred to as the "C" button. This button may have different functions in various games, typically used for executing actions such as jumping, attacking, etc.

Control Stick:

The Nunchuk is equipped with a control stick, commonly known as the "Control Stick." It is used to control character movement or camera view in games. You can control the character's walking direction or change the camera's perspective by moving the stick in different directions.

Accelerometer:

The Nunchuk also includes an accelerometer, which can sense its motion and tilt. In certain games, you can perform specific actions by tilting the Nunchuk, such as steering a vehicle in driving games.

Usage Scenarios:

The usage of the Nunchuk may vary depending on the game. Some games may require you to use both the Wii Remote and Nunchuk simultaneously, while others may only need one of them.