

TEMP & TEXTURE ADJUSTMENT INSTRUCTIONS

Temperature adjustment.

1. Remove the lid of the machine and locate the temperature and texture control boards pictured below.
2. Using a very small flat screwdriver (Jeweller's screwdriver) turn the adjustment screw so that it points toward the arrowhead (starting position).
3. Fill a jug with cold water then heat it with the automatic temp & texture system, whilst heating check the temperature with a digital thermometer. Note the maximum temperature which will occur shortly after the system stops.
4. If the temperature is too cool turn the adjustment screw anti clockwise slightly, if it is too hot then turn the adjustment screw clockwise slightly.
5. Repeat step 2 until you reach the desired temperature (temperature of 65°C is good).



Texture adjustment.

1. To increase volume of stretched milk turn the adjustment screw clockwise, to reduce milk volume turn it anti clockwise. Fine tuning will be required to get the right texture and density of stretched milk, depending on the brand of milk you are using.

