 


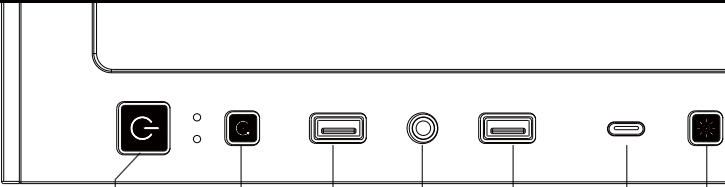
Package Content - Paket Inhalt - Conteúdo do pacote - Содержание пакета - 包装内容


	Image	Q'ty	Used for - Benutzt für - Usado para - Используется для - 用途
A		15	MB Screws - Motherboardschrauben - Parafusos da placa -mãe - Винты материнской платы - 主板螺丝
B		8	HDD Screws - HDD Schrauben - HDD parafusos - HDD-винты - HDD硬盘螺丝
C		6	PSU Screws - PSU Schrauben - PSU parafusos - ВВинты питания - 电源螺丝
D		4	SSD Screws - SSD Schrauben - SSD parafusos - SSD-винты - SSD硬盘螺丝
E		4	SSD Rubber - SSD Gummi - SSD Borracha - SSD резина - SSD螺丝垫片
F		2	Spare Standoff - Ersatztonstand - Stoff de reposição - Запасное противостояние - 备用铜柱
G		5	Cable Tie - Kabelbinder - Gravata do cabo - Кабельные стяжки - 束线带

Connectors - Anschlüsse - Conectores - Разъемы - 连接器


PORT 1L ☒ AUG GND PORT 1R ☒ PRESENCE PORT 2R ☒ SENSE1_R SENCE_S ☒ PORT 2L ☒ SENSE2_R		Combo Audio		POWER SW
				RESET SW
VBUS ☒ SSRX1+ ☒ SSRX1- ☒ GND ☒ SSTX1+ ☒ SSTX1- ☒ GND ☒ D1+ ☒ D1- ☒ NC ☒		USB3.0		HDD LED
				POWER LED

I/O Panel - N/O Panel - PaineL de N/O - Панель N/O - I/O面板

				
Power SW	Reset SW	USB2.0	USB3.0	LED SW

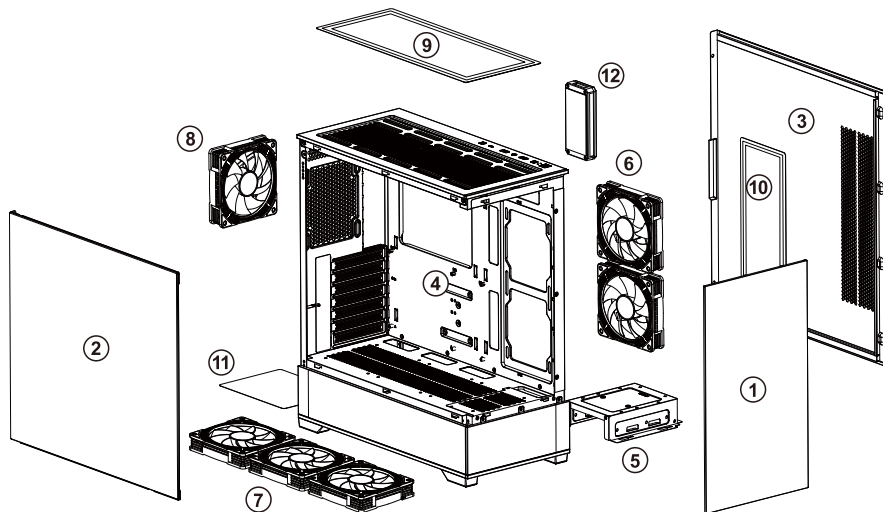

①	Tempered glass front panel / Temperaturfrontplatte / Painel frontal de vidro temperado / Передняя панель с закаленным стеклом / 钢化玻璃面板
②	Tempered glass left side panel / Linker Schaltplatte mit geschmiedeten Glas / Painel lateral esquerdo de vidro temperado / Панель левой боковой панели / 钢化玻璃左侧板
③	Right side panel / Rechte Seite / Painel lateral direito / Правая панель / 右侧板
④	Chassis / Chassis / Chassis / Шасси / 机架
⑤	HDD bracket / HDD -Klammer / Bracket de HDD / HDD кронштейн / HDD硬盘架
⑥	Motherboard plate fan x2(included) / Motherboard Plattenlüfter x2(enthalten) / Fã da placa -mãe x2(incluído) / Материнская пластина вентилятор x2(включен) / 主板位风扇 x2(标配)
⑦	PSU cover fan x3(included) / PSU Cover Fan X3(enthalten) / PSU Cover Fan X3(incluído) / Вентилятор PSU Cover x3(включен) / 电源架风扇 x3(标配)
⑧	Rear fan x1(included) / Heck -Lüfter x1(enthalten) / Ventilador traseiro x1(incluído) / Задний вентилятор x1(включен) / 后板风扇 x1(标配)
⑨	Magnetic dust filter on top / Magnetstaubfilter oben / Filtro de poeira magnética por cima / Магнитный пыли фильтр сверху / 顶板磁吸式防尘网
⑩	Magnetic dust filter on side / Magnetstaubfilter auf Seite / Filtro de poeira magnética no lado / Магнитный пыли фильтр на бок / 右侧板磁吸式防尘网
⑪	Dust filter at the bottom / Staubfilter unten / Filtro de poeira na parte inferior / Пылевой фильтр внизу / 底板PVC防尘网
⑫	V4.0 PWM ARGB HUB(included) / V4.0 PWM ARGB HUB(enthalten) / V4.0 PWM ARGB HUB(incluído) / V4.0 ШИМ Apr6 Хаб(включен) / V4.0 PWM ARGB控制盒(标配)

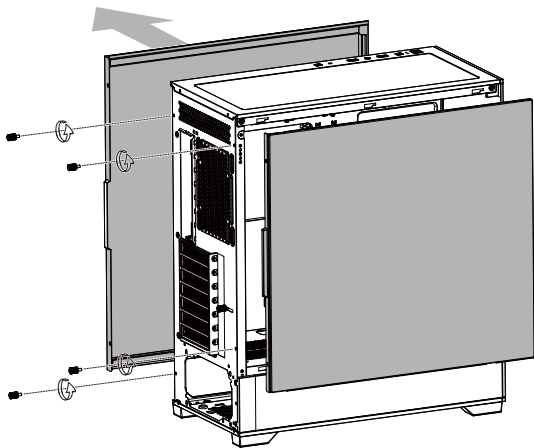


Remove the side panels.

Entfernen Sie die Seitenpaneele.

Remova os painéis laterais.

СНИМИТЕ боковые панели.

取下左右侧板。

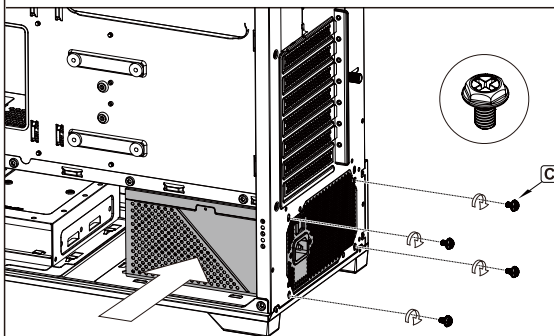


Insert PSU from left side, secure with screws.

Setzen Sie PSU von der linken Seite ein und sicher mit Schrauben.

Insira a PSU do lado esquerdo, prenda com parafusos.

Вставьте PSU с левой стороны, закрепите винтами.

将电源从右侧板置入，对齐孔位，锁上电源螺丝。

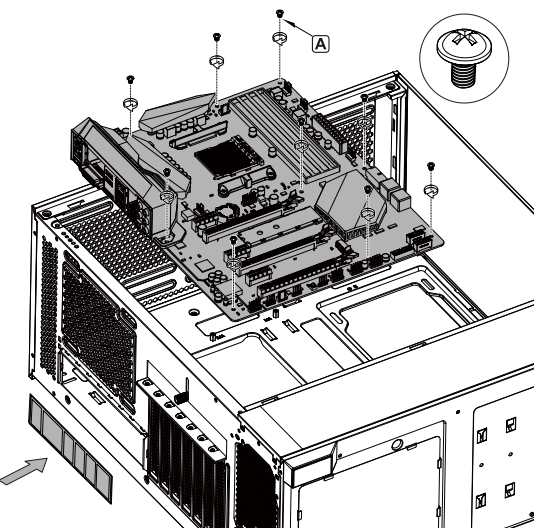

Insert the MB IO Shield, and then place the motherboard on the corresponding position and secure with screws.

Note: If install ATX motherboard, pls remove the fan on the power cover first, and then fix the fan again after motherboard is installed.

Setzen Sie den MB IO -Schild ein und legen Sie das Motherboard auf die entsprechende Position und sichern Sie sie mit Schrauben.

Hinweis: Wenn Sie das ATX -Motherboard installieren, entfernen Sie zuerst den Lüfter auf der Stromabdeckung und reparieren Sie den Lüfter erneut, nachdem das Motherboard installiert wurde.

Insira o escudo MB IO e depois coloque a placa -mãe na posição correspondente e prenda com parafusos.


NOTA: Se instalar a placa -mãe ATX, por favor, remova o ventilador na tampa de energia primeiro e, em seguida, conserte o ventilador novamente após a instalação da placa -mãe.

Вставьте щит MB IO, а затем поместите материнскую плату на соответствующее положение и закрепите винтами.

ПРИМЕЧАНИЕ. Сначала установите материнскую плату ATX, сначала удалите вентилятор на крышке питания, а затем снова исправьте вентилятор после установки материнской платы.

置入主板IO挡板,然后将主板放在对应位置,用主板螺丝固定。

注意: 如果安装标准尺寸ATX主板, 要先将电源盖上的风扇取下。

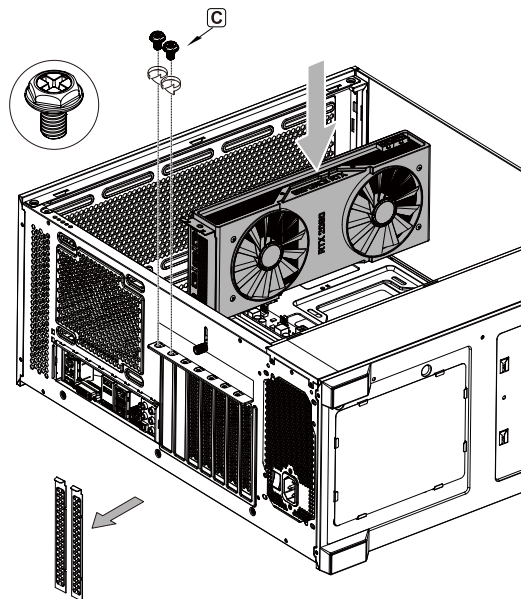


Remove the PCI-E bracket;
Install the GPU card.

Entfernen Sie die PCI-E-Klammer;
Installieren Sie die GPU -Karte.

Remova o suporte PCI-E;
Instale o cartão GPU.

Удалить кронштейн PCI-E;
Установите карту GPU.

拆下PCI-E介面卡条;
安装GPU显卡。

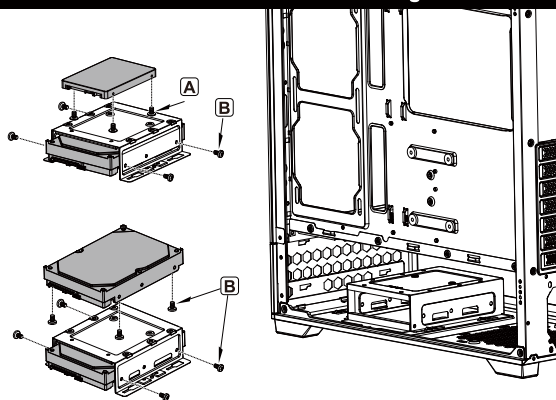


3.5" HDD hard drive installation position is compatible
with 2.5" SSD.

3.5" HDD -Festplatteninstallationsposition ist mit
2.5" SSD kompatibel.

A posição de instalação do disco rígido de 3.5" HDD é
compatível com SSD de 2.5".

3.5" Положение установки жесткого диска жесткого
диска совместимо с 2.5" SSD.

3.5" HDD硬盘安装位置兼容2.5" SSD。

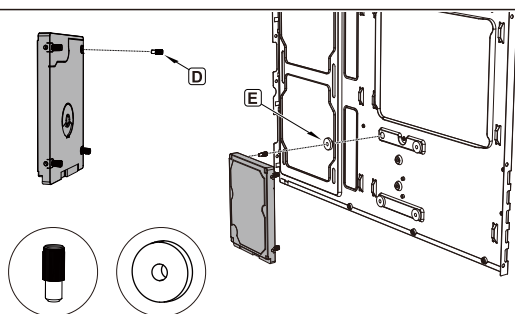


Install 2.5" SSD.

Installieren Sie 2.5" SSD.

Instale o SSD de 2.5".

Установите 2.5" SSD.

安装2.5" SSD硬盘。

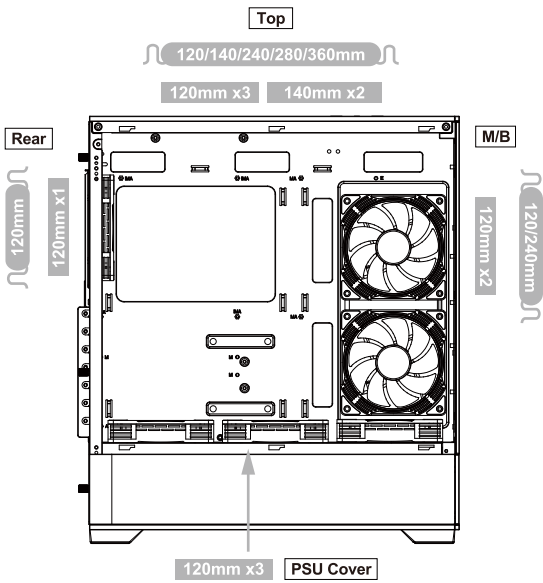


Fan Cooling System:

Top: 3x120mm, 2x140mm(Optional)
M/B Plate: 2x120mm(Included)
PSU Cover: 3x120mm(Included)
Rear: 1x120mm(Included)

Liquid Cooling System:

Top: 120/140/240/280/360mm(Optional)
M/B Cover: 120/240mm(Optional)
Rear: 120mm(Optional)

Airflow Direction - Luftstromrichtung - Direção do fluxo de ar - Направление воздушного потока - 气流方向

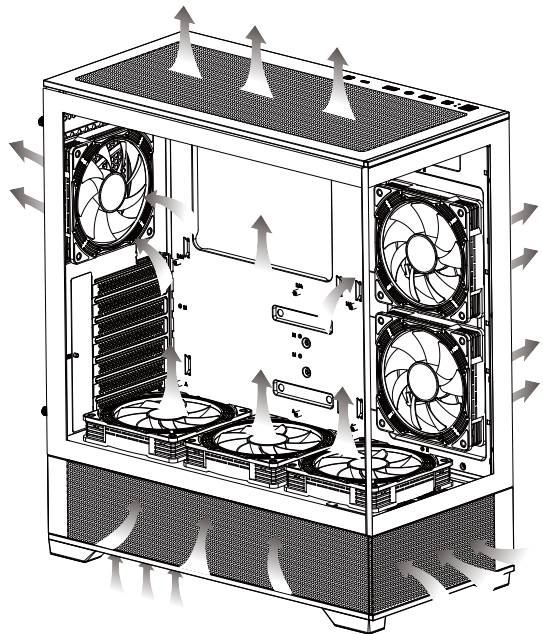

Pay attention to the airflow direction inside the chassis.


Achten Sie auf die Luftstromrichtung innerhalb des Chassis.

Preste atenção à direção do fluxo de ar dentro do chassi.

Обратите внимание на направление воздушного потока внутри шасси.

注意机箱内容的气流方向。

V4.0 PWM ARGB HUB DEMO LINK GUIDE

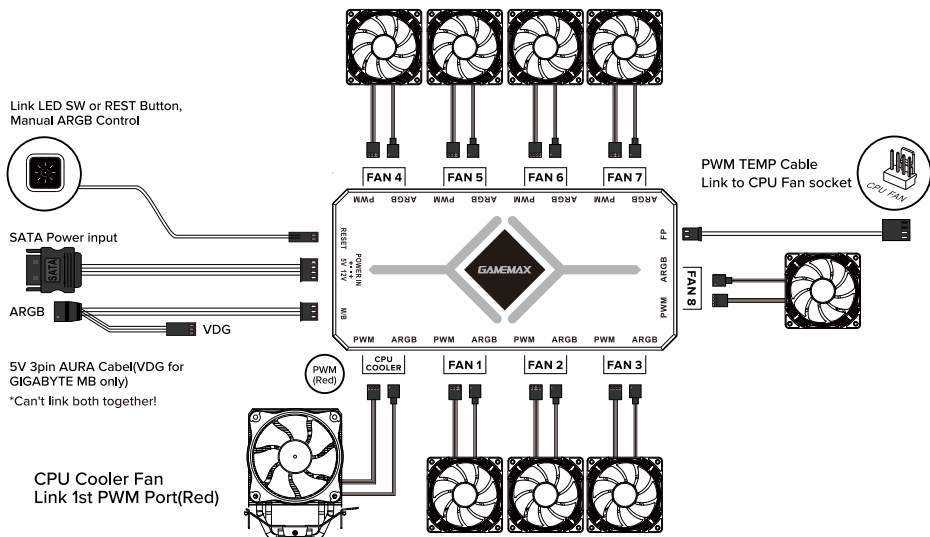

Please do not plug in the wrong power supply interface, otherwise it will burn out equipment!

REMOTE CONTROL BUTTON FUNCTION

