

尺寸：70x70mm 材料：80克书纸

单色双面印刷4开 风折琴

M6 Pro

Portable Waterproof
Wireless Speaker

INSTRUCTIONS

Dear Sir/Madam,

Hope you are well, Wonderful Sound that Will
Immediately Brighten Up Your Day.
If you have any words to say about the bluetooth speaker,
please don't hesitate email and email us via,

eduplink_support@126.com or
eduplink_warranty@126.com

Kind regards

EDUPLINK

BUTTONS

1. Power Button
Press and hold the button to switch on or off.
Click to play or pause.

2. Wireless / Phone Call
Click the button to (1) switch between
Wireless and AUX modes or (2) answer/hang up calls.
Press and hold the button to disconnect the
Wireless connection.

3. "+" Button
Click to increase volume.
Press and hold the button for next track.


4. "-" Button
Click to decrease volume.
Press and hold the button for previous track.

5. TWS Pairing Button
Press and hold start or cancel TWS interconnection.
Click to turn on or off party lights.

6.Type-c charging port

7.TF card slot

8. External Audio Connection

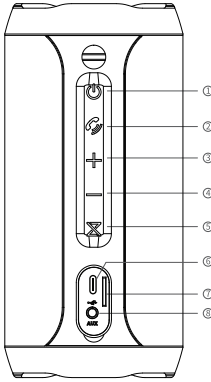

SPECIFICATION

Product Model: M6 Pro
Wireless Version: 5.0
Wireless Transmission Distance: >10M
Impedance: 4Ω
Sensitivity: 1000mv
Frequency Response Range: 60Hz-20KHZ
Speaker: 45mm internal magnetic 4Ω10W
Output Power: 2*10W
Battery: 3600mAh 3.7V

Charging Voltage: 5V=1A
Product Dimensions: 160mm*79mm*79mm
Product Weight: 452g
Standby Time: 90 days
Play Time: 8 hrs
Supported Features: Wireless, audio input, TF card
Distortion: 1%
Signal To Noise Ratio: 70dB
Waterproof Rating: IPX7

HOW TO USE

Switching On/Off

Press and hold the power button for 2 seconds to switch on; one more time to switch off.

Wireless Connection

Once the product is switched on, it enters wireless mode and the power button begins to flash.
Turn on your wireless device, searching for " M6 Pro ", and pair with it. If they are connected
successfully, you will hear a prompt tone. If the power button stops flashing and stays on, you
can play music on your device through the speaker.

TWS True Wireless Stereo Playback

Switch on two M6 Pro speakers, entering Wireless mode. Click the button ① on one of the
speakers, White lights flickered alternately, and the speaker will automatically search for the
other speaker.

to connect.After the connection is successful, the two speakers will automatically convert into left
and right channels. Repeat the wireless connection steps to connect the speakers with your device.
After the connection is successful, the two speakers can play music and deliver stereo sound.

Note:

1. This function requires two M6 Pro speakers, switching them on.

2. Speakers do not have wireless connection with any device before TWS pairing.

3.When the TWS is connected, long press the ① button of one of the products to cancel the
connection.

AUX Audio Input

Connect a 3.5mm audio cable to your phone's/computer's headphone output port, switch the
speaker to AUX input mode, and now you can control music on your phone or computer.

TF / Micro SD Audio Input

The speaker is compatible with TF/Micro SD cards of up to 32GB in size and can play MP3 and WMA
audio files directly. Simply insert a compatible card into the slot underneath the speaker and the
unit will autom-atically switch to TF mode and Automatically play the music in the card. You can use
the media controls on the front of the unit to play, pause and navigate between tracks on the card.

Charging

This product is not sale with adapter, Please buy accessory package together with power
adapter that has been certificated by 3C and meet safety requirements.

1. When you hear the voice prompt "out of battery", charge the speaker as soon as possible.

2. It takes 4-5 hours to get fully charged.

3. The power lamp breathes when charging and lights long after filling.

STORE YOUR SPEAKER

1. Turn off the speaker during storage and be sure it is properly protected.

2. Avoid high temperatures (above 40 °C), such as high temperature cabins or being exposed to
direct sunlight (high temperatures will damage the exterior and decrease battery life).

3. Do not expose speakers or other parts to rain or liquids.

WARRANTY

This product is covered under warranty for a period of one year from the date of sale
limited to normal use and maintenance of the machine parts, materials and functions.
Problems and failures verified upon further identification will be provided free repair
and replacement parts.

This warranty does not apply:

(a) to a product that is out of warranty;

(b) The speaker is damaged and the shell is damaged if the user does not comply with
the instructions;

(c) to a product that has been disassembled, repaired or modified without the
authorization of REMAX;

(d) if warranty card and proof of purchase cannot be presented;

(e) to damage caused by earthquake, fire or other external causes, natural disasters, etc.

**Note: The warranty does not include product transport costs and does not
provide on-site maintenance services.**

WARRANTY FEEDBACK FORM(TICK OFF)

A. No sound

B. Sound quality deteriorates

C. Button mal-function

D. Unable to pair other devices

E. Can not be recharged

F. others

Buying time


Dealers of sale

Time of problems


User' s contact info

HOW TO EMAIL QUICKLY?

Please scan qr and email to us .



eduplink_warranty@126.com



eduplink_support@126.com

V. 1. 0. 5

FC CE CCC