

RAZER WOLVERINE V2

MASTER GUIDE

Hit the digite ague with a wired gaming controller designed for the Xbox. Series X console. With advanced custom zability for greater precision and control over your game, the **Razer™ Wolverine V2** lets you dominate the competition from the comfort of your couch.


CONTENTS

1. WHAT'S INSIDE / WHAT'S NEEDED	3
2. LET'S GET YOU COVERED	
3. TECHNICAL SPECIFICATIONS	
4. GETTING STARTED	
5. USING THE CONTROLLER	
6. SAFETY AND MAINTENANCE	
7. LEGALESE	
/. LEGALEGE	IU

1. WHAT'S INSIDE / WHAT'S NEEDED

WHAT'S INSIDE

Razer Wolverine V2

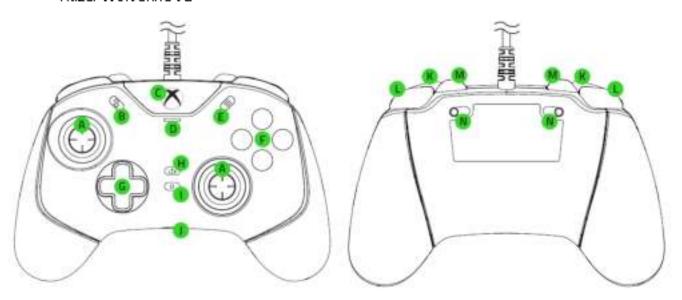

- A. Analog Thumbsticks
- B. View button.
- C. Xbox button
- Status indicator
- E. Menu button.
- F. Razer[®] Mecha-Tactile action buttons
- G. Razer Mecha-Tactile D-pad
- Important Product Information Guide

- H. Share button
- I. Audio Configuration button
- J. 3.5 mm headset port
- K. Bumpers (LB / RB)
- L. Triggers (LT / RT)
- M. Multi-function bumpers (M1 / M2)
- N. Trigger stop switches

WHAT'S NEEDED


- Xbox One */Xbox One *5/Xbox One *X/Xbox Series *X
 OR
- PC (Windows * 10 64-bit or higher) with a free USB port.
- Internet connection for software installation.

SAFETY STATEMENT

IMPORTANT! Before using your Xbox console with this product, read its instruction manual for safety, health, and other information regarding the use of your Xbox console.

2. LET'S GET YOU COVERED

You've got a great device in your hands, complete with a 1-year limited warranty coverage. Now maximize its potential and score exclusive Razer benefits by registering at <u>razerid.razer.com</u>

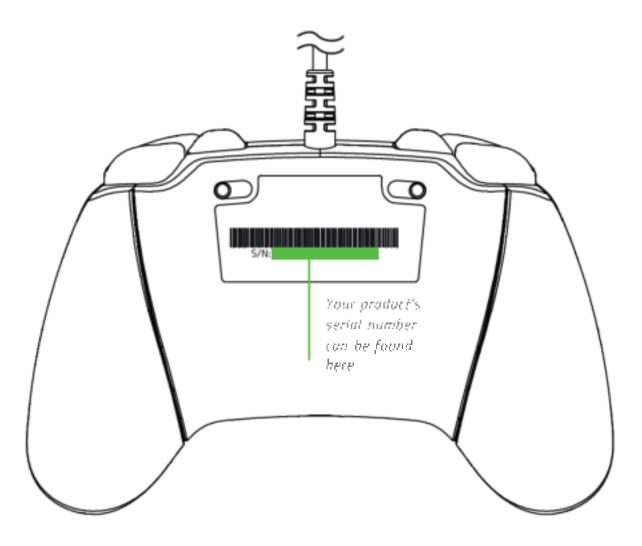

Got a question? Ask the Razer Support Team at support razer.com

3. TECHNICAL SPECIFICATIONS

FEATURES

- Razer * Mecha-Tactile Action Buttons and Razer * Mecha-Tactile D-Pad
- 2 remappable multi-function buttons
- Hair Trigger Mode with trigger stops
- 3.5mm analog audio port compatible for Xbox and PC (Windows)
- 9.8 ft/ 3 m wired cable with strain relief.
- Wired connection

APPROXIMATE SIZE & WEIGHT

Length: 161.3 mm / 6.33 in

Width: 105.8 mm / 4.16 in


Height: 63 mm / 2.55 in

Weight: 274 g / 0.604 lbs

4. GETTING STARTED


SETTING UP YOUR CONTROLLER

Connectyour Razer Wolverine V2 to your Xbox consoleor PC.

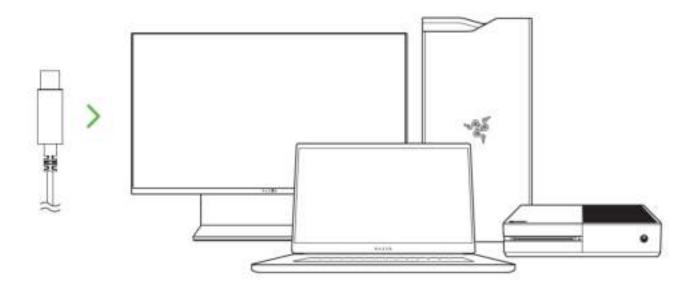

On Xbox console

Press the Xbox button to begin using your controller.

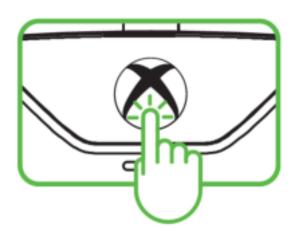

On PC

Wait until the controller's drivers are automatically installed or manually update the drivers through Device Manager.




5. USING THE CONTROLLER


AUDIO CONFIGURATION BUTTON

Use the Audio Configuration button to fine-tune the master volume as well as adjust the balance between game and that audio levels.

To increase or decrease the master volume, press and hold the Audio Configuration button then press the Up or Down directional button, respectively.

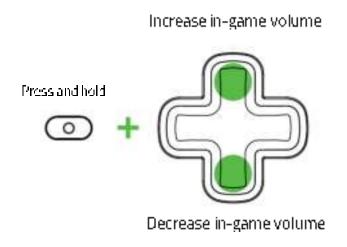


To increase the voice chat and decrease the game volume or vice versa, press and hold the Audio Configuration button then press the Left or Right directional button, respectively.

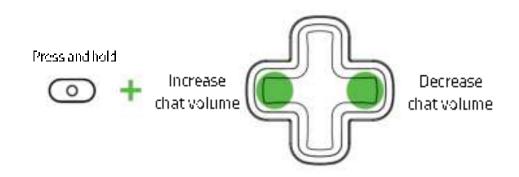

TRIGGER STOP SWITCHES


You may enable the Trigger Stops to shorten the travel distance and response time (Active Hair Trigger Mode) of the Left and Right triggers by sliding the Trigger Stop Switches outwards. To disable, simply slide the switches inwards.

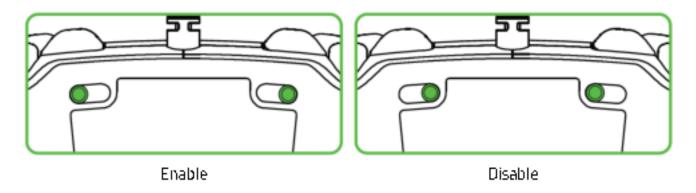

RAZER™ CONTROLLER SETUP FOR XBOX

Use the Razer[®] Controller Setup for Xbox* app to access countless customization options for your controller such as adjusting the sensitivity of its thumbsticks for better aiming and handling, and even remapping its buttons for each game. By default, each button is mapped to its specific function, while the M1 and M2 Multi-Function buttons are mapped with the following functions, as shown here.

The Xbox button is not remappable.

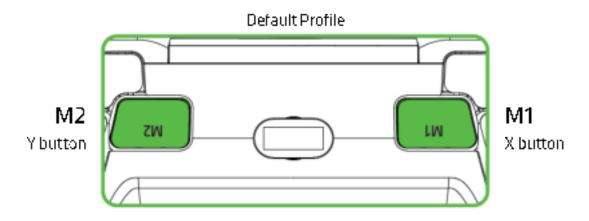

*Download and install the Razer ** Controller Setup for Xbox app from the Microsoft Store on your garning cansale or PC.

SAFETY AND MAINTENANCE

SAFETY GUIDELINES

In order to achieve maximum safety while using the Razer Wolverine V2, we suggest that you adopt the following guidelines:

Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to <u>support.razer.com</u> for support. Do not attempt to service or fix the device yourself at any time.

Do not take apart the device and do not attempt to operate it under abnormal current loads. Doing so will void your warranty.

Keep the device and its components away from liquid, humidity or moisture. Operate the device and its components only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug and switch off the device in order to let the temperature stabilize to an optimal level.

MAINTENANCE AND USE

The Razer Wolverine V2 requires minimum maintenance to keep it in optimum condition. Once a month we recommend you unplug the device and clean it using a soft cloth or cotton to prevent dirt buildup. Do not use soap or harsh cleaning agents.

7. LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

© 2020 Razer Inc. All rights reserved. Razer, the triple-headed snake logo. Razer logo, "For Gamers." By Gamers." and "Razer Chroma" logo are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries.

©2020 Microsoft Corporation. All Rights Reserved. Microsoft, Xbox, Xbox "Sphere" Design, Xbox. One and Xbox Series X are trademarks of the Microsoft group of companies.

Razer Inc. ("Razer") may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Wolverine V2 (the "Product") may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit razer.com/warranty.

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer's liability exceed the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.