

US UK

Dear user

Thank you for choosing REDRAGON product. To protect your rights and for better customer service, please read the following warranty rules carefully.

1. Within 18 months of purchase date, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.

2. Consumable parts (such as foot pads) and spare parts replacement are not included in our warranty.

1

A detailed diagram of the top-left corner of the keyboard. It shows three circular LEDs labeled 'CAP', 'M', and a battery icon. To the right is a rectangular switch labeled '2.4G/OFF/BT' and a slot labeled '2.4G receiver storage slot'. The text 'Type C port' is also visible.

OS Support

Windows XP/ Vista/ Win 7/ Win 8/ Win 10/Win 11/Mac OS

How to connect the keyboard with multi-ple devices
Wired Connection

- 1. 2.4G/OFF/BT switch on "OFF".
- 2. Connect the keyboard to computer with USB cable.
- 3. The computer will recognize and configure the keyboard automatically.

2.4G Wireless Connection

- 1. 2.4G/OFF/BT switch on "2.4G".
- 2. Press and hold [FN]+[4] for 3 seconds, the LED ^M flashes quickly in white, plug the USB receiver into USB port on your computer, after paired the LED will turn to white steady on.

Bluetooth Connection

- 1. 2.4G/OFF/BT switch on "BT".
- 2. Press and hold [FN]+[1/2/3] for 3 seconds, ^M flashes in Blue[1] or Red[2] or Green[3] quickly.

2

- 3. Turn on Bluetooth function and searching for available devices, It will find "BT5.2_1 or BT5.2_2 or BT5.2_3" device. Select a Bluetooth name to pair, after paired the LED will turn to steady on.
- 4. To switch the Bluetooth connections between BT1/BT2/BT3, press FN+1/2/3.

Product Features
Backlight

- 1. The default 20 backlight patterns switch by press [FN] + [R_SHIFT] to cycling switch the light patterns.
- 2. Press [FN] + [←/→] to adjust light rotating speed, total 6 levels.
Press [FN] + [↑/↓] to adjust backlight brightness, total 6 levels.
- 3. Backlight color switching: [FN] + [ENTER] to cycling switch Red, Green, Blue, Yellow, Purple, Cyan, White, RGB.
- 4. Backlight DIY: Press [FN] + [Back space] to enter DIY mode, [ESC] [A] [S] [W] [D] [↑] [↓] [←] [→] lights on by default, Press [FN] + [Back space] again to start recording, "CAPS" LED will flashing till the recording completed, Continuously press the key to select the color you want to set, once key light color setting are completed, press [FN] + [Back space] to save.

[WIN] lock

Press [FN] + [WIN] to lock [WIN] key, repeat to unlock (DO NOT lock the key when using on MAC O.S.)

Windows / MAC shortcut keys switching

Press [FN] + [W] = Window shortcut keys, Press [FN] + [A] = MAC shortcut keys. You can also switch it by LCD screen menu.

3

Commands of key combinations with [FN] key

WINDOWS O.S.	MAC O.S.
FN+F1: Screen brightness -	F1: Screen brightness - / FN+F1= F1
FN+F2: Screen brightness +	F2: Screen brightness + / FN+F2= F2
FN+F3: Multiple windows	F3: Multiple task / FN+F3= F3
FN+F4: Speech recognition(win10 or newer)	F4: Siri / FN+F4= F4
FN+F5: Show desktop	F5: Show desktop / FN+F5= F5
FN+F6: Search	F6: Search / FN+F6= F6
FN+F7: Pre track	F7: Pre track / FN+F7= F7
FN+F8: Play / Pause	F8: Play / Pause / FN+F8= F8
FN+F9: Next track	F9: Next track / FN+F9= F9
FN+F10: Mute	F10: Mute / FN+F10= F10
FN+F11: Volume down	F11: Volume down / FN+F11= F11
FN+F12: Volume up	F12: Volume up / FN+F12= F12

Restore factory settings

Press and hold [FN] + [ESC] for 3 seconds.

4

Knob and LCD screen The knob adjusts volume by default, press the knob to enter LCD screen menu, rotating the knob to select the menu, press to confirm. The screen menu will quit automatically after 5 seconds of inactivity. How to recharge the keyboard When battery is low, the backlight will turn off, the power LED will blink red slowly when pressed a key. Connect the keyboard with computer for charging. Battery power indicator: Press and hold [FN] + [INS] to show the battery level, release to back to current backlight mode. FAQ 1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer. 2. If you spill liquid on the keyboard, please unplug the keyboards USB cable from the computer immediately. Wipe off excess liquid and put the keyboard in a dry and ventilated place. Make sure the keyboard is dried naturally before the next use. REDRAGON QUALITY ASSURED 5	BATTERY SAFETY GUIDELINES DO NOT replace the battery with a different model. DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material. DO NOT touch the battery if material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes. DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition. DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations. DO NOT impact, bend, alter, dissemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful. CAUTION: Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock. This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device. Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences. (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil. 6	FCC Statement Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. 7	REDRAGON FLEKACT PRO REDRAGON WIRED/2.4G WIRELESS/BT 3 MODES CONNECTIONS WITH LCD SCREEN GASKET MOUNTED MECHANICAL KEYBOARD Mechanical Gaming Keyboard User manual 封面 8
---	---	--	---

型号	K708-RGB-PRO/7156		备注：尺寸：100x100mm (折页) 材质：80g书写纸 印刷：单黑色双面印刷					Eastertimes Tech
名称	说明书							
日期	2024-6-29							
页码	1 OF 1		文件编号					
绘图	雷国建	审核	香敏琪		核准		版本	

