# (Fold Inward) — — — **▶**

(Back Cover)

(Front Cover)

## Re-Pairing the Earbuds

The AR-TWS200 earbuds should pair to each other automatically when powered ON. If the earbuds come un-paired from each other, or only one earbud pairs to your device, try following these instructions to re-pair

- 1. Go to your device's Bluetooth settings and find the earbuds on the list of Bluetooth devices. Tap to manually "Forget" the earbud(s), then turn your
- 2. Place the earbuds in their case to power them OFF, then remove them to power nem ON again.
- 3. After a moment, the earbuds should automatically re-pair to each other. A voice will be heard indicating that they have paired to each other.
- 4. Once re-paired, you can now pair the earbuds to your mobile device. Turn your vice's Bluetooth back on again. Follow the instructions in the **Bluetooth** Pairing section of this manual to try pairing again.

### Compliance Information

FCC Information
This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the

Note: This equipment has been tested and found to comply with the limits for a Class 8 digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can relative radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
• Recrietor relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment tid no noutlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING Li-ion Battery Inside
This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, a never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°

### Rating Label Definitions







This symbol signifies that this is a wireless device powered by Bluetooth® technology. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. used under Bornes.



### **Warranty Information**

### 90-Day Limited Warranty

LIMITED WARRANTY TO ORIGINAL CONSUMER
This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

Visit our customer support portal: www.customersupport123.com and select "Support".
 Select the brand, fill out the corresponding form (exchanges require dated proof of purchase from an authorized retailer) then submit your request.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will ire you to file a claim with the carrier.

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTES, WHETHER EXPRESS OR IMPLED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY, DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTES AFTER THE EXPRESS WARRANTY PENDO STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, RIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REPUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTORS SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURES BE LIABLE FOR ANY INCIDENTAL DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSCIUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFTIS, BUSINESS, SAMINGS, DATA OR RECORDS) CALUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT, EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY, NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTIOR SHALL NOT EXCRED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCRED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCRED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE. NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential da or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you sy legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

# ART+SOUND



# Bluetooth

# **ART+SOUND TWS EARBUDS** WITH LCD CHARGING CASE



**User Manual** AR-TWS200

### Before You Begin...

### **Questions and Customer Support**

For questions, troubleshooting, or any other assistance, please visit our customer support portal at www.customersupport123.com, and click "Support."

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

- THIS DEVICE IS NOT A TOY, do NOT allow children or pets to use or play with
- this device.Do not disassemble, modify, or repair the device.
- Do not expose the device to extreme temperatures (heat or cold), open flames.
- Do not submerge in water.
- Low power may cause poor Bluetooth connection or sound distortion.
- Do not overcharge battery.
   If using with a USB adapter, make sure the adapter is not damaged.
   Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust, or water, or come into contact with any conductive materials
- such as liquids, metallic powders, etc.

  This device contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of

### **Technical Specifications**

- Bluetooth Version: 5.4
   Charging Case Battery: 180 mAh
- Charging Case Charge Time: 2 hrs
   Earbuds Battery: 30 mAh


- · Charging Case (x1)
- Total Playtime: 10 hrs (varies depending on settings and usage)

In the Box
• AR-TWS200 Wireless Earbuds (x1)

· Charging Cable (x1)

### Location of Controls

(On Bottom of Case)

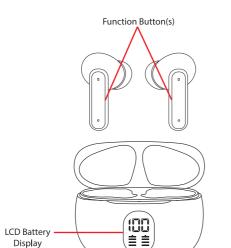

The case charging LED indicator will show charging progress while charging.

### Charging the Earbuds

Use the included charging case to protect and charge the earbuds as described below.

- 1. Make sure that the case is fully charged.
- 2. Open the cover of the charging case and ports. They should easily "clip" into place and feel secure.
- while charging and turn BLUE, then OFF when fully charged.

Note: A tone will be heard when the earbuds are low on battery. Please recharge

### **Getting Started**

### Charging the Case

Insert the small connector of the supplied charging cable into the charging port on the bottom of the case. Insert the large connector into a USB power source such as the USB port on a computer, or into a **5V USB adapter** (not included) and plug

3 The earbuds' LED indicators will turn RED

### Powering ON/OFF

- The earbuds will automatically power ON when removed from their case, and the LED indicators on the earbuds will flash BLUE. The earbuds will power OFF when
- When powered ON, the earbuds will automatically pair to each other and then enter Bluetooth pairing mode. They may automatically re-pair to a previouslypaired device in range
- The earbuds can also be powered ON and OFF by pressing and holding either function button for 5 seconds. Note: the earbuds will automatically power OFF if they do not connect to a

Bluetooth device after 3 minutes.

### Adjusting Volume & Playback

To listen to music and talk on the phone using your earbuds, you must pair them to a Bluetooth-enabled device. If you are pairing the device for the first time, please see the Bluetooth Pairing section in this manual.

Once paired, playback can be controlled through your paired device, or with the

- 1x press either earbud to PAUSE/RESUME playback.
- 2x press left earbud to skip to the PREVIOUS TRACK.
- 2x press right earbud to skip to the NEXT TRACK.
- Press and hold left earbud for 2 seconds to DECREASE VOLUME. • Press and hold right earbud for 2 seconds to INCREASE VOLUME.

### Bluetooth Pairing

- . Power the earbuds ON. Both of their LED indicators will **flash RED and BLUE**. 2. After a moment, a voice will be heard on the earbuds indicating that they have
- paired to each other. 3. Set your mobile device to search for Bluetooth devices. When it appears, select
- "AR-TWS200" from the list of found devices. 4. Once successfully paired to your device, a tone will be heard, and you will be
- able to play audio on your earbuds.

Pairing Issues? See the Re-Pairing the Earbuds section in this manual.

Note: Either earbud can be used independently.

Answering/Ending Phone Calls When paired, you can control your paired device's phone functions using your

- device, or with the Function Buttons: • 1x press either earbud to ANSWER/END a call.
- Press and hold either earbud to REJECT an incoming call.
- 4x press right earbud to call the PREVIOUS NUMBER.

### Activating Voice Assistant

If your Bluetooth-paired device has a Voice Assistant (Siri, etc.), you can activate it with the earbuds:

• 3x press either earbud to ACTIVATE VOICE ASSISTANT.