



MCombo®



OWNER'S MANUAL

# 3-PERSON SWING CHAIR

shopify



Mcombo.com

amazon



Amazon.com/mcombo

Newacme LLC, 2808 Vail Ave, Commerce, CA, 90040

sales@mcombo.com

1-323-597-1109 (8:00 a.m. - 4:00 p.m. (Monday - Friday) TIME ZONE: PST)

NEWACME LLC [www.mcombo.com](http://www.mcombo.com) / [sales@mcombo.com](mailto:sales@mcombo.com)

6055-4089

Hello,  
Thank you for choosing MCombo®  
Let's get started

**○ PURCHASER’S AGREEMENT**

By accepting delivery of this product, you promise that you will not change, alter, or modify this product or remove or render inoperable or unsafe any guards, shields or other safety features of this product.  
You will not refuse or neglect any retrofit kits that MCombo may provide to enhance and preserve the safe use of this product.

# CONTENTS

<b>I</b>	<b>SAFETY GUIDELINES</b>	- 01
<b>II</b>	<b>MAINTENANCE</b>	- 02
<b>III</b>	<b>ASSEMBLY INSTRUCTIONS</b> <ul style="list-style-type: none"><li>• Preparation</li><li>• Part List</li><li>• Assembly Steps</li></ul>	- 02
<b>IV</b>	<b>RETURN / REPLACEMENT POLICY</b>	- 14
<b>V</b>	<b>MCOMBO CUSTOMER SUPPORT</b>	- 15
<b>VI</b>	<b>WARRANTY DISCLAIMER</b>	- 16

# I. SAFETY GUIDELINES

 **WARNING**

For your own safety, please strictly follow the instructions in this manual, otherwise personal injury may result!

Before you proceed, please read the following safety precautions:

- Separate and count all parts and hardware.
- Install not less than 6 feet from any obstruction such as fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Tighten all nuts and bolts securely.  
  
Never use power tools or excessive force during assembly and tightening of bolts.
- Always place the product on a flat, steady and stable surface.
- It is recommended to protect in case of strong wind or rain and in your absence.
- Do not use candles, matches, or any open flames in or near the swing.

# II. MAINTENANCE


 
 

 
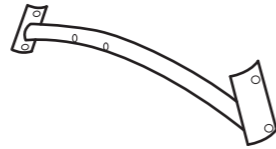

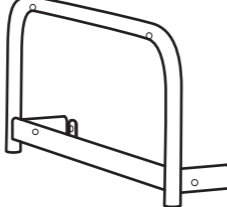
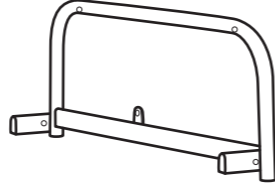





- Wash frame parts and fabric with mild soap and water, rinse thoroughly.
- Dry frame completely and allow the fabric to drip dry.
- Do not use bleach, acid, or other solvents on the fabric or frame parts.
- Please inspect and tighten all bolts or fasteners on a regular basis to ensure proper performance and safety of your swing.







 


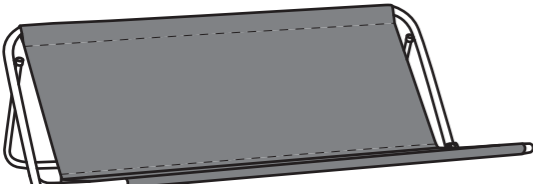








# III. ASSEMBLY INSTRUCTIONS

**1.** Preparation

Please remove all protective foam. Before assembling, make sure that you lay out and identify all parts listed below in the parts list. install on level ground.

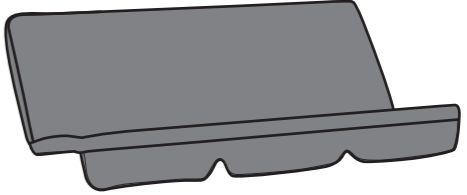2. Part List

      
Frame Part		
<b>A</b>  Leg x4	<b>B</b>  Top Bar ( left ) x1	<b>B-1</b>  Ceiling Rotation Base x1 ( preinstalled on part B )
<b>C</b>  Top Bar ( right ) x1	<b>C-1</b>  Ceiling Rotation Base x1 ( preinstalled on part C )	<b>D</b>  Leg Support x2
<b>E</b>  Conecting Bar x4	<b>F</b>  Arm Frame ( left ) x1	<b>F-1</b>  Arm Frame ( right ) x1
<b>G</b>  Seat Frame ( front ) x1	<b>H</b>  Seat Frame ( back ) x1	
<b>I</b>  Seat Cloth x1	<b>J</b>  Canopy Frame ( Right&Left ) x2	<b>J-1</b>  Ceiling Rotation Connector x2

<b>K</b>  Bottom Support ( front&back ) x1	<b>L</b>  Bottom Support ( left ) x1	<b>L-1</b>  Bottom Support ( right ) x1
<b>M</b>  Canopy x1	<b>N</b>  Seat Cushion x1	
<b>O</b>  Spring Hook x2	<b>P</b>  Spacer x2	<b>Q</b>  Knob x2
Screw Pack		
<b>T</b>  M8 x 110 Bolt Set x4	<b>U</b>  M8 x 75 Bolt Set x2	<b>V</b>  M8 x 55 Bolt Set x4
<b>Y</b>  M6 x 35 Screw x4	<b>Z</b>  M6 x 45 Screw x2	<b>Z-1</b>  M6 x 30 Screw x1
<b>W</b>  M6 x 60 Bolt Set x8	<b>R</b>  Double-ended Spanner x1	<b>X</b>  M6 x 40 Bolt Set x4
<b>S</b>  Allen Wrench x2		


3. Assembly Steps

Step1 - Frame Assembly


(1). Connect #B (Left Top Bar) and #C (Right Top Bar) with two sets of #Z (M6\*30mm Bolt Set).

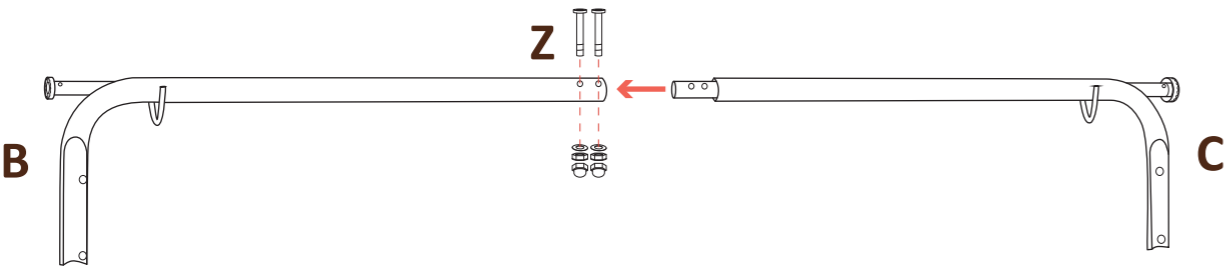


(2). Connect #A (Leg) to #B (Left Top Bar) and #C (Right Top Bar) respectively by using four sets of #T (M8\*110mm Bolt Set).

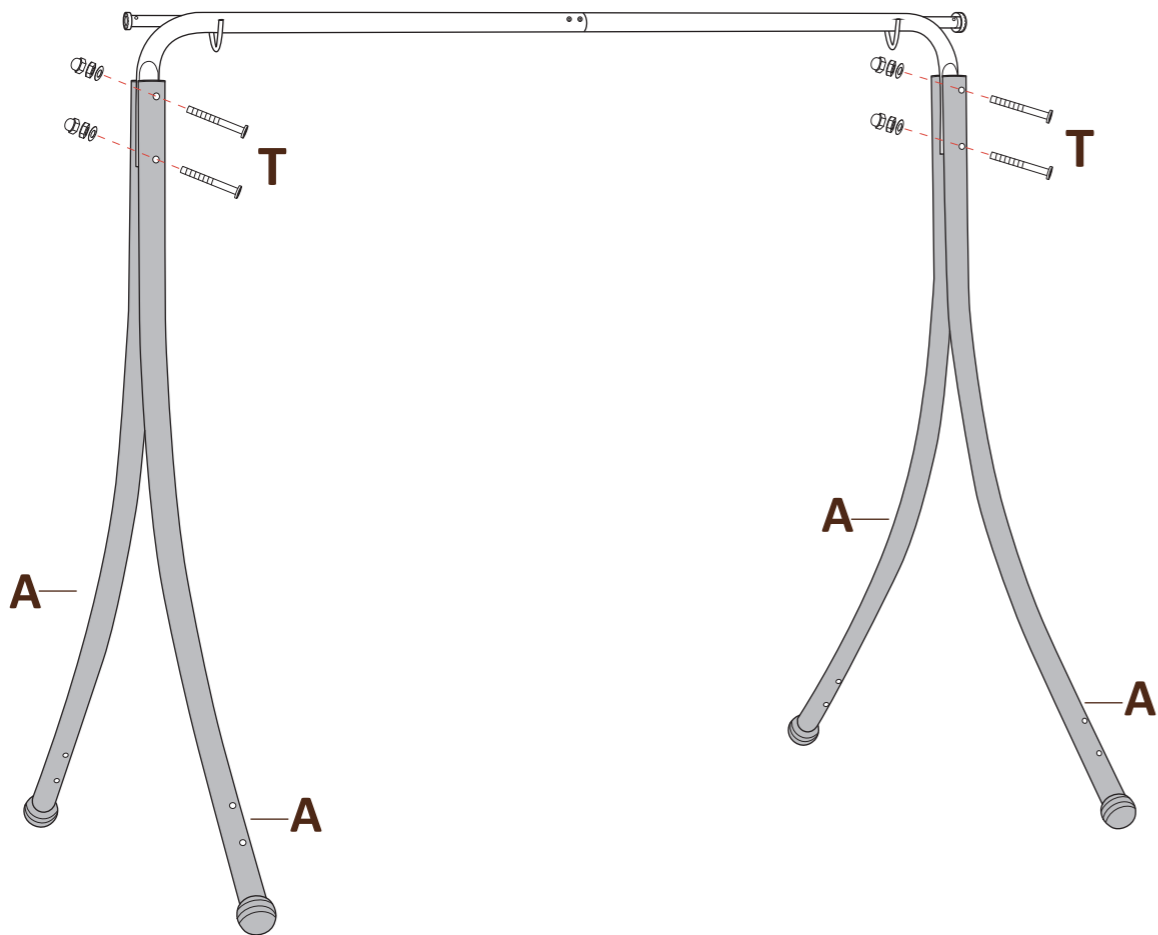


(3). Connect #A (Leg) to #D (Leg Support) with two sets of #W (M6\*60mm Bolt Set).

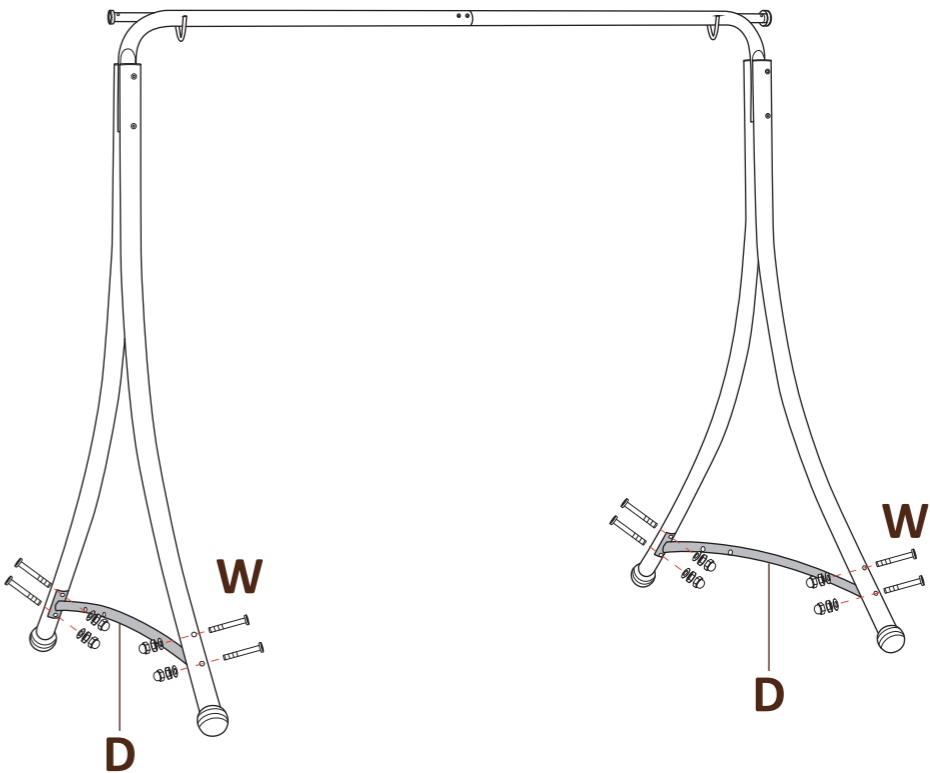

(4). Connect #L (Left Bottom Support) and #L1 (Right Bottom Support) with two sets of #Z1 (M6\*30mm Bolt Set)

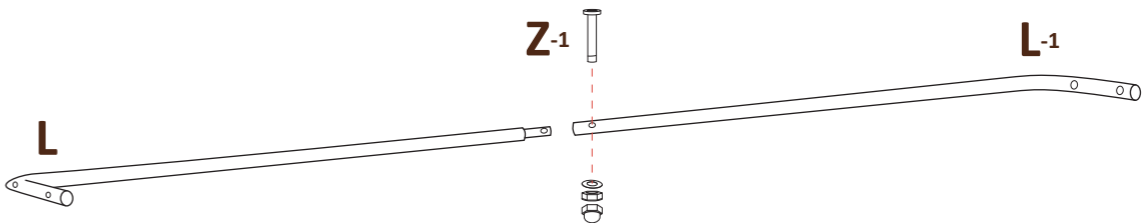


(5). Connect **#D** (Leg Support) and **#L1** (Right Bottom Support), **#L** (Left Bottom Support) with two sets of **#V** (M8\*55mm Bolt Set).

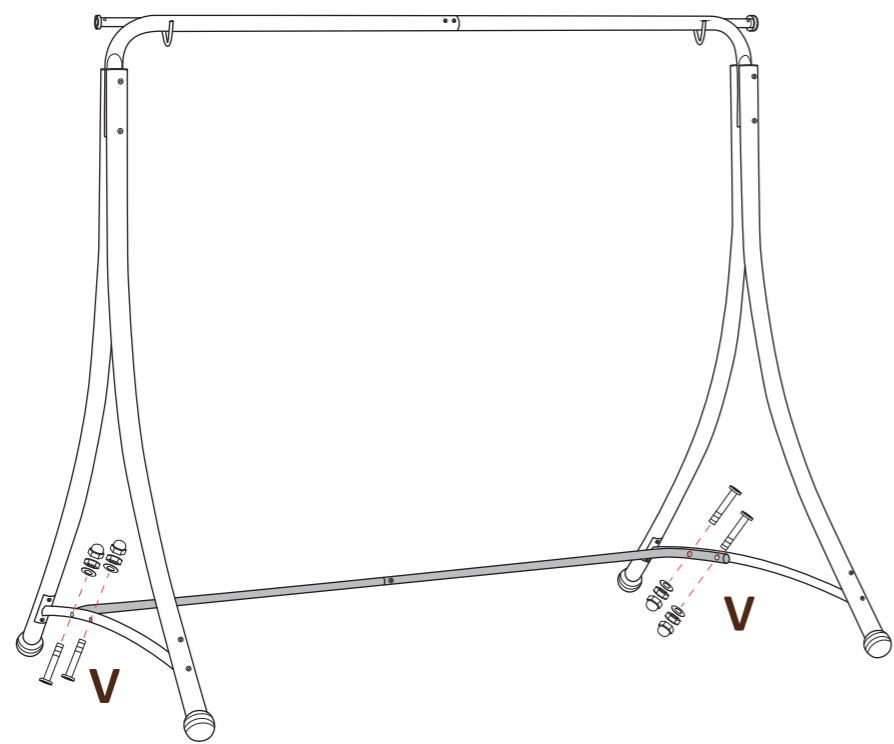


Step2 - Seat Assembly


(1). Connect **#F1** (Left Arm Frame) to **#F** (Right Arm Frame) and **#G** (Front Seat Frame) to **#H** (Back Seat Frame) with four sets of **#Y**(M6\*35mm Bolt Set).

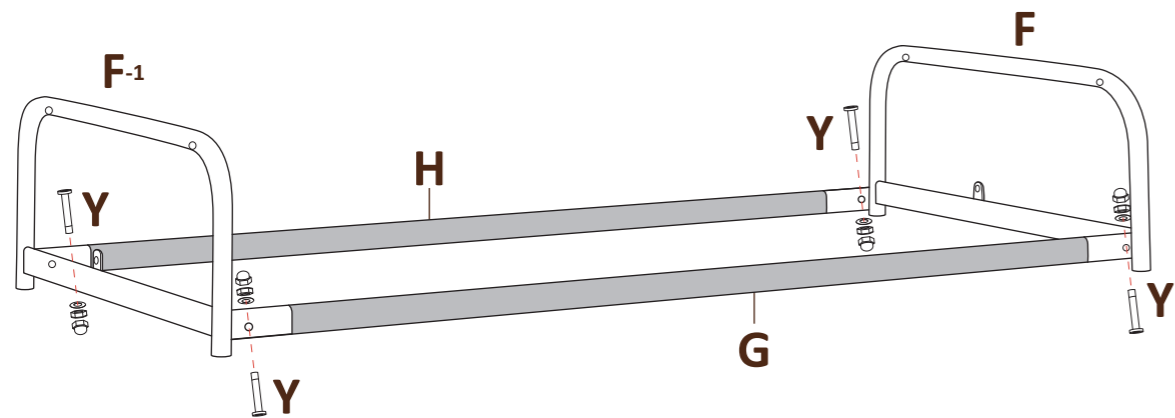

(2). Use **#U** (M8\*75mm Bolt Set) through **#P** (Spacer) to fix **#I** (Seat Cloth) to the seat frame.

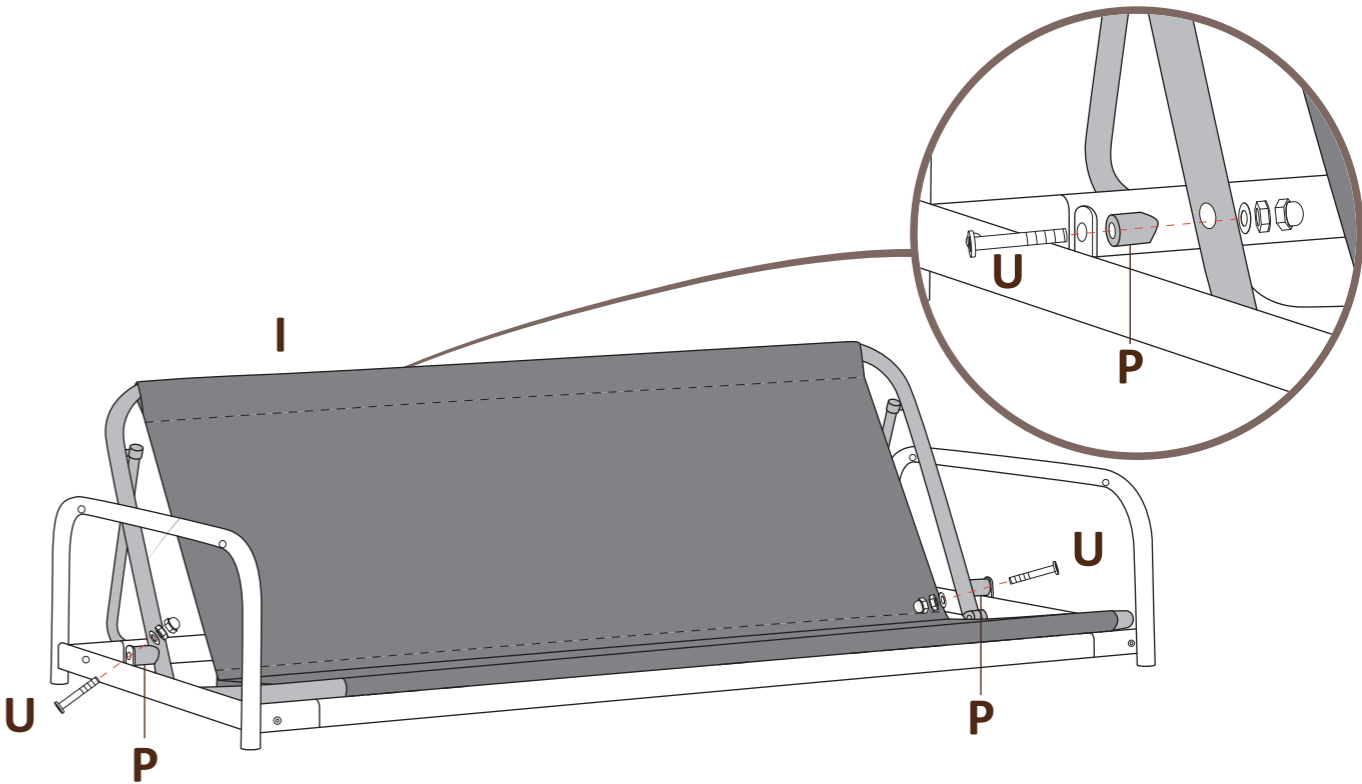


(3). Attach **#E** (Conecting Bar) to **#F** (Right Arm Frame) and **#F1** (Left Arm Frame) with four sets of **#X** (M6\*35mm Bolt Set).

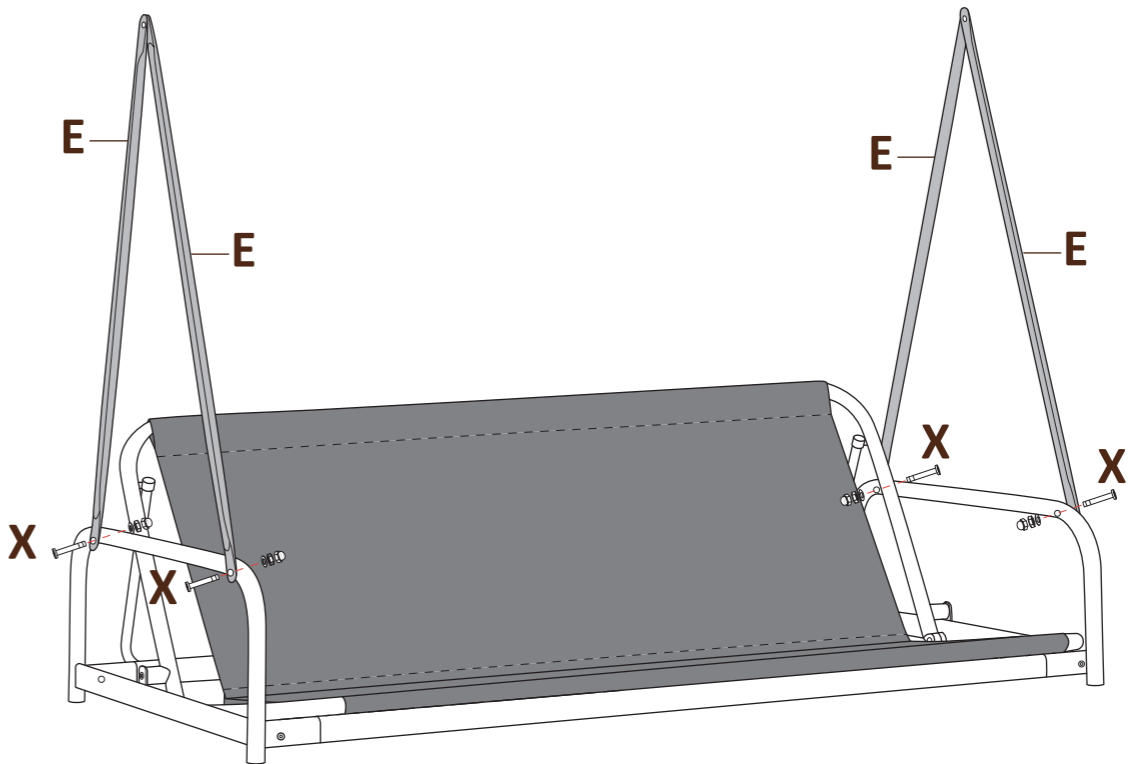


Step3 - Combine Assembly

(1). Attach seats to **#B** (Left Top Bar) and **#C** (Right Top Bar) through **#O** (Spring Hook).

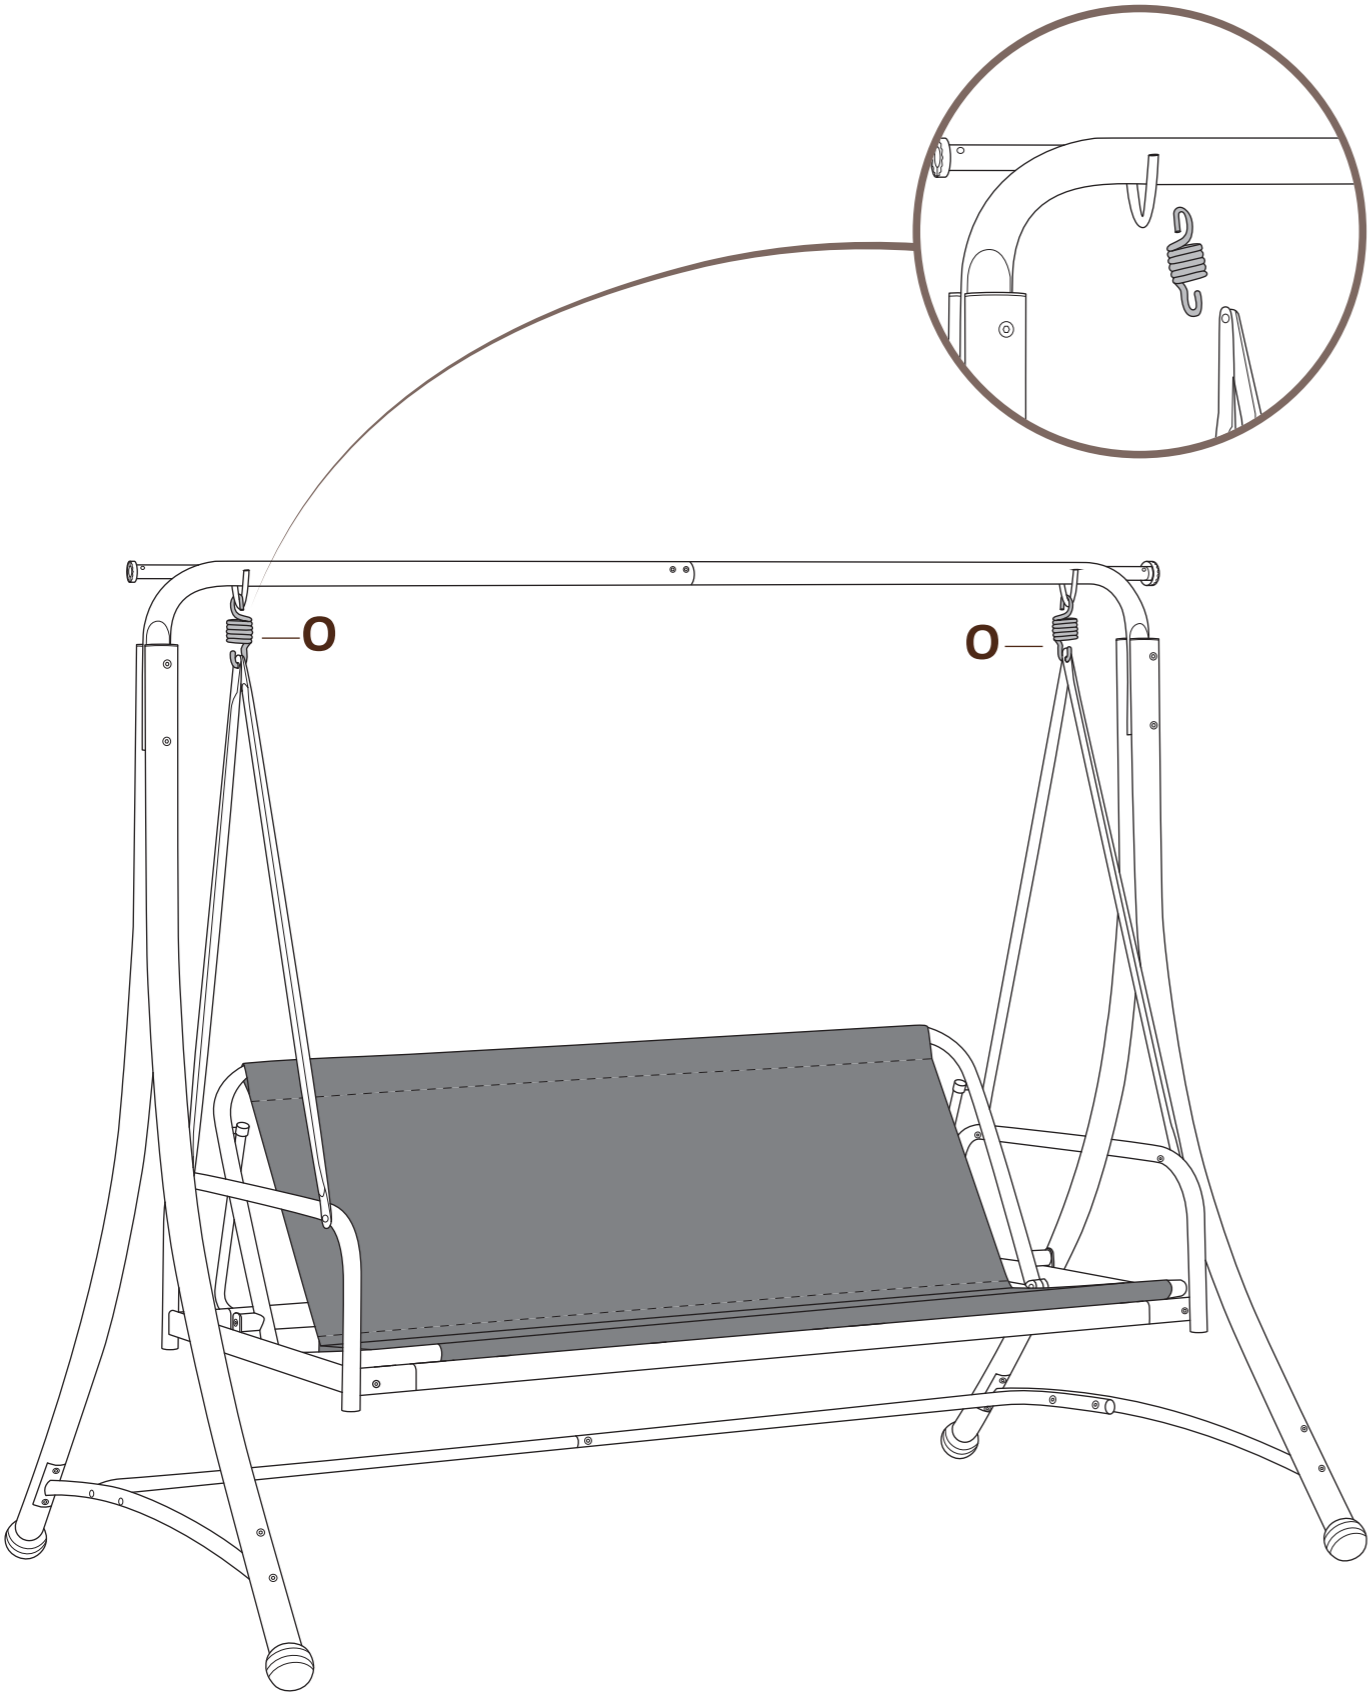


(2). Attach **#J** (Canopy Frame (Right&Left)) to **#B** (Left Top Bar) and **#C** (Right Top Bar) by **#Q** (Knob).

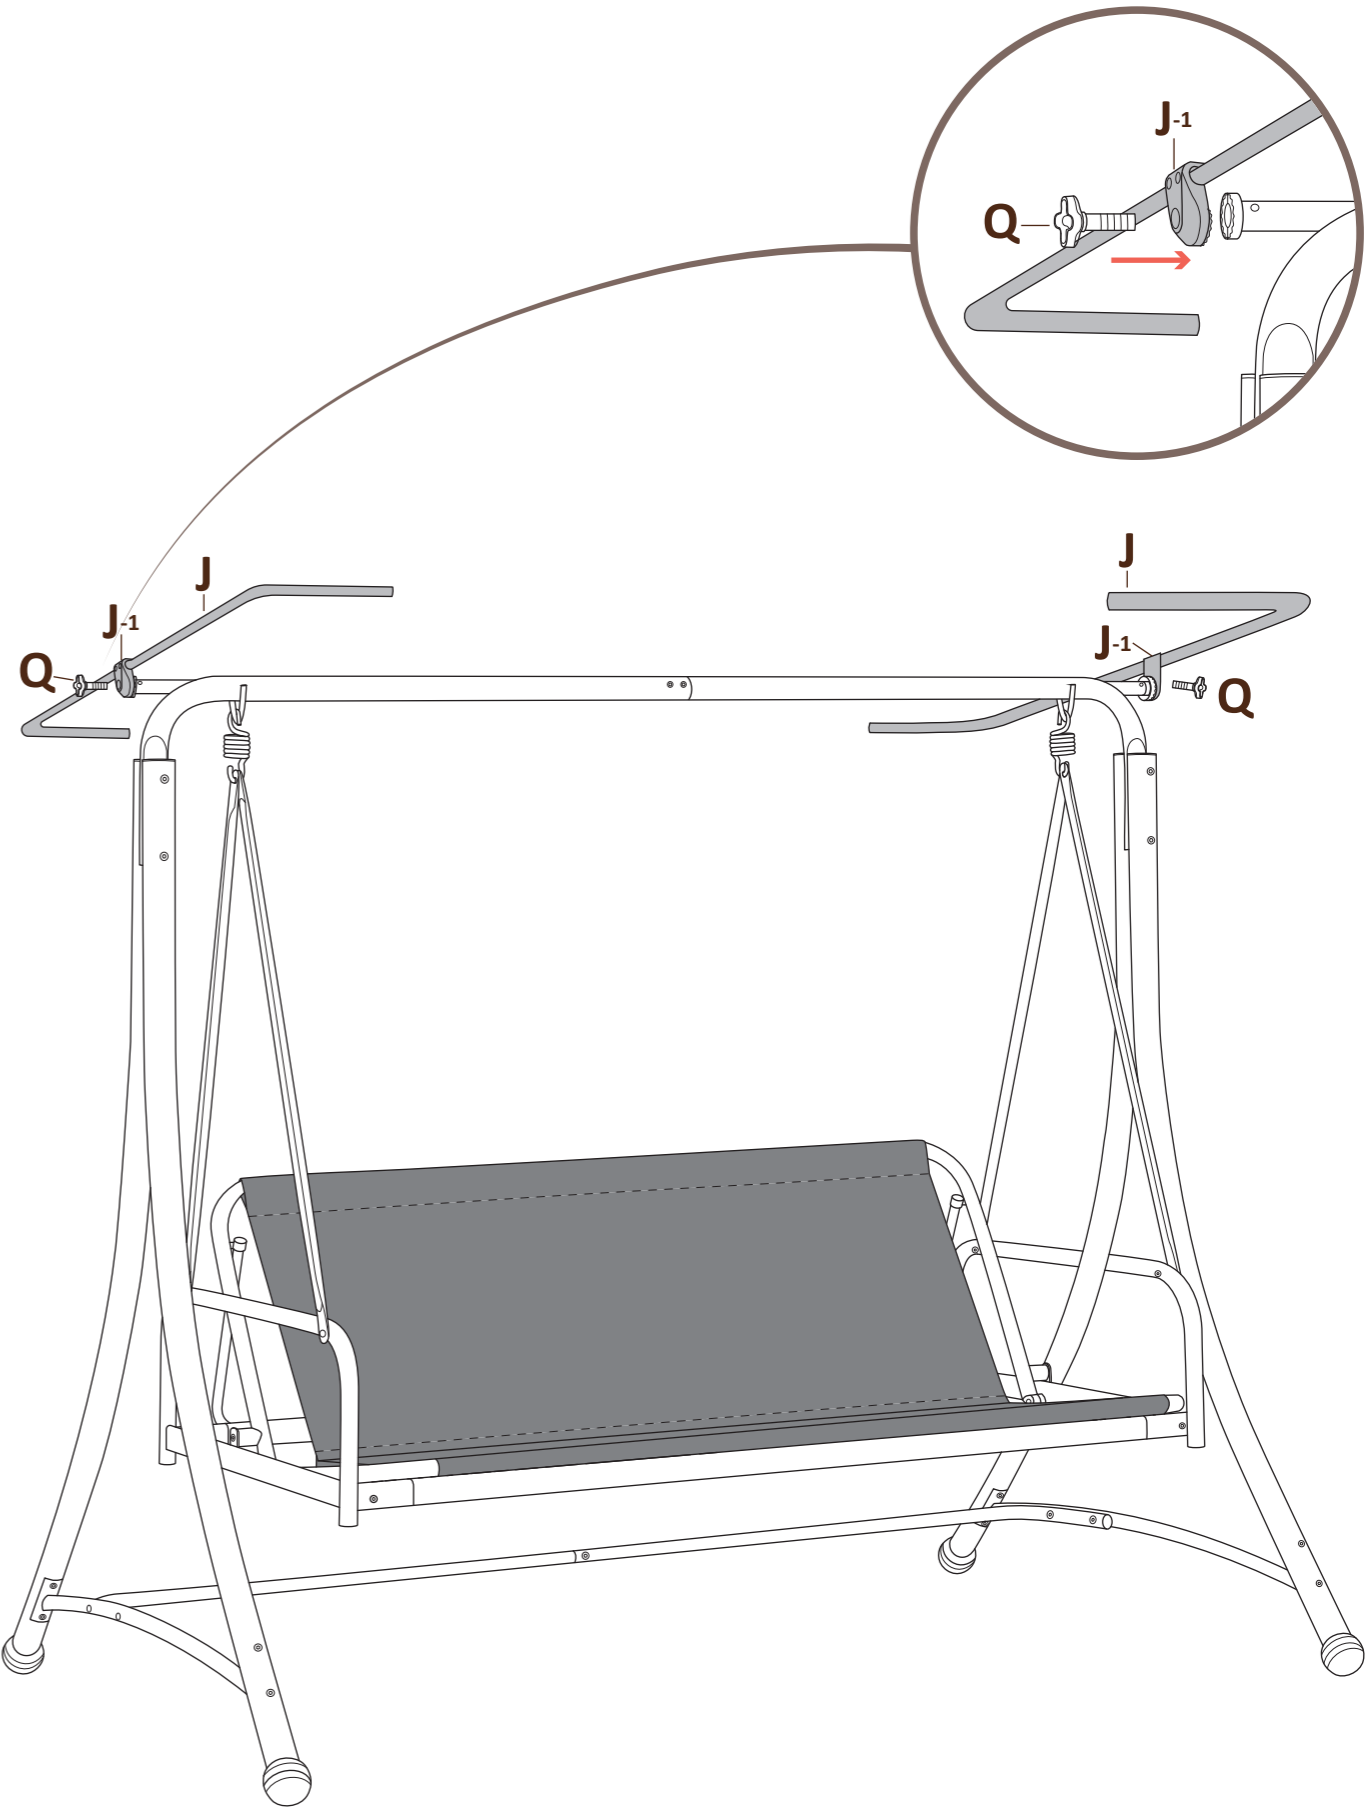

(3). Insert two #K (Canopy Frame) into #M (Canopy),Connect #K (Canopy Frame ) to #J (Canopy Frame ).




(4). Attach #J (Canopy Frame (Right&Left)) to #B (Left Top Bar) and #C (Right Top Bar) by #Q (Knob).

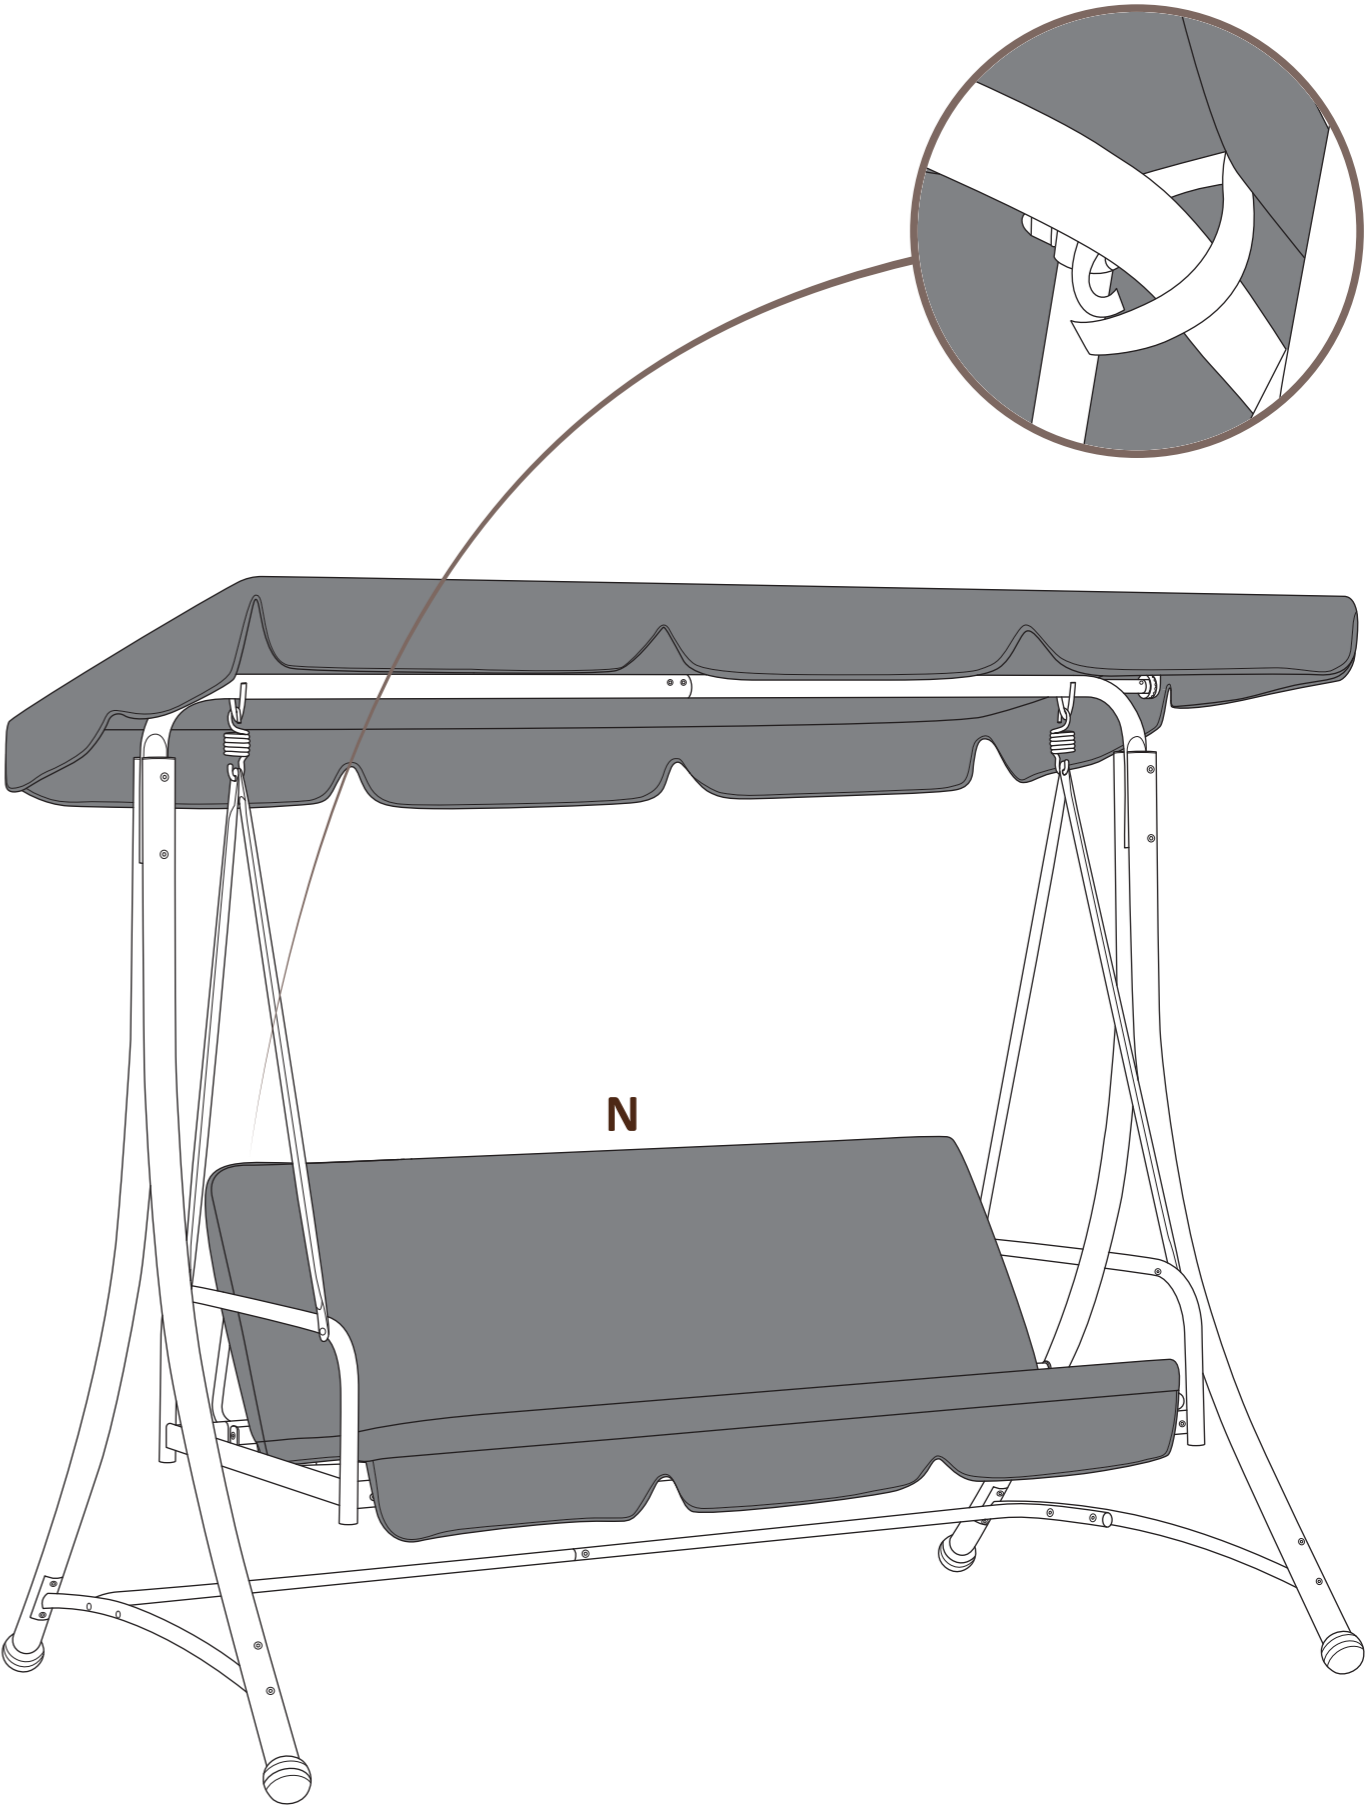

Step4 - Flat the Swing

Pull the pull ring on the seat apart and place the backrest flat.

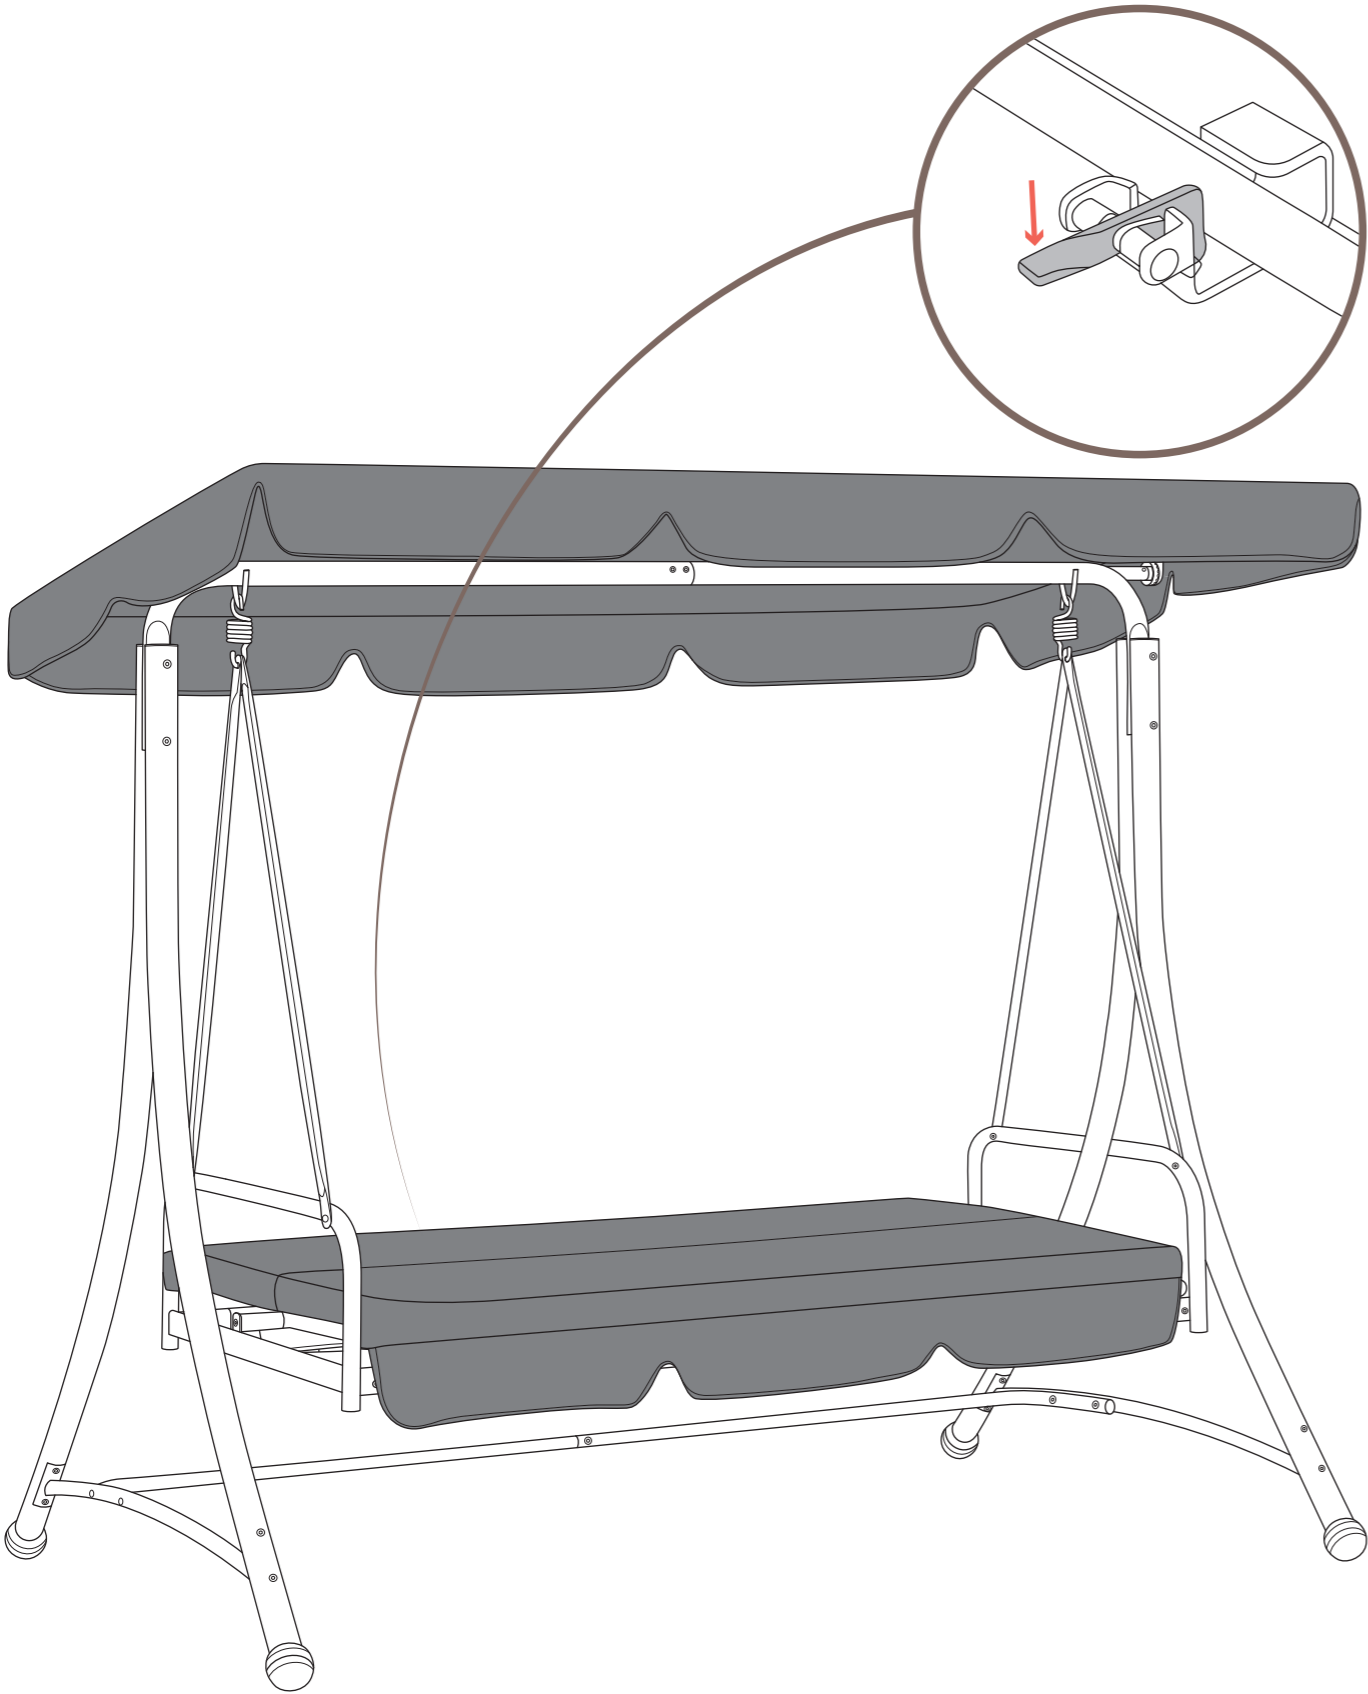

IV. RETURN / REPLACEMENT POLICY

MCOMBO®

You have 30 days from the date of purchase to return any item purchased from our store.


Please securely pack the item in its original packaging, including any accessories or manuals that came with the product. To initiate a return, please contact our customer service team at [sales@mcombo.com/](mailto:sales@mcombo.com/) 323-597-1109 for any help.

Return Conditions


We accept the return of items that are in new, unused condition, with original tags attached and all original packaging and other components included. Refunds will be issued in the original form of payment for the price of the item, including taxes.

# V. MCOMBO CUSTOMER SUPPORT


If for any reason, we have fallen short of your expectations, or if you have any questions and suggests, please refer to the following contact information, we will do our best to work with you to make sure you are entirely satisfied.





**sales@mcombo.com**  
(Respond within 24 hours)




**1-323-597-1109**  
8:00 a.m. - 4:00 p.m. (Monday - Friday)  
TIME ZONE: PST



**DE**  
2411 Bear Corbitt Rd STE 1  
New Castle, DE, 19720

**TN**  
3980 PREMIER AVE,  
MEMPHIS, TN, 38118

**CA**  
2808 Vail Ave  
Commerce, CA, 90040

# VI. WARRANTY DISCLAIMER

Thank you for your interest in the products and services of MCombo.  
This Limited Warranty applies to physical goods, and only for physical goods,purchased from MCombo.

## 1. What does this limited warranty cover?

This Limited Warranty covers any defects in material or workmanship under normal use during the Warranty Period.  
During the Warranty Period, MCombo will repair or replace, at no charge, products or parts of a product that proves defective because of improper material or workmanship,under normal use and maintenance.

## 2. How long does the coverage last?

The Warranty Period of Physical Goods purchased from MCombo refers to the table below.  
A replacement Physical Good or part assumes the remaining warranty of the original Physical Good or 180 days from the date of replacement or repair, whichever is longer.

Swing Frame	★ 1 Year
Swing Fabric	★ 6 Months

**This Limited Warranty does not cover any problem that is caused by:**  
Conditions, malfunctions, or damage not resulting from defects in matetial or workmanship.  
To obtain warranty service, you can contact us via email sales@mcombo.com Contact us to determine the issue and the appropriate solution for you. Before this you can take some photos of your product and send them to us, so that we can reply to you more quickly and accurately.