

Solidcom SE Pro

Quick Guide




Foreword

Thank you for choosing the **Solidcom SE Pro** for on-site communication. If you have never used a wireless intercom system before, then you are about to experience one of the most exciting products in the industry. This Quick Guide will show you how to get started with the product.

(EN) Please read this Quick Guide carefully. We wish you a pleasant experience. To obtain Quick Guide information in other languages, please scan the QR code below.




Configuration

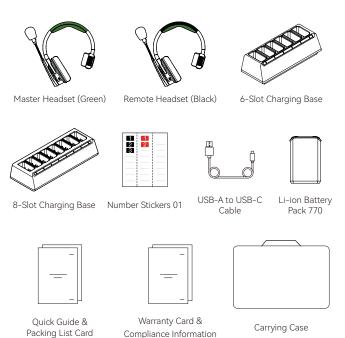


Note: The quantity of the items depends on the product configuration detailed on the packing list card.

Overview

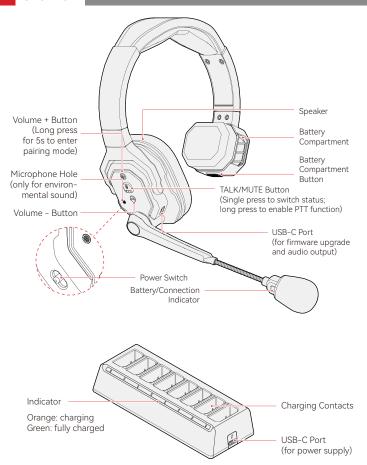

Indicator Introduction

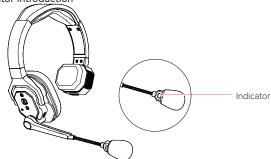

- ① Disconnected*: slowly flashing green light
- 2 Pairing: rapidly flashing green light
- ③ TALK Status: solid green light
- @ MUTE Status: solid red light
- (5) Low Battery: slowly flashing red light
- USB-C Charging:
 Output
 Description:
 Output
 Output
 Output
 Description:
 Output
 Description:
 Output
 - A. Charging While Powered On: slowly flashing yellow light for 3s before returning to the former light
 - B. Charging While Powered Off: slowly flashing yellow light
- 7 USB-C Fully Charged: solid yellow light
- ® Upgrading: alternately flashing red and green light

Notification Sound Introduction

- 1) Low Battery: low battery level
- ② Ding: maximum volume
- 3 Tick: mic boom in position of mic on or off
- 4 Connected: device connected
- (5) Disconnected: device disconnected
- 6 Unmuted: mic on
- Muted: mic off
- * While disconnected, the remote headset shows slowly flashing green light while the master headset shows solid green light.

Operations

1) Installing and removing the battery

- Place the battery into the battery compartment for installation.
- Press the battery compartment button to pop out the battery for removal.






2 Turning on the device and confirming connection




- 1. Toggle the power switch to turn on the headsets.
- The indicator light changing from flashing green to solid green indicates successful connection.
- The master headset has a brown headband while the remote headset has a black headband.

Operations

3 Turning on the microphone

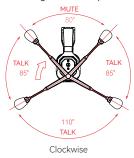



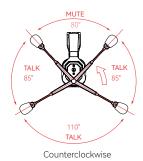

4 Beginning your work

Headset Pairing

All remote headsets are prepaired with the master headset at the factory, so they are ready to use upon poweron. Pairing is only necessary when adding new headsets to an existing system. Ensure that the master headset and all remote headsets are powered on while pairing.

- Long press the volume + button on both the master and remote headsets for 5s and the indicator lights will flash rapidly.
- 2. The indicator lights turning solid indicates successful connection.



Specifications

Product Name	Solidcom SE Pro Single-Ear Headset	
LOS Range	1,300ft (400m)	
Operating Frequency	1.9 GHz (DECT)	
Modulation Mode	GFSK	
Transmit Power	≤ 21dBm (125.9mW)	
Receiver Sensitivity	< -90 dBm	
Battery Capacity	770 mAH (2.926Wh)	
Charging Time	< 3 hours	
Frequency Response	150 Hz - 7 kHz (±10dB)	
SNR	71±2dB @94dB SPL, 1 kHz	
Distortion	< 1% @94dB SPL, 150 Hz - 7 kHz	
Microphone Type	Electret	
Maximum Input SPL	> 115dB SPL	
Output SPL	98dB SPL (@94dB SPL, 1kHz)	
Environmental Noise Reduction	> 20dB (from all directions)	
Weight	≈ 185.2g (with battery)	
Temperature	0 - 45°C (working) -10 - 60°C (storage)	

Note: Due to differences in various countries and regions, there may be variations in the operating frequency and wireless transmit power of the product.

Specifications

Product Name	6-Slot Charging Base	8-Slot Charging Base	
Port	USB-C Port; Charging Contacts		
Dimensions	119.3 × 57.6 × 34.6mm (4.7 × 2.3 × 1.4in.)	154.5 × 57.6 × 34.6mm (6.1 × 2.3 × 1.4in.)	
Weight	91.1g	121.6g	
Charging Power	≤ 10W		
Power Supply	4.75 - 5.25V		
Charging Current	≤ 380mA/Slot		
Charging Time	< 3 hours (6 batteries)	< 4 hours (8 batteries)	
Temperature	0 – 45°C (working) -20 – 60°C (storage)		

The power delivered by the charger must be between min 1.5 Watts required by the radio equipment, and max 3 Watts in order to achieve the maximum charging speed.

Disclaimer

Safety Precautions

Do not place the device near or inside heating devices (including but not limited to microwave ovens, induction cookers, electric ovens, electric heaters, pressure cookers, water heaters, and gas stoves) to prevent the battery from overheating and exploding. Use the original charger, data cables, and batteries provided with the product. Using unauthorized or incompatible chargers, data cables, or batteries may cause electric shock, fire, explosion, or other dangers.

Support

If you encounter any problems in using the product or need any help, please contact Hollyland Support Team via the following ways:

- Hollyland User Group
- f HollylandTech
- [iii] HollylandTech
- HollylandTech
- support@hollyland.com
- www.hollyland.com

Statement:

All copyrights belong to Shenzhen Hollyland Technology Co., Ltd. Without the written approval of Shenzhen Hollyland Technology Co., Ltd., no organization or individual may copy or reproduce part or all of any written or illustrative content and disseminate it in any form.

Trademark Statement:

All the trademarks are owned by Shenzhen Hollyland Technology Co., Ltd.

Note:

Due to product version upgrades or other reasons, this Quick Guide will be updated from time to time. Unless otherwise agreed, this document is provided as a guide for use only. All representations, information, and recommendations in this document do not constitute warranties of any kind, express or implied.

HOLLY VIEW

Powered by Hollyland

Manufacturer: Shenzhen Hollyland Technology Co., Ltd. Address: 8F, 5D Building, Skyworth Innovation Valley, Tangtou Road, Shiyan Street, Baoan District, Shenzhen, 518108, China MADF IN CHINA