

**Important**  
Read this user manual carefully before you use the machine and save it for future reference.

**Danger**

- Never immerse the machine in water or any other liquid.

**Warning**

- Check if the voltage indicated on the bottom of the machine corresponds to the local mains voltage before you connect the machine.
- Connect the machine to an earthed wall socket.
- If the mains cord is damaged, you must have it replaced by Philips, a service center authorized by Philips or similarly qualified persons in order to avoid a hazard.
- Do not use the machine if the mains cord or the machine itself is damaged.
- This machine can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the machine in a safe way and if they understand the hazards involved.
- Cleaning and maintenance shall not be made by children under the age of 8 years and supervised.
- Keep the machine, its accessories and its cord out of the reach of children aged less than 8 years.
- Children shall not play with the machine.

**Caution**  
Always return the machine to a service center authorized by Philips for examination or repair. Do not attempt to repair the machine yourself, otherwise your warranty becomes invalid.

- After unpacking the machine, never put your Senseo machine on its side. Always keep it in upright position, also during transport.

- Never pour normal ground coffee or use tom pods in the pod holder, as it can damage the machine.

- Do not use the machine in combination with a transformer, as this could cause hazardous situations.

- Always put the machine on a flat and stable surface.

- Do not place the machine on a hotplate or directly next to a hot oven, heater or similar source of heat.

- Do not place the machine in a cabinet when in use.

- Never let the machine operate unattended.

- Do not use the machine at altitudes higher than 1250 meters above sea level.

- Never pour any other liquid than clean cold water into the water reservoir.

- Never flush the machine or let it brew coffee when the spout is not in place.

- Flush the coffee machine with fresh water before you use it for the first time. This causes the system to fill with water, which is essential for the machine to work properly.

- Do not use the machine at a temperature below 0 °C. Water left in the machine may freeze and cause damage.

- Do not use the machine in combination with water softeners based on sodium exchange.

- The machine indicates when the water softener is full. When this occurs, the water softener must be cleaned or replaced. In this case, repair is not covered by your warranty.

- Never use a cleaning agent based on mineral acids such as sulphuric acid, hydrochloric acid, sulphamic acid and acetic acid (e.g. vinegar). These cleaning agents may damage your coffee machine.

- The machine is intended for normal household use only. It is not intended for use in environments such as staff kitchens of shops, offices, farms or other work environments, nor is it intended to be used by clients in hotels, motels, bed and breakfasts and other residential environments.

**Compliance with standards**  
This machine complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

The energy consumption of this machine in off mode is less than 0.5 Watt. This means that this machine complies with European Directive 2009/125/EC, which sets the ecological design requirements for energy-use products.

**Frost-free storage**  
Only use and store the machine in a frost-free place.

**Ordering accessories**  
To buy accessories or spare parts, visit [www.philips.com/parts-and-accessories](http://www.philips.com/parts-and-accessories) or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

**Warranty and support**  
If you need information or support, please visit [www.philips.com/support](http://www.philips.com/support) or read the International warranty leaflet.

**Recycling**  
- This symbol means that this product shall not be disposed of with normal household waste (2012/19/EU). (Fig. 1)

- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

**Troubleshooting**

This chapter summarizes the most common problems you could encounter with the machine. If you are unable to solve the problem with the information below, visit [www.philips.com/support](http://www.philips.com/support) for a list of frequently asked questions or contact the Philips Consumer Care Center in your country.

Problem	Solution
The light in the button I pressed flashes quickly.	Fill the water reservoir with water.

The float in the water reservoir may be stuck. Empty the water reservoir and shake it a few times to release the float. Clean the water reservoir with hot water and some washing-up liquid or the dishwasher.

The light in the button I pressed continues to flash slowly.

If this takes longer than two minutes, your machine may be defective. Contact the Philips Consumer Care Center in your country.

The lights of the 1-cup and 2-cup button are flashing at the same time before and after brewing coffee.

Water or coffee leaks out of the machine.

Place the coffee pod(s) properly in the center of the pod holder, with the convex side pointing downwards according to picture 3 in chapter "Brewing coffee".

The steve in the center of the pod holder is clogged. Unclog it with a washing-up brush.

Check if the sealing ring of the lid is stuck under the edge of the distribution disk. If it is, pull it out from under the distribution disk carefully.

The coffee volume changed. Check if you have set the Intensity Select slide to the preferred volume setting.

The steve in the center of the pod holder is clogged. Unclog it with a washing-up brush.

Descale the machine according to the Instructions (see "Descaling the Senseo").

The coffee is not hot enough. Limescale has built up. You need to descale the machine.

Tip: before brewing coffee, preheat the cup by rinsing it with hot water or brew a coffee without coffee pod.

I cannot open the lid. Switch off the coffee machine. Pull up the lever and wait 24 hours before you open the lid. To prevent this from happening, make sure that the steve in the pod holder is clean and not clogged.

Eesti	Tähtis ohutustase
-------	-------------------

**Olutine!**  
Enne masina kasutamist lugege seda kasutusjuhendit hoolikalt ja hoidke selle ebatõsiseks alles.

**Oht**

- Ärge kastige masinat vette ega muusse vedelikku.
- Hoiatus**
  - Enne seadme ettevalmistamist kontrollige, et seadme põhja ja läätsi ei marjutata piinge vastaku hoiulahingut või ristkülikut.
  - Ühendage masin maandatud seadnikega.
  - Kui töötatele on kahustatud, peale selle ohtlike olukordade välittimiseks uue vau vahetamisega. Philips volitatud hoolduskeskus või samaväest kvalifikatsiooni omav istk.
  - Seadet ei tohi kasutada, kui seele pistik, töötagev uud seade ise on töötanud.
  - Seda masinat vaid ka kaupa ostud ja kasutage seda 8-aastastele lastele kättemaksutatult.
  - Hoidke masinat, selle tankid ja töötagev uud vaid vahemalt 8-aastal vanadel ja nad on mõistavad selliste seotud ohte.
  - Ärge laske lastel seadet puhasdatada ja hoiduda, kuid nad ei ole vahemalt 8-aastal vanadel ja nad on mõistavad selliste seotud ohte.
  - Glabberitele, kes on täpsuslikud ja töötagev uud vaid vahemalt 8-aastateks.
  - Seadet ei tohi kasutada, kui seele pistik, töötagev uud seade ise on töötanud.

**Ettevaatus:**

- Vige masin eksplirotsiks või parandamiseks alati Philips volitatud hoolduskeskusse. Kui pole saanud seadet parandada, kaatob garantii kehtruse.

- Parast Senseo masina lahtipakkumist arge pange seda küliti. Hoidke masin alati puastedes asendis, kui transpordi ajal.

- Arge pange padjad olasesse täistavalistatud kohvi ega katirebitud kohvipüüri, sest need ummistavad padjadega.

- Arge kasutage masinat koos püngimurduna, sest see võib pööristada.

- Asetaage läbi masinat tsasele ja kindlale pinnale.

- Arge asetaage masinat keudelale ega kutskeha või sarnase soojusallikale lähedusse.

- Arge kastige masinat kahjalikult.

- Ar

