



## Wireless Portable Bluetooth Speaker



Mode No.: DOSS SoundBox Mini  
User Manual

 
## Introduction

Thank you for purchasing the **DOSS SoundBox Mini Wireless Portable Bluetooth Speaker** with Bluetooth and Hands free function. We encourage you to read this instruction guide thoroughly to get the most out of this innovative wireless portable speaker.

## Package content

- One wireless portable speaker
- USB charging cable
- $\Phi 3.5\text{mm}$  auxiliary cable
- User manual, Warranty card

## Product overview

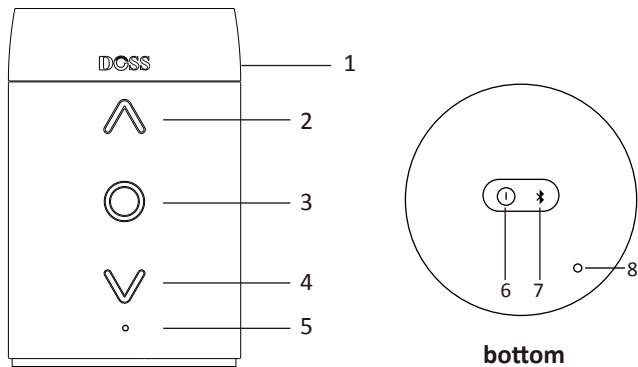 





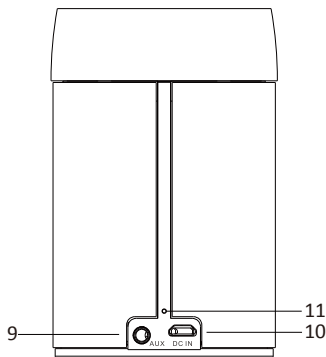 
### 1. Volume Knob:

- Volume + : Turn the knob clockwise.
- Volume - : Turn the knob anticlockwise.

2. In Bluetooth mode press  to skip backward.

### 3. Play/Pause and handset button

- In Bluetooth mode, press  to answer or end a call. press for 3 seconds to reject a call.
4. In Bluetooth mode, press  to skip forward.
5. Bluetooth indicator
6. Long press  to turn the device on and off.
7. Bluetooth mode: press  for 3 seconds to disconnect with your device.
8. Reset port: Use the needle or wire to poke the reset port when speaker can't turn off.



9. **Auxiliary  $\Phi 3.5\text{mm}$  jack** : Use it for cabled playback with compatible devices.
10. **Charging port**: Plug the supplied USB cable into this port to recharge the built-in battery.
11. **LED charging indicator.**
- Charging : Steady Red.
  - Fully charged : Steady Green.




## Status indicators

Center indicator	Flashing blue	Indicates that the speaker has entered into the pairing mode and it is ready to be paired
	Steady blue	Indicates that the device is successfully paired
	Steady red	Indicates that the device has switched to the auxiliary input mode
Battery status indicator	Steady red	Battery is charging
	Steady green	Battery is fully charged

## Preparation

- Use the supplied USB cable to charge your portable speaker directly from your computer micro USB port or the cellphone adapter (please confirm its output is 5V)
- Make sure that the speaker is fully charged before using it for the first time. It will take approximately 2-3 hours to recharge after.
- LED light will remain RED when charging and turn GREEN once charge completes.
- Press & Hold the power button to turn on the speaker. Repeat the steps to turn the device off as well.



## Pairing the wireless speaker with your smart device

1. Place your smart device and wireless speaker no more than one meter away from each other.
2. Press the power button located on the back of the speaker for several seconds to turn it on.
3. Set your smart device to “discover” the wireless speaker. Upon powering on, a tone will be heard, the blue LED will start flashing, accompanied by a prompt notifying that the speaker has entered into the pairing mode.
4. Enabled Bluetooth on your device and choose **SoundBox Mini** from the list.
5. If pairing is successful, the LED will change to steady blue and your phone will confirm that the connection has been established. If the pairing process fails after 60 seconds, please press the  button for 5 seconds and have a try again.
6. long press the button , you can disconnect the Bluetooth.  
Note: If your smart device cannot discover the SoundBox Mini, long press the button  and have a try again.

## Using the 3.5mm Audio Input

1. Plug one end of a 3.5mm Audio cable into the unit. The mode indicator light will display a red light.
2. Plug the other end of the 3.5mm Audio cable into other audio devices.
3. Turn on the speaker, it will play music from the audio device.
4. If you want to Play/pause the tune, or change Previous/Next tune just control the native buttons on your audio device.

## Answering and ending a call using your speaker or mobile phone

1. When there is an incoming call, the speaker will generate a tone and a verbal notification to alert you of this event.
2. Briefly press the Handset  button to pick up, long press to reject. You may also press the answer button on your smart phone to take the call using the speaker.
3. Speak with a clear voice right into the built-in microphone located on the front section of the speaker.
4. To end a call, tap the Handset  button once again. Likewise, you may also end the call directly using the command on your cell phone.
5. When listening to music using your smart phone, playback will resume automatically once the call has ended.

## Using it with your Echo Dot

You can connect the Dot with the speaker using a 3.5 mm auxin cable or Bluetooth. Please use the following steps to set up using Bluetooth:

1. Download the Alexa APP, follow the standard setup procedure to get the dot connected to your home Wi-Fi network.
2. Switch the SoundBox Mini speaker to Bluetooth mode, you can press the 'play/handsfree' button for 5 seconds to keep it in pairing status.
3. Run the Alexa app, tap Menu and then tap Settings.
4. Tap the Echo Dot in your list of Alexa Devices, then tap Bluetooth.
5. The SoundBox Mini speaker should appear in the list of Bluetooth Devices. If not, press the "X" button for 5 seconds and try again. Once listed, tap on The SoundBox Mini speaker to complete the pairing process. To remove the device, return to Bluetooth -> tap the name of the speaker -> then tap "Forget Device".

### Note:

Voice command will not be able to turn on/off the SoundBox Mini no matter whether you connect it via Bluetooth / Aux cable. It can only translate sound signal.

## Trouble shooting

	Problem	Solution
Bluetooth	Cannot Pair with Bluetooth devices	Press Bluetooth button for 5 seconds, then have a try to pair it again
	Cannot play music after pairing	Please select 'SoundBox Mini' as the default playback device
	The song cuts off during playback	Please check if the Bluetooth distance is more than 33 feet or the battery level is low
	There is noise during playback	Maybe caused by the interference of charging, try to put it in another place and do not charge it during playback
	Laptop prompts to install driver	This driver is not special for SoundBox Mini, it's for your laptop Bluetooth function, please contact the computer company or windows
	Not paired with transmitter	Please press Bluetooth button for 5 seconds or contact with the transmitter's customer service for help
other	All the lights are lit and can not be turned off	Use the needle or wire to poke the reset button
	Customer Service Email	support@dossav.com

## Product specifications

Product type: Wireless Portable Bluetooth Speaker with Built-in Microphone

Output power: 5W x 1

Driver unit: 2 inch speaker x 1 + 1.9 inch passive radiator

Frequency response: 80Hz-20kHz

Signal to noise ratio:  $\geq 60\text{dB}$

Unit weight: 290 g

Unit dimension: 2.68 x 2.68 x 4.13 inch

Warranty: One-year limited

## Power

- Battery type: Li-ion 3.7V, 1400mAh
- Input: 5V  $\equiv$  1A
- Battery charge up time: 3 hours approximately (when fully depleted).
- Battery playback time: up 8 hours (duration time may vary depending on the volume level used and usage patterns).

## Wireless/Networking

- Bluetooth specification: V4.0+EDR, backwards compatible with previous Bluetooth versions
- Profiles supported
- A2DP (Advanced Audio Distribution Profile)
- Maximum operation range: 10 meters / 33 ft

## Warning

- Do NOT drop, hit or shake the device.
- Do NOT disassemble, repair or modify the Bluetooth speaker by yourself.
- Do NOT use cleaning products that contain benzene, solvents or alcohol.
- Do NOT expose the Bluetooth speaker to excessive heat or to direct sunlight for long periods of time.
- Do NOT store the device in a place with high humidity or dust.
- Do NOT place heavy objects on top of the Bluetooth speaker.
- Do NOT use near a microwave oven or wireless LAN products.



Scan this or search 'DOSS fans' on Facebook to join our group, share your experience and find more surprise!

**DOSS**

Wonders Technology Co., Ltd

Email: [Support@dossav.com](mailto:Support@dossav.com)

Website: [www.dossaudio.com](http://www.dossaudio.com)

Follow us on Facebook:

<https://www.facebook.com/dossav>