



Make and Receive Calls:

- 1.Type in the phone number.
 - 2.Press the **Call key** .
 - 3.To end the call, press the **Power/End key** .
- When the phone rings, press the **Call key** to answer.
- To reject a call, press the **Power/End key**.

Voicemail Setup:

For instructions on how to set up voicemail, contact your service provider. When you have new voice mail **QO** appears in the status bar. Swipe down and tap the notification to listen to the voicemail.

Included in this package:

- Phone
- Activation card
- Charger

Initial Phone Setup:

Your phone already has a SIM card installed.

Your phone’s battery may not be fully charged. Use the charger included in your package to charge your phone fully before the first use.

To turn your phone **ON/OFF**, press and hold the **Power/End key**.

Text and Picture Messaging:

- 1.Press the center key, and select **Messages > New**.
- 2.In the **To** field, press **#** until you are able to enter numbers and then type in a phone number, or select **Contacts** to add a contact from your contacts list.
- 3.Write your message.
- 4.To add a picture to the message, select **Options > Add attachment**.
- 5.Select the location of the picture, then the picture, and select **Done**.
- 6.Select **SEND**.

Explore your phone:

To open the apps list, press the center key.

To open an app or select a feature, scroll to the app or feature and select **SELECT**.

To go back to the previous view, press the back key.

To go back to the home screen, press the **Power/End key**.

Turn on Wi-Fi:

- 1.Press the center key and select **Settings > Network & Connectivity > Wi-Fi**.
- 2.Turn **Wi-Fi** to **On**.
- 3.Select **Available networks** and the network you want, enter a password if needed, and select **Connect**.

Using your Mobile Internet:

- 1.Press the center key, and select **Internet**.
- 2.Select **Search Internet**.
- 3.Write a web address, and select **GO**.
- 4.Use the center key to move the mouse cursor in the browser.

Security Settings:

- You can set the phone to ask for a screen lock code.
- 1.Press the center key and select **Settings**.
 - 2.Scroll right to **Privacy & Security**.
 - 3.Select **Screen Lock > Screen Lock > On**, create a four-digit code. Note, however, that you need to remember the code you created, as Tracfone is not able to open or bypass it.

Lock and unlock your phone:

If you want to avoid accidentally making a call when your phone is in your pocket or bag, you can lock your keys and screen.

To lock your keys and screen, press and hold the *** key** or close the fold.

To unlock the keys and screen, select **Unlock**.

Notification and Status Icons:

	Bluetooth connection is on
	Wi-Fi is on
	Airplane mode is on
	Battery status

Regulatory Agency Information	
FCC ID	2AJOTTA-1398
Max. SAR (W/kg) - Head	1.06 W/kg
Max. SAR (W/kg) - Body	1.17 W/kg
HAC (Hearing Aid Compatible) & Rating	M4/T4

HMD Global Oy is the exclusive licensee of the Nokia brand for phones & tablets. Nokia is a registered trademark of Nokia Corporation. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by HMD Global is under license.