

User Manual

Manual del usuario

BAUHN®

LED PROJECTOR

PROYECTOR LED




English 3
Español11


Table of contents

- Package contents/device parts 3**
- General information 4**
 - Reading and storing the user manual 4
 - Explanation of symbols 4
- Safety instructions 5**
 - Proper use 5
- Getting started 6**
- Projector settings 6**
- Connecting your mobile device 6**
 - Wireless connection 7
 - Wired connection to iOS 7
 - Wired connection to Android 7
 - Screen mirroring via AirPlay 8
 - Screen mirroring via Miracast 8
- Projection size and distance 9**
- Technical data 10**
- Disposal 10**
 - Disposing of the packaging 10
 - Disposing of the LED projector 10

 Pack contents / Device parts

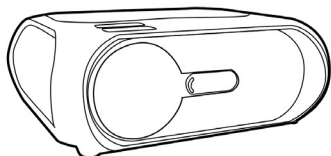

1

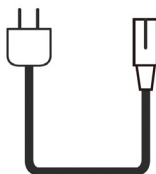 

2



3



4



5

- 1 Mini projector
- 2 Electric cable
- 3 Remote control
- 4 AV cable
- 5 Lens cleaning fabric

General information

Reading and storing the user manual



Read this manual thoroughly before first use, even if you are familiar with this type of appliance. The safety precautions enclosed reduce the risk of fire, electric shock and injury when correctly adhered to. Keep the manual in a safe place for future reference, along with the completed warranty card, purchase receipt and box. If applicable,

pass these instructions on to the next owner of the appliance.

Explanation of symbols

The following symbols and signal words are used in this user manual, on the LED projector or on the packaging.



DANGER!

This signal word designates a hazard with a high degree of risk which will result in death or severe injury if not avoided.



WARNING!

This signal word designates a hazard with a moderate risk which will result in death or severe injury if not avoided.



CAUTION!

This signal word designates a hazard with a low risk, which may result in minor or moderate injury if not avoided.

NOTICE!

This signal symbol/word warns of possible damage to property.



This symbol provides you with useful additional information on handling and use.

Safety instructions

 
Proper use

The LED projector is intended for private use and not suitable for commercial purposes. Only use the LED projector as described in this user manual. Any other use is considered improper and may result in damage to property. The manufacturer or vendor cannot be held liable for damages incurred through improper or incorrect use.


WARNING!: A person who has not read and understood all operating and safety instructions is not qualified to operate this appliance. All users of this appliance must read and understand this Instruction Manual before operating or cleaning this appliance. When using electrical appliances, basic safety precautions should always be followed, including:

1. **Read all instructions before operating this appliance.**
2. This appliance is **NOT A TOY**.
3. Unsupervised young children and cognitively challenged individuals should never operate this appliance.
4. To protect against electrical shock do not immerse cord, plug or any part of this unit in water or other liquids.
5. Unplug from outlet when not in use.
6. **DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination, repair or adjustment. Do not attempt to replace or splice a damaged cord.
7. The manufacturer does not recommend the use of accessory attachments. **DO NOT use outdoors.**
8. **DO NOT** let cord hang over edge of table or counter, or touch hot surfaces.
9. **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
10. Always attach plug to appliance first, then plug cord into the wall outlet (for appliances with detachable cords). To disconnect, turn any control to the off position, then remove plug from wall outlet.
11. This is not suitable for use in the education domain, video playback is the main function. Not recommended for Word or spreadsheet.
12. **CAUTION!:** The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
13. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
14. **NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
15. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - i. Reorient or relocate the receiving antenna.
 - ii. Increase the separation between the equipment and receiver.
 - iii. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - iv. Consult the dealer or an experienced radio/TV technician for help.
16. **FCC Radiation Exposure Statement**
 - i. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.
 - ii. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
 - iii. For pluggable equipment, the socket-outlet shall be easily ACCESSIBLE

Knowing your projector and remote control

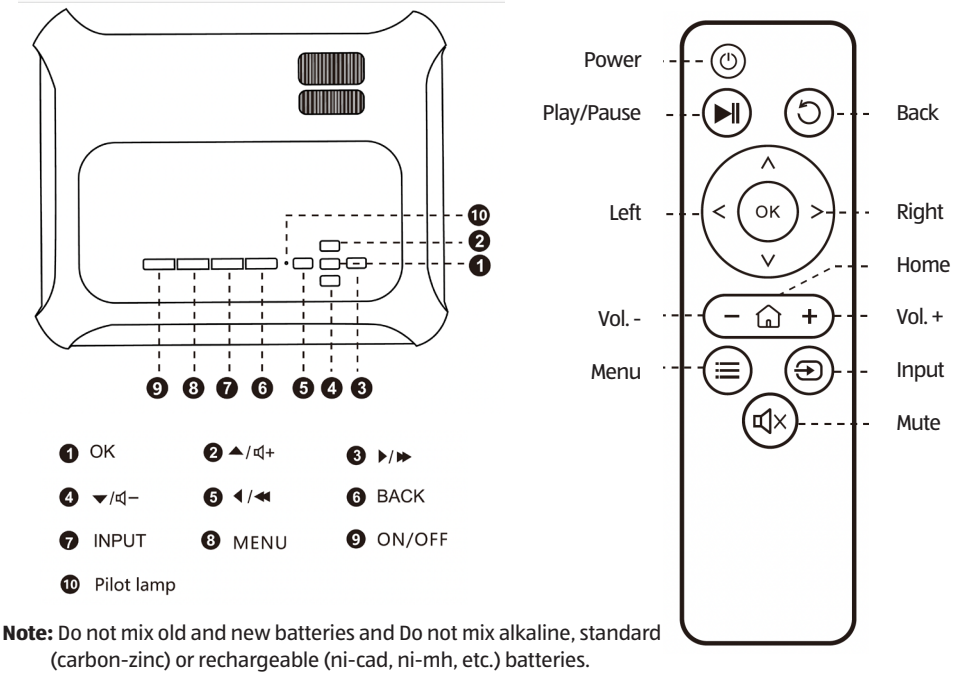

Parts and Functions of Projector

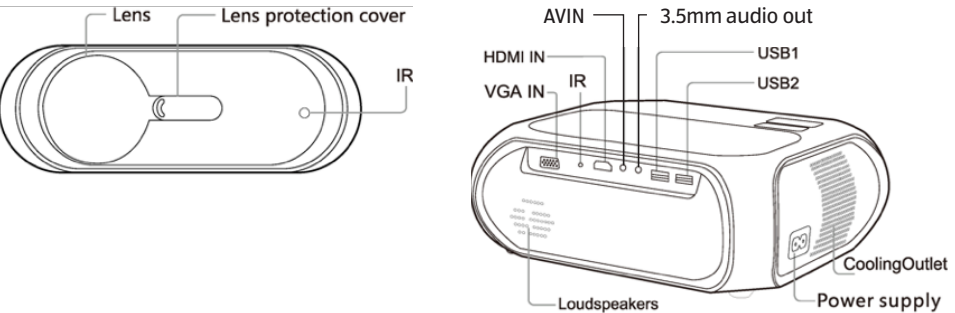 


Getting started

1. Connect the projector with power cord, then plug the power cord into AC connector. When the indicator light stops flashing, projector is under standby status.
2. Connect your device to the chosen input port in the back of the projector.



 3. Press the power button on remote control or projector. Press the Home button on the remote control and choose the input source of your connected device.

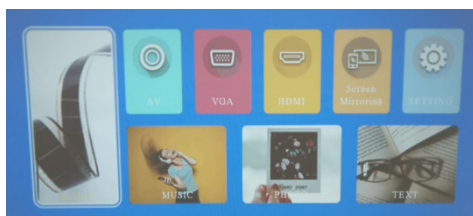

4. Adjust the keystone distortion.



Bad



Good



Bad

5. Adjust the focus.



 
Bad



Good


Production Connection

1. **Multimedia input**
Insert the USB into USB1 as showed in picture below.

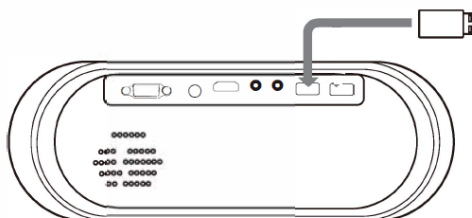


Select MOVIE, MUSIC, PHOTO and TEXT icon to playback the media files in USB

 
2. **VGA Input**
Choose VGA input, and connect projector with computer

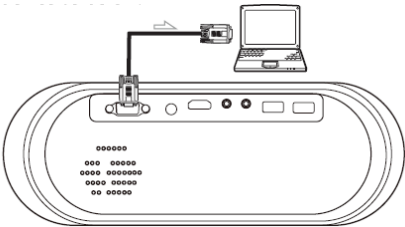

 
3. **AV Input**
Choose AV input, and connect projector with AV signal

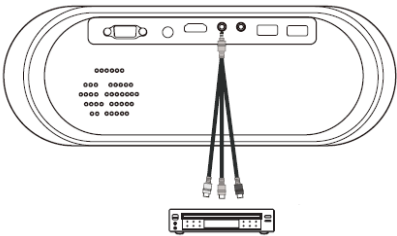

 4. **HDMI Input**
Choose HDMI input, and connect projector with HDMI signal

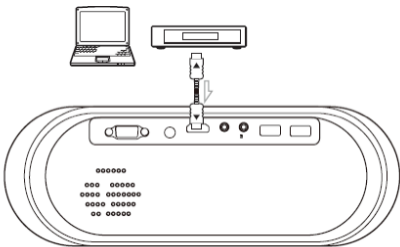

 5. **Audio Output**
Connect with 3.5mm earphone or similar audio devices.

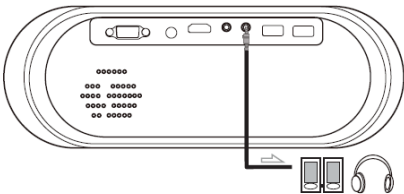

Projector settings

Open the video page and select the MENU icon on the projector. Press the left and right arrows on the projector panel or remote control, choose between different options and press “OK” to select from the adjustments of the submenu items.

Connecting your mobile device

 
Press SOURCE button and switch to Screen Mirroring source.
Press OK button to switch Android Display and iOS display.

1. **Android Display**

Open the Android device. Make sure WiFi is turned on.

Select the Android device’s wireless display or multiscreen function to activate screen mirroring. This is often called “Smart View.” Select “Projector-XXXXXX” to

connect to the projector. After a few seconds the Android device's screen will be displayed by the projector.

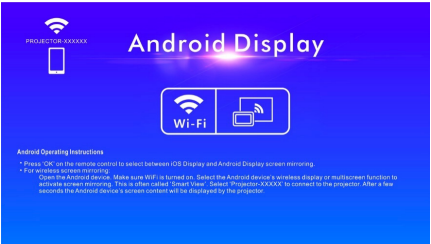


2. iOS Display




iOS Display via WiFi:

 1. Open the iOS device. Make sure WiFi is turned on.
2. Select “Projector-XXXXXX” to connect to this projector. If asked, enter password “12345678” and press “Join”.
3. Open the iOS device's browser and enter “192.168.49.1”,
4. Select “WiFi AP”, and then select “Scan” to auto search the WiFi router SSID and then type password to connect projector to WiFi router.
5. If the WiFi router SSID is hidden, please select “Add Network” to manually input SSID and password to connect.

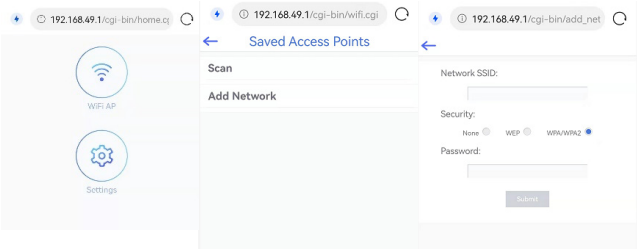

6. Connect the iOS mobile device to your home WiFi network.
7. In the iOS mobile device, pull down the control panel, select “Screen Mirroring” and select “Projector-XXXXXX”, the projector will display the iOS screen.

 8.

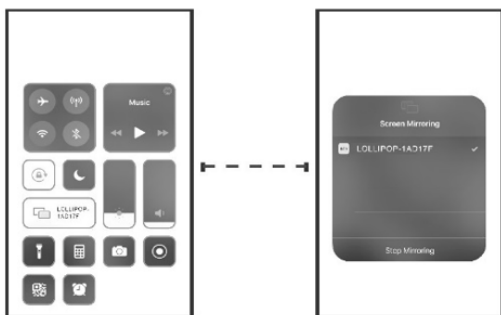

iOS Display via USB cable:

1. Connect the iOS device to the projector USB 2 port using Apple Data Cable.
2. For the first time (after connecting to the projector device, it will connect automatically), a dialog box will pop up to ask "Trust the device?". Click "Trust" and wait for 3-5 seconds, then the content of the iPhone or iPad will be projected to the projector screen.


Connect PC windows 10

1. Press SOURCE button and switch to Screen Mirroring source, and select "Android Display"
2. Make sure both of your projector and computer are connected to the same WiFi router.
3. Click quick key by + P/K button on the computer, and connect to the device named by "Projector-XXXXXX" to start your projection.

NOTE: Please upgrade your windows 10's operation system to the latest version.

Projection size and distance

Screen size (inch)	Projected image size (m)	Distance (m)
42"	0.52m (H)x 0.92m (W)	1.26m
50"	0.62 (H)x 1.10 (W)	1.46
60"	0.75 (H)x 1.33 (W)	1.72
70"	0.87 (H)x 1.55 (W)	1.97
80"	1.00 (H)x 1.77 (W)	2.23
100"	1.25 (H)x 2.21 (W)	2.70
120"	1.55 (H)x 2.66(W)	3.30
140"	1.74 (H)x 3.10 (W)	3.90

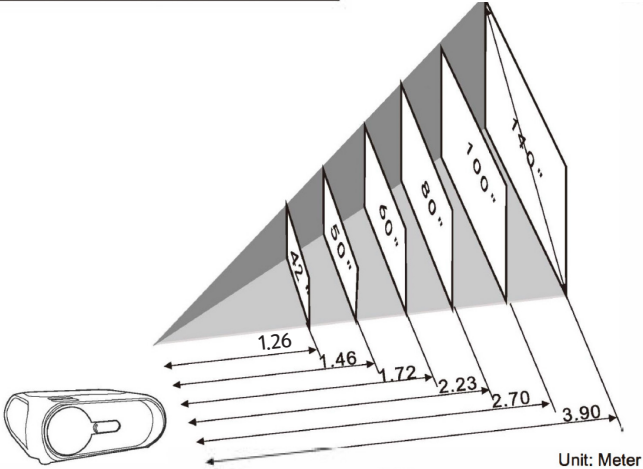 

Technical data

Appliance description:	LED projector
Model/Appliance code:	H3
Power Input:	100-240V~ 50/60Hz, Max 70W
Dimensions:	12.99 x 10.83 x 10.83 Inches

Troubleshooting

Some problems may be caused by minor faults that you can fix yourself. To do so, follow the instructions in the following table. If it is still not possible to resolve the problem, contact customer service. Do not repair the device yourself.

Questions	Solutions
Cannot be powered on	1. Check whether the power cord is connected properly.
Unable to screen mirroring	1. Refer to the Quick Guide to make sure you are using the correct wireless connecting entrance for your device and operating system. 2. If the screen stutters or lags, the distance between your device and projector is too far. The suggested distance is within 2m. 3. Make sure the device is connected to correct SSID of the projector.
Cannot focus image	1. The best projection distance is refer to your Wi-Fi router . Go to: Setting distance is appropriate. 2. Check the lens is clean.
Remote controller cannot work	1. Replace the batteries of remote control. 2. The best control distance is 3m 3. The IR is at front side and back side of projector. Try to point at it when using remote controller.

FCC statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For indoor use only, use outdoors or in other modes not covered by this manual may violate the FCC regulation and violate the user authority to use the product.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. End-users must follow the specific operating instructions for satisfying RF exposure compliance.

Disposal

Disposal of the packaging



Sort the packaging before you dispose of it. Dispose of cardboard and carton as waste paper and wrapping via the recyclable material collection service.

Disposal of the LED projector

Old appliances may not be disposed of in the household trash!

- Should the LED projector no longer be capable of being used at some point in time, dispose of it in accordance with the regulations in force in your city or state.
- Please ensure your recycling information conforms with the local regulations and EPA recommendations (www.epa.gov).



Save These Instructions

Keep the user manual for future reference.



Made in China

DIST. & SOLD EXCLUSIVELY BY:

ALDI

BATAVIA, IL 60510

**AFTER SALES SUPPORT
SERVICIO POSVENTA**

705262



866-235-5029



info@customercareusa.com

MODEL/ MODELO:

H3

8/2022


3

**YEARS WARRANTY
AÑOS DE GARANTÍA**


Índice

Contenido del paquete/piezas del dispositivo	13
Información general	14
Lectura y almacenamiento del manual del usuario	14
Significado de los símbolos	14
Instrucciones de seguridad	15
Uso apropiado	15
Para comenzar	16
Configuración del proyector	16
Conexión de su dispositivo móvil	16
Conexión inalámbrica	17
Conexión por cable al IOS	17
Conexión por cable al Android	17
Duplicar la pantalla a través de AirPlay	18
Duplicar la pantalla a través de Miracast	18
Tamaño y distancia de la proyección	19
Datos técnicos	20
Eliminación	20
Eliminación del embalaje	20
Eliminación del proyector LED	20

 Contenido del paquete/piezas del dispositivo

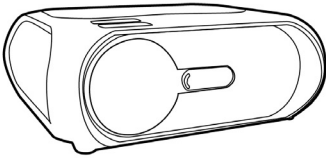

1

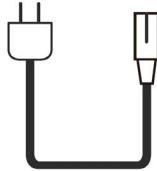 


2



3



 4

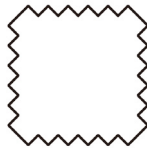

5

- 1 Miniproyector
- 2 Cable eléctrico
- 3 Control remoto
- 4 Cable AV
- 5 Paño para limpiar los lentes

Información general

Lectura y almacenamiento del manual del usuario



Lea este manual detenidamente antes del primer uso, incluso si usted está familiarizado con este tipo de aparato. Las precauciones de seguridad que aquí se adjuntan reducen el riesgo de incendios, descargas eléctricas y lesiones cuando se siguen correctamente.

Guarde el manual en un lugar seguro para consultarlo en el futuro, junto con la tarjeta de garantía, el recibo de compra y la caja. Si corresponde, entregue estas instrucciones al siguiente propietario del aparato.

Explicación de los símbolos

Los siguientes símbolos y palabras de advertencia se utilizan en este manual del usuario, en el proyector LED o en el embalaje.



¡PELIGRO!

Esta palabra de advertencia indica un peligro con un alto grado de riesgo que provocará la muerte o lesiones graves si no se evita.



¡ADVERTENCIA!

Esta palabra de advertencia indica un peligro con un riesgo moderado que provocará la muerte o lesiones graves si no se evita.



¡PRECAUCIÓN!

Esta palabra de advertencia indica un peligro con un riesgo bajo que puede causar lesiones leves o moderadas si no se evita.

¡AVISO!

Esta palabra de advertencia/símbolo avisa de posibles daños al producto.



Este símbolo le proporciona información adicional útil sobre el manejo y el uso.

Instrucciones de seguridad

 
Uso apropiado

El proyector LED está concebido únicamente para el uso privado y no es apto para propósitos comerciales. Solo use el proyector LED como se describe en este manual del usuario. Cualquier otro uso se considera inapropiado y puede ocasionar daños materiales. El fabricante o el vendedor no se hacen responsables por los daños ocasionados por el uso indebido o inadecuado.


¡ADVERTENCIA! Una persona que no haya leído y entendido todas las instrucciones de funcionamiento y seguridad no está calificada para utilizar el aparato. Todos los usuarios de este aparato deben leer y comprender el manual de instrucciones antes de operar o limpiar el aparato. Al usar aparatos eléctricos, siempre se deben seguir precauciones básicas de seguridad.

1. **Lea todas las instrucciones antes de usar este aparato.**
2. Este aparato **NO ES UN JUGUETE**.
3. Los niños pequeños sin supervisión y las personas con problemas cognitivos nunca deben usar este aparato.
4. Para protegerse contra una descarga eléctrica, no sumerja el cable, el enchufe o la unidad en agua u otros líquidos.
5. Desconectar del tomacorriente cuando no está en uso.
6. **NO** opere ningún aparato con un cable o enchufe dañado, después de una avería o si se ha dañado de cualquier manera. Devuelva el aparato al centro de servicio autorizado más cercano para su examen, reparación o ajuste. No trate de reparar o empalmar un cable dañado.
7. El fabricante no recomienda el uso de accesorios de conexión. **NO** utilice el aparato al aire libre.
8. **NO** deje que el cable eléctrico cuelgue del borde de una mesa o mostrador, o que toque las superficies calientes.
9. **NO** lo coloque sobre o cerca de una hornilla de gas o eléctrica, o en un horno caliente.
10. Siempre enchufe primero el cable al aparato y luego enchufe el cable al tomacorriente (para aparatos con cables desmontables). Para desconectar, coloque todos los controles en la posición de apagado, luego saque el enchufe del tomacorriente.
11. El aparato no es adecuado para usar en la esfera de la educación, la reproducción de video es la función principal. No es recomendado para documentos en Word u hojas de cálculo.

Conozca su proyector y el control remoto

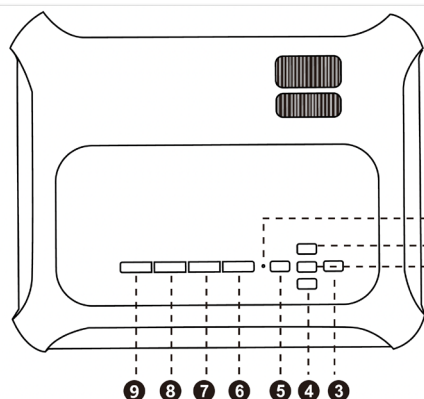


- | | | |
|-----------------------|--------|-------------------|
| 1 OK | 2 ▲/⏮+ | 3 ►/⏭ |
| 4 ▼/⏮- | 5 ◀/⏭ | 6 ATRÁS |
| 7 ENTRADA | 8 MENÚ | 9 ENCENDER/APAGAR |
| 10 LÁMPARA INDICADORA | | |

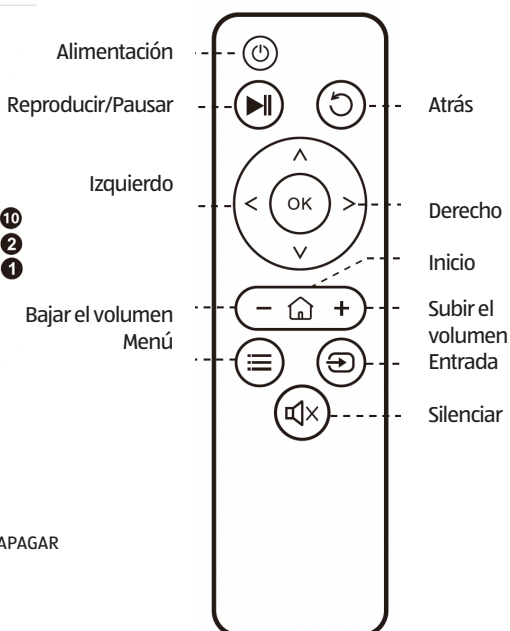 

Para comenzar

 1. Conecte al cable de alimentación al proyector, después enchufe el cable a una toma de CA. Cuando el indicador de luz deje de parpadear, el proyector está en el estado de espera.
2. Conecte su dispositivo al puerto de entrada elegido en la parte trasera del proyector.

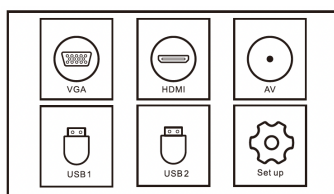


3. Presione el botón de encendido en el control remoto o en el proyector (ON/OFF).

- Presione el botón Home (inicio) en el control remoto y seleccione la fuente de entrada del dispositivo conectado usando las flechas. El ajuste predeterminado es un puerto USB.

- Ajuste la distorsión trapezoidal.



 - Ajuste el enfoque.



Configuración del proyector

Abra la página de video y seleccione el icono de MENÚ en el proyector. Presione las flechas derecha e izquierda en el panel del proyector o del control remoto, elija entre las diferentes opciones y presione “OK” para seleccionar los ajustes entre los elementos del submenú.

Conexión de su dispositivo móvil

Conexión inalámbrica

- Seleccione la opción “phone easy projection” (proyección fácil del teléfono) con el botón del panel de control del proyector o del control remoto.
- Presione “OK” en el control remoto y seleccione su sistema operativo.
- Desbloquee el dispositivo móvil, vaya a “settings” (configuración) luego a “network” (red) y busque “WLAN” para el nombre del proyector a conectar.
- Entonces abra la función de “screen mirror” (duplicar pantalla) de su dispositivo y seleccione el nombre del proyector para poner la contraseña y conectarse con éxito.

NOTA: Es compatible con dispositivos iOS6 y Android 5.0 o superiores. Si el teléfono no se puede conectar de forma inalámbrica, verifique si la versión de su móvil es compatible.

Conexión por cable a iOS

- Seleccione la opción “phone easy projection” (proyección fácil del teléfono) con el botón del panel de control del proyector o del control remoto.
- Presione “OK” en el control remoto y seleccione su sistema operativo.
- Conéctese a la interfaz USB a través del cable de datos de Apple. Durante la primera conexión (después de esta se conectará automáticamente), aparecerá un cuadro de diálogo para preguntar “Trust the device?” (¿Confiar en el dispositivo?). Haga clic en “Trust” (Confiar) y espere de 3 a 5 segundos, luego el contenido del iPhone o iPad se proyectará en la pantalla del proyector.

NOTE: Algunos dispositivos iOS mostrarán la ventana “Es posible que este accesorio no sea compatible”, sin embargo, no dude en usarlo ya que esta es la notificación normal. Para la conexión por cable, espere pacientemente por las actualizaciones del programa; si la versión del sistema del teléfono móvil se está actualizando, no se podrá proyectar la pantalla.

Conexión por cable al Android

1. Seleccione la opción “phone easy projection” (proyección fácil del teléfono) con el botón del panel de control del proyector o del control remoto.
2. Presione “OK” en el control remoto y seleccione su sistema operativo.
3. Conecte el cable de datos original del móvil a la interfaz USB2 (si no hay un cable de datos original, seleccione el cable de datos de la marca, de lo contrario tendrá el mismo efecto de pantalla). Abra “USB tethering” (Conexión a red USB) en la interfaz de “setting” (Configuración) del teléfono móvil. Espere de 3 a 5 segundos para que el contenido del dispositivo móvil Android se proyecte en la pantalla del proyector.

NOTA: El modo de depuración USB debe estar activado cuando se utiliza esta función. Si la versión del sistema operativo del teléfono móvil se está actualizando, la pantalla no se puede mostrar. Espere el tiempo apropiado para que se complete la actualización del programa de conexión por cable.

Duplicar la pantalla a través de AirPlay


1. Encienda la pantalla y el proyector LED.
2. Abra la configuración WiFi en su dispositivo iOS y haga clic en conectar en el SSID del proyector LED usando la contraseña: 12345678. Haga clic en “JOIN”.
3. Abra el centro de control en su dispositivo y haga clic en “Screen Mirror” (Duplicar la pantalla).
4. Cuando se le pida donde quiere compartir su pantalla, haga clic en el SSID del proyector LED conectado.
5. Podrá ver entonces la pantalla de su dispositivo duplicada en el proyector LED. Use su dispositivo iOS para visualizar sus medios de comunicación.

Duplicar la pantalla a través de Miracast

1. Encienda la pantalla y el proyector LED.
2. Abra la configuración y haga clic en “More connections” (Más conexiones).
3. Haga clic en “Mobile Phone Screencasting” (Transmisión de pantalla de teléfono móvil) y deslice el botón a “ON” (Activar).
4. Haga clic en conectar en el SSID del proyector LED con la contraseña: 12345678.
5. Abra el centro de control en su dispositivo y haga clic en “Screen Mirror” (Duplicar la pantalla).
6. Podrá ver entonces la pantalla de su dispositivo duplicada en el proyector LED. Use su dispositivo para visualizar sus medios de comunicación.

Tamaño y distancia de la proyección

Tamaño de la pantalla (pulg.)	Tamaño de la imagen proyectada (m)	Distancia (m)
42"	0.52m (H)x 0.92m (W)	1.26m
50"	0.62 (H)x 1.10 (W)	1.46
60"	0.75 (H)x 1.33 (W)	1.72
70"	0.87 (H)x 1.55 (W)	1.97
80"	1.00 (H)x 1.77 (W)	2.23
100"	1.25 (H)x 2.21 (W)	2.70
120"	1.55 (H)x 2.66(W)	3.30
140"	1.74 (H)x 3.10 (W)	3.90

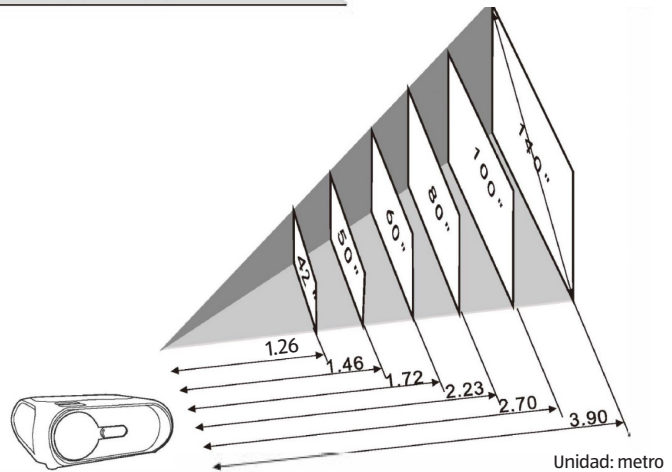 

Información técnica

Descripción del aparato:	Proyector LED
Modelo/Código del aparato:	H3
Longitud visible del cable:	60 pulgadas
Dimensiones:	12.99x10.83x10.83 pulgadas

Eliminación

Eliminación del embalaje



Clasifique el embalaje antes de deshacerse de él. Deseche el cartón y la caja de cartón como papel usado y los envoltorios mediante el servicio de recolección de material reciclable.

Eliminación del proyector LED

- ¡Los electrodomésticos usados no se pueden tirar en la basura doméstica!
- Si el proyector LED ya no pudiera usarse en algún momento, elimínela de acuerdo con las normas de su ciudad o estado.
 - Asegúrese de que su información de reciclaje cumpla con las regulaciones locales y las recomendaciones de la EPA (www.epa.gov).



Guarde estas instrucciones
Guarde el manual de usuario para referencia futura.