


FM515 - V




Quick Start Guide V1.0


FM515-V Dimensions (unit: mm)

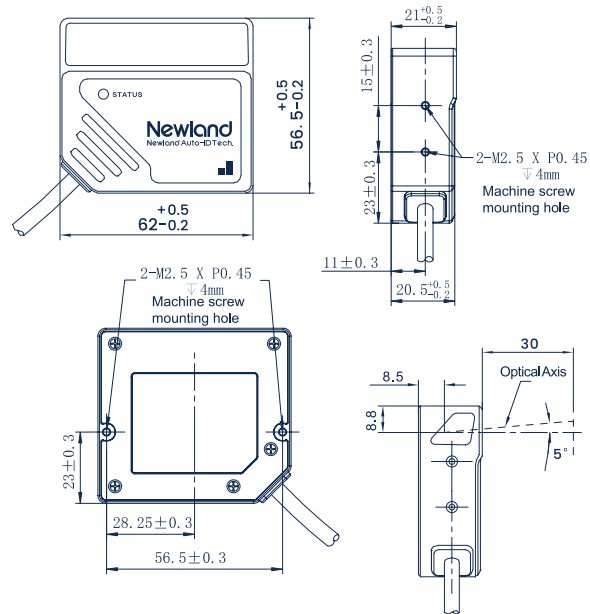

FM515-V Installation

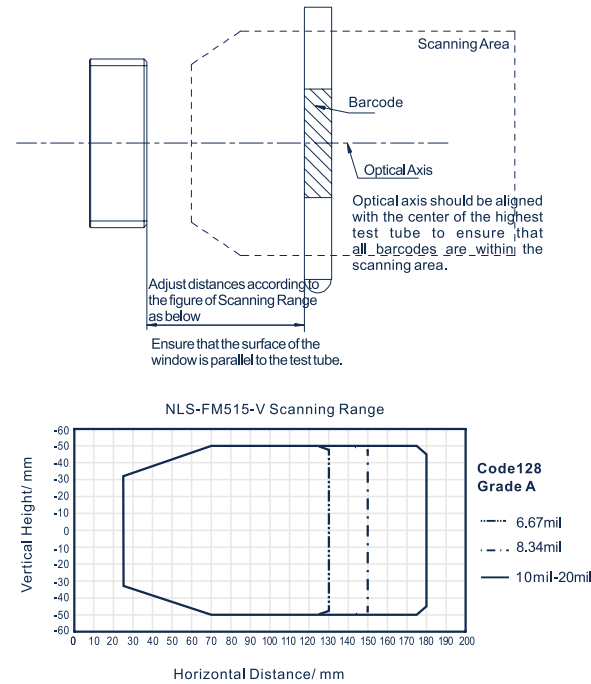


FM515-V Installation

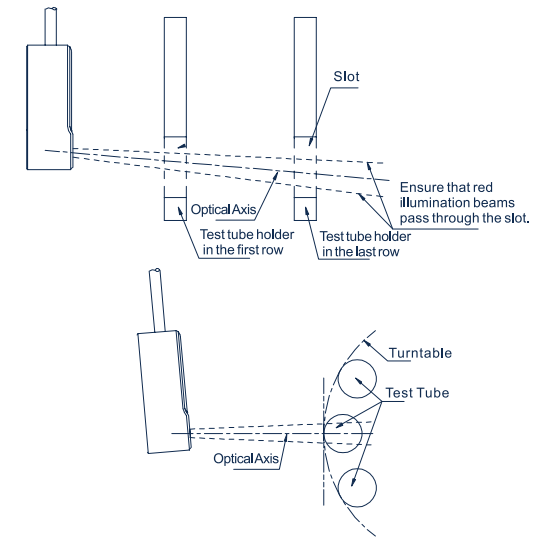

The product has anti-reflective characteristics, ensuring that scanning performance remains unaffected even when the optical axis is perpendicular to the barcode plane.

Interface pinouts

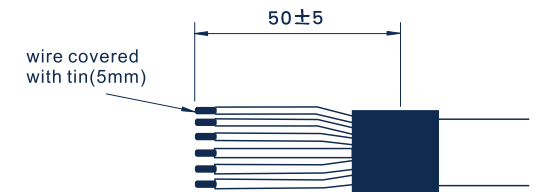


Pin#	Wire color	Signal	I/O	Function
1	Red	5V DC	P	Power supply
2	Orange	SW IN	I	Control signal input
3	Purple	GND	P	Power supply ground
4	Black	SW OUT	O	Control signal output
5	White	RS 232 RXD	I	RS level 232 receive data
6	Green	RS 232 TXD	O	RS level 232 transmit data
7	Yellow	FE/Shield	-	-

FM515 - H




Quick Start Guide V1.0


FM515-H Dimensions (unit: mm)

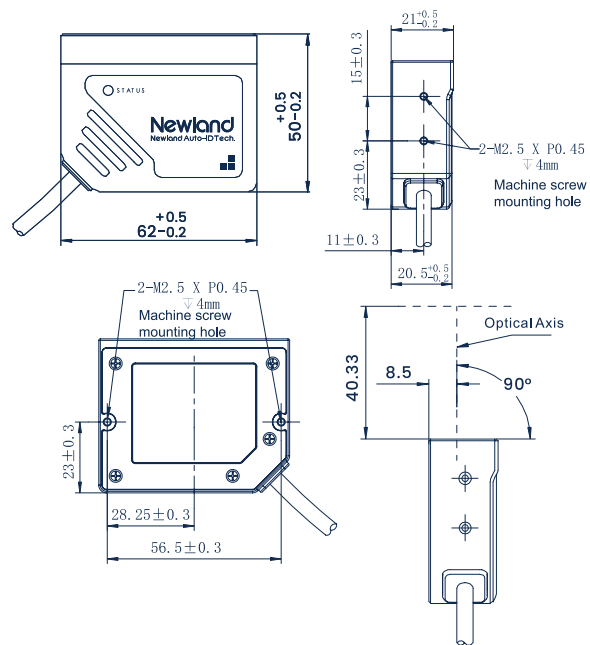

FM515-H Installation

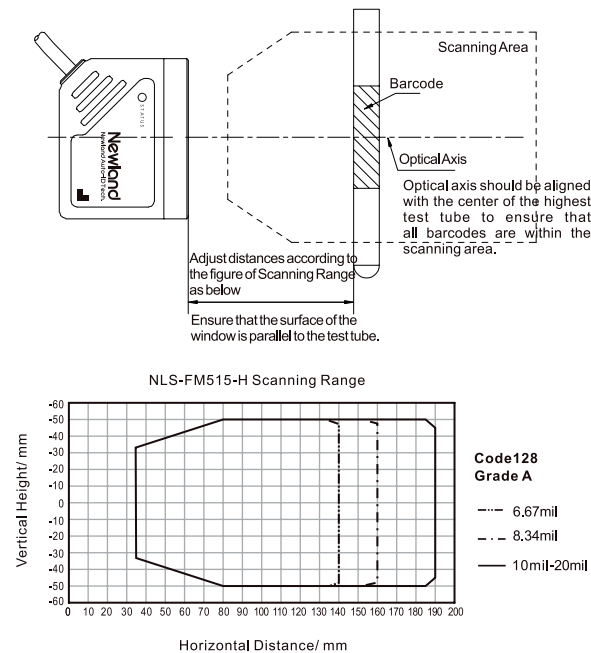


FM515-H Installation

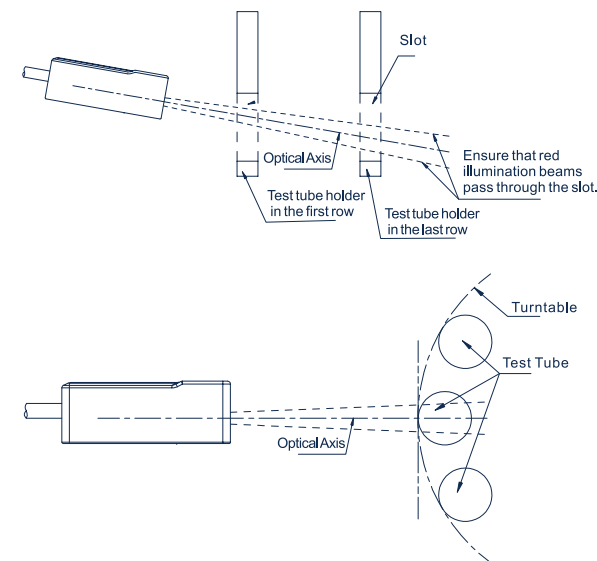

The product has an anti-reflective characteristics, ensuring that scanning performance remains unaffected even when the optical axis is perpendicular to the barcode plane.

Status indicator / More information

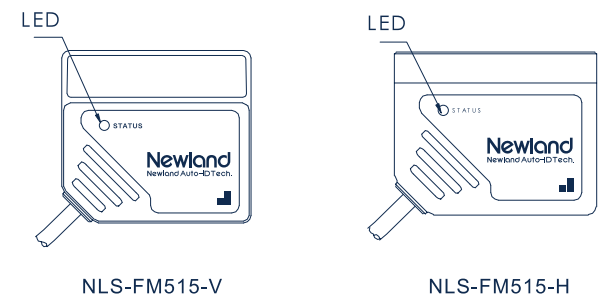

LED status indication:
Blue LED on: the scanner is in standby mode after powering on.
Red LED flashes: Indicates an error condition. Please consult Newland service for advice.
Green LED flashes: Indicates a good read/decode.



Visit our website
newland-id.com